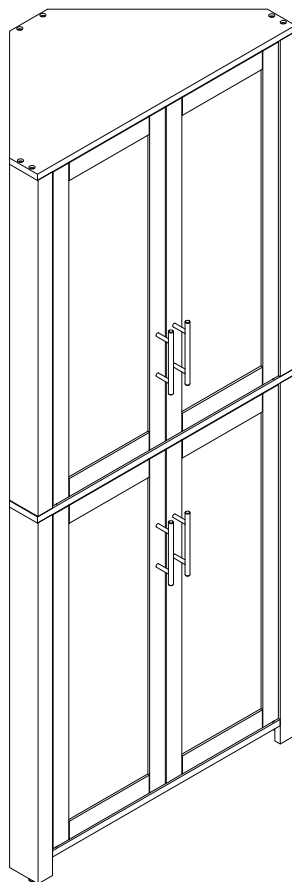 















CROSLLEY

F U R N I T U R E






Corner Pantry CF3140



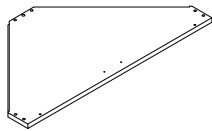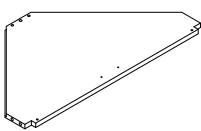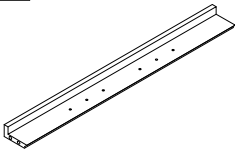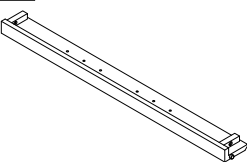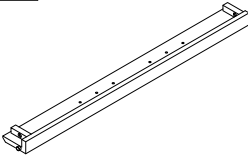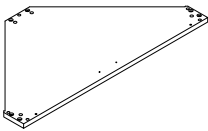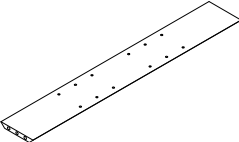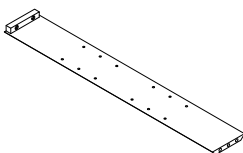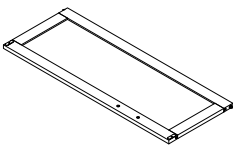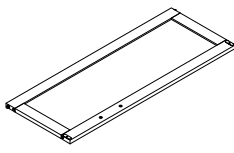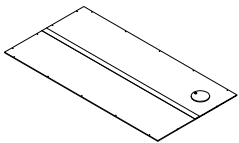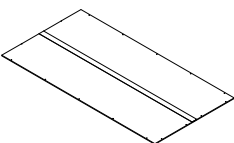             PART LIST


A	B	C	D	E
				
Top Panel 1 PC	Bottom Panel 1 PC	Upper Panel 2 PCS	Lower Left Panel 1 PC	Lower Right Panel 1 PC
F	G	H	I	J
				
Fixed Shelf 1 PC	Upper Middle Back Panel 1 PC	Lower Middle Back Panel 1 PC	Left Door 2 PCS	Right Door 2 PCS
K	L	M	N	
				
Upper Back Panel 2 PCS	Lower Back Panel 2 PCS	Adjustable Shelf 4 PCS	Back Leg 1 PC	

     HARDWARE LIST

#1	#2	#3	#4	#5
				
Ø1/4"*1"	Ø8*30mm		Ø5/32"*19mm	
Bolt 20 PCS (Extra 1)	Wood Dowel 12 PCS (Extra 1)	Handle 4 PCS	Round Head Bolt 8 PCS (Extra 1)	Magnet 4 PCS
#6	#7	#8	#9	#10
				
Ø3*16mm		Ø3*10mm		
Screw 8 PCS	Shelf Holder 16 PCS (Extra 1)	Round Head Screw 56 PCS (Extra 1)	Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

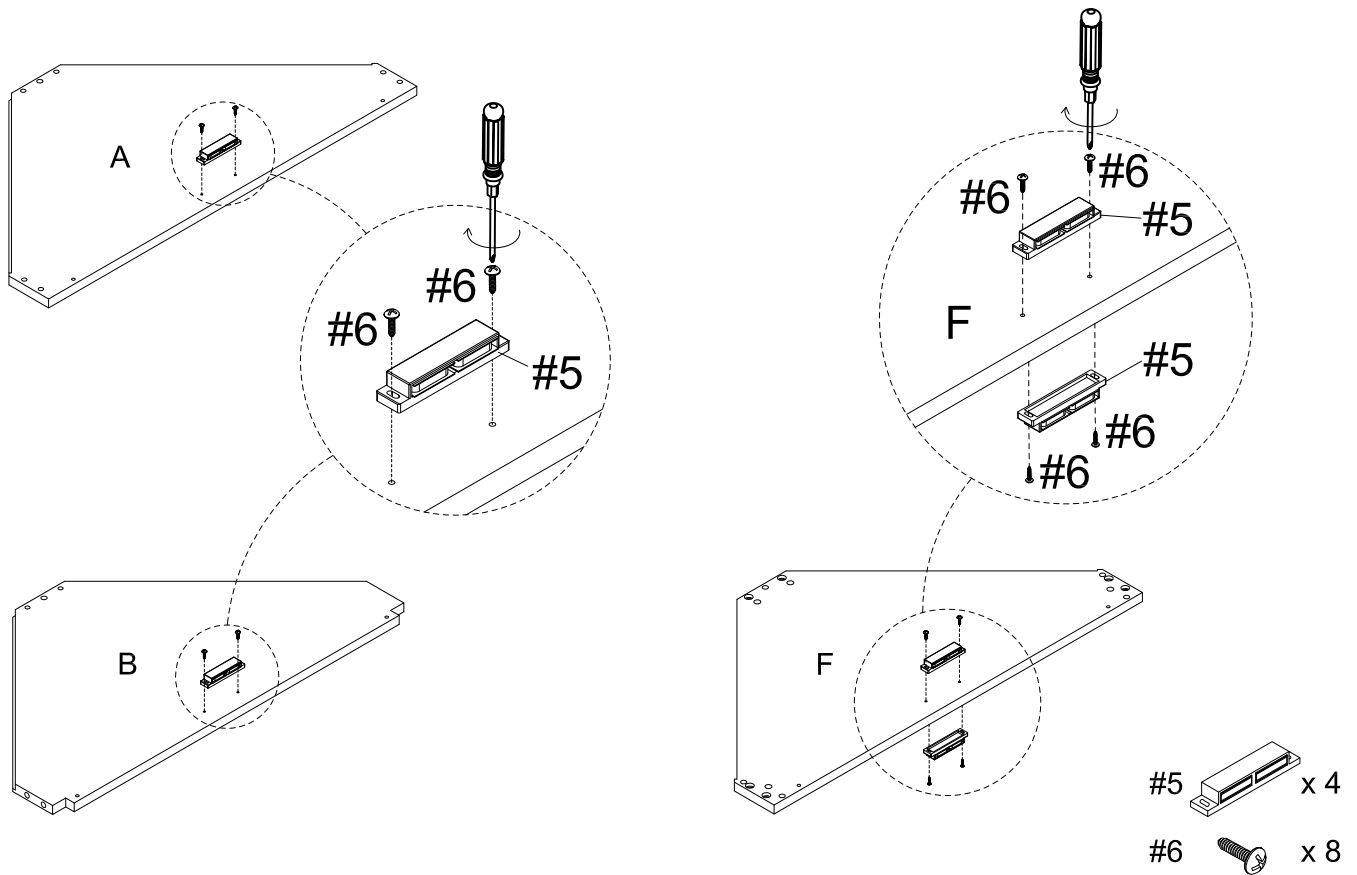 
Step 1. Attach magnets (part #5) to panels (parts A, B & F) using screws (part #6) and phillips head screwdriver.



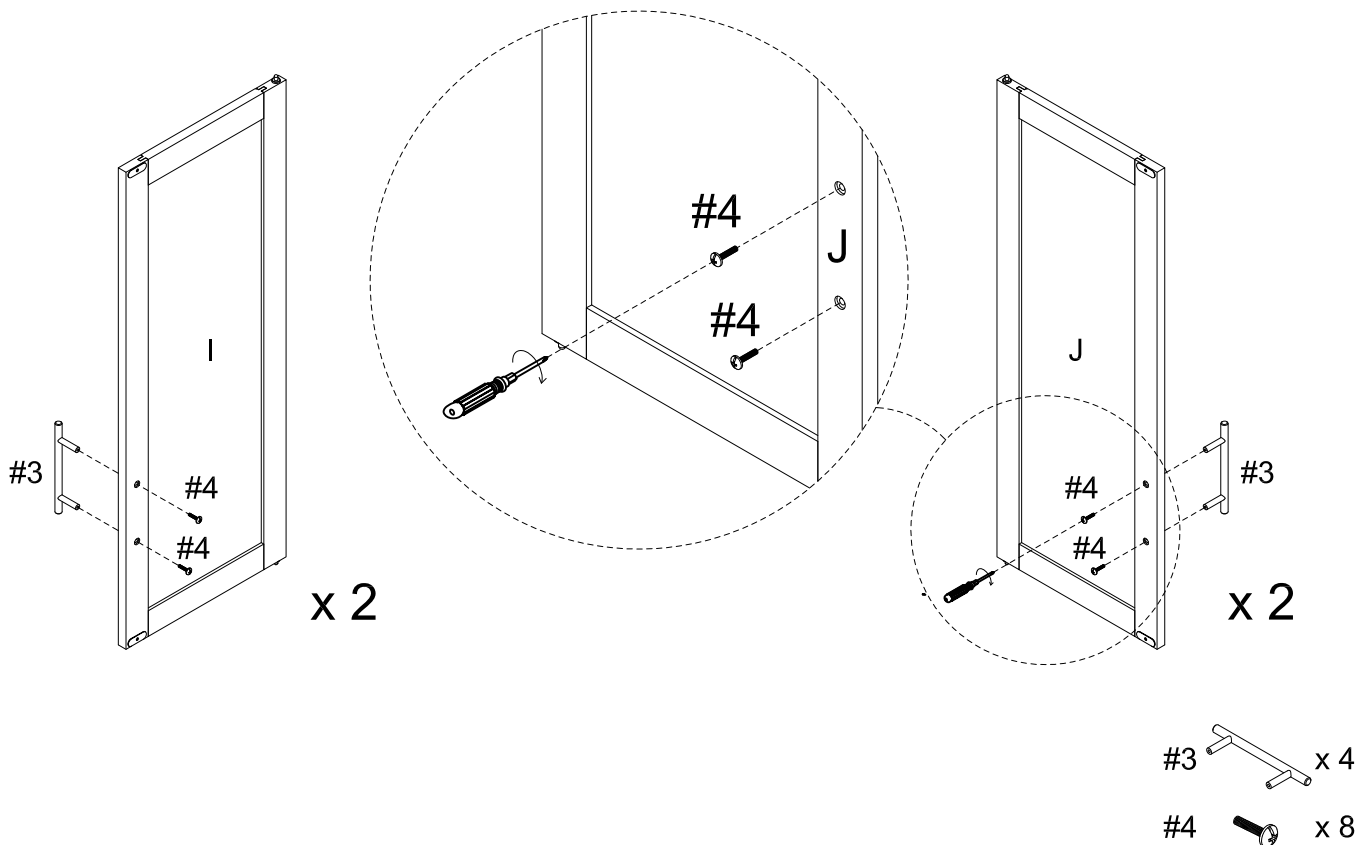 
Step 2. Attach handles (part #3) to doors (parts I & J) using round head bolts (part #4) and phillips head screwdriver.



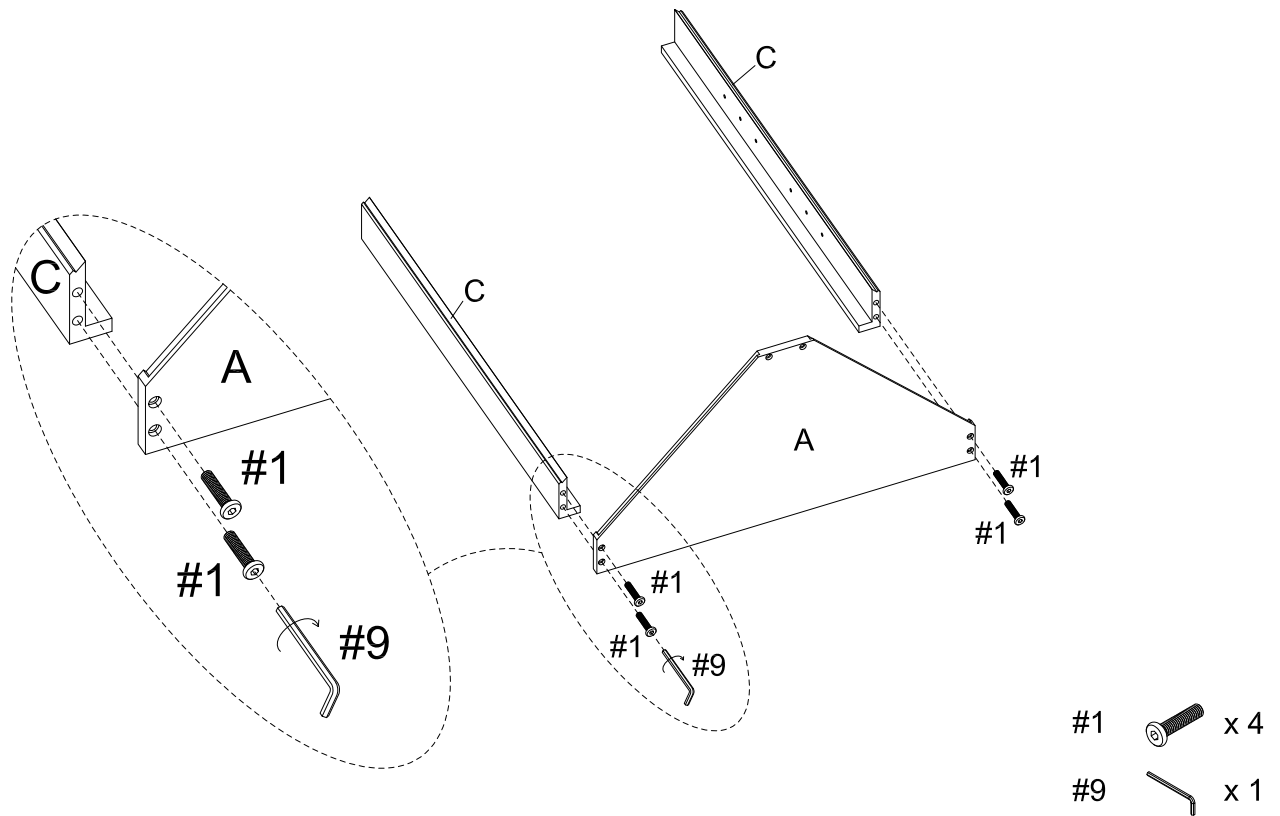 
Step 3. Attach top panel (part A) to upper panels (part C) using bolts (part #1) and allen wrench (part #9).



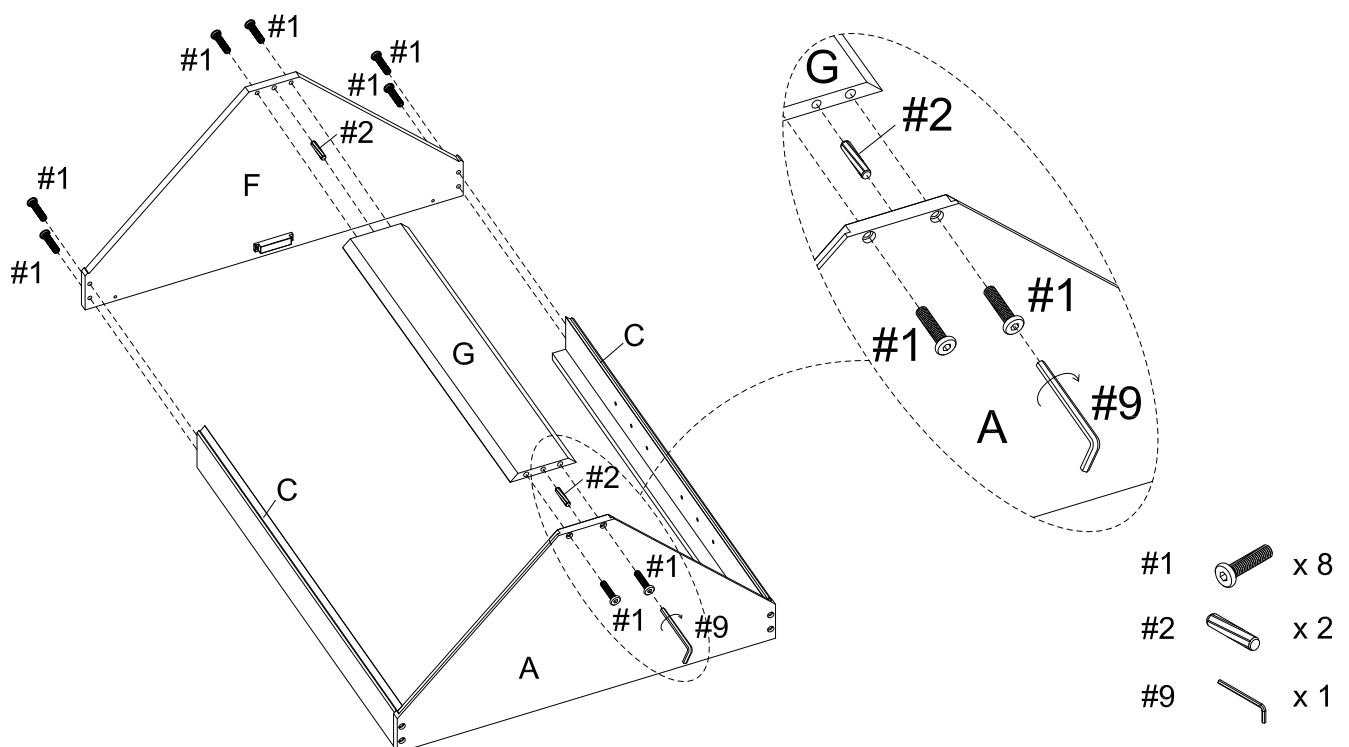 
Step 4. Attach upper middle back panel (part G) to top panel (part A) using bolts (part #1), wood dowel (part #2) and allen wrench (part #9). Attach fixed shelf (part F) to panels (parts C & G) using bolts (part #1), wood dowel (part #2) and allen wrench (part #9).



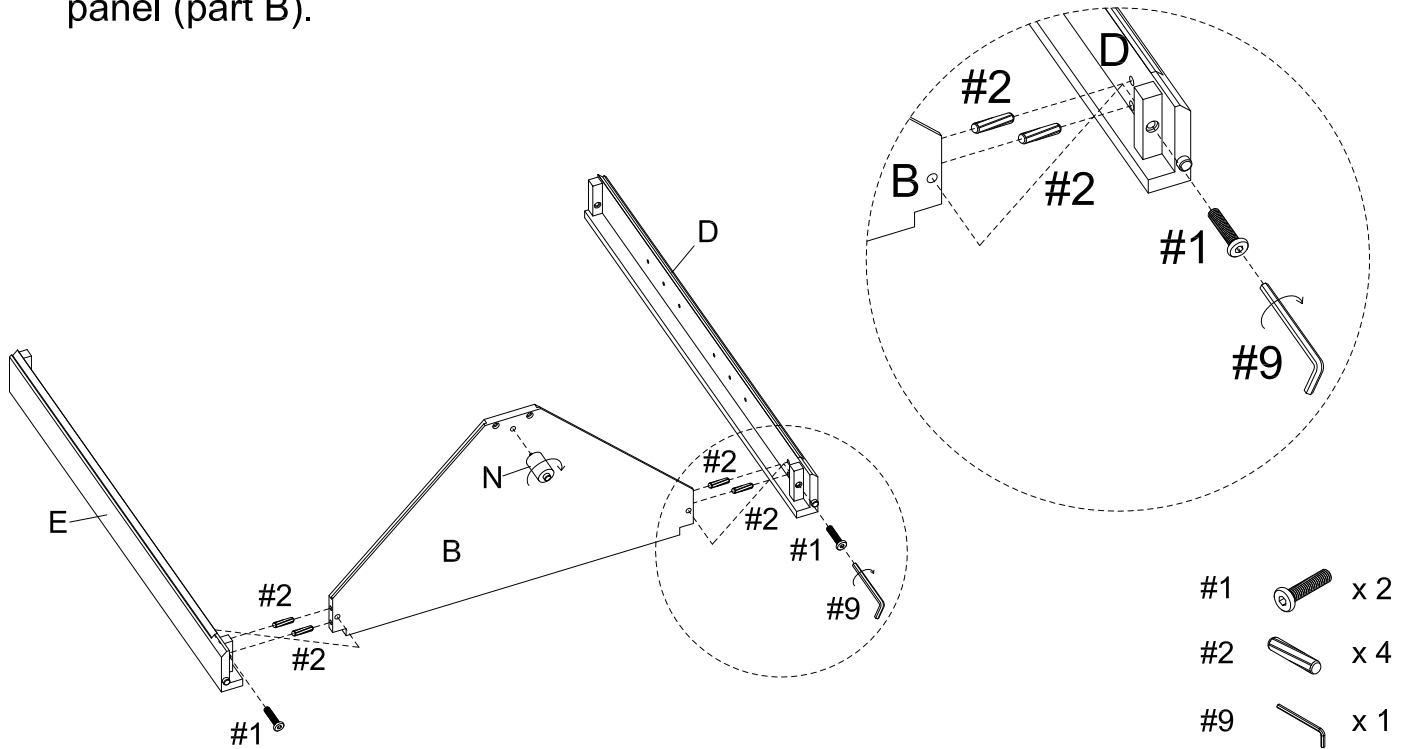 
Step 5. Attach panels (parts D & E) to bottom panel (part B) using bolts (part #1), wood dowels (part #2) and allen wrench (part #9). Attach back leg (part N) to bottom panel (part B).



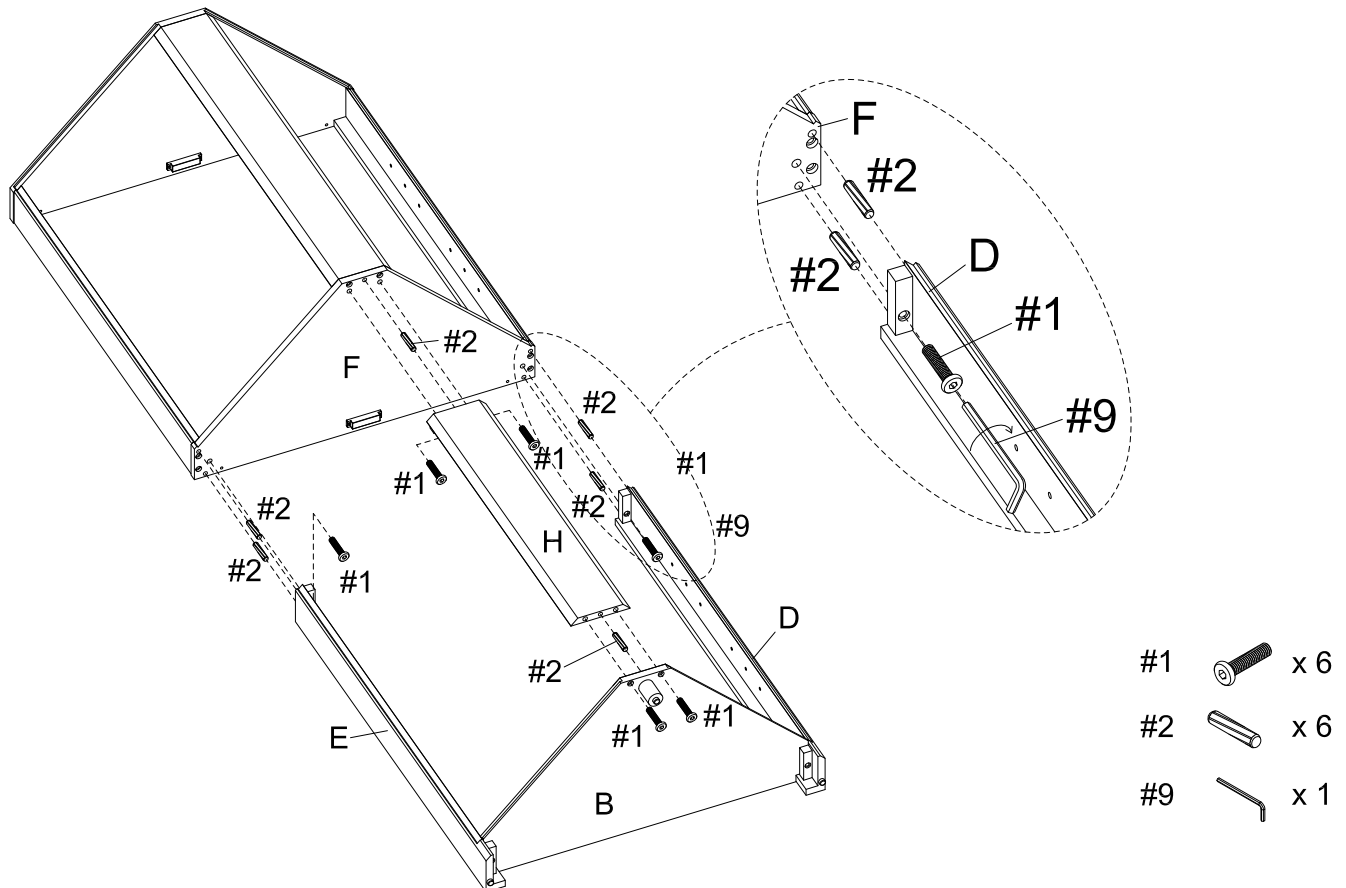 
Step 6. Attach lower middle back panel (part H) to bottom panel (part B) using bolts (part #1), wood dowel (part #2) and allen wrench (part #9). Attach assembled unit (parts B, D, E & H) to fixed shelf (part F) using bolts (part #1), wood dowels (part #2) and allen wrench (part #9).



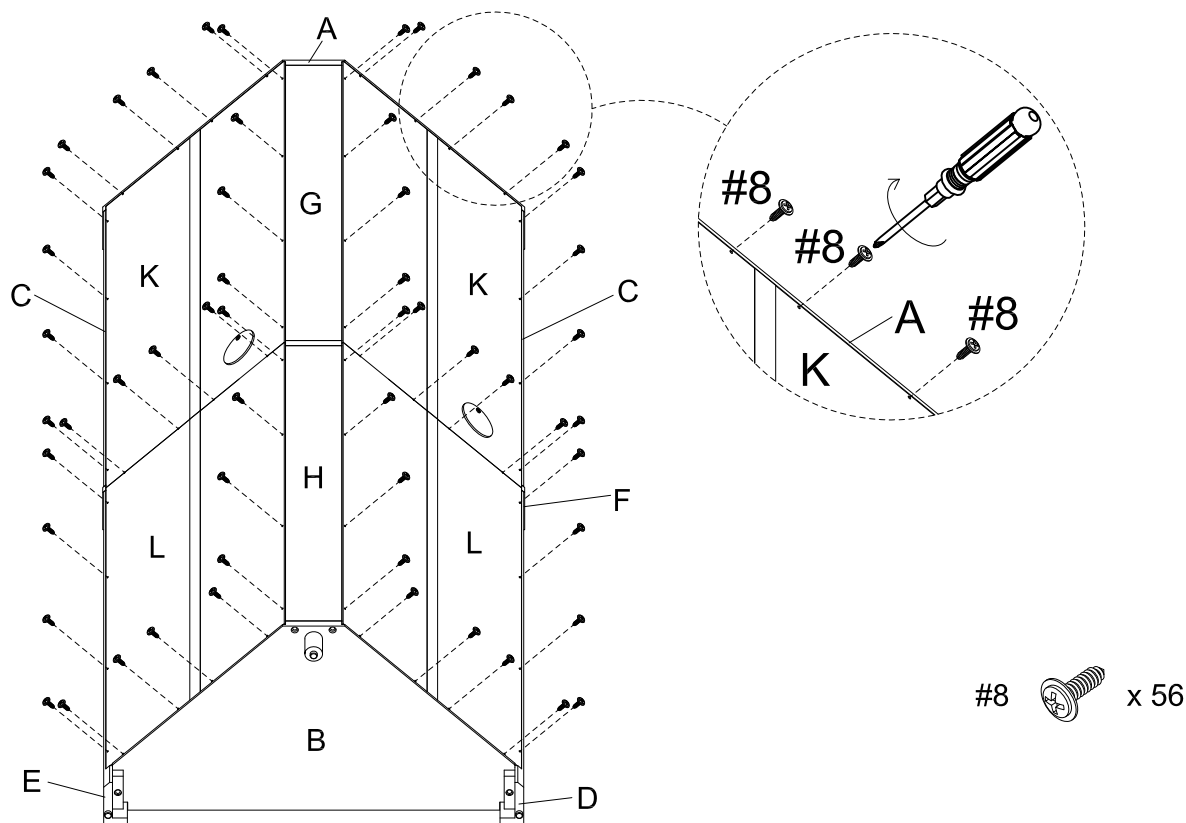 Step 7. Attach back panels (parts K & L) to assembled unit (parts A, B, C, D, E, F, G & H) using round head screws (part #8) and phillips head screwdriver.



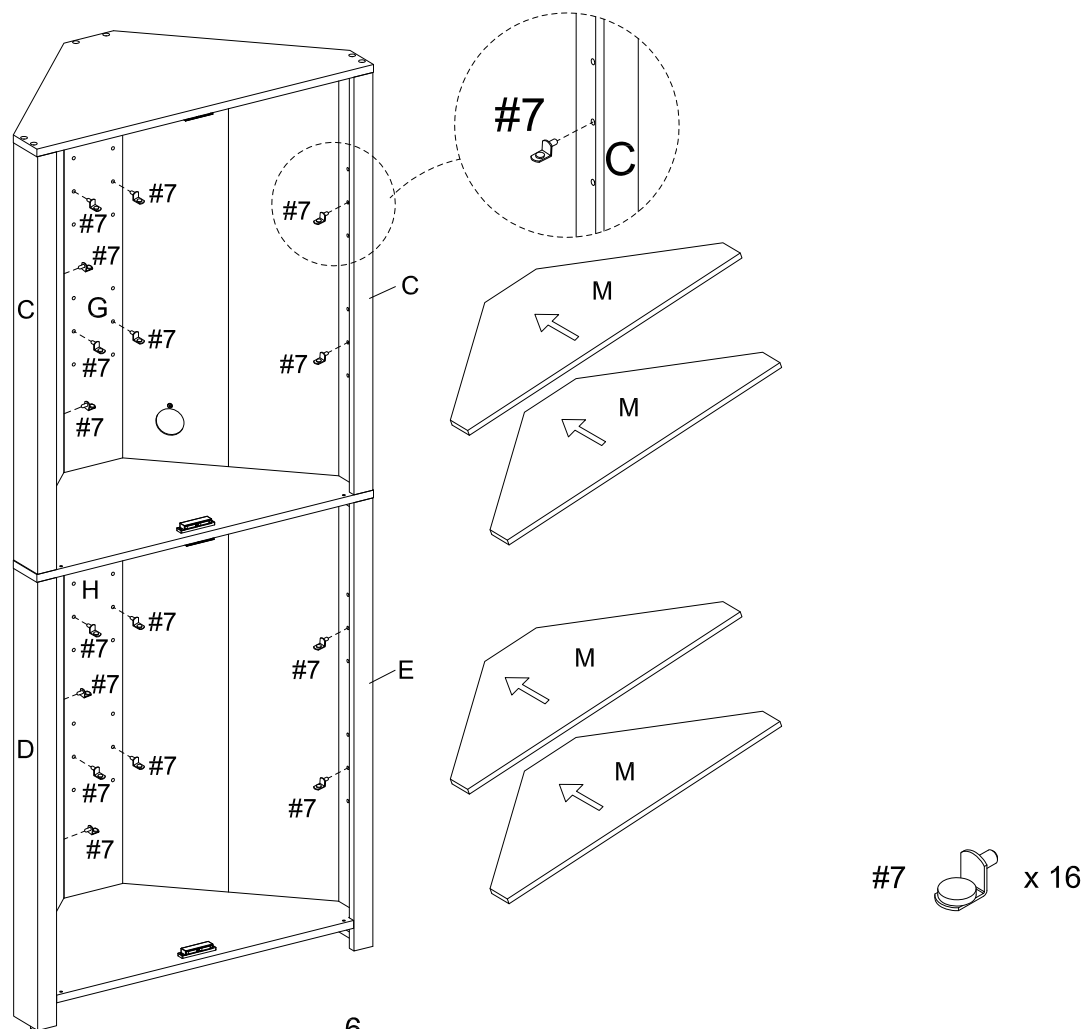 Step 8. Carefully turn unit upright. Place shelf holders (part #7) into desired position and slide adjustable shelves (part M) into place.





Step 9. Attach doors (parts I & J) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part B) and fix shelf (part F), then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A) and fix shelf (part F).

Note: Be sure top and bottom pin hinges are fully extended to secure doors in place.

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

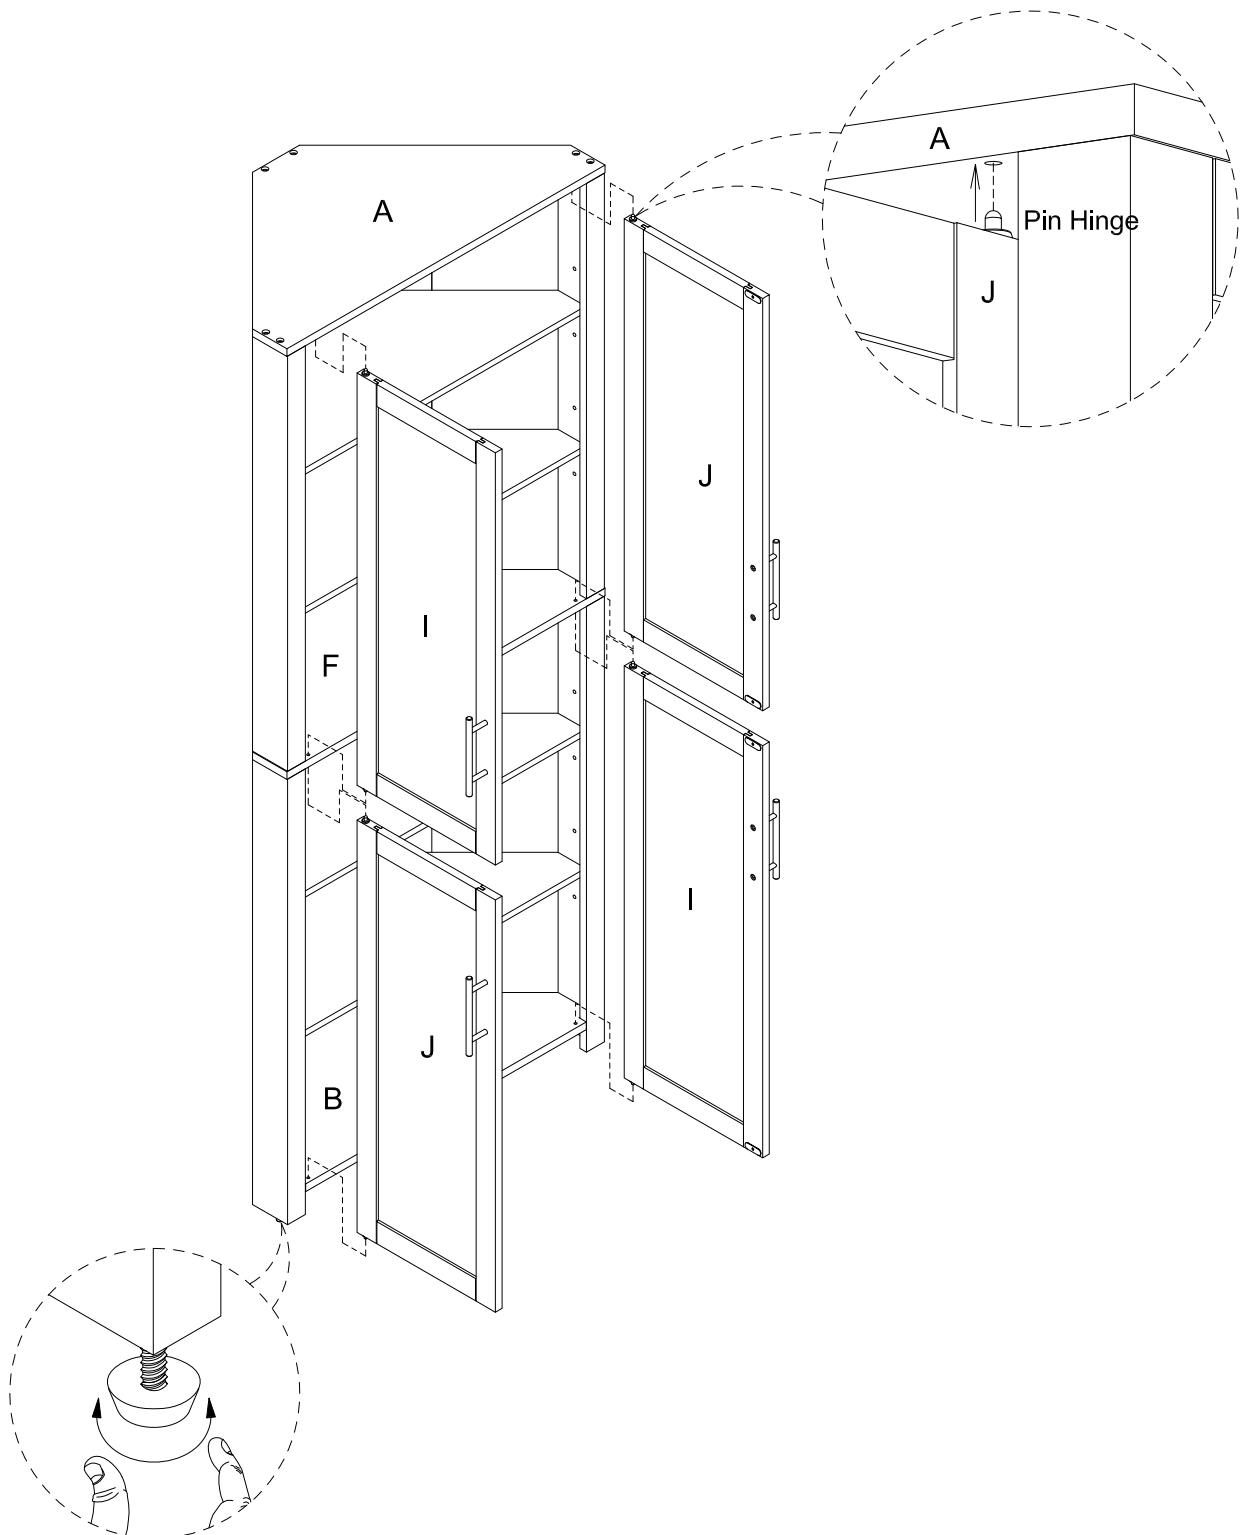  Important: Safety strap kit (part #10) must be installed to prevent tipping, damage and/or injury.




#10	A	B	C	D	E
	 1-1/2"xØ4xD8		 5/8"xØ3xD8		
Safety Strap Kit 1 SET	Long Screw 1 PC	Wall Anchor 1 PC	Short Screw 1 PC	Safety Wall Strap 1 PC	Flat Washer 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury

1. Insert short screw (C) through flat washer (E) and safety wall strap (D) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where safety wall strap (D) is attached. Tap wall anchor (B) into the hole.
3. Insert long screw (A) through safety wall strap (D) into wall anchor (B) using phillips head screwdriver.

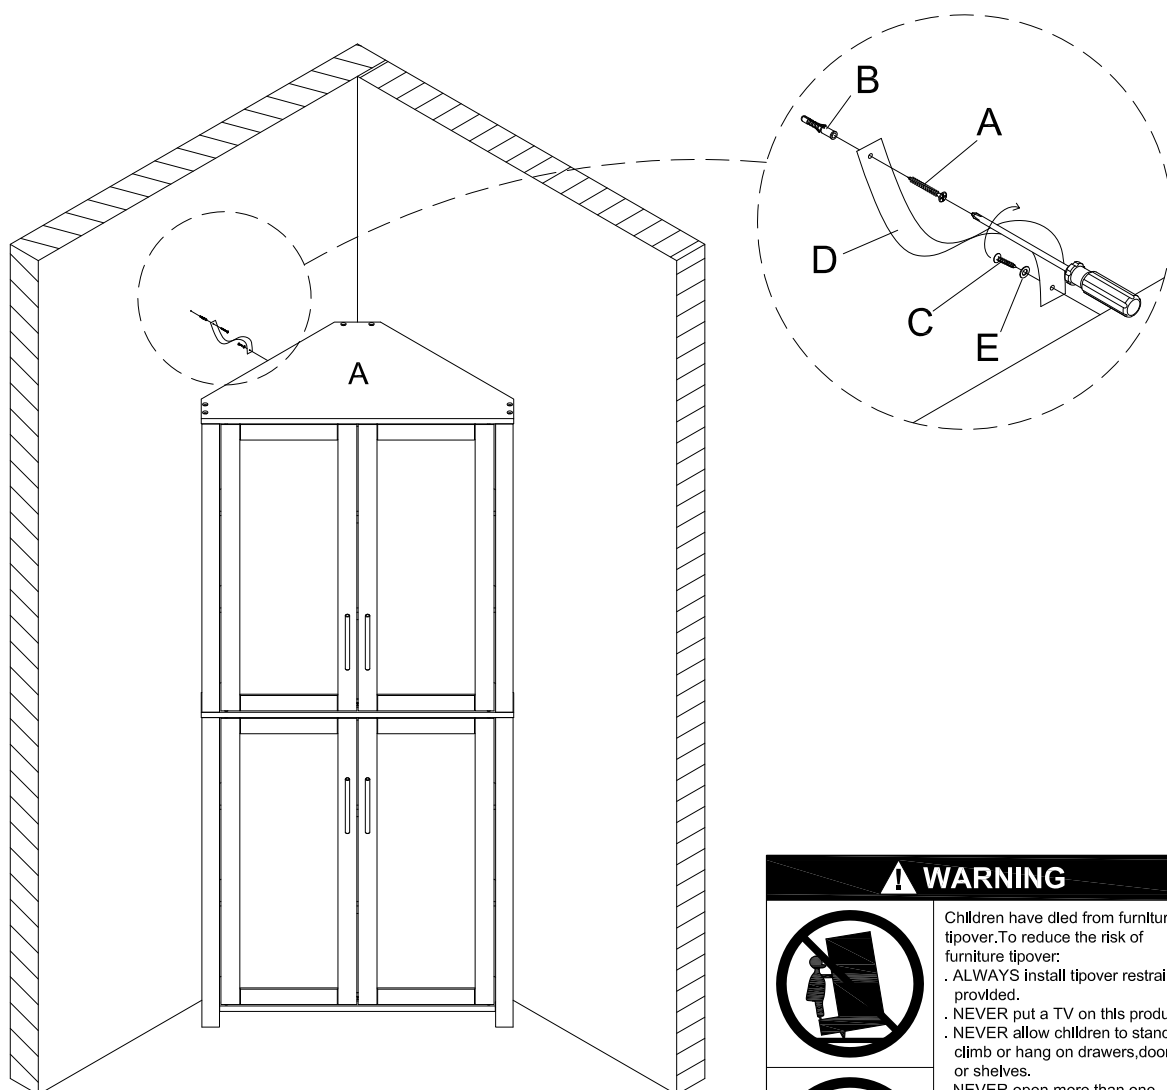 Note: This item is not intended for clothing storage use.



⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



*This is a permanent label.
Do not remove!*