 
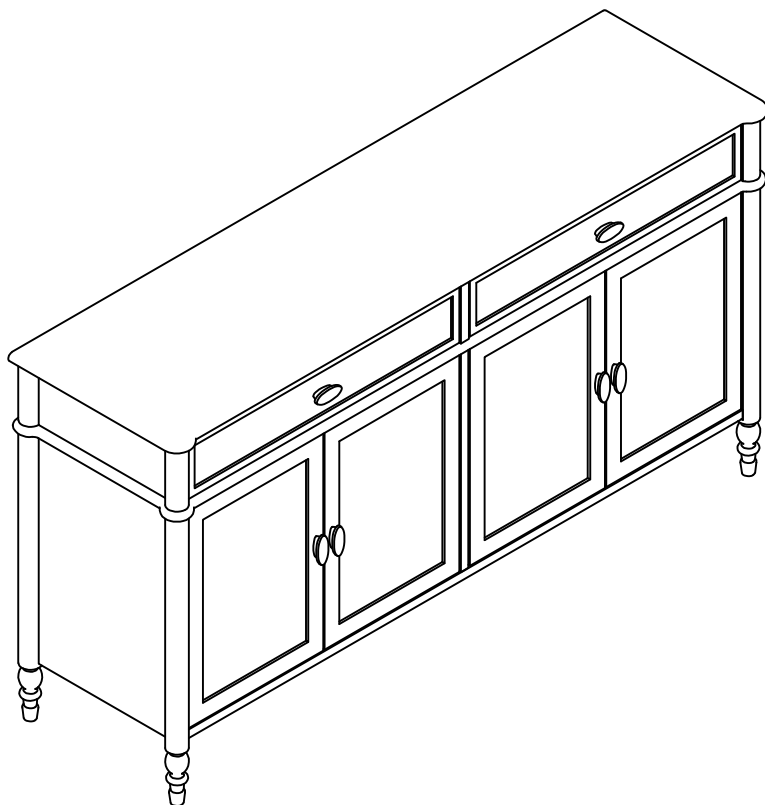 
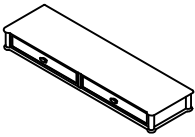 
 
 
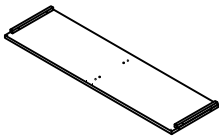 
 
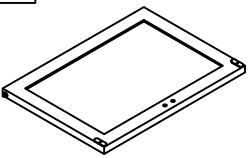 
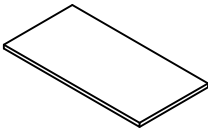 
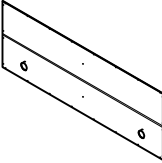 


CROSLEY
FURNITURE





Sideboard
CF4233



PARTS LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Partition Panel 1 PC
F 	G 	H 	I 	
Door 4 PCS	Adjustable Shelf 2 PCS	Back Panel 1 PC	Cover 2 PCS	

    HARDWARE LIST

#1		#2		#3		#4	 7*38mm	#5	 1/4"*25mm
	Handle 4 PCS		Double Magnet 4 PCS		Shelf Holder 8 PCS (Extra 1)		Tapping Bolt 2 PCS (Extra 1)		Bolt 10 PCS (Extra 1)
#6	 1/4"*11mm	#7	 1/4"*13mm	#8	 8*30mm	#9		#10	 5/32"*22mm
	Spring Washer 10 PCS (Extra 1)		Flat Washer 10 PCS (Extra 1)		Wood Dowel 12 PCS (Extra 1)		Binding Post 2 SETS (Extra 1)		Round Head Bolt 8 PCS (Extra 1)
#11	 6*3*15mm	#12	 8*3*12mm	#13	 M2	#14	 M4	#15	
	Long Screw 8 PCS (Extra 1)		Short Screw 26 PCS (Extra 1)		Small Allen Wrench 1 PC		Allen Wrench 1 PC		Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 
Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

 Step 1. Attach double magnets (part #2) to top panel (part A) using long screws (part #11) and phillips head screwdriver.

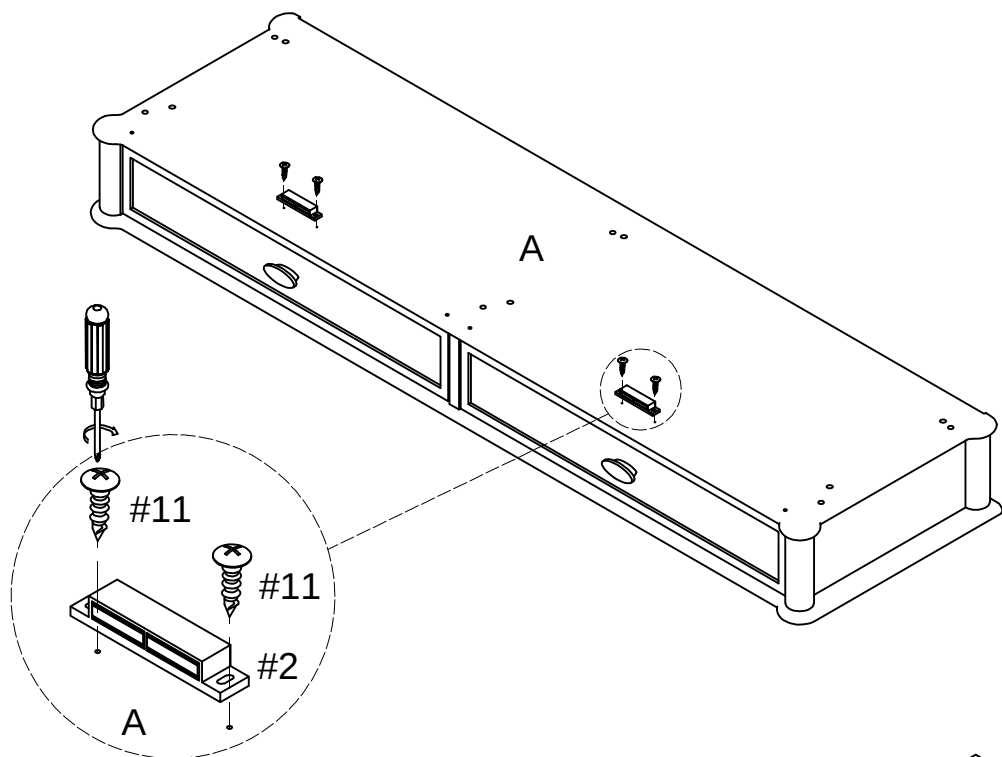


- | | | |
|-----|---|-----|
| #2 |  | x 2 |
| #11 |  | x 4 |

 Step 2. Attach double magnets (part #2) to bottom panel (part D) using long screws (part #11) and phillips head screwdriver.

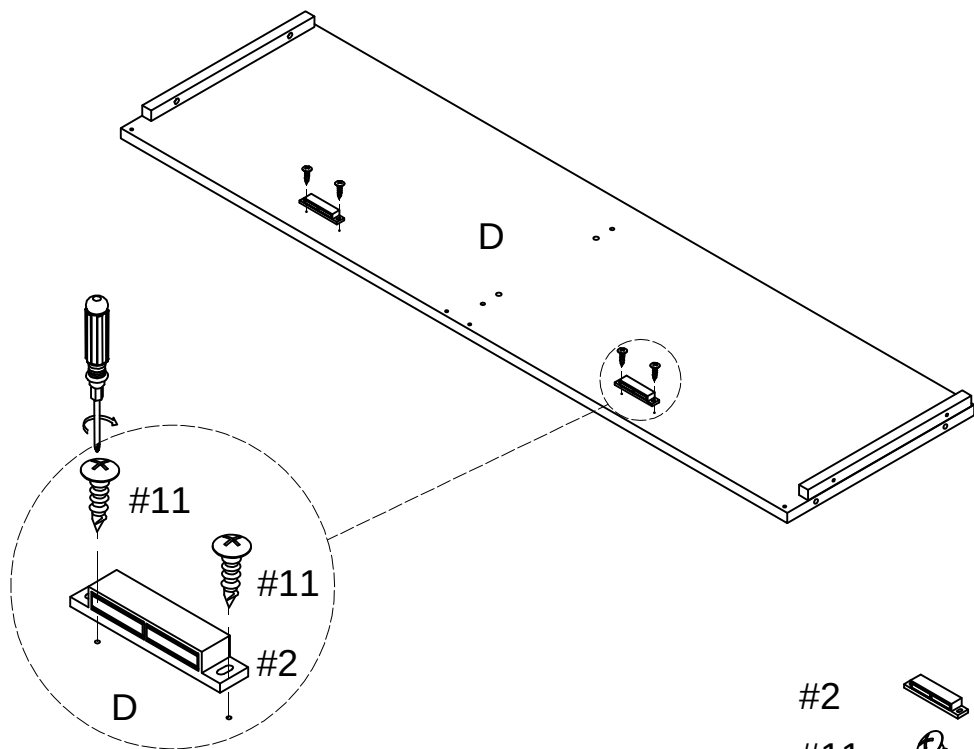


- | | | |
|-----|---|-----|
| #2 |  | x 2 |
| #11 |  | x 4 |

 Step 3. Attach covers (part I) to back panel (part H) using binding posts (part #9) and small allen wrench (part #13).

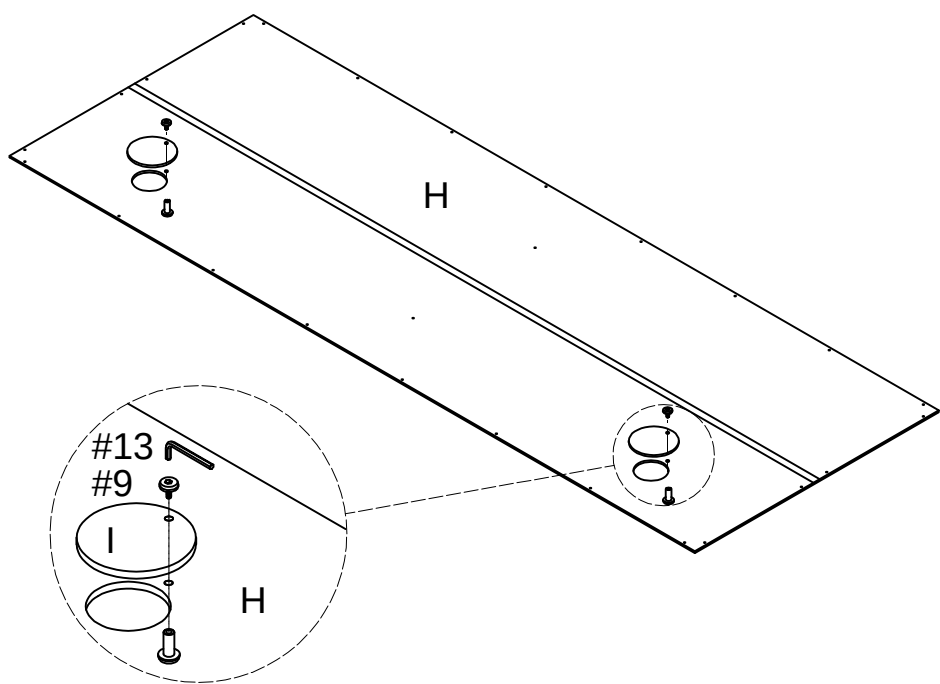


- #9  x 2
- #13  x 1

 Step 4. Attach handles (part #1) to doors (part F) using round head bolts (part #10) and phillips head screwdriver.

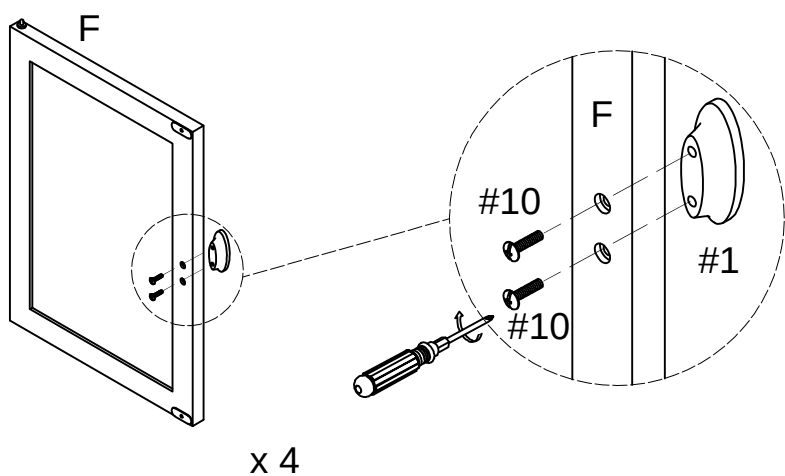


- #1  x 4
- #10  x 8

 Step 5. Attach partition panel (part E) to bottom panel (part D) using tapping bolts (part #4), wood dowels (part #8) and allen wrench (part #14).

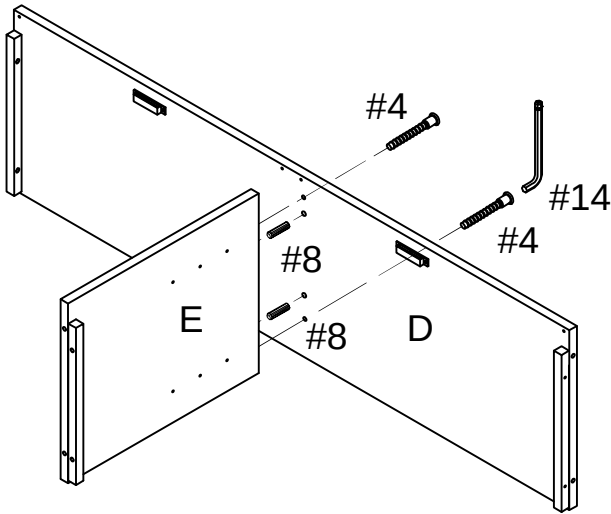


- | | | |
|-----|---|-----|
| #4 |  | x 2 |
| #8 |  | x 2 |
| #14 |  | x 1 |

 Step 6. Attach left panel (part B) and right panel (part C) to bottom panel (part D) using bolts (part #5), spring washers (part #6), flat washers (part #7), wood dowels (part #8) and allen wrench (part #14).

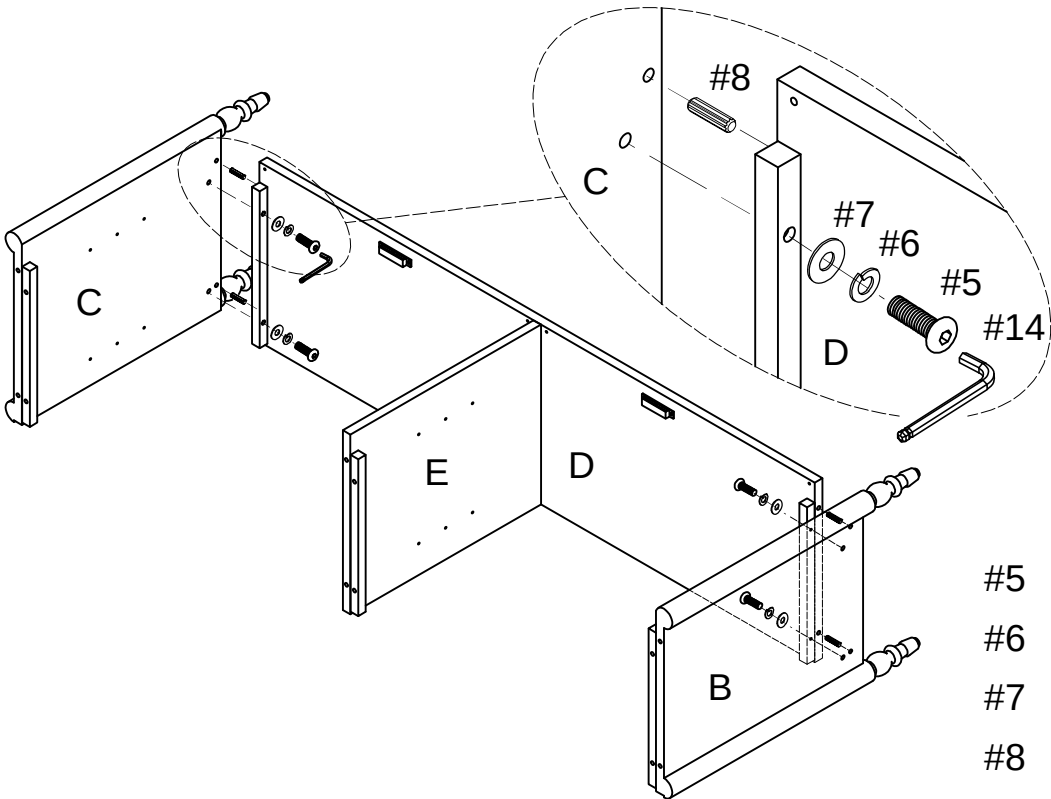


- | | | |
|-----|---|-----|
| #5 |  | x 4 |
| #6 |  | x 4 |
| #7 |  | x 4 |
| #8 |  | x 4 |
| #14 |  | x 1 |

 
Step 7. Attach assembled unit (parts B, C & E) to top panel (part A) using bolts (part #5), spring washers (part #6), flat washers (part #7), wood dowels (part #8) and allen wrench (part #14).

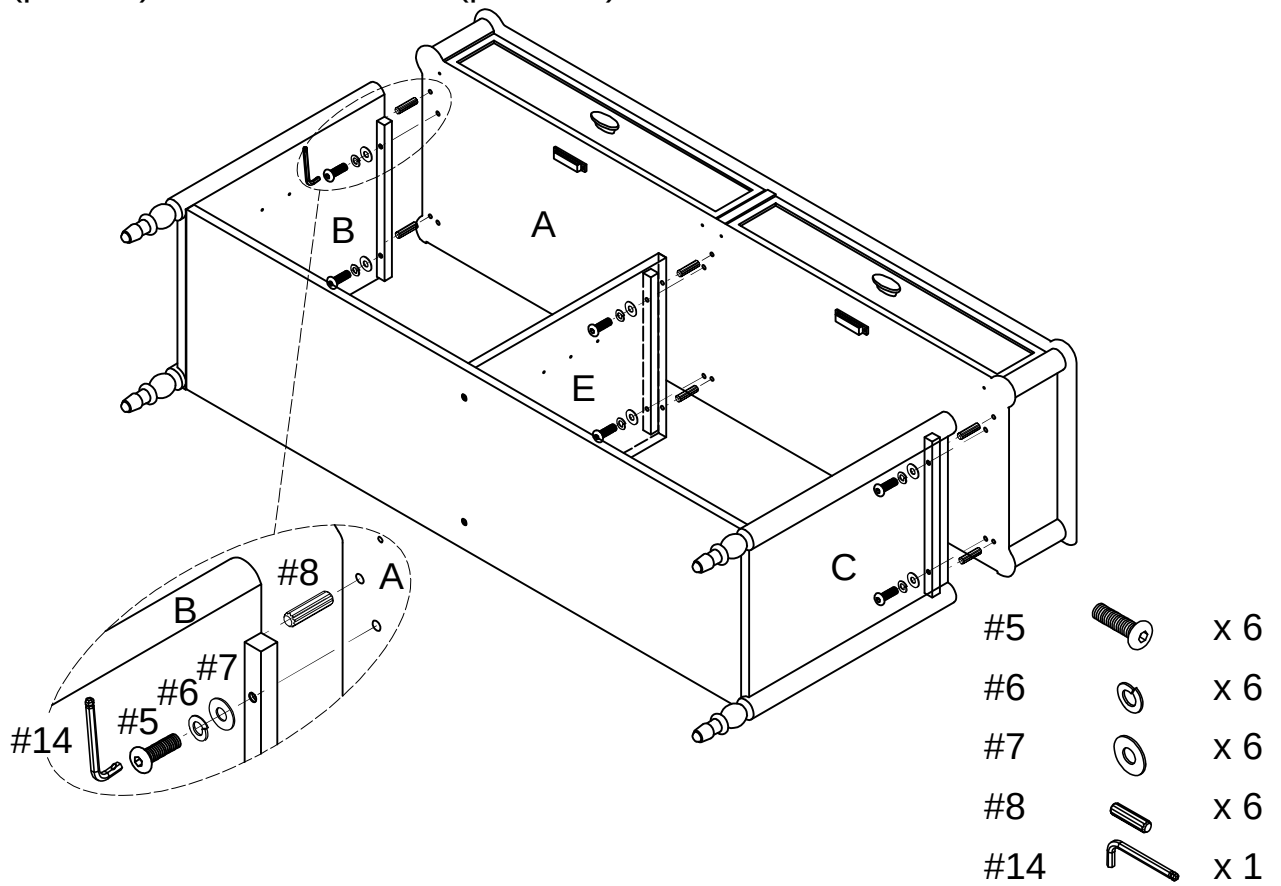

 
Step 8. Carefully turn unit upright. Attach back panel (part H) to assembled unit (parts A, B, C, D & E) using short screws (part #12) and phillips head screwdriver.

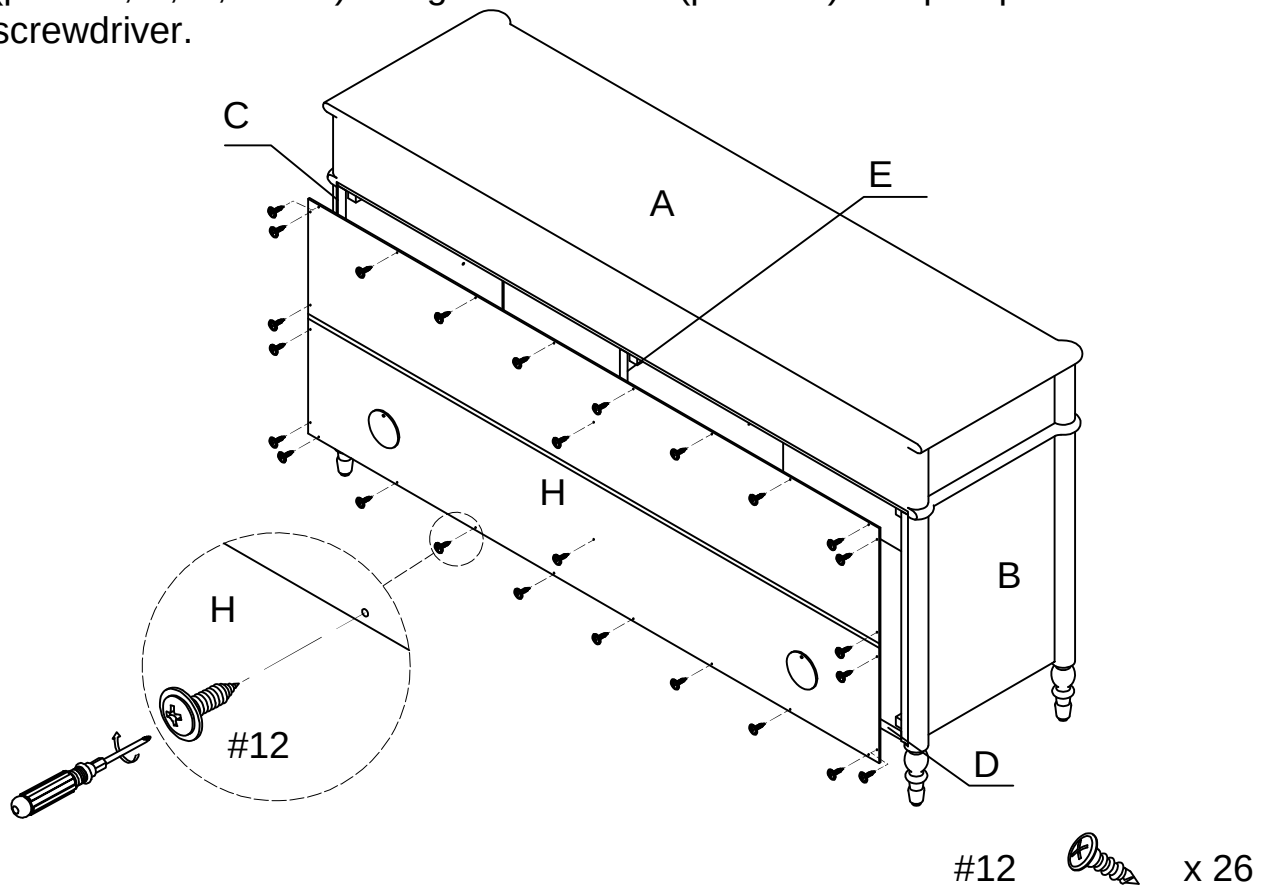

 Step 9. Attach doors (part F) by placing pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part D). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).

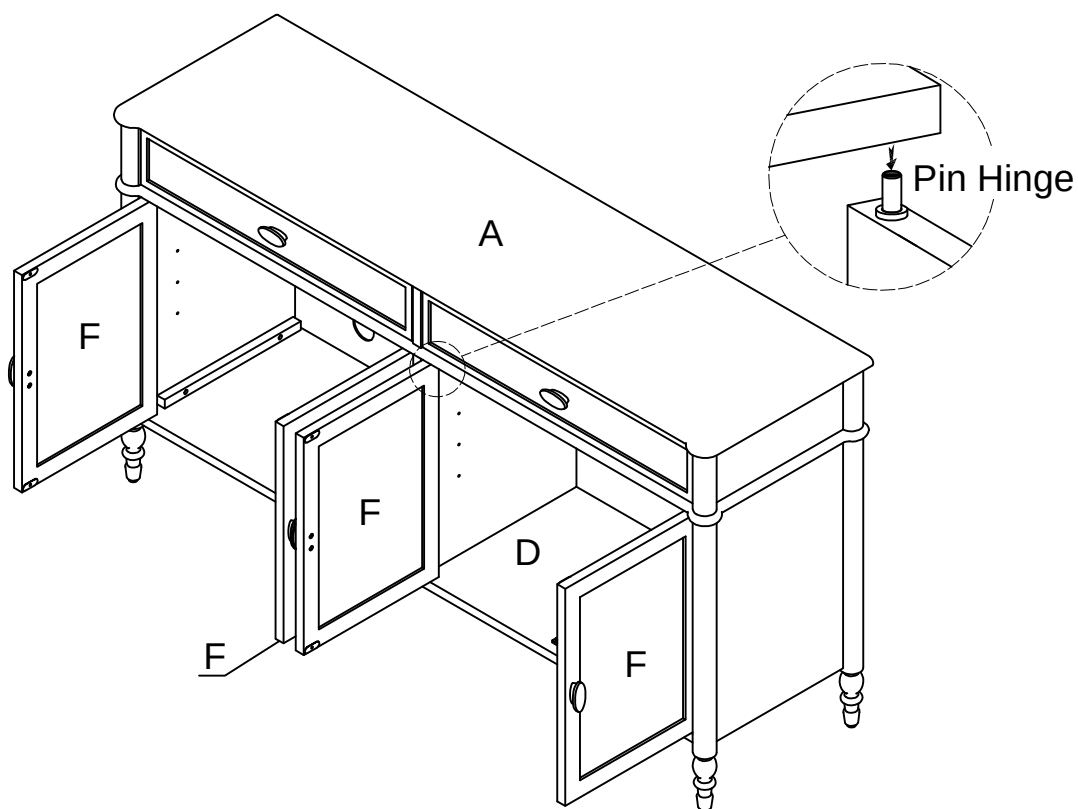


 
Step 10. Insert shelf holders (part #3) into desired position and slide adjustable shelves (part G) into place.

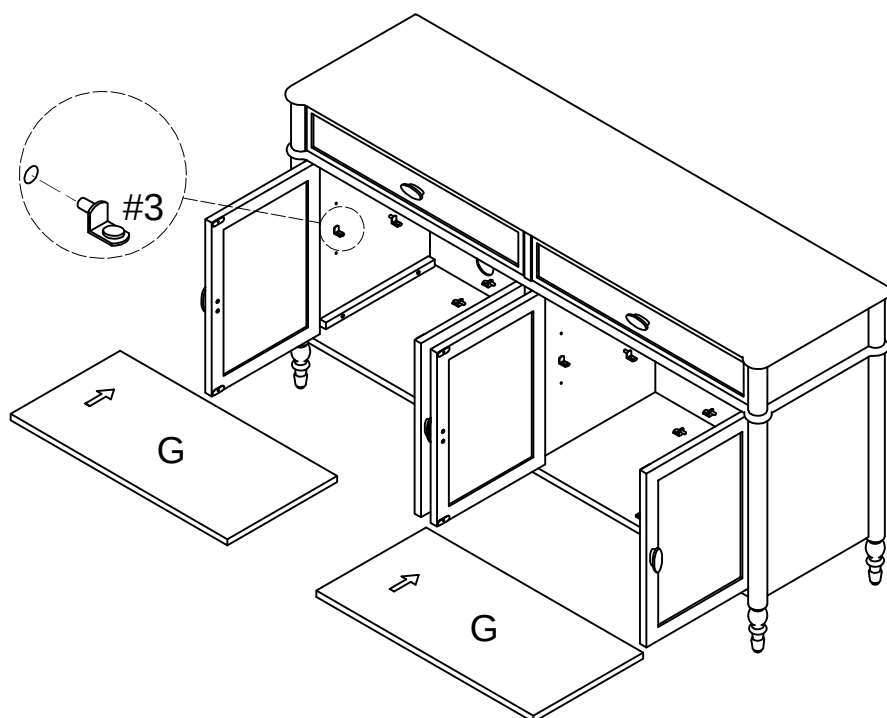


#3  x 8

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

   Important: Safety strap kit (part #15) must be installed to prevent tipping, damage and/or injury.

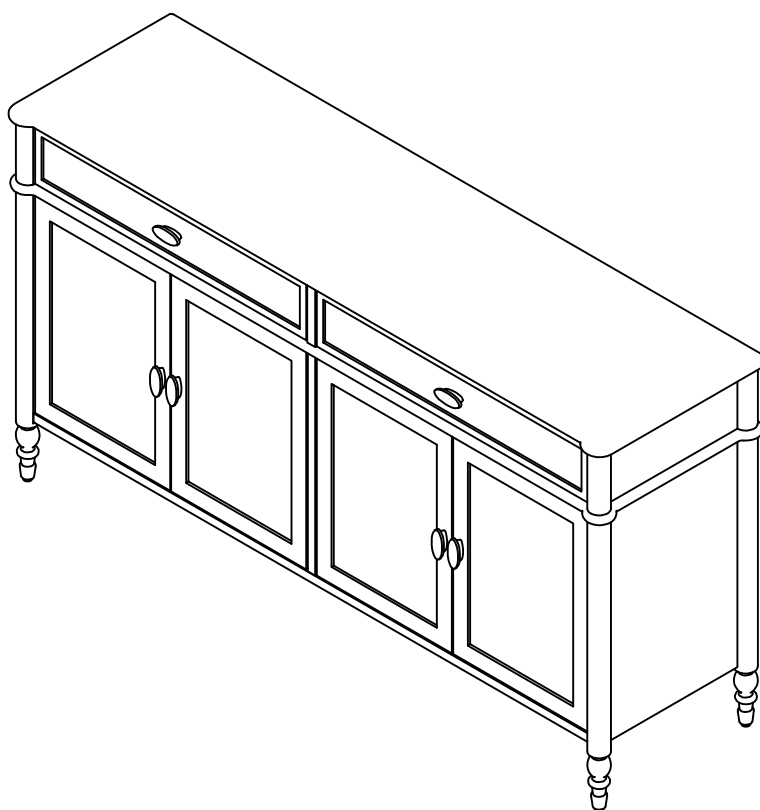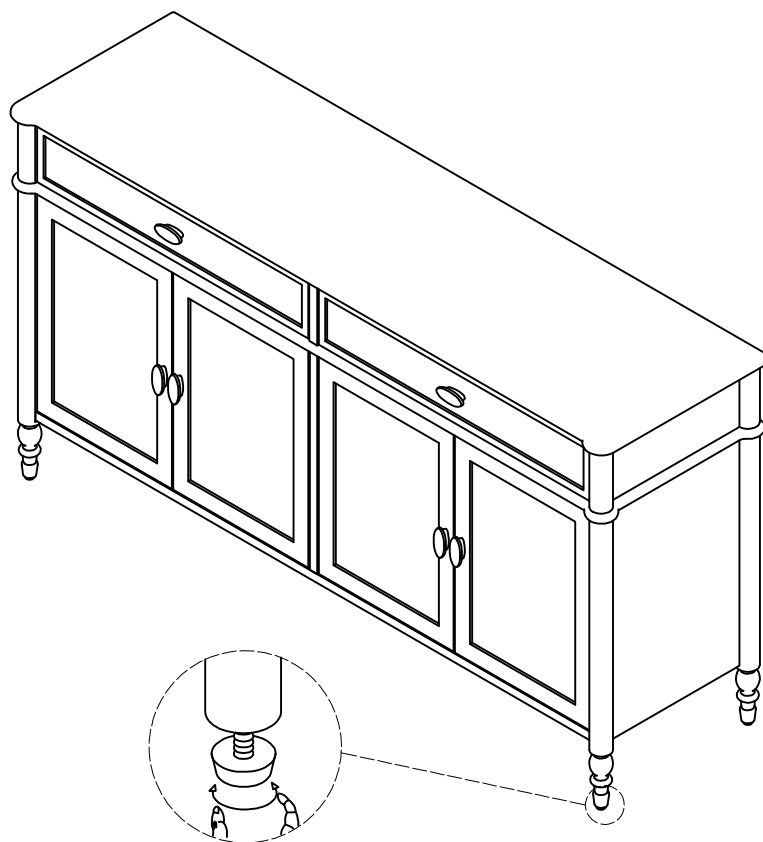

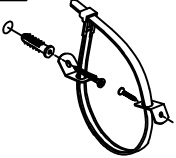
#15	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

 Note: This item is not intended for clothing storage use.

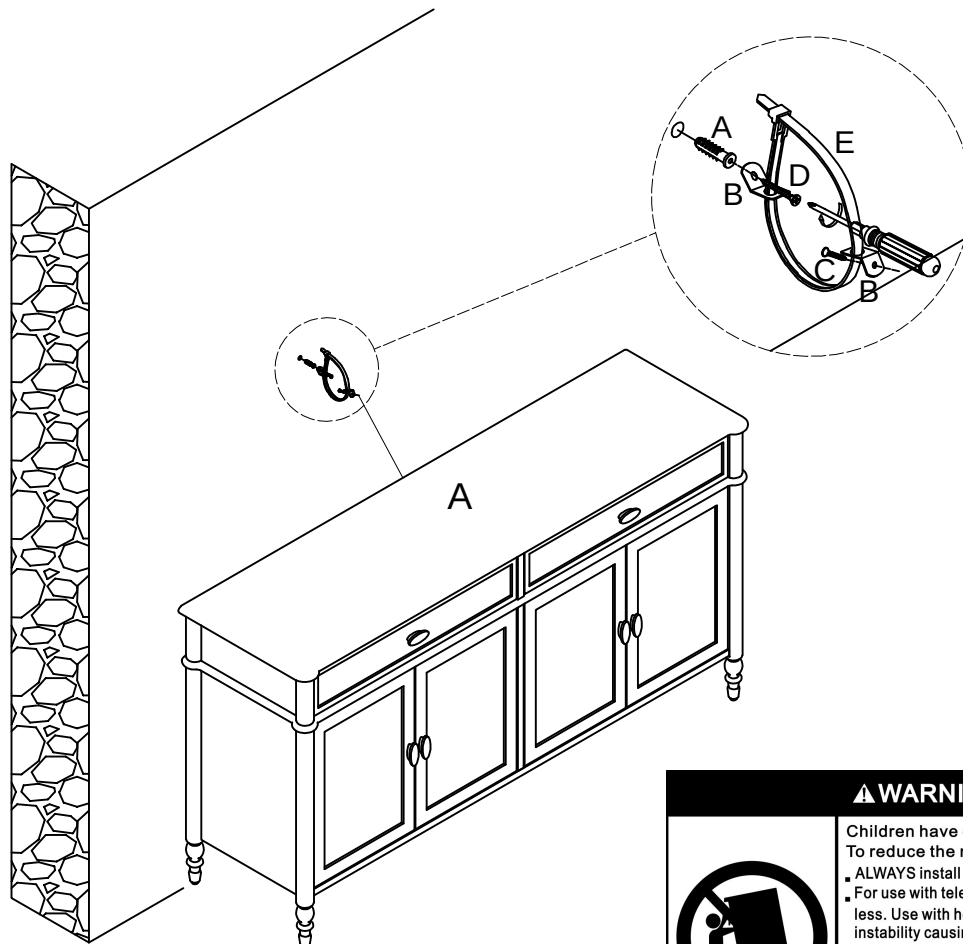

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!