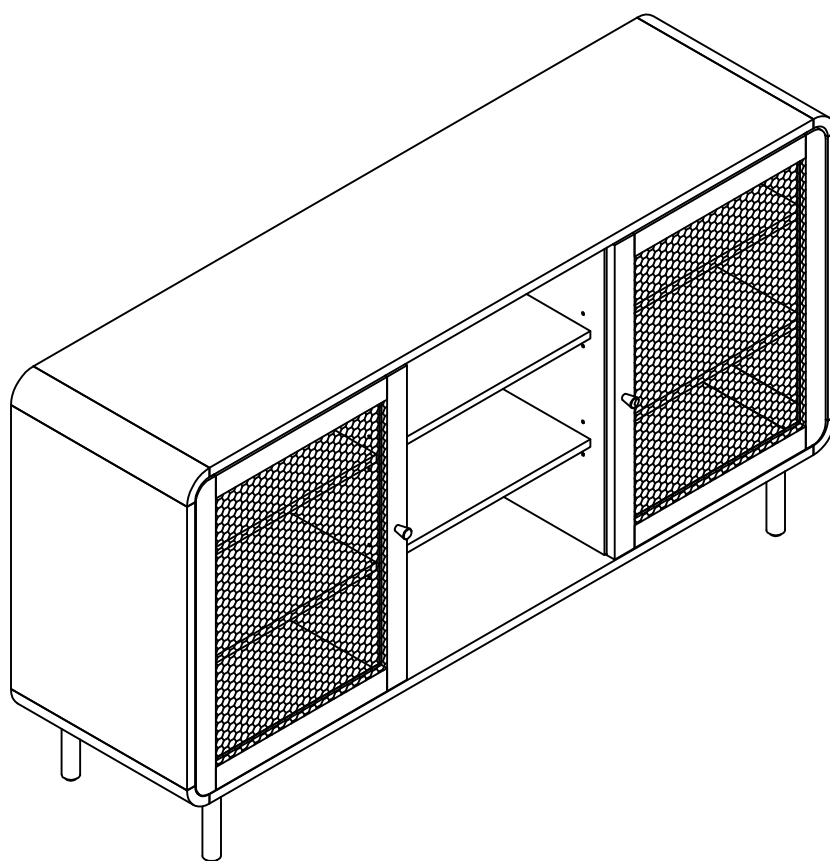 















CROSLEY

FURNITURE







Sideboard CF4237



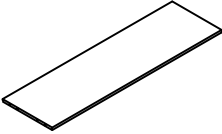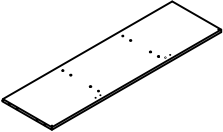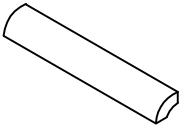             PARTS LIST


A 	B 	C 	D 	E 
Top Panel 1 PC	Right Panel 1 PC	Left Panel 1 PC	Right Partition Panel 1 PC	Left Partition Panel 1 PC
F 	G 	H 	I 	J 
Bottom Panel 1 PC	Door 2 PCS	Back Panel 2 PCS	Middle Back Panel 1 PC	Corner 4 PCS
K 	L 	M 	N 	O 
Adjustable Shelf 4 PCS	Middle Adjustable Shelf 2 PCS	Leg 4 PCS	Support Leg 2 PCS	Cover 3 PCS

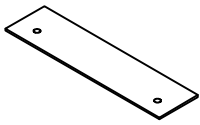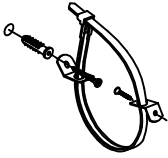      HARDWARE LIST

#1 	#2 	#3 	#4 	#5 
Knob 2 PCS	Magnet 4 PCS	Cam Bolt 20 PCS (Extra 1)	Cam Lock 20 PCS (Extra 1)	Round Head Bolt 2 PCS (Extra 1)
#6 	#7 	#8 	#9 	#10 
8*30mm Wood Dowel 24 PCS (Extra 1)	7*38mm Tapping Bolt 4 PCS (Extra 1)	1/4"*25mm Long Bolt 6 PCS (Extra 1)	1/4"*16mm Short Bolt 18 PCS (Extra 1)	Shelf Holder 24 PCS (Extra 1)
#11 	#12 	#13 	#14 	#15 
Connecting Bar 6 PCS	6*3*15mm Round Head Screw 8 PCS (Extra 1)	8*3*15mm Screw 30 PCS (Extra 1)	Metal Plate 2 PCS	1/4*12mm Flat Head Bolt 4 PCS (Extra 1)
#16 	#17 	#18 	#19 	#20 
Cam Sticker 20 PCS (Extra 1)	Binding Post 3 SETS (Extra 1)	M2 Small Allen Wrench 1 PC	M4 Allen Wrench 1 PC	Safety Strap Kit 1 SET

ADDITIONAL TOOLS (Not Provided)

 Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Insert cam bolts (part #3) into pre-drilled holes of top panel (part A) and corners (part J) using phillips head screwdriver. Attach magnets (part #2) to panels (parts A & F) using round head screws (part #12) and phillips head screwdriver.

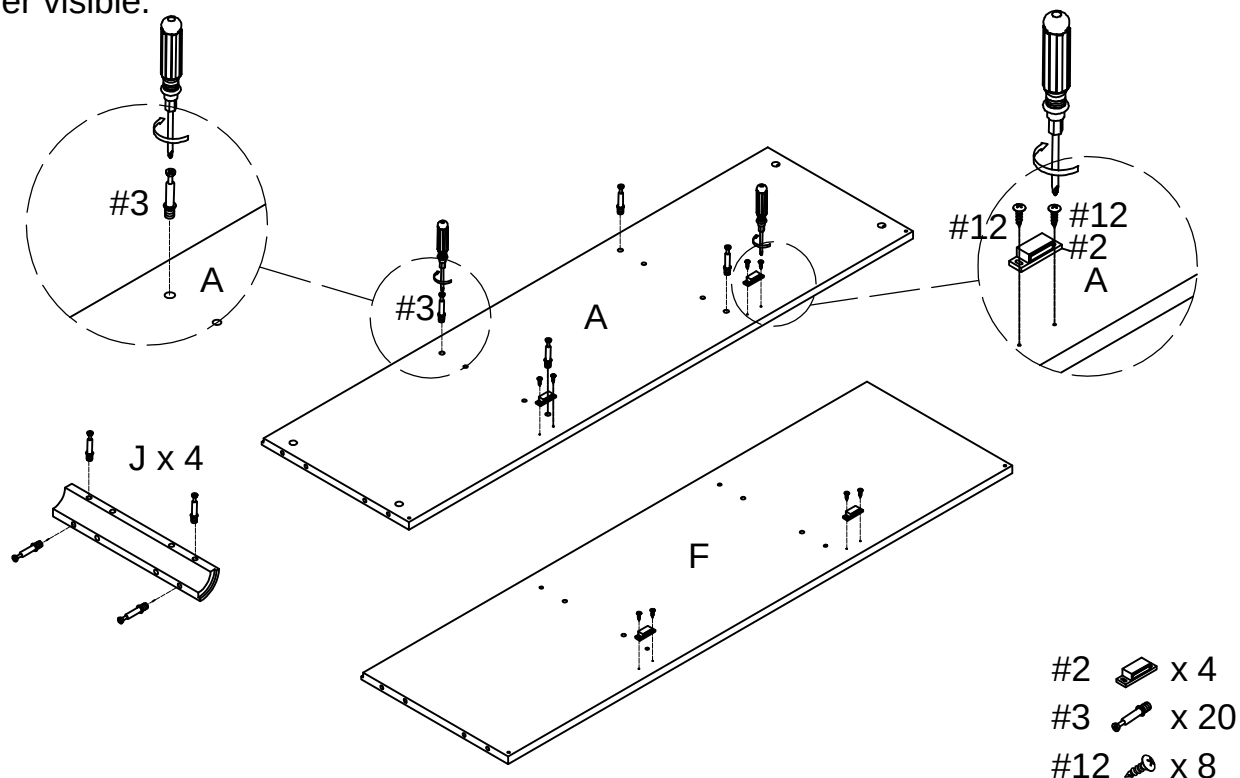 Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolts are no longer visible.




Step 2. Attach corners (part J) to panels (parts A & F) using cam locks (part #4), wood dowels (part #6) and phillips head screwdriver.

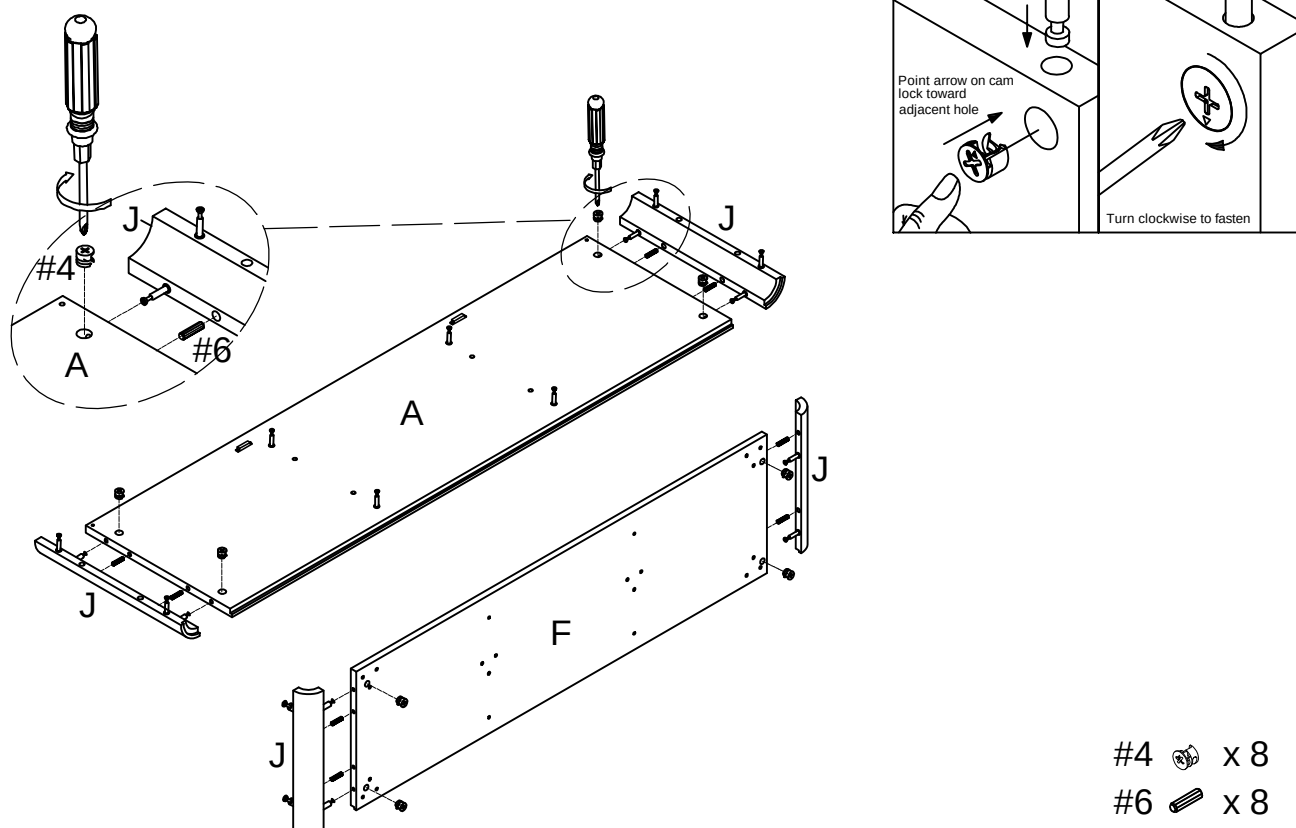 
Note: Cam locks must rotate a full 180°. See pictured insert.



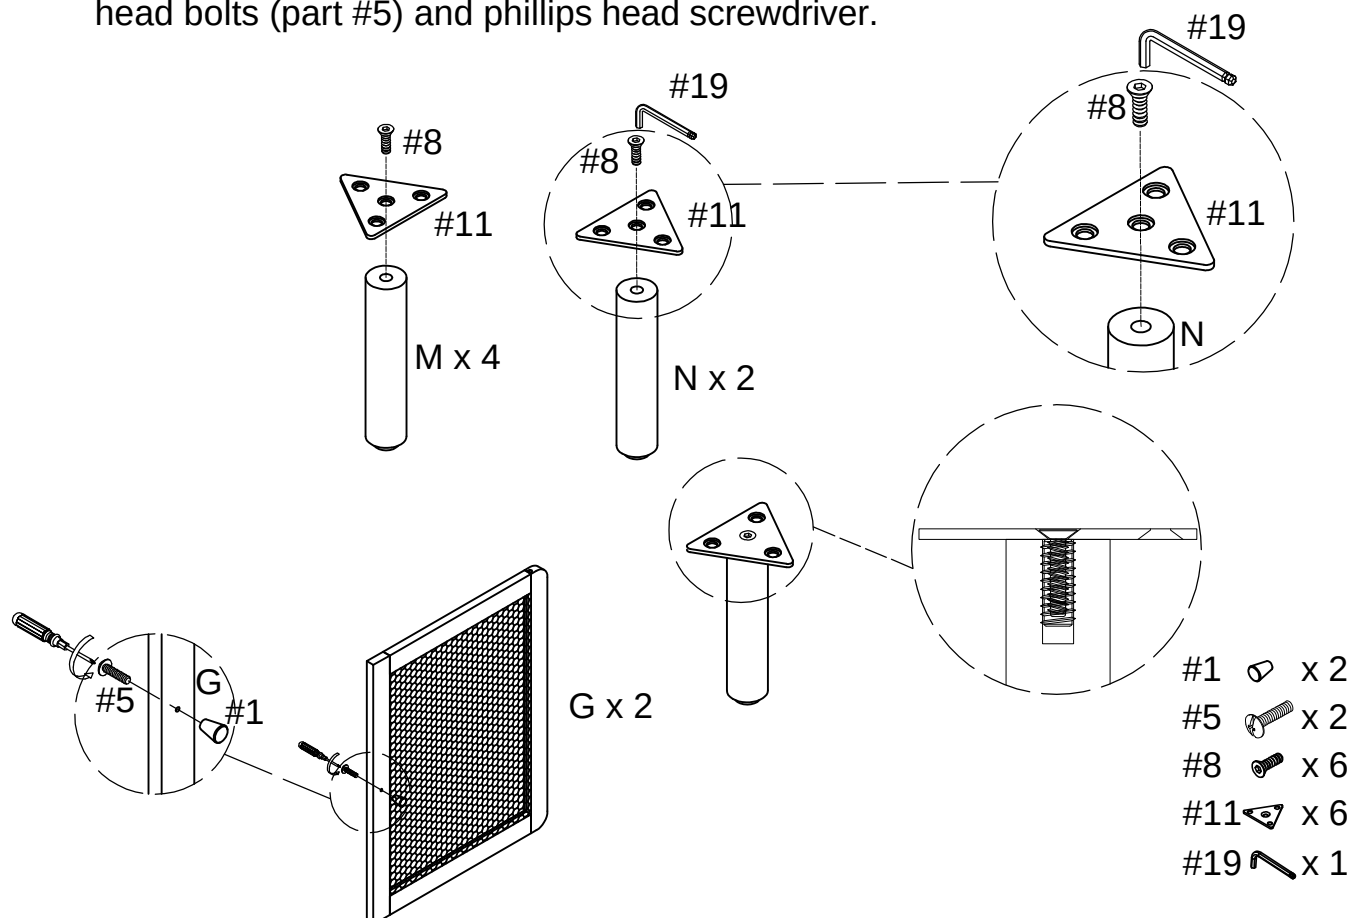 Step 3. Attach connecting bars (part #11) to legs (parts M & N) using long bolts (part #8) and allen wrench (part #19). Attach knobs (part #1) to doors (part G) using round head bolts (part #5) and phillips head screwdriver.




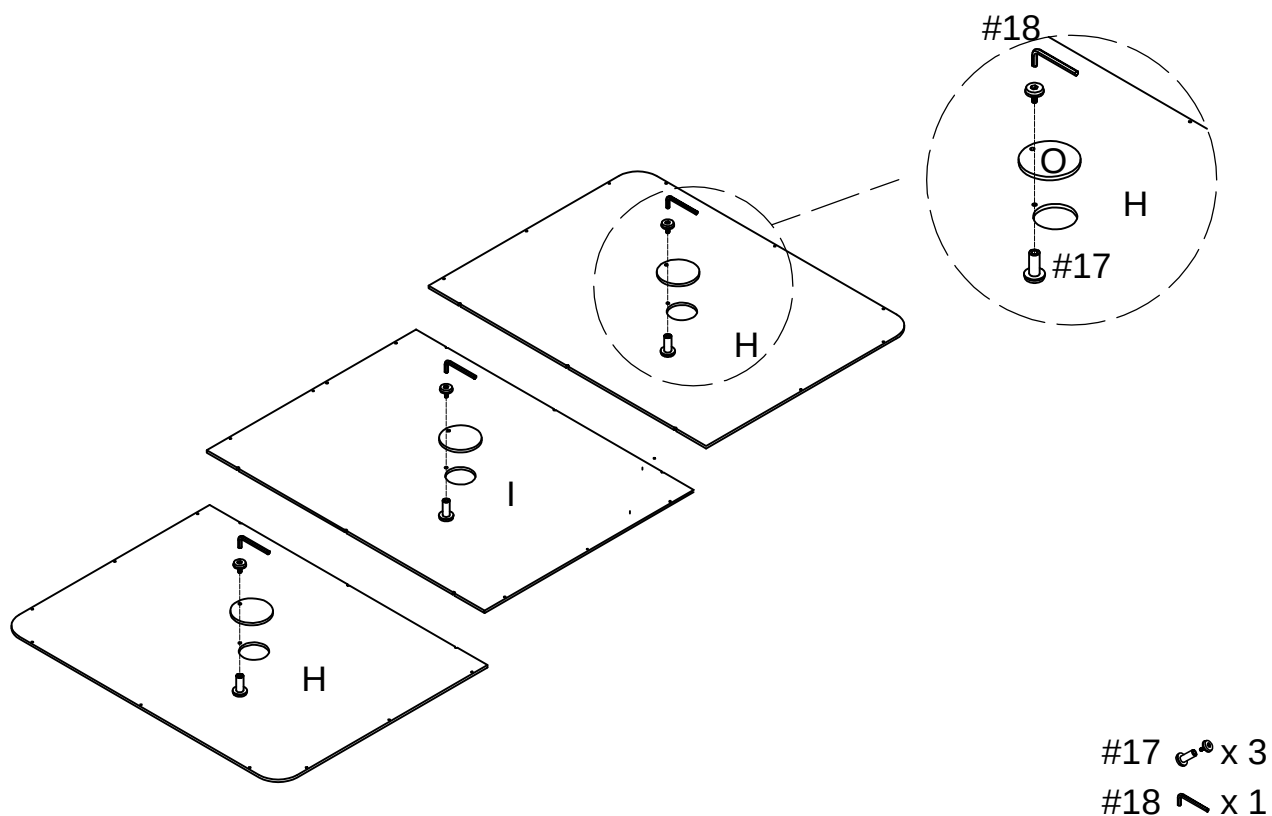 Step 4. Attach covers (part O) to back panels (parts H & I) using binding posts (part #17) and small allen wrench (part #18).



Step 5. Attach panels (parts B, C, D & E) to assembled unit (parts A & J) using cam locks (part #4), wood dowels (part #6) and phillips head screwdriver.

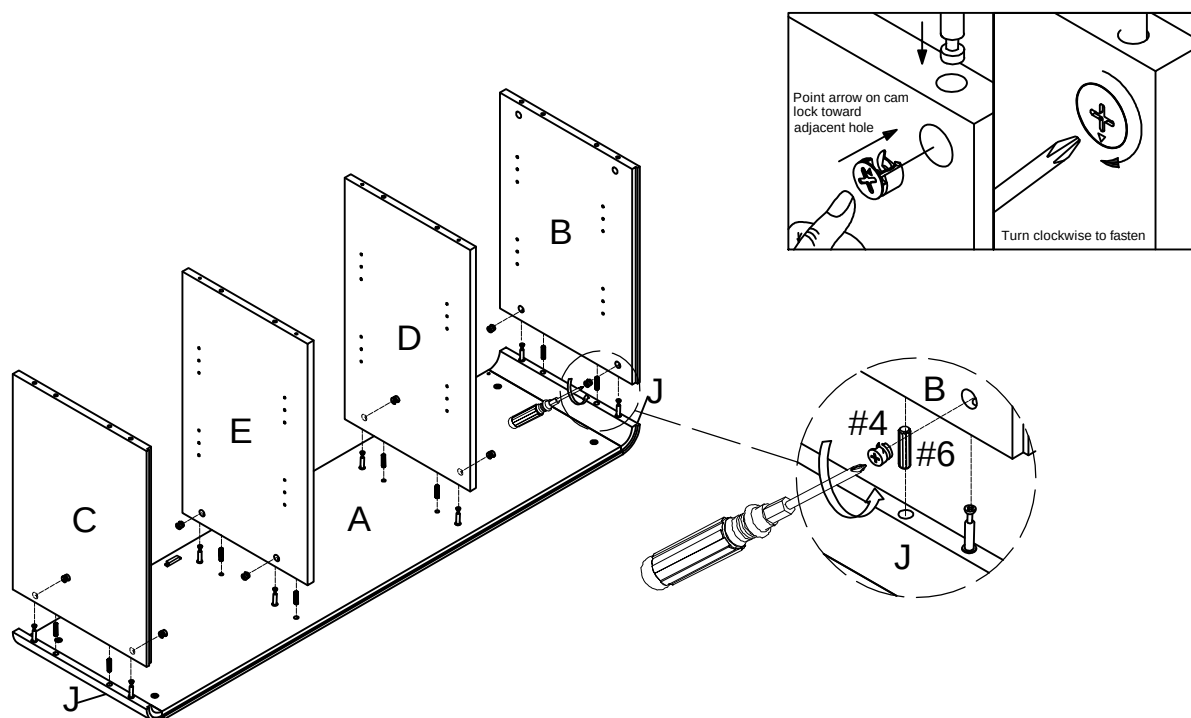 Note: Cam locks must rotate a full 180°. See pictured insert.




#4  x 8

#6  x 8

Step 6. Attach assembled unit (parts F & J) to panels (parts B, C, D & E) using cam locks (part #4), wood dowels (part #6), tapping bolts (part #7), allen wrench (part #19) and phillips head screwdriver.

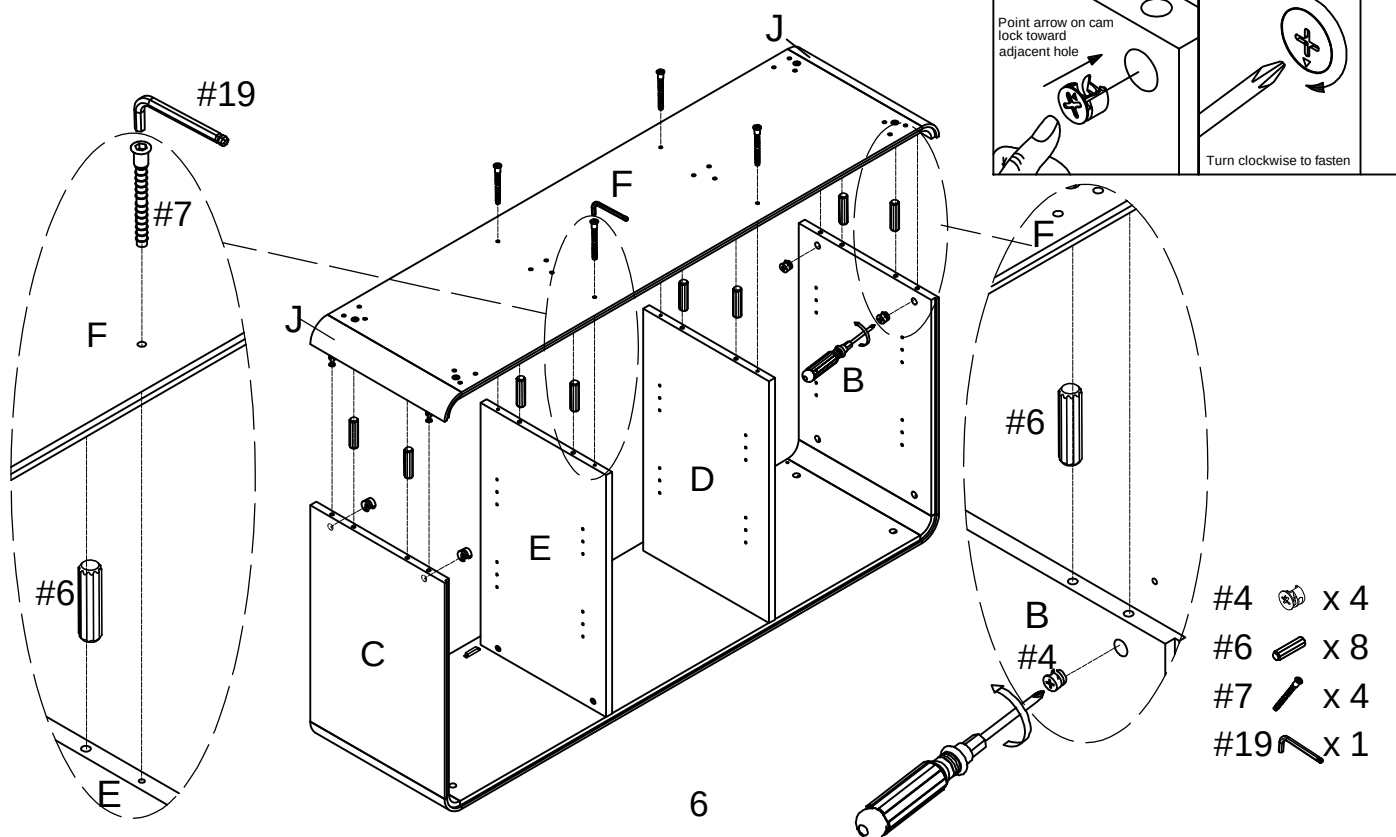 Note : Cam locks must rotate a full 180°. See pictured insert.




#4  x 4

#6  x 8


#7  x 4

#19  x 1

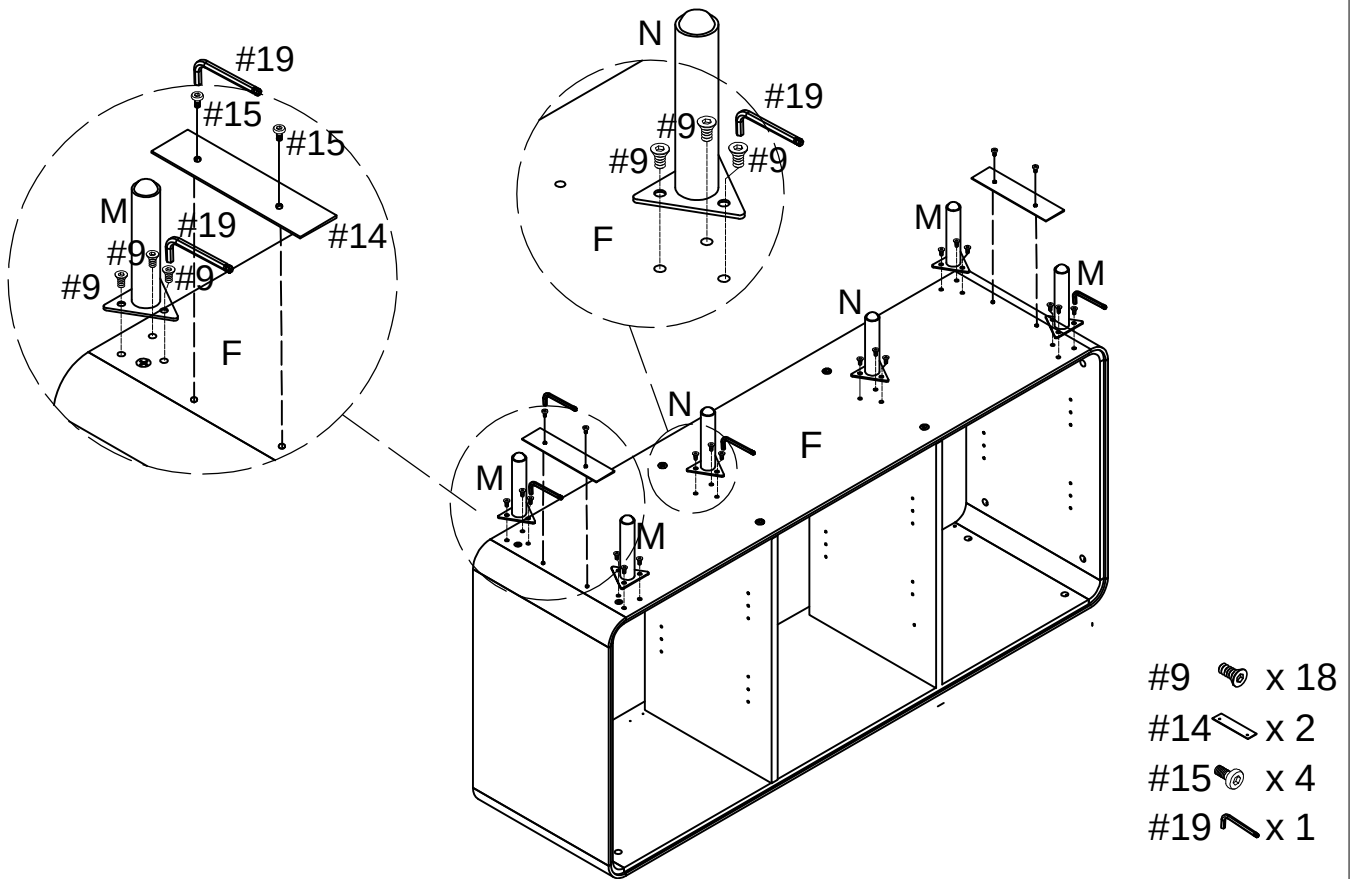 Step 7. Attach metal plates (part #14) to bottom panel (part F) using flat head bolts (part #15) and allen wrench (part #19). Attach legs (parts M & N) to bottom panel (part F) using short bolts (part #9) and allen wrench (part #19).




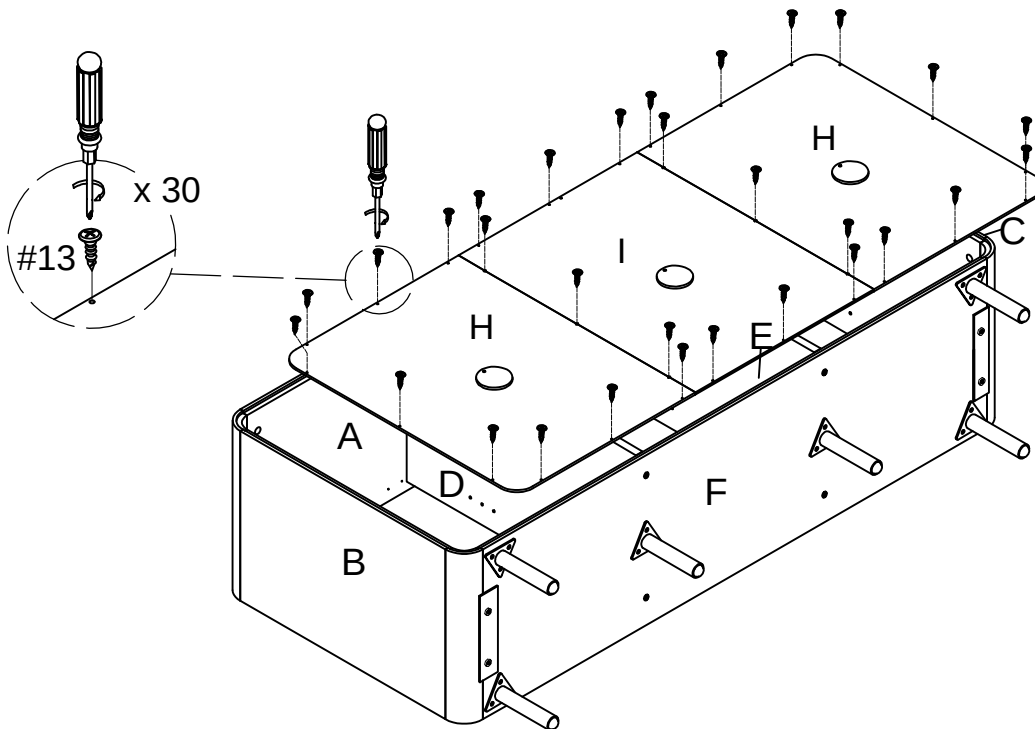 Step 8. Attach back panels (parts H & I) to assembled unit (parts A, B, C, D, E & F) using screws (part #13) and phillips head screwdriver.




#13  x 30

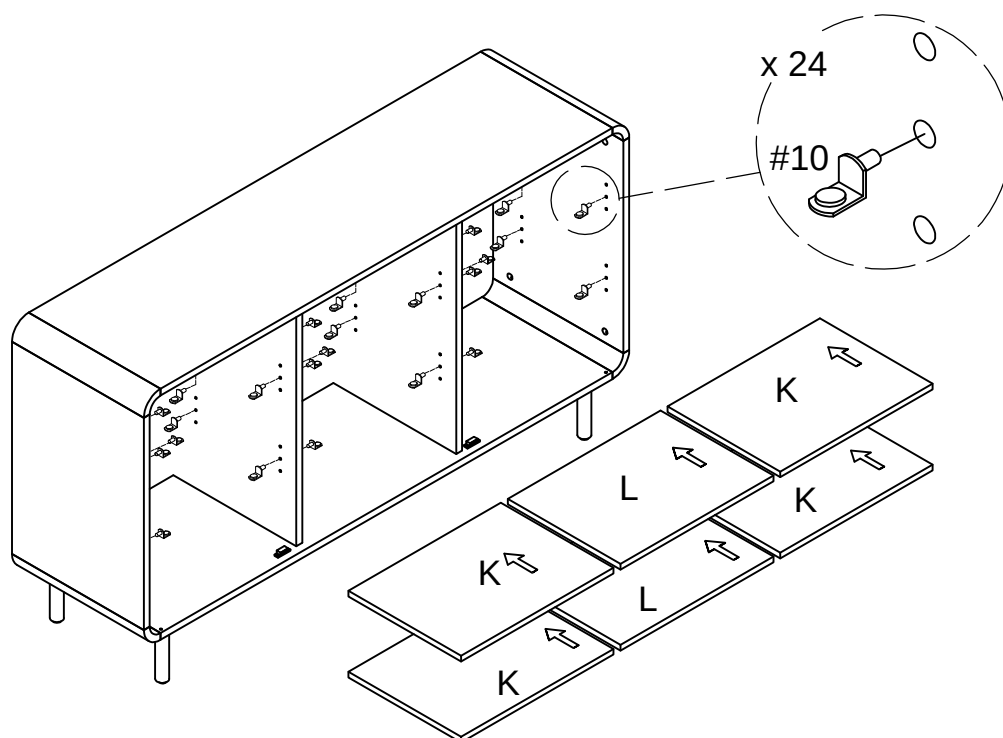 Step 9. Carefully turn unit upright. Insert shelf holders (part #10) into desired position and slide adjustable shelves (parts K & L) into place.



#10  x 24


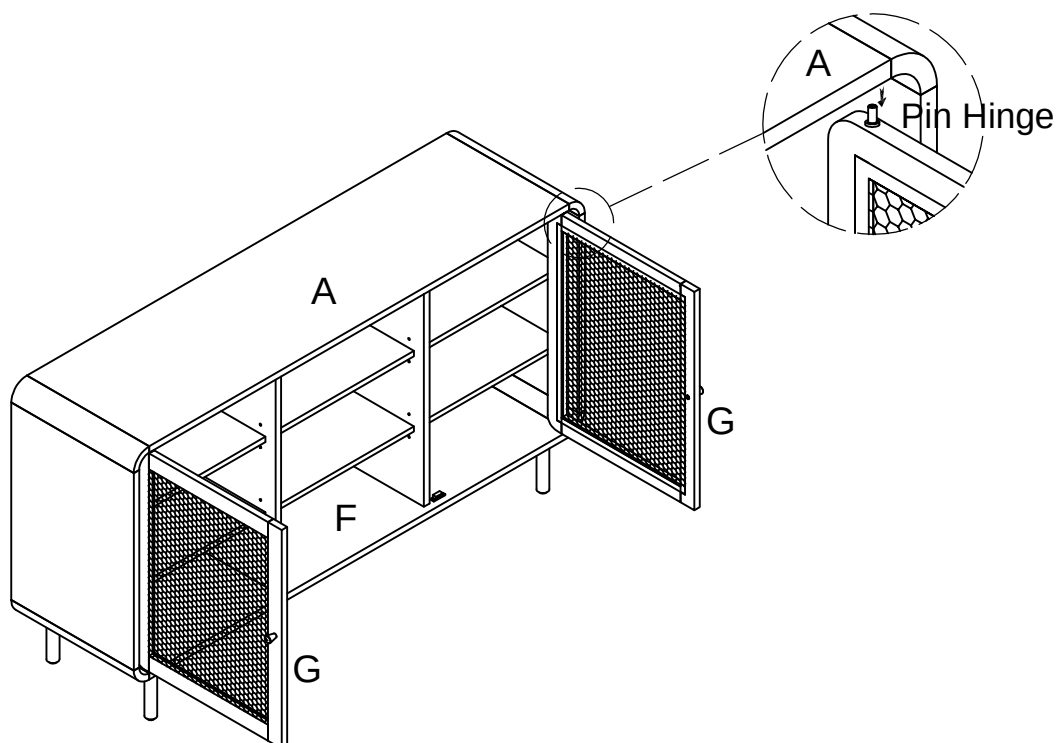 
Step 10. Attach doors (part G) by placing bottom pin hinge (pre-installed in door) in the pre-drilled hole of bottom panel (part F). Then depress the top spring-loaded pin hinge so it can be placed in the pre-drilled hole of top panel (part A).




Step 11. Using cam stickers (part #16) cover all cam locks (part #4).


Important: Safety strap kit (part #20) must be installed to prevent tipping damage and/or injury.

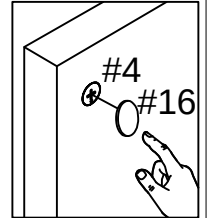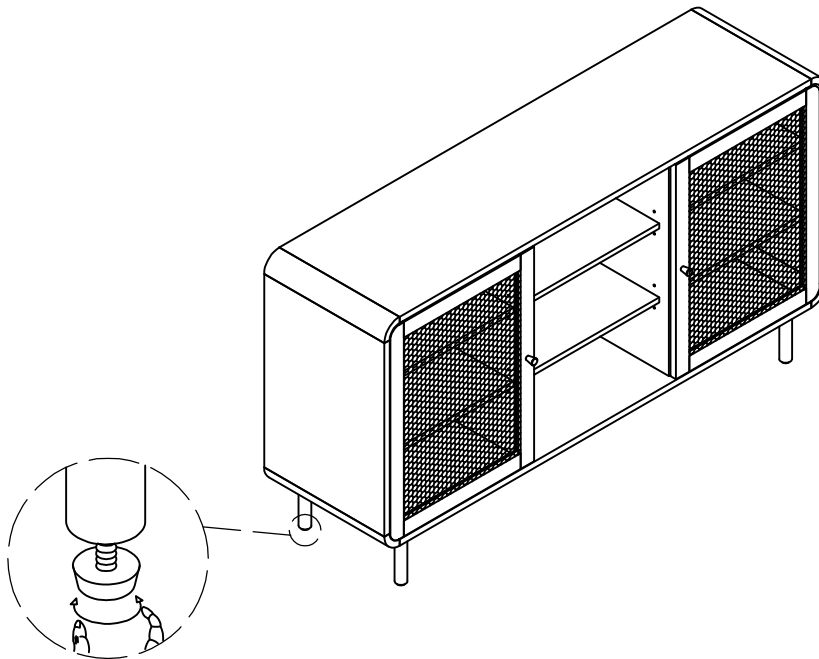  Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.



#16 ○ x 20

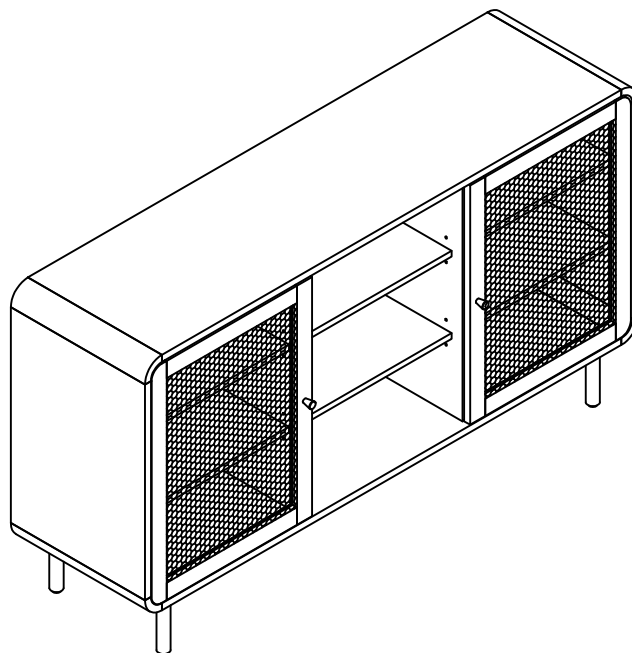 

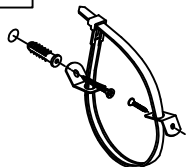 
#20	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

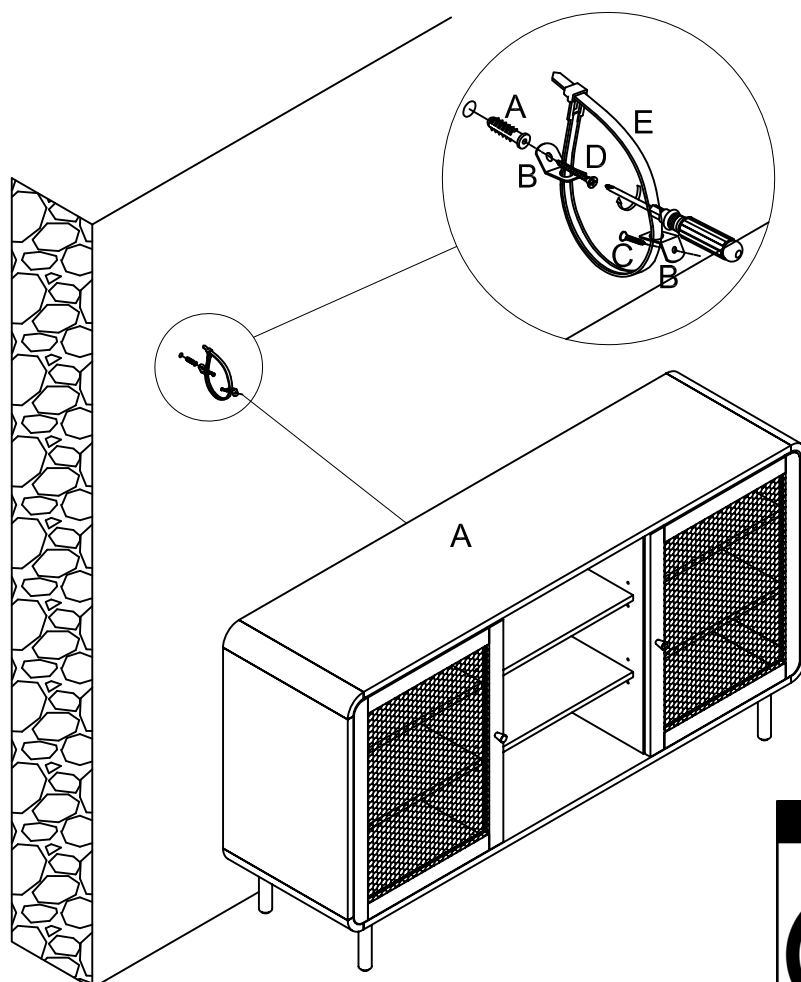 Note: This item is not intended for clothing storage use.



⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- For use with televisions weighing 50lbs(23kg) or less. Use with heavier televisions may result in instability causing tip-over resulting in death or serious injury.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!