 


ASSEMBLY INSTRUCTIONS

EEI-7016

VO.08.05.24

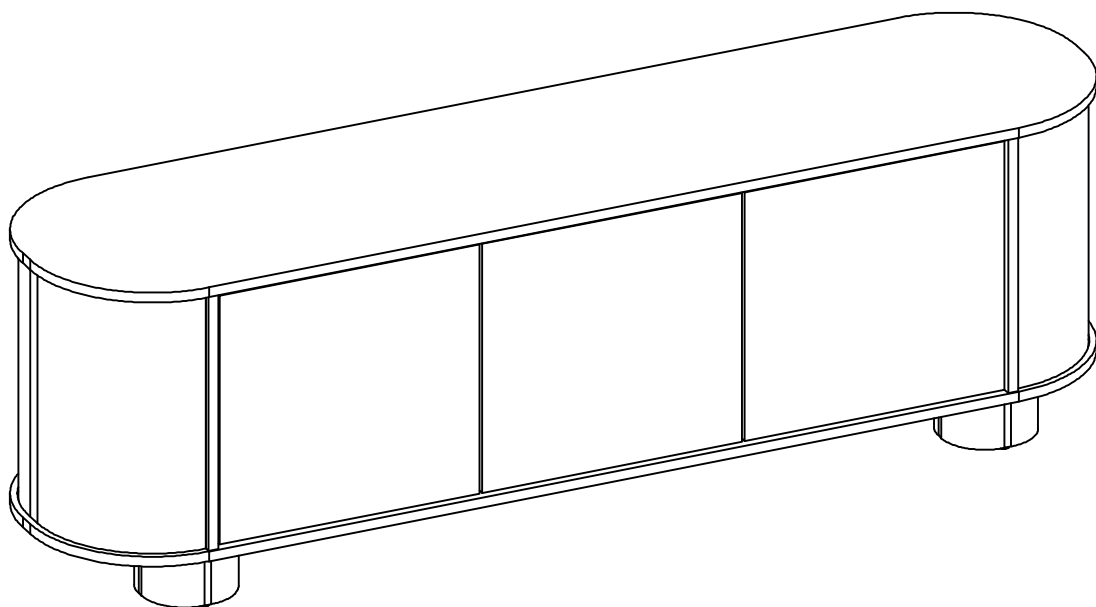

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

 
Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top panel	x1
2	Bottom panel	x1
3	Side panel	x2
4	Right middle panel	x1
5	Left middle panel	x1
6	Right fix shelf panel	x1
7	Left fix shelf panel	x1
8	Adjustable shelf panel	x1
9	Right support panel	x1
10	Left support panel	x1
11	Back support panel	x2
12	Side support panel	x4
13	Back panel	x1
14	Leg	x4
15	Bottom support	x2
16	Door panel	x3

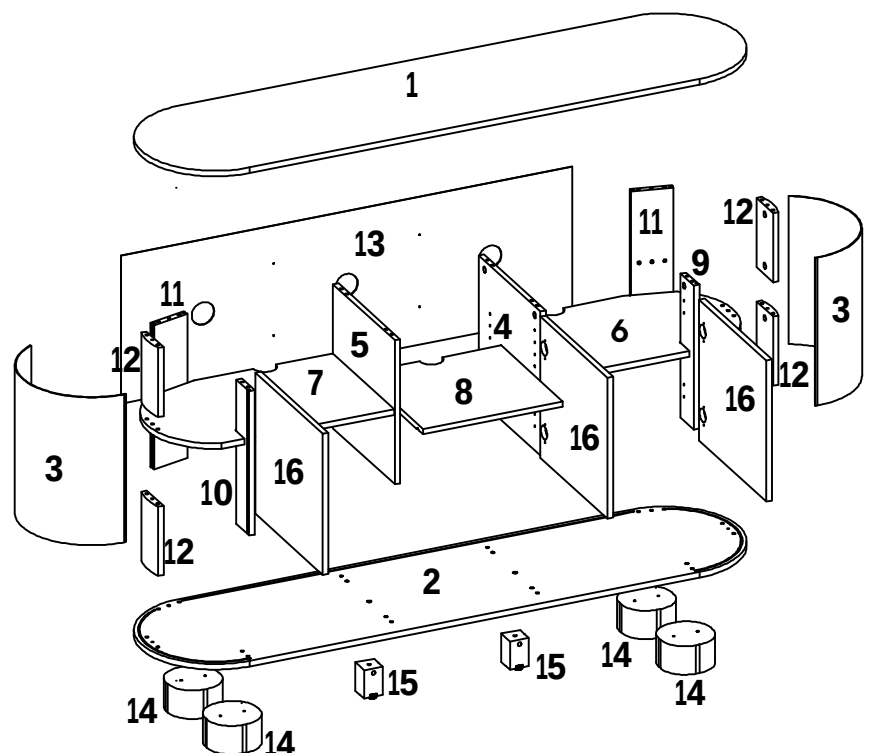

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A.		Cam bolt Ø6 x 32 mm	x16
B.		Cam lock Ø15 mm	x20
C.		Sticker	x14
D.		Dowel Ø7.8 x 32 mm	x36
E.		Assembly Screw	x10
F.		Hinge	x4
G.		Hinge	x2
H.		Screw Ø7 x 14 mm	x12
I.		Screw Ø8 x 25 mm	x8
J.		Wood screw Ø6 x 12 mm	x6
K.		Screw Ø4 x 12 mm	x4
L.		Screw Ø6 x 19 mm	x12
M.		Wedge	x12
N.		Bolt M6 x 30 mm	x2
O.		Shelf Pin	x4
P.		Adjustable Leveller	x2
Q.		Floor Glide	x16
R.		Barrel Nut	x2
S.		Push to open	x3
T.		Allen key	x1
U.		Minifix double end	x2
V.		Dowel Ø7.8 x 57 mm	x4

What you need:



Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

COMPONENTS

4	Right middle panel	x1
5	Left middle panel	x1
6	Right fix shelf panel	x1
7	Left fix shelf panel	x1
9	Right support panel	x1
10	Left support panel	x1
11	Right back panel	x2
12	Side support panel	x4

HARDWARE

A	Cambolt Ø6 x 32 mm	x4
D	Dowel Ø7.8 x 32 mm	x32

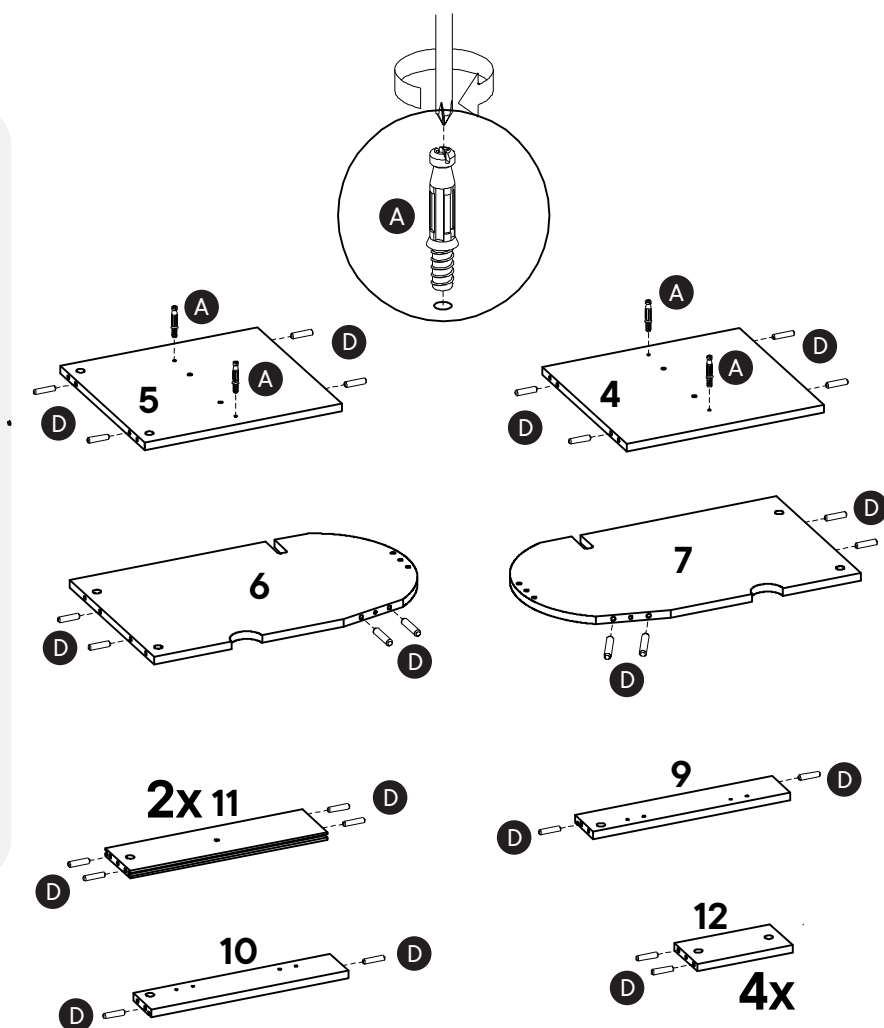 


Step 2

COMPONENTS

4	Right middle panel	x1
5	Left middle panel	x1
6	Right fix shelf panel	x1
7	Left fix shelf panel	x1
11	Right back panel	x2

HARDWARE

B	Camlock Ø15 mm	x4
E	Assembly screw	x2

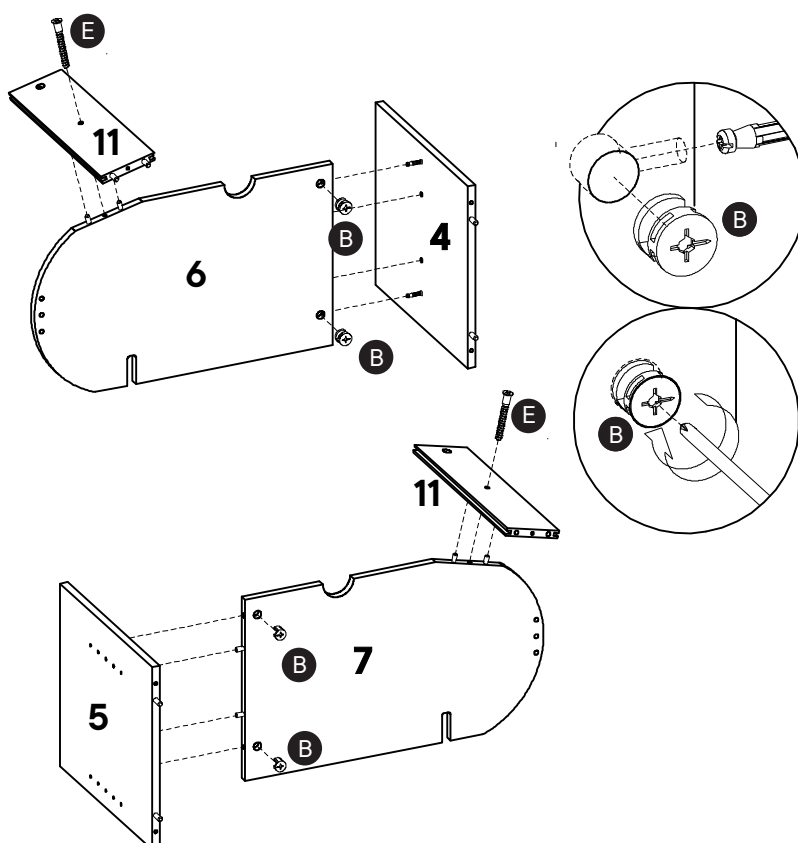 


Step 3

COMPONENTS

1	Top Panel	x1
---	-----------	----

HARDWARE

A	Cambolt Ø6 x 32 mm	x10
J	Screw Ø6 x 12 mm	x6
S	Push to open	x3

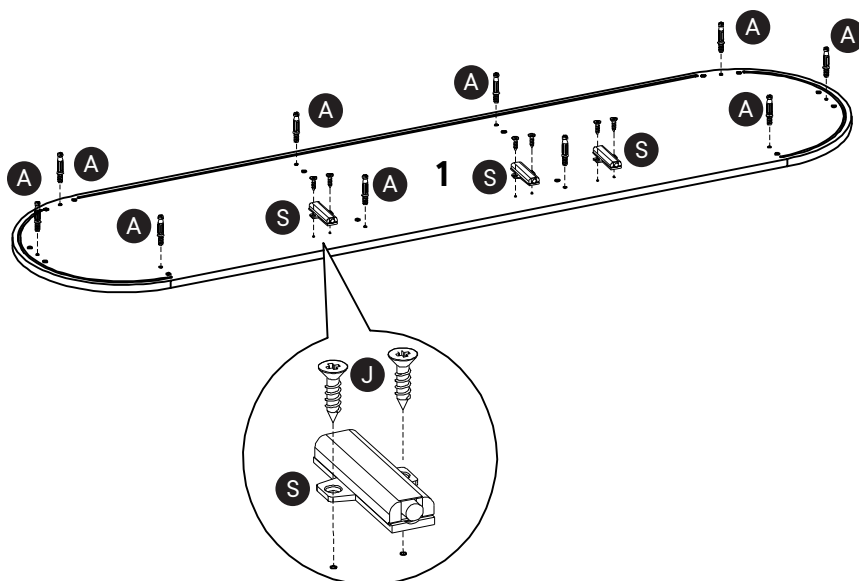 


Step 4

COMPONENTS

1	Top panel	x1
12	Side support panel	x2

HARDWARE


B	Camlock Ø15 mm	x2
C	Sticker	x2
V	Dowel Ø7.8 x 57 mm	x4

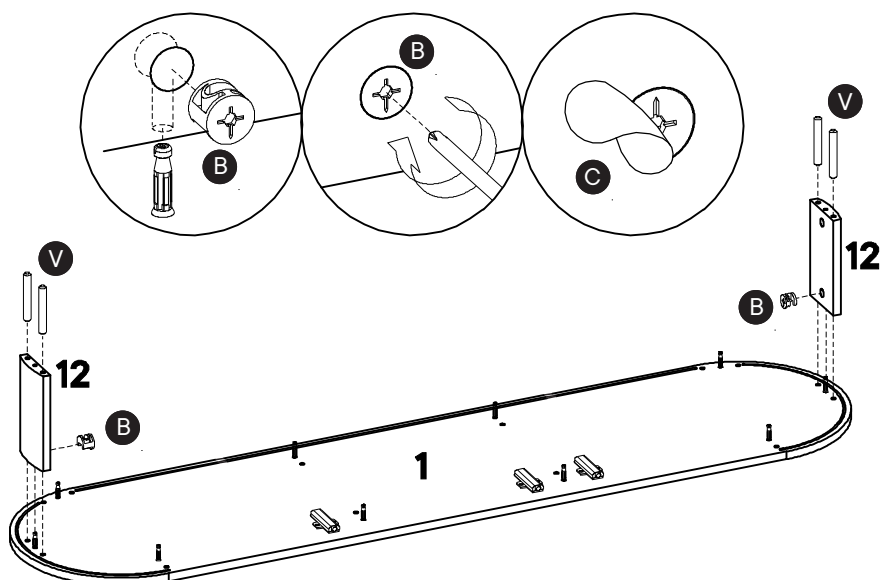 

Step 5

HARDWARE

B	Camlock Ø15 mm	x6
C	Sticker	x4
U	Minifix double end	x2

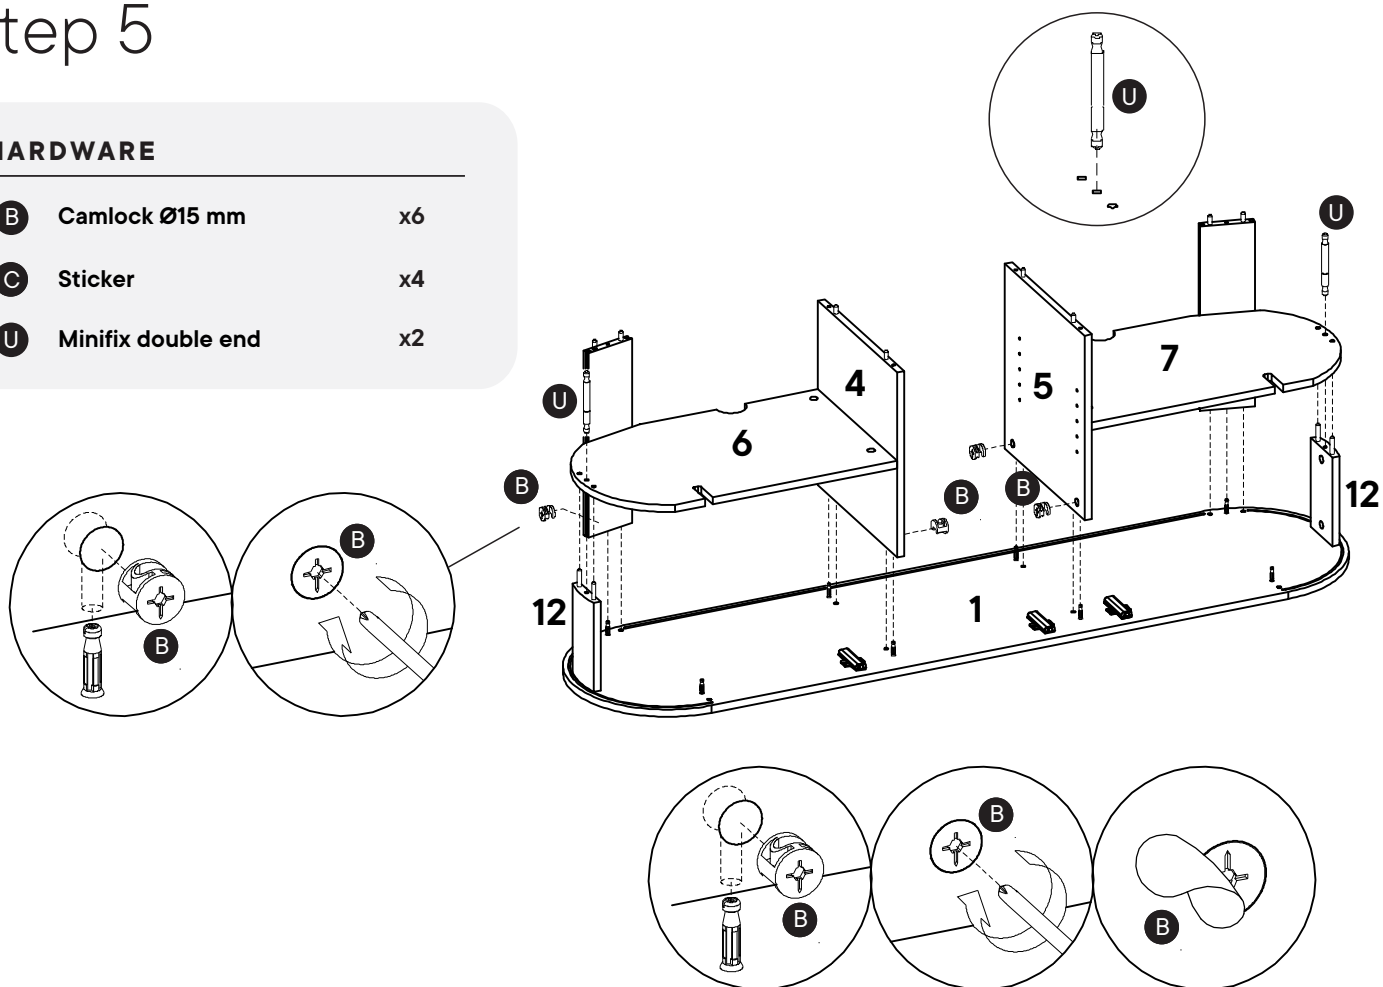 


Step 6

COMPONENTS

12	Side support panel	x2
-----------	--------------------	----

HARDWARE

B	Camlock Ø15 mm	x4
C	Sticker	x4

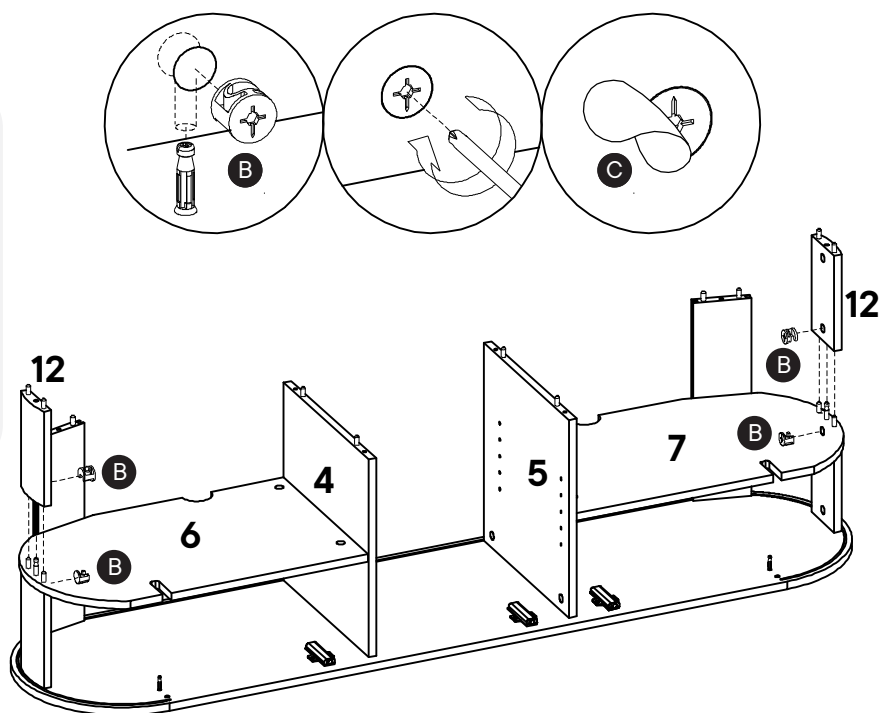 



Step 7

COMPONENTS

- | | | |
|----|---------------------|----|
| 9 | Right support panel | x1 |
| 10 | Left support panel | x1 |

HARDWARE


- | | | |
|---|----------------|----|
| B | Camlock Ø15 mm | x2 |
| C | Cover Cap | x2 |

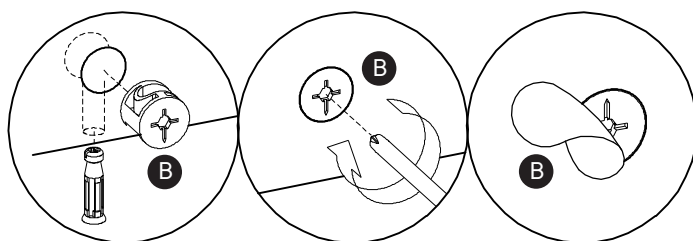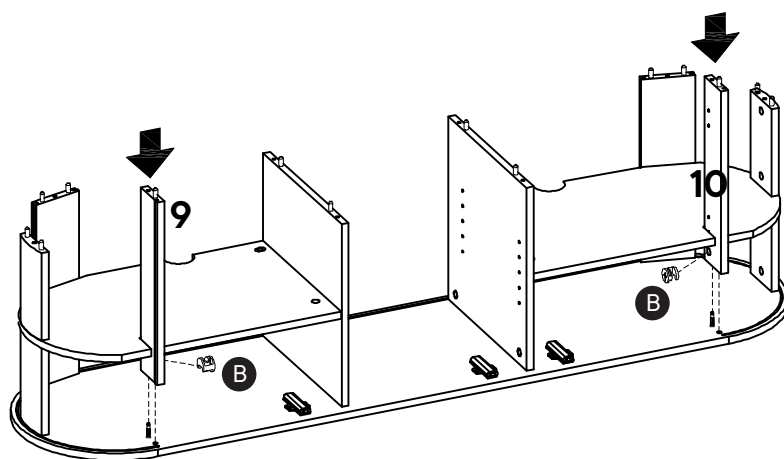  

Step 8

COMPONENTS


- | | | |
|----|------------|----|
| 13 | Back panel | x1 |
|----|------------|----|

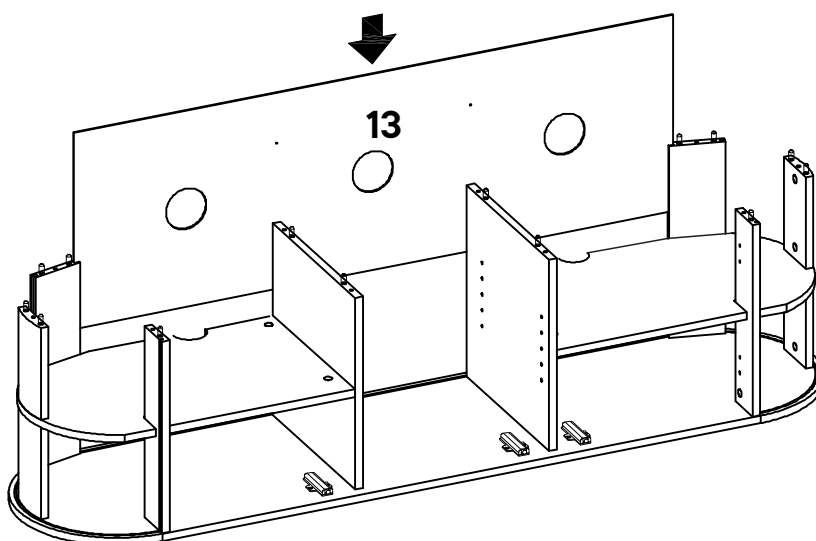 

Step 9

COMPONENTS

3	Side panel	x2
----------	------------	----

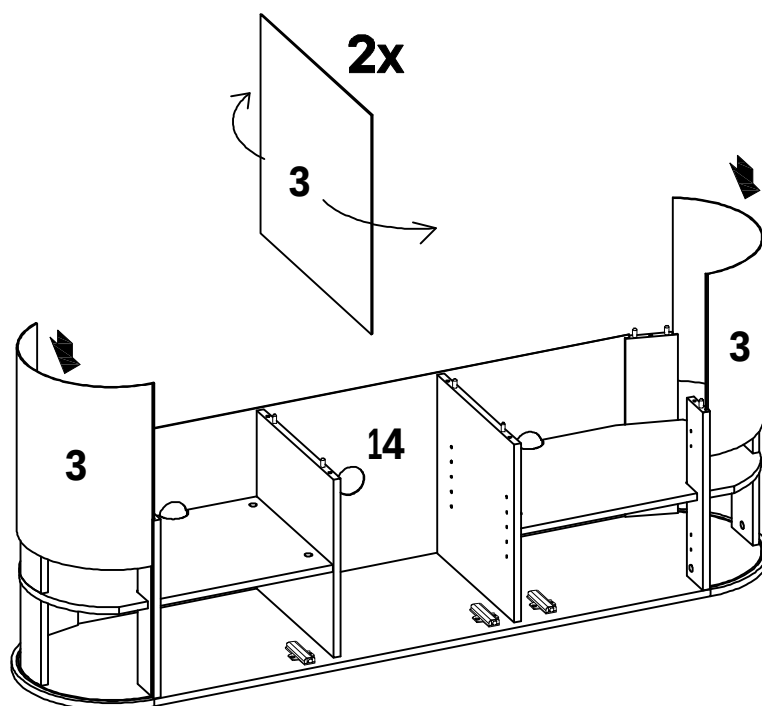 




Step 10

COMPONENTS



2	Bottom panel	x1
15	Bottom support	x2

HARDWARE

A	Cambolt Ø6 x 32 mm	x2
N	Bolt M6 x 30 mm	x2
P	Adjustable Leveller	x2
R	Barrel Nut	x2
T	Allen key	x1

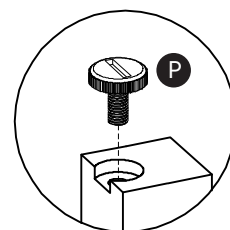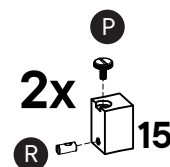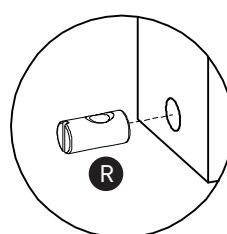   

  The adjustable leveler should be oriented towards the back

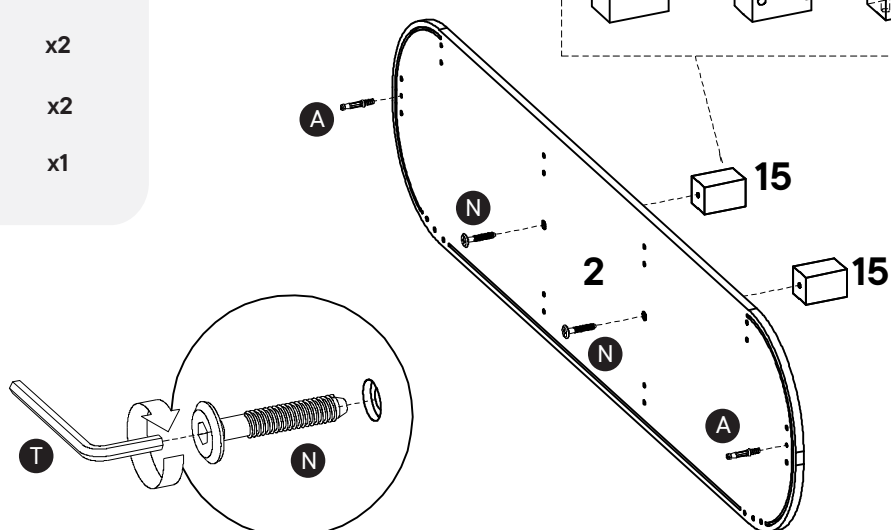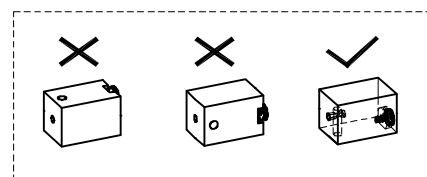

Step 11

COMPONENTS

 
2 Bottom panel x1

HARDWARE

B Camlock Ø15 mm x2

C Sticker x2

E Assembly screw x8

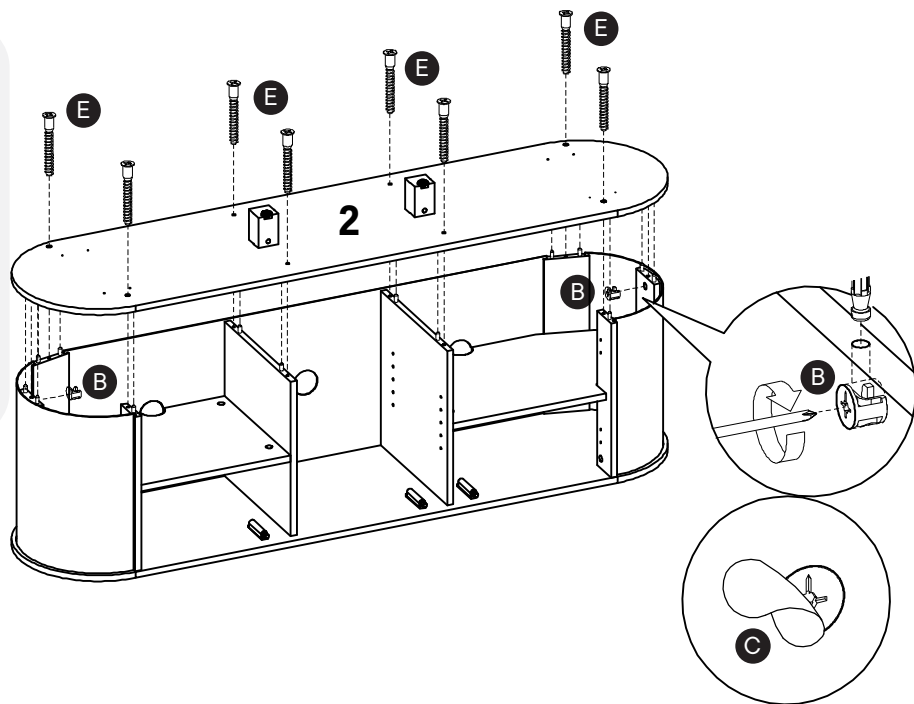

Step 12

 
COMPONENTS

14 Leg x4

HARDWARE

I Screw Ø8 x 25 mm x8



Q Floor Glide x16

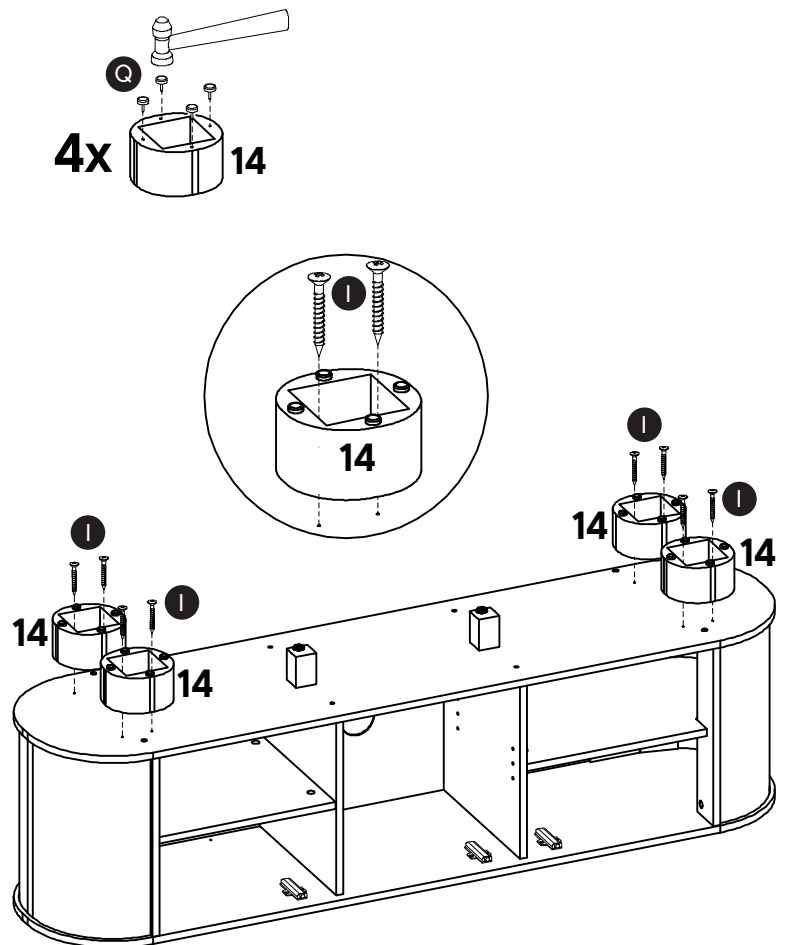

Step 13

HARDWARE

K	Screw Ø4 x 12 mm	x4
L	Screw Ø6 x 19 mm	x12
M	Wedge	x12

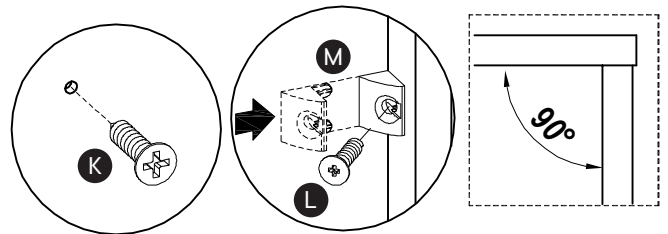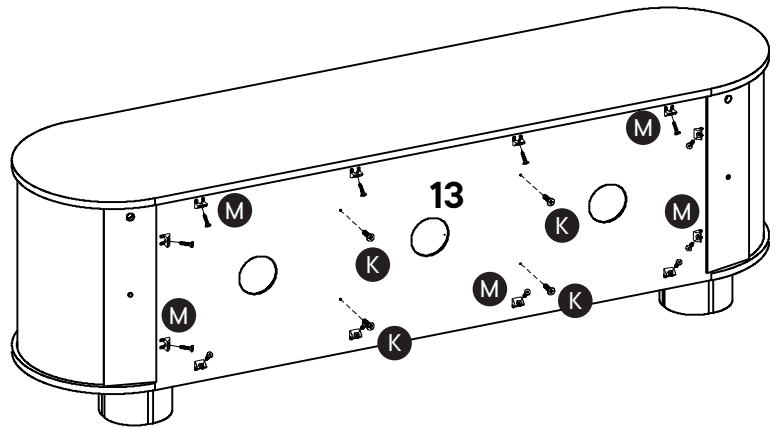  





Step 14

COMPONENTS

16	Door Panel	x3
-----------	------------	----

HARDWARE


F	Hinge	x4
G	Hinge	x2
H	Screw Ø7 x 14 mm	x12

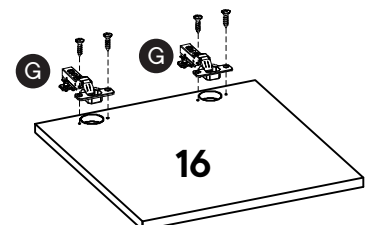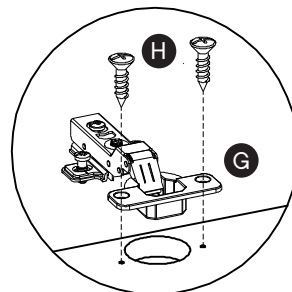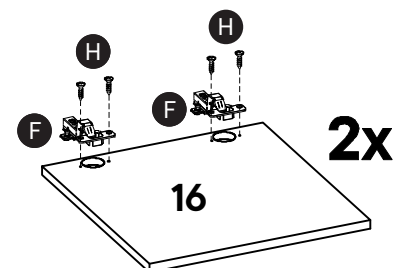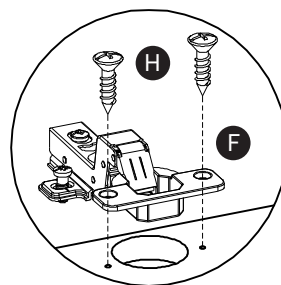    

Step 15

COMPONENTS

 16 Door Panel x3

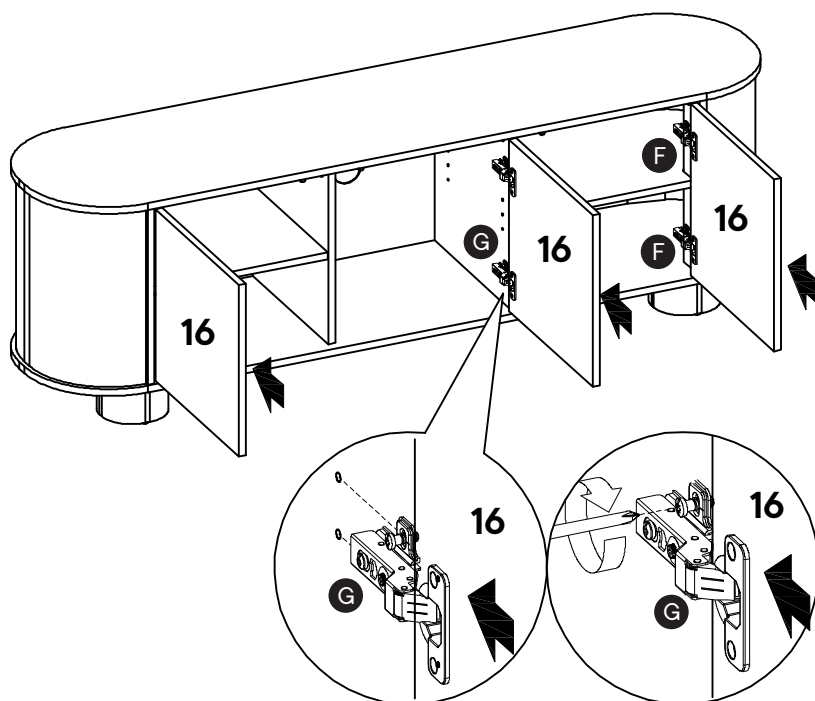



Step 16

COMPONENTS




8 Adjustable shelf x1

HARDWARE

  ○ Shelf pin x4

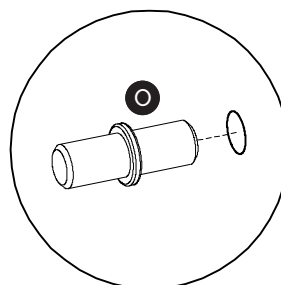
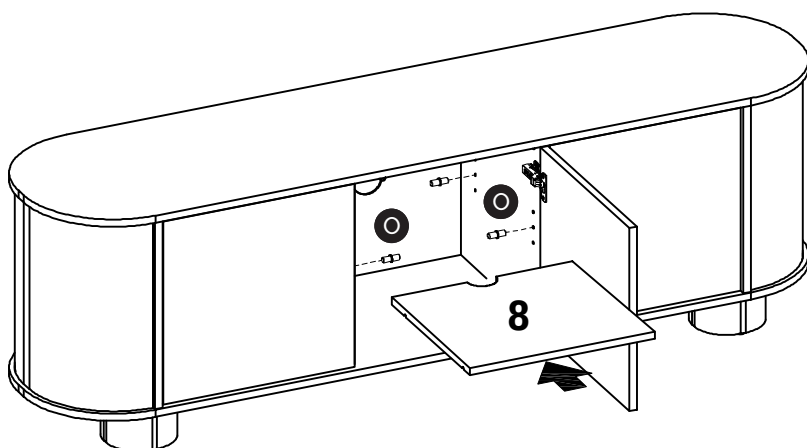


TV Stand Door Alignment

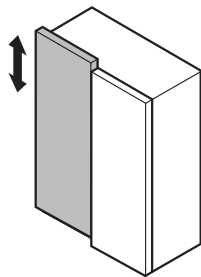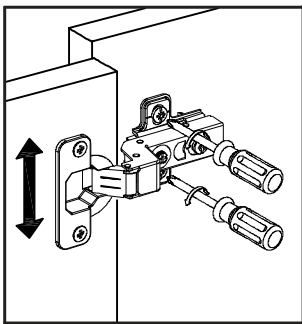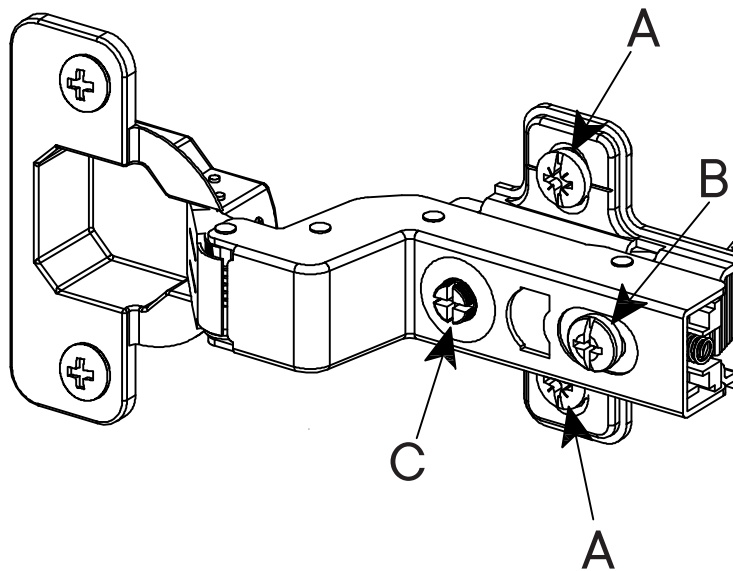   



To adjust the vertical height.

  Loosen the two screws A on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

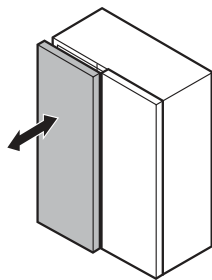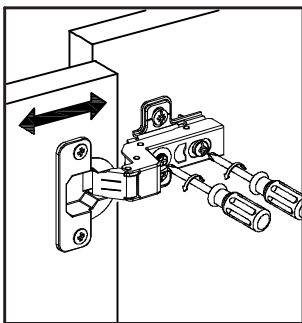

To adjust depth.

  Loosen screw B and adjust door, if the door can not be adjusted, please loosen screw C, then try again. Tighten screw B and C.

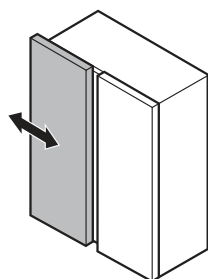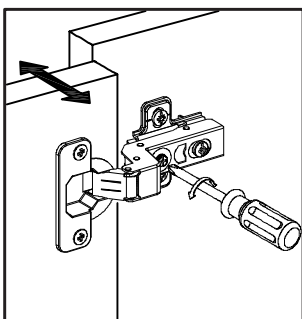

To adjust side ways.

Turn screw C on BOTH hinges on each door.

Great job!

Your TV Stand is complete.

 


CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

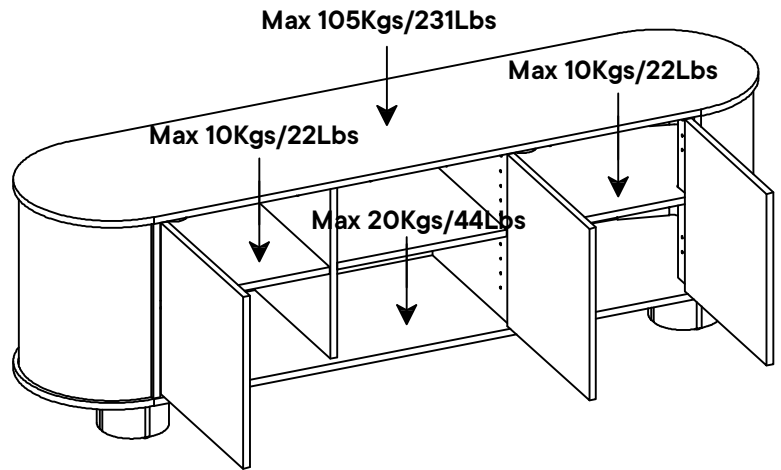

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway** for a chance to be featured.