 


ASSEMBLY INSTRUCTIONS

EEI-7164

VO.01.10.24

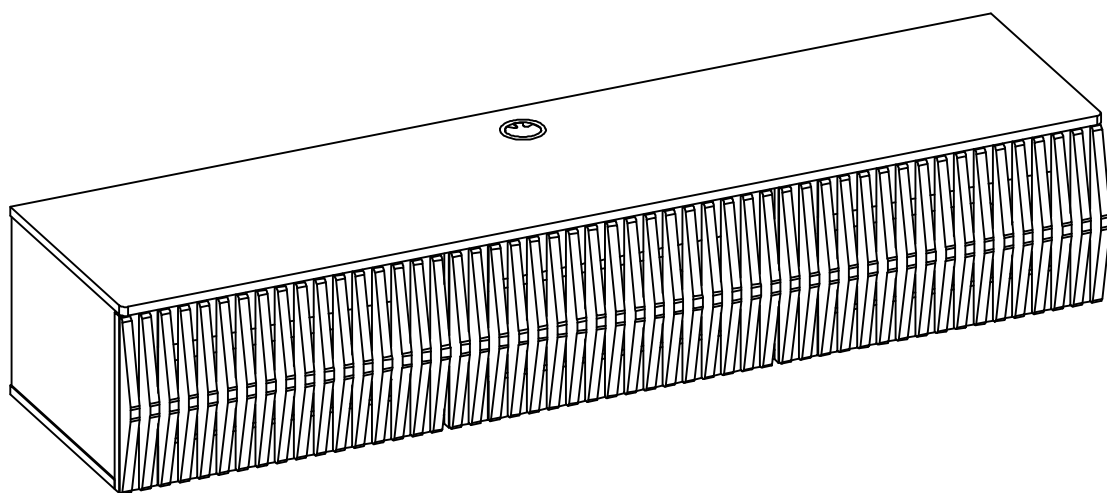

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

 
Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.



Furniture components:

1	Top panel	x1
2	Bottom panel	x1
3	Right side panel	x1
4	Left side panel	x1
5	Right divider panel	x1
6	Left divider panel	x1
7	Support bar	x1
8	Right back panel	x1
9	Left back panel	x1
10	Right Door	x1
11	Left Door	x1
12	Middle Door	x1

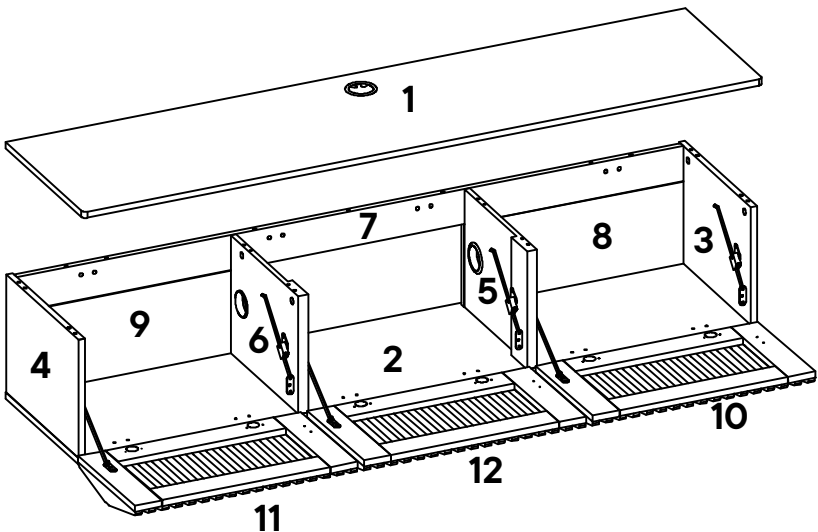

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

  Provided hardware:

A.		Cam bolt Ø6 x 32 mm	x15
B.		Cam lock Ø15 x 12 mm	x13
C.		Cam lock Ø15 x 10 mm	x4
D.		Sticker	x8
E.		Dowel Ø7.8 x 32 mm	x22
F.		Dowel Ø6 x 30 mm	x10
G.		Connecting bolt	x2
H.		Barrel nut	x2
I.		Assembly Screw	x6
J.		Screw Ø7 x 52 mm	x8
K.		Hinge	x6
L.		Screw Ø7 x 13 mm	x12
M.		Flap hinge (L)	x3
M.		Flap hinge (R)	x3
N.		Screw Ø6 x 12 mm	x24
O.		Cable's hole back	x2
P.		Cable's hole top	x1
Q.		Nut M6 x 12mm	x8
R.		Bolt M6 x 15mm	x8
S.		Allen key	x1
T.		Wall Mounting Bracket (TV stand)	x4
U.		Wall Mounting Bracket (Wall side)	x1

What you need:



Phillips Head Screwdriver

You may also need:

+ Level

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

COMPONENTS

3	Right side panel	x1
4	Left side panel	x1
5	Right divider panel	x1
6	Left divider panel	x1
8	Right back panel	x1
9	Left back panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x4
E	Dowel Ø7.8 x 32 mm	x16
F	Dowel Ø6 x 30 mm	x10

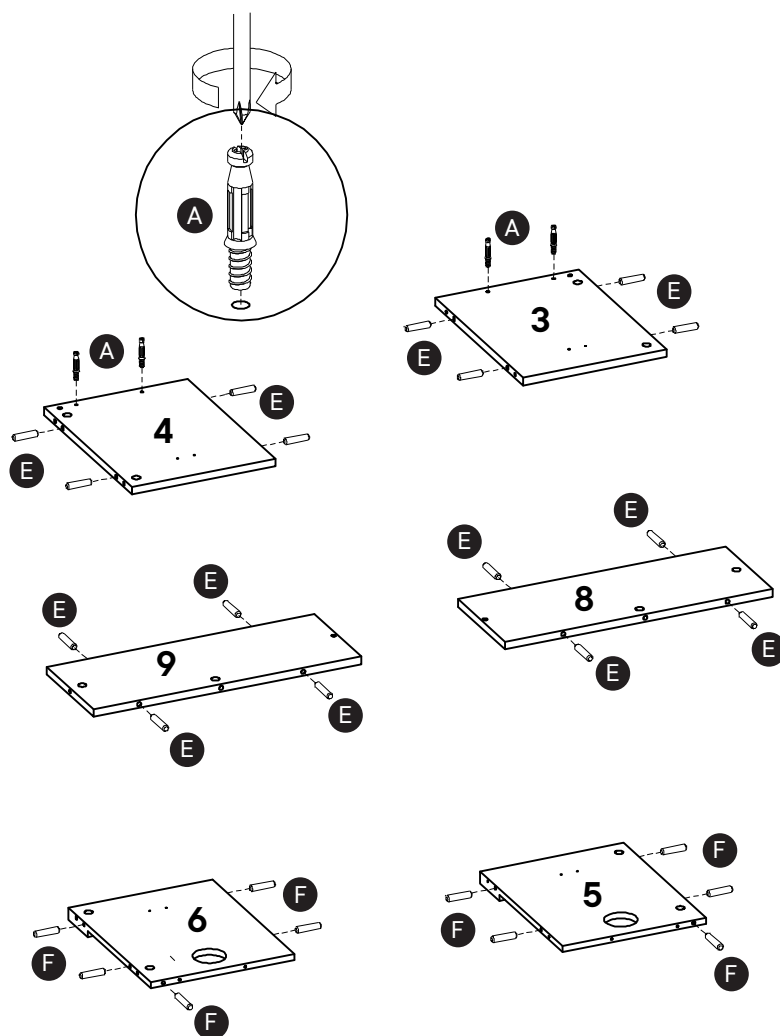 


Step 2

COMPONENTS

1	Top Panel	x1
7	Support bar	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x11
E	Dowel Ø7.8 x 32 mm	x6
G	Connecting Bolt	x2
H	Barrel Nut	x2

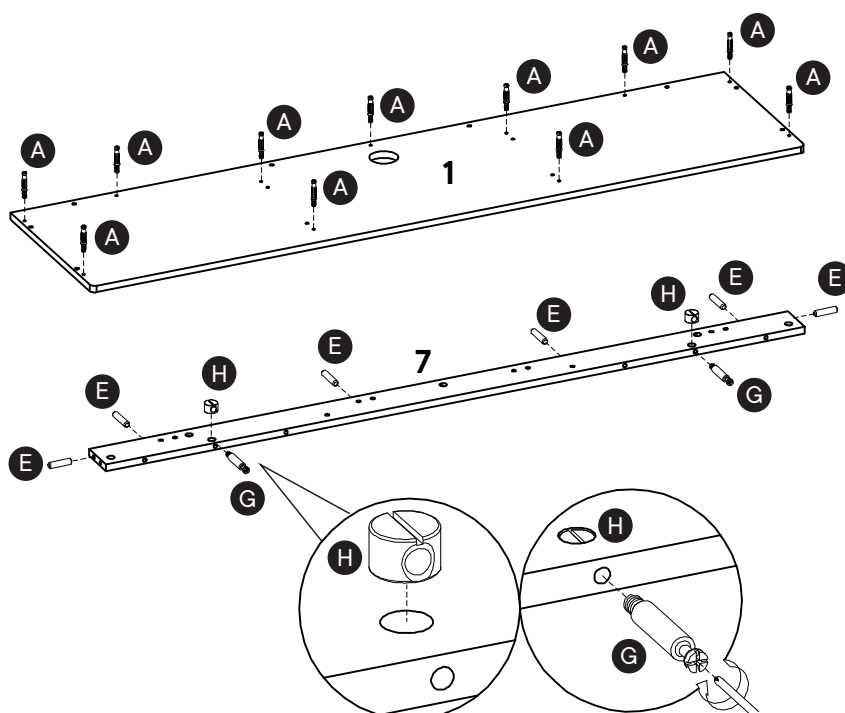 


Step 3

COMPONENTS

7	Support bar	x1
8	Right back panel	x1
9	Left back panel	x1

HARDWARE

B	Camlock Ø15 mm	x2
----------	----------------	----

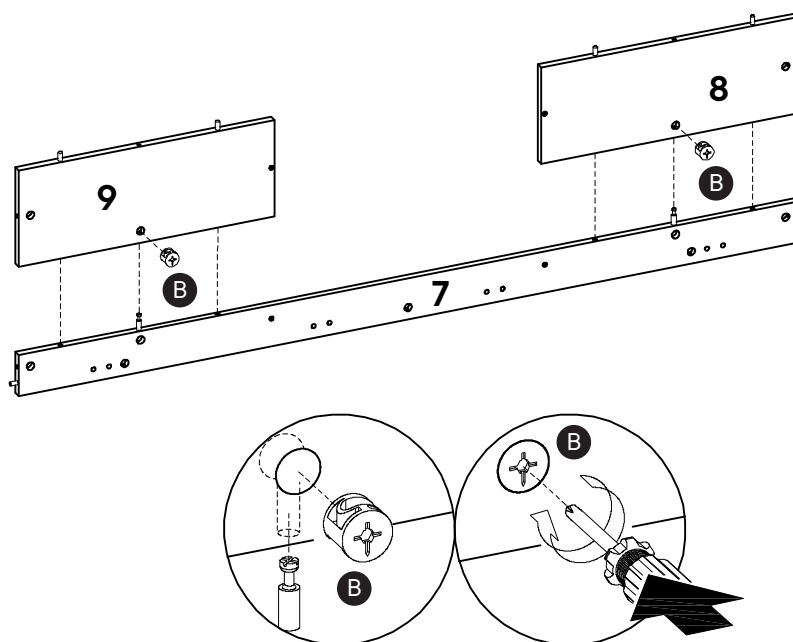 


Step 4

COMPONENTS

3	Right side panel	x1
4	Left side panel	x1
5	Right divider panel	x1
6	Left divider panel	x1

HARDWARE

B	Camlock Ø15 mm	x4
J	Screw Ø7 x 52 mm	x4

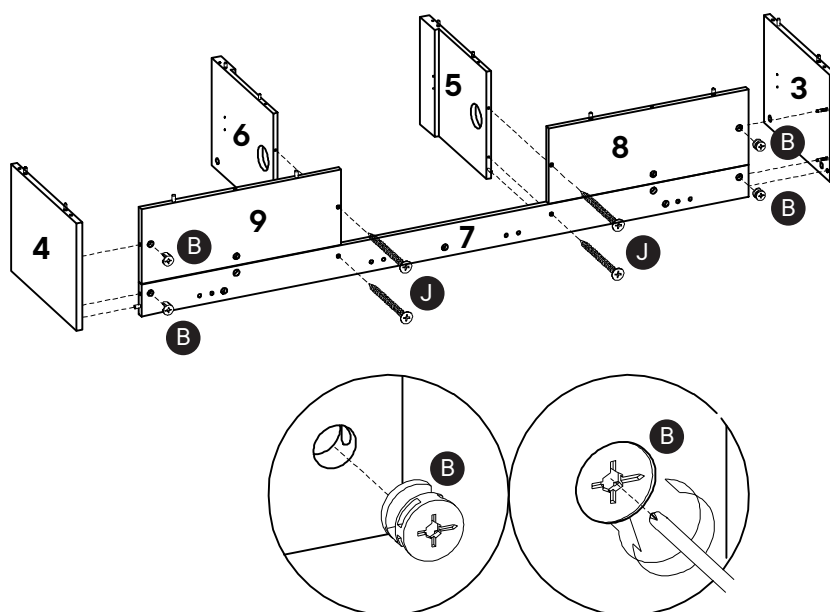 

Step 5

 
COMPONENTS

2 Bottom panel x1

HARDWARE

I Assembly screw x6

J Screw Ø7 x 52 mm x4

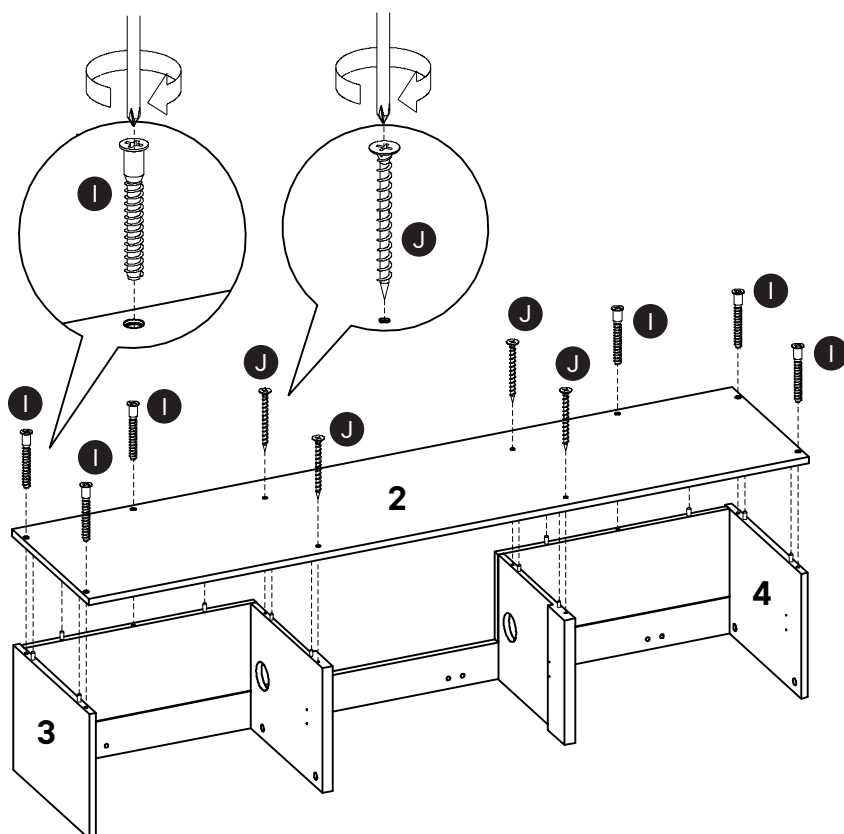

Step 6

 
 
HARDWARE

Q Nut M6 x 12mm x8

R Bolt M6 x 15mm x8

S Allen key x1

T Wall Mounting bracket (TV stand) x4

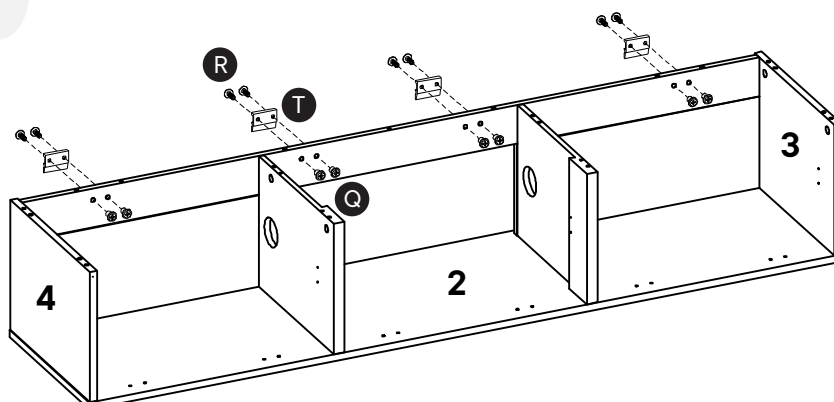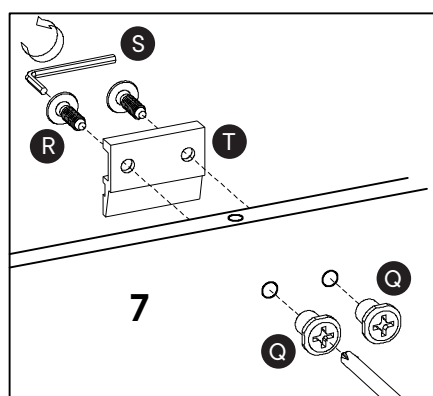

Step 7

COMPONENTS

 
① Horizontal panel x1

HARDWARE

Ⓑ Camlock Ø15 x 12 mm x7

Ⓒ Camlock Ø15 x 10 mm x4

Ⓓ Sticker x8

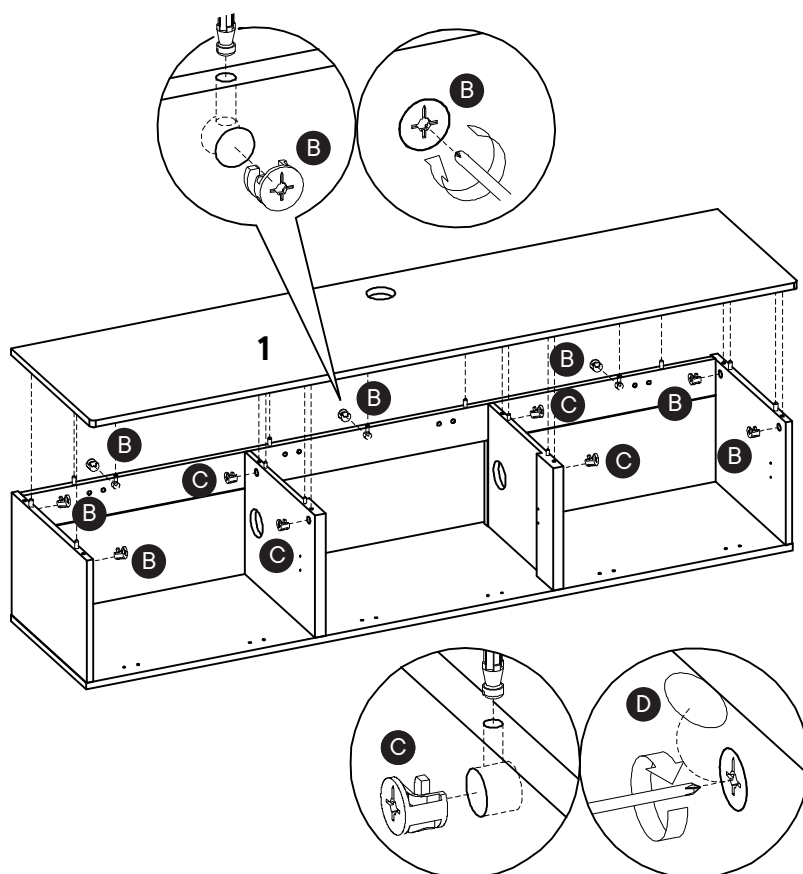


Step 8

HARDWARE

Ⓜ Flap hinge (L) x3

Ⓜ Flap hinge (R) x3

 Ⓝ Screw Ø6 x 12 mm x12

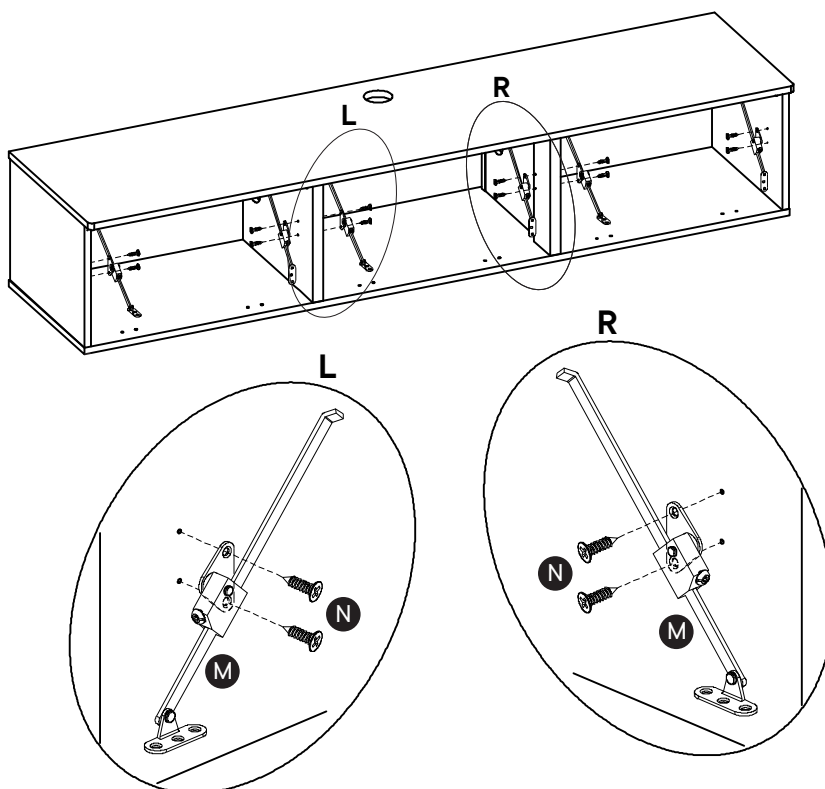



Step 9

COMPONENTS

10	Right door	x1
11	Left door	x1
12	Middle door	x1

HARDWARE


K	Hinge	x7
L	Screw $\varnothing 7 \times 14$ mm	x4

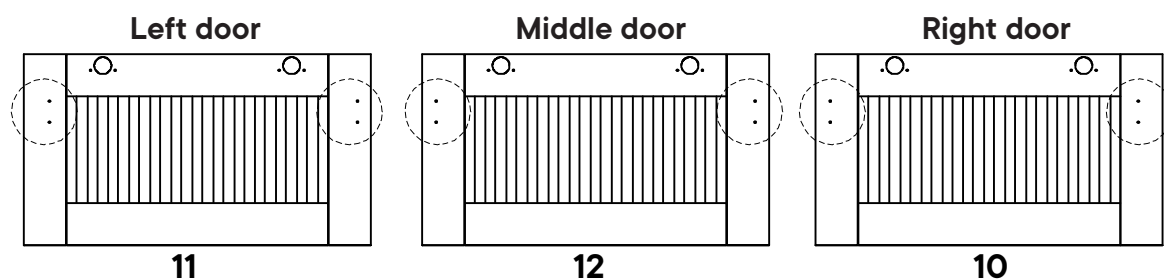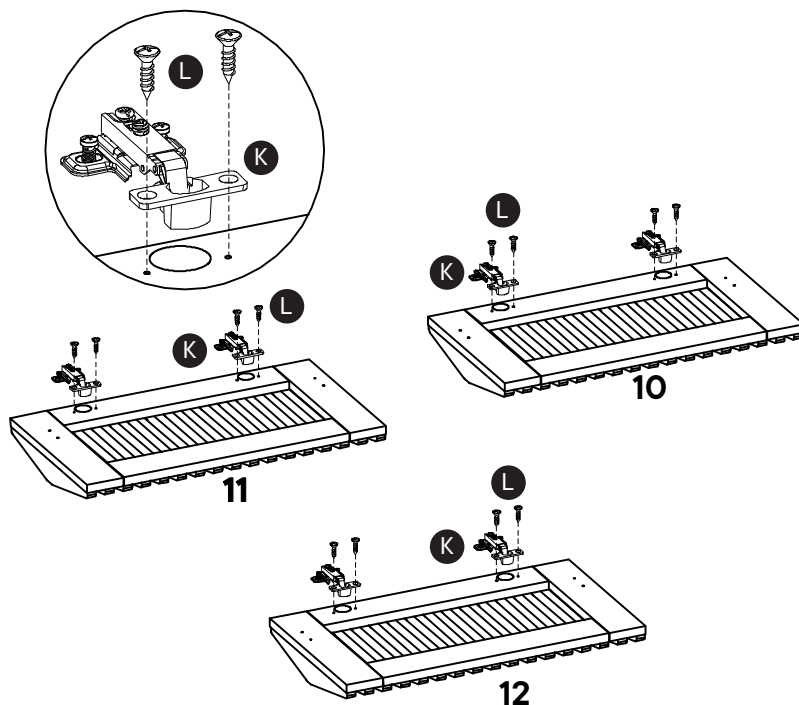  




Step 10

COMPONENTS

10	Right door	x1
11	Left door	x1
12	Middle door	x1


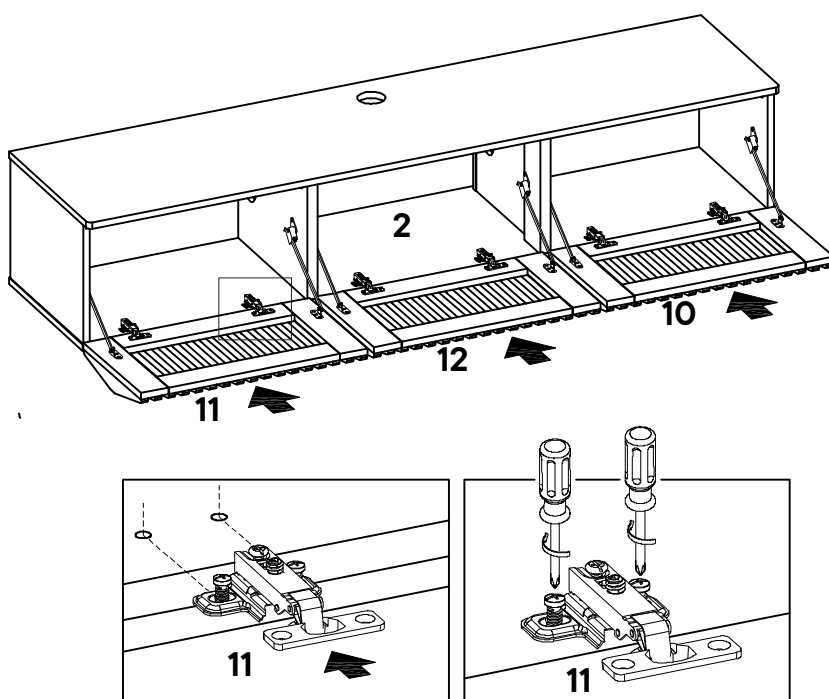 


TV Stand Door Alignment

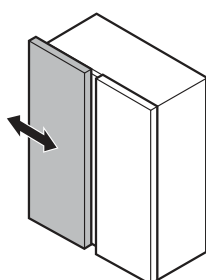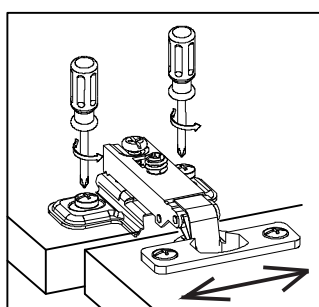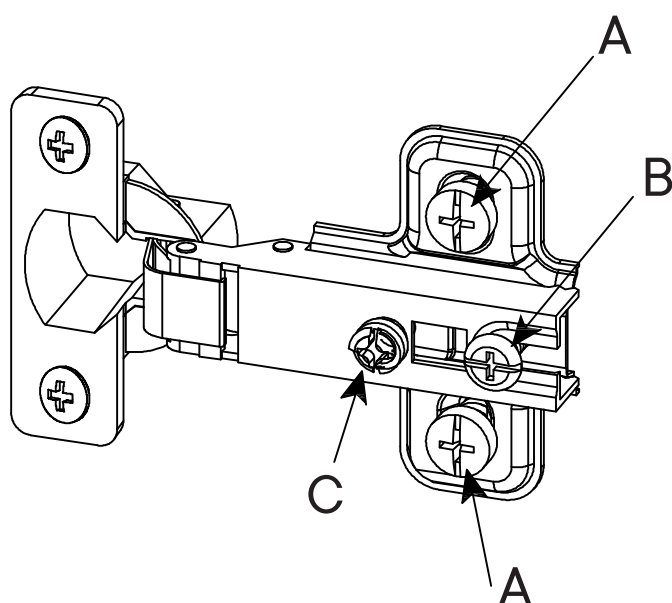   



To adjust the vertical height.

  Loosen the two screws A on both hinges. Two of them are usually in slotted holes which allows you to adjust left or right by few mm. Then tighten back up.

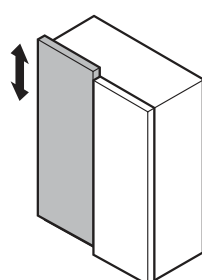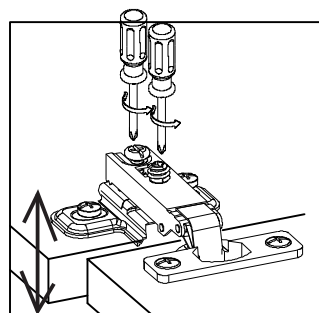

To adjust depth.

  Loosen screw C and adjust door, if the door can not be adjusted, please loosen screw B, then try again. Tighten screw B and C.

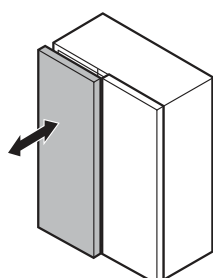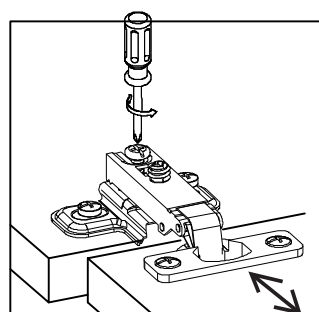


To adjust side ways.

Turn screw B on BOTH hinges on each door.

Step 11

HARDWARE

N	Screw Ø6 x 12 mm	x12
O	Cable's hole	x2
P	Cable's hole top	x1

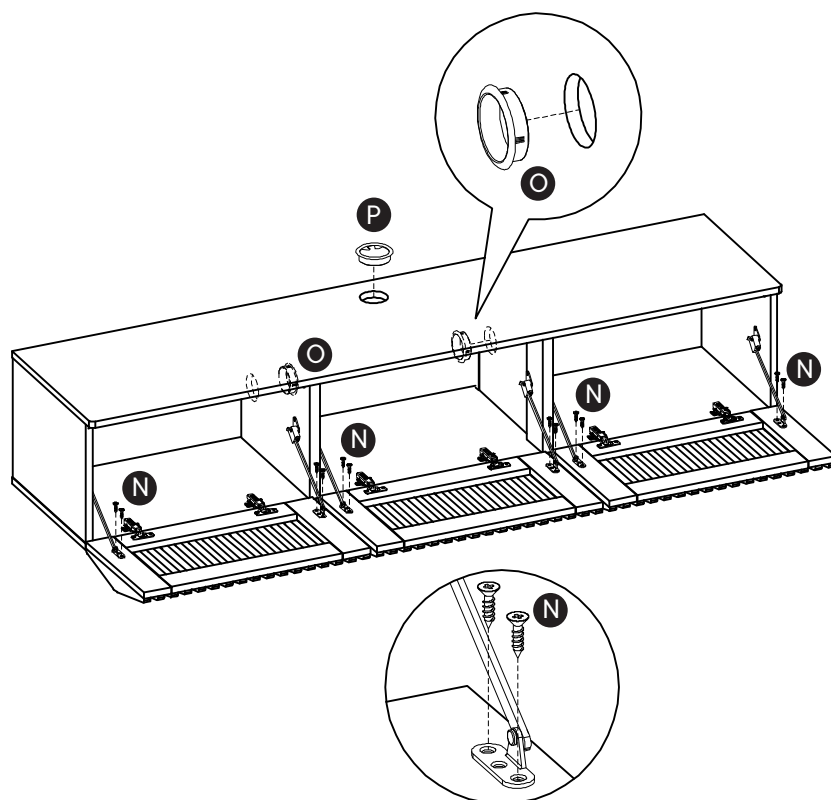 

Step 12



HARDWARE

U	Wall mounting bracket (wall)	x1
----------	------------------------------	----


We strongly recommend that this product is permanently fixed to the wall or other suitable surface.

Seek advice from a qualified trade person on how to attach this wall strap to your specific wall.

  Screw and wall plug are not included.
Please use appropriate fixtures for your wall.
With assistance, move the product to the final position.
Attach the wall straps to the wall with the appropriate fixtures.
Make sure they are firmly attached and secure.

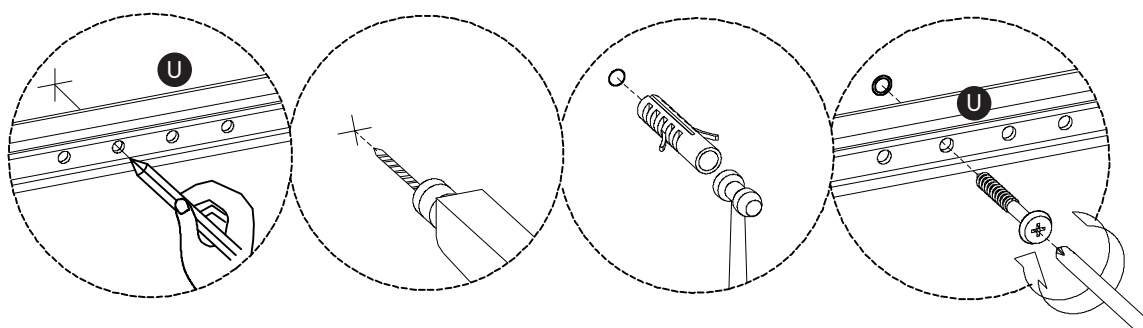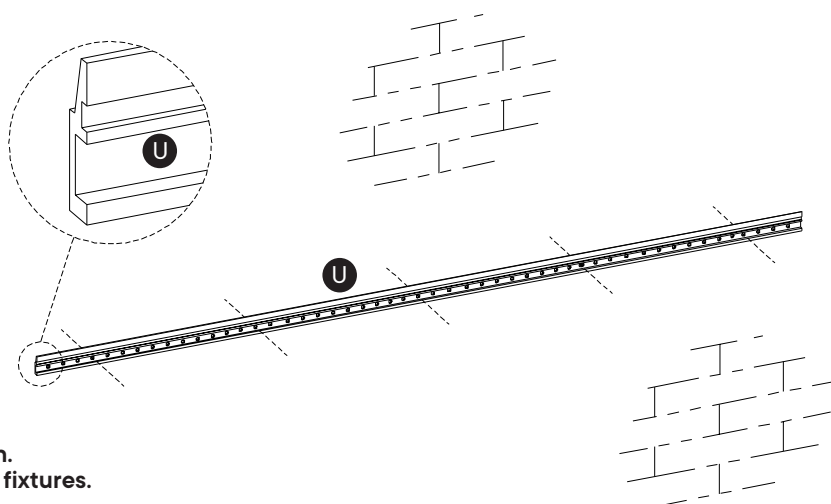

 Step 13

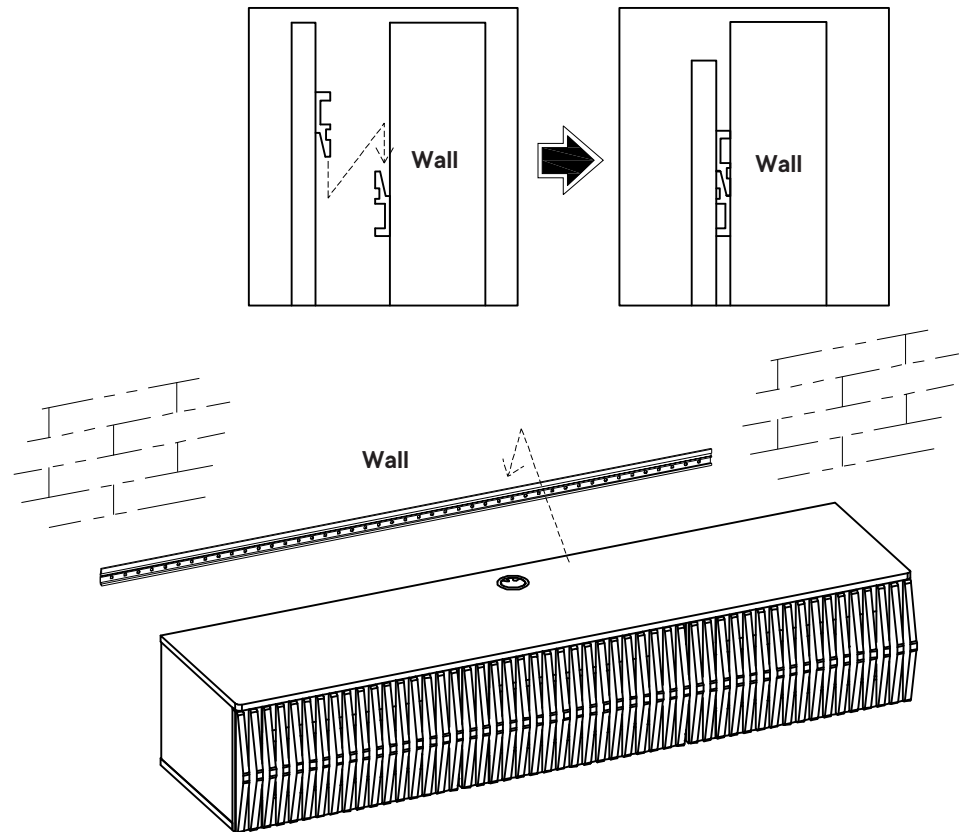

Great job!

Your TV Stand is complete.

 


CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

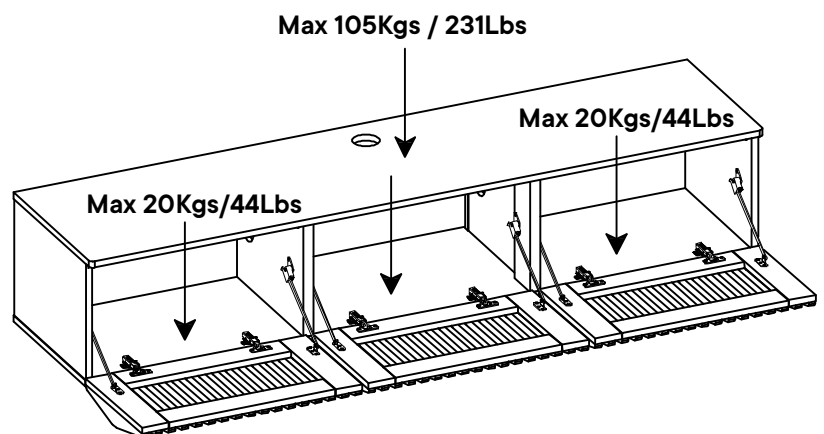

CONNECT WITH US!   

Tag us @modway_furniture and #modway for a chance to be featured.