


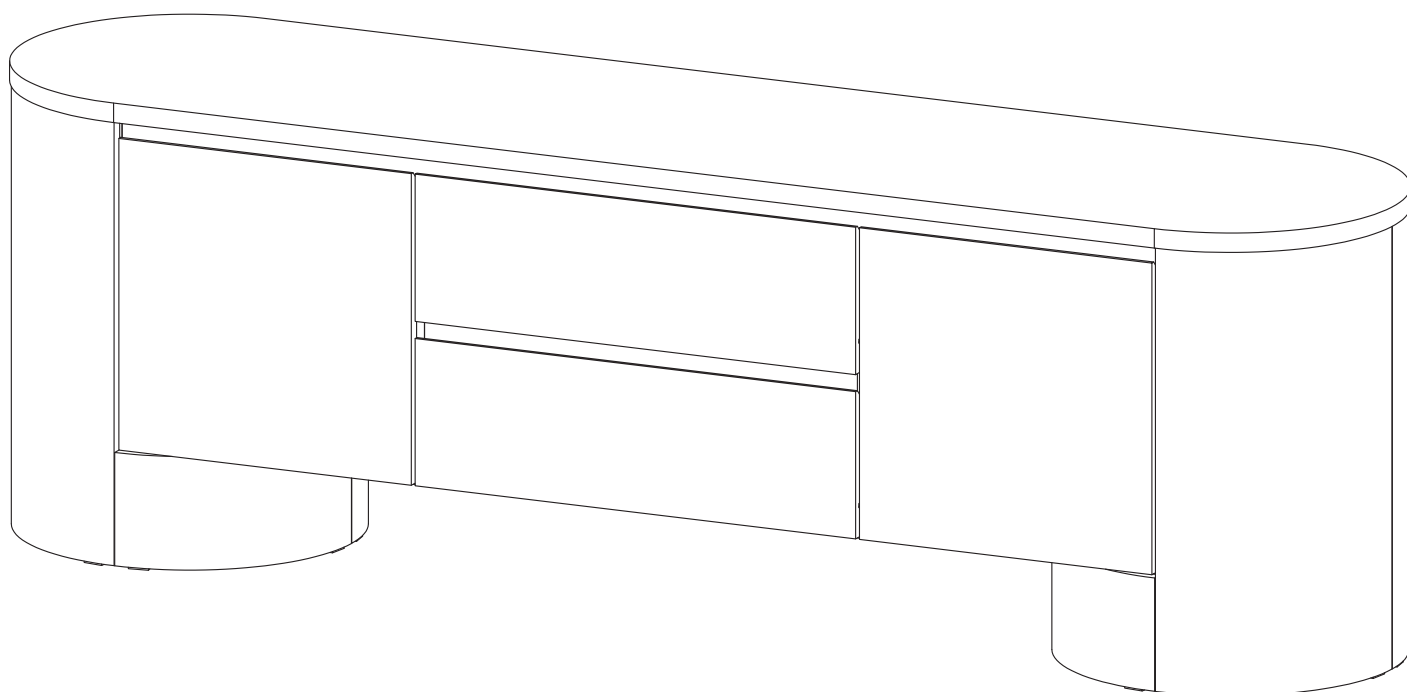

ASSEMBLY INSTRUCTIONS

Tv Stand

EEI-7440 / V0.04.22.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 120 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

 
 
 
 
Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x34
B		Cam Lock Ø15 mm	x20
C		Cam Lock Ø12 mm	x14
D		Wood Dowel Ø8 x 30 mm	x24
E		Wood Dowel Ø6 x 30 mm	x10
F		Screw M 7 x 50 mm	x17
G		Allen Key	x2
H		Screw M 4.5 x 12.5 mm	x71
I		Screw M 4 x 39 mm	x8
J		Screw M 3.5 x 13 mm	x12
K		Screw M 6 x 10.5 mm	x8
L		Shelf Pin	x8
M		Plat Hook	x10
N		Screw M 3.5 x 15.5 mm	x8
O		Wedge	x8
P		Bracket	x8
Q		Floor Protector	x16
R		Cable Hole Cover	x3
RM35A		Drawer Runner	x2
HS26C		Hinge	x4

WHAT YOU NEED:




Phillips



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

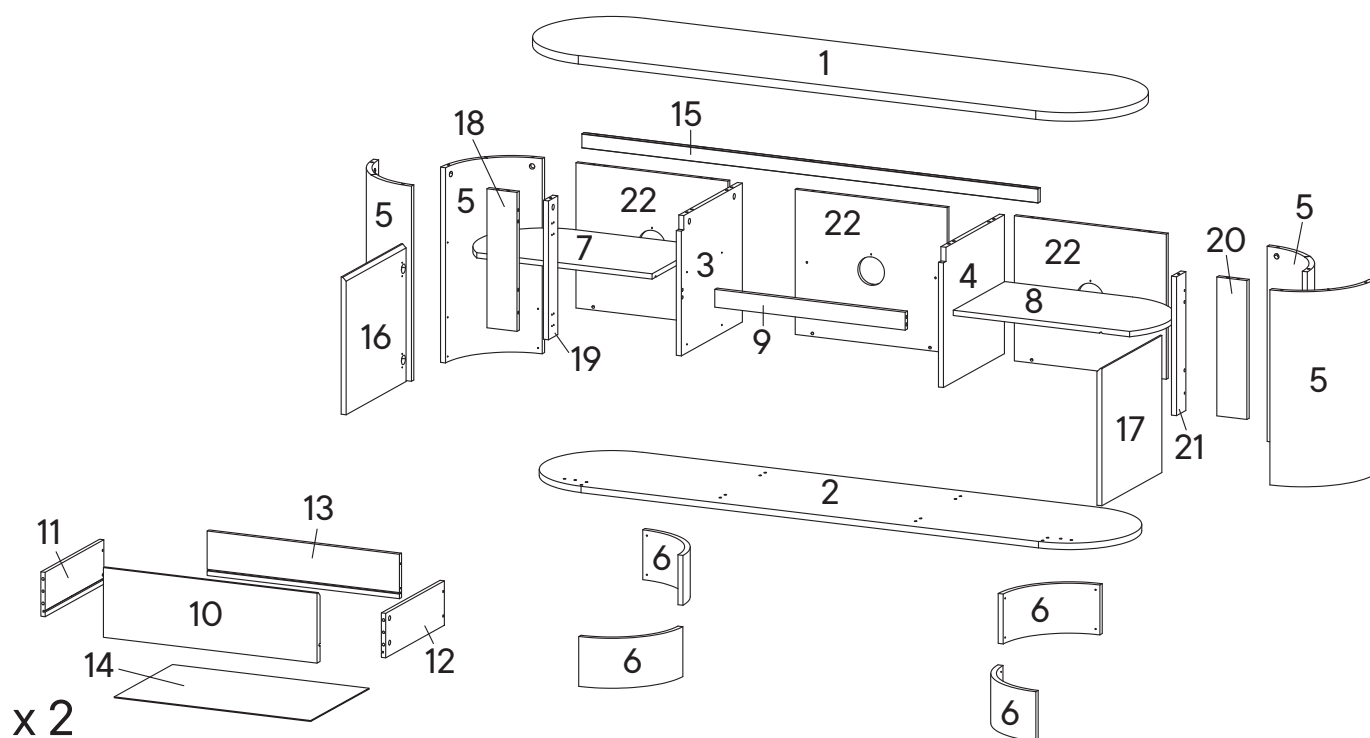

1	Top Board	x1	9	Front Skirt 1	x1	17	Wooden Door 2	x1
2	Bottom Board	x1	10	Front Drawer	x2	18	Support Board 1	x1
3	Center Board Left	x1	11	Side Drawer Left	x2	19	Support Board 2	x1
4	Center Board Right	x1	12	Side Drawer Right	x2	20	Support Board 3	x1
5	Side Board	x4	13	Back Drawer	x2	21	Support Board 4	x1
6	Bottom Skirt	x4	14	Bottom Drawer	x2	22	Back Board	x3
7	Adjustable Shelf 1	x1	15	Front Skirt 2	x1			
8	Adjustable Shelf 2	x1	16	Wooden Door 1	x1			

Carton 1 Of 2

Label	Description	Qty
3	Center Board Left	x1
4	Center Board Right	x1
5	Side Board	x4
6	Bottom Skirt	x4
10	Front Drawer	x2
11	Side Drawer Left	x2
12	Side Drawer Right	x2
13	Back Drawer	x2
14	Bottom Drawer	x2
18	Support Board 1	x1
19	Support Board 2	x1
20	Support Board 3	x1
21	Support Board 4	x1
22	Back Board	x3
	Hardware Pack	x1

Carton 2 Of 2

Label	Description	Qty
1	Top Board	x1
2	Bottom Board	x1
9	Front Skirt 1	x1
15	Front Skirt 2	x1
7	Adjustable Shelf 1	x1
8	Adjustable Shelf 2	x1
16	Wooden Door 1	x1
17	Wooden Door 2	x1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
E Wood Dowel Ø6 x 30 mm x4




COMPONENTS

- 10** Front Drawer x2
11 Side Drawer Left x2
12 Side Drawer Right x2

1.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Front Drawer (10), then tighten using screwdriver.

1.2 Insert Wood Dowel Ø6 x 30 mm (E) into the Side Drawer Left (11).

1.3 Insert Wood Dowel Ø6 x 30 mm (E) into the Side Drawer Right (12).

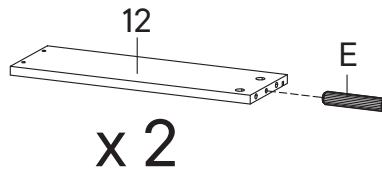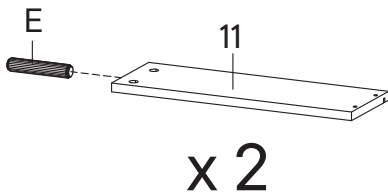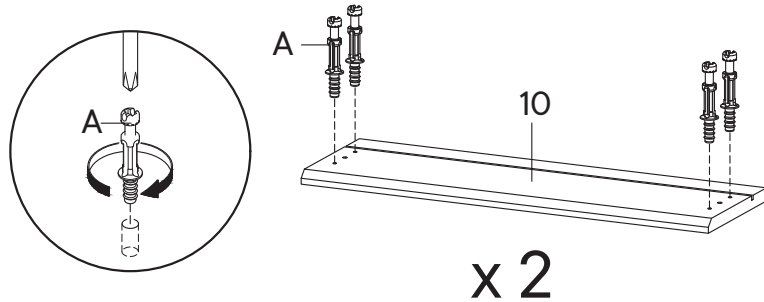

STEP 02

HARDWARE


- C** Cam Lock Ø12 mm x8
I Screw M 4 x 39 mm x8

COMPONENTS

- 10** Front Drawer x2
11 Side Drawer Left x2
12 Side Drawer Right x2
13 Back Drawer x2
14 Bottom Drawer x2

2.1 Insert Side Drawers (11&12) into Front Drawer (10) then tighten Cam Lock Ø12 mm (C) using screwdriver.

2.2 Insert Bottom Drawer (14), into Front Drawer with laminated face facing upward. Insert Back Drawer (13) secure with Screw M 4 x 39 mm (I) tighten using screwdriver, as shown in the picture.

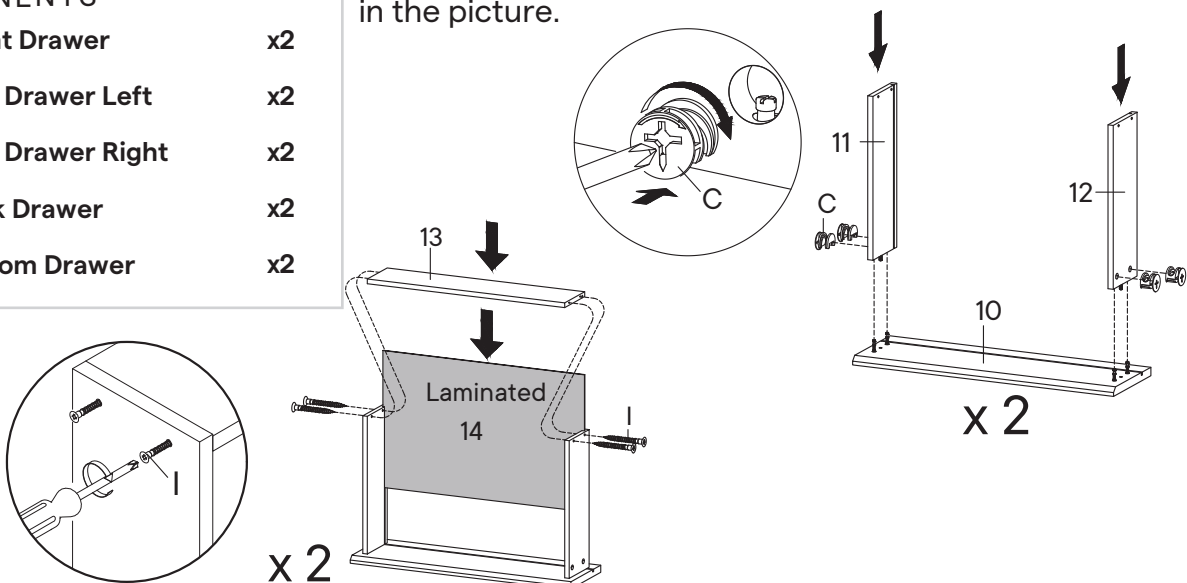


HARDWARE

J	Screw M 3.5 x 13 mm	x12
N	Screw M 3.5 x 15.5 mm	x8
O	Wedge	x8
RM35A	Drawer Runner	x2

3.1 Install the Drawer Runner (RM35A) into position as shown in picture. Secure with screws M 3.5 x 13 mm (J), then tighten using screwdriver.

3.2 Insert the Wedge (O) into the Bottom of the drawer and insert the Screw M 3.5 x 15.5 mm (N), then tighten using screwdriver.

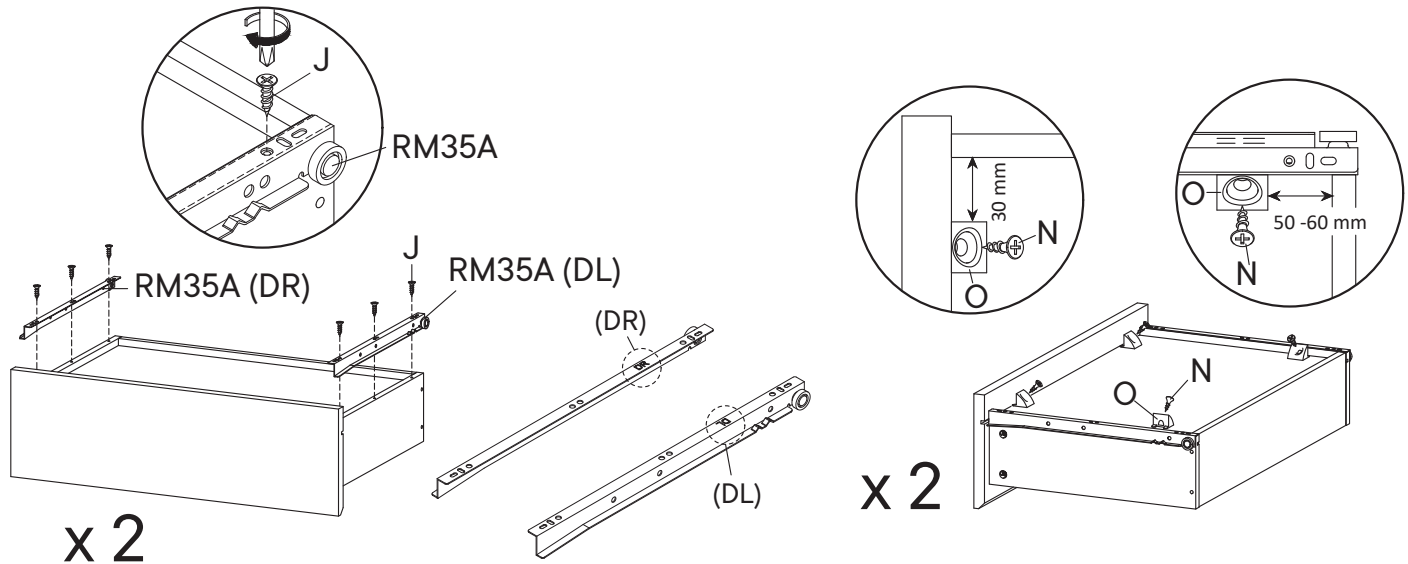

STEP 04

HARDWARE


D	Wood Dowel Ø8 x 30 mm	x2
F	Screw M 7 x 50 mm	x3
G	Allen Key	x1

COMPONENTS

1	Top Board	x1
15	Front Skirt 2	x1

4.1 Insert Wood Dowel Ø8 x 30 mm (D) into the Front Skirt 2 (15).

4.2 Insert Front Skirt 2 (15) into Top Board (1) and secure with Screw M 7 x 50 mm (F), tighten screws using Allen Key (G).

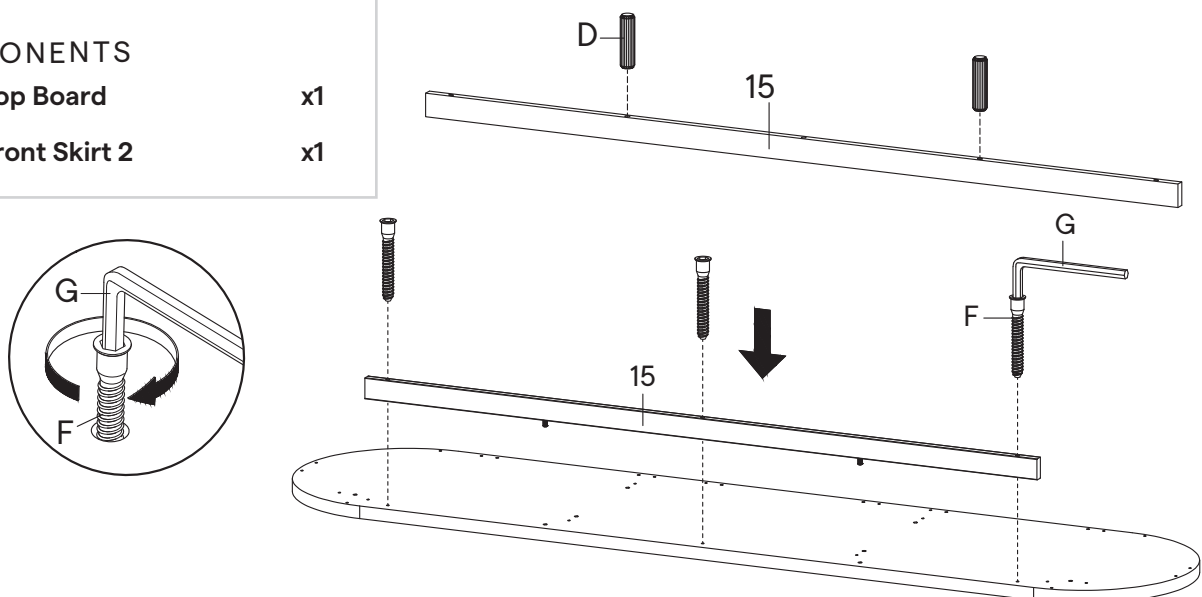


HARDWARE

A Cam Bolt Ø6 x 35 mm x22

COMPONENTS

1 Top Board x1

5.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Top Board (1), then tighten using screwdriver.

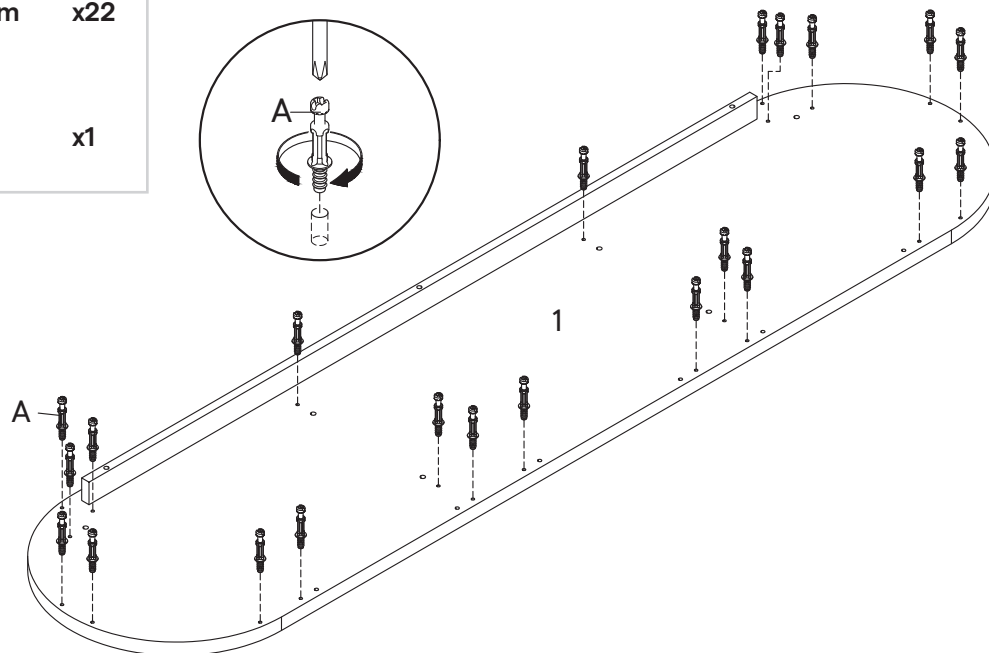

STEP 06

HARDWARE

A Cam Bolt Ø6 x 35 mm x4

D Wood Dowel Ø8 x 30 mm x10

COMPONENTS

18 Support Board 1 x1

19 Support Board 2 x1

20 Support Board 3 x1




21 Support Board 4 x1

6.1 Insert Cam Bolt Ø6 x 35 mm (A) then tighten using screwdriver, and insert Wood Dowel Ø8 x 30 mm (D) into the Support Board 2 (19).

6.2 Insert Cam Bolt Ø6 x 35 mm (A) then tighten using screwdriver, and insert Wood Dowel Ø8 x 30 mm (D) into the Support Board 4 (21).

6.3 Insert Wood Dowel Ø8 x 30 mm (D) into the Support Board 1 (18).

6.4 Insert Wood Dowel Ø8 x 30 mm (D) into the Support Board 3 (20).

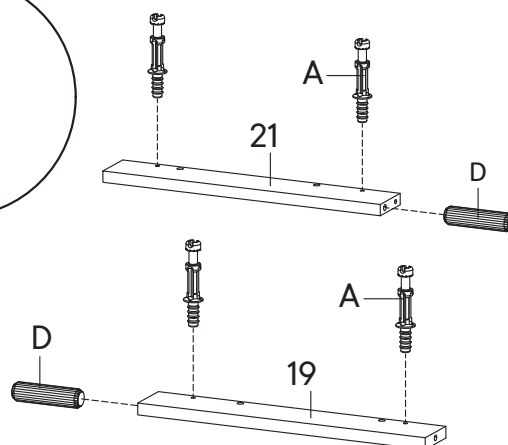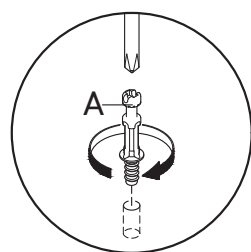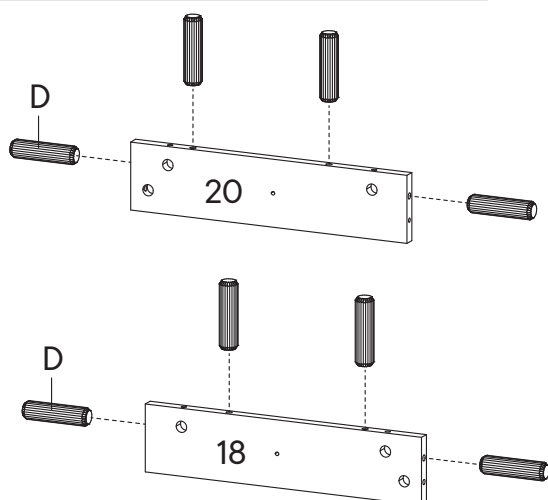

HARDWARE

(B) Cam Lock Ø15 mm x4

COMPONENTS

(18) Support Board 1 x1

(19) Support Board 2 x1



(20) Support Board 3 x1

(21) Support Board 4 x1

7.1 Combine Support Board 2 (19) with Support Board 1 (18) according to picture and Insert Cam Lock Ø15 mm (B) then tighten using screwdriver, Position as shown in the figure.

7.2 Combine Support Board 4 (21) with Support Board 3 (20) according to picture and Insert Cam Lock Ø15 mm (B) then tighten using screwdriver, Position as shown in the figure.

Pre - Assembly

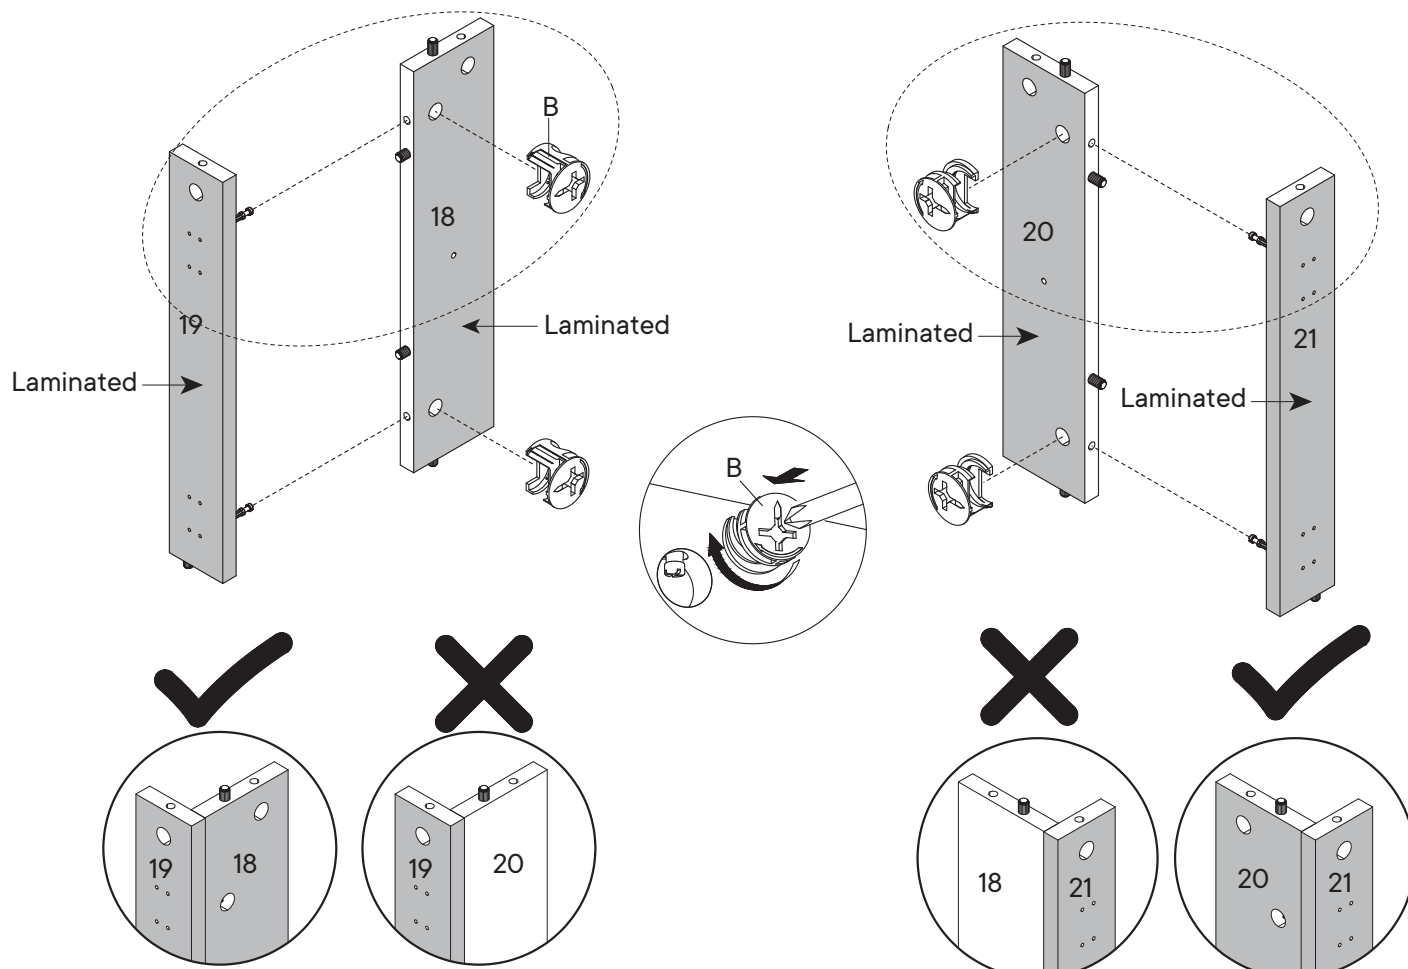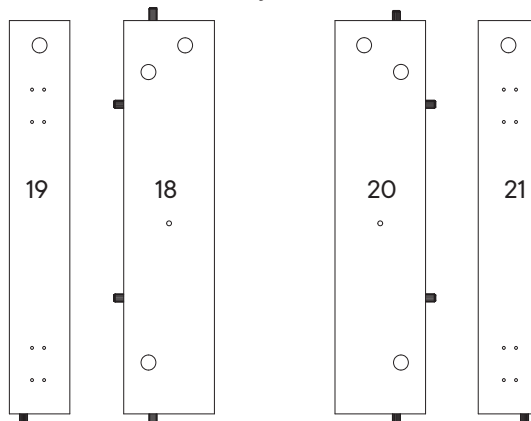

HARDWARE


D Wood Dowel Ø8 x 30 mm x8

COMPONENTS

3 Center Board Left x1

4 Center Board Right x1

8.1 Insert Wood Dowel Ø8 x 30 mm (D) into the Center Board Left (3) and Center Board Right (4) .

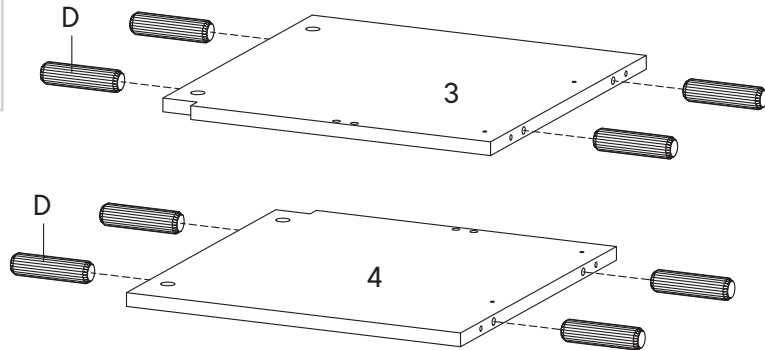

STEP 09

HARDWARE

K Screw M 6 x 10.5 mm x8

RM35A Drawer Runner x2



COMPONENTS

3 Center Board Left x1

4 Center Board Right x1

9.1 Securing part of the Drawer Runner (RM35A) (CL) into Center Board Left (3) into position as the above image, using screw M 6 x 10.5 mm (K). Then tighten using screwdriver.


9.2 Securing part of the Drawer Runner (RM35A) (CR) into Center Board Right (4) into position as the above image, using screw M 6 x 10.5 mm (K). Then tighten using screwdriver.

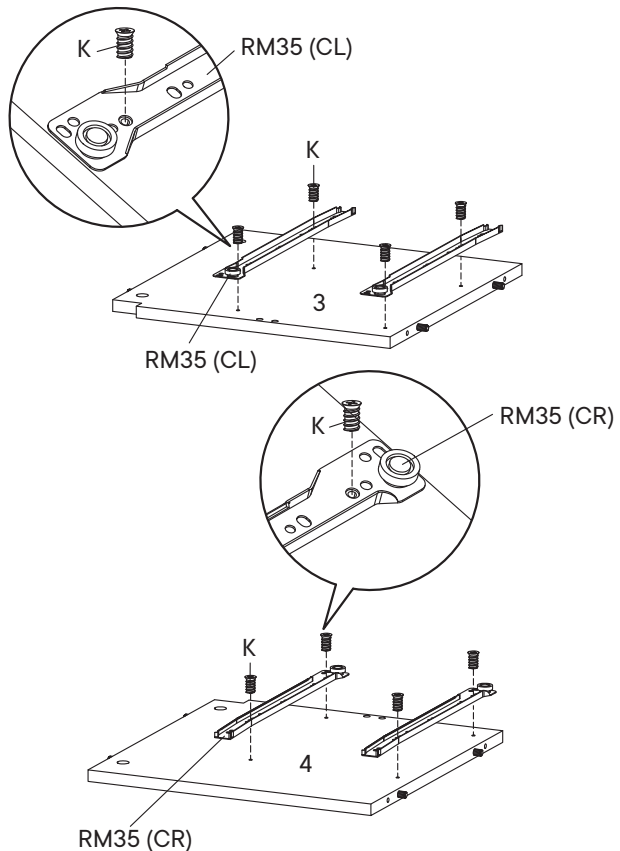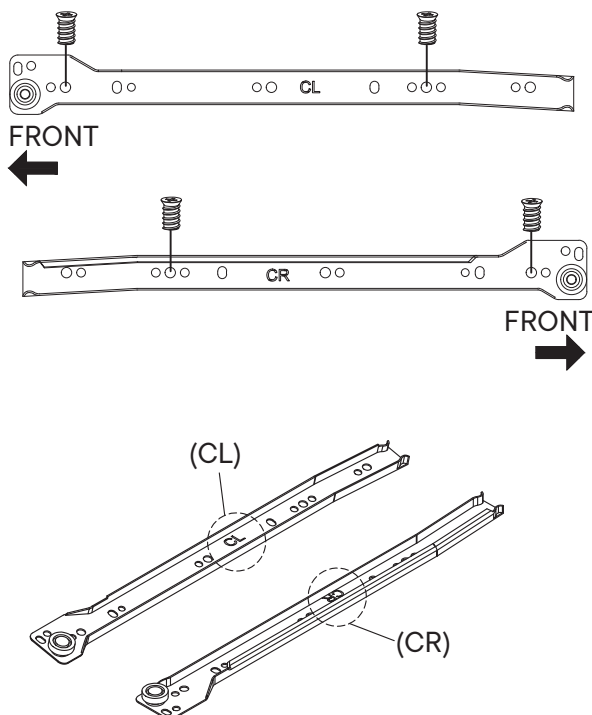

COMPONENTS

- | | | |
|---|--------------------|----|
| ③ | Center Board Left | x1 |
| ④ | Center Board Right | x1 |

10.1 Attach Center Board Left (3) and Center Board Right (4) into Top Board (1).

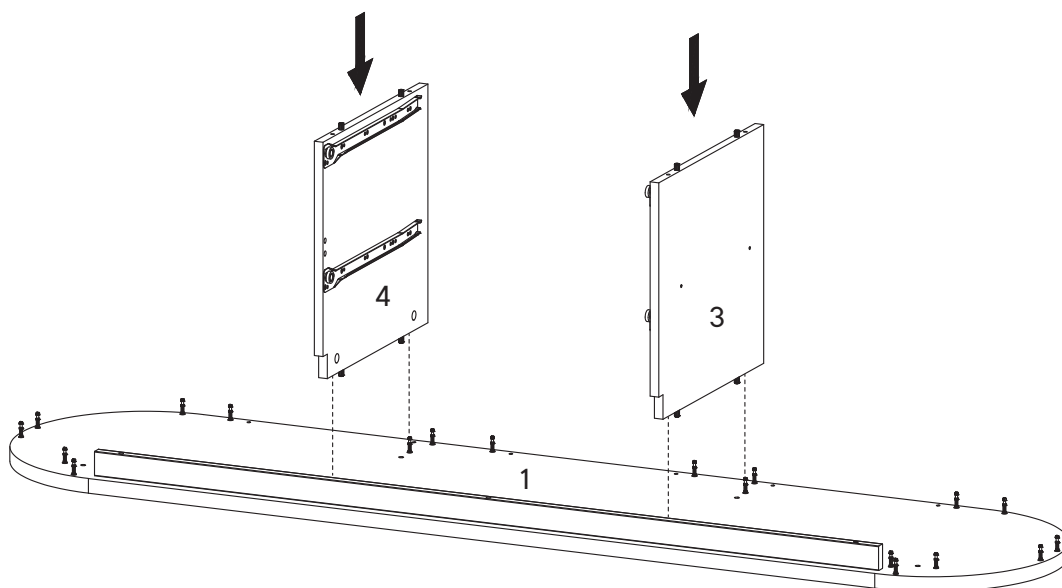

STEP 11

HARDWARE


- | | |
|---|--------------------------|
| Ⓓ | Wood Dowel Ø8 x 30 mm x4 |
| Ⓔ | Wood Dowel Ø6 x 30 mm x6 |

COMPONENTS

- | | | |
|----|---------------|----|
| ⑨ | Front Skirt 1 | x1 |
| 22 | Back Board | x3 |

11.1 Insert Wood Dowel Ø8 x 30 mm (D) into the Front Skirt 1 (9), Position as shown in the figure.


11.2 Insert Wood Dowel Ø6 x 30 mm (E) into the Back Board (22), Position as shown in the figure.

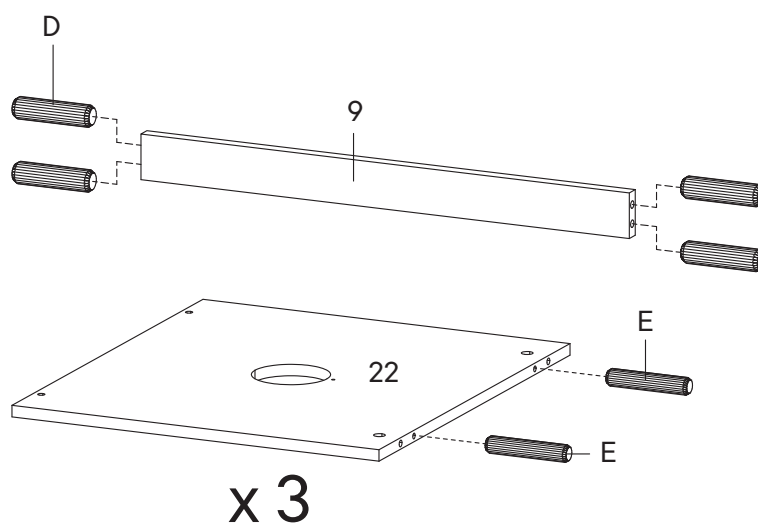

COMPONENTS

9 Front Skirt 1 x1

12.1 Attach Front Skirt 1 (9) into between Center Boards, Position as shown in the figure.

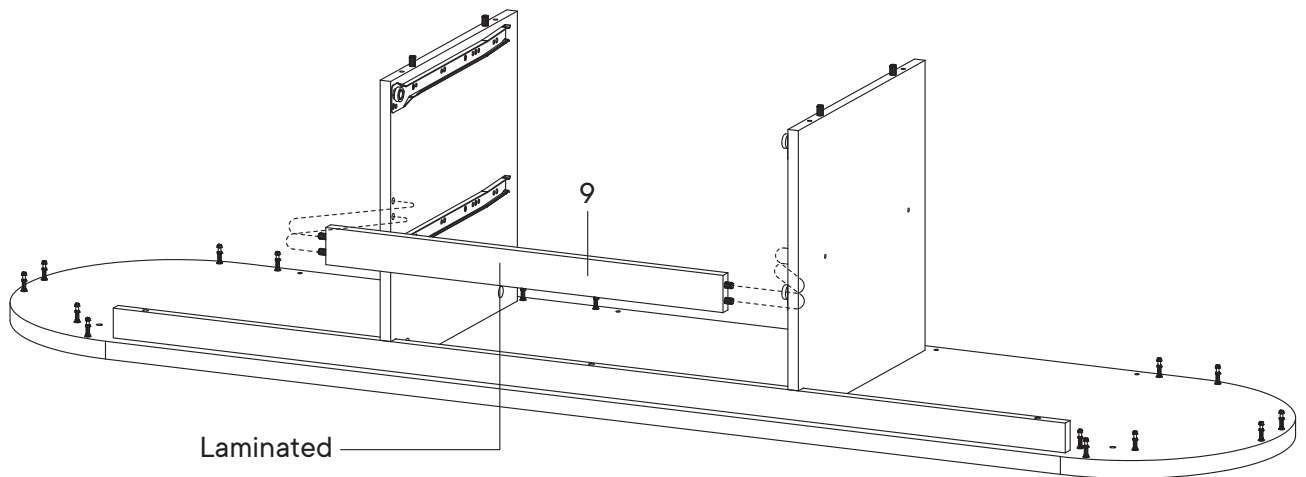


STEP 13

HARDWARE

B Cam Lock Ø15 mm x4

13.1 Insert Cam Lock Ø15 mm (B) into Center Boards then tighten using screwdriver, Position as shown in the figure.

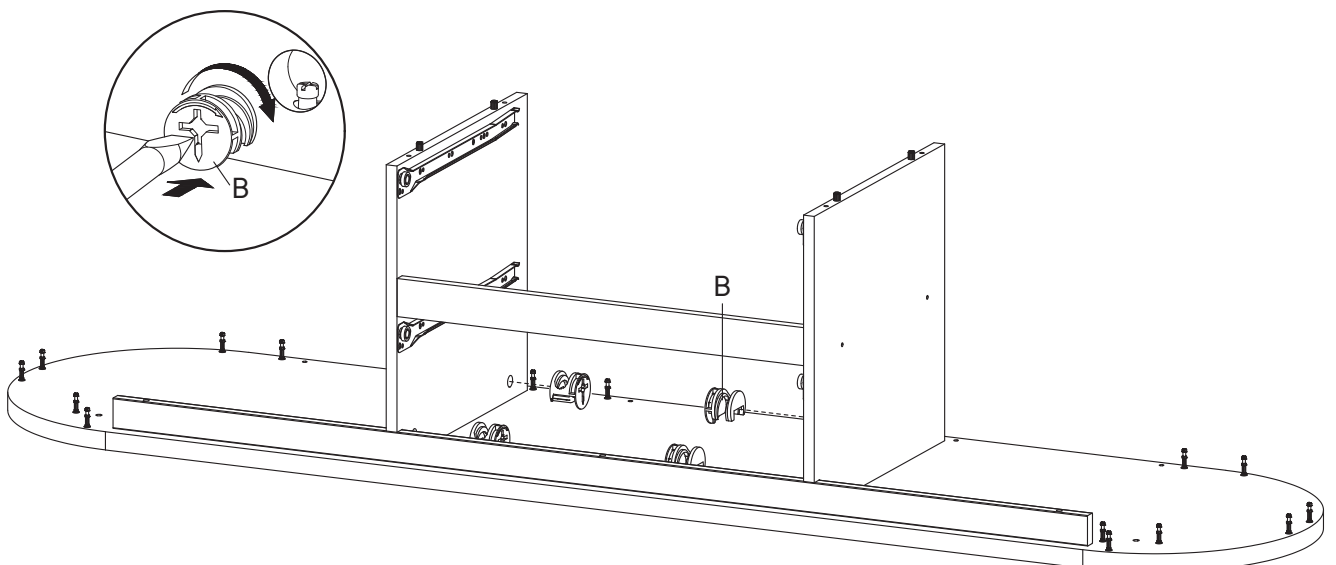


HARDWARE


B Cam Lock Ø15 mm x8

COMPONENTS

5 Side Board x4

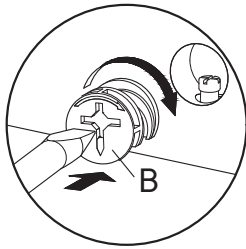

14.1 Insert Side Board (5) and secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown in the figure.

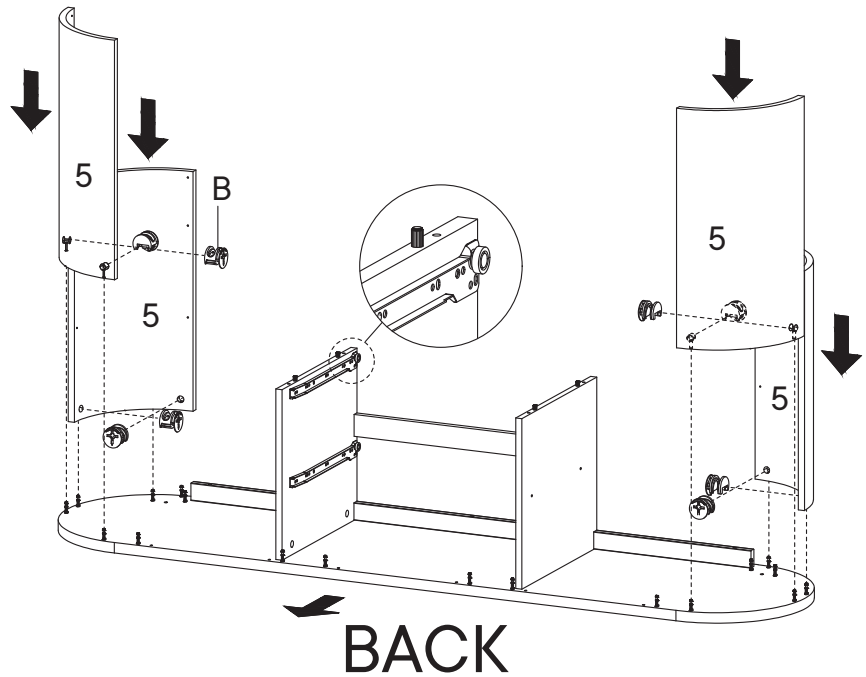

STEP 15

HARDWARE

B Cam Lock Ø15 mm x4

L Shelf Pin x2

COMPONENTS

18 Support Board 1 x1



19 Support Board 2 x1

20 Support Board 3 x1

21 Support Board 4 x1

15.1 Insert The Pre - Assembled Support Boards and secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown in the figure.

15.2 Insert Shelf Pin (L) into Pre - Assembled Support Board. Position as shown in the figure.

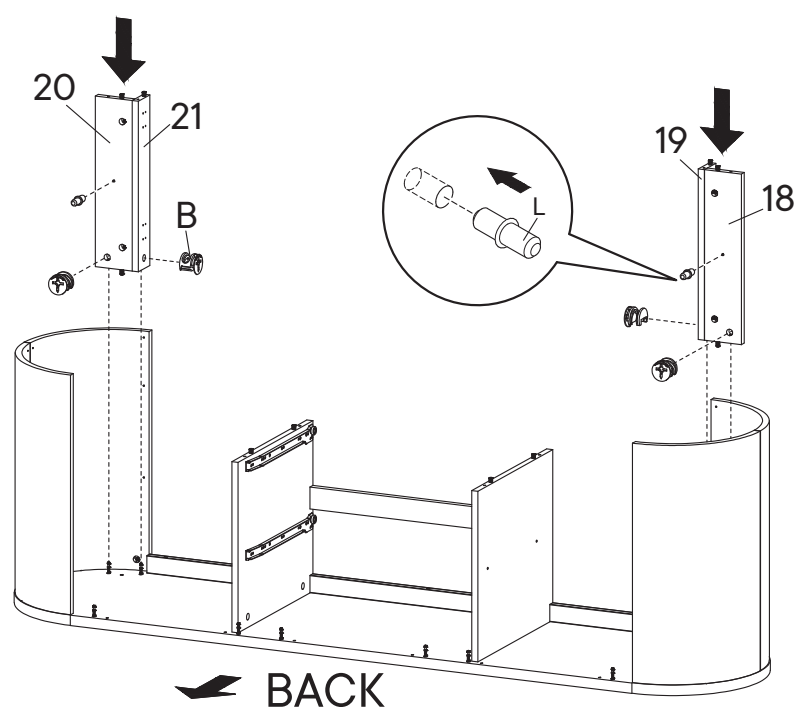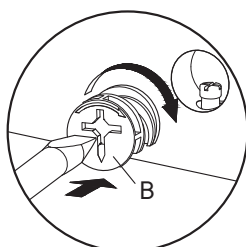


HARDWARE

- H** Screw M 4.5 x 12.5 mm x4
M Plate Hook x2

16.1 Install Screw M 4.5 x 12.5 mm (H) into Side Boards (5). Do not overtighten screw yet, leave around 2mm gap.

16.2 Attach the Plate Hook (M) to the Pre - Installed screw, then tighten the screws using screwdriver, Position as shown in the figure.

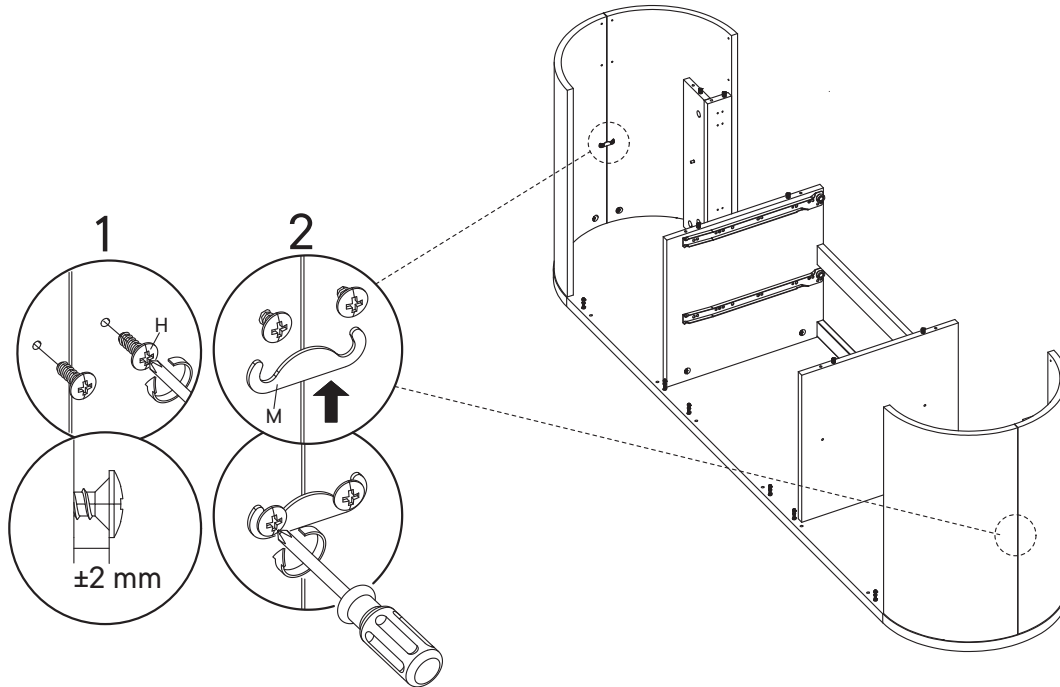

STEP 17


HARDWARE

- C** Cam Lock Ø12 mm x6

COMPONENTS

- 22** Back Board x3

17.1 Insert Back Boards (22) and secure with Cam Lock Ø12 mm (C) then tighten using screwdriver. Position as shown in the figure.

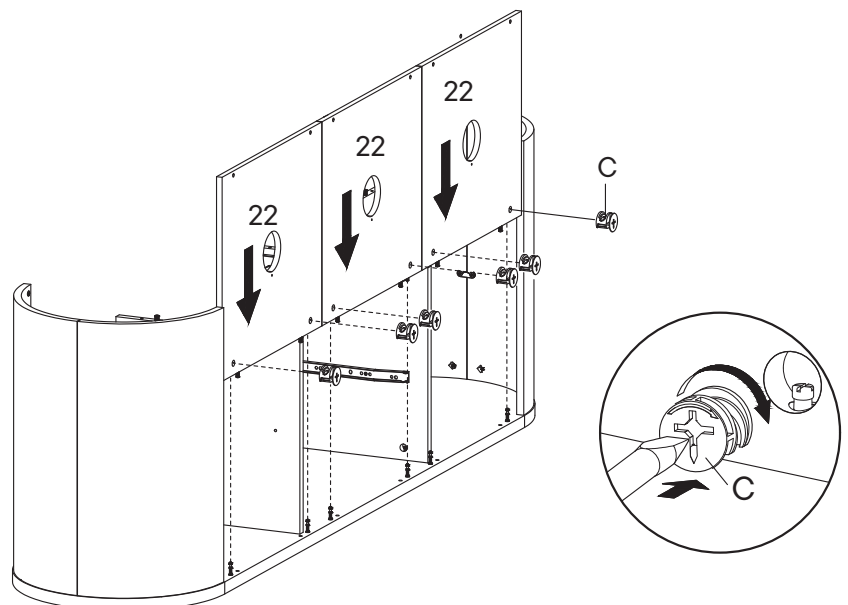



HARDWARE

- F** Screw M 7 x 50 mm x8
G Allen Key x1

COMPONENTS

- 2** Bottom Board x1

18.1 Insert Bottom Board (2) and secure with Screw M 7 x 50 mm (F), tighten screws using Allen Key (G).

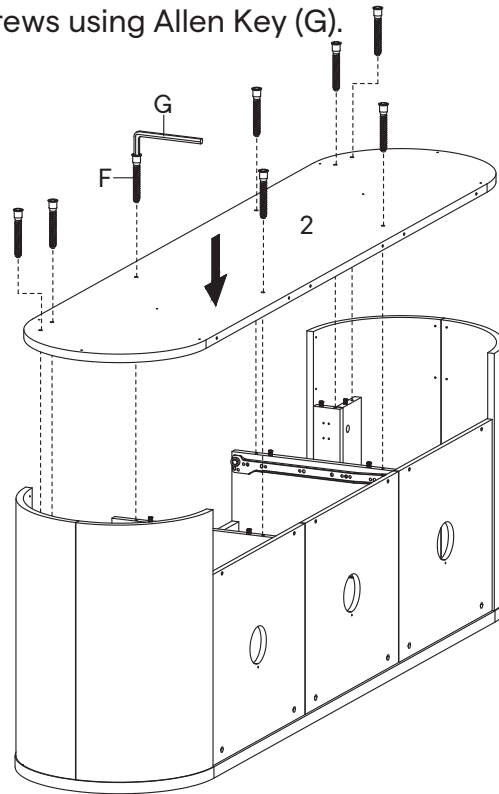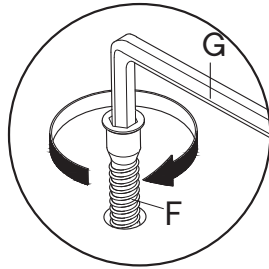



STEP 19

HARDWARE

- F** Screw M 7 x 50 mm x6
G Allen Key x1
H Screw M 4.5 x 12.5 mm x16

19.1 Install Screw M 4.5 x 12.5 mm (H) into Side Boards (5). Do not overtighten screw yet, leave around 2mm gap.

19.2 Install Screw M 7 x 50 mm (F) into Back Boards, tighten screws using Allen Key (G). Position as shown in the figure.

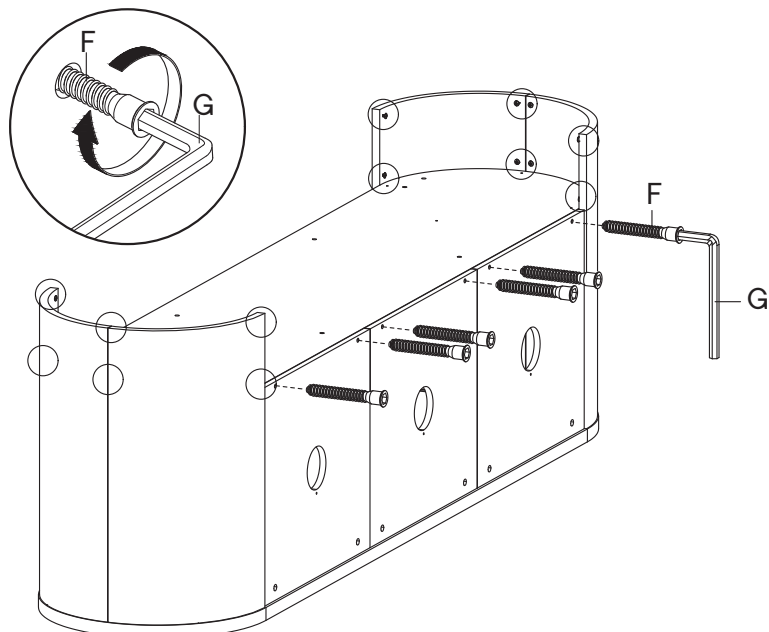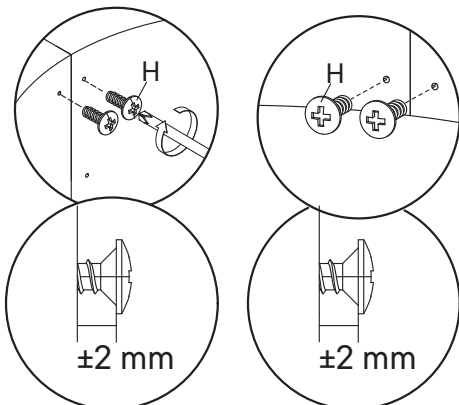


HARDWARE


H Screw M 4.5 x 12.5 mm x16

COMPONENTS

6 Bottom Skirt x4

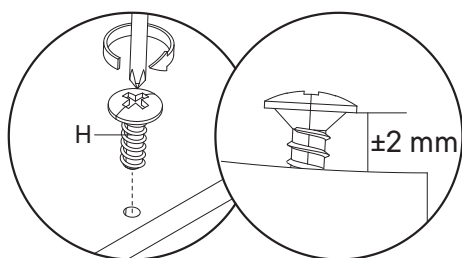

20.1 Install Screw M 4.5 x 12.5 mm (H) into Bottom Skirts (6). Do not overtighten screw yet, leave around 2mm gap.


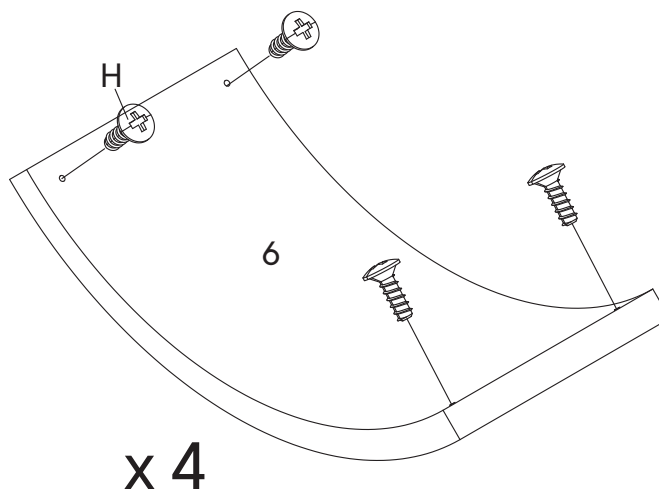


STEP 21

COMPONENTS

6 Bottom Skirt x4


21.1 Attach Bottom Skirt (6) into Bottom Board. Position as shown in the figure.

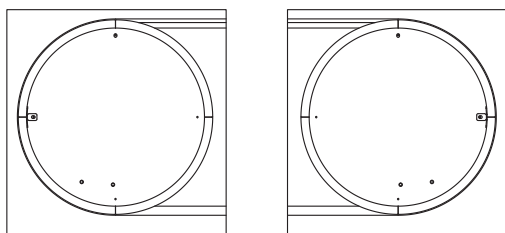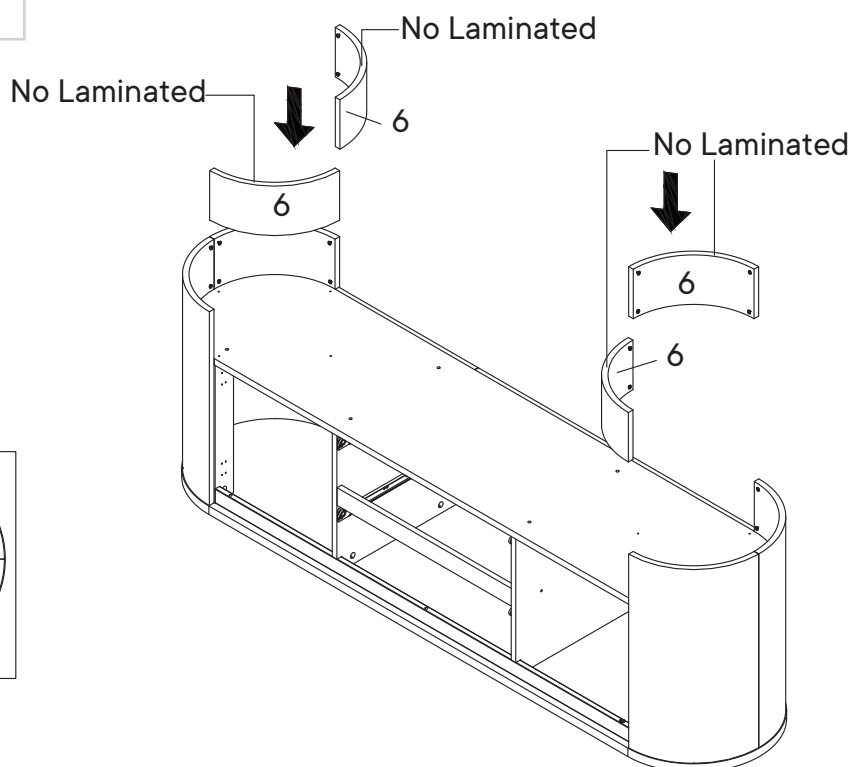

HARDWARE

- H** Screw M 4.5 x 12.5 mm x8
P Bracket x8

22.1 Install The Bracket (P) to the Pre - Installed screw on the Bottom Skirt and Side Board, then tighten using screwdriver. Secure the plate side attached to the Bottom Board with Screw M 4.5 x 12.5 mm (H) then tighten using screwdriver. Position as shown in the figure.

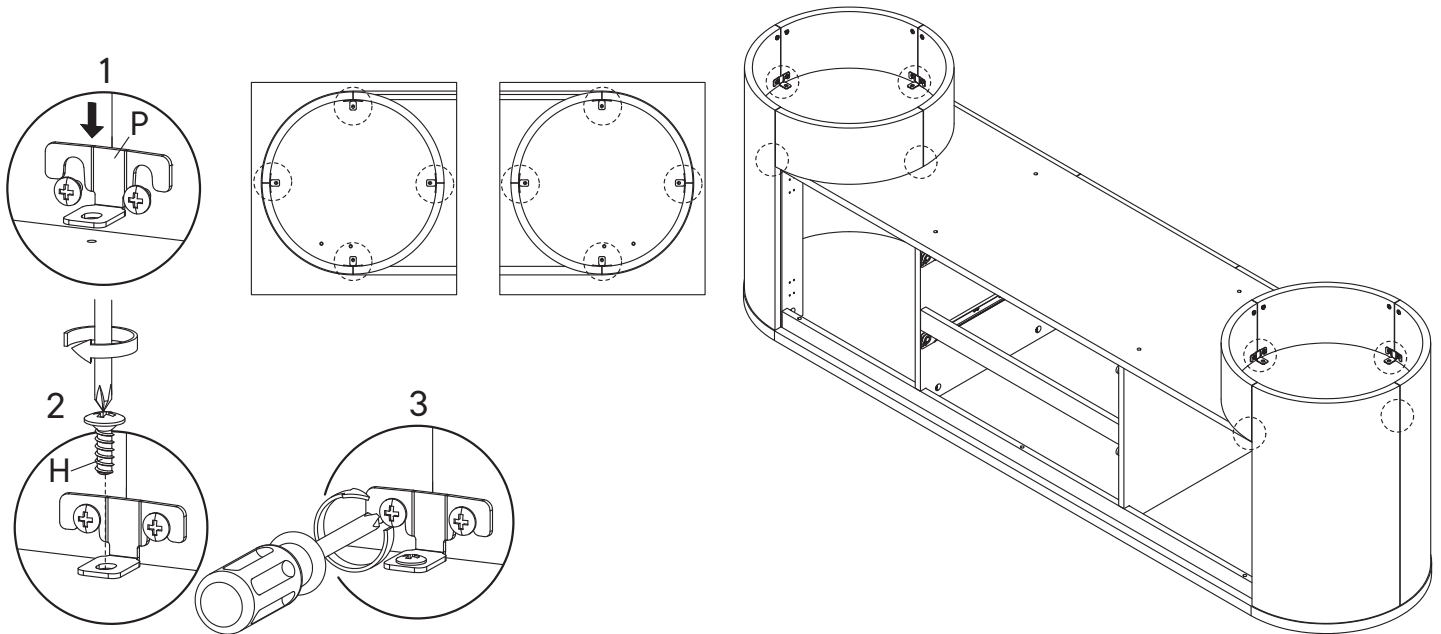


STEP 23

HARDWARE

- M** Plate Hook x8

23.1 Attach the Plate Hook (M) to the Pre - Installed screw on the Bottom Skirt and Side Board, then tighten to all screw using a screwdriver. Position as shown in the picture.



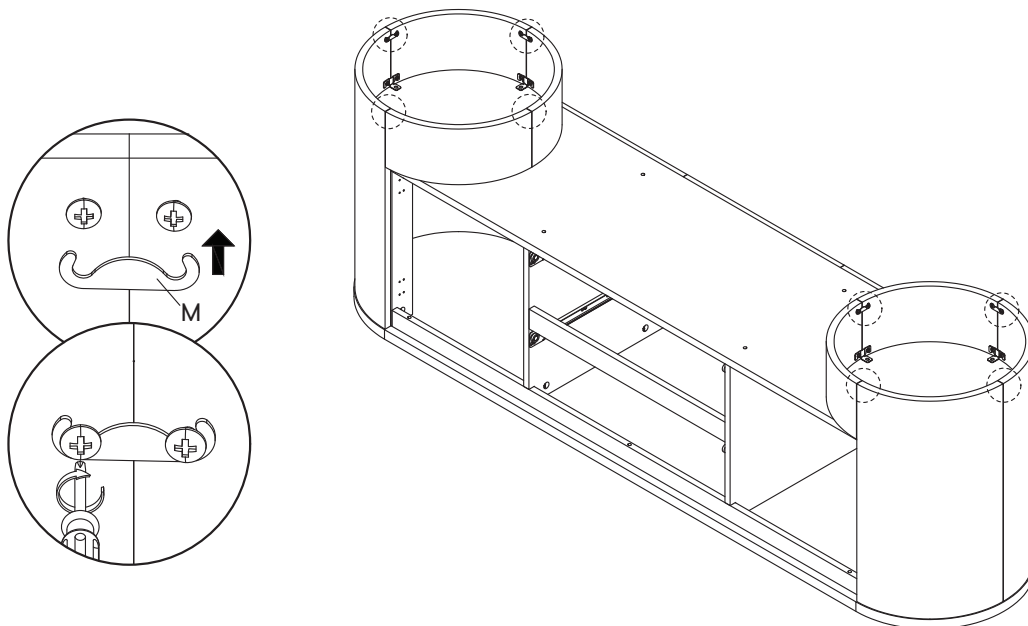


HARDWARE

Q Floor Protector x16

24.1 Peel off the paper from the Floor Protector (Q) and stick it onto the Bottom Skirts and Side Boards. Position as shown in the picture.

TOP VIEW

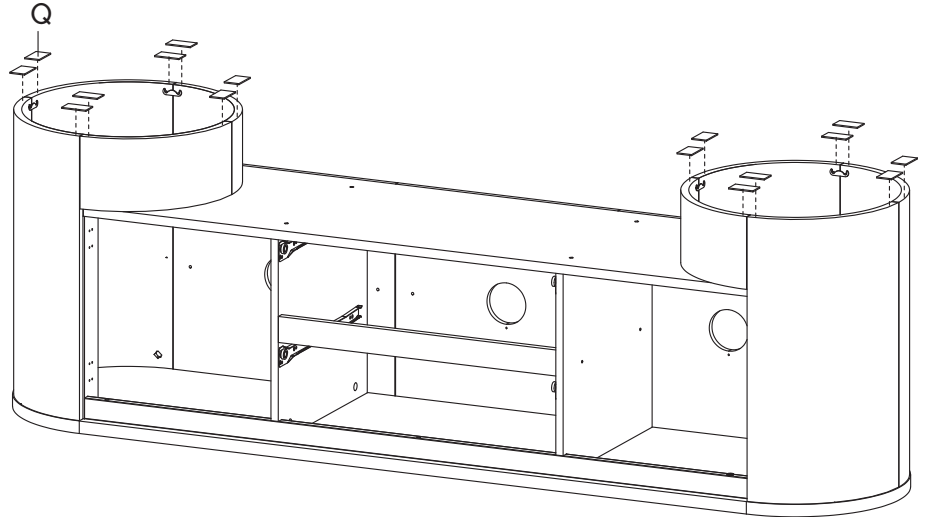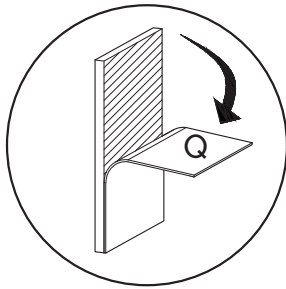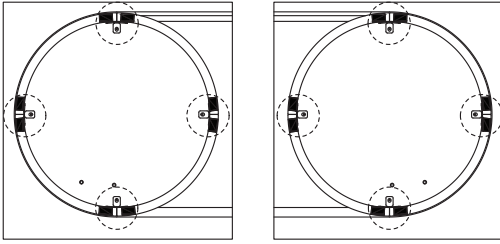

STEP 25

HARDWARE



L Shelf Pin x6

COMPONENTS

7 Adjustable Shelf 1 x1

8 Adjustable Shelf 2 x1

25.1 Insert Shelf Pin (L) into the holes on the Back Board and Center Board at the desired level. Then, place the Adjustable Shelf 1 (7) and Adjustable Shelf 2 (8) by aligning its hole with the Shelf Pin (L) and inserting it securely.

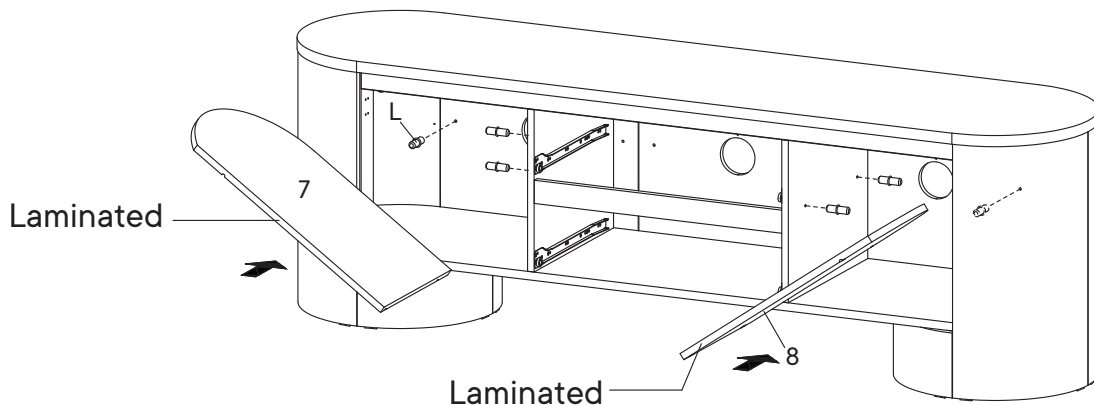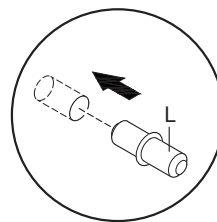

HARDWARE

H Screw M 4.5 x 12.5 mm x8




HS26C Hinge x4

COMPONENTS

16 Wooden Door 1 x1

17 Wooden Door 2 x1

26.1 Insert Hinge (HS26C) into Wooden Door 1 (16) and Wooden Door 2 (17). Secure with Screw M 4.5 x 12.5 mm (H). Then tighten using screwdriver.

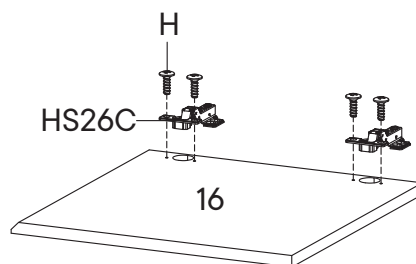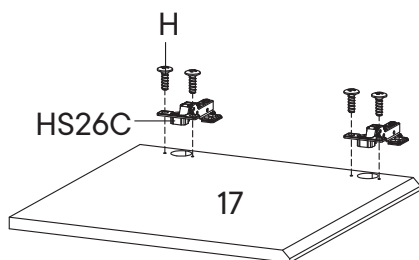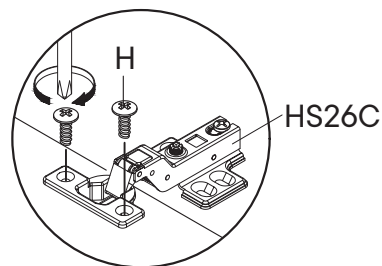

STEP 27

HARDWARE




H Screw M 4.5 x 12.5 mm x16

COMPONENTS


16 Wooden Door 1 x1

17 Wooden Door 2 x1

27.1 Install Wooden Door 1 (16) and Wooden Door 2 (17) to the Support Boards. Follow the details in the picture. Please see the last page for further guidance on how to adjust the hinges. Position them as shown in the picture. Then tighten all screw using screwdriver.

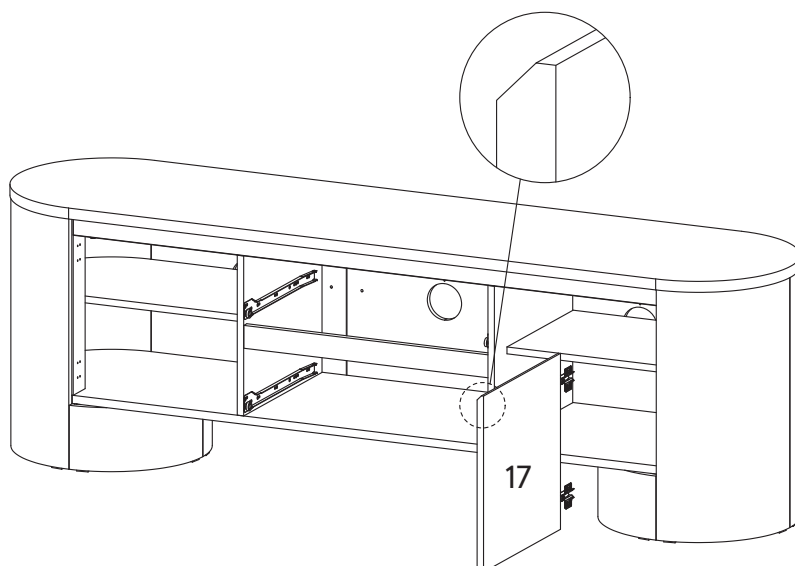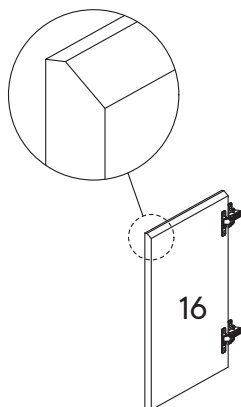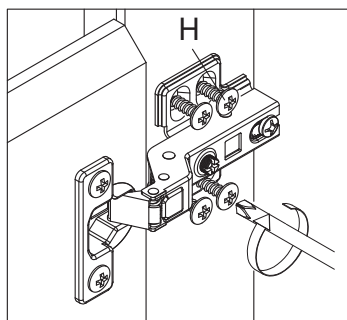

28.1 Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at Center boards, according to the image. Slide in the drawers one by one into the Tv Stand.


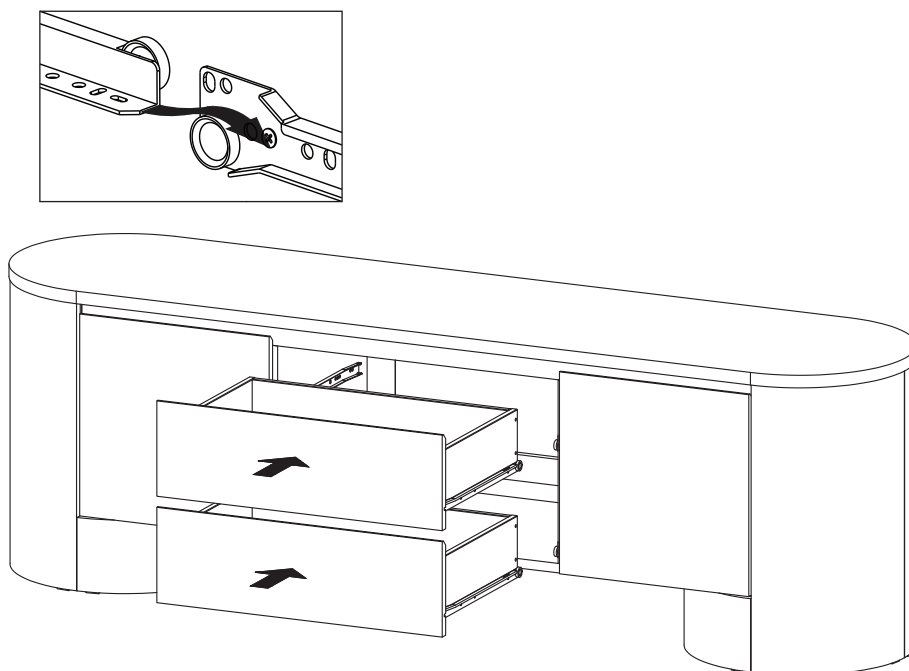


STEP 29

HARDWARE

- (H)** Screw M 4.5 x 12.5 mm x3
- (R)** Cable Hole Cover x3

29.1 Install the Cable Hole Cover (R) into the Back Board and securely tighten it with the Screw M 4.5 x 12.5 mm (H) using screwdriver.

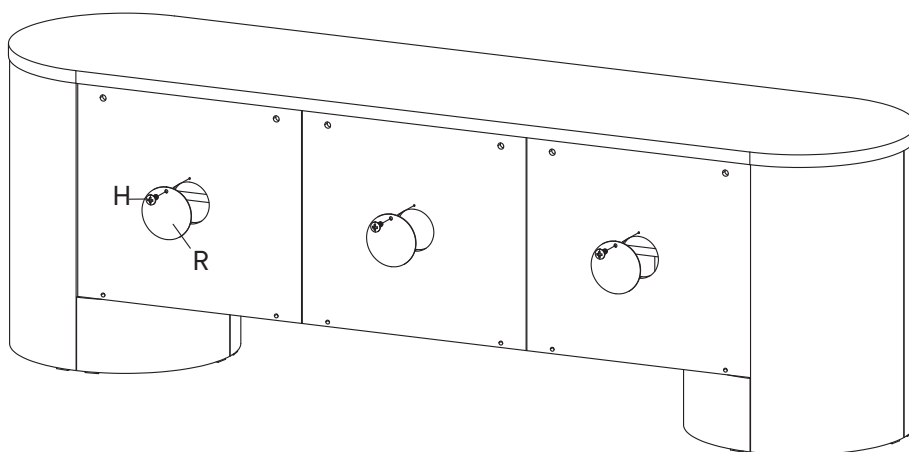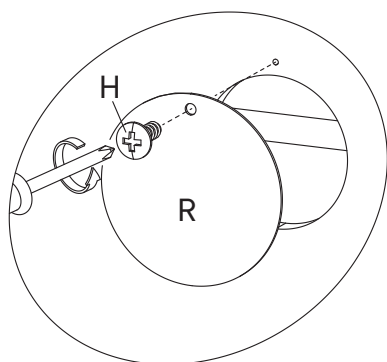


Great job!

Tv Stand assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

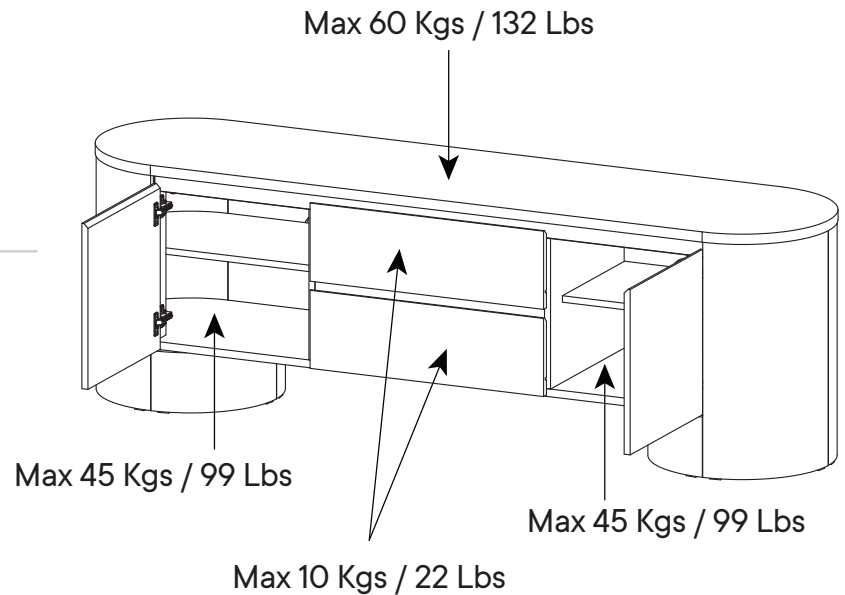

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway




Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

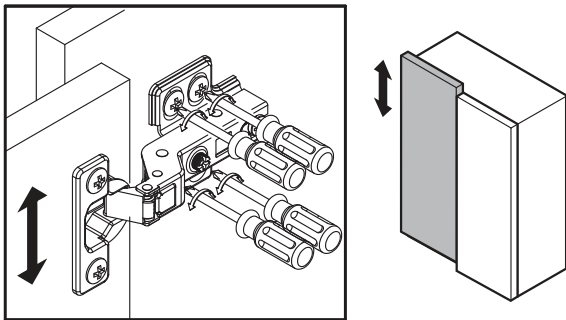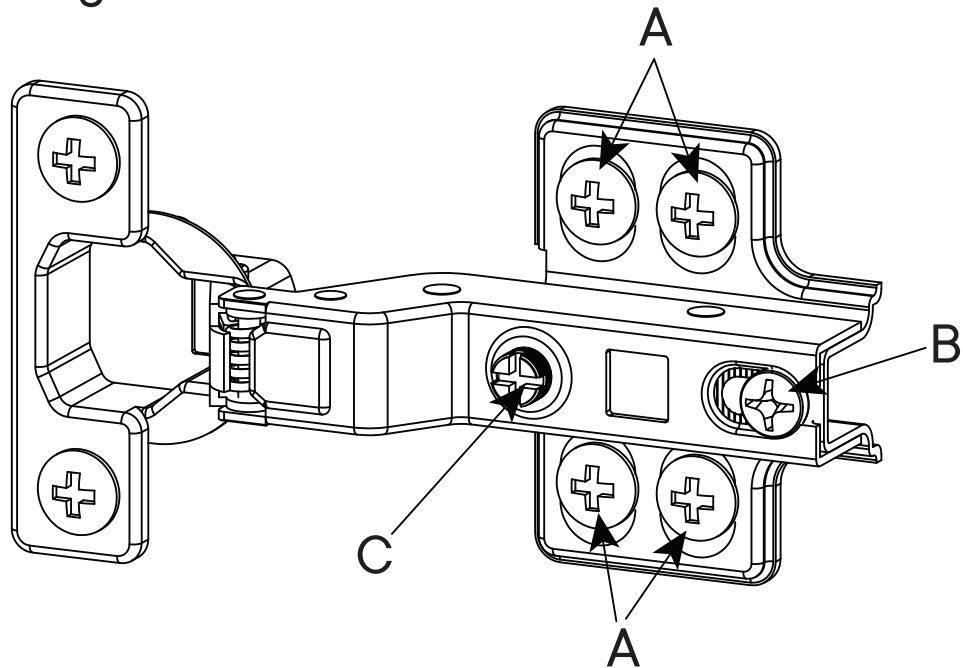


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

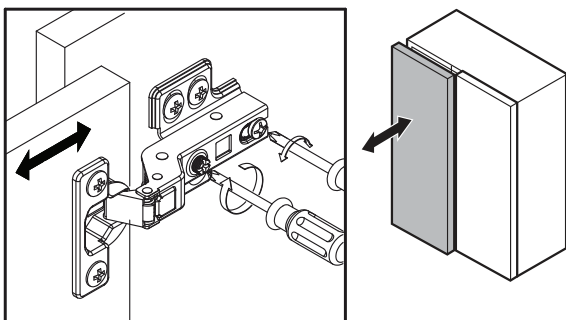

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

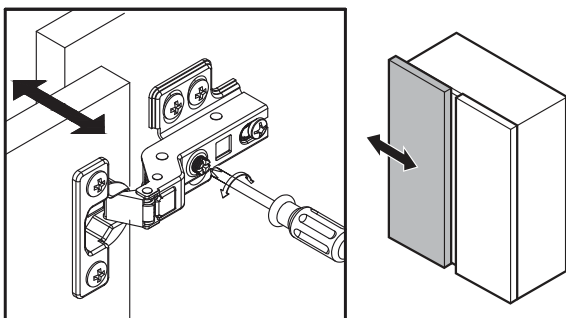

To adjust side ways.

Turn screw "C" on BOTH hinges on each door.