


ASSEMBLY INSTRUCTIONS

EEI-6834

V3.01.23.25

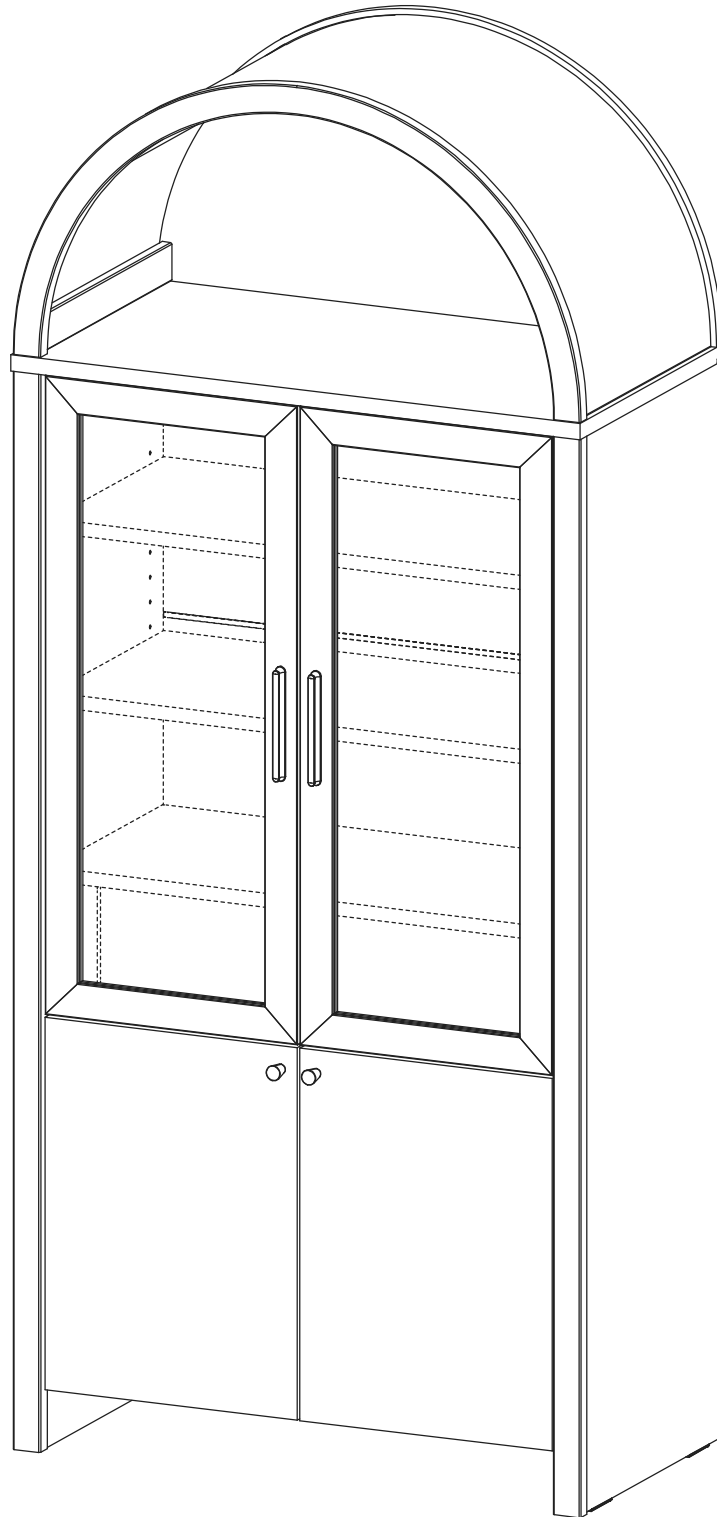

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 120 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:


1	Top Board	x1	11	Support Board 2 Hutch	x3	21	Side Drawer Left	x1	31	Support Board 7	x2
2	Bottom Board	x1	12	Front Board Hutch	x1	22	Side Drawer Right	x1	32	Back Board 1	x2
3	Side Board Left	x1	13	Back Board Hutch	x1	23	Back Drawer	x1	33	Back Board 2	x2
4	Side Board Right	x1	14	PVC Board	x1	24	Bottom Drawer	x1			
5	Adjustable Shelf	x3	15	Support Board 2	x2	25	Door Left	x1			
6	Fixed Shelf	x1	16	Center Board Left	x1	26	Door Right	x1			
7	Bottom Skirt 1	x1	17	Center Board Right	x1	27	Support Board 3	x1			
8	Frame Door	x2	18	Bottom Skirt 2	x1	28	Support Board 4	x1			
9	Support Board 1	x2	19	Bottom Skirt 3	x1	29	Support Board 5	x1			
10	Support Board 1 Hutch	x2	20	Front Drawer	x1	30	Support Board 6	x1			

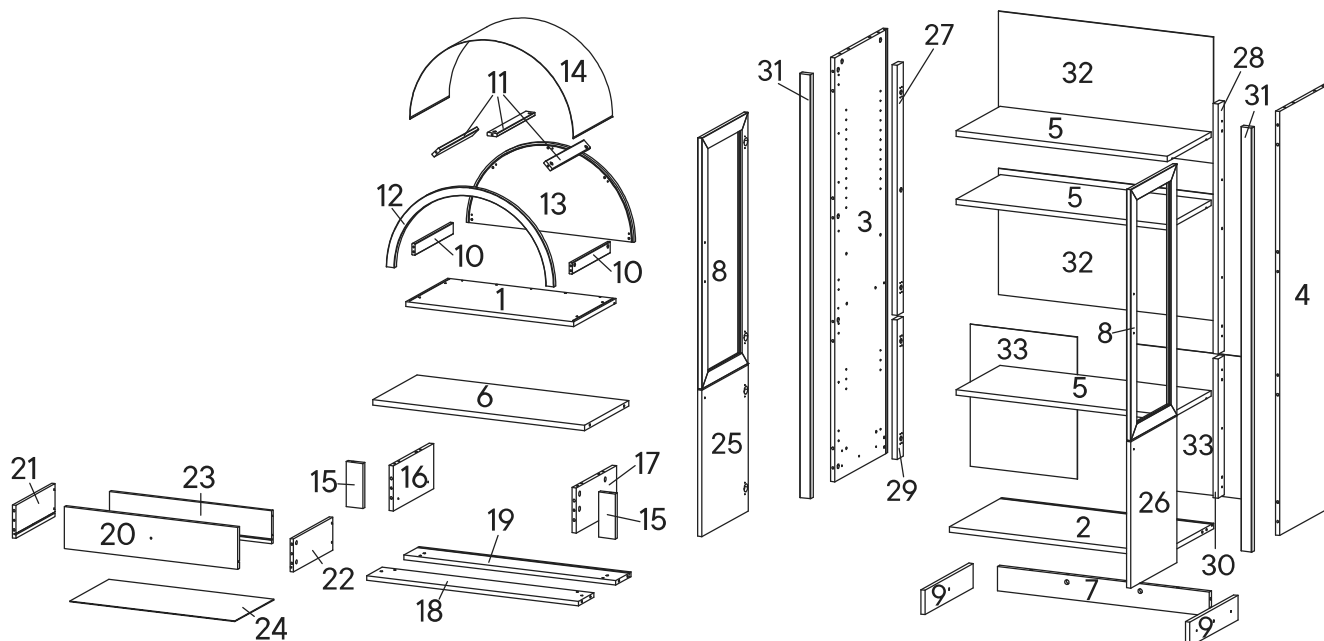

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x45	M		Wedge	x22	Y		Wood Dowel Ø5 x 20mm	x18
B		Cam Lock Ø15 mm	x41	N		Screw M 3.5 x 15.5 mm	x22	Z		List	x2
C		Wood Dowel Ø8 x 30 mm	x53	O		Screw Cap Ø15 mm	x4	AA		Joining Strip 455 mm	x1
D		Screw M 6.4 x 25 mm	x12	P		Allen Key	x2	RM30A		Drawer Runner	x1
E		Screw M 8 x 39 mm	x4	Q		Joining Strip 738 mm	x1	HS26C		Hinge	x8
F		Shelf Pin	x12	R		Cam Lock Ø12 mm	x4	What you need:  Phillips Phillips Head Screwdriver			
G		Screw Cap Ø15 mm	x2	S		Wood Dowel Ø6 x 30mm	x2				
H		Stopper	x2	T		Screw M 7 x 50 mm	x8				
I		Handle	x3	U		Screw M 6 x 10.5 mm	x4				
J		Screw M 4 x 20 mm	x7	V		Screw M 3.5 x 13 mm	x6				
K		Handle	x2	W		Silicon Bumper	x2				
L		Screw M 4.5 x 12.5 mm	x48	X		Floor Glide	x6				

Components Carton Placement

Carton 1 of 2

Label	Description	Qty	Label	Description	Qty
1	Top Board	x1	20	Front Drawer	x1
2	Bottom Board	x1	21	Side Drawer Left	x1
5	Adjustable Shelf	x3	22	Side Drawer Right	x1
6	Fixed Shelf	x1	23	Back Drawer	x1
10	Support Board 1 Hutch	x2	24	Bottom Drawer	x1
11	Support Board 2 Hutch	x3	32	Back Board 1	x2
12	Front Board Hutch	x1	33	Back Board 2	x2
13	Back Board Hutch	x1		Hardware Pack	x1
18	Bottom Skirt 2	x1			
19	Bottom Skirt 3	x1			

Carton 2 of 2

Label	Description	Qty	Label	Description	Qty
3	Side Board Left	x1	26	Door Right	x1
4	Side Board Right	x1	27	Support Board 3	x1
7	Bottom Skirt 1	x1	28	Support Board 4	x1
8	Frame Door	x2	29	Support Board 5	x1
9	Support Board 1	x2	30	Support Board 6	x1
14	PVC Board	x1	31	Support Board 7	x2
15	Support Board 2	x2		Hardware Pack	x1
16	Center Board Left	x1			
17	Center Board Right	x1			
25	Door Left	x1			

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- | | | |
|----------|-----------------------|----|
| A | Cam Bolt Ø6 x 35 mm | x4 |
| S | Wood Dowel Ø6 x 30 mm | x2 |

COMPONENTS

- | | | |
|-----------|-------------------|----|
| 20 | Front Drawer | x1 |
| 21 | Side Drawer Left | x1 |
| 22 | Side Drawer Right | x1 |

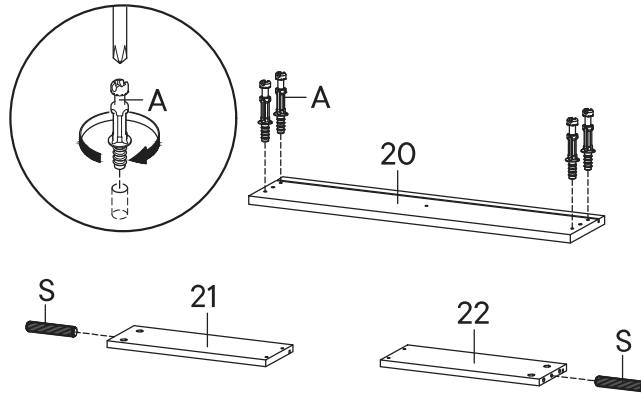



Step 2

HARDWARE

- | | | |
|----------|-------------------|----|
| E | Screw M 8 x 39 mm | x4 |
| R | Cam Lock Ø12 mm | x4 |

COMPONENTS






- | | | |
|-----------|-------------------|----|
| 20 | Front Drawer | x1 |
| 21 | Side Drawer Left | x1 |
| 22 | Side Drawer Right | x1 |
| 23 | Back Drawer | x1 |
| 24 | Bottom Drawer | x1 |

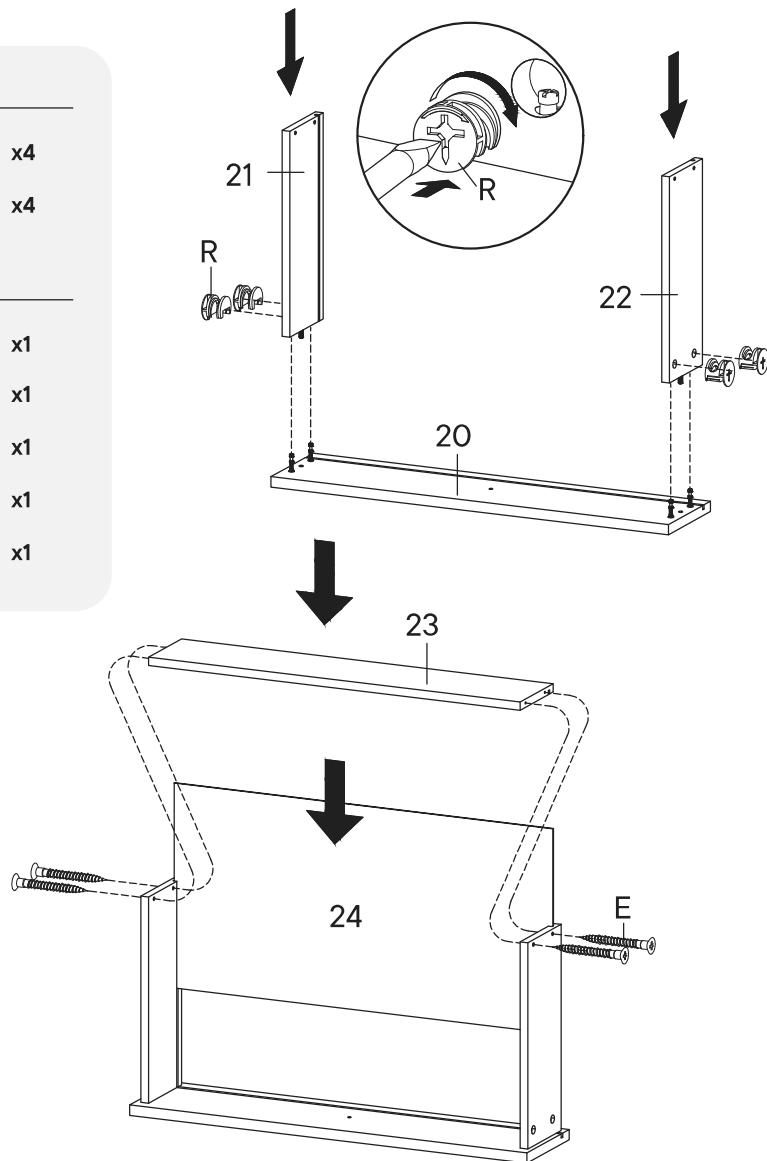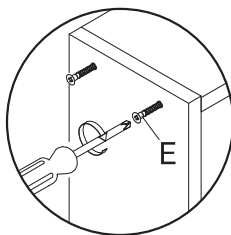

Step 3

HARDWARE


M	Wedge	x4
N	Screw M 3.5 x 15.5 mm	x4
V	Screw M 3.5 x 13 mm	x6
RM30A	Drawer Runner	x1

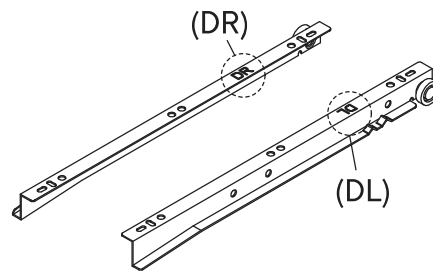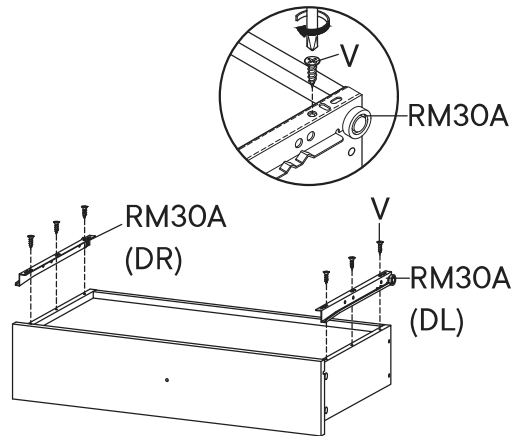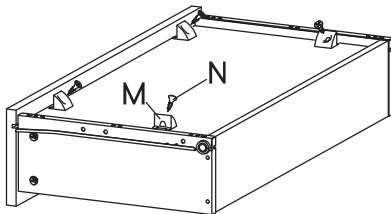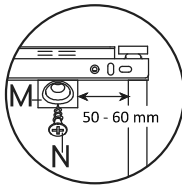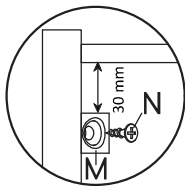

Step 4

HARDWARE

I	Handle	x1
J	Screw M 4 x 20 mm	x1

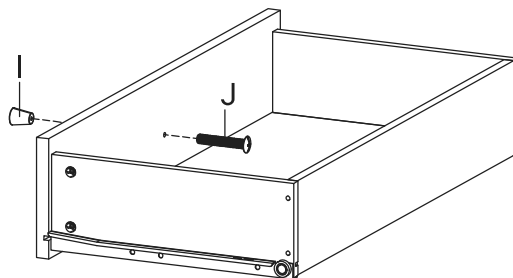


Step 5

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x2
C	Wood Dowel Ø8 x 30 mm	x14
U	Screw M 6 x 10.5 mm	x4
RM30A	Drawer Runner	x1

COMPONENTS

15	Support Board 2	x2
16	Center Board Left	x1
17	Center Board Right	x1

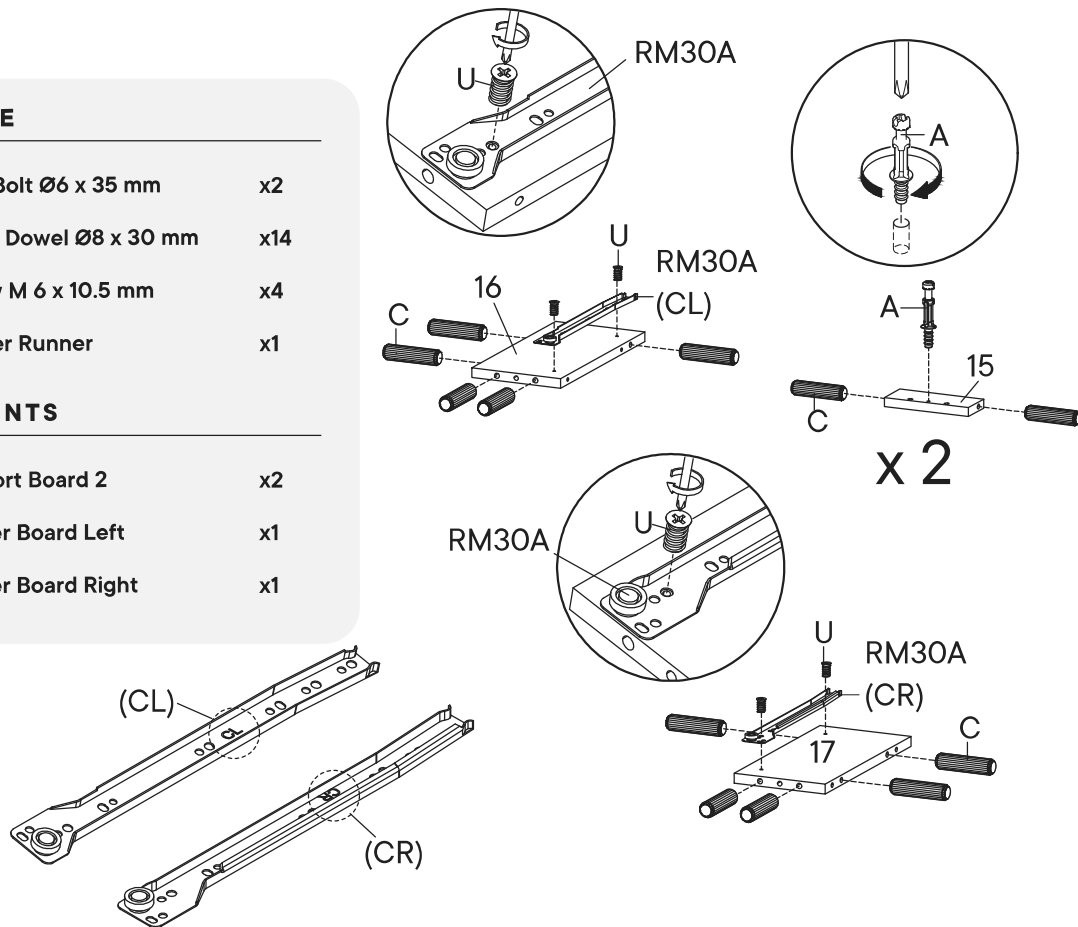


Step 6

HARDWARE

B	Cam Lock Ø15 mm	x2
----------	-----------------	----

COMPONENTS

15	Support Board 2	x2
16	Center Board Left	x1
17	Center Board Right	x1

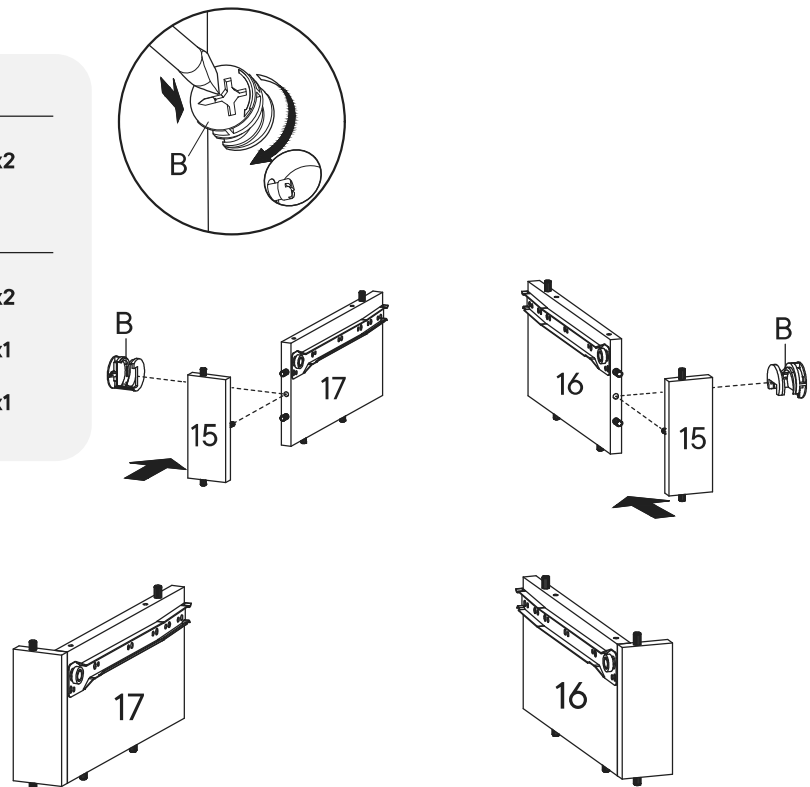


Step 7

HARDWARE

- | | | |
|----------|-----------------------|----|
| A | Cam Bolt Ø6 x 35 mm | x4 |
| C | Wood Dowel Ø8 x 30 mm | x8 |

COMPONENTS

- | | | |
|-----------|----------------|----|
| 6 | Fixed Shelf | x1 |
| 18 | Bottom Skirt 2 | x1 |
| 19 | Bottom Skirt 3 | x1 |

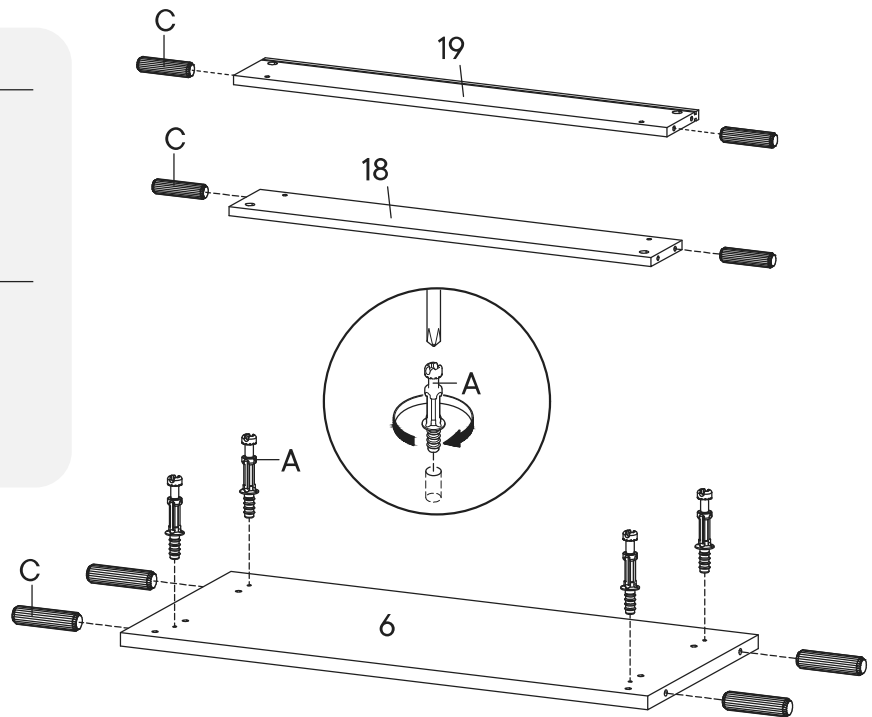


Step 8

HARDWARE

- | | | |
|----------|-----------------|----|
| B | Cam Lock Ø15 mm | x4 |
|----------|-----------------|----|

COMPONENTS

- | | | |
|-----------|--------------------|----|
| 6 | Fixed Shelf | x1 |
| 16 | Center Board Left | x1 |
| 17 | Center Board Right | x1 |

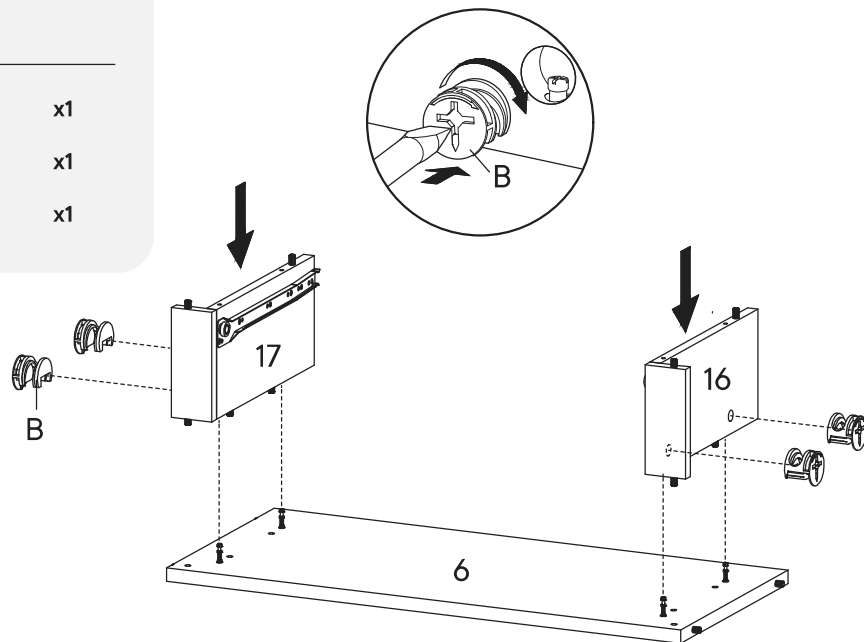



Step 9

HARDWARE

- | | | |
|----------|-------------------|----|
| P | Allen Key | x1 |
| T | Screw M 7 x 50 mm | x4 |

COMPONENTS

- | | | |
|-----------|----------------|----|
| 18 | Bottom Skirt 2 | x1 |
| 19 | Bottom Skirt 3 | x1 |

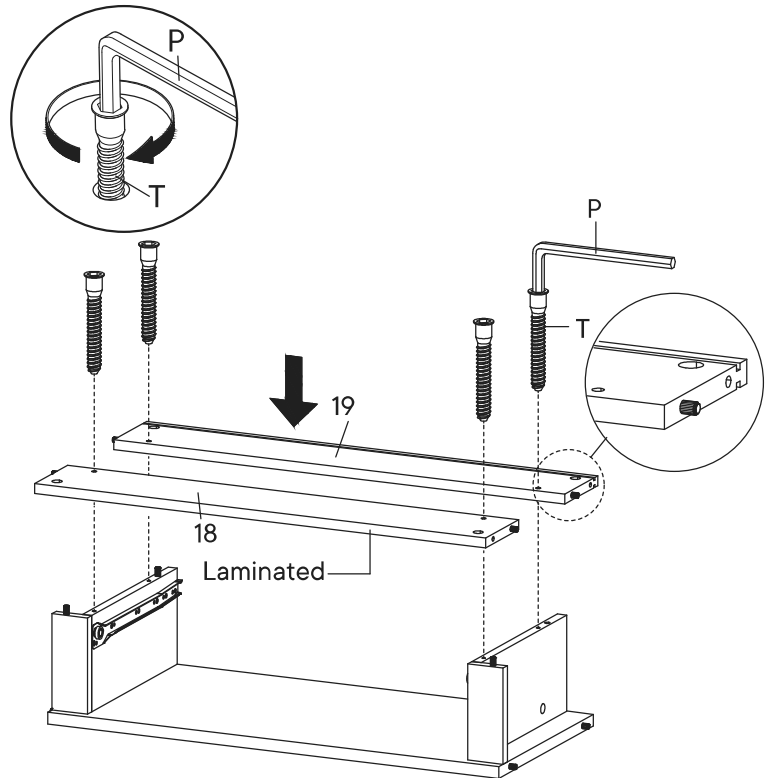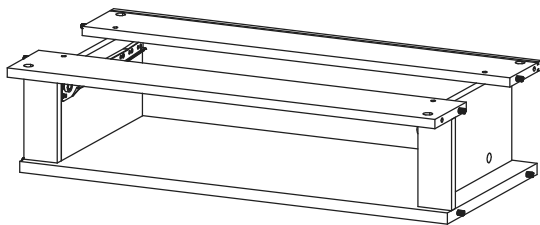



Step 10

HARDWARE

- | | | |
|----------|-----------------------|-----|
| A | Cam Bolt Ø6 x 35 mm | x2 |
| B | Cam Lock Ø15 mm | x2 |
| C | Wood Dowel Ø8 x 30 mm | x10 |

COMPONENTS

- | | | |
|----------|----------------|----|
| 2 | Bottom Board | x1 |
| 7 | Bottom Skirt 1 | x1 |

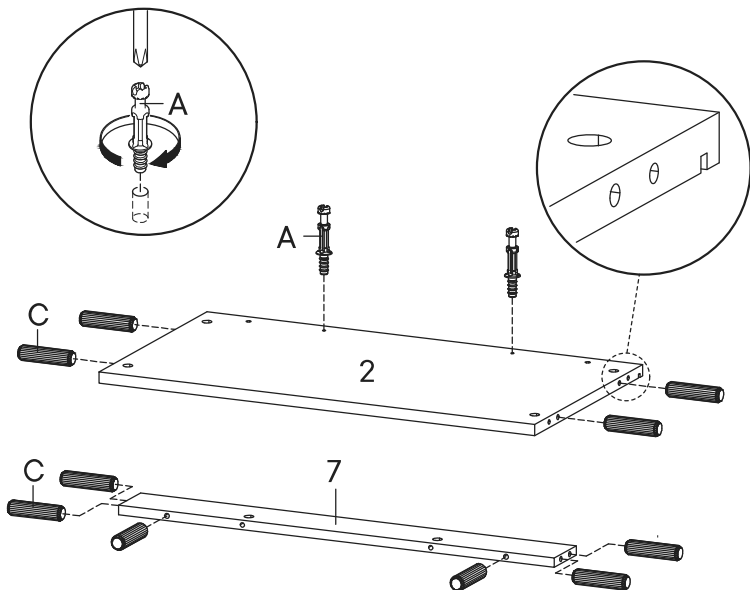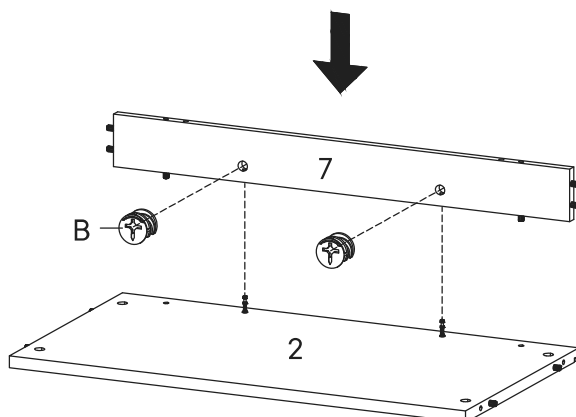


Step 11

HARDWARE

- | | | |
|----------|-----------------------|-----|
| A | Cam Bolt Ø6 x 35 mm | x8 |
| C | Wood Dowel Ø8 x 30 mm | x12 |

COMPONENTS

- | | | |
|----------|------------------|----|
| 3 | Side Board Left | x1 |
| 4 | Side Board Right | x1 |

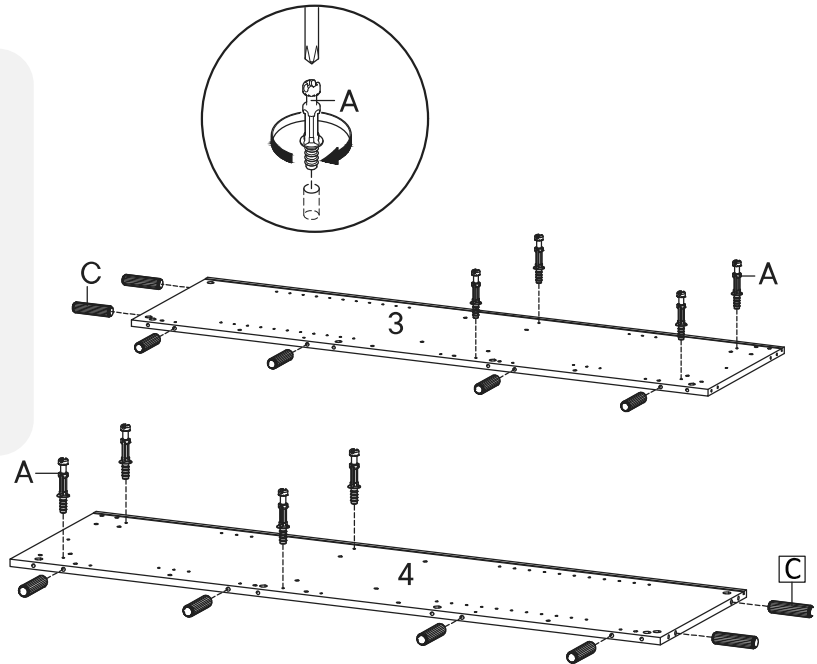


Step 12

HARDWARE

- | | | |
|----------|-----------------|----|
| B | Cam Lock Ø15 mm | x2 |
|----------|-----------------|----|

COMPONENTS

- | | | |
|-----------|------------------|----|
| 4 | Side Board Right | x1 |
| 18 | Bottom Skirt 2 | x1 |
| 19 | Bottom Skirt 3 | x1 |

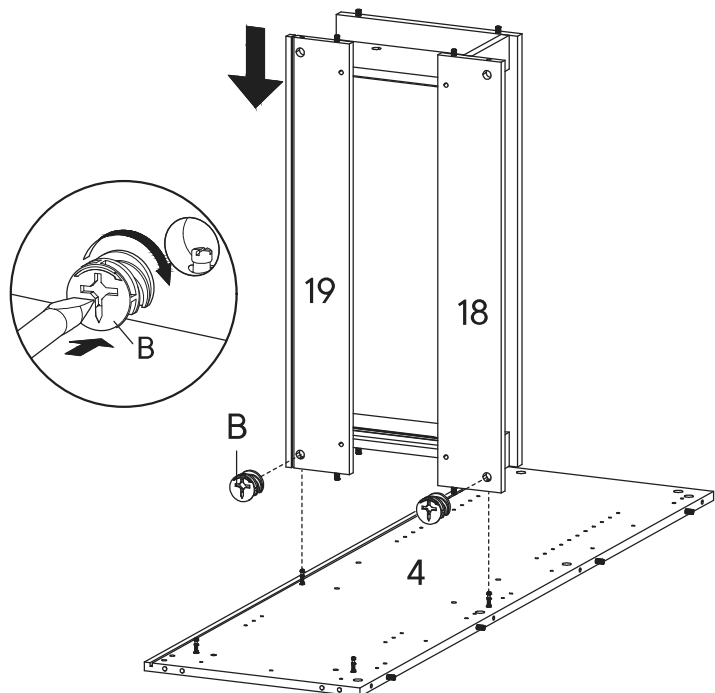



Step 13

HARDWARE

B Cam Lock Ø15 mm x2

COMPONENTS

2 Bottom Board x1

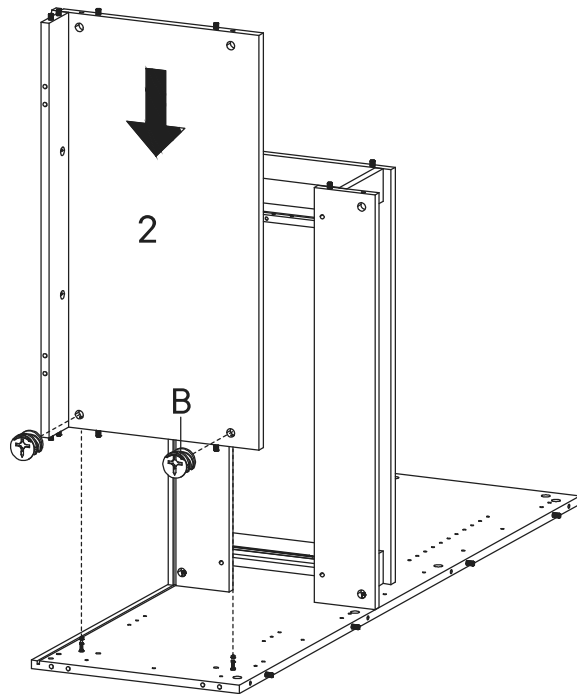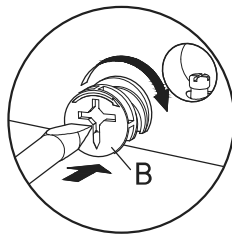

Step 14


HARDWARE

AA Joining Strip 455 mm x1

COMPONENTS

33 Back Board 2 x2

Place the backboard with oak colour facing inside of cabinet

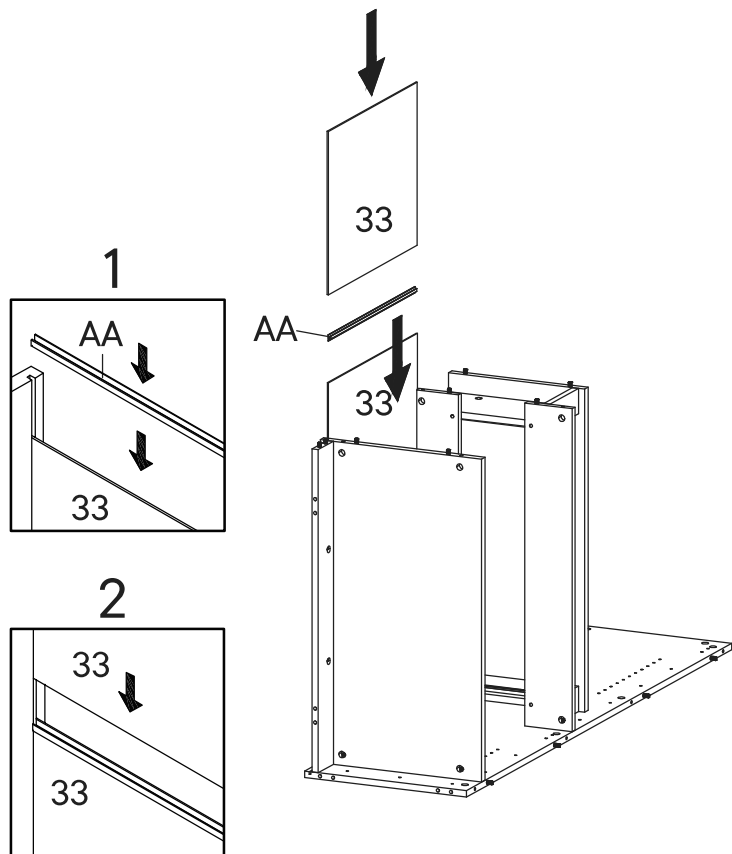



Step 15

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

3 Side Board Left x1

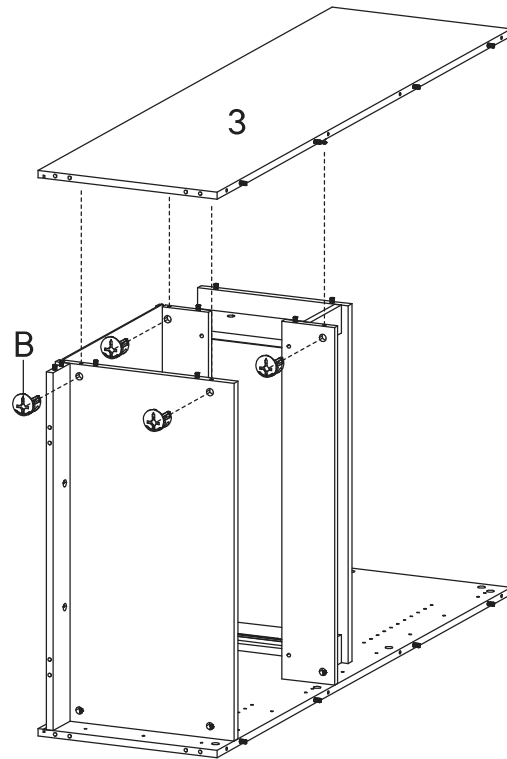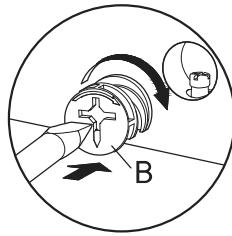



Step 16

HARDWARE

A Cam Bolt Ø6 x 35 mm x8

COMPONENTS

31 Support Board 7 x2

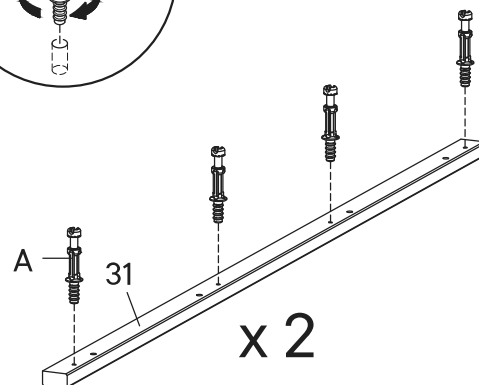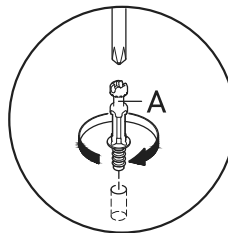


Step 17

HARDWARE

B Cam Lock Ø15 mm x8

COMPONENTS

31 Support Board 7 x2

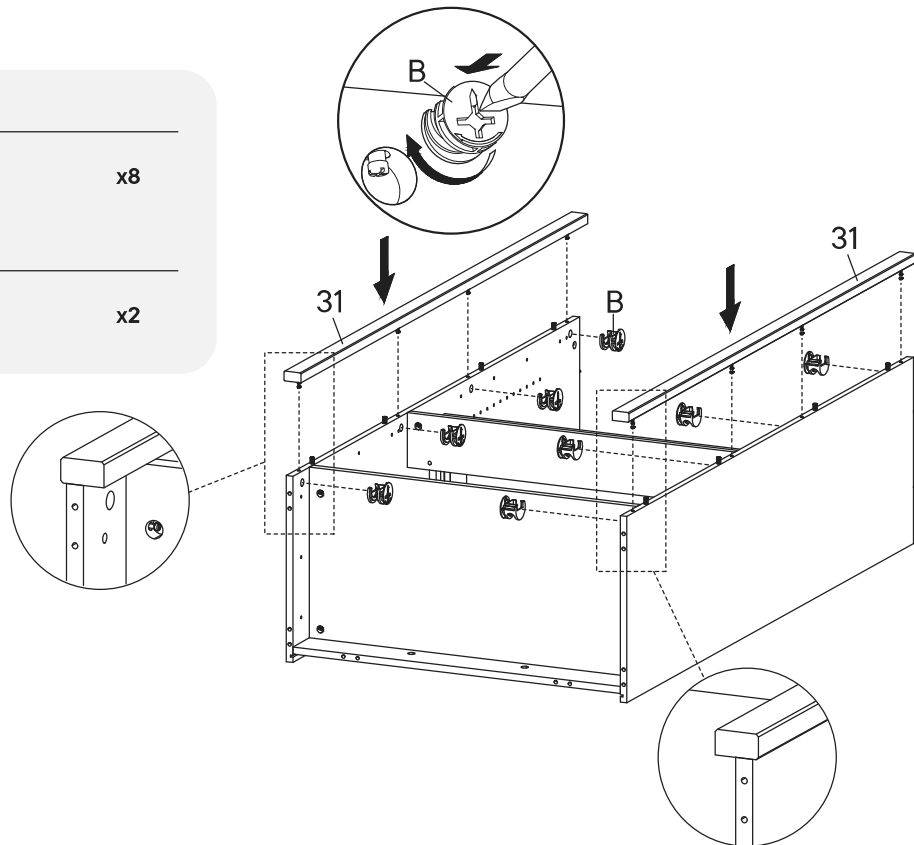

Step 18

HARDWARE




D Screw M 6.4 x 25 mm x2

P Allen Key x1

Y Wood Dowel Ø5 x 20 mm x4

COMPONENTS



9 Support Board 1 x2

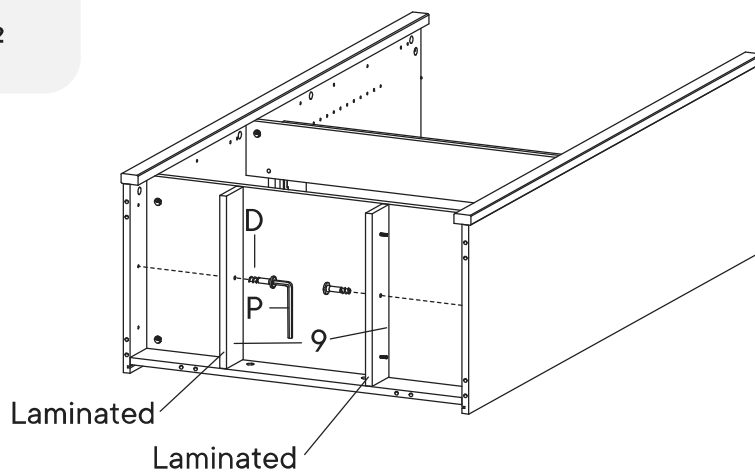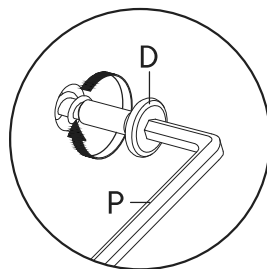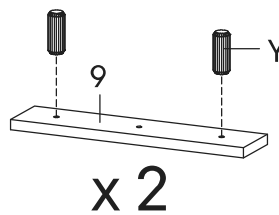

Step 19

HARDWARE

X Floor Glide x6

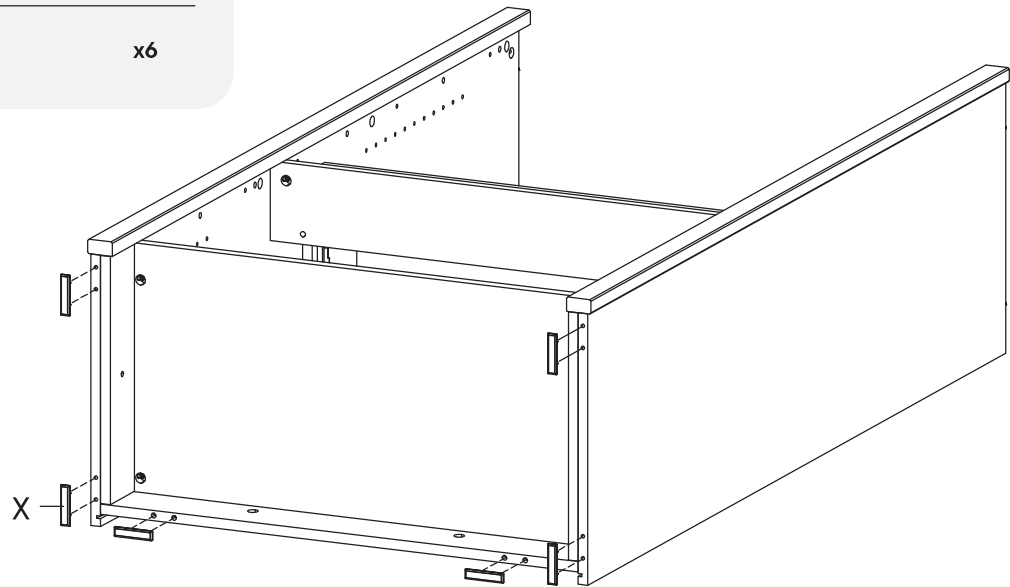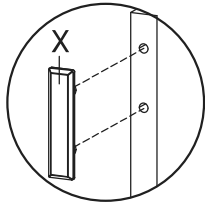

Step 20


HARDWARE

Q Joining Strip 738 mm x1

COMPONENTS

32 Back Board 1 x2

Place the backboard with oak colour facing inside of cabinet

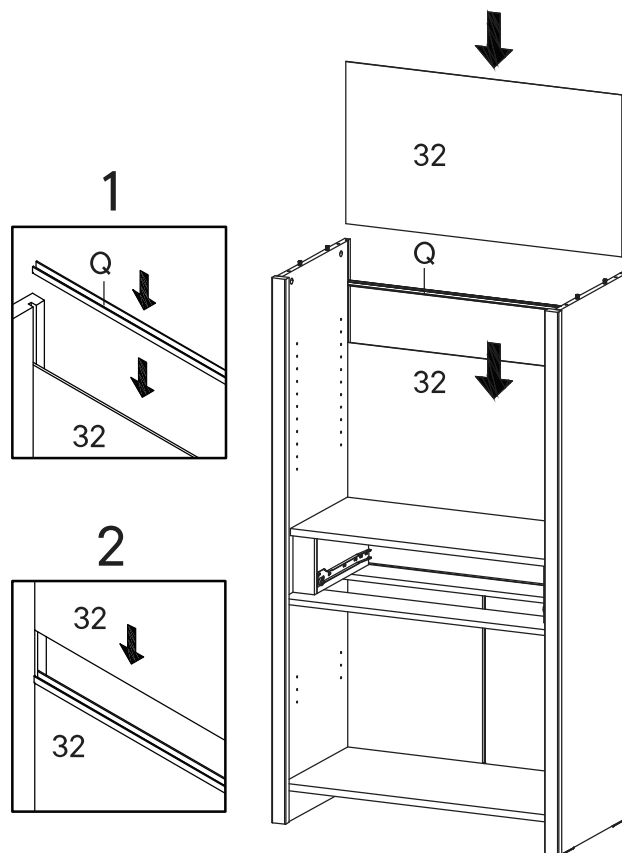


Step 21

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x10
- C** Wood Dowel Ø8 x 30 mm x9

COMPONENTS

- 10** Support Board 1 Hutch x2
- 11** Support Board 2 Hutch x3
- 12** Front Board Hutch x1
- 13** Back Board Hutch x1

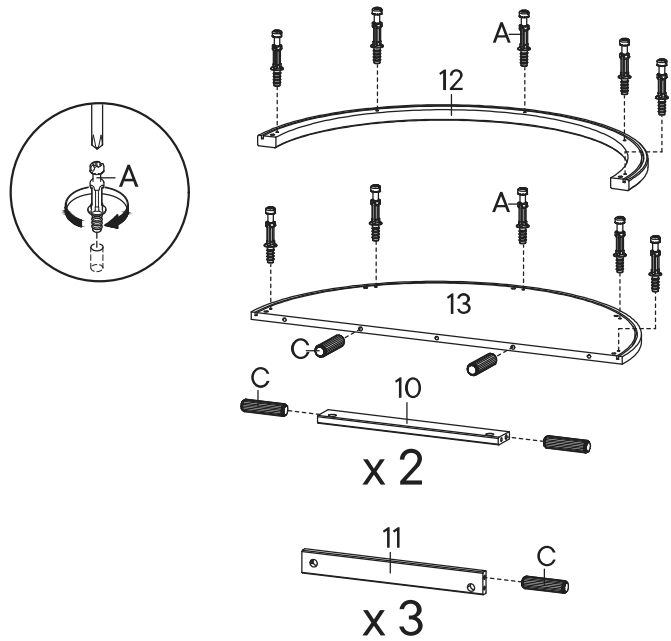


Step 22

HARDWARE

- B** Cam Lock Ø15 mm x5

COMPONENTS

- 10** Support Board 1 Hutch x2
- 11** Support Board 2 Hutch x3
- 13** Back Board Hutch x1

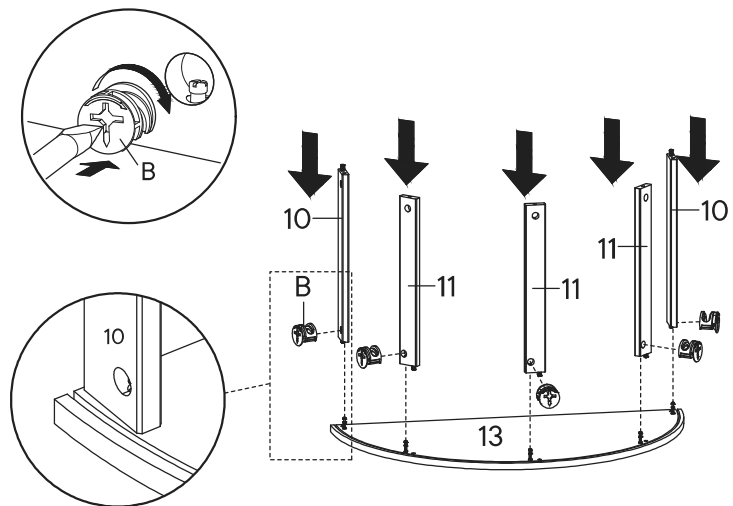


Step 23

HARDWARE

- B** Cam Lock Ø15 mm x5

COMPONENTS

- 12** Front Board Hutch x1

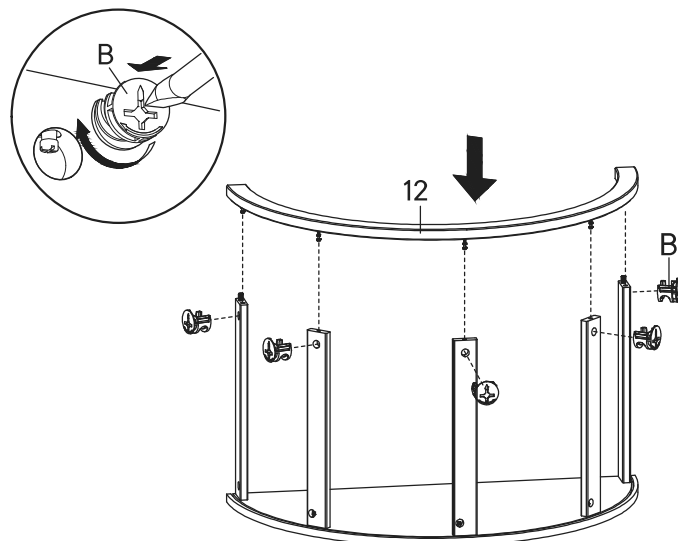



Step 24

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x3

COMPONENTS

- 1** Top Board x1
14 PVC Board x1

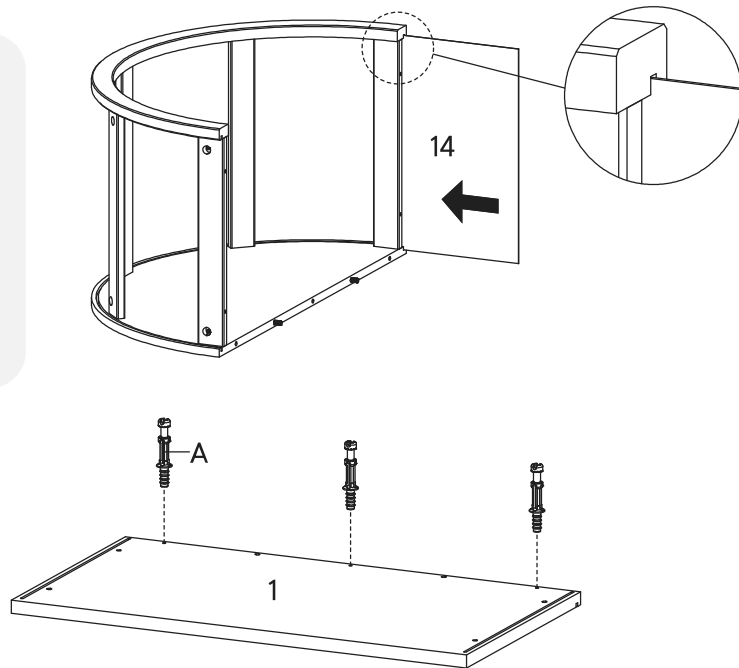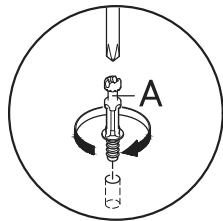


Step 25

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4
B Cam Lock Ø15 mm x3
H Stopper x2
P Allen Key x1
T Screw M 7 x 50 mm x4

COMPONENTS

- 1** Top Board x1

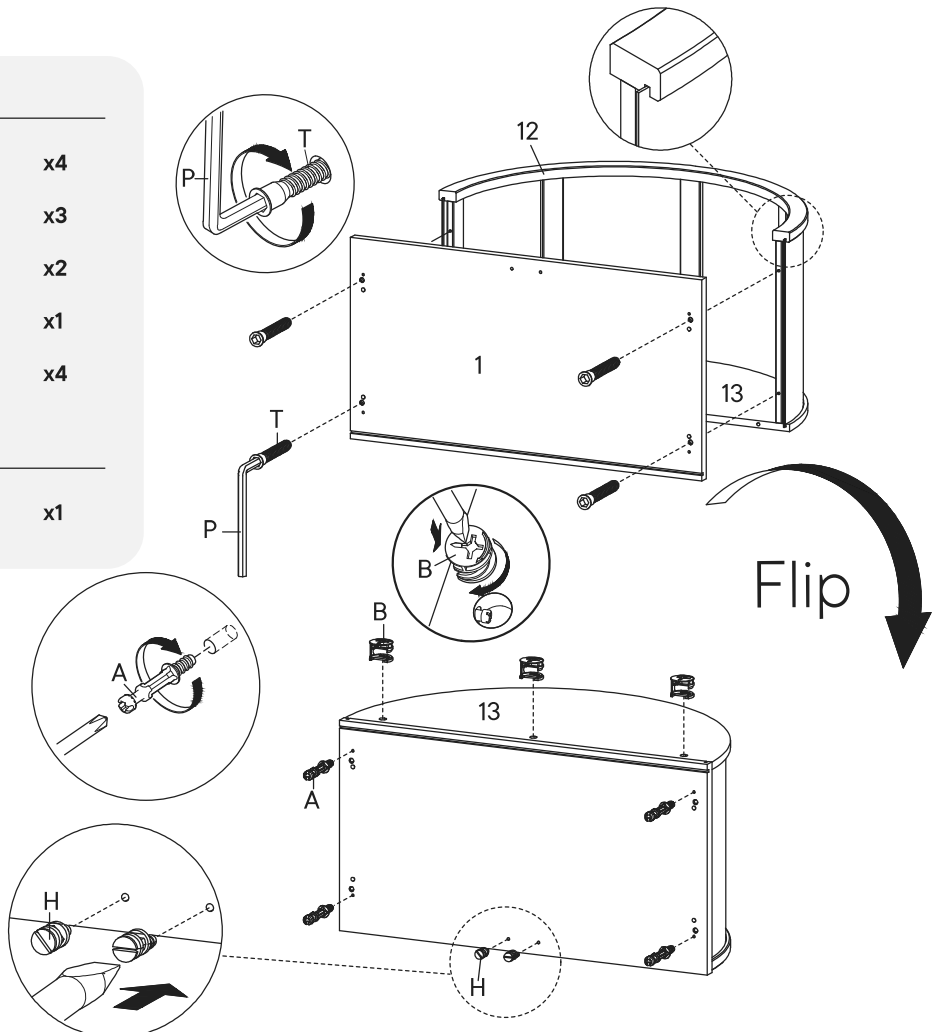



Step 26

HARDWARE

- | | | |
|----------|------------------|----|
| B | Cam Lock Ø15 mm | x4 |
| O | Screw Cap Ø15 mm | x4 |

COMPONENTS

- | | | |
|----------|-----------|----|
| 1 | Top Board | x1 |
|----------|-----------|----|

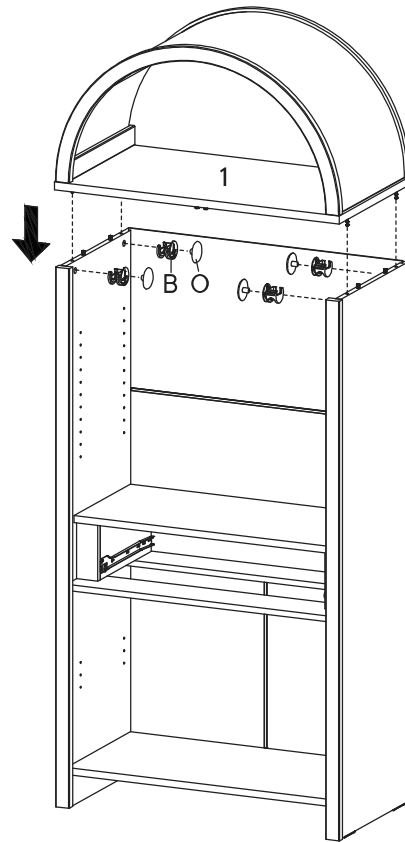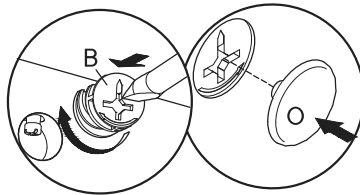


Step 27

HARDWARE

- | | | |
|----------|-----------------------|-----|
| Y | Wood Dowel Ø5 x 20 mm | x14 |
|----------|-----------------------|-----|

COMPONENTS

- | | | |
|-----------|-----------------|----|
| 27 | Support Board 3 | x1 |
| 28 | Support Board 4 | x1 |
| 29 | Support Board 5 | x1 |
| 30 | Support Board 6 | x1 |

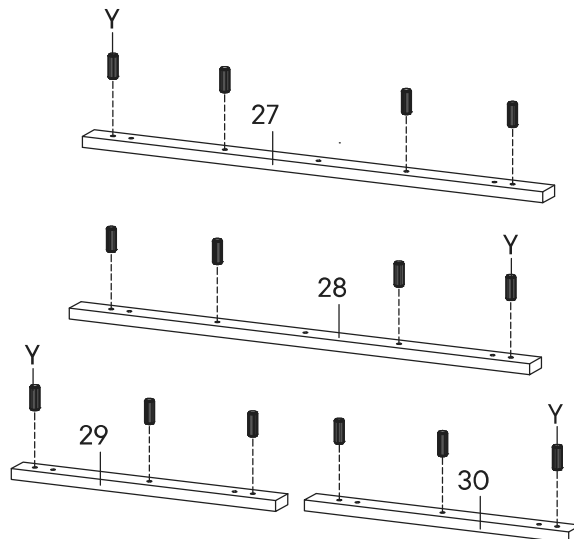


Step 28

HARDWARE

D	Screw M 6.4 x 25 mm	x10
P	Allen Key	x1

COMPONENTS




27	Support Board 3	x1
28	Support Board 4	x1
29	Support Board 5	x1
30	Support Board 6	x1

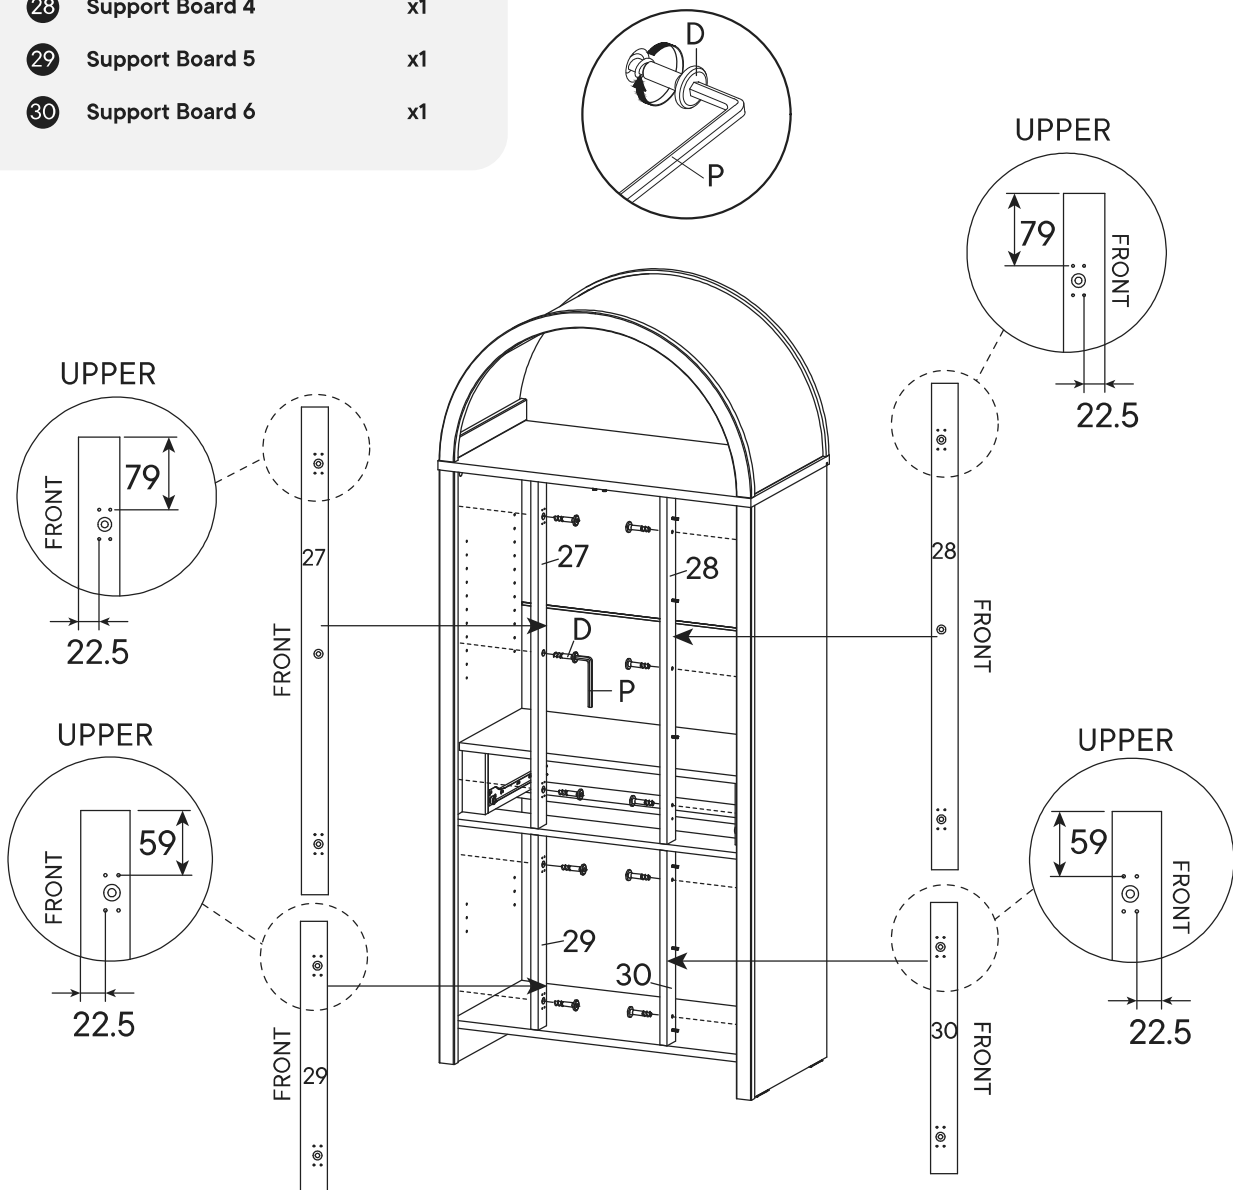

Step 29

HARDWARE

G Screw Cap Ø15 mm x2

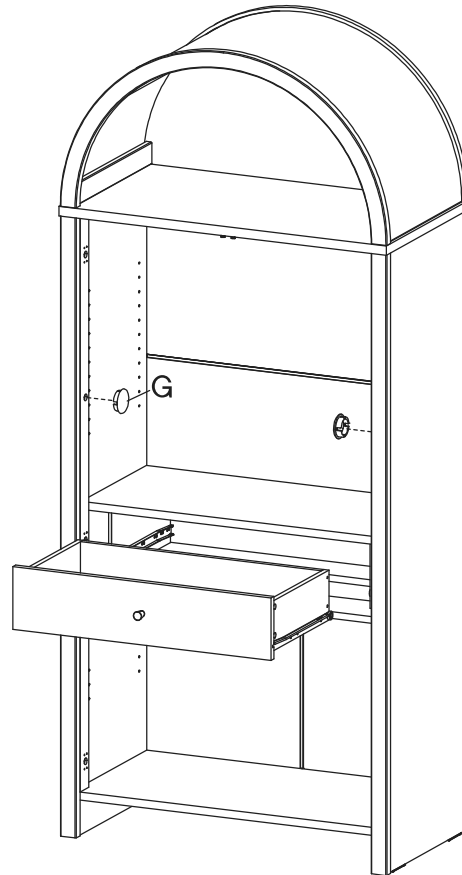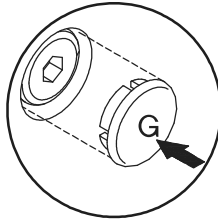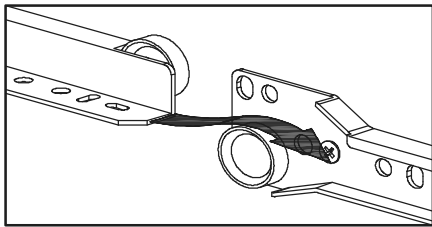



Step 30

HARDWARE

F Shelf Pin x12

COMPONENTS

5 Adjustable Shelf x3

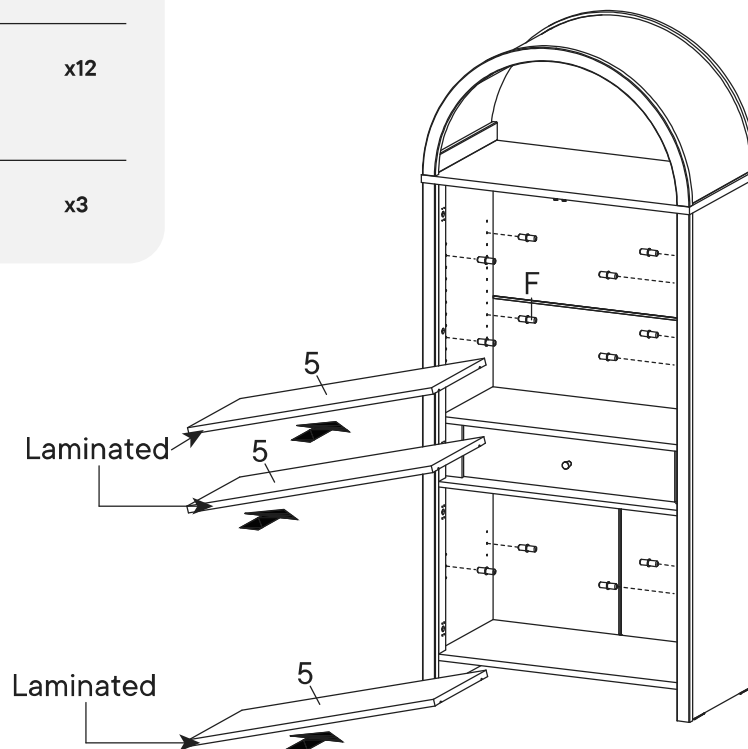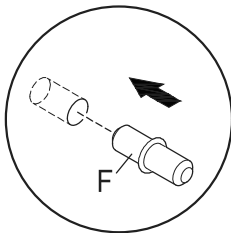


Step 31

HARDWARE

L	Screw M 4.5 x 12.5 mm	x16
HS26C	Hinge	x8

COMPONENTS

8	Frame Door	x2
25	Door Left	x1
26	Door Right	x1

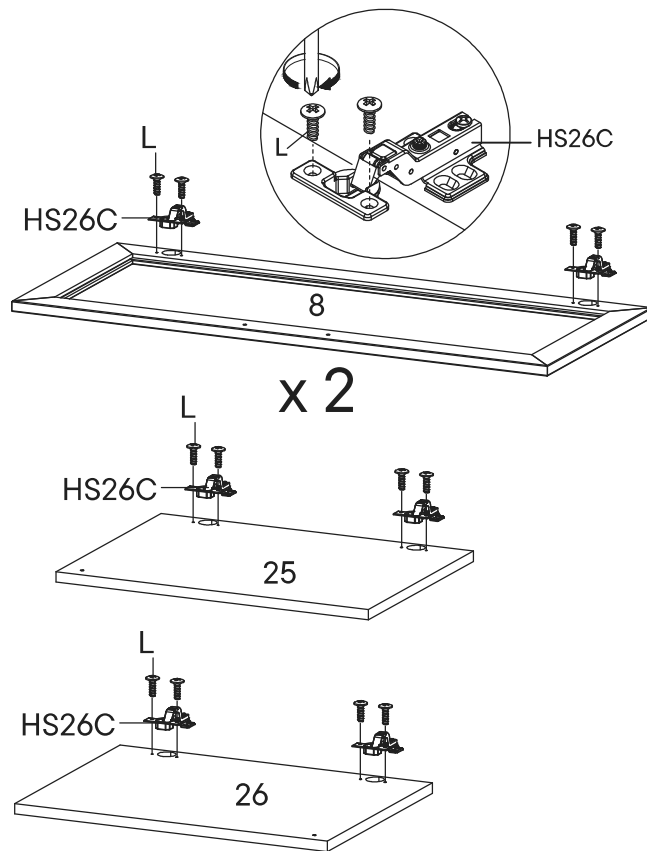


Step 32

HARDWARE

I	Handle	x2
J	Screw M 4 x 20 mm	x6
L	Screw M 4.5 x 12.5 mm	x32
K	Handle	x2
W	Silicon Bumper	x2

COMPONENTS


8	Frame Door	x2
25	Door Left	x1
26	Door Right	x1

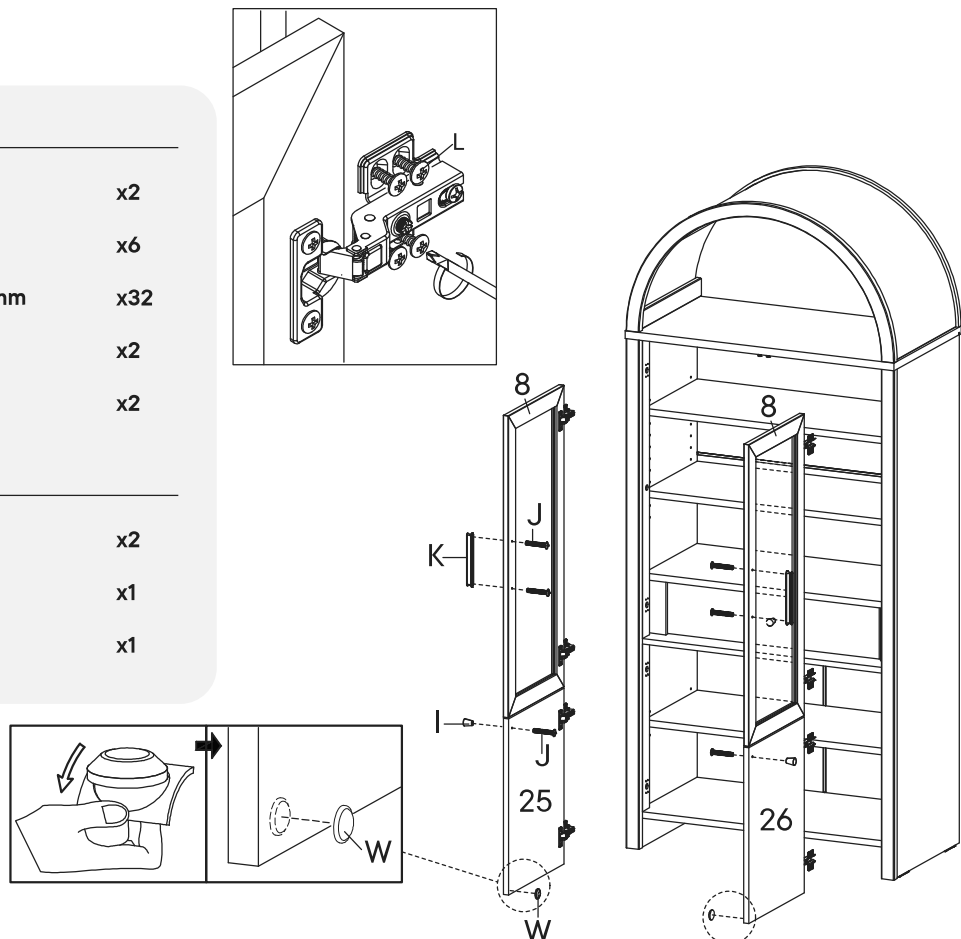

Step 33

HARDWARE


- | | | |
|----------|-----------------------|-----|
| M | Wedge | x18 |
| N | Screw M 3.5 x 15.5 mm | x18 |

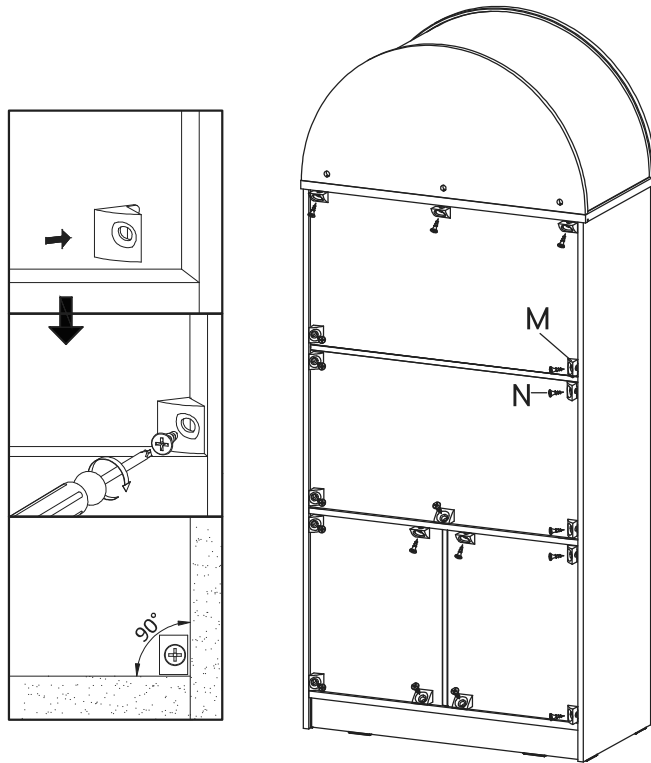

Step 34

HARDWARE

- | | | |
|----------|------|----|
| Z | List | x2 |
|----------|------|----|

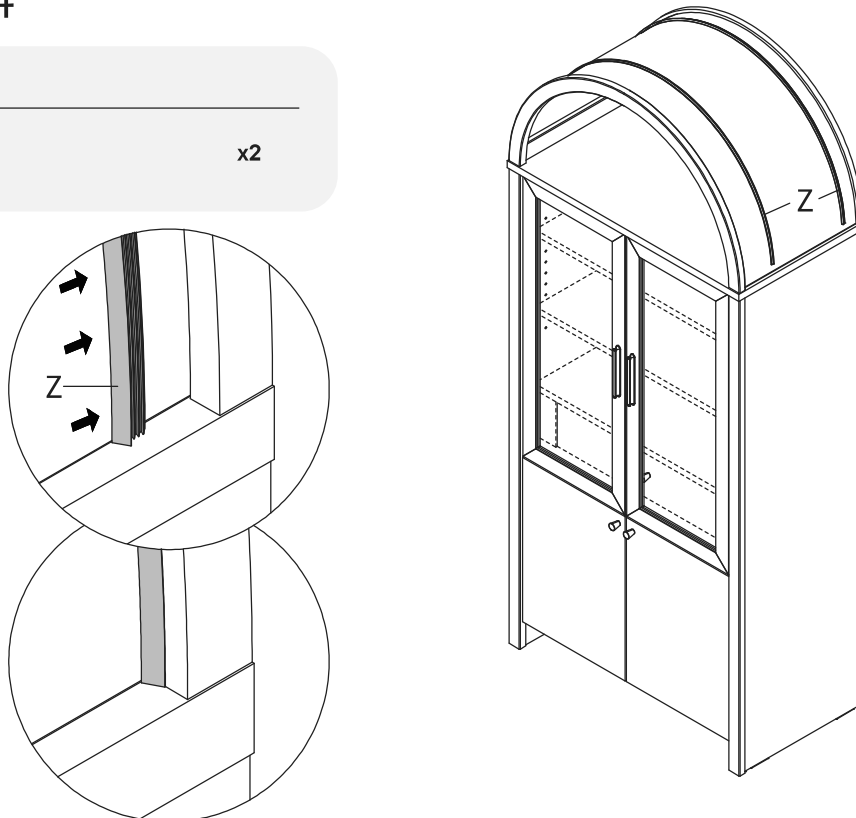

Great job!

Bookcase assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.


Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.



Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!   

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

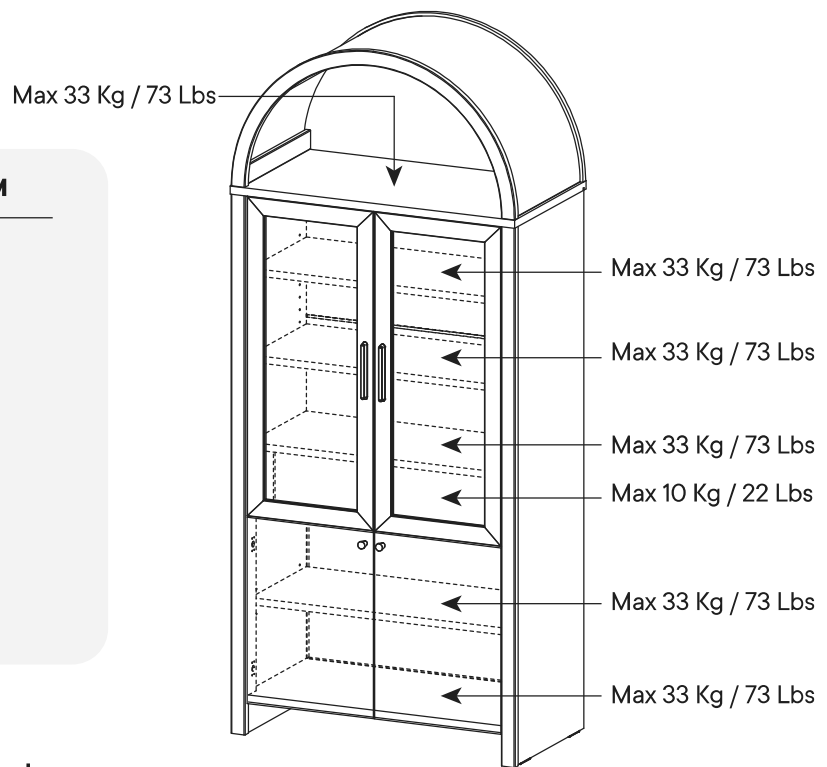


Cabinet Door Alignment

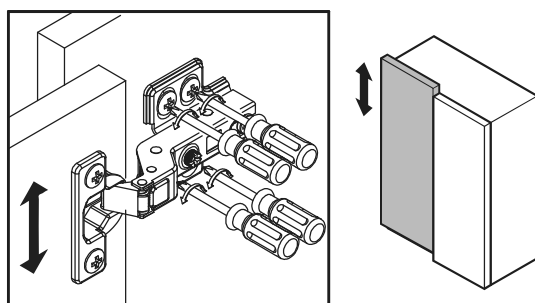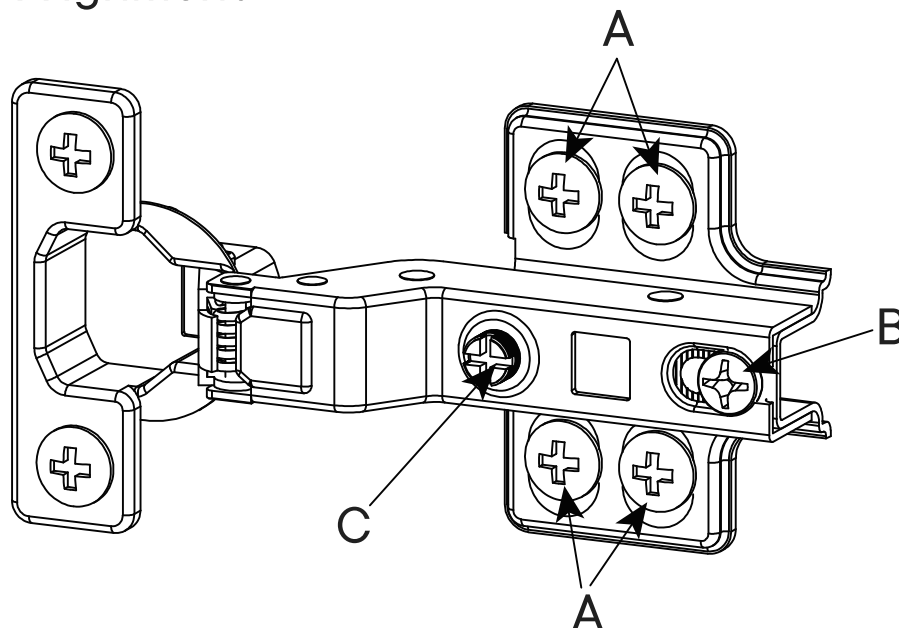


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

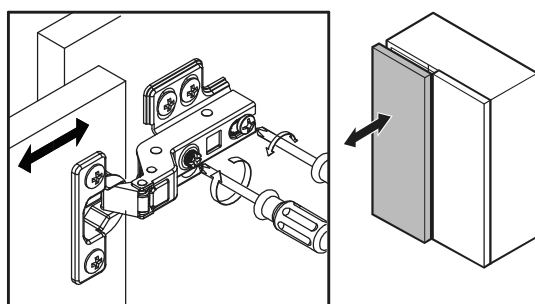

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

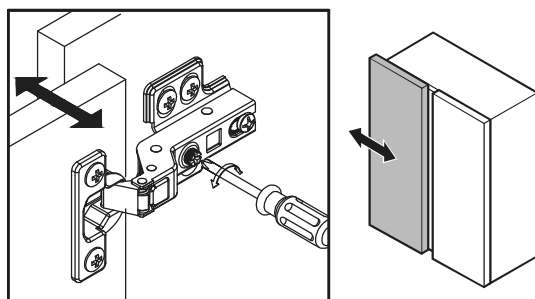

To adjust side ways.



Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

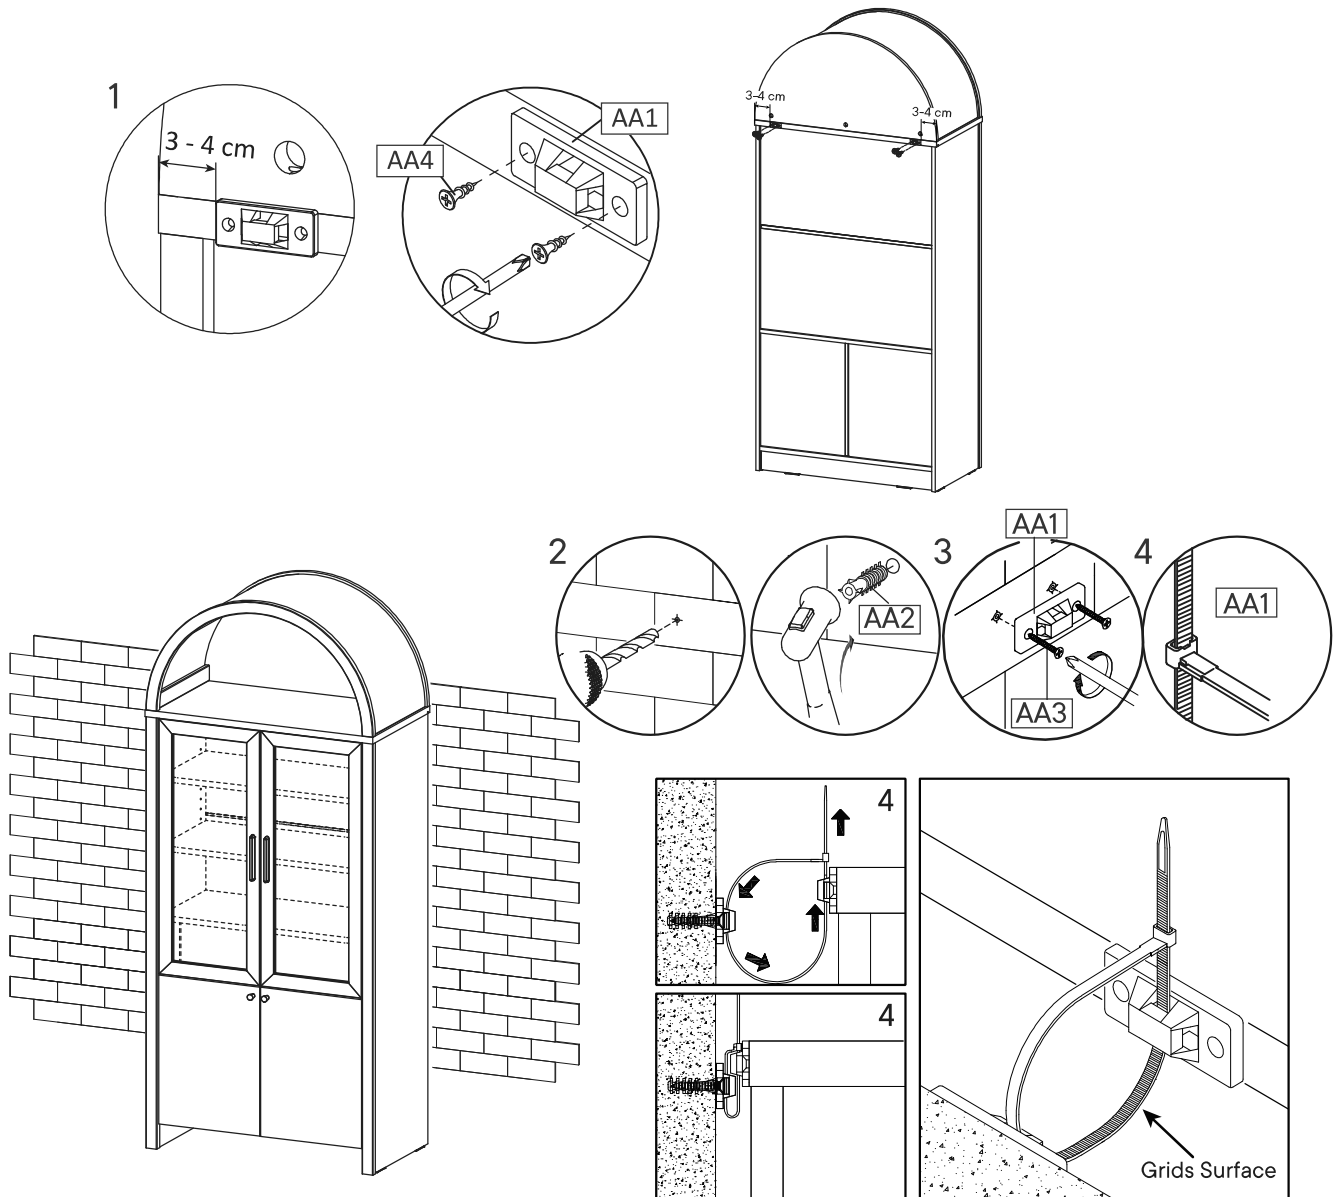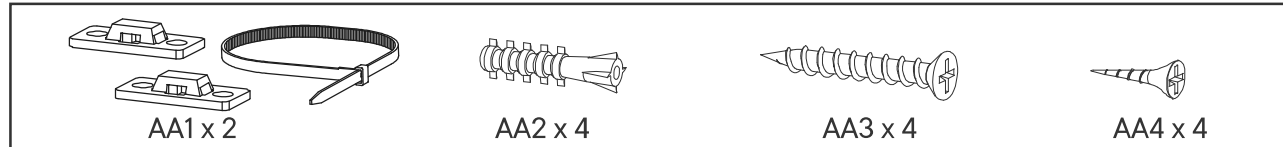

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 3 - 4 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.