
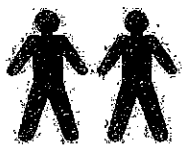


Assembly Instructions

Crawford Armchair

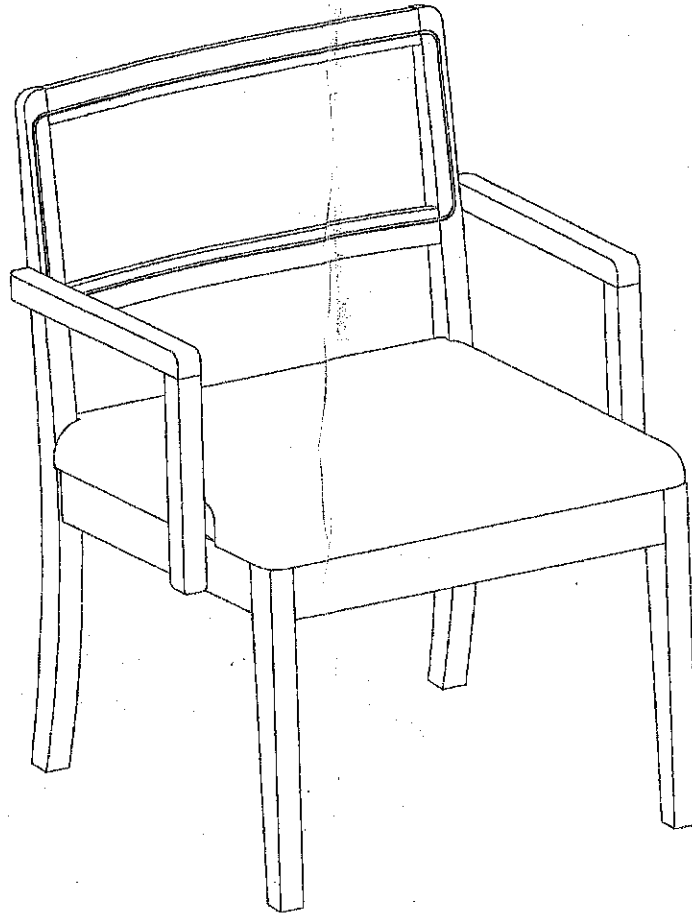


This chair assembles much easier with two people.
You'll also need a screwdriver and maybe a snack.


creativeco-op

DESIGNED BY US • INSPIRED BY YOU

Crawford Armchair

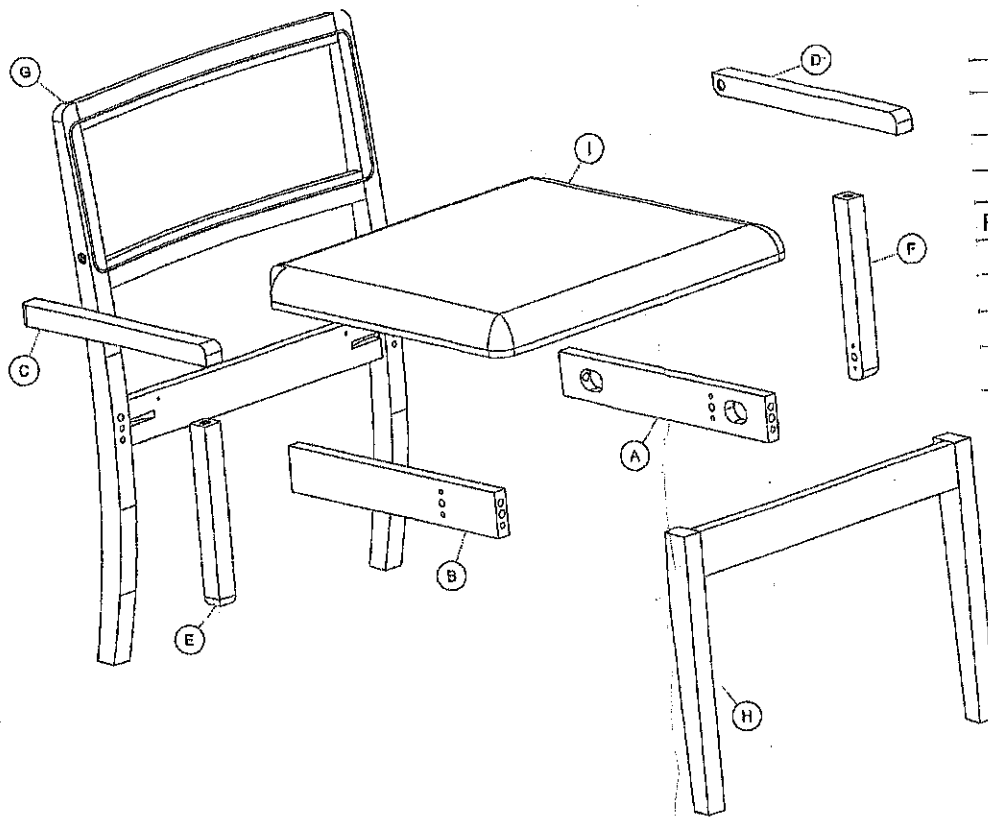

Part Name	Code Name
LEFT SIDE	A
RIGHT SIDE	B
RIGHT ARM	C
LEFT ARM	D
RIGHT ARM SUPPORT	E
LEFT ARM SUPPORT	F
BACKREST	G
FRONT	H
SEAT	I

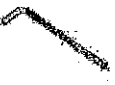Part Name	Code Name	QTY	Retro 8-Bit Image
Barrel Nut	N1	4	
Half Moon Washer	W1	4	
Large Wooden Peg	P1	2	
Medium Wooden Peg	P2	4	
Small Wooden Peg	P3	4	
Hex Bolt	B1	4	
Headless Armrest Bolt	B2	4	
Long Screw for Armrest	S1	4	
Short Screw for Seat	S2	12	
L-Bracket for Seat	L1	4	
Hex Tool (with special tip)	T1	1	

I know what you're thinking. Why does there have to be so many different screws and pegs?

Well have you ever assembled some furniture, got all the way to the end, only to find out you put some piece in upside-down?

Well that's not possible with this chair because of all these different pieces. The pieces can only go together one way! So in the end you can sit with the confidence that you did it right.

Pro Tip:


Take a minute to unpack and organize the pieces. Sort them all out like Danish building blocks. Oh, and look at the drawings carefully during assembly.

Crawford Armchair

Step 1

Let's start small. Insert the Barrel Nuts (N1) into the Backrest (G) and Front (H).

Feeling confident? Good.

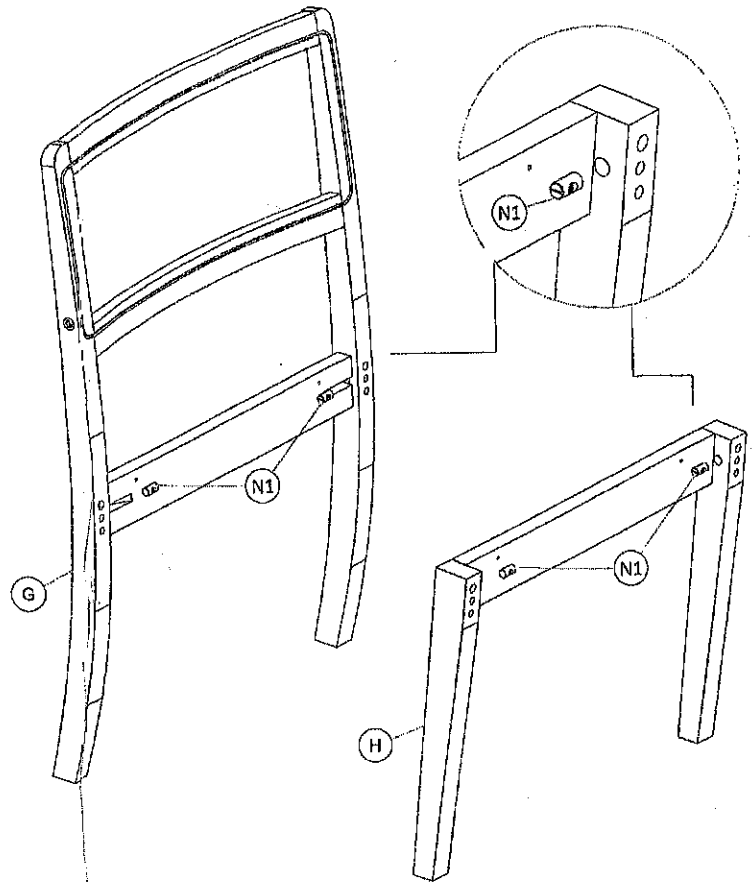

Step 2


Next attach the Hex Bolt (B1) to the Barrel Nuts you just put in. Don't tighten them all the way, half is enough.

Then insert Medium Wooden Pegs (P2) and Small Wooden Pegs (P3) into the Sides (A) and (B).

Now attach Sides (A) and (B) to the Backrest (G) and Front (H).

And then insert the Half Moon Washers (W1) under the head of the Hex Bolts (B1) and tighten the Hex Bolts (B1) fully.

If you're having trouble, make sure the pieces are aligned the same as in this drawing and try tightening with the special tip of the Hex Tool (T1).

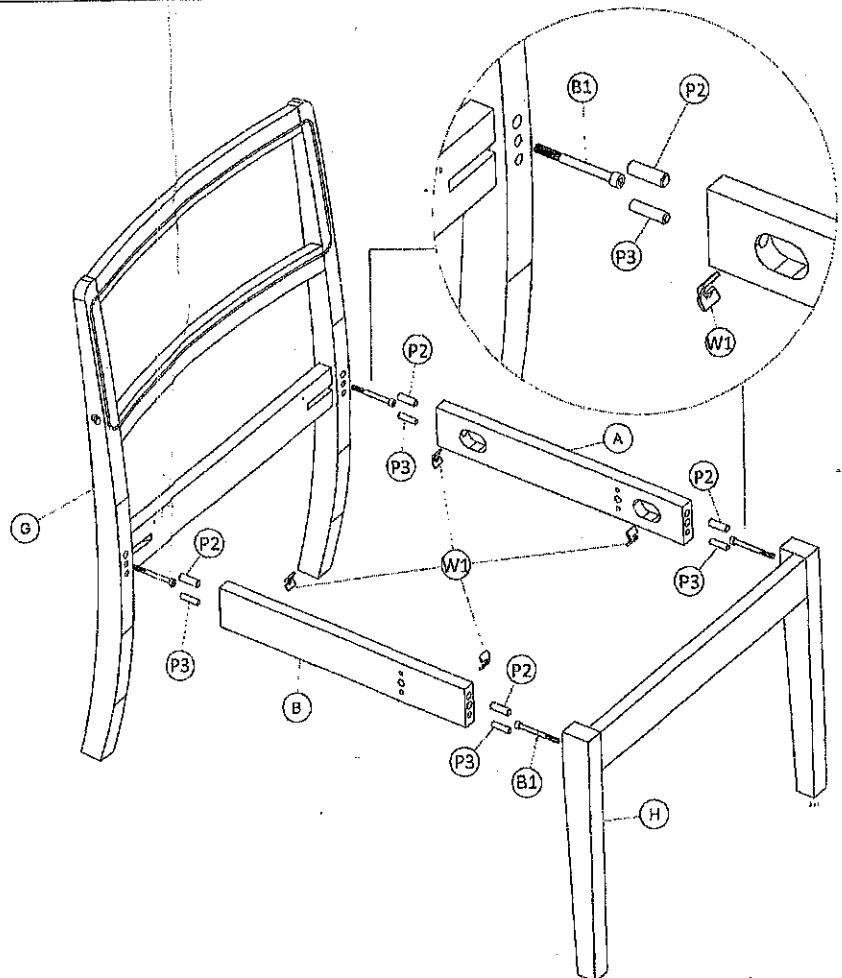



Step 3

Ok, this next part seems a little weird, but it's also kinda fun.

Connect Right Arm (C) to Right Arm Support (E) using Headless Armrest Bolt (B2).

Then insert another Headless Armrest Bolt (B2) into Backrest (G), then attach the armrest by spinning in around on the bolt.


Kinda fun? Well do it again for the left armrest anyway, we're almost done.

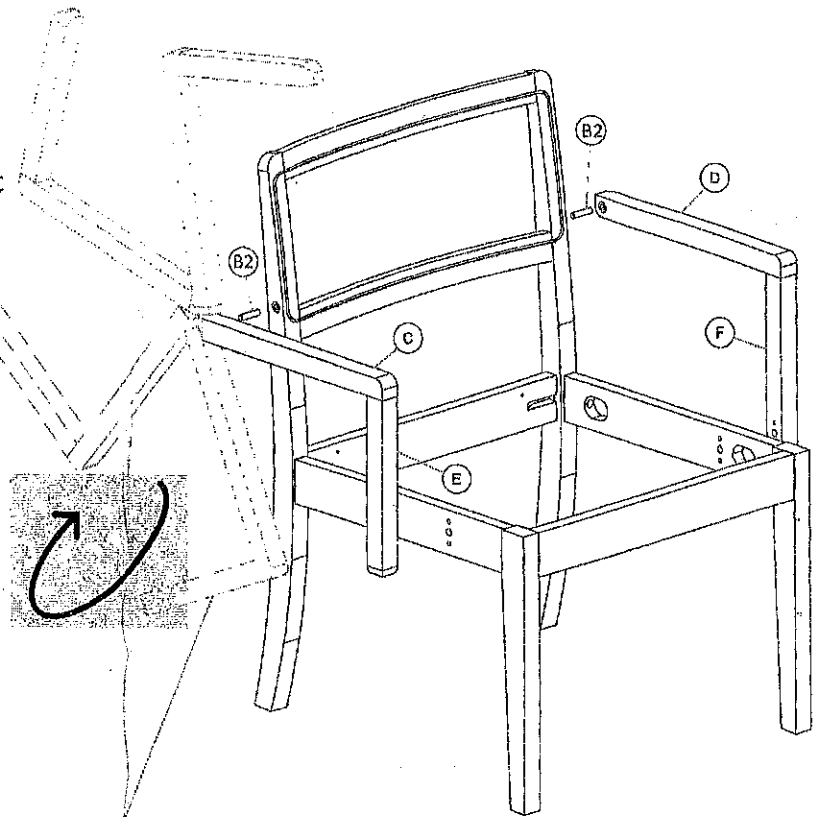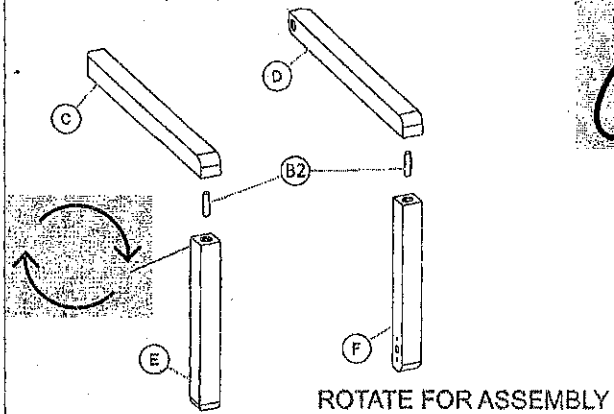**Step 4**

Slide the Large Wooden Peg (P1) through the Sides (A & B) into the Armrest Supports (E & F).

Then secure the whole region by inserting the Large Screws (S1).

If you get tired, don't give up, just eat that snack we talked about and give it another go.

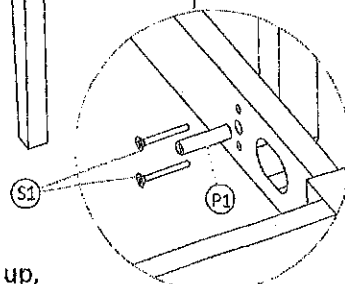**Step 5**

So close to the end. All you need to do is attach L-Brackets (L1) to the Backrest (G) and Front (H) using Small Screws (S2).

And finally, attach L-Brackets (L1) to the Seat (I) using Small Screws (S2).

That's it. We're done. Take a moment to sit, crack open your favorite beverage, and enjoy the feeling of victory.

