


ASSEMBLY INSTRUCTIONS

EEI-7234

VO.05.12.24

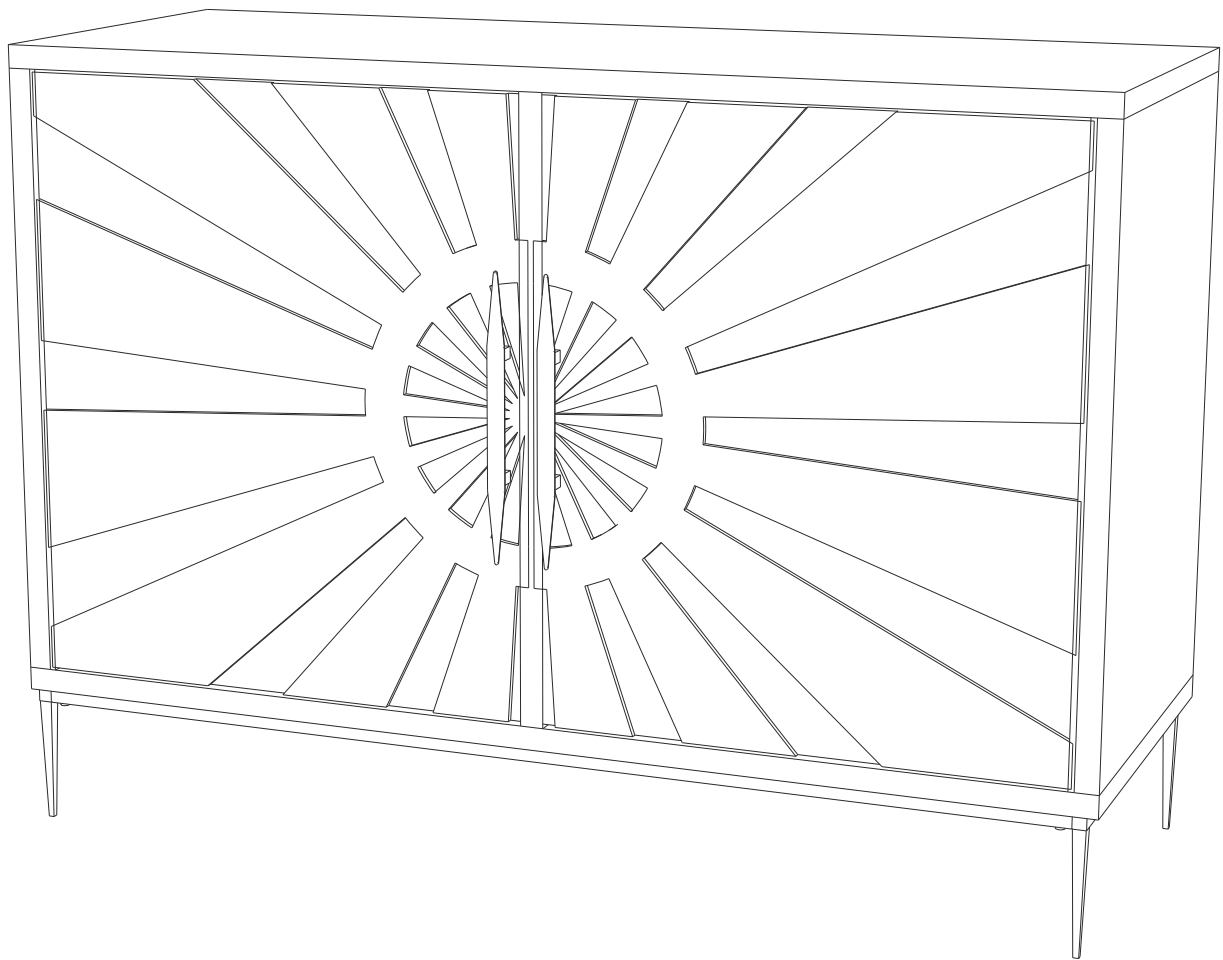

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components :

1	Bottom Panel	x1
2	Left Side Panel	x1
3	Center Panel	x1
4	Right Side Panel	x1
5	Top Panel	x1
6	Inner Shelf	x2
7	Back Panel	x2
8	Left Door Panel	x1
9	Right Door Panel	x1
10	Left/Right Base	x2
11	Front/Back Base	x2

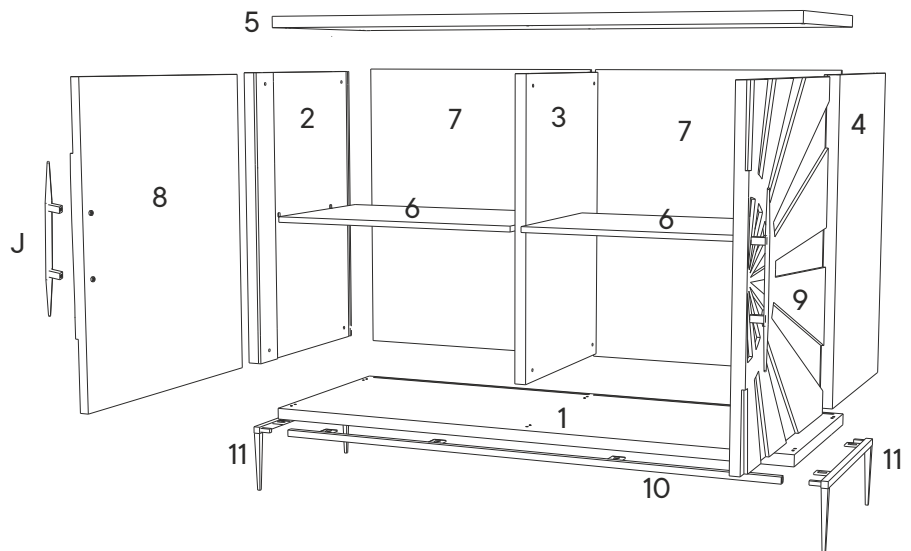


Provided hardware :

A		Allen Key	x1
B		Allen Bolt 6 x 12 mm	x4
C		Allen Bolt 6 x 20 mm	x12
D		Cam Bolt	x12
E		Wood Dowel M8 x 30mm	x12
F		Cam Lock	x12
G		Shelf Pin	x8
H		Hinge 15°	x4
I		Hinge Screw	x24
J		Handle	x2
K		Allen Bolt 6 x 30 mm	x4
L		Adjustable Leveler (Prefix)	x4

What you need:



Phillips



Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com



Step 1

HARDWARE

- | | | |
|----------|----------------------|----|
| A | Allen Key | x1 |
| B | Allen Bolt 6 x 12 mm | x4 |

COMPONENTS

- | | | |
|-----------|-----------------|----|
| 10 | Left/Right Base | x2 |
| 11 | Front/Back Base | x2 |

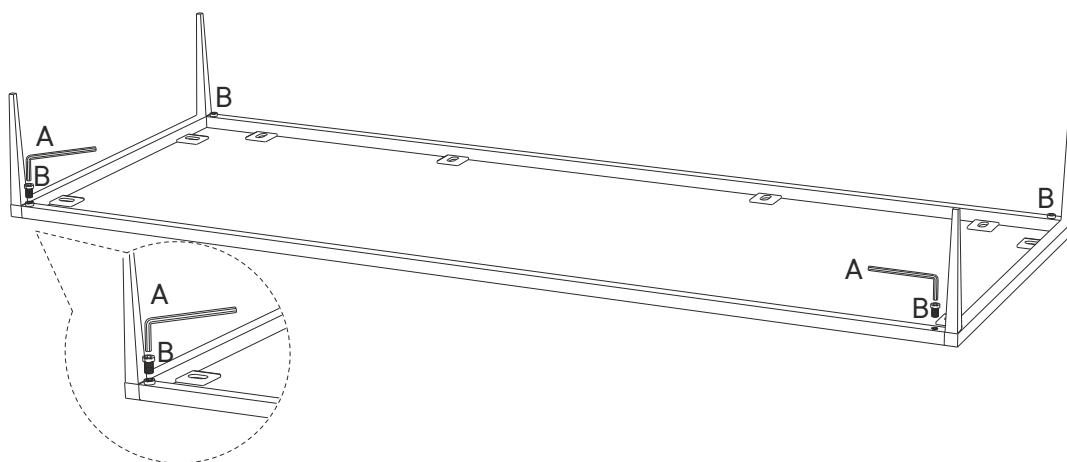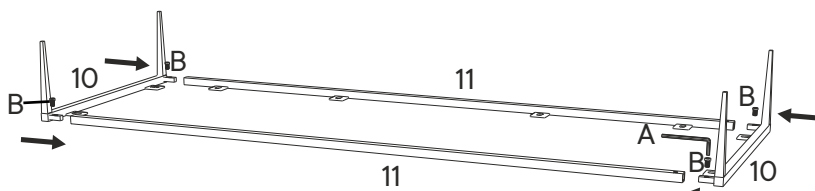


Step 2

HARDWARE

- | | | |
|----------|----------------------|-----|
| A | Allen Key | x1 |
| C | Allen Bolt 6 x 20 mm | x12 |

COMPONENTS

- | | | |
|----------|--------------|----|
| 1 | Bottom Panel | x1 |
|----------|--------------|----|

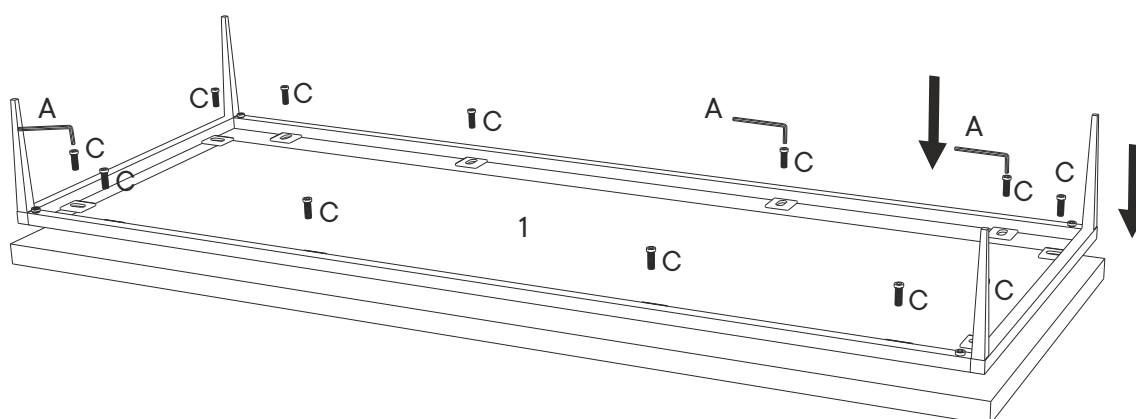



Step 3

HARDWARE

- | | | |
|----------|----------------------|----|
| D | Cam Bolt | x6 |
| E | Wood Dowel M8 x 30mm | x6 |

COMPONENTS

- | | | |
|----------|--------------|----|
| 2 | Left Panel | x1 |
| 3 | Center Panel | x1 |
| 4 | Right Panel | x1 |

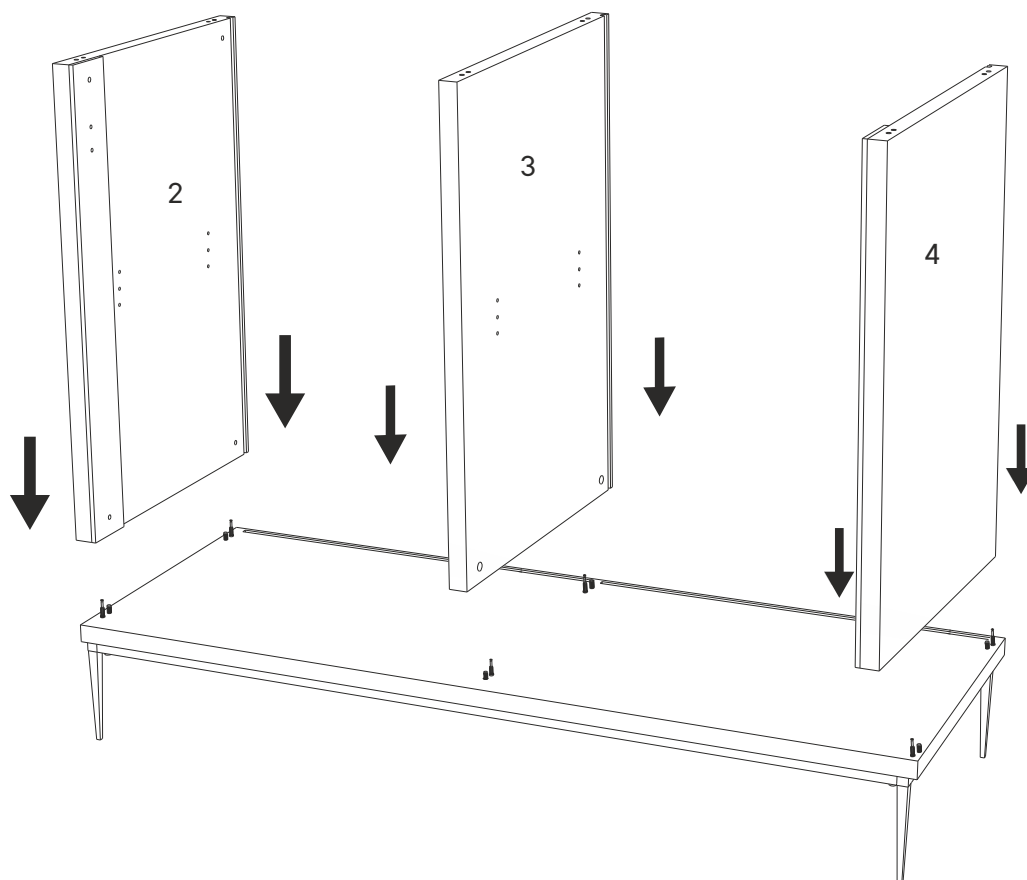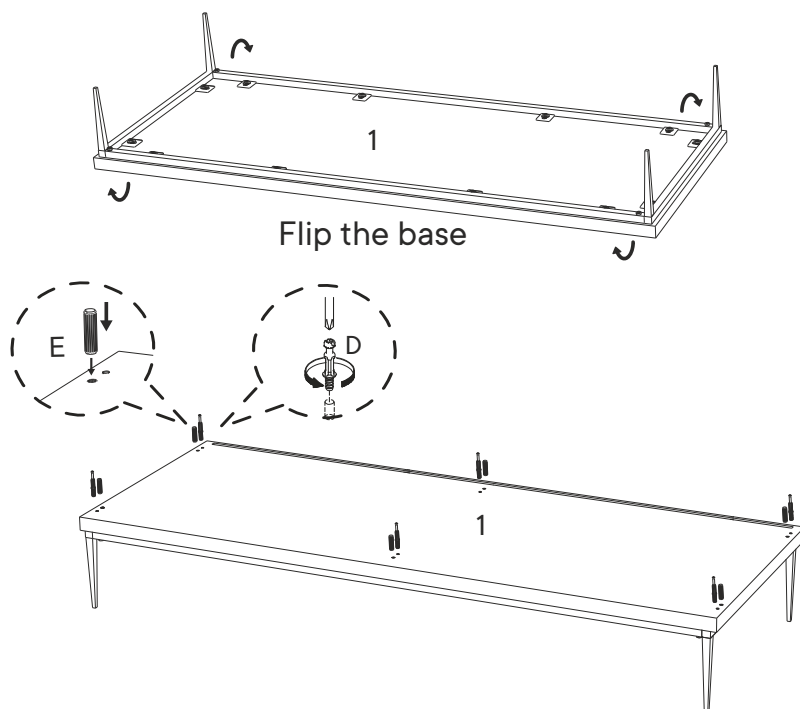


Step 4

HARDWARE

- | | | |
|----------|------------|----|
| E | Wood Dowel | x6 |
| F | Cam Lock | x6 |

COMPONENTS

- | | | |
|----------|------------|----|
| 7 | Back Panel | x2 |
|----------|------------|----|

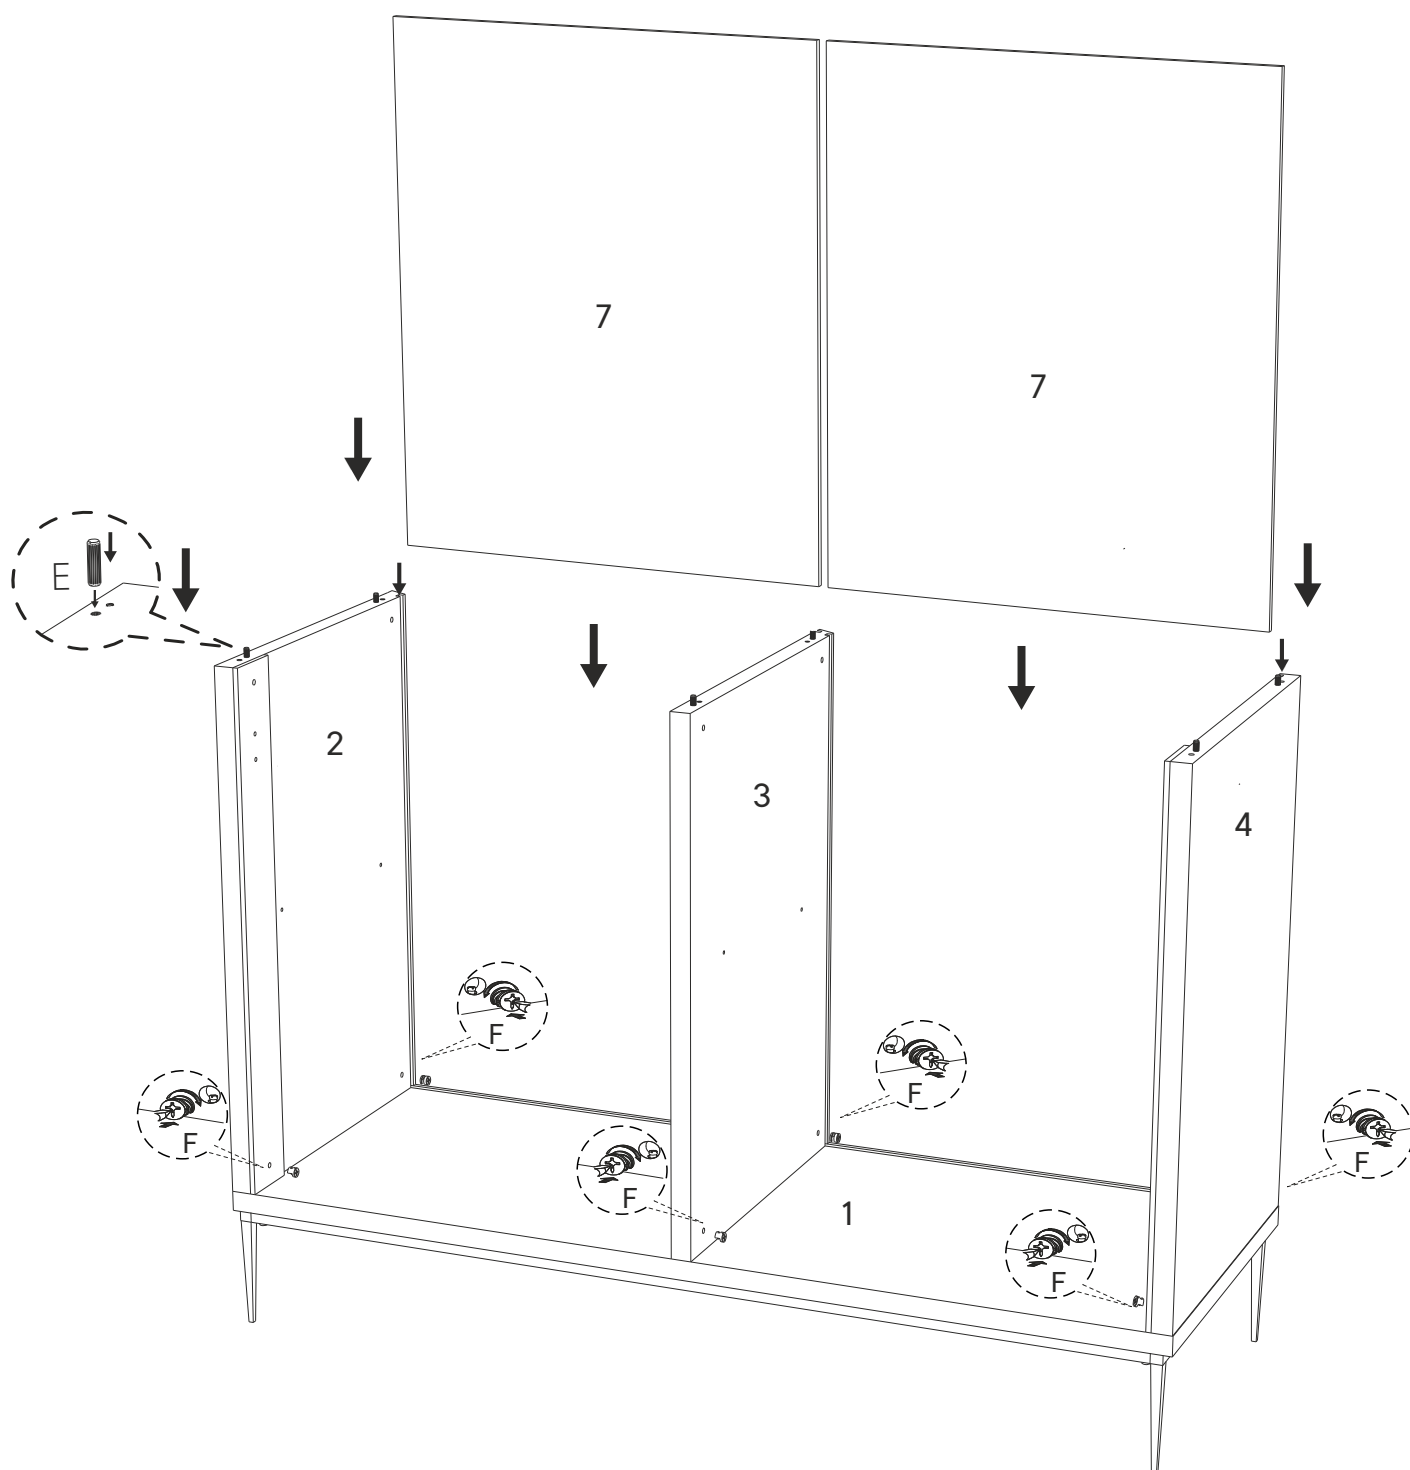





Step 5

HARDWARE

D	Cam Bolt	x6
F	Cam Lock	x6

COMPONENTS

5	Top Panel	x1
----------	-----------	----

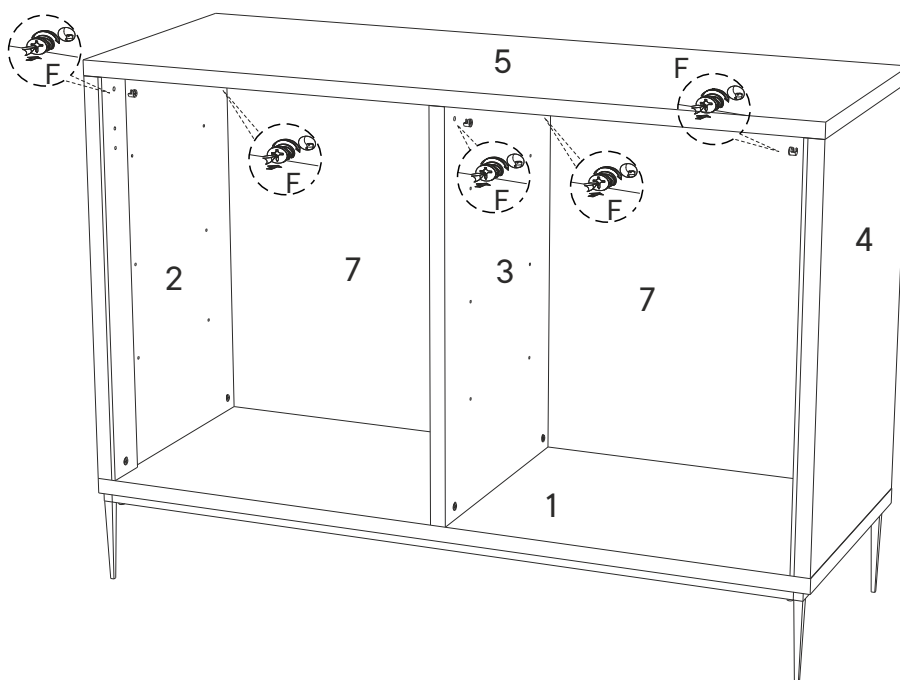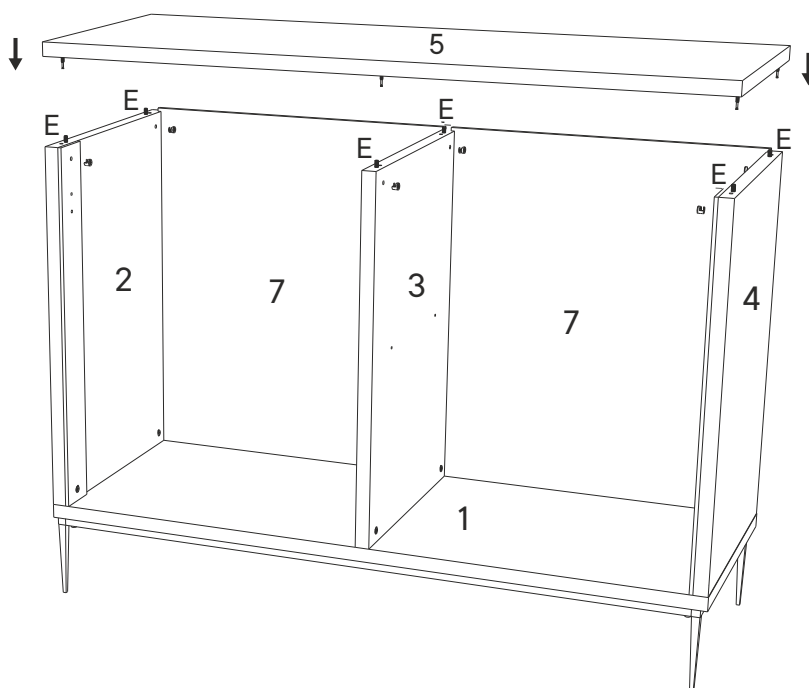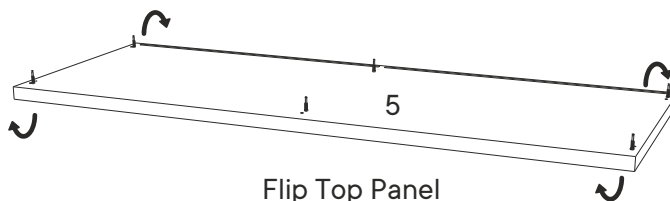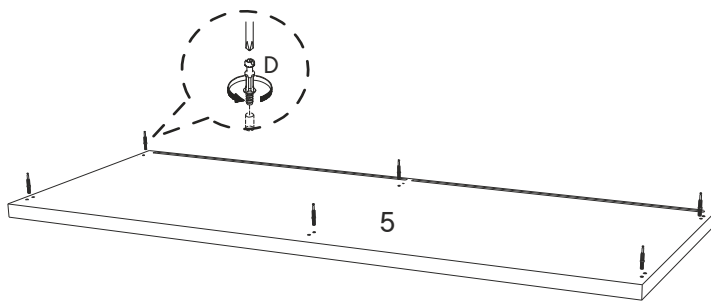


Step 6

HARDWARE

H	Hinge 15°	x4
I	Hinge Screw	x8

COMPONENTS

8	Left Door Panel	x1
9	Right Door Panel	x1

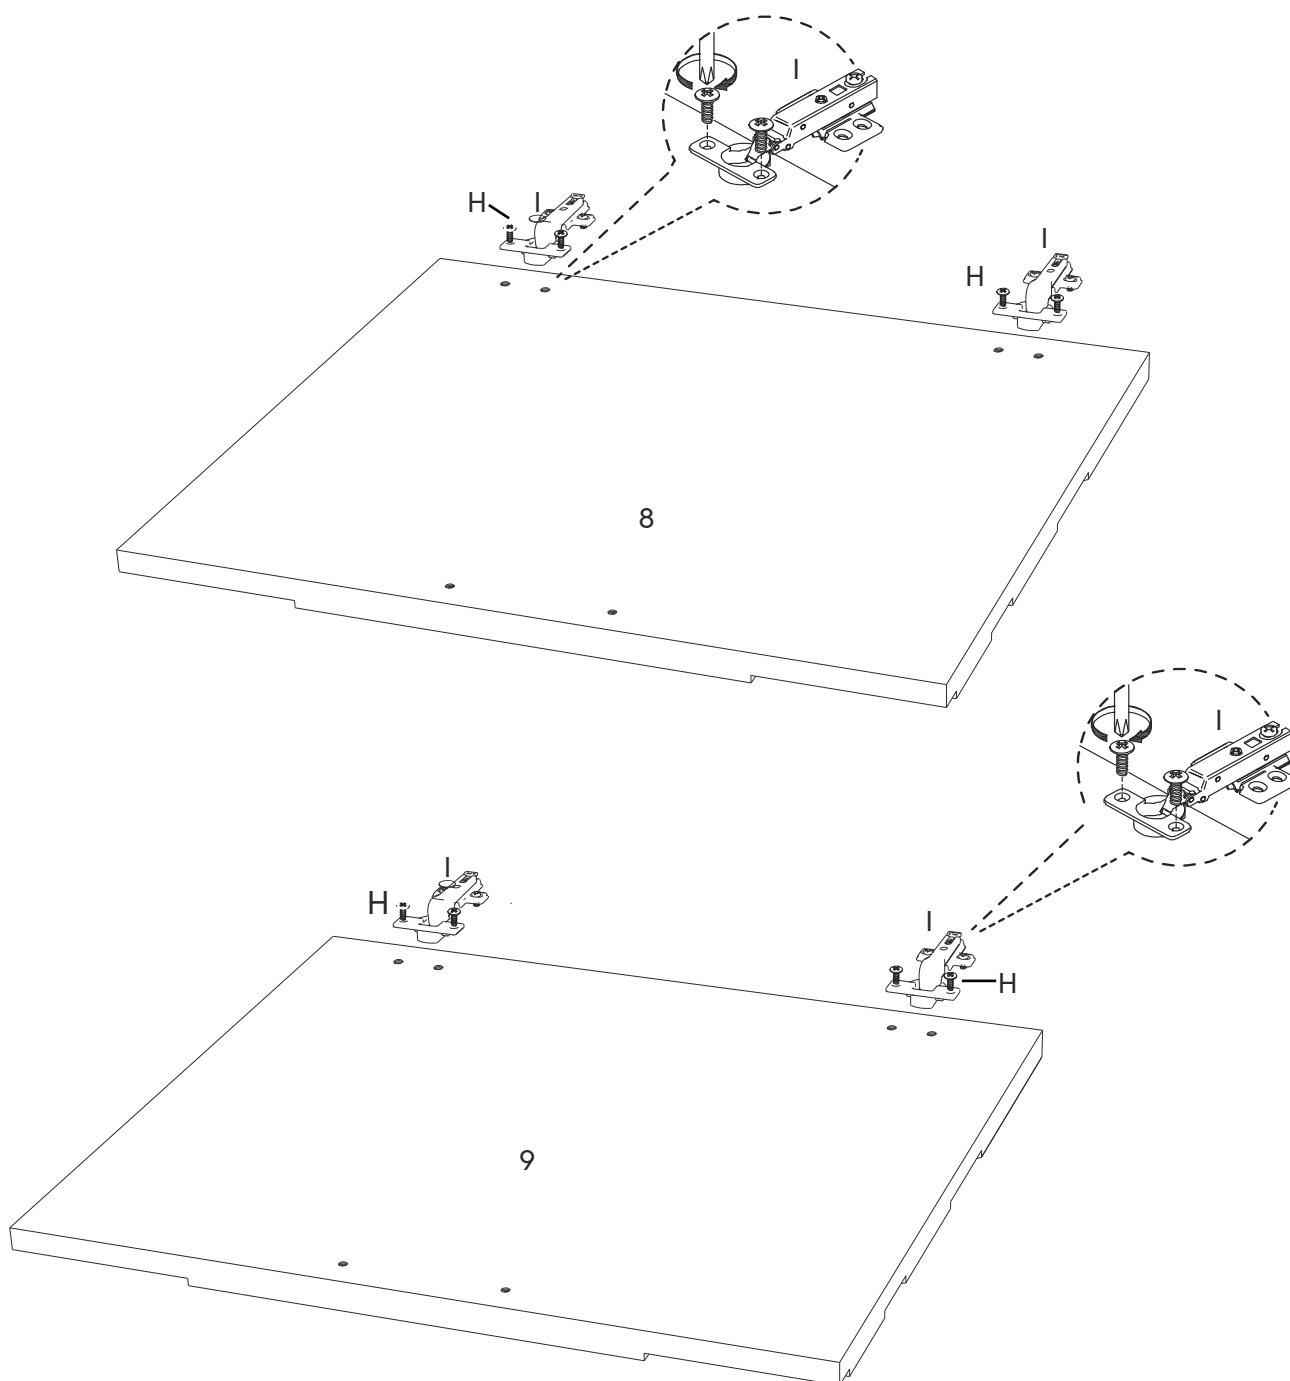




Step 7

HARDWARE

A	Allen Key	x1
J	Handle	x2
K	Allen Bolt 6 x 30 mm	x4
I	Hinge Screw	x16

COMPONENTS

8	Left Door Panel	x1
9	Right Door Panel	x1

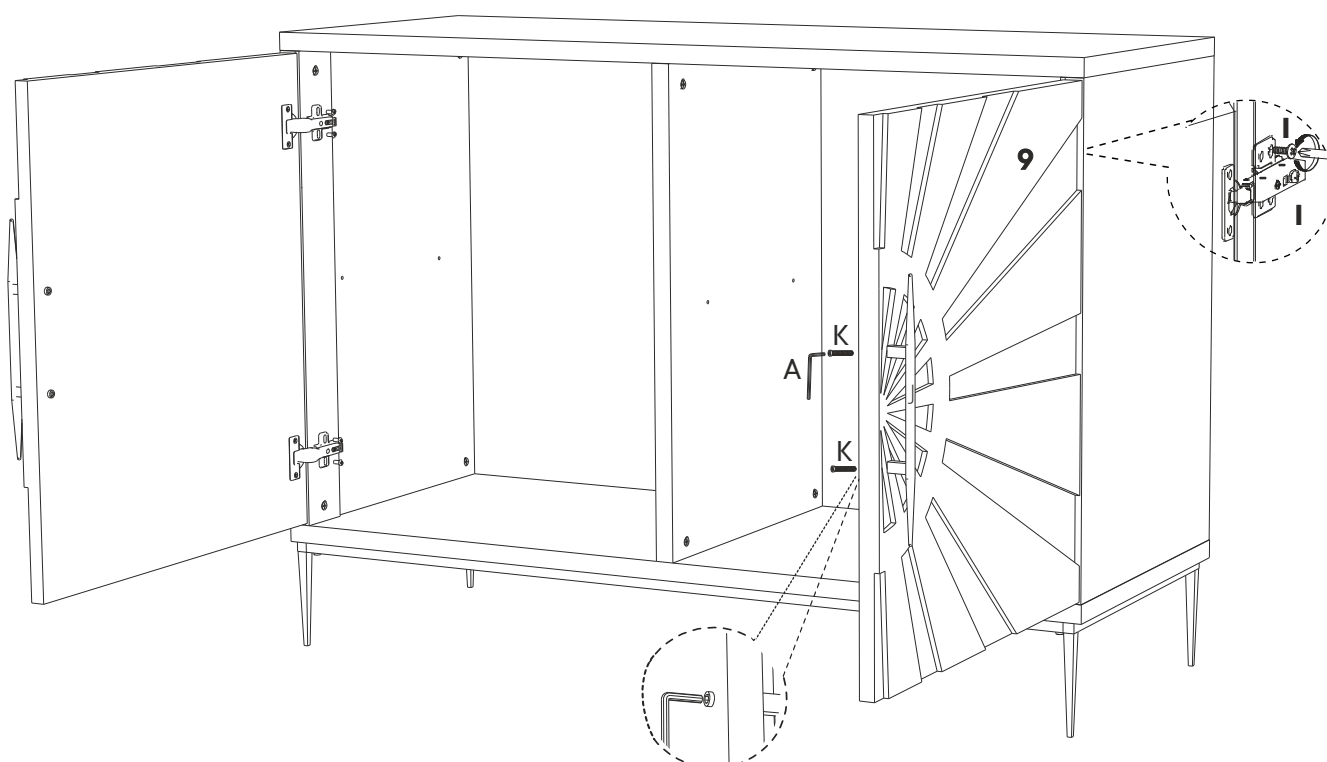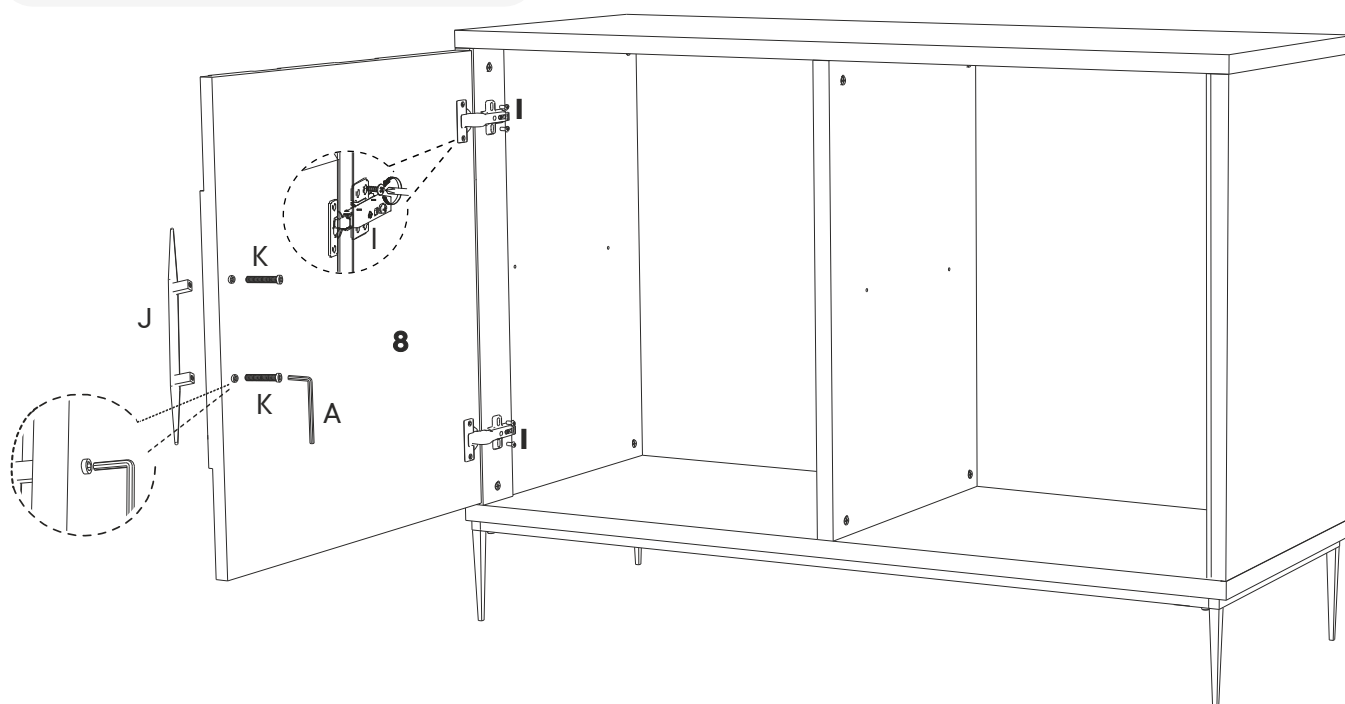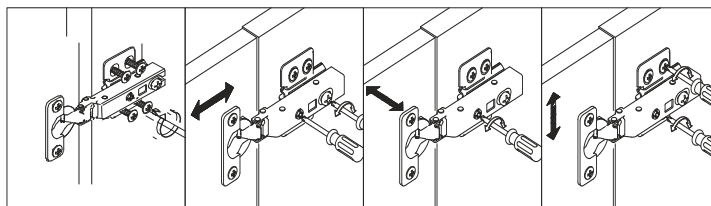




Step 8

HARDWARE

- G** Shelf Pin x8
- L** Adjustable Leveler (Prefix) x4

COMPONENTS

- 6** Inner Shelf x2

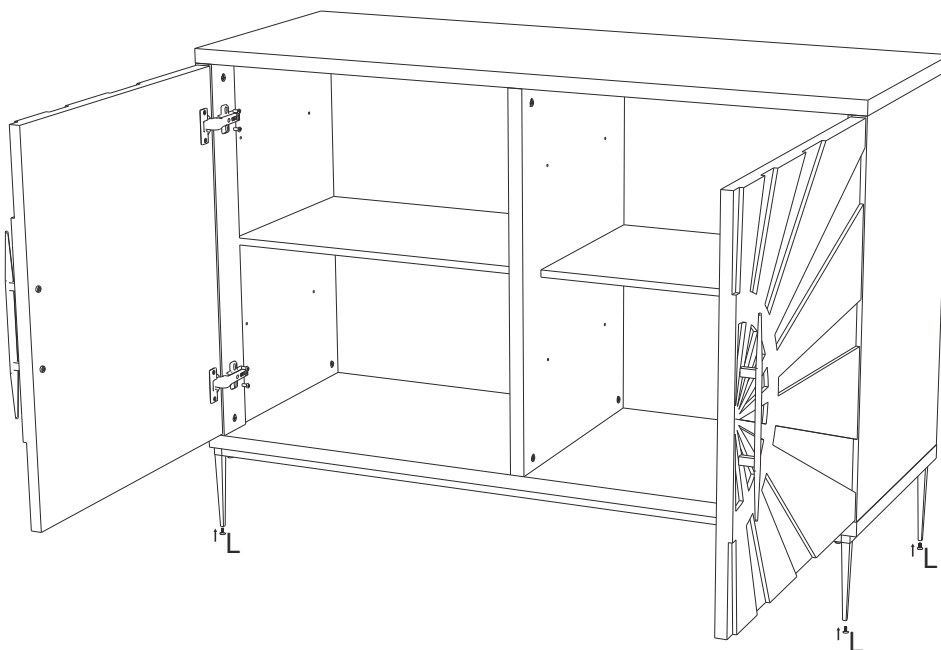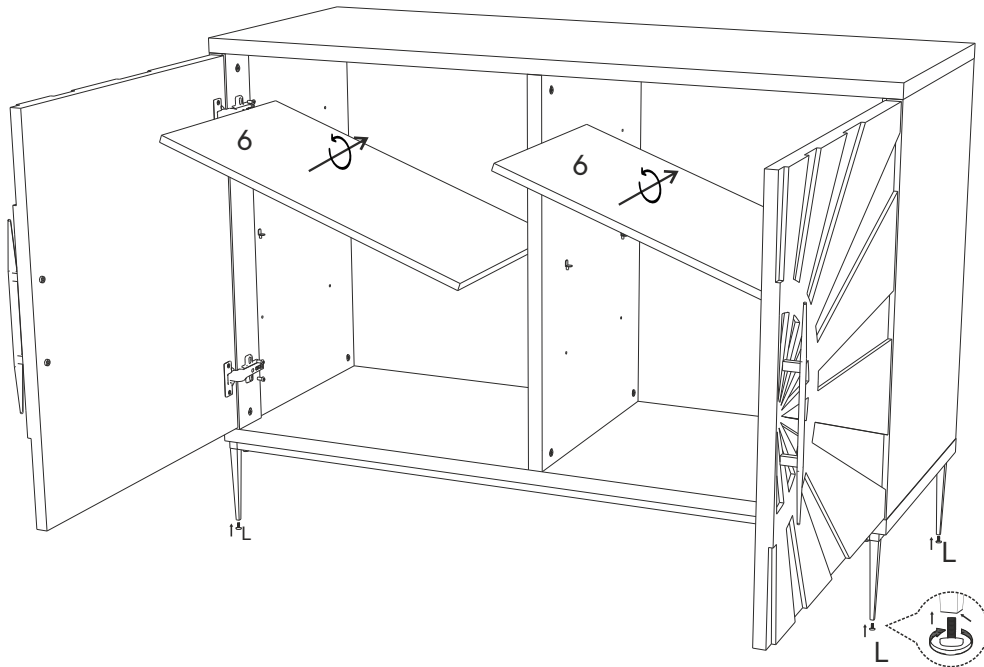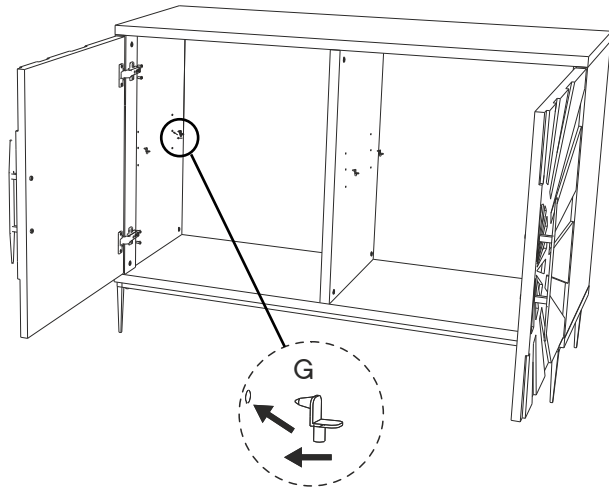

Great job!

Your new Cabinet is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner.

Never use harsh chemicals,
as they could damage the finish
or integrity of the item.

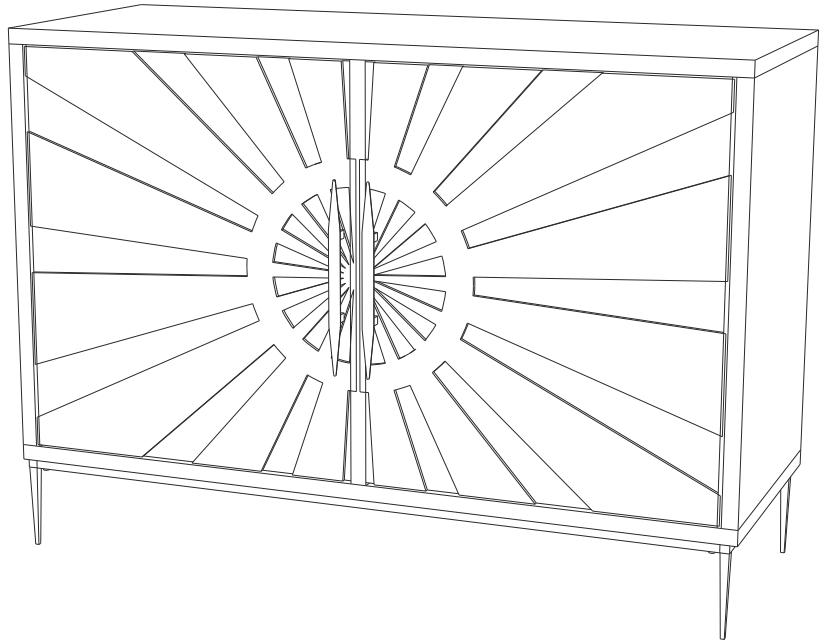

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.