


ASSEMBLY INSTRUCTIONS

EEI-6852

V1.10.30.24

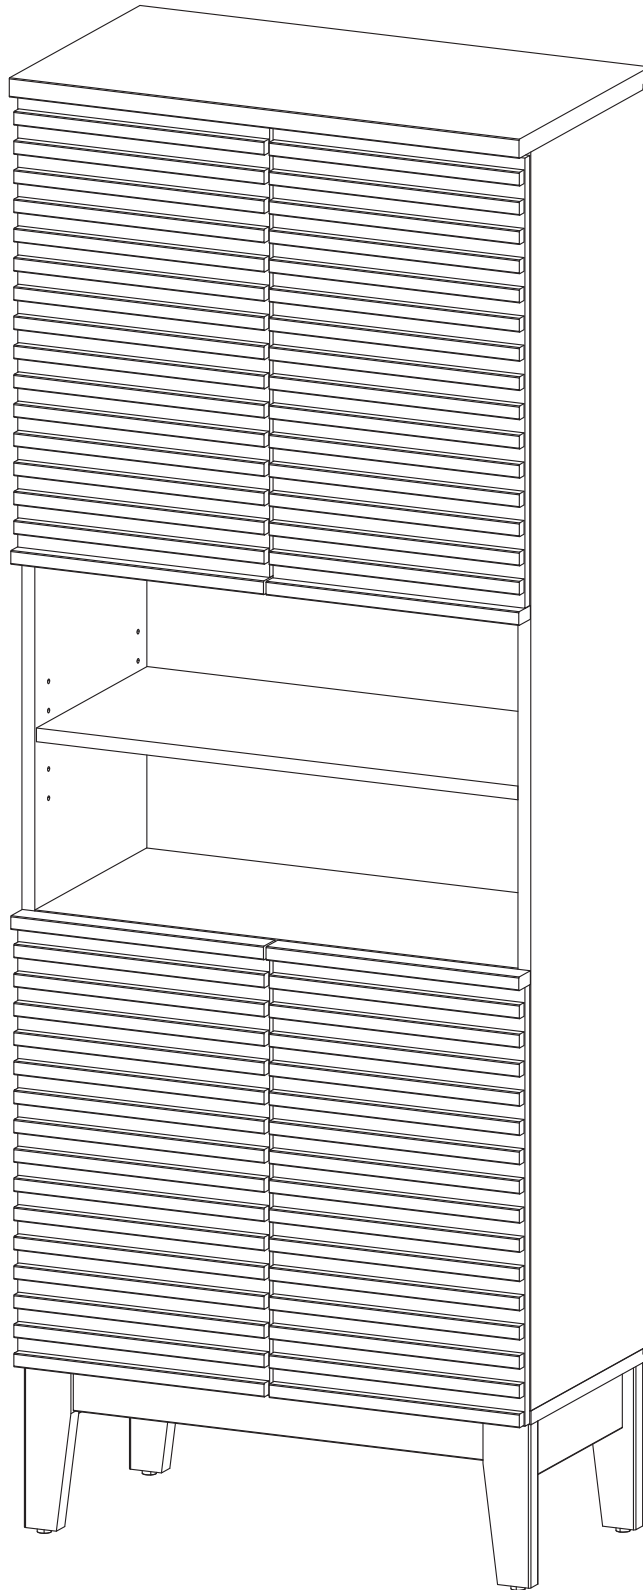

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1	11	Support Board	x1
2	Bottom Board	x1	12	Back Board 1	x2
3	Side Board Left	x1	13	Back Board 2	x2
4	Side Board Right	x1	14	Back Board 3	x2
5	Adjustable Shelf	x5			
6	Fixed Shelf	x2			
7	Assembly Leg	x2			
8	Bottom Skirt	x2			
9	Door 1	x2			
10	Door 2	x2			

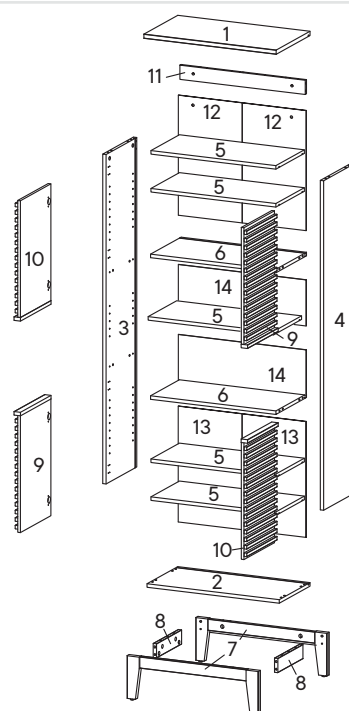

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x27	J		Screw Cap Ø15 mm	x4	HS26A		Hinge	x8
B		Cam Lock Ø15 mm	x24	K		Joining Strip 496 mm	x1	What you need: Phillips Head Screwdriver			
C		Wood Dowel Ø8 x 30 mm	x26	L		Joining Strip 478 mm	x1				
D		Screw M 7 x 50 mm	x4	M		Joining Strip 562 mm	x1				
E		Allen Key	x2	N		Screw 5.5 x 45 mm	x2				
F		Screw M 4.5 x 12.5 mm	x48	O		Ring	x2				
G		Shelf Pin	x20	P		Wall Plug	x2				
H		Wedge	x20	Q		Wood Dowel Ø6 x 30 mm	x4				
I		Screw M 3.5 x 15.5 mm	x20	R		Cam Lock Ø12 mm	x3				

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

A	Cam Bolt Ø6 x 35 mm	x15
C	Wood Dowel Ø8 x 30 mm	x16
Q	Wood Dowel Ø6 x 30 mm	x4

COMPONENTS

1	Top Board	x1
3	Side Board Left	x1
4	Side Board Right	x1
6	Fixed Shelf	x2
11	Support Board	x1

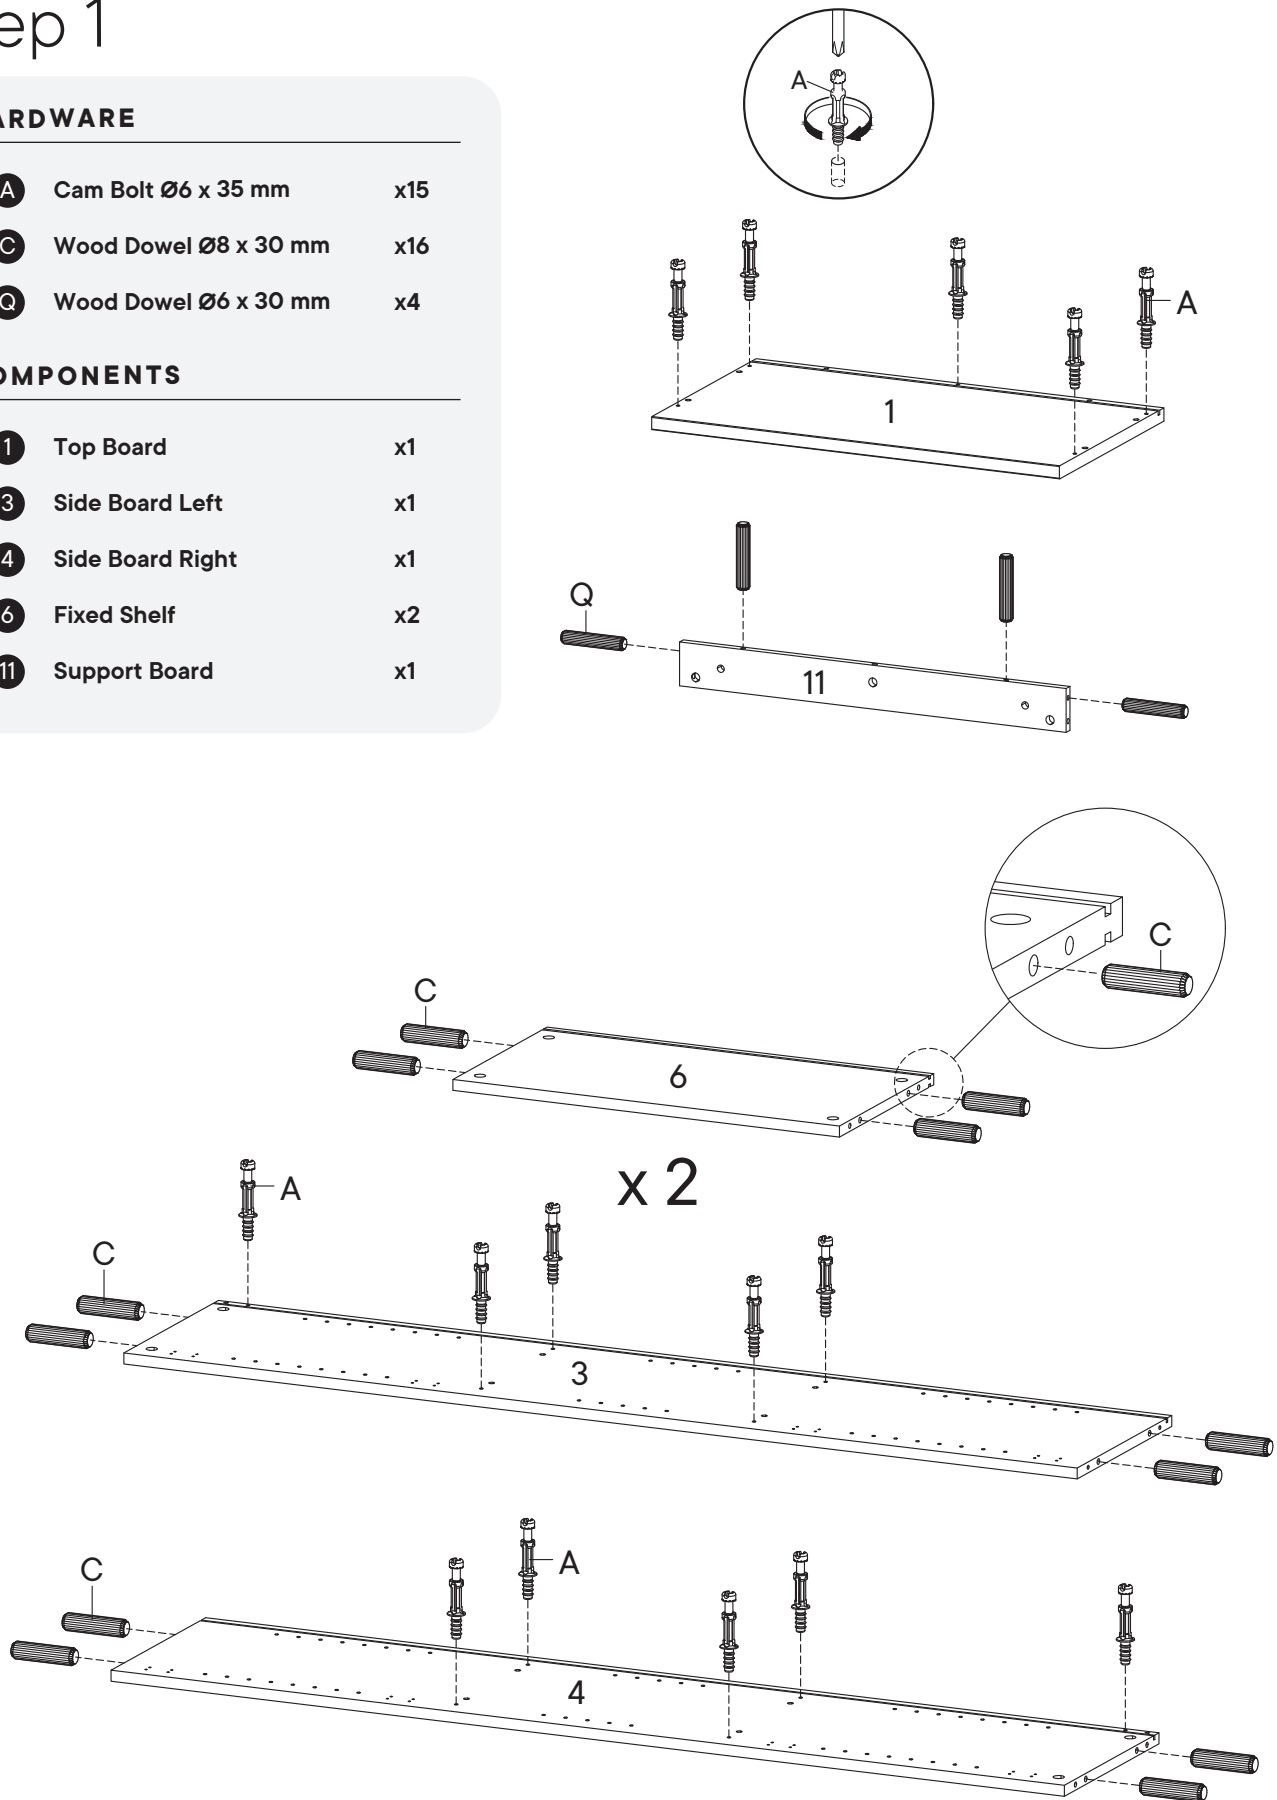


Step 2

HARDWARE

- B** Cam Lock Ø15 mm x4
- R** Cam Lock Ø12 mm x1

COMPONENTS

- 4** Side Board Right x1
- 6** Fixed Shelf x2
- 11** Support Board x1

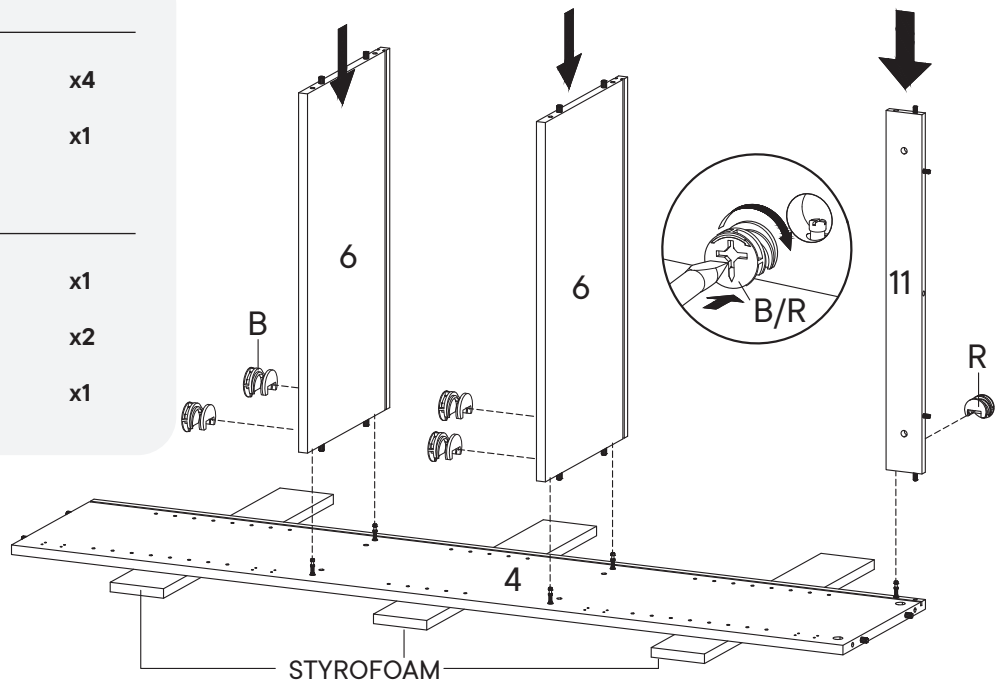


Step 3

HARDWARE

- M** Joining Strip 562 mm x1

COMPONENTS

- 14** Back Board 3 x2

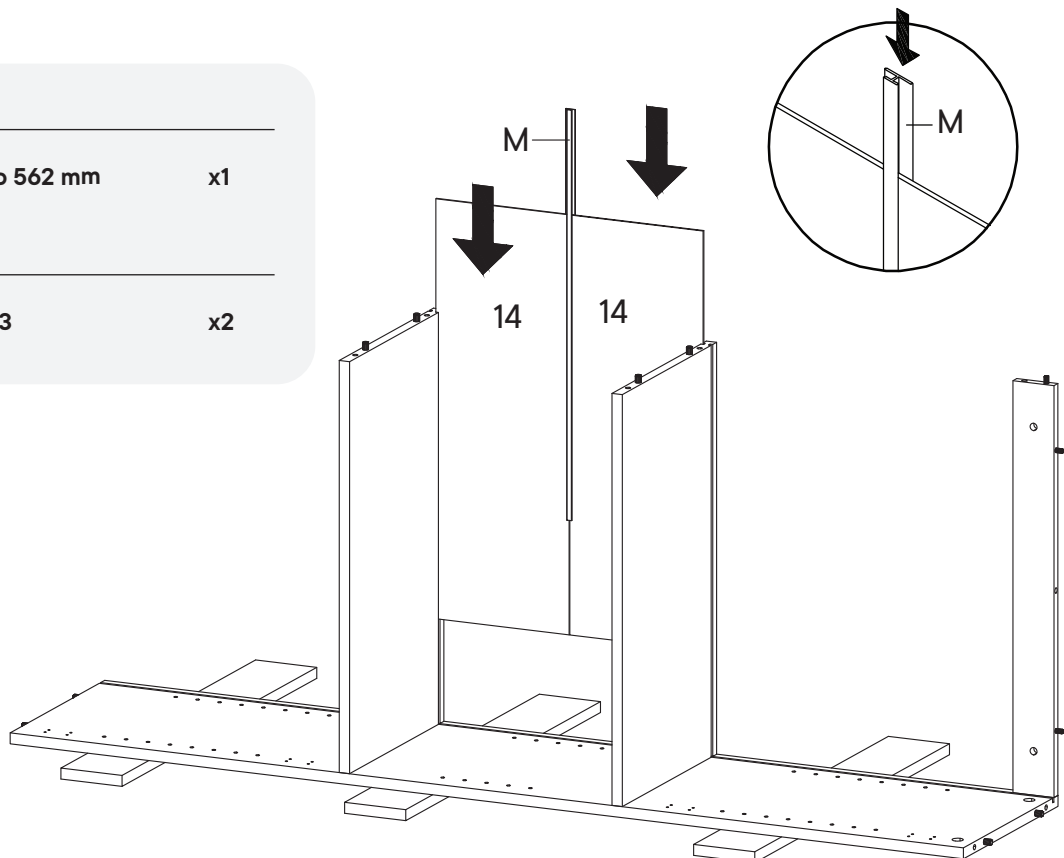


Step 4

HARDWARE

- B** Cam Lock Ø15 mm x4
- R** Cam Lock Ø12 mm x1

COMPONENTS

- 3** Side Board Left x1

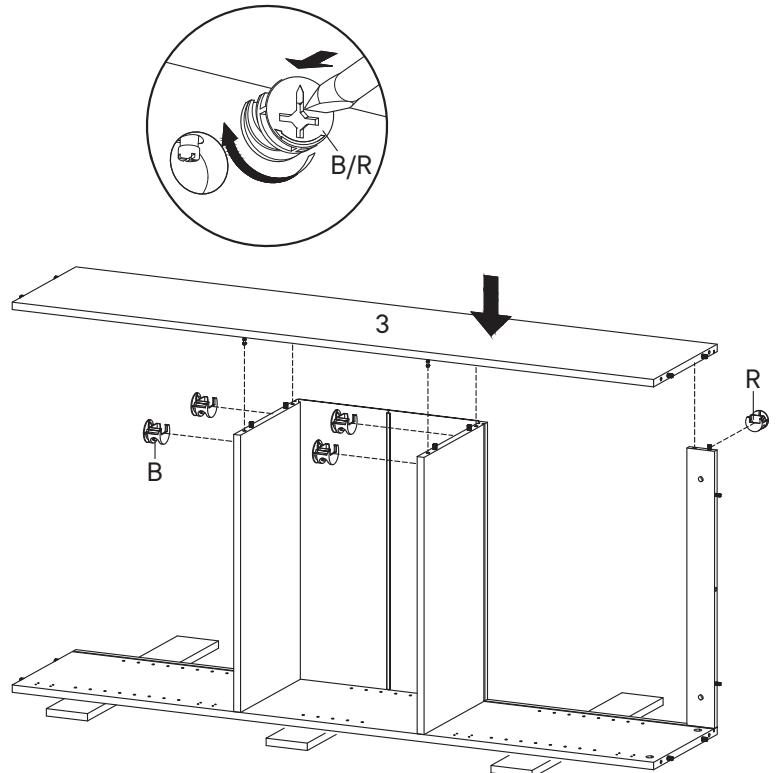



Step 5

HARDWARE

- K** Joining Strip 496 mm x1

COMPONENTS

- 12** Back Board 1 x2

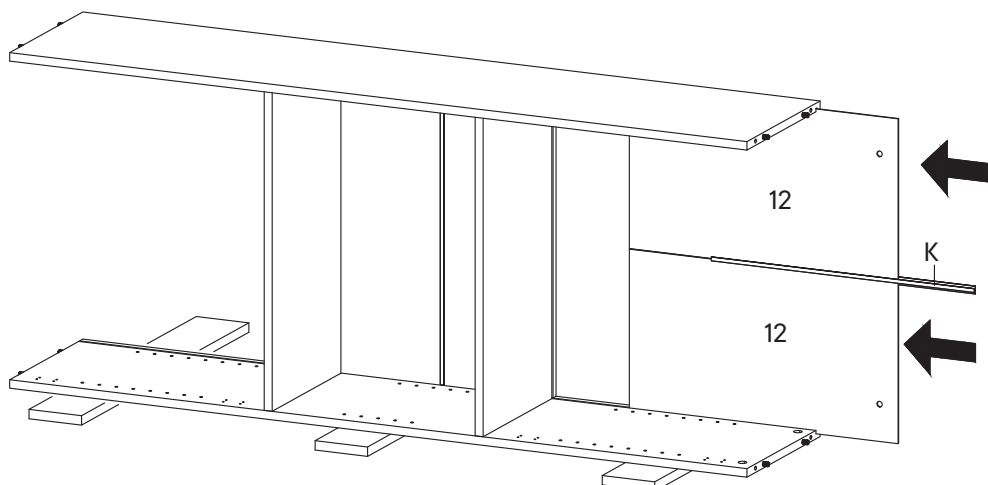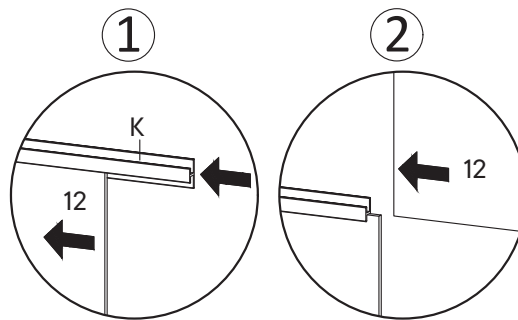



Step 6

HARDWARE

- B** Cam Lock Ø15 mm x4
- J** Screw Cap Ø15 mm x4

COMPONENTS

- 1** Top Board x1

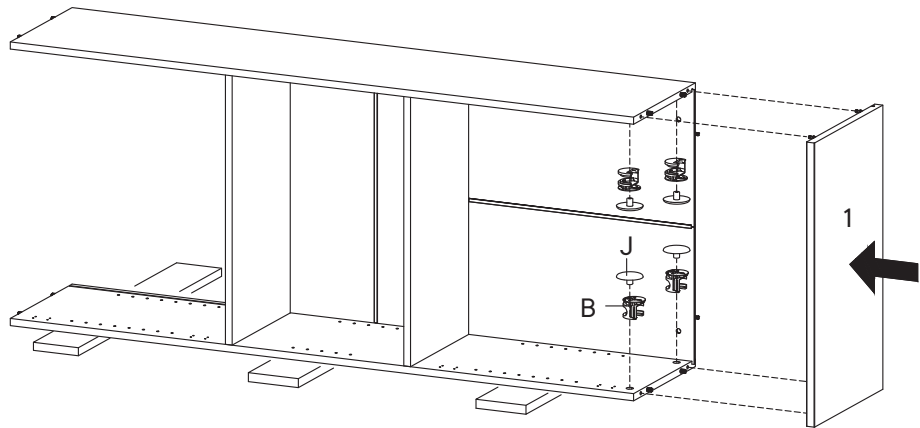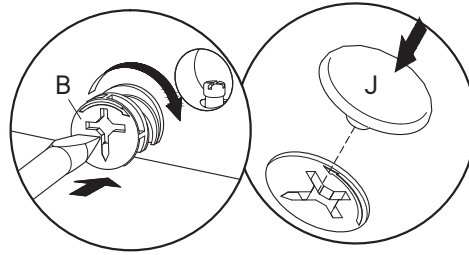



Step 7

HARDWARE

- L** Joining Strip 478 mm x1

COMPONENTS

- 13** Back Board 2 x2

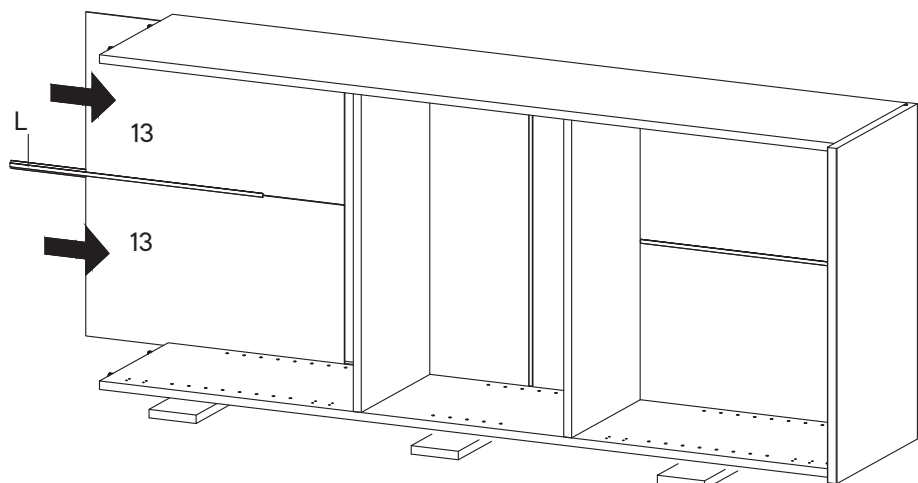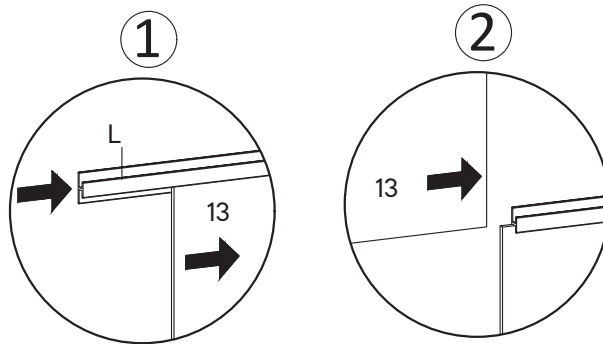


Step 8

HARDWARE

- D** Screw M 7 x 50 mm x4
- E** Allen Key x1

COMPONENTS


- 2** Bottom Board x1

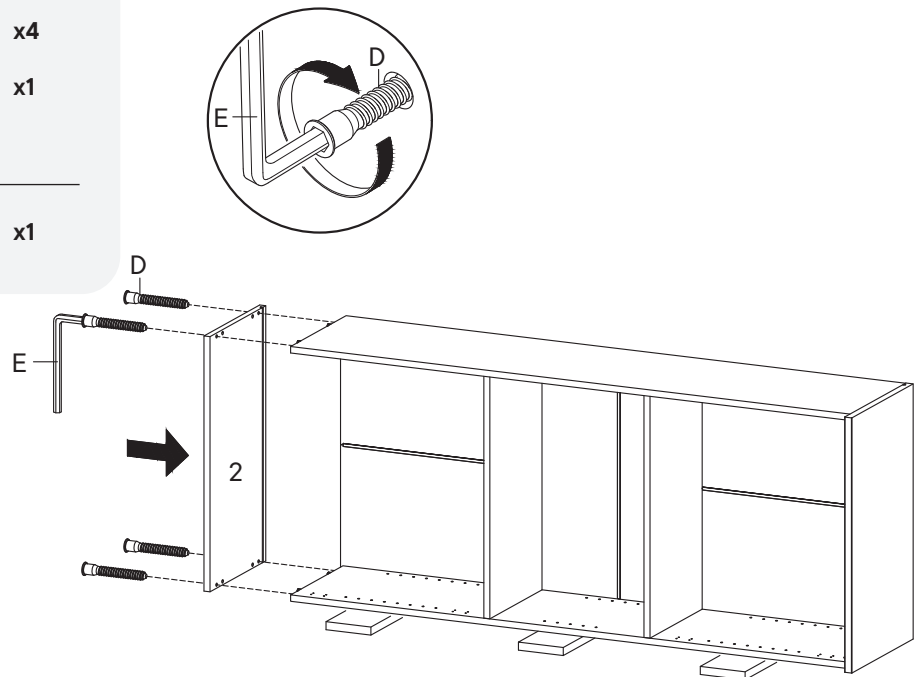

Step 9

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8

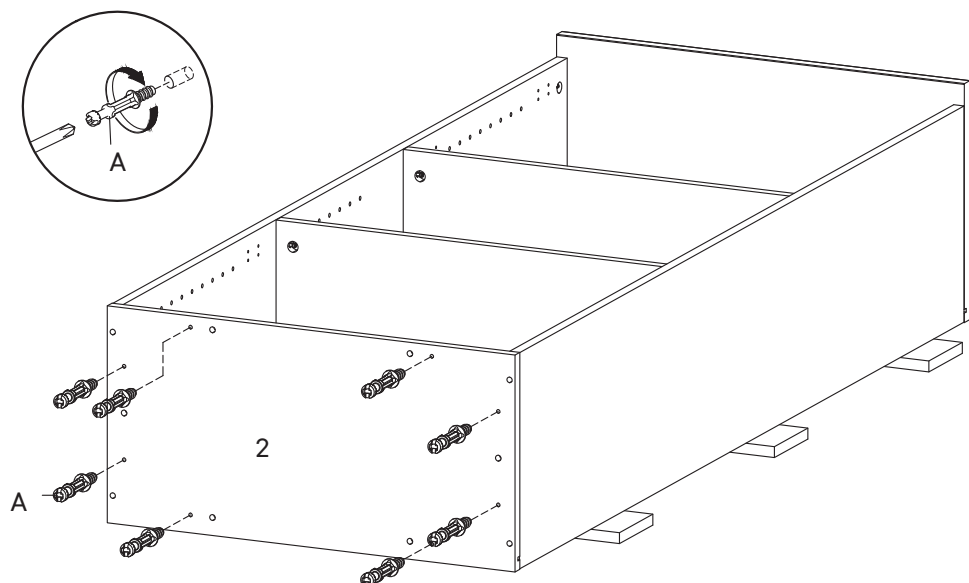


Step 10

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4
- C** Wood Dowel Ø8 x 30 mm x4

COMPONENTS

- 7** Assembly Leg x2
- 8** Bottom Skirt x2

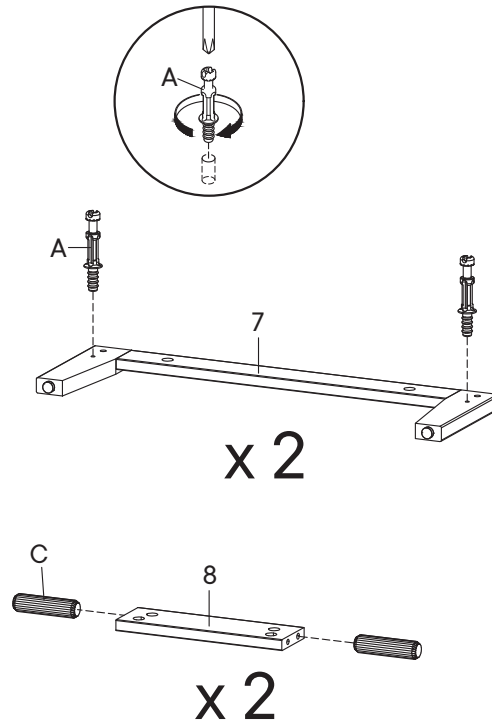



Step 11

HARDWARE

- B** Cam Lock Ø15 mm x4

COMPONENTS


- 7** Assembly Leg x2
- 8** Bottom Skirt x2

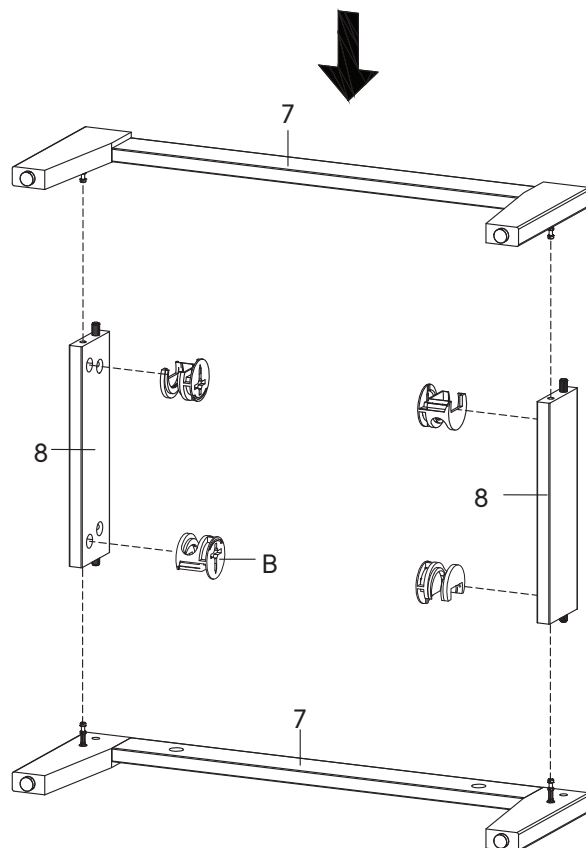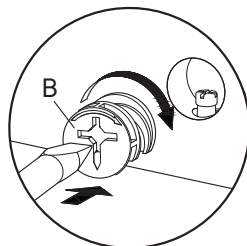

Step 12

HARDWARE


C Wood Dowel Ø8 x 30 mm x6

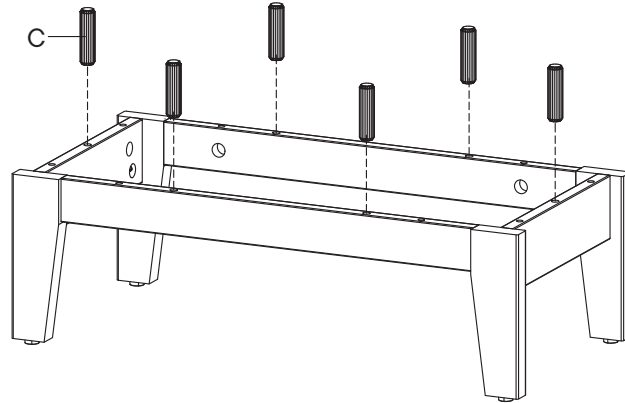

Step 13

HARDWARE




B Cam Lock Ø15 mm x8

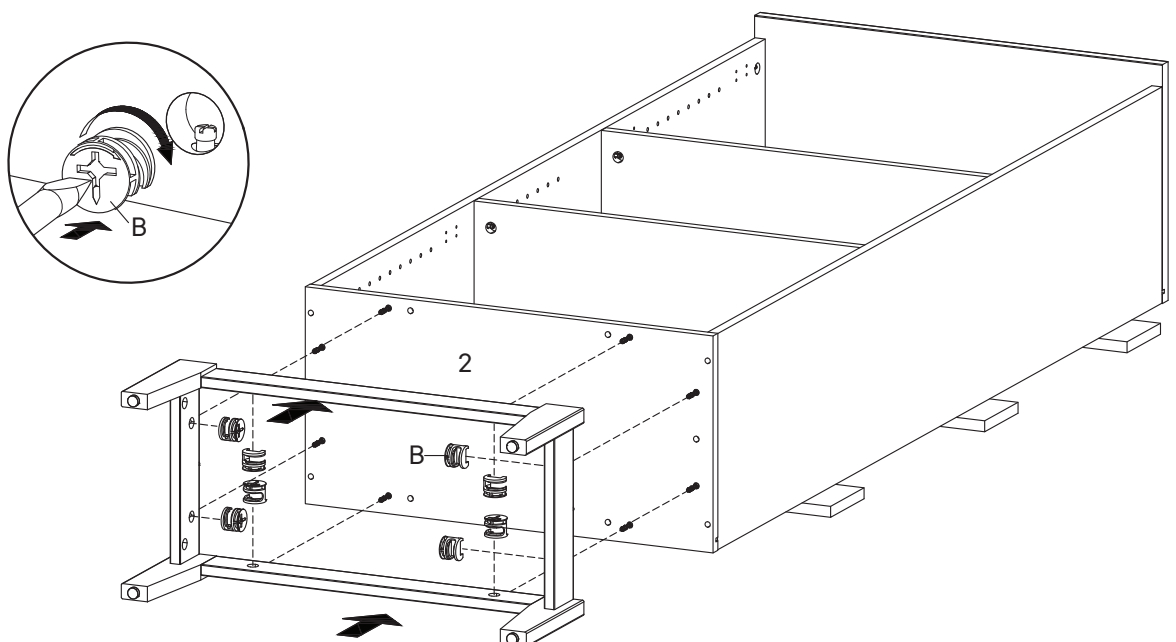

Step 14

HARDWARE


- | | | |
|----------|-----------------------|-----|
| H | Wedge | x20 |
| I | Screw M 3.5 x 15.5 mm | x20 |
| R | Cam Lock Ø12 mm | x1 |

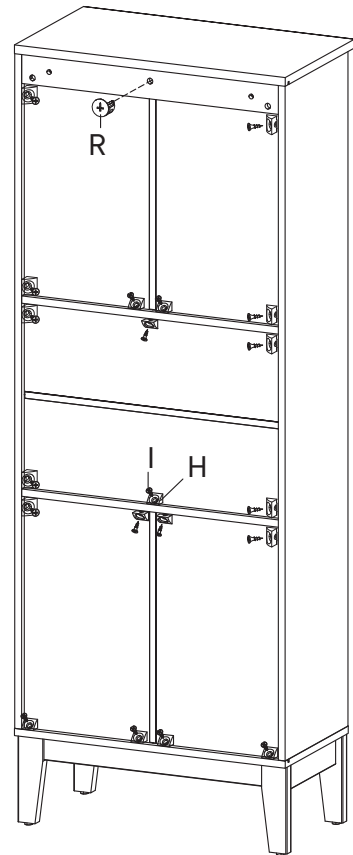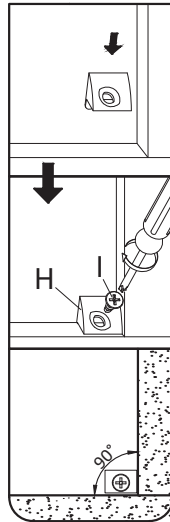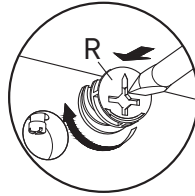


Step 15

HARDWARE

- | | | |
|----------|-----------|----|
| P | Wall Plug | x2 |
|----------|-----------|----|

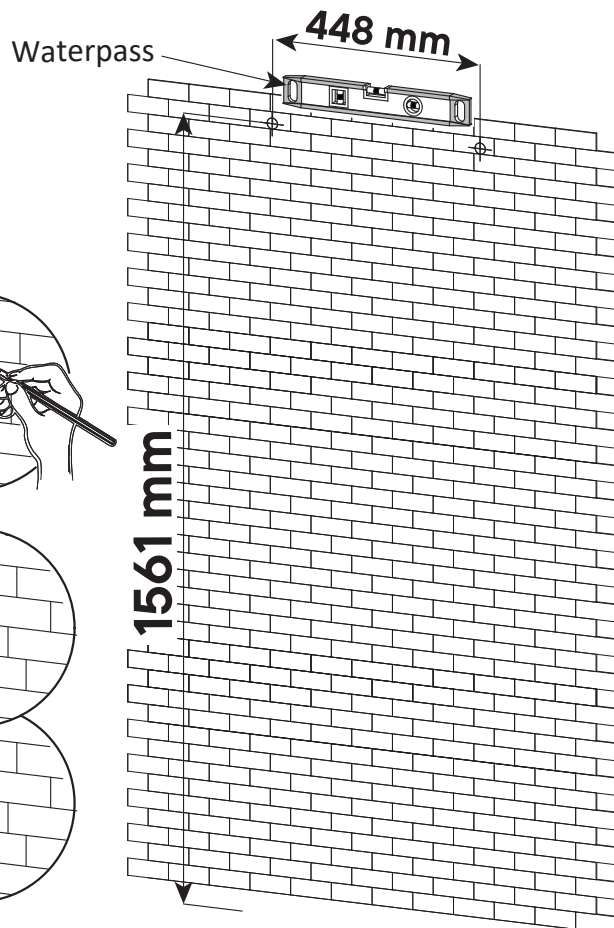


Ensure that the installation of the fisher is aligned properly, as it affects the flatness of the door assembly.

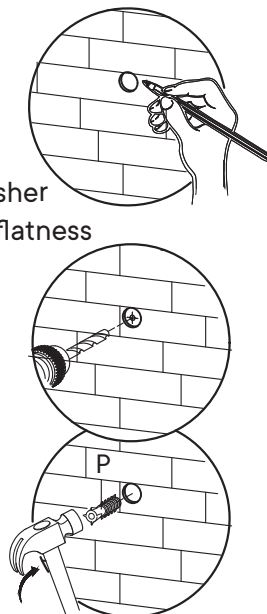

Step 16

HARDWARE

- N** Screw 5.5 x 45 mm x2
- O** Ring x2

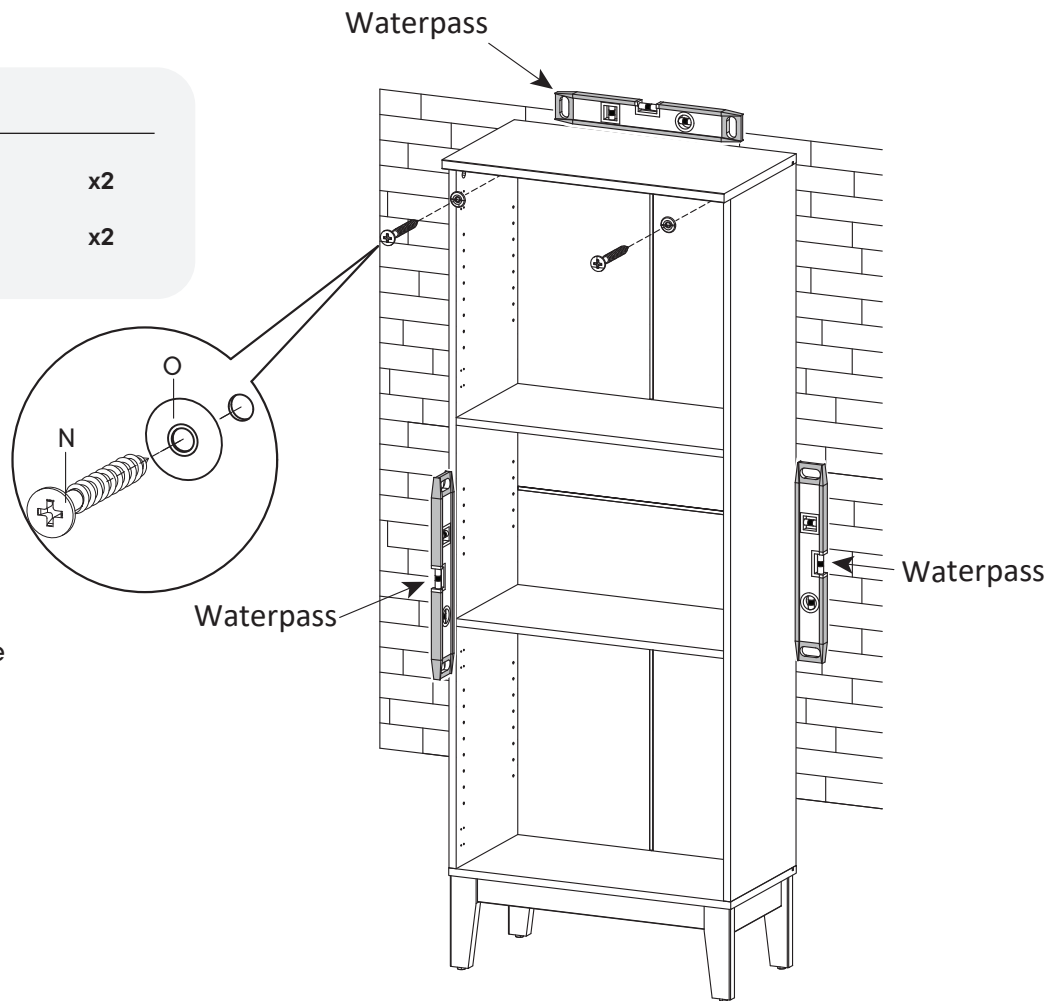

Using a water pass to ensure the unit is vertically upright




Step 17

HARDWARE

- G** Shelf Pin x20

COMPONENTS

- 5** Adjustable Shelf x5

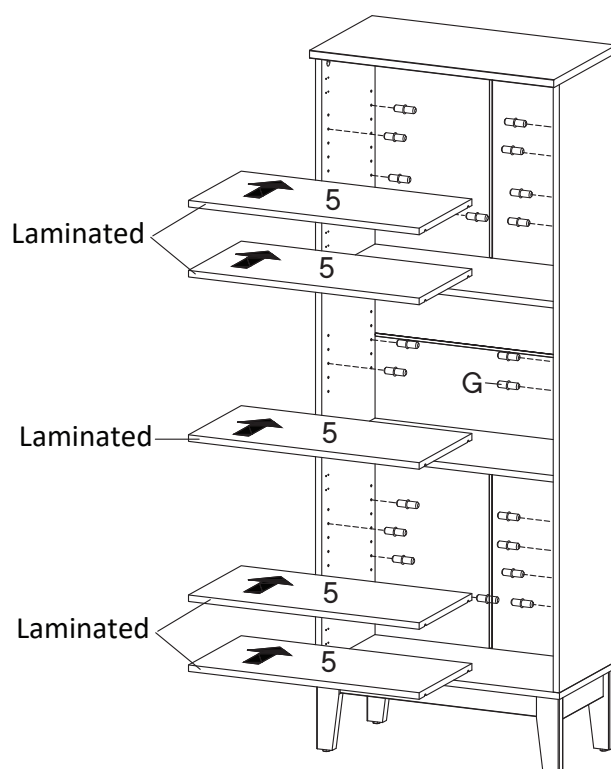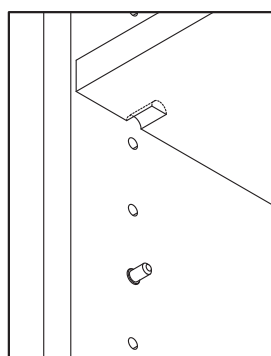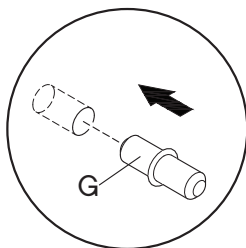

Step 18

HARDWARE


F Screw M 4.5 x 12.5 mm x16

HS26A Hinge x8

COMPONENTS

9 Door 1 x2

10 Door 2 x2

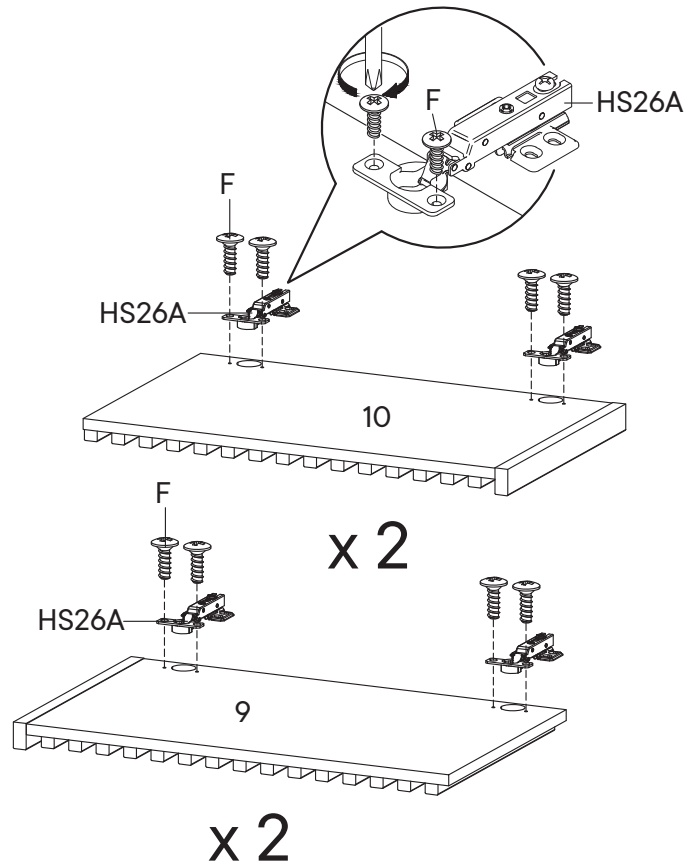

Step 19



HARDWARE

F Screw M 4.5 x 12.5 mm x32

COMPONENTS

9 Door 1 x2

10 Door 2 x2

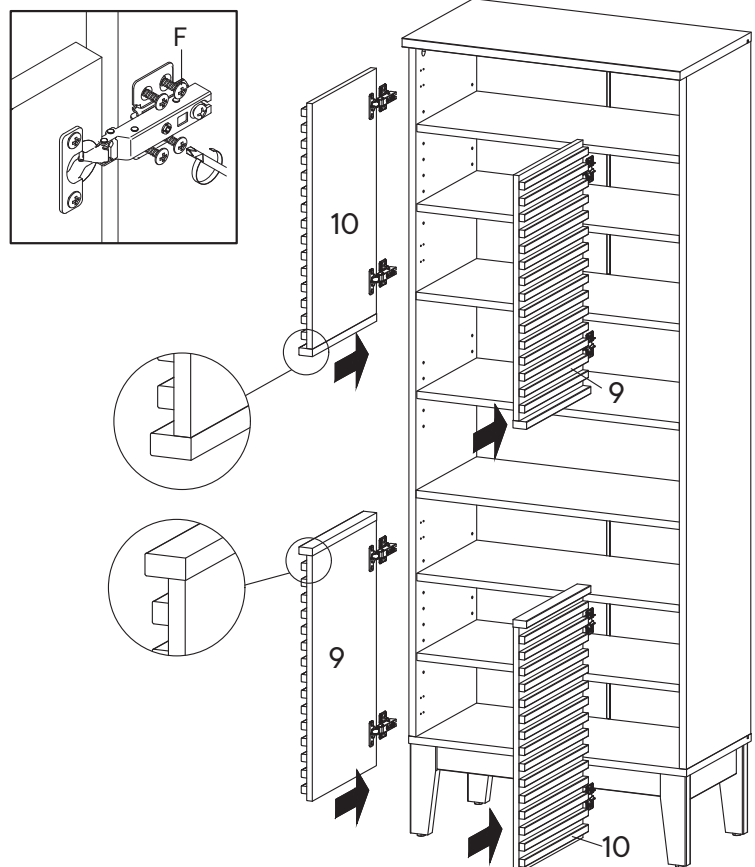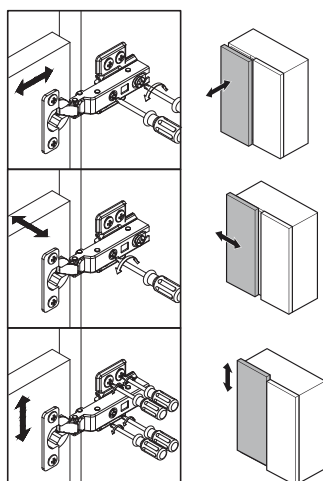

Great job!

Cabinet assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner.

Never use harsh chemicals,
as they could damage the finish
or integrity of the item.

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

