


## ASSEMBLY INSTRUCTIONS

# EEI-6853

V1.03.19.24

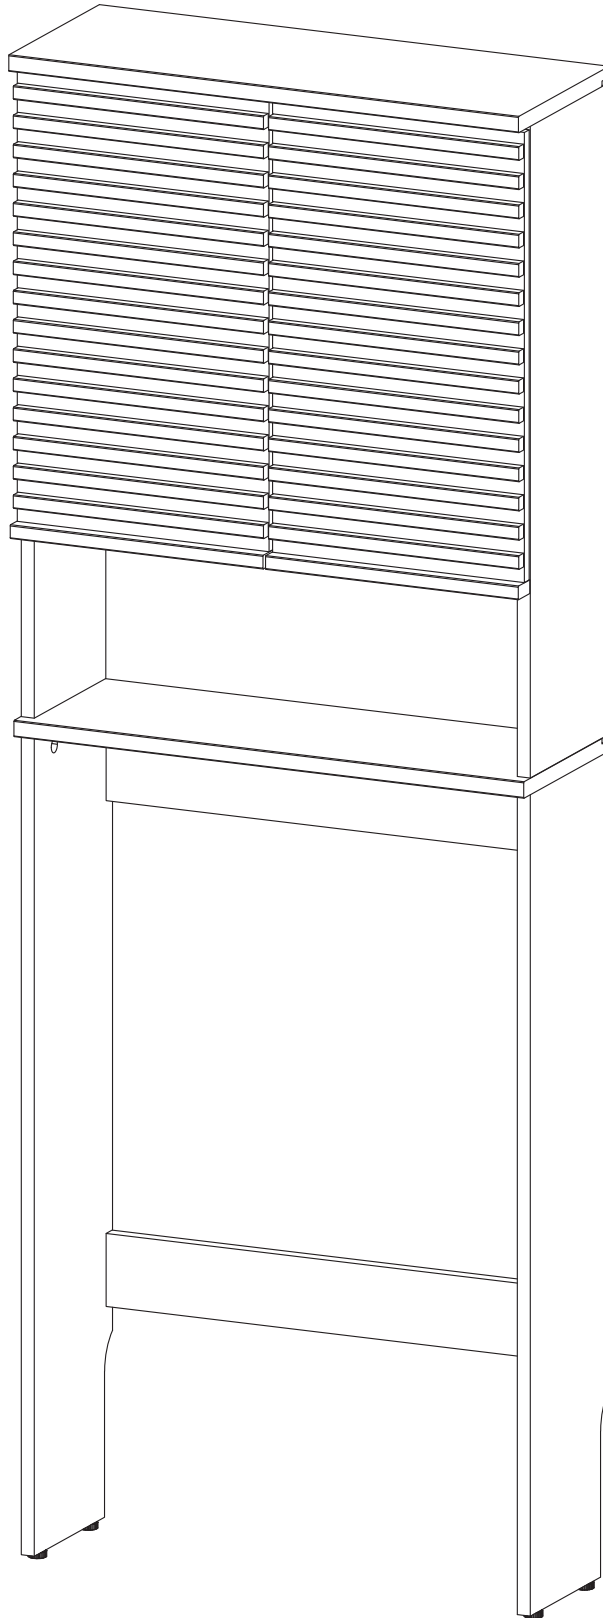

**Questions? Contact us!**

609.256.9000 • [cs@modway.com](mailto:cs@modway.com)  
[www.modway.com](http://www.modway.com)

**\*modway**



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

**Only use hand tools to assemble this item.** Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

## Furniture components:

|    |                    |    |    |                 |    |
|----|--------------------|----|----|-----------------|----|
| 1  | Top Board          | x1 | 11 | Support Board 1 | x1 |
| 2  | Bottom Board       | x1 | 12 | Back Board 1    | x2 |
| 3  | Side Board Left 1  | x1 | 13 | Back Board 2    | x1 |
| 4  | Side Board Right 1 | x1 | 14 | Support Board 2 | x1 |
| 5  | Side Board Left 2  | x1 | 15 | Support Board 3 | x1 |
| 6  | Side Board Right 2 | x1 |    |                 |    |
| 7  | Adjustable Shelf   | x2 |    |                 |    |
| 8  | Fixed Shelf        | x1 |    |                 |    |
| 9  | Door 1             | x1 |    |                 |    |
| 10 | Door 2             | x1 |    |                 |    |

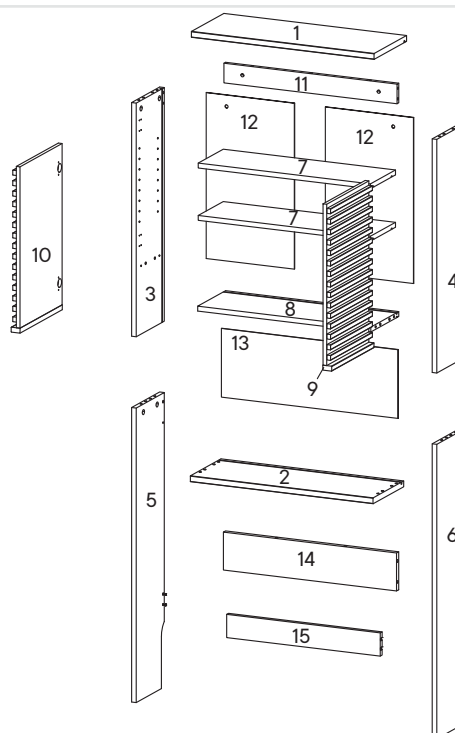

## Provided hardware:

|   |  |                       |     |   |  |                       |     |
|---|--|-----------------------|-----|---|--|-----------------------|-----|
| A |  | Cam Bolt Ø6 x 35 mm   | x17 | J |  | Ring                  | x2  |
| B |  | Cam Lock Ø15 mm       | x14 | K |  | Wall Plug             | x2  |
| C |  | Wood Dowel Ø8 x 30 mm | x20 | L |  | Screw Cap Ø15 mm      | x8  |
| D |  | Screw M 7 x 50 mm     | x4  | M |  | Wedge                 | x12 |
| E |  | Screw M 4.5 x 12.5 mm | x24 | N |  | Screw 3.5 x 15.5 mm   | x12 |
| F |  | Shelf Pin             | x8  | O |  | Wood Dowel Ø6 x 30 mm | x4  |
| G |  | Screw 5.5 x 45 mm     | x2  | P |  | Cam Lock Ø12 mm       | x3  |
| H |  | Allen Key             | x2  | Q |  | Cam Bolt Ø6 x 19.5 mm | x4  |
| I |  | Joining Strip         | x1  | R |  | Adjuster              | x4  |

|       |  |       |    |
|-------|--|-------|----|
| HS26A |  | Hinge | x4 |
|-------|--|-------|----|

## What you need:

|  |                           |
|--|---------------------------|
|  | Phillips Head Screwdriver |
|--|---------------------------|

|                                                                                                               |  |                  |
|---------------------------------------------------------------------------------------------------------------|--|------------------|
| L                                                                                                             |  | Screw Cap Ø15 mm |
| Hardware is not included in Travertine Colour.<br>Hardware is only applicable if you purchased Walnut and Oak |  |                  |

Wait!

Missing parts or hardware? Need assistance?  
Contact us before returning your item. We're here to help!  
609.256.9000 • cs@modway.com






# Step 1

## HARDWARE

|          |                       |     |
|----------|-----------------------|-----|
| <b>A</b> | Cam Bolt Ø6 x 35 mm   | x11 |
| <b>C</b> | Wood Dowel Ø8 x 30 mm | x12 |
| <b>O</b> | Wood Dowel Ø6 x 30 mm | x4  |

## COMPONENTS

|           |                    |    |
|-----------|--------------------|----|
| <b>1</b>  | Top Board          | x1 |
| <b>3</b>  | Side Board Left 1  | x1 |
| <b>4</b>  | Side Board Right 1 | x1 |
| <b>8</b>  | Fixed Shelf        | x1 |
| <b>11</b> | Support Board 1    | x1 |

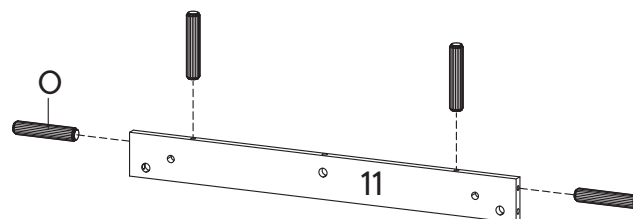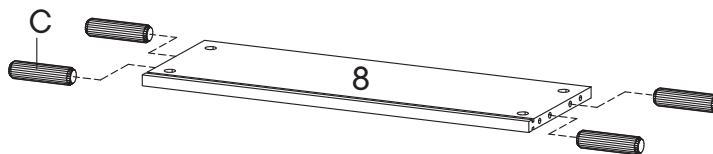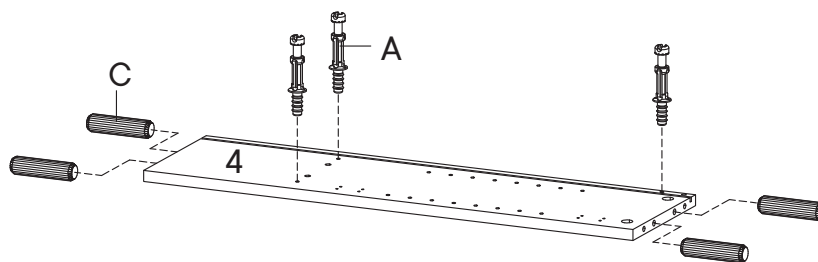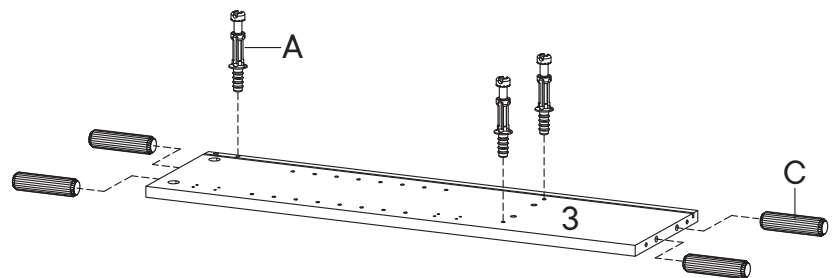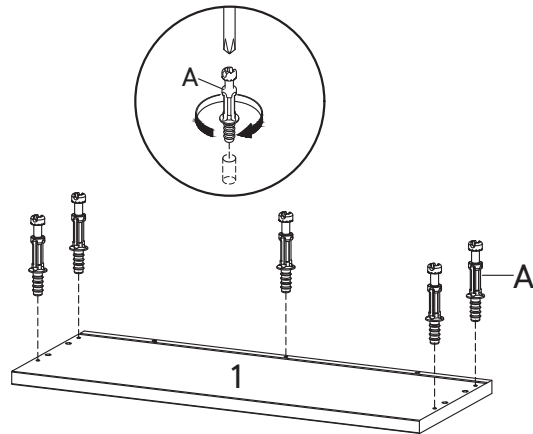


## Step 2

### HARDWARE

- |          |                 |    |
|----------|-----------------|----|
| <b>B</b> | Cam Lock Ø15 mm | x2 |
| <b>P</b> | Cam Lock Ø12 mm | x1 |

### COMPONENTS

- |           |                    |    |
|-----------|--------------------|----|
| <b>4</b>  | Side Board Right 1 | x1 |
| <b>8</b>  | Fixed Shelf        | x1 |
| <b>11</b> | Support Board 1    | x1 |

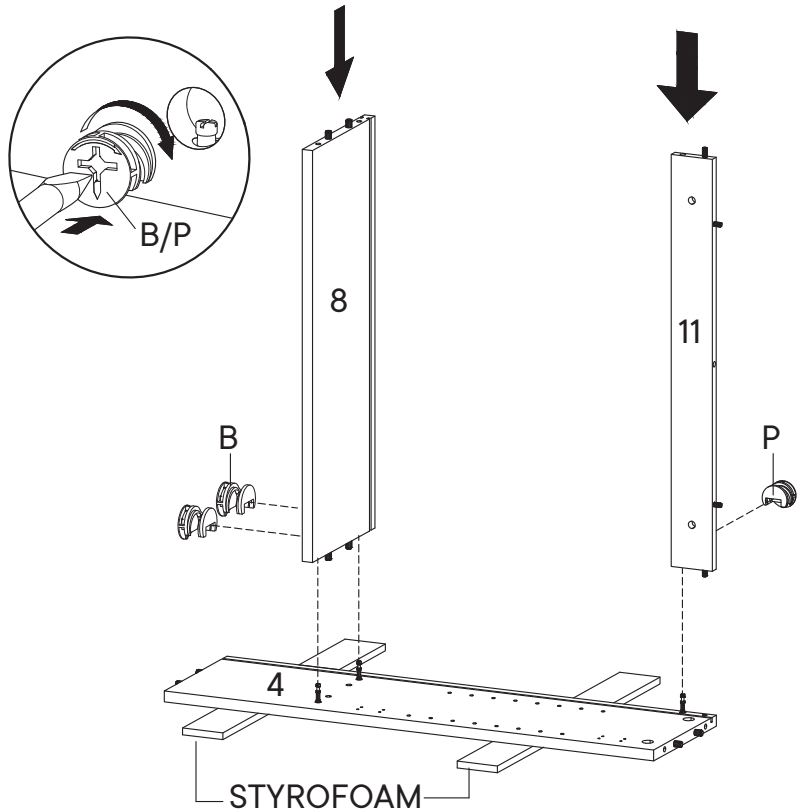



## Step 3

### HARDWARE

- |          |                 |    |
|----------|-----------------|----|
| <b>B</b> | Cam Lock Ø15 mm | x2 |
| <b>P</b> | Cam Lock Ø12 mm | x1 |

### COMPONENTS

- |          |                   |    |
|----------|-------------------|----|
| <b>3</b> | Side Board Left 1 | x1 |
|----------|-------------------|----|

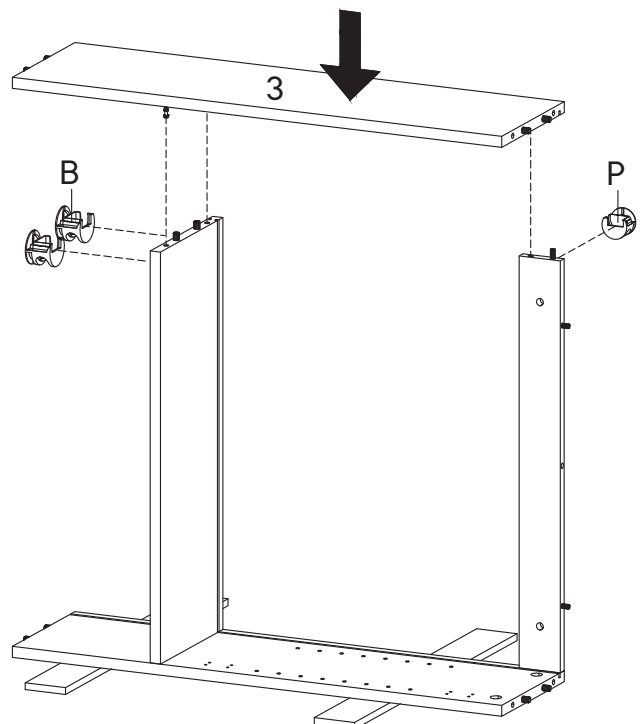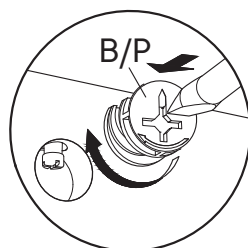



## Step 4

### HARDWARE

① Joining Strip x1

### COMPONENTS

⑫ Back Board 1 x2

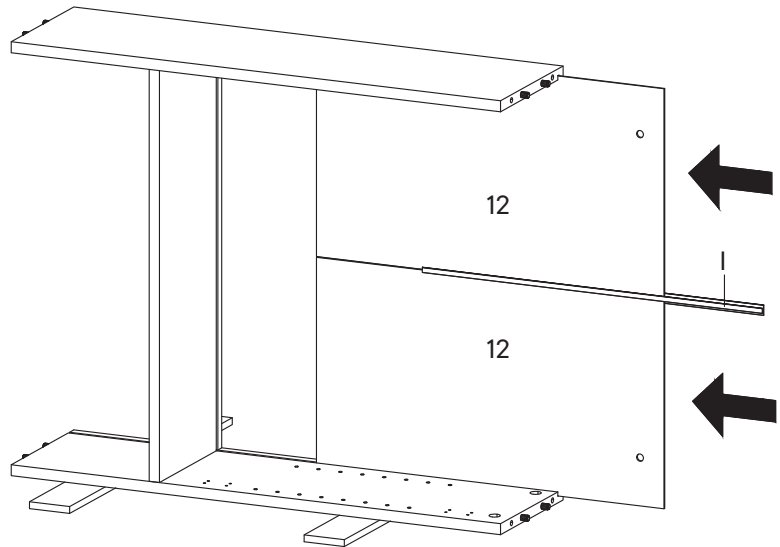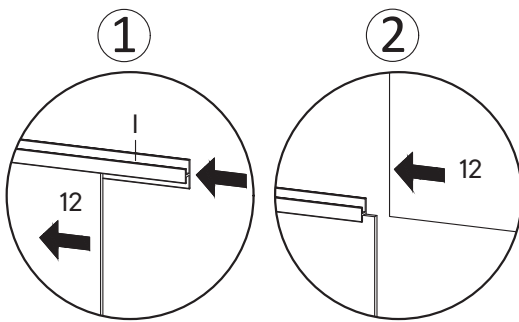



## Step 5

### HARDWARE

Ⓑ Cam Lock Ø15 mm x4

### COMPONENTS



① Top Board x1

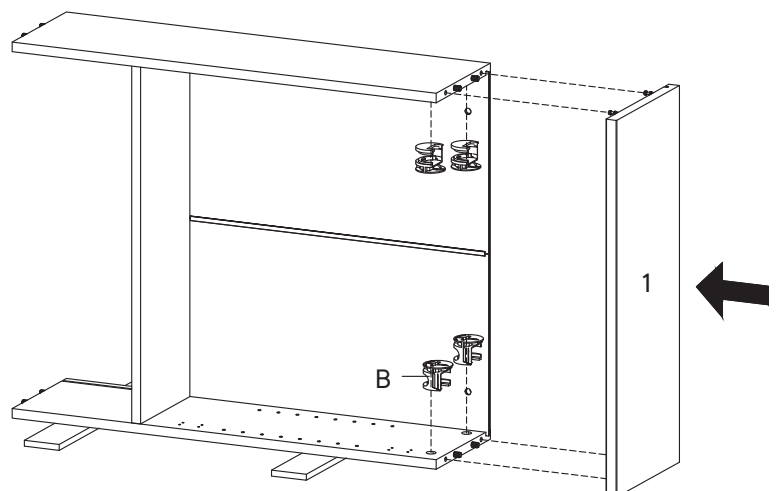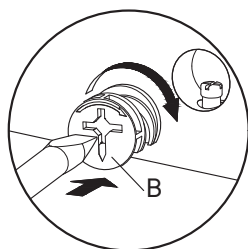

## Step 6

### HARDWARE

- L** Screw Cap Ø15 mm x4

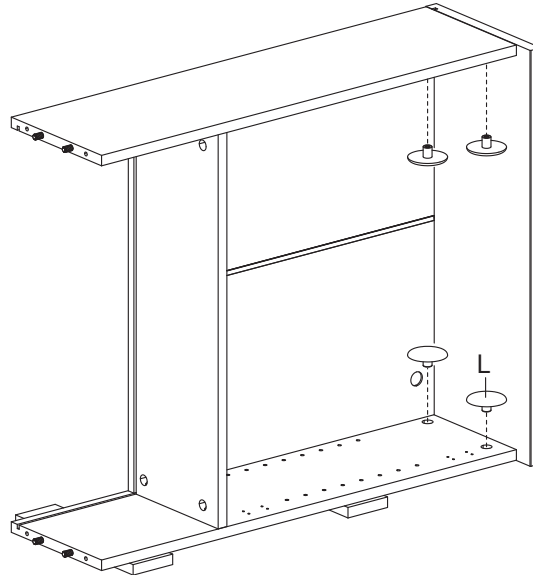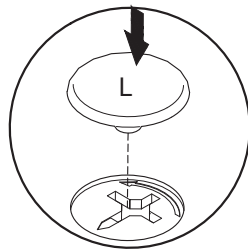

This step is applicable for Walnut and Oak colour only.  
This step is not applicable for Travertine.  
Hardware "L" not applicable for Travertine.



## Step 7

### HARDWARE

- D** Screw M 7 x 50 mm x4  
**H** Allen Key x1

### COMPONENTS


- 2** Bottom Board x1  
**13** Back Board 2 x1

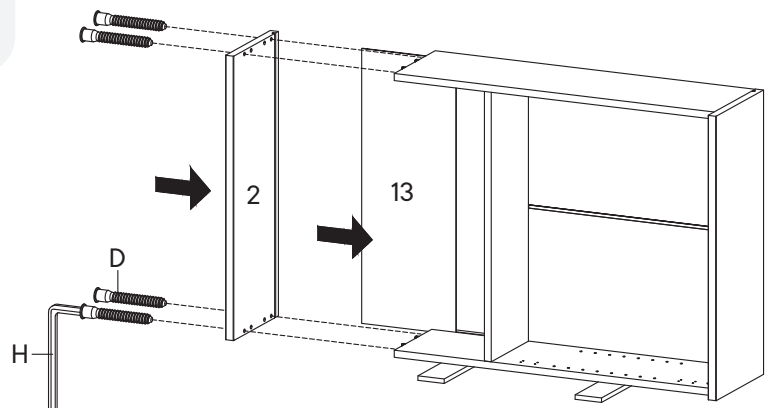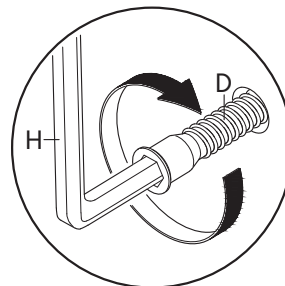

## Step 8

### HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4

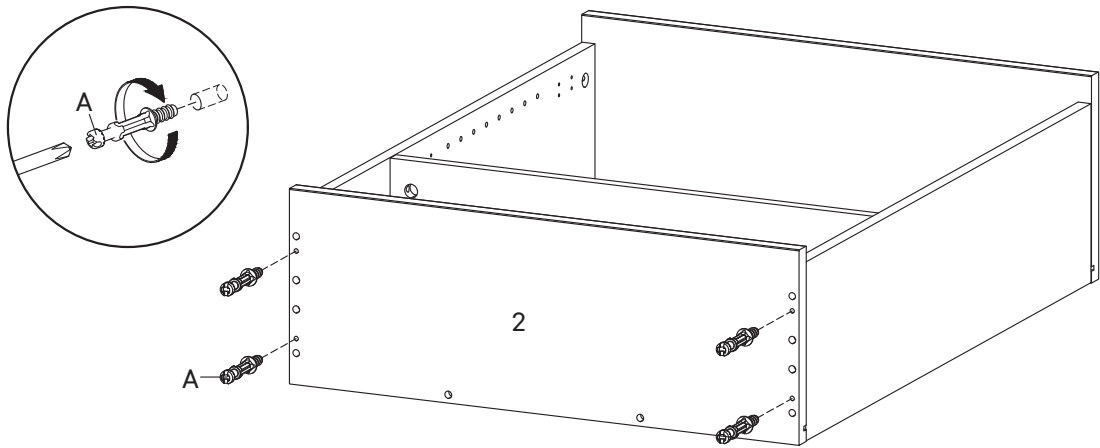



## Step 9

### HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2  
**C** Wood Dowel Ø8 x 30 mm x8  
**Q** Cam Bolt Ø6 x 19.5 mm x4  
**R** Adjuster x4

### COMPONENTS

- 5** Side Board Left 2 x1  
**6** Side Board Right 2 x1  
**14** Support Board 2 x1

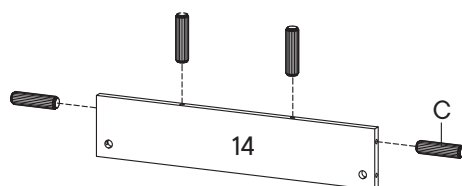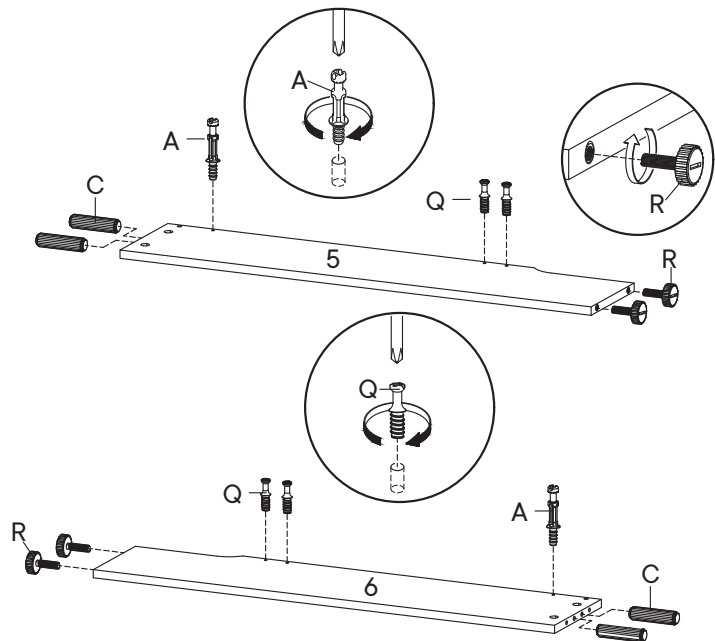

## Step 10

### HARDWARE


**B** Cam Lock Ø15 mm x2

### COMPONENTS

**5** Side Board Left 2 x1

**6** Side Board Right 2 x1


**14** Support Board 2 x1

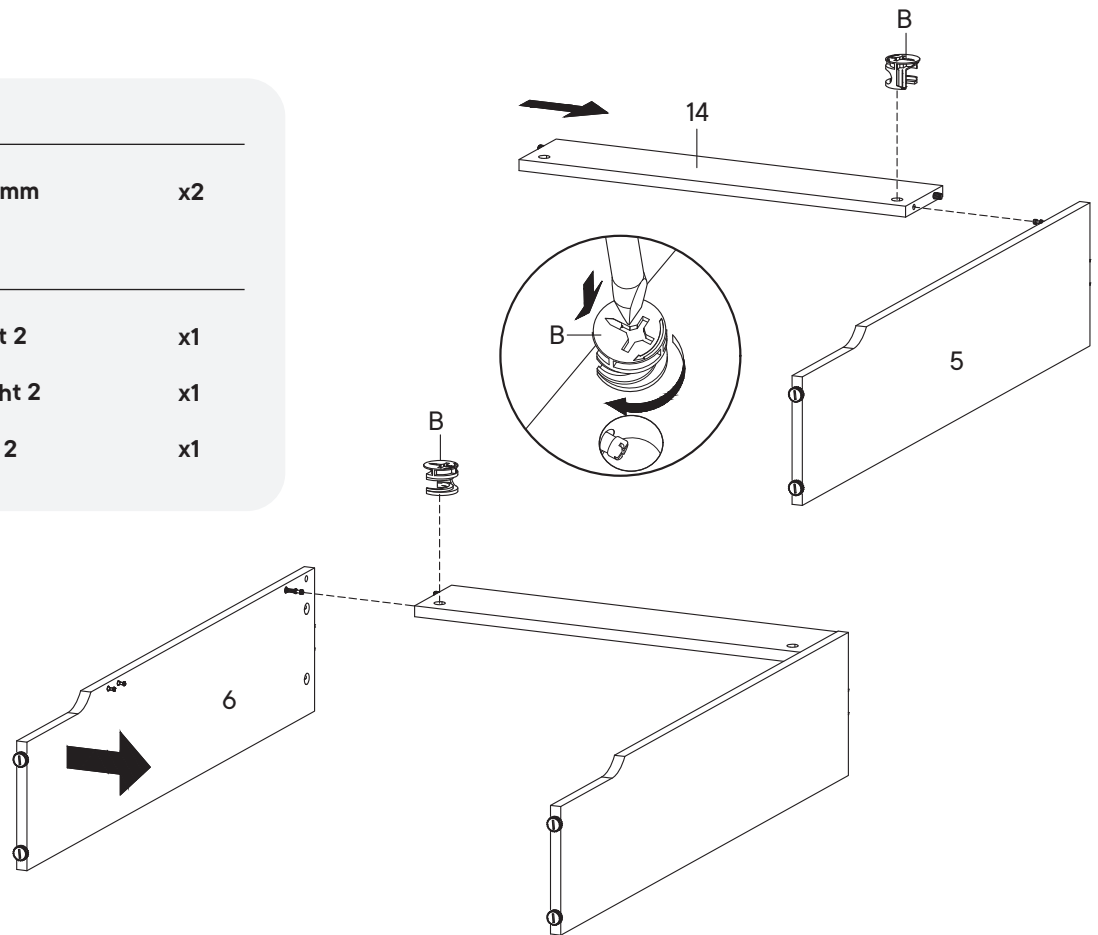

## Step 11

### HARDWARE


**B** Cam Lock Ø15 mm x4

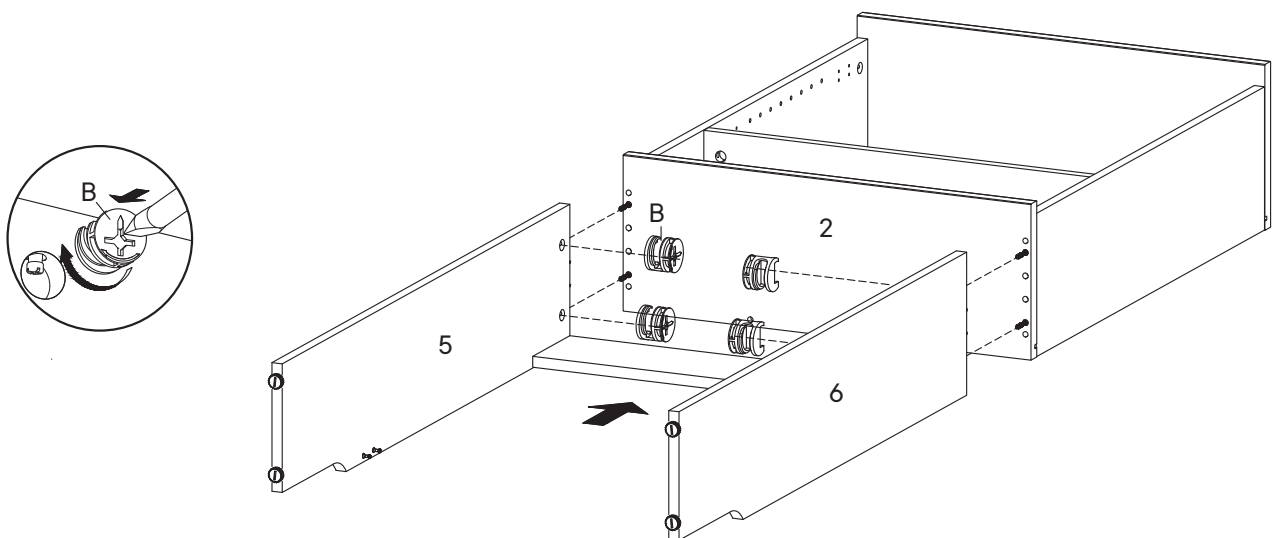

## Step 12

### HARDWARE

- L** Screw Cap Ø15 mm x4

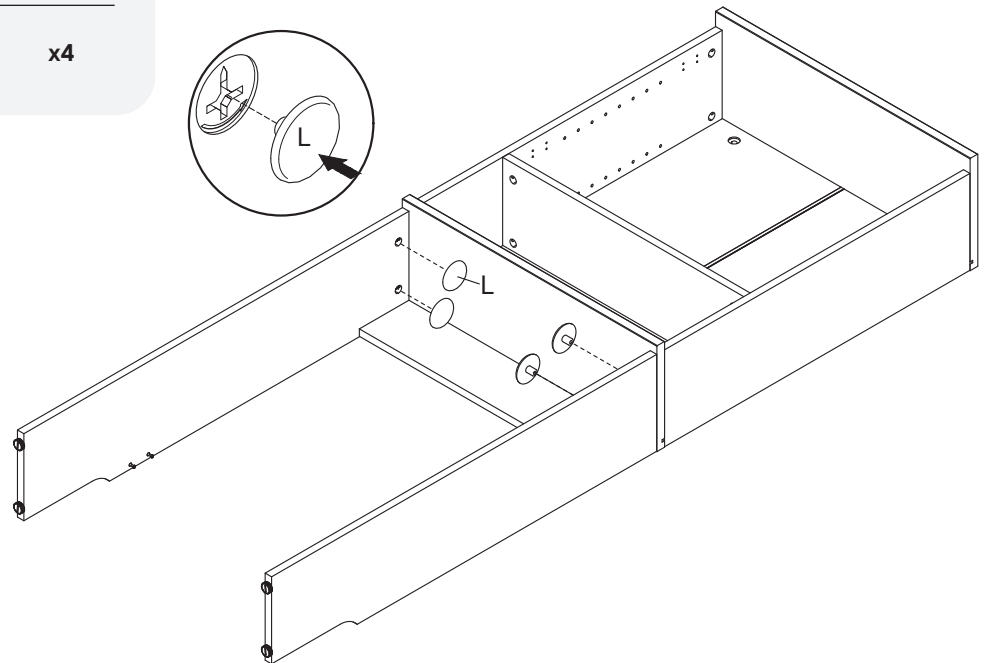


This step is applicable for Walnut and Oak colour only.  
This step is not applicable for Travertine.  
Hardware "L" not applicable for Travertine.

## Step 13

### HARDWARE



- M** Wedge x12  
**N** Screw M 3.5 x 15.5 mm x12  
**P** Cam Lock Ø12 mm x1

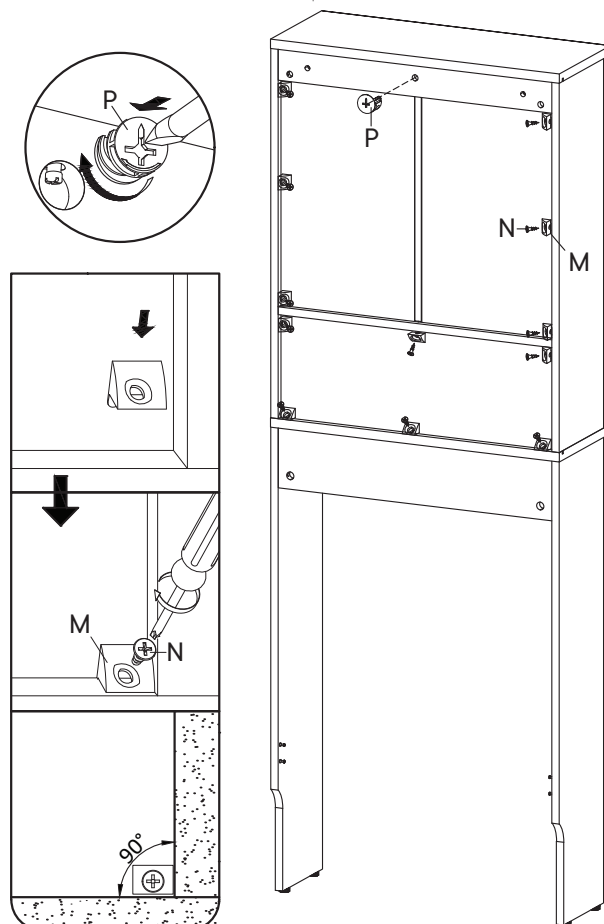

## Step 14

### HARDWARE

**K** Wall Plug x2

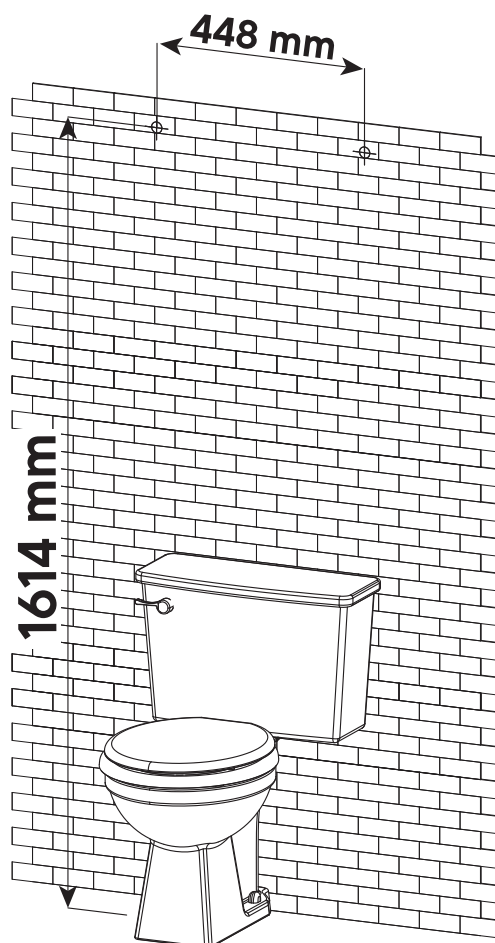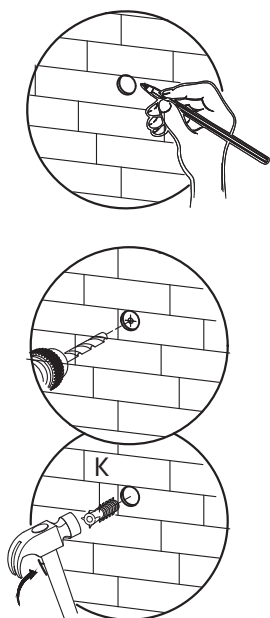


## Step 15

### HARDWARE

**G** Screw 5.5 x 45 mm x2

**J** Ring x2

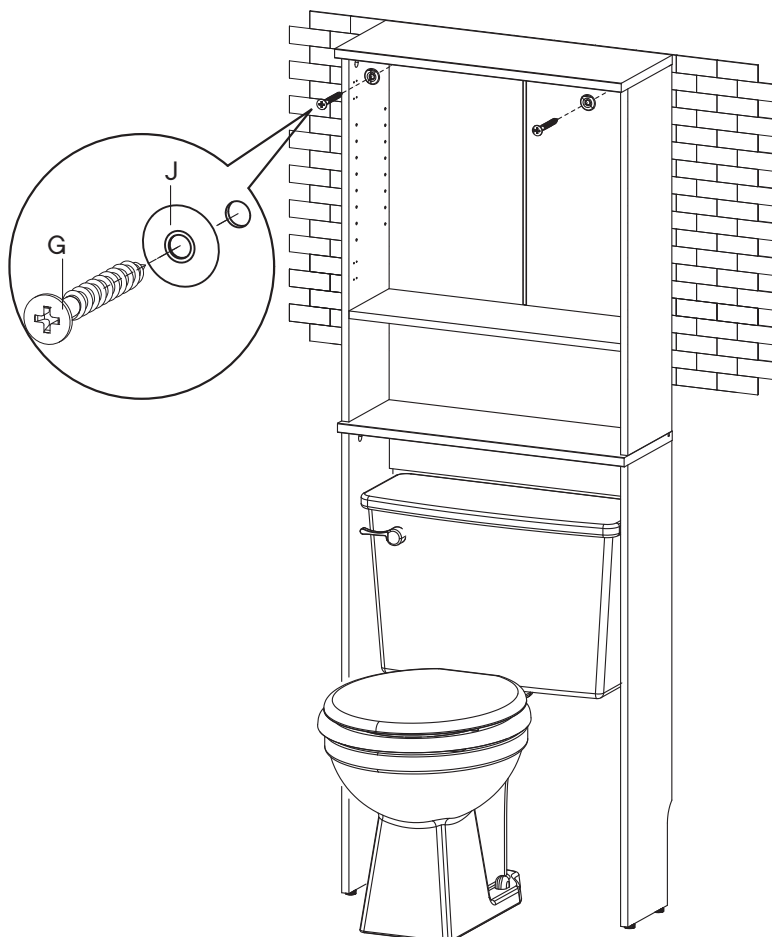


## Step 16

### HARDWARE

**F** Shelf Pin x8

### COMPONENTS

**7** Adjustable Shelf x2

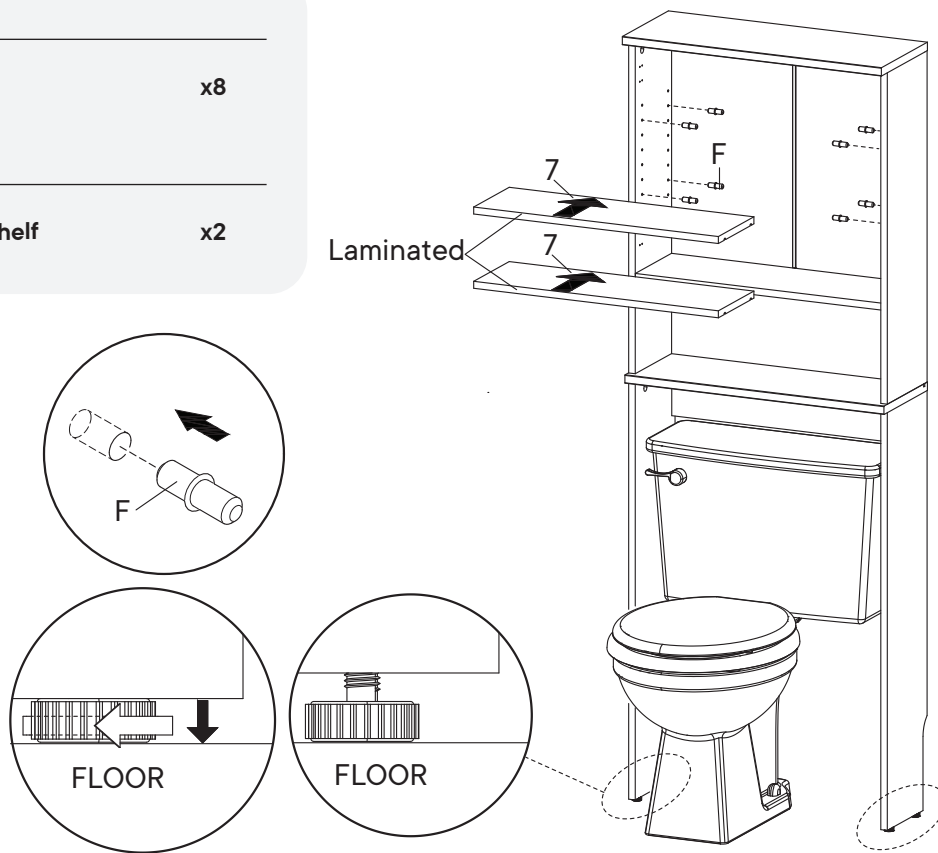

## Step 17

### HARDWARE


**E** Screw M 4.5 x 12.5 mm x8

**HS26A** Hinge x4

### COMPONENTS

**9** Door 1 x1

**10** Door 2 x1

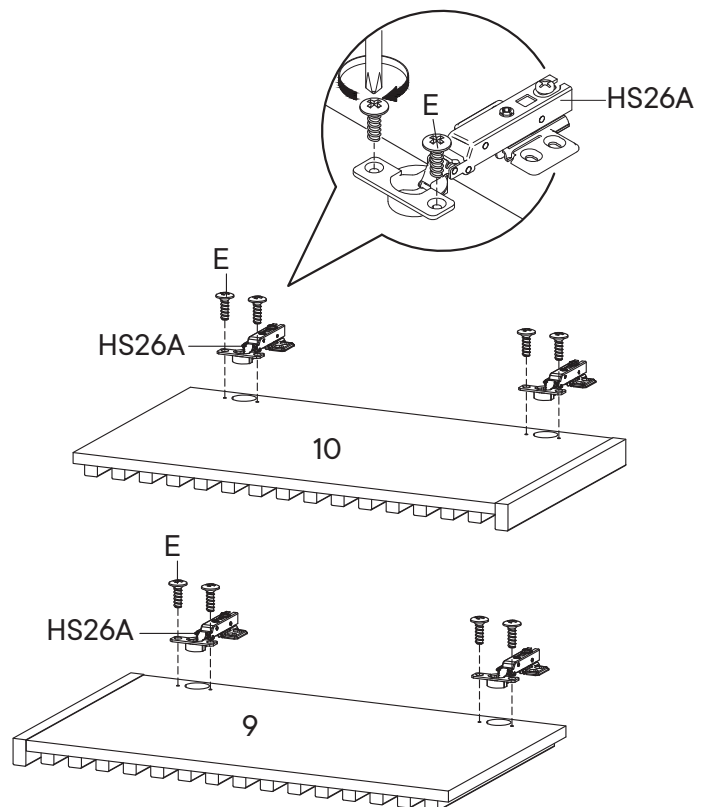

## Step 18









### HARDWARE

**E** Screw M 4.5 x 12.5 mm x16

### COMPONENTS

**9** Door 1 x1


**10** Door 2 x1

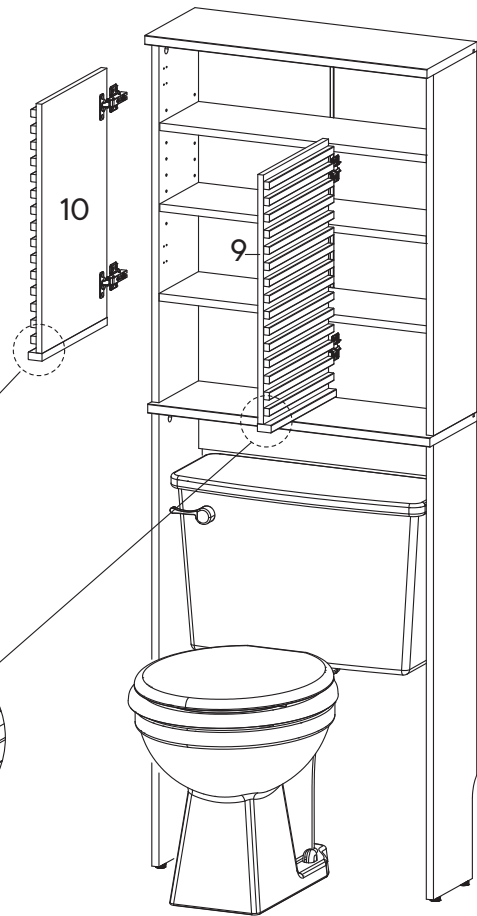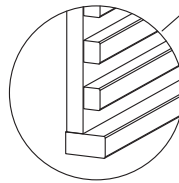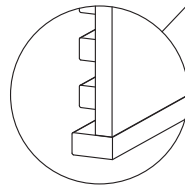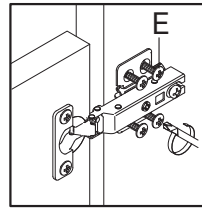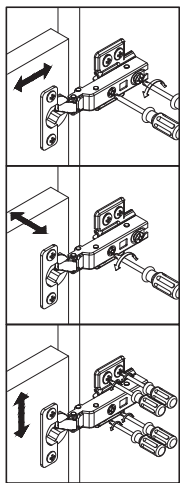

## Step 19

### COMPONENTS

**15** Support Board 3 x1

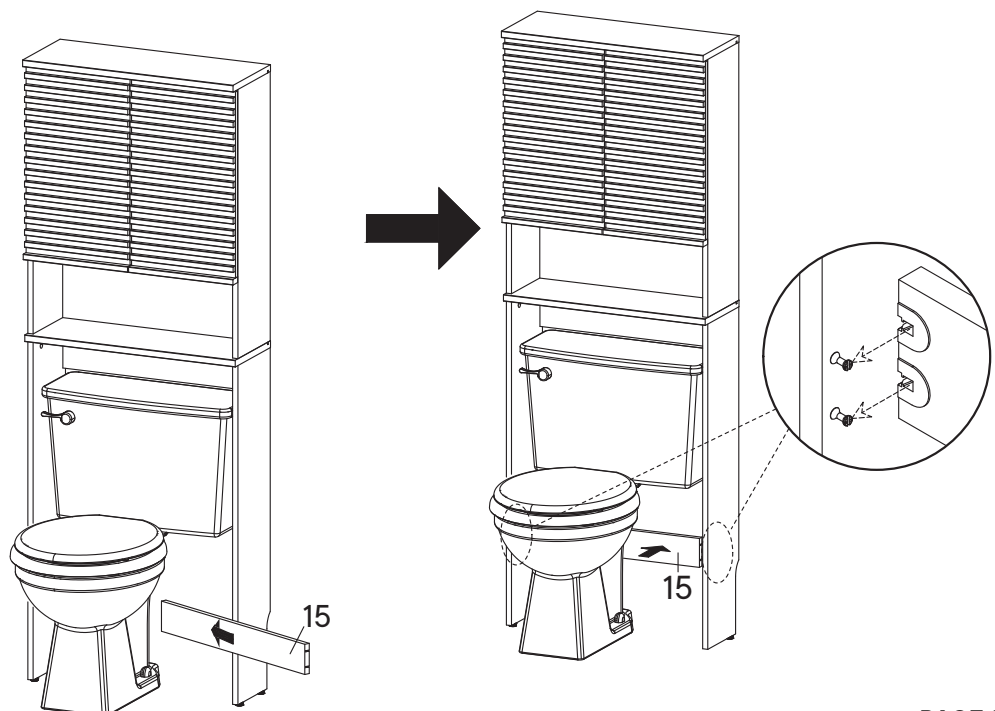

# Great job!

Cabinet assembly is complete.

## ♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth  
and a mild cleaner.

Never use harsh chemicals,  
as they could damage the finish  
or integrity of the item.

## CONNECT WITH US!



Tag us **@modway\_furniture** and **#modway**  
for a chance to be featured.

