


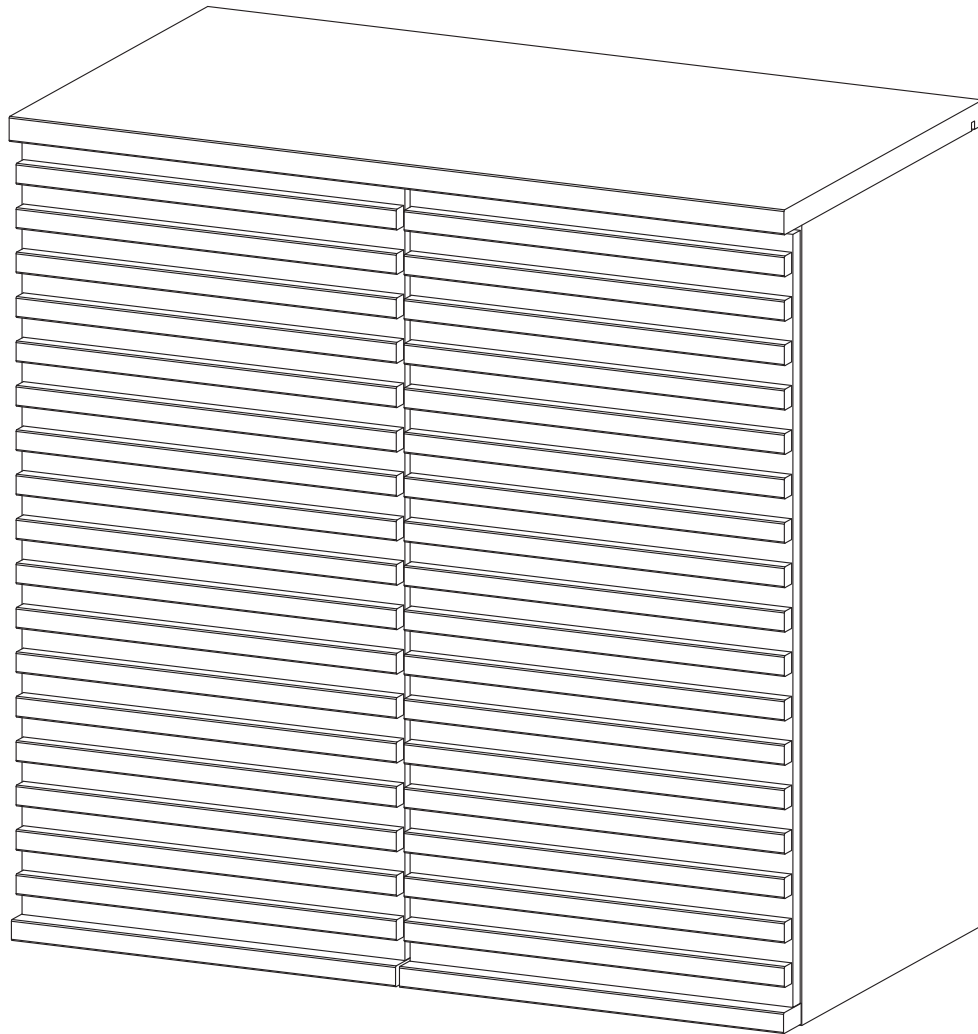

ASSEMBLY INSTRUCTIONS

Cabinet

EEI-7438 / V0.04.22.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.








Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35mm	x14
B		Cam Lock Ø15 mm	x8
C		Cam Lock Ø12 mm	x6
D		Wood Dowel Ø8 x 30 mm	x8
E		Wood Dowel Ø6 x 30 mm	x8
F		Screw M 3.5 x 15.5 mm	x4
G		Wedge	x4
H		Screw M 4.5 x 12.5 mm	x32
I		Screw Cap Ø15 mm	x4
J		Screw M 5.5 x 45 mm	x4
K		Shelf Pin	x8
L		Joining Strip	x1
M		Wall Plug	x4
N		Ring	x2
O		Wall Fixing + Plastic Cover	x2
HS26A		Hinge	x4

WHAT YOU NEED:




Phillips



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

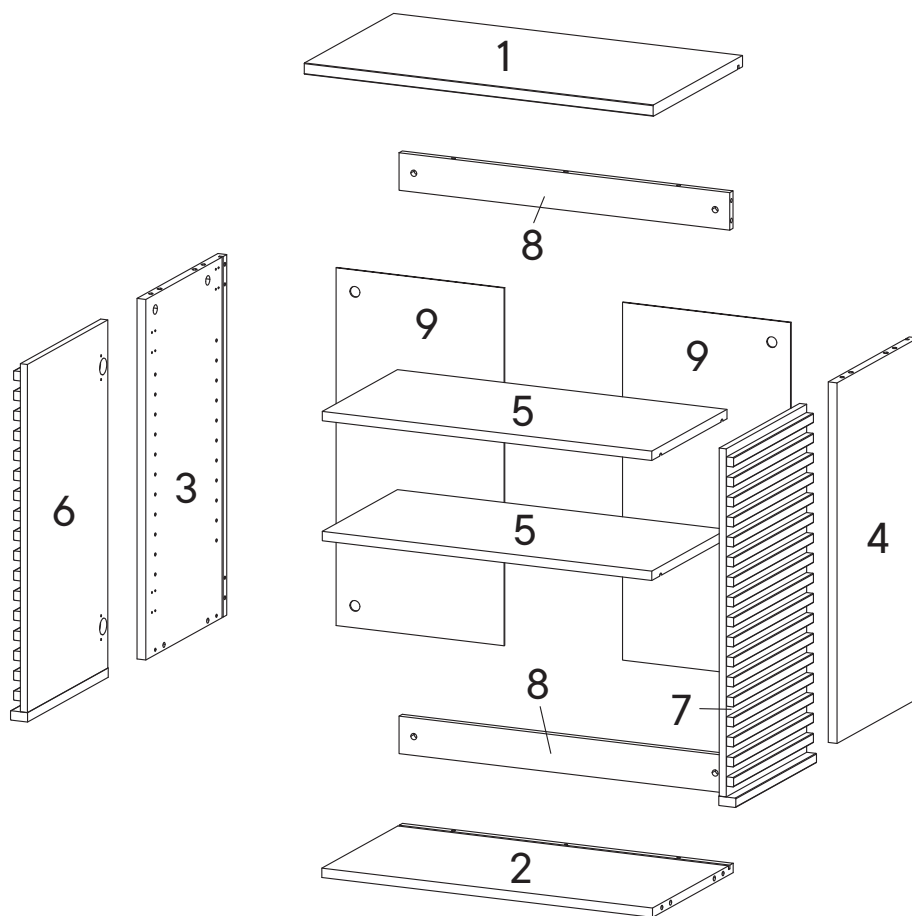

1	Top Board	x1	7	Door 2	x1
2	Bottom Board	x1	8	Support Board	x2
3	Side Board Left	x1	9	Back Board	x2
4	Side Board Right	x1			
5	Adjustable Shelf	x2			
6	Door 1	x1			

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x9
- D** Wood Dowel Ø8 x 30 mm x8
- E** Wood Dowel Ø6 x 30 mm x8

COMPONENTS


- 2** Bottom Board x1
- 3** Side Board Left x1
- 4** Side Board Right x1
- 8** Support Board x2

1.1 Insert Wood Dowel Ø8 x 30 mm (D) and Cam Bolt Ø6 x 35 mm (A) into the Side Board Left (3), then tighten the Cam Bolt using screwdriver.

1.2 Insert Wood Dowel Ø8 x 30 mm (D) and Cam Bolt Ø6 x 35 mm (A) into the Side Board Right (4), then tighten the Cam Bolt using screwdriver.

1.3 Insert Wood Dowel Ø8 x 30 mm (D) and Cam Bolt Ø6 x 35 mm (A) into the Bottom Board (2), then tighten the Cam Bolt using screwdriver.

1.4 Insert Wood Dowel Ø6 x 30 mm (E) into the Support Board (8).

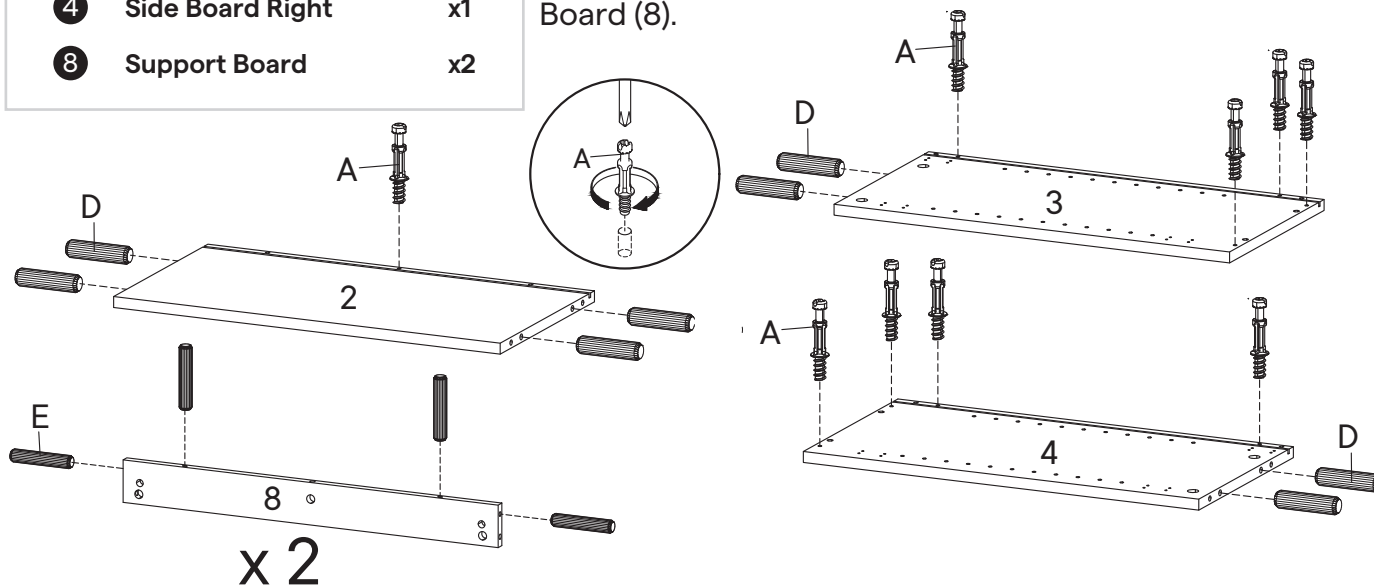

STEP 02


HARDWARE

- H** Screw M 4.5 x 12.5 mm x8
- O** Wall Fixing + Plastic Cover x2

COMPONENTS

- 3** Side Board Left x1
- 4** Side Board Right x1

2.1 Open the Wall Fixing + Plastic Cover (O) separate the plastic cover with the wall fixing. Install the wall fixing into Side Boards and secure with screw M 4.5 x 12.5 mm (H), then tighten using screwdriver.

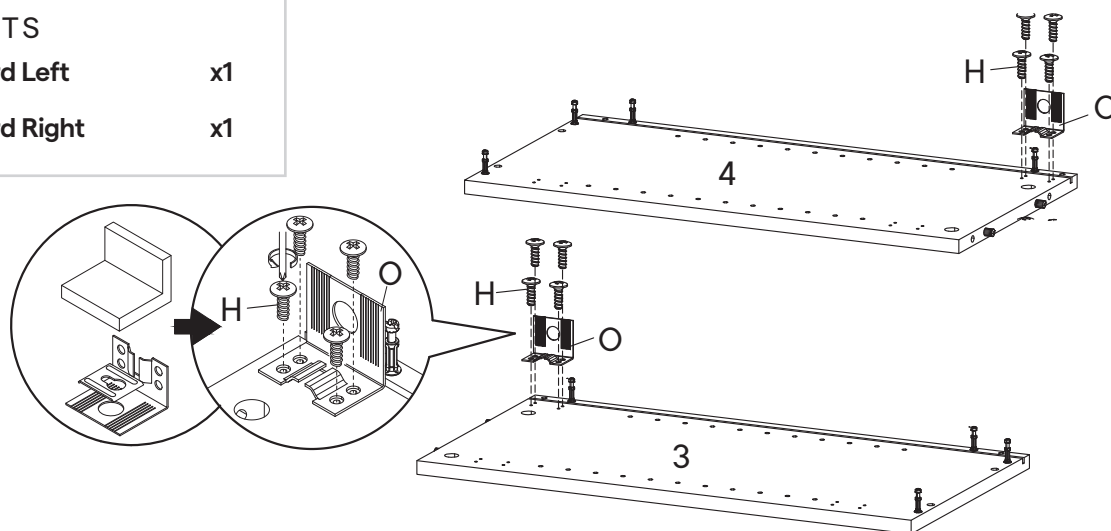

HARDWARE


Ⓒ Cam Lock Ø12 mm x1

COMPONENTS

② Bottom Board x1

⑧ Support Board x1

3.1 Combine Bottom Board (2) with Support Board (8) according to picture and, Insert Cam Lock Ø12 mm (C) then tighten using screwdriver, Position as shown in the figure.

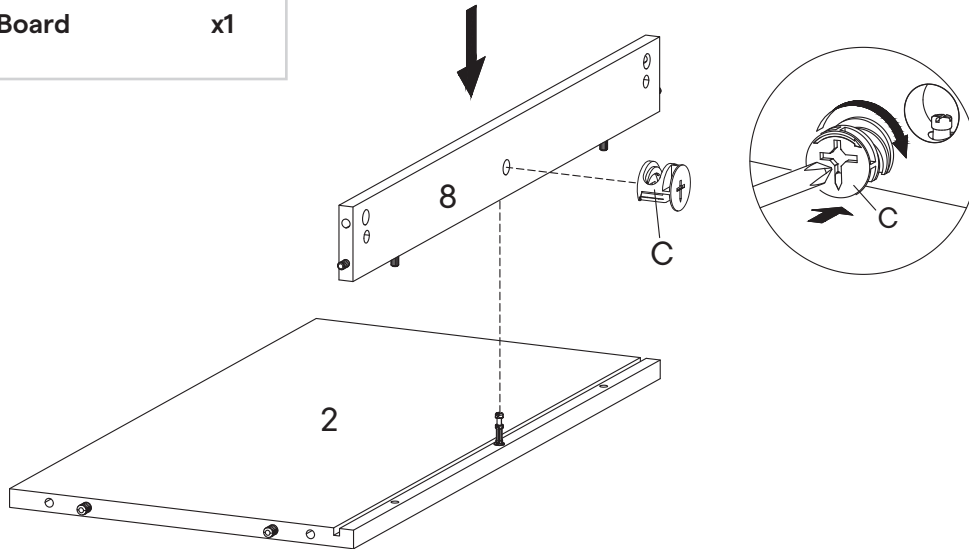

STEP 04

HARDWARE

Ⓑ Cam Lock Ø15 mm x2

Ⓒ Cam Lock Ø12 mm x2


COMPONENTS

② Bottom Board x1

④ Side Board Right x1

⑧ Support Board x2

4.1 Insert Support Board (8) and the component has been previously assembled into Side Board Right (4). Secure Cam Lock Ø15 mm (B) into Bottom Board (2) and Cam Lock Ø12 mm (C) into Support Board (8), then tighten using screwdriver.

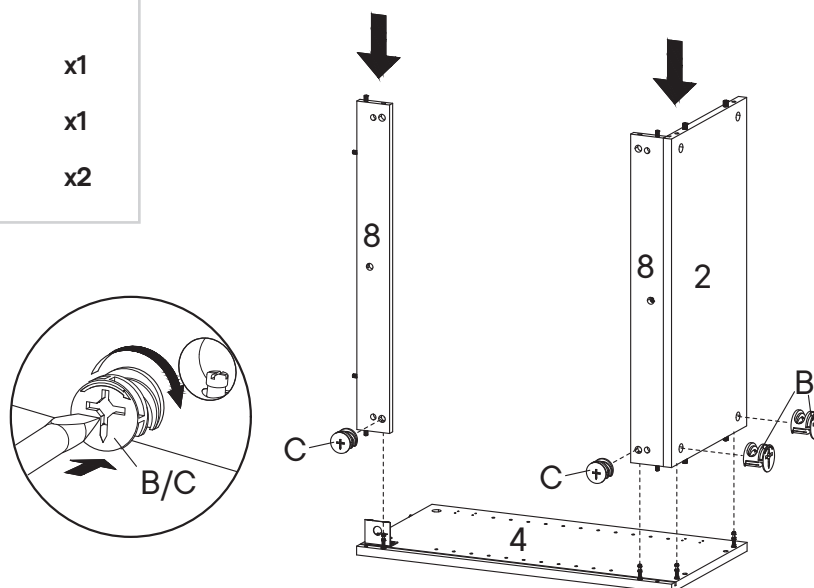

HARDWARE



B Cam Lock Ø15 mm x2

C Cam Lock Ø12 mm x2

COMPONENTS

3 Side Board Left x1

5.1 Insert Side Board Left (3) and secure with Cam Lock Ø15 mm (B) into Bottom Board and Cam Lock Ø12 mm (C) into Support Board then tighten using screwdriver.

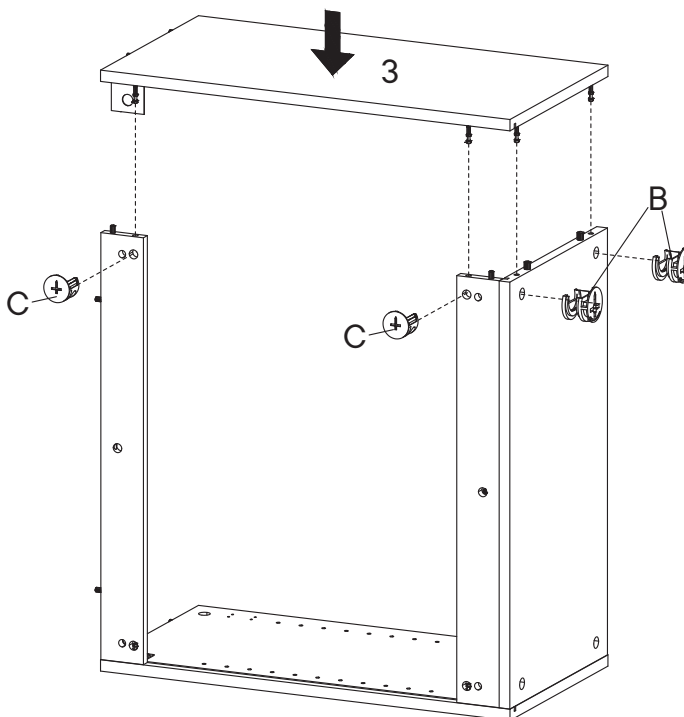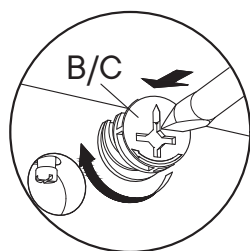

STEP 06



HARDWARE

L Joining Strip x1


COMPONENTS

9 Back Board x2

6.1 Insert Back Boards (9) into Top Board. Insert Joining Strip (L) in between the Back Boards (9).

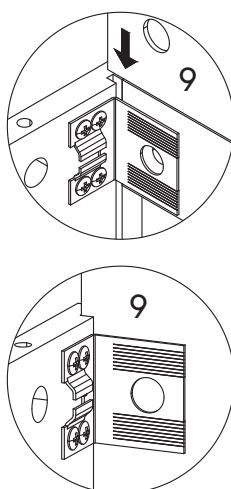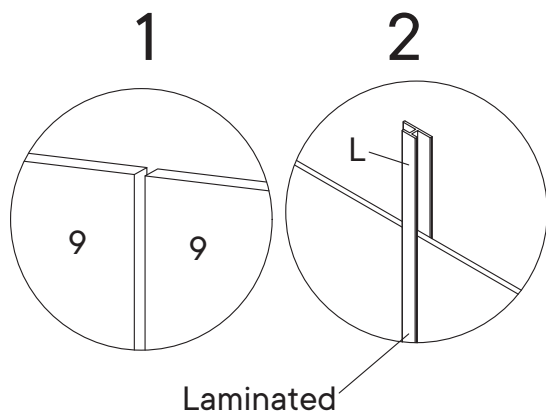

The position of the back board is in the grooving behind the hanger

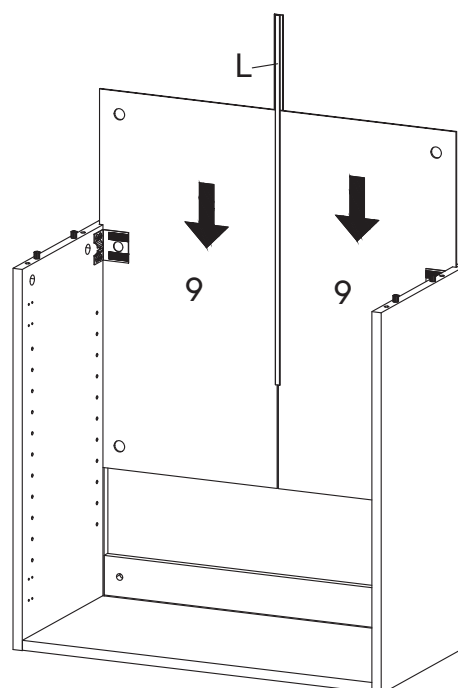


HARDWARE


A Cam Bolt Ø6 x 35 mm x5

COMPONENTS

1 Top Board x1

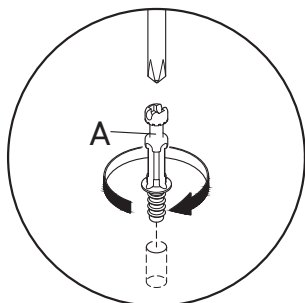

7.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Top Board (1), then tighten using screwdriver.

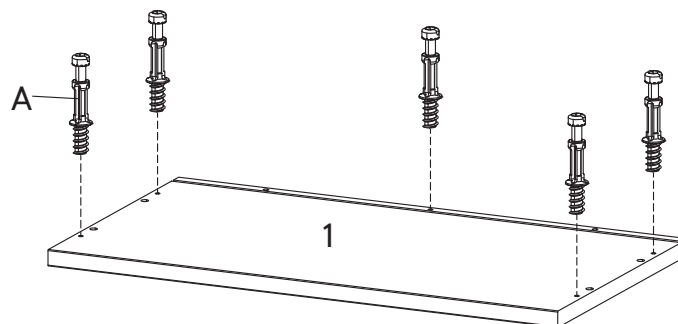

STEP 08

HARDWARE



B Cam Lock Ø15 mm x4

I Screw Cap Ø15 mm x4

COMPONENTS


1 Top Board x1

8.1 Insert Top Board (1) and secure with Cam Lock Ø15 mm (B) into Side Boards then tighten using screwdriver. Put Screw Cap (I) to cam lock on Side Boards. Position as shown in the figure.

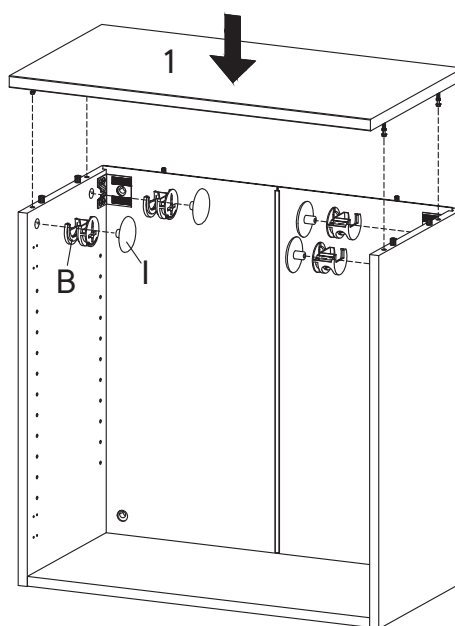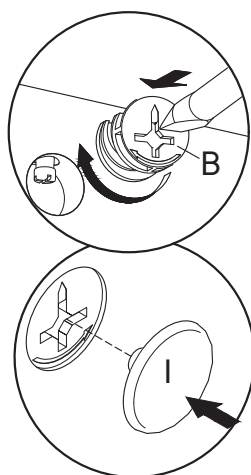


HARDWARE

C	Cam Lock Ø12 mm	x1
F	Screw M 3.5 x 15.5 mm	x4
G	Wedge	x4

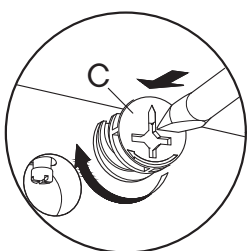

9.1 Insert the Wedges (G) into the Back Board and insert Screw M 3.5 x 15.5 mm (F) into wedge then tighten screw using screwdriver to tighten the back of cabinet.

9.2 Secure with Cam Lock Ø12 mm (C) into support board then tighten using screwdriver, Position as shown in the figure.

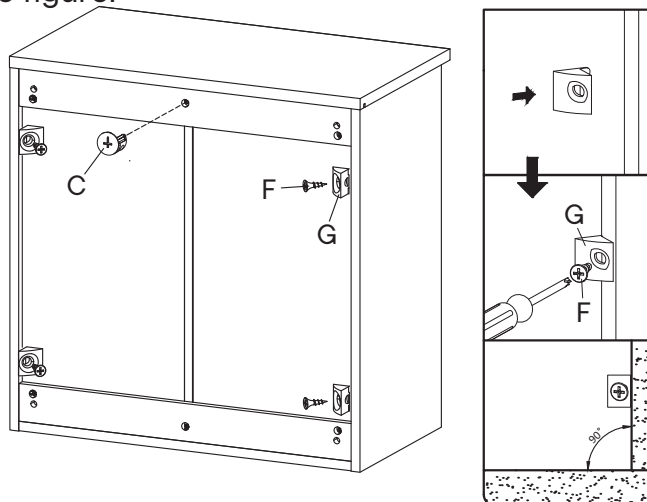

STEP 10



HARDWARE

M	Wall Plug	x4
----------	-----------	----

10.1 Attention to the distance to make the drill into the wall.


10.2 Determine your desired height (Y), recommended at 760 mm, then subtract by 502 mm
This is the drill holes height from the Floor (Z).

10.3 The drilling process and install the Wall plug (M) with the mark that has been made on the wall according to images number 2 and 3

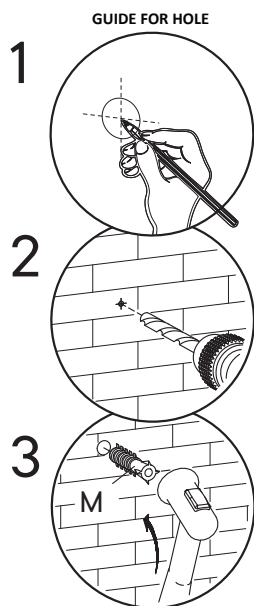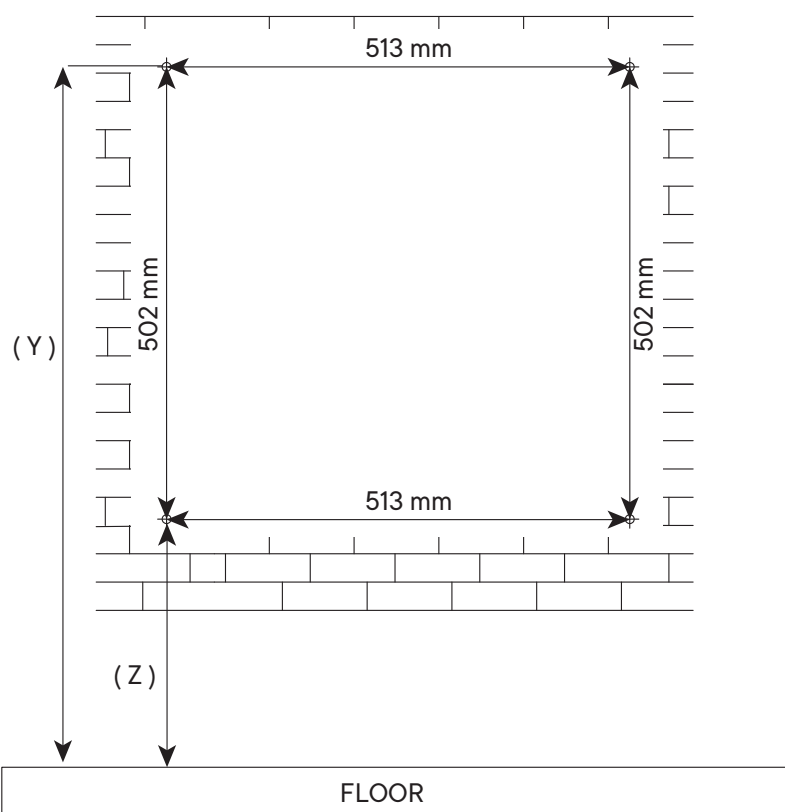

HARDWARE


J	Screw M 5.5 x 45 mm	x4
N	Ring	x2
O	Hanger + Plastic Cover	x2

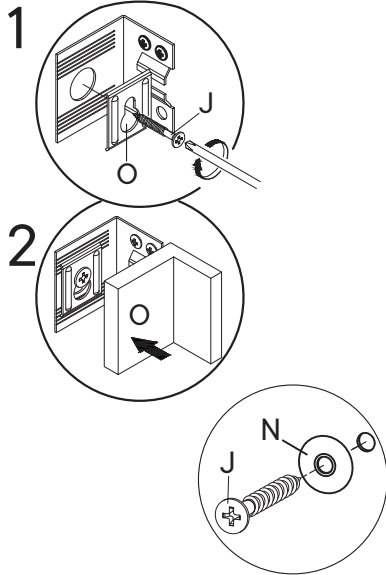

11.1 Attach the product has been assembled to the wall and place it according to the holes position.

11.2 Install Small Hanger (O) and secure with Screw M 5.5 x 45 mm (J) then tighten using screwdriver and close the hanger with Plastic Cover. Position as shown in the figure.

11.3 Install Ring (N) into Back Board, secure with Screw M 5.5 x 45 mm (J) then tighten using screwdriver, Position as shown in the figure.

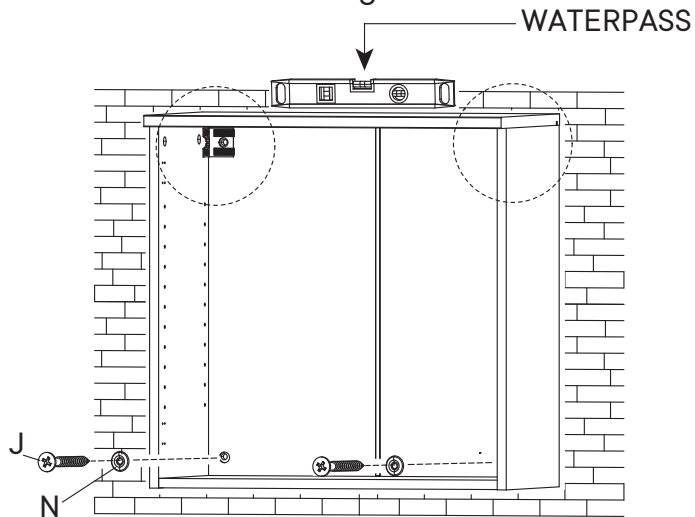

STEP 12



HARDWARE

K	Shelf Pin	x8
----------	-----------	----

COMPONENTS

5	Adjustable Shelf	x2
----------	------------------	----

12.1 Insert Shelf Pin (K) into the holes on the Side Boards at the desired level. Then, place the Adjustable Shelf (5) by aligning its hole with the Shelf Pin (K) and inserting it securely.

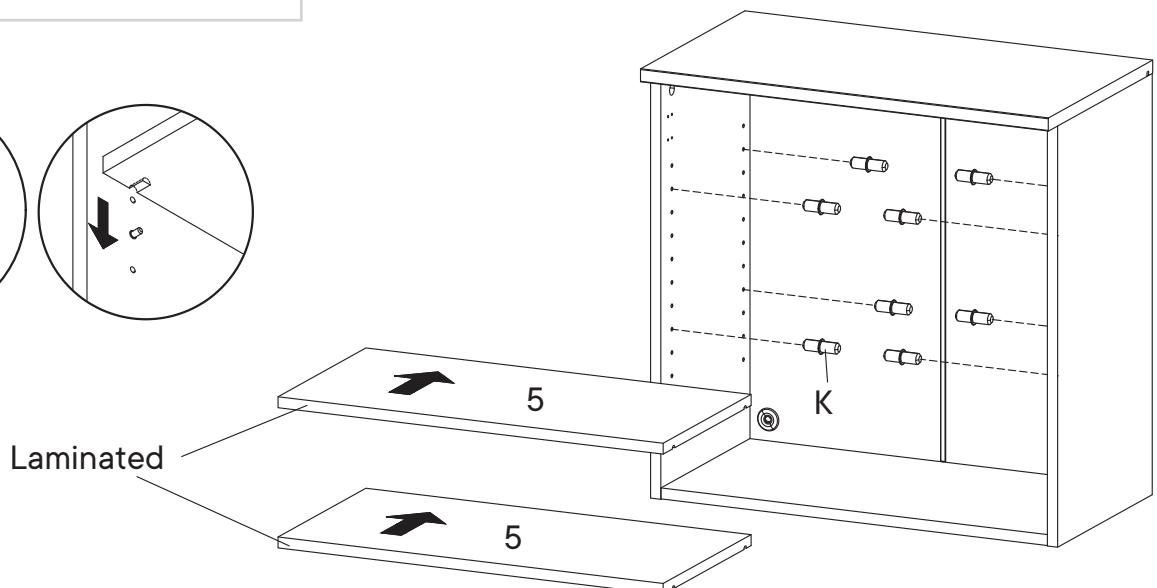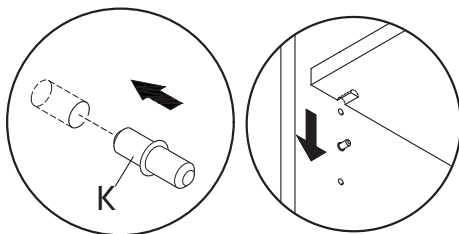

HARDWARE

H Screw M 4.5 x 12.5 mm x8


HS26A Hinge x4

COMPONENTS

6 Door 1 x1

7 Door 2 x1

13.1 Insert Hinge (HS26A) into Door 1 (6) and Door 2 (7). Secure with Screw M 4.5 x 12.5 mm (H), then tighten using screwdriver

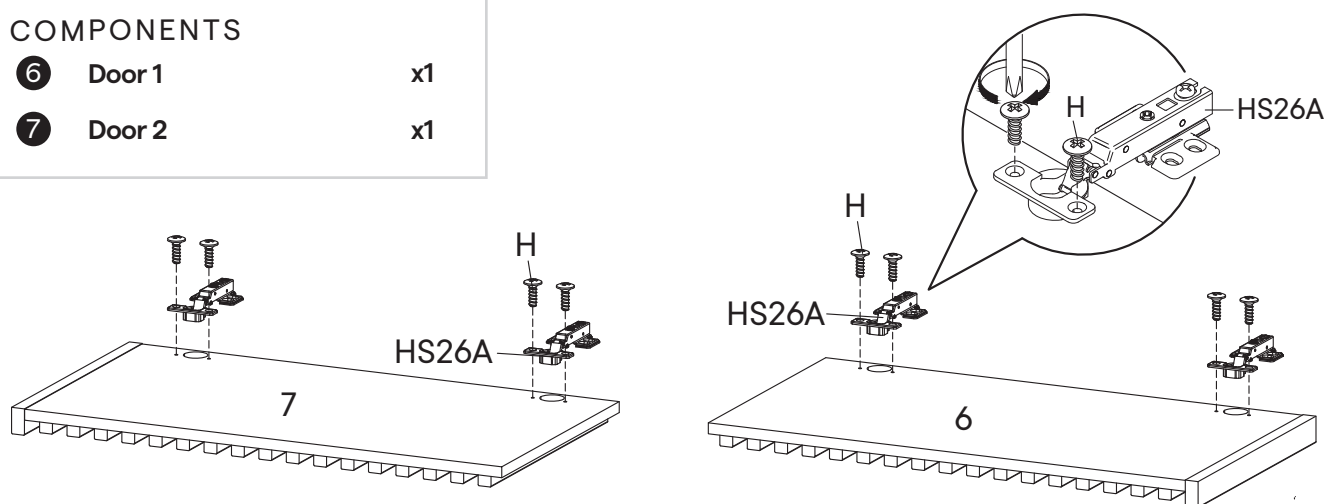

STEP 14

HARDWARE



H Screw M 4.5 x 12.5 mm x16

COMPONENTS

6 Door 1 x1

7 Door 2 x1

14.1 Install Door 1 (6) and Door 2 (7) into Side Board. Please see the above images carefully. Secure with Screw M 4.5 x 12.5 mm (H), then tighten all screw using screwdriver. Please refer to the last page for more guide on how to adjust hinges. Position as shown in the figure.

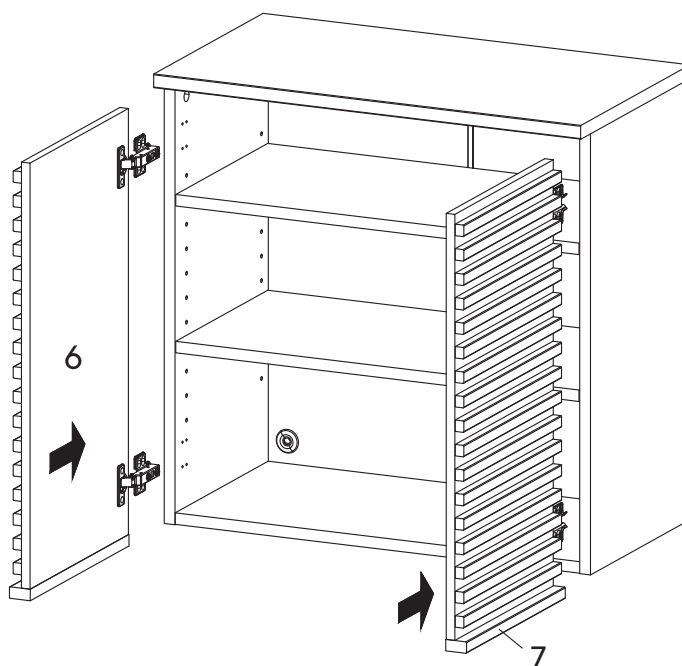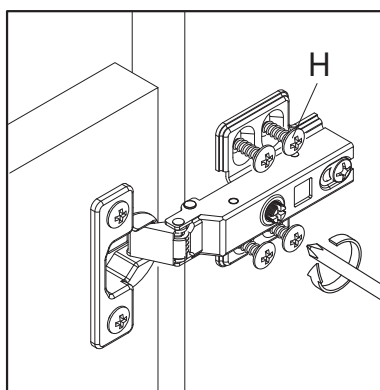


Great job!

Cabinet assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

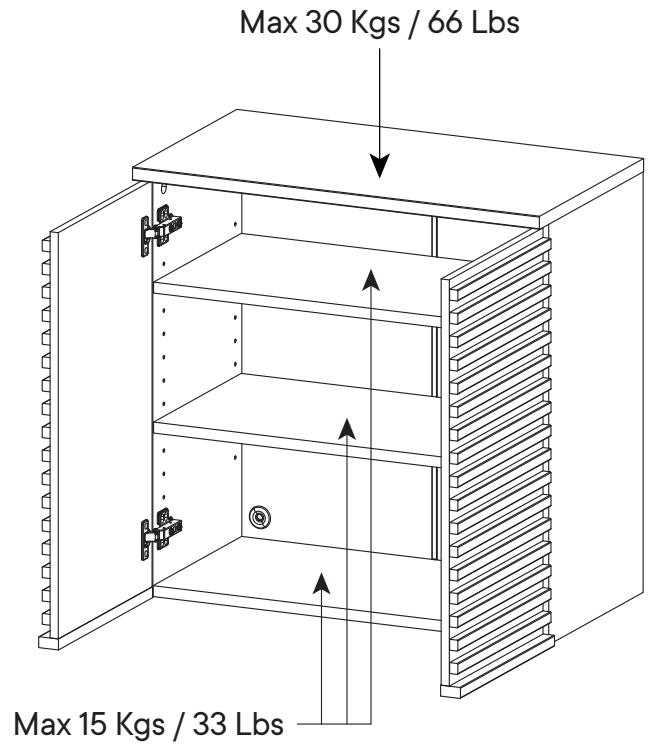

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

modway




Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

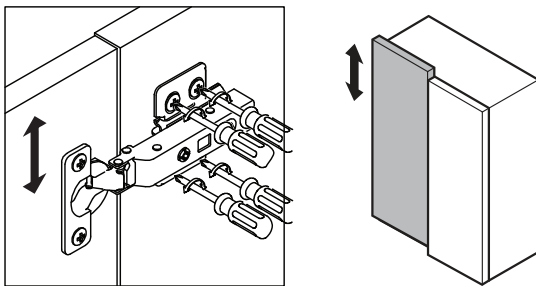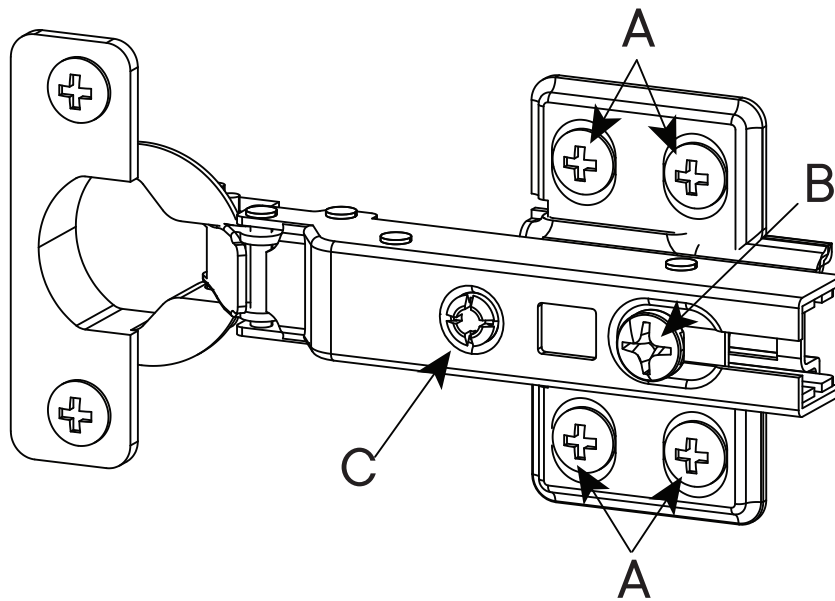


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

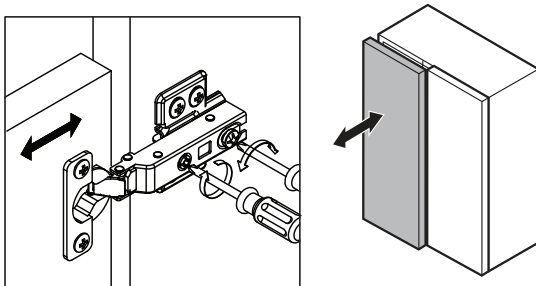

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

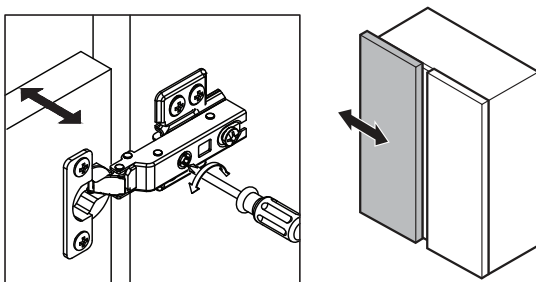

To adjust side ways.

Turn screw "C" on BOTH hinges on each door.