
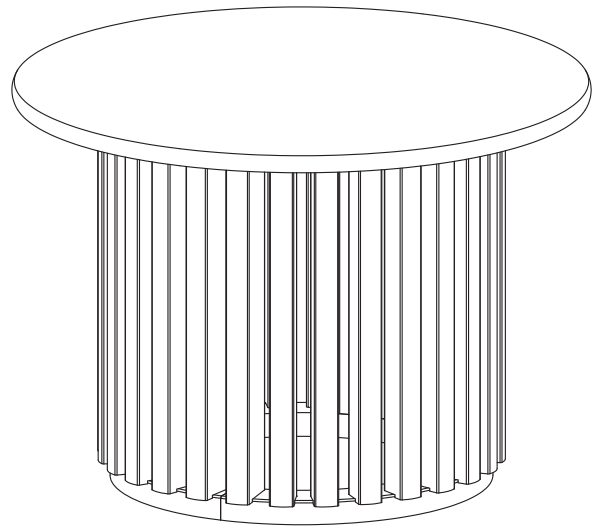


ASSEMBLY INSTRUCTIONS

EEI-7345

VO.14.03.25

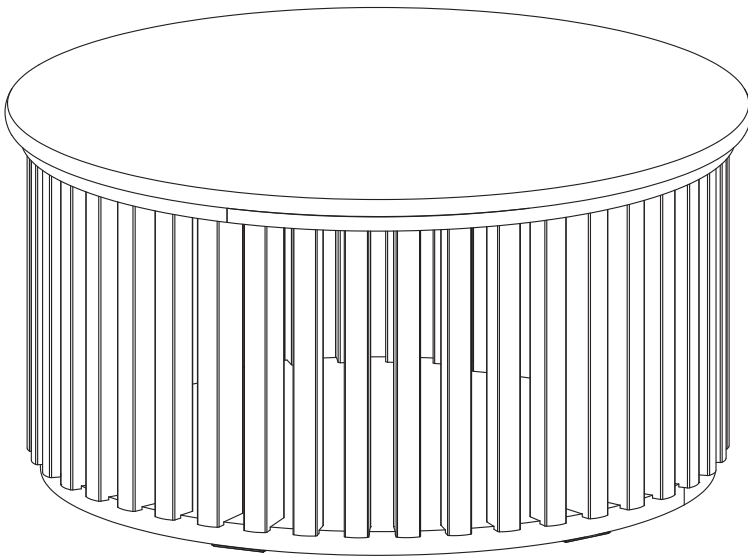

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board Big	x1
2	Bottom Board Big	x1
3	Bar Side 1 Big	x35
4	Bar Side 2 Big	x8
5	Support Board	x2
6	Top Board Small	x1
7	Bottom Board Small	x2
8	Bar Side 1 Small	x21
9	Bar Side 2 Small	x8

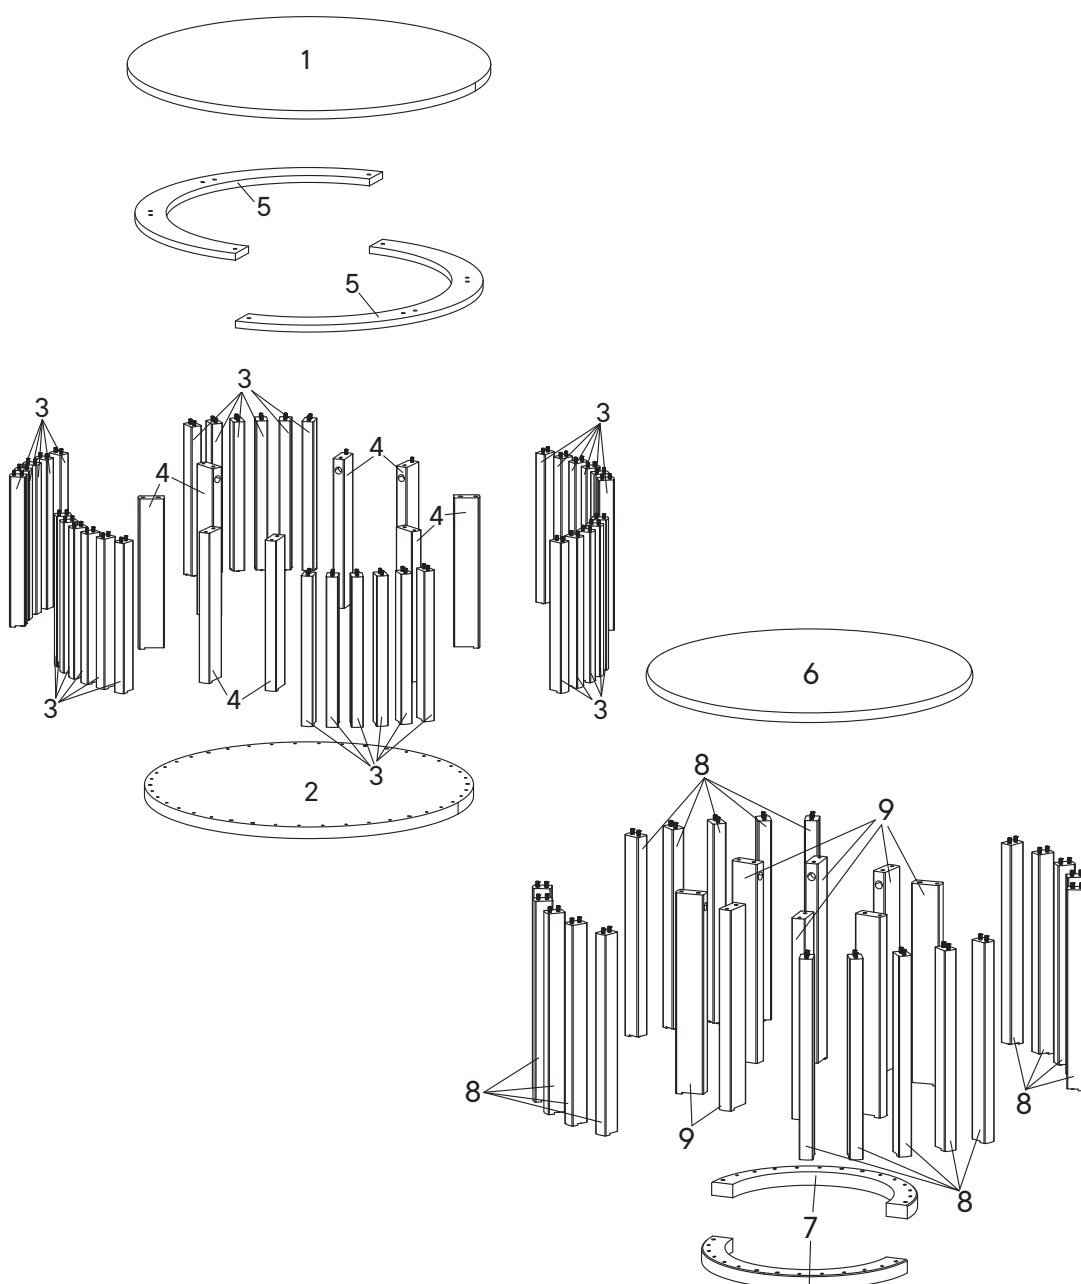

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x16
B		Cam Lock Ø15 mm	x16
C		Wood Dowel Ø6 x 30 mm	x16
D		Screw M 7 x 50 mm	x16
E		Allen Key	x2
F		Floor Glide	x16
G		Screw M 4.5 x 12.5 mm	x4

H		Stopper	x4
I		PVC Sheet	x2

What you need:


 Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?
 Contact us before returning your item. We're here to help!
 609.256.9000 • cs@modway.com






Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
- C** Wood Dowel Ø6 x 30 mm x8

COMPONENTS

- 4** Bar Side 2 Big x8
- 5** Support Board x2

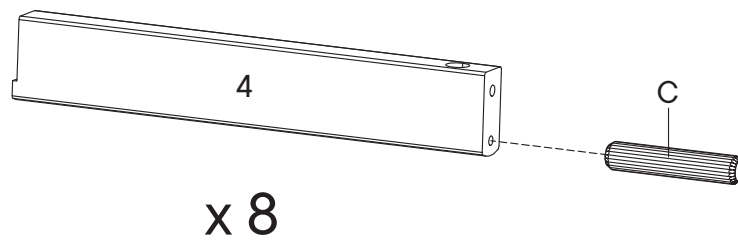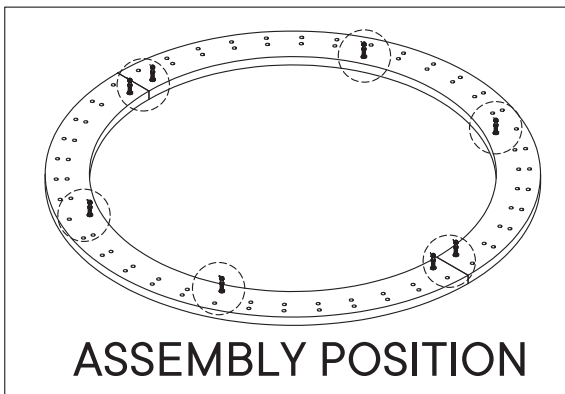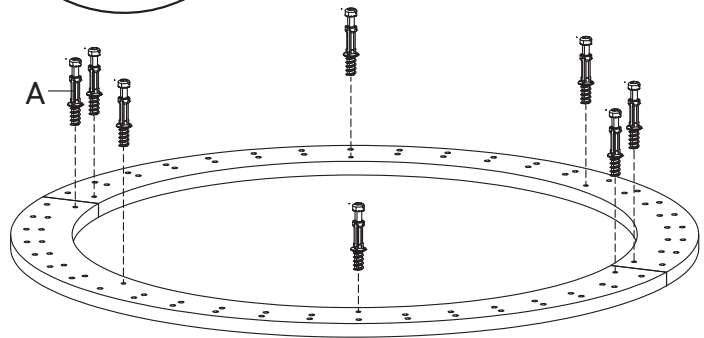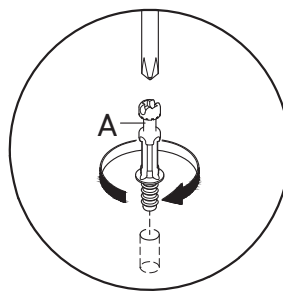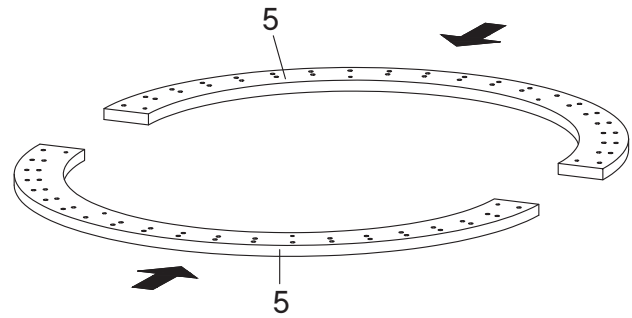


Step 2

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

4 Bar Side 2 Big x4

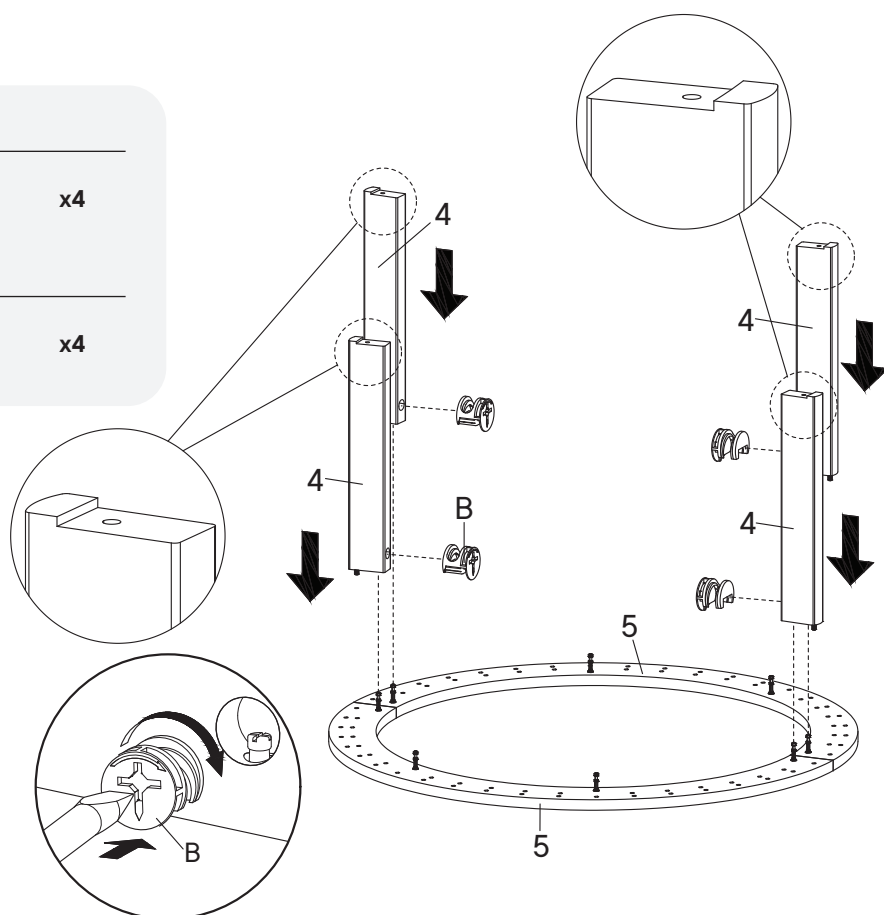


Step 3

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

4 Bar Side 2 Big x4

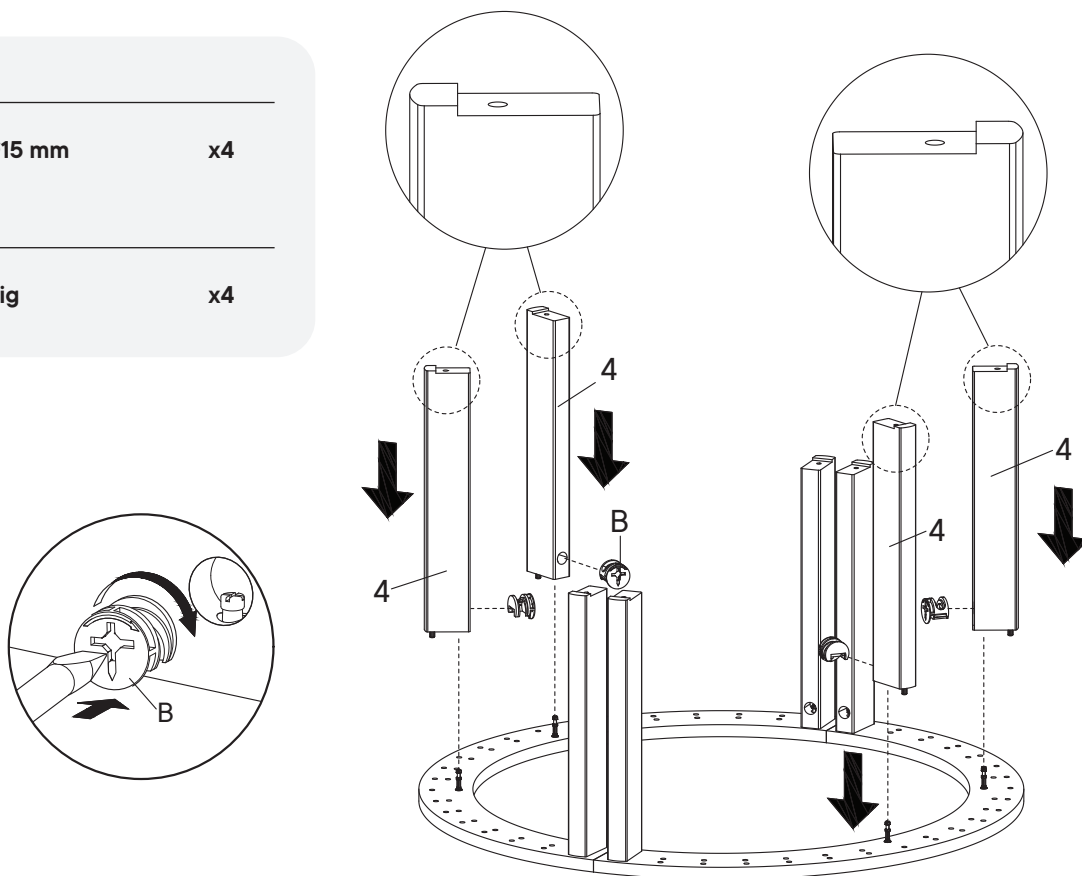



Step 4

HARDWARE

- D** Screw M 7 x 50 mm x8
- E** Allen Key x1

COMPONENTS



- 2** Bottom Board Big x1

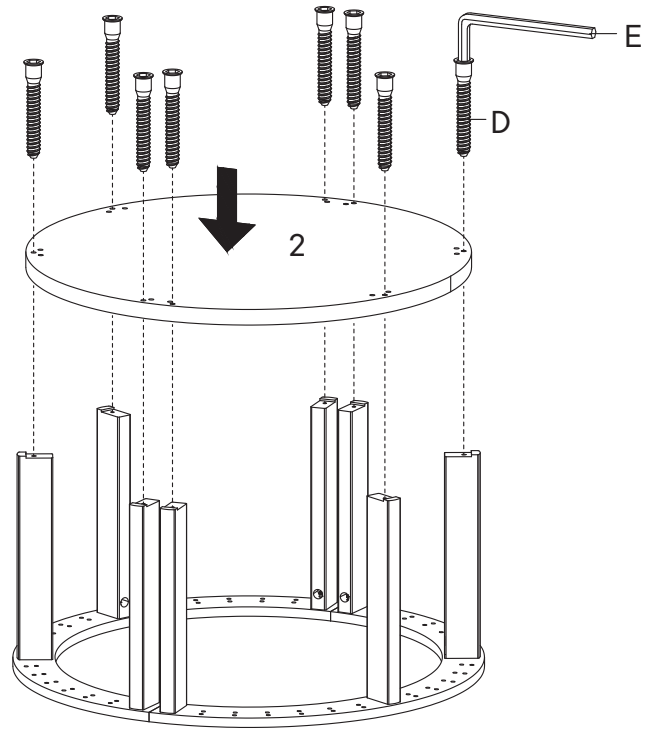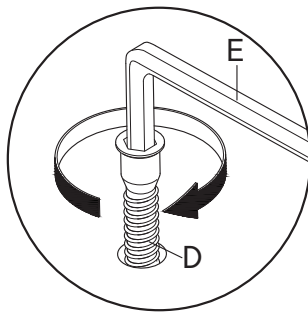

Step 5

HARDWARE

- F** Floor Glide x6

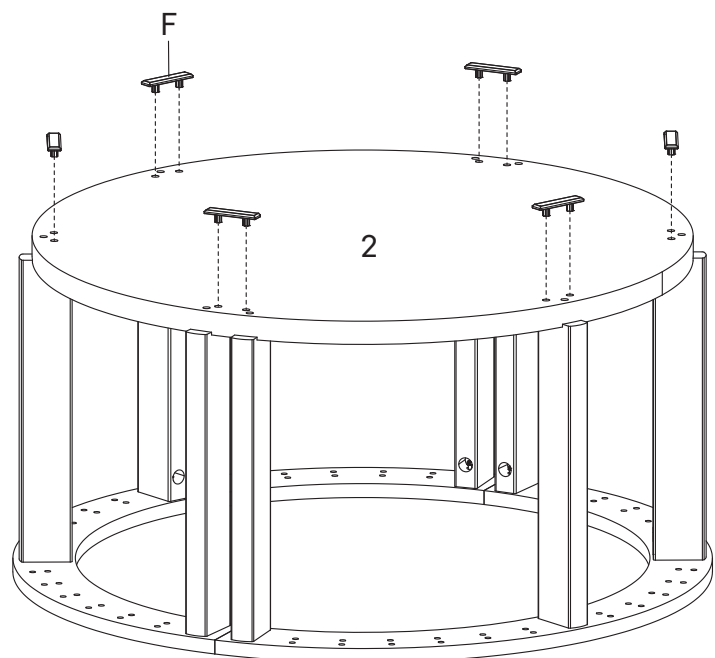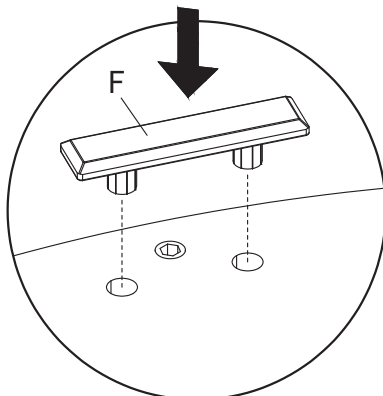


Step 6

HARDWARE


① PVC Sheet x1

COMPONENTS

③ Bar Side 1 Big x35

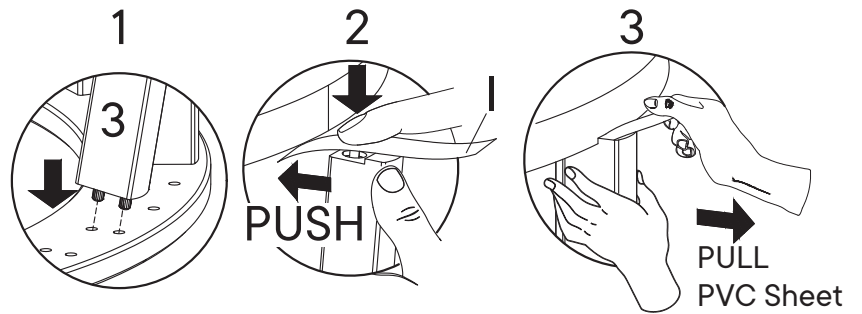


Only need 34 pcs of (3) Bar Side 1 Big for assembly, the package comes with extra 1 piece for spare.

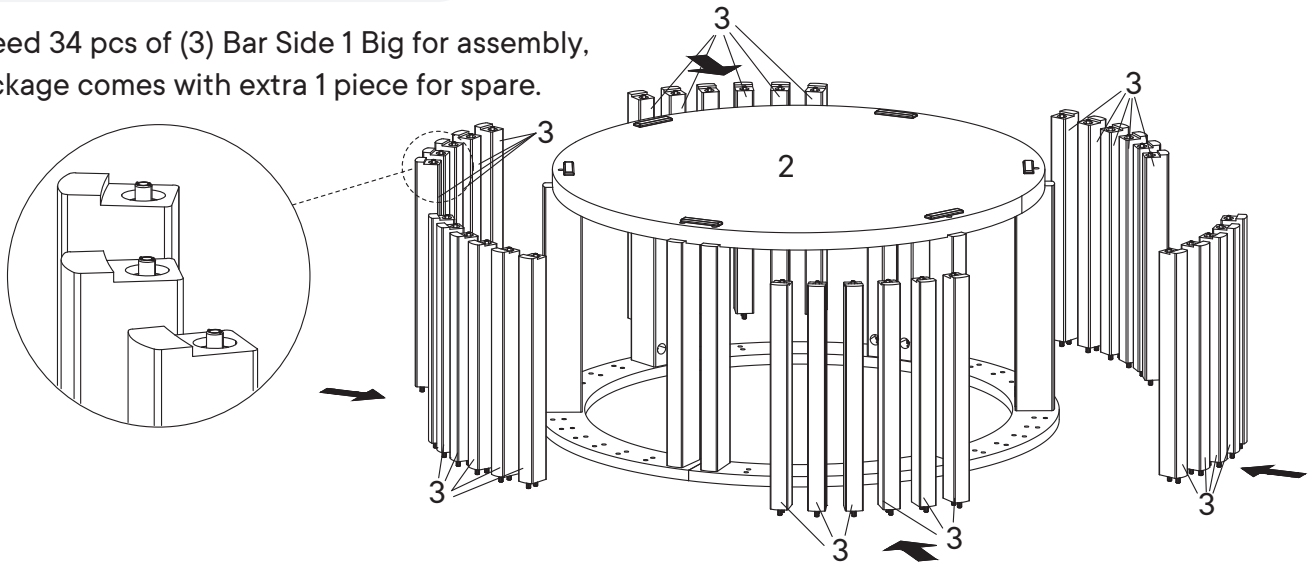

Step 7

HARDWARE

F Floor Glide x6

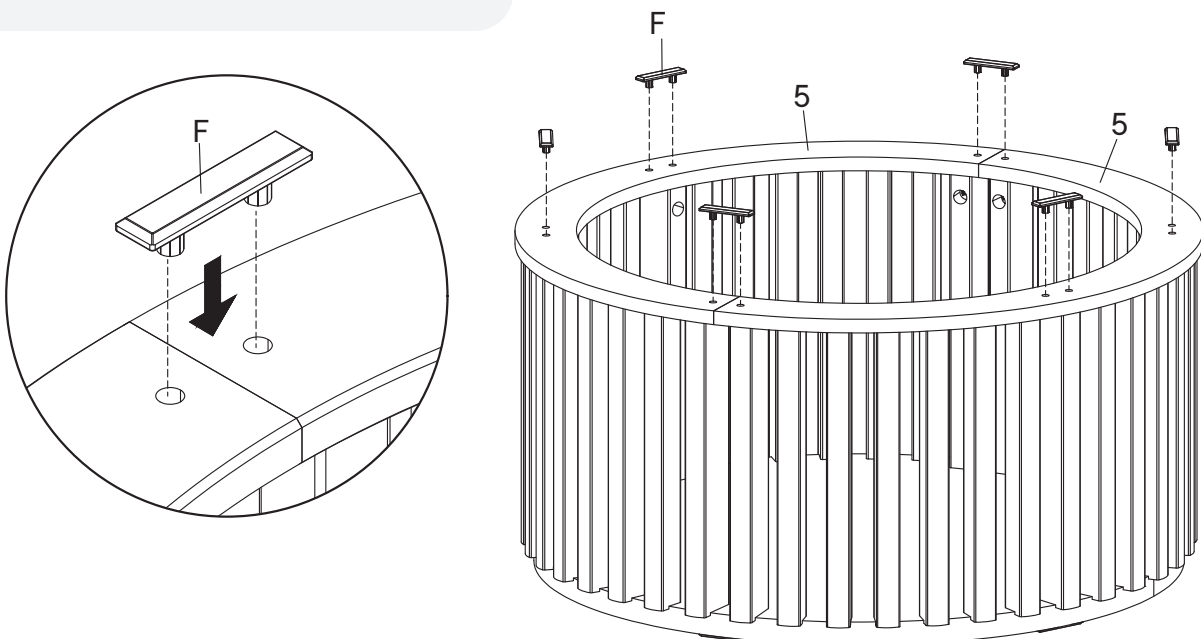

Step 8


HARDWARE

G Screw M 4.5 x 12.5 mm x4

H Stopper x4

COMPONENTS



1 Top Board Big x1

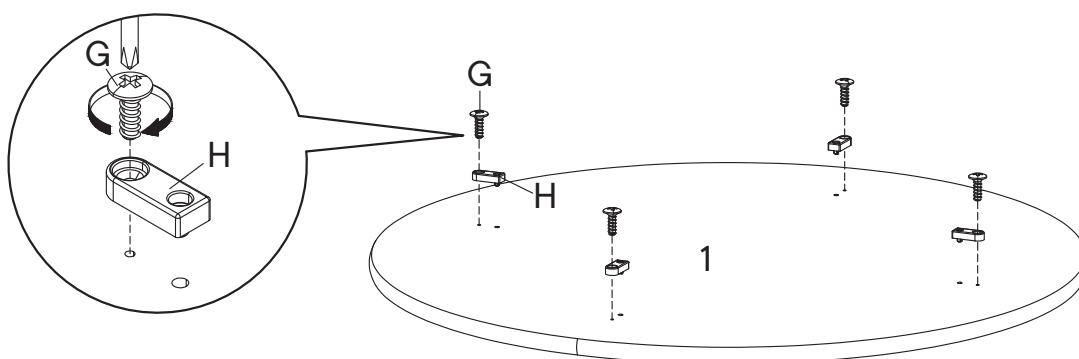


Step 9

COMPONENTS

1 Top Board Big x1

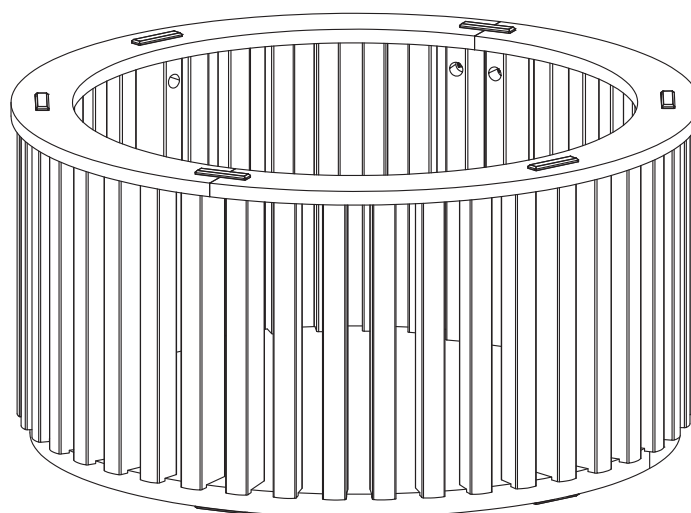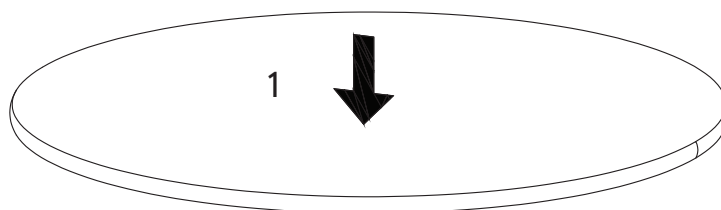

Step 10

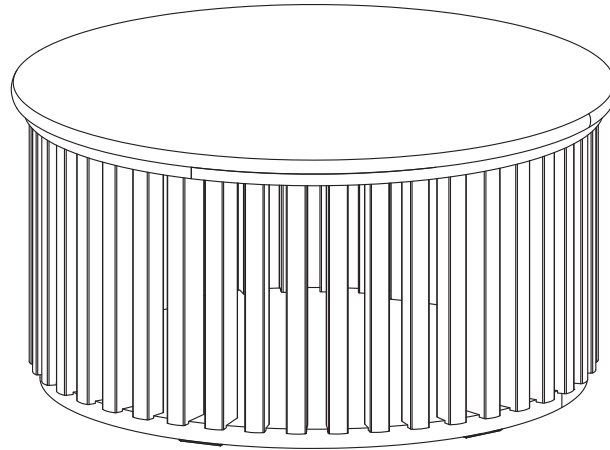




Step 11

HARDWARE

- A** Cam Bolt $\varnothing 6 \times 35$ mm x8
- C** Wood Dowel $\varnothing 6 \times 30$ mm x8

COMPONENTS

- 6** Top Board Small x1
- 9** Bar Side 2 Small x8

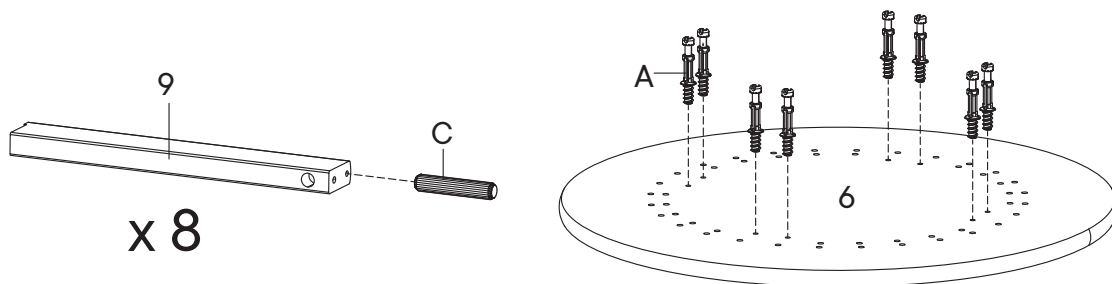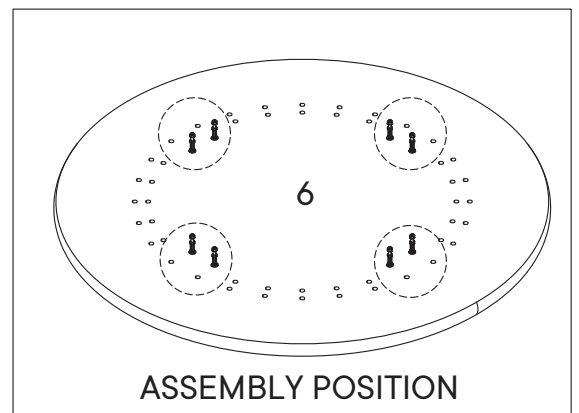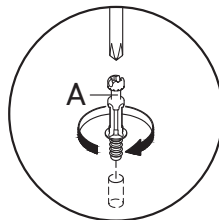


Step 12

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

9 Bar Side 2 Small x4

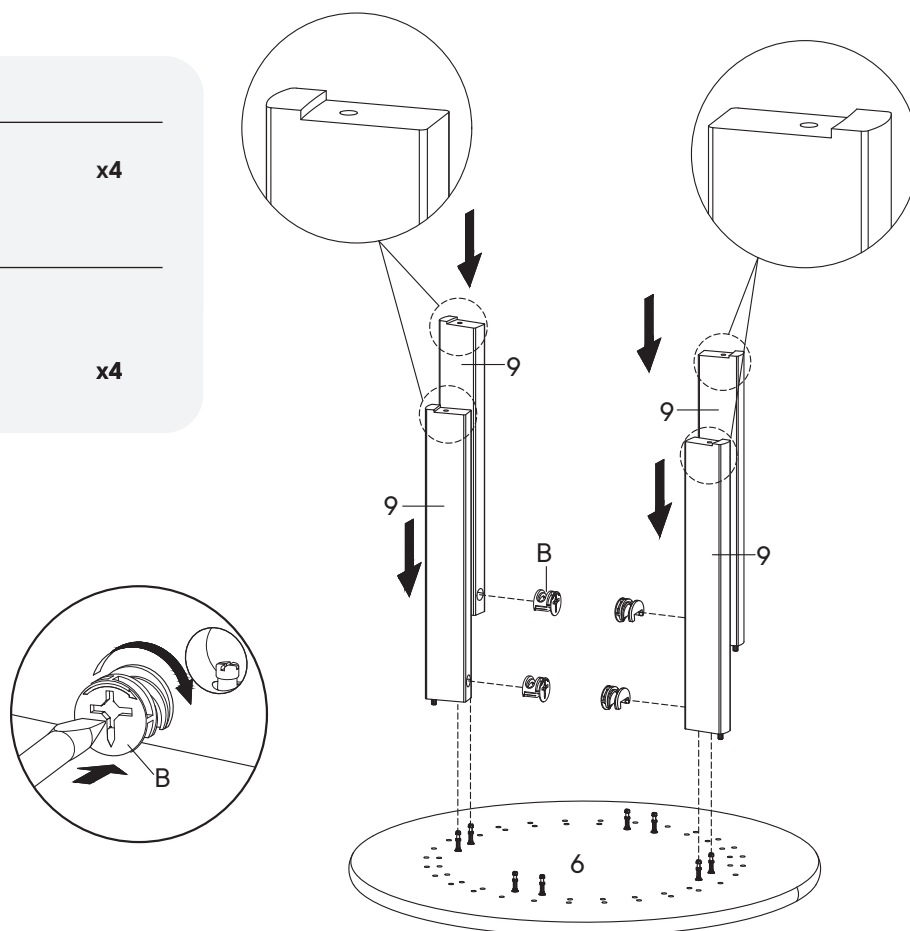


Step 13

HARDWARE

B Cam Lock Ø15 mm x4

COMPONENTS

9 Bar Side 2 Small x4

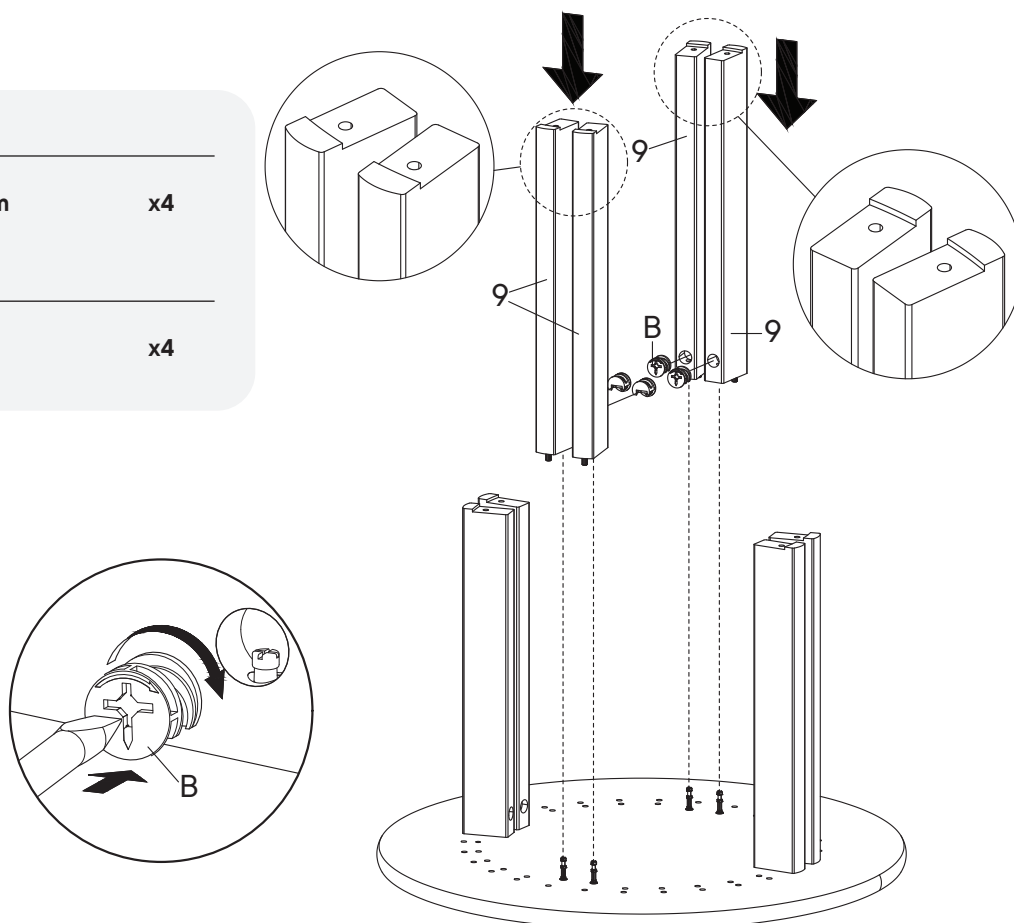


Step 14

HARDWARE

- D** Screw M 7 x 50 mm x4
- E** Allen Key x1

COMPONENTS

- 7** Bottom Board Small x1

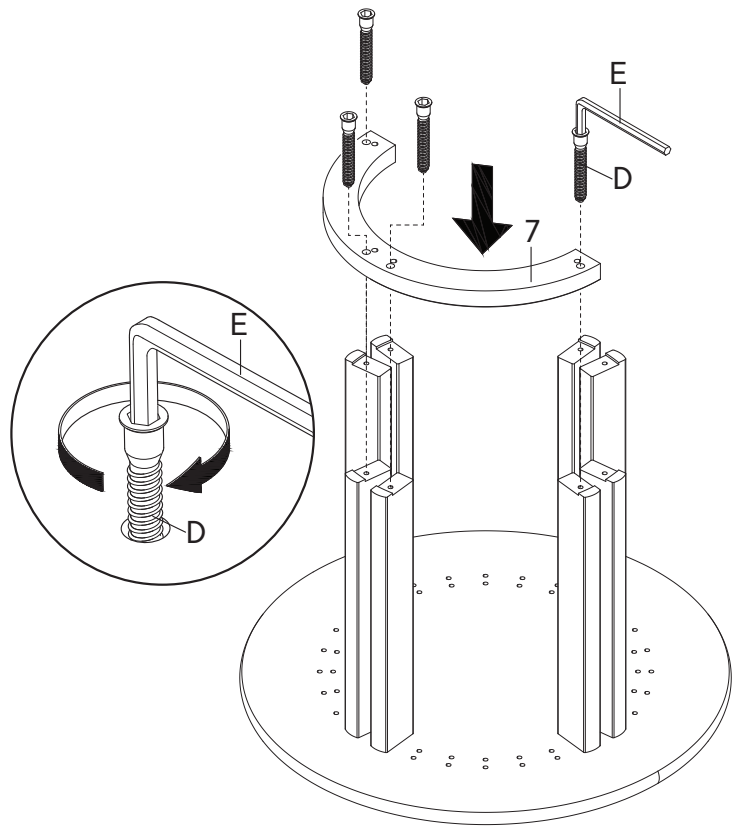


Step 15

HARDWARE

- D** Screw M 7 x 50 mm x4
- E** Allen Key x1

COMPONENTS



- 7** Bottom Board Small x1

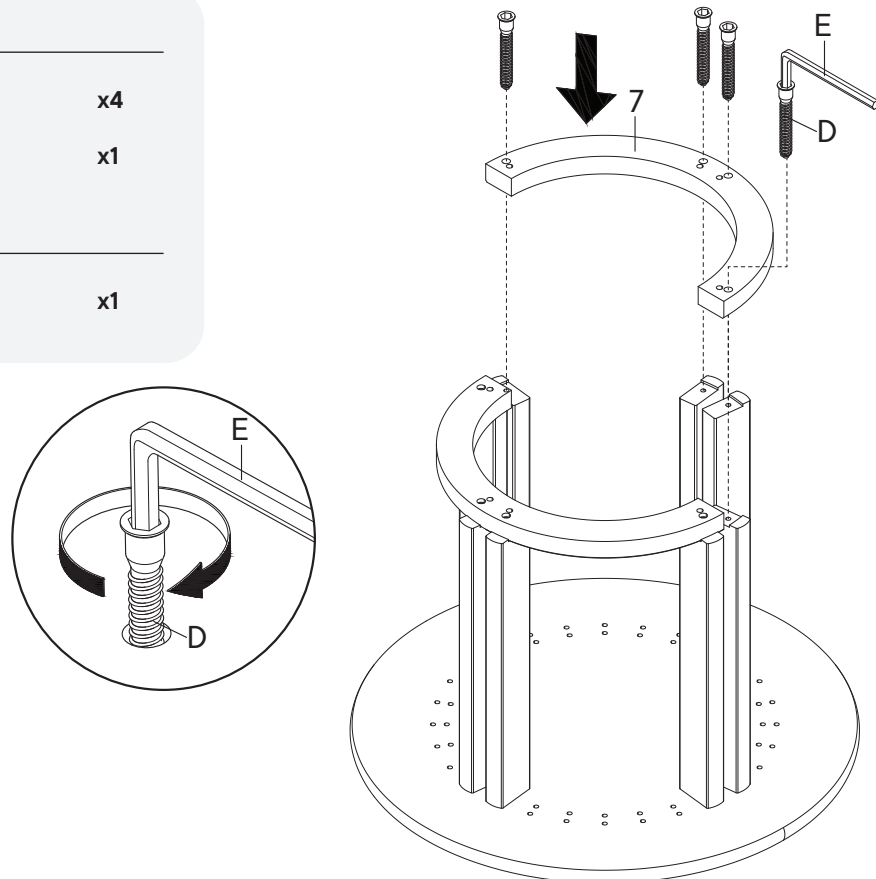

Step 16

HARDWARE

F Floor Glide x4

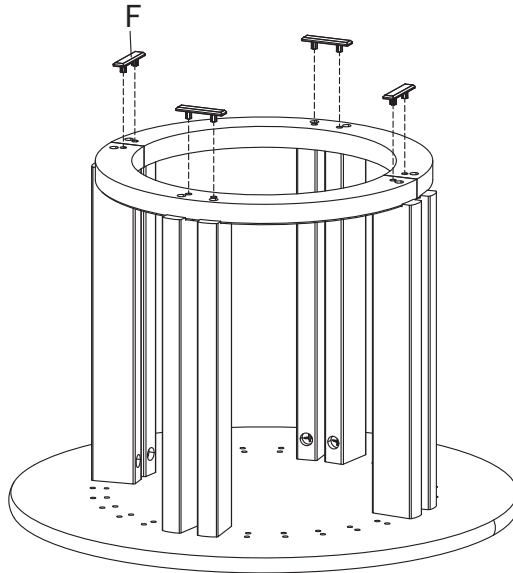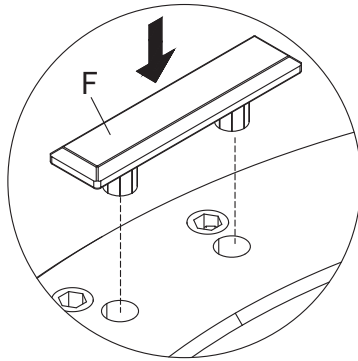




Step 17

HARDWARE



I PVC Sheet x2

COMPONENTS


8 Bar Side 1 Small x21

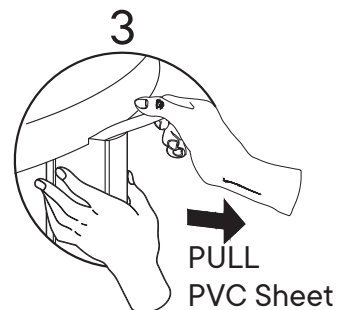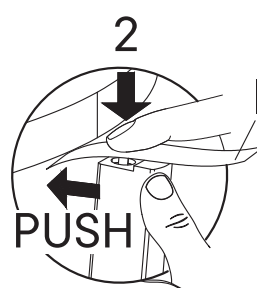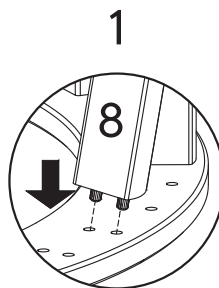

Only need 20 pcs of (8) Bar Side 1 Small for assembly, the package comes with extra 1 piece for spare.

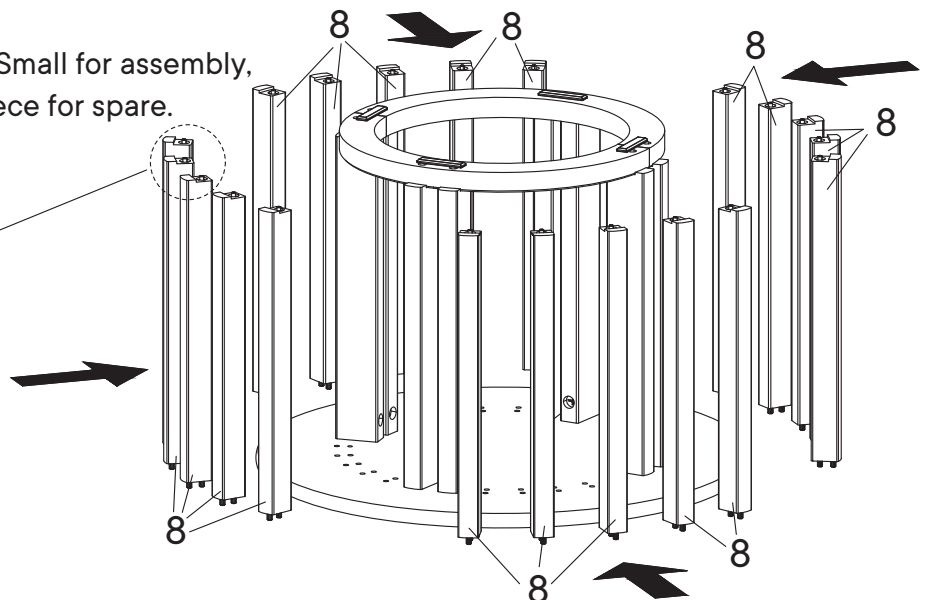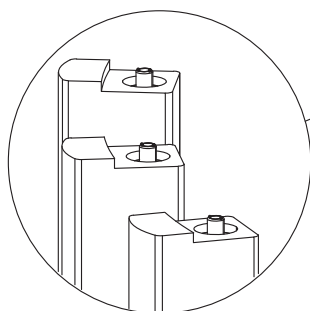

Step 18

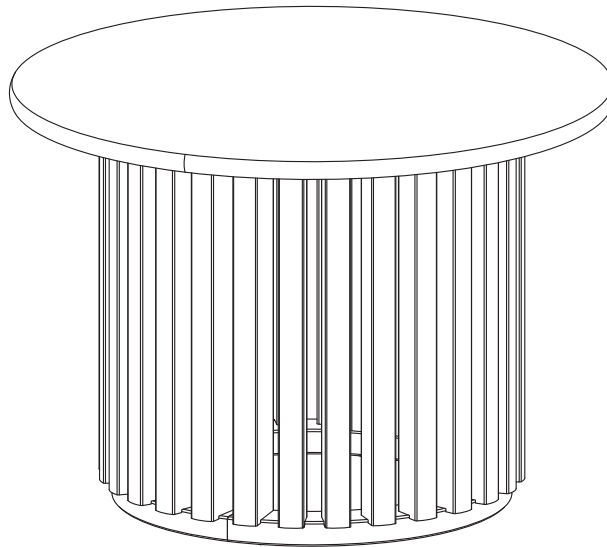

Great job!

Coffee Table assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.


Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.


Never use harsh chemicals, as they could damage the finish or integrity of the item.

This product must be mounted on the wall and use the Anti-Tip

Max 80 Kg / 176 Lbs

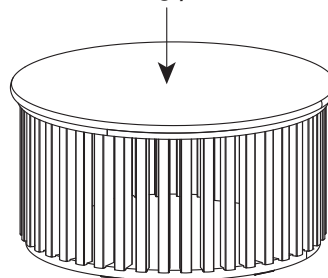

Max 50 Kg / 110 Lbs

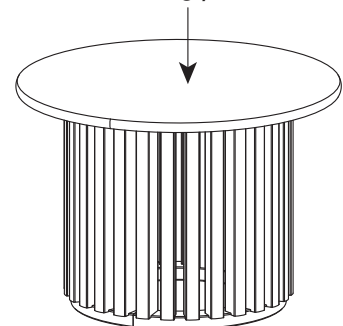

CONNECT WITH US!   

Tag us @modway_furniture and #modway for a chance to be featured.