


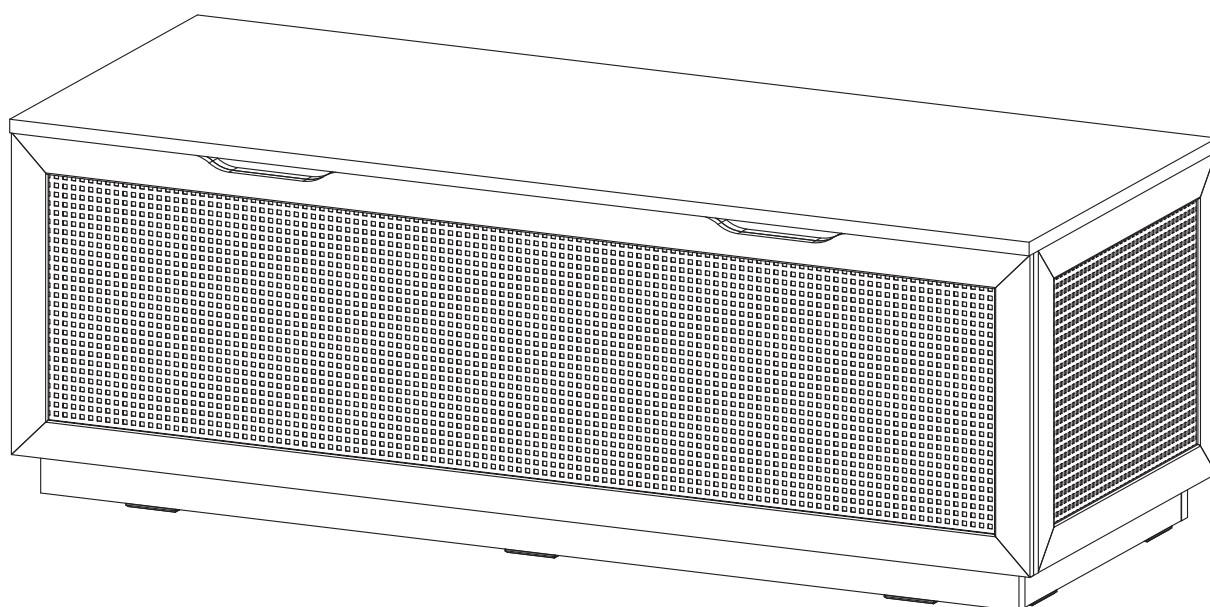

ASSEMBLY INSTRUCTIONS

Storage Bench

EEl-7434 / V0.05.08.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A  Cam Bolt Ø6 x 35 mm x30

B  Cam Lock Ø15 mm x30


C  Wood Dowel Ø8 x 30 mm x32

D  Floor Glide x10


E  Allen Key x2


F  Screw M 6 x 12.5 mm x4

G  Screw Cap Ø15 mm x12


H  Screw M 7 x 50 mm x4

I  Silicon Bumper x5

J  Screw M 4.5 x 12.5 mm x22

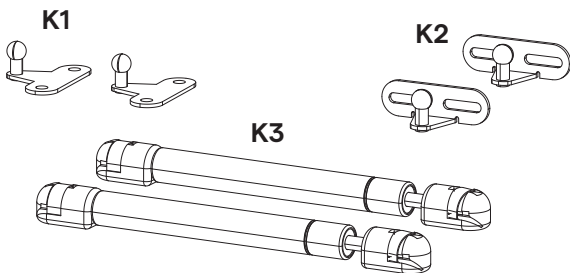K  Lid Stay x2

L  Wood Dowel Ø6 x 30 mm x4


HS26A  Hinge x3

WHAT YOU NEED:



Phillips Head Screwdriver

All parts are numbered with a sticker according to this list.

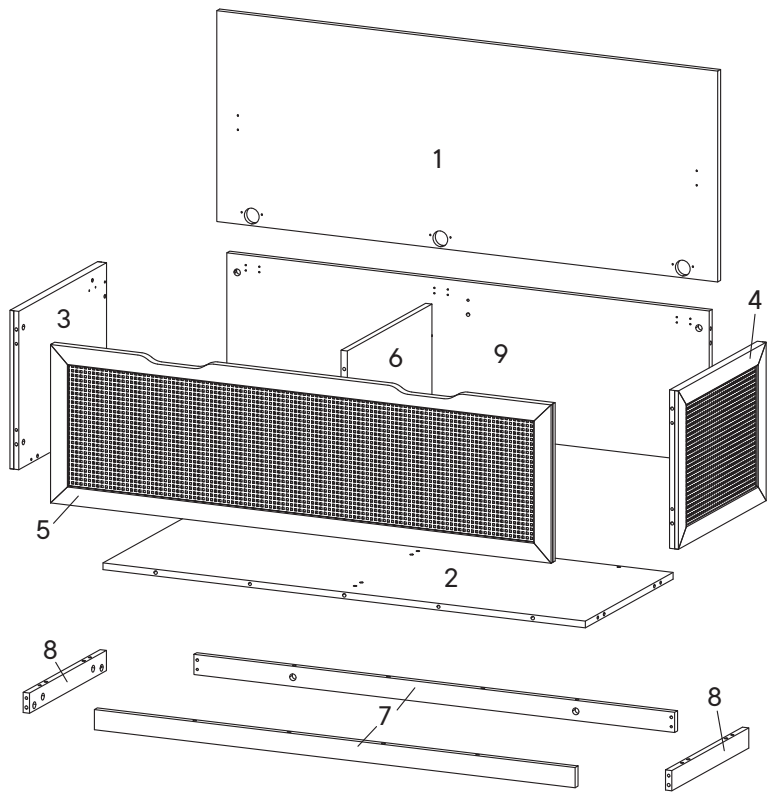

1	Top Board	x1	6	Center Board	x1
2	Bottom Board	x1	7	Bottom Skirt 1	x2
3	Side Board Left	x1	8	Bottom Skirt 2	x2
4	Side Board Right	x1	9	Back Board	x1
5	Front Board	x1			

HARDWARE



- A** Cam Bolt Ø6 x 35 mm x2
C Wood Dowel Ø8 x 30 mm x20

COMPONENTS

- 2** Bottom Board x1
6 Center Board x1
9 Back Board x1

1.1 Insert Wood Dowel Ø8 x 30 mm (C) into the Bottom Board (2) and Center Board (6).

1.2 Insert Wood Dowel Ø8 x 30 mm (C) and Cam Bolt Ø6 x 35 mm (A) into the Back Board (9), then tighten the Cam Bolt using screwdriver.

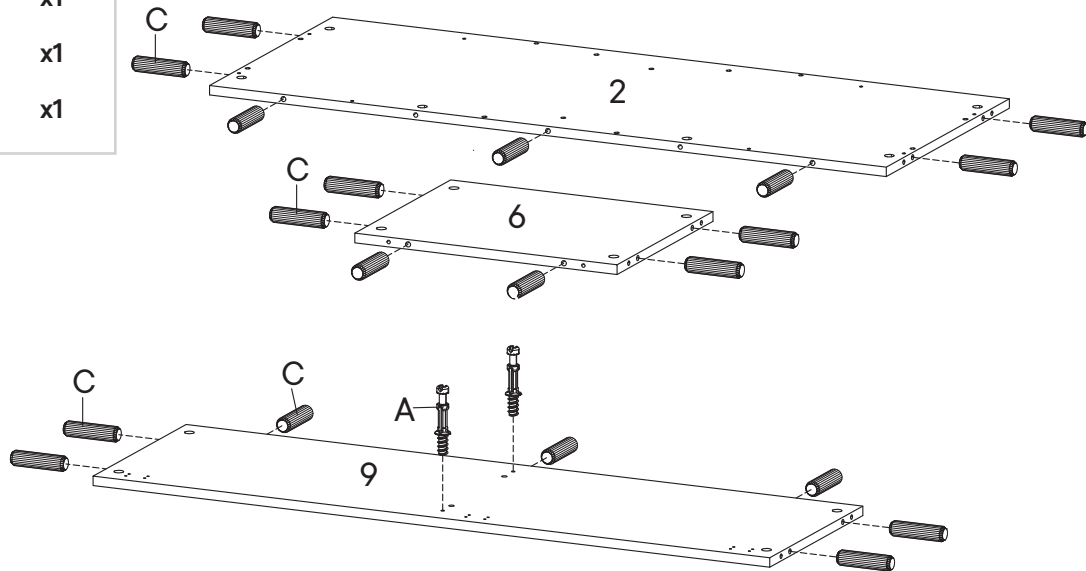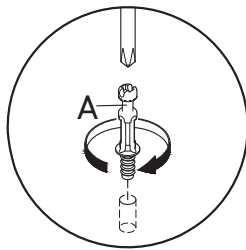

STEP 02

HARDWARE



- B** Cam Lock Ø15 mm x2
G Screw Cap Ø15 mm x2

COMPONENTS

- 6** Center Board x1
9 Back Board x1

2.1 Take Styrofoam from the box, and put under Back Board (9) Component before start assembly component. Position as shown in the figure

2.2 Combine Center Board (6) into Back Board (9) and secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Put Screw Cap Ø15 mm (G) to the Cam Lock on Center Board. Position as shown in the figure.

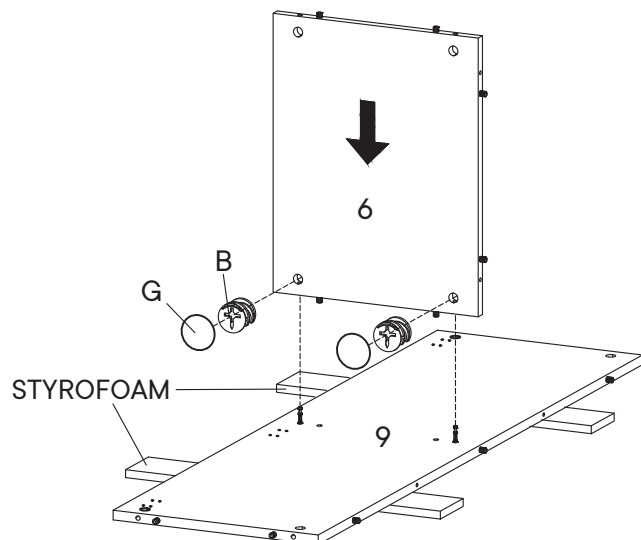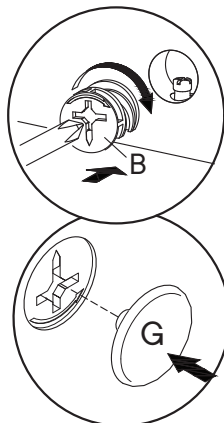


HARDWARE

- (E)** Allen Key x1
(H) Screw M 7 x 50 mm x4

COMPONENTS

- (2)** Bottom Board x1

3.1 Combine Bottom Board (2) into Pre - Assembly in previous step and secure with Screw M 7 x 50 mm (H), tighten screws using Allen Key (E).

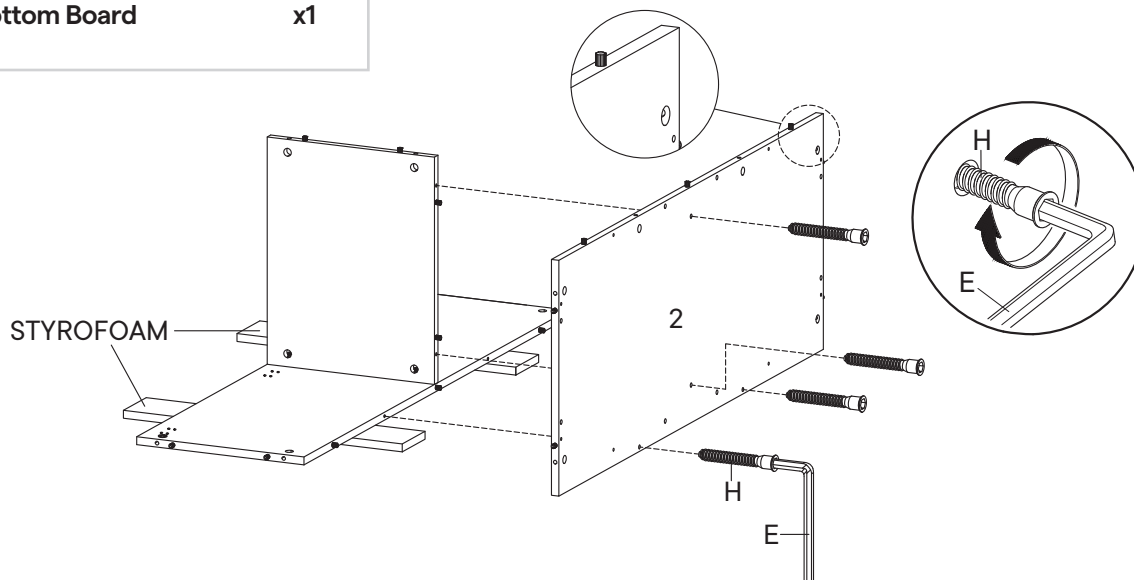

STEP 04

HARDWARE


- (A)** Cam Bolt Ø6 x 35 mm x8
(C) Wood Dowel Ø8 x 30 mm x4

COMPONENTS

- (3)** Side Board Left x1
(4) Side Board Right x1

4.1 Insert Wood Dowel Ø8 x 30 mm (C) and Cam Bolt Ø6 x 35 mm (A) into the Side Board Left (3), then tighten the Cam Bolt using screwdriver.

4.2 Insert Wood Dowel Ø8 x 30 mm (C) and Cam Bolt Ø6 x 35 mm (A) into the Side Board Right (4), then tighten the Cam Bolt using screwdriver.

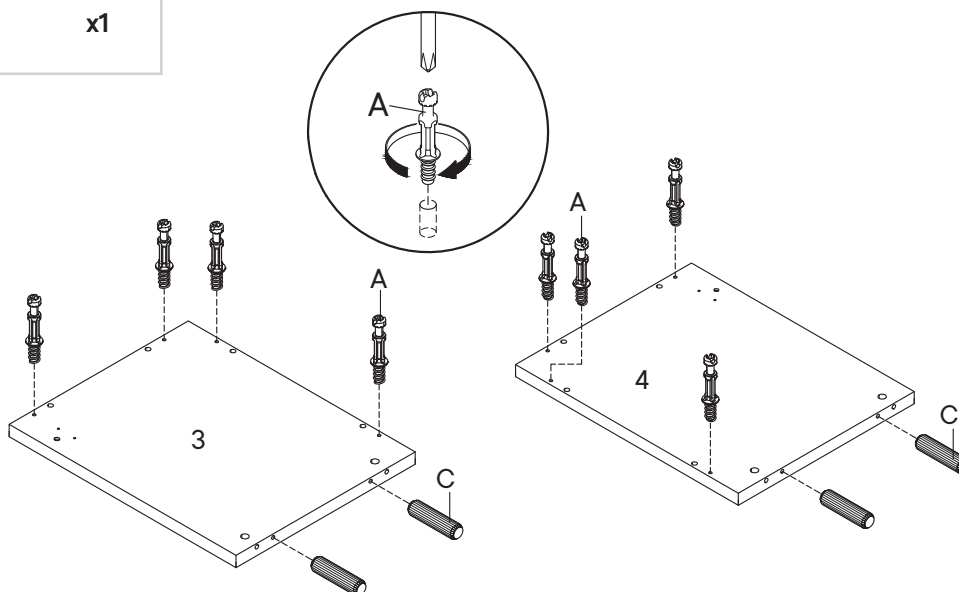

HARDWARE







- J** Screw M 4.5 x 12.5 mm x4
K Lid Stay x2

COMPONENTS

- 3** Side Board Left x1
4 Side Board Right x1

5.1 Install the Lid Stay (K) into the Side Board Left (3) and secure with Screw M 4.5 x 12.5 mm (J), tighten screws using screwdriver. Make sure the position of Lid Stay as shown in the detail.

5.2 Install the Lid Stay (K) into the Side Board Right (4) and secure with Screw M 4.5 x 12.5 mm (J), tighten screws using screwdriver. Make sure the position of Lid Stay as shown in the detail.

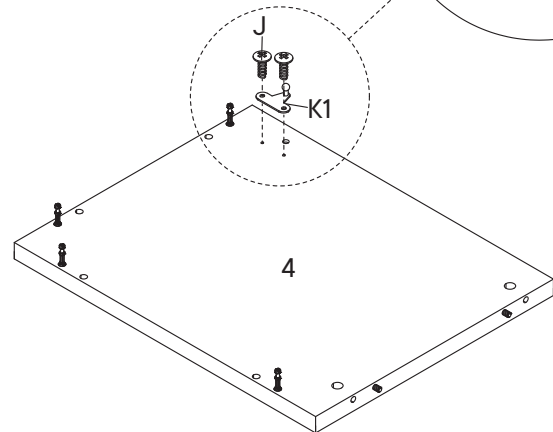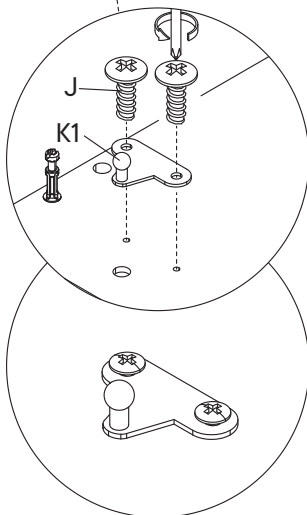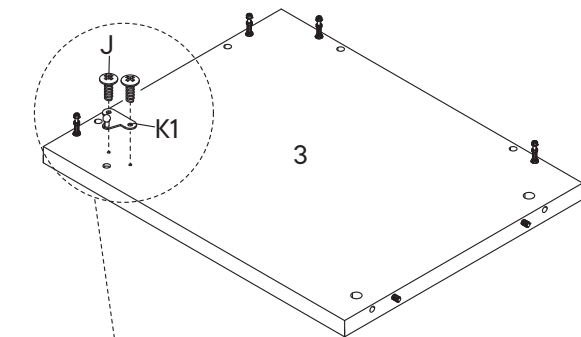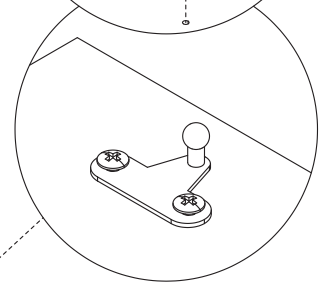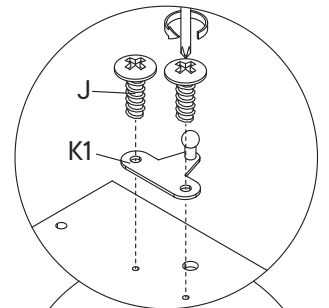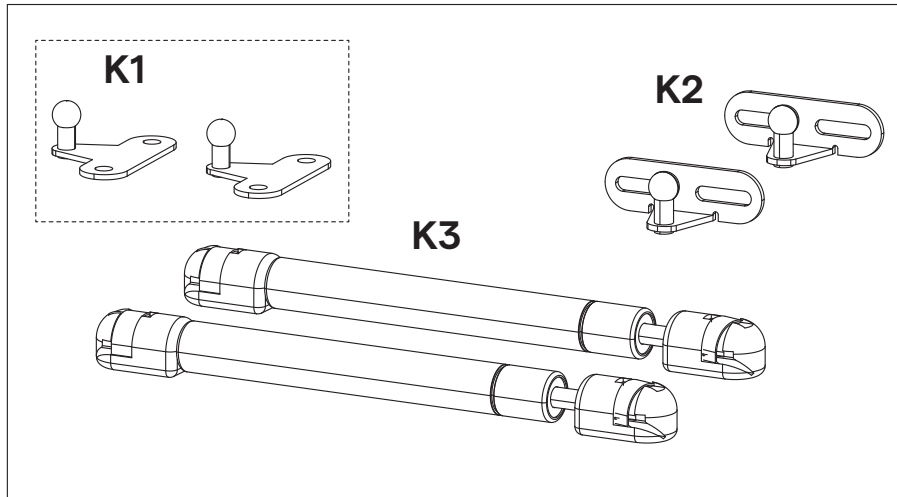


HARDWARE

- B** Cam Lock Ø15 mm x4
G Screw Cap Ø15 mm x4

COMPONENTS

- 3** Side Board Left x1
4 Side Board Right x1

6.1 Combine Side Board Left (3) and Side Board Right (4) into pre-assembled components and secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Put Screw Cap Ø15 mm (G) to the Cam Lock on Back Board. Position as shown in the figure.

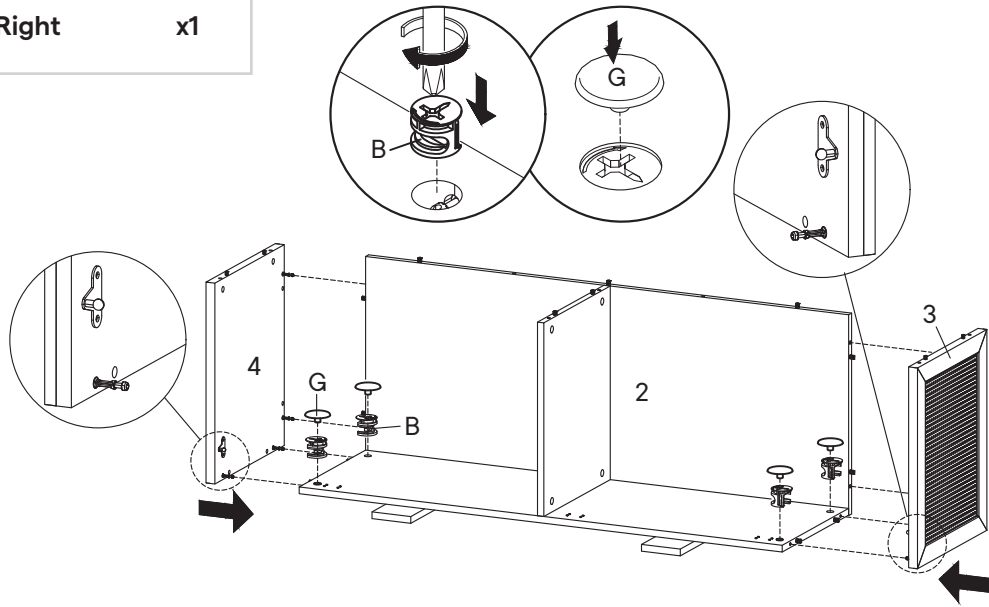

STEP 07


HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8

COMPONENTS

- 5** Front Board x1

7.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Front Board (5), then tighten using screwdriver.

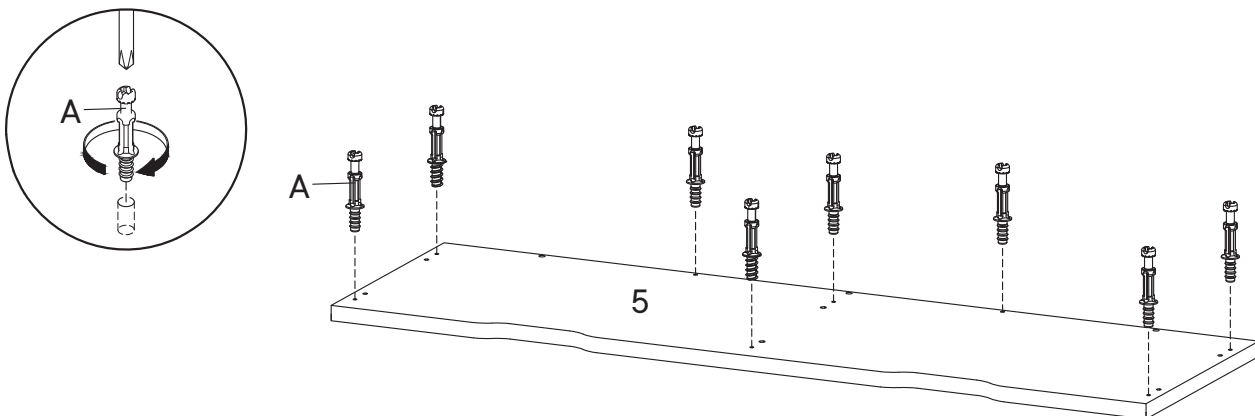



HARDWARE

- B** Cam Lock Ø15 mm x6
G Screw Cap Ø15 mm x6

COMPONENTS

- 5** Front Board x1

8.1 Combine Front Board (5) into Pre - Assembly from previous step and secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Put Screw Cap Ø15 mm (G) to the Cam Lock on Side Boards and Center Board. Position as shown in the figure.

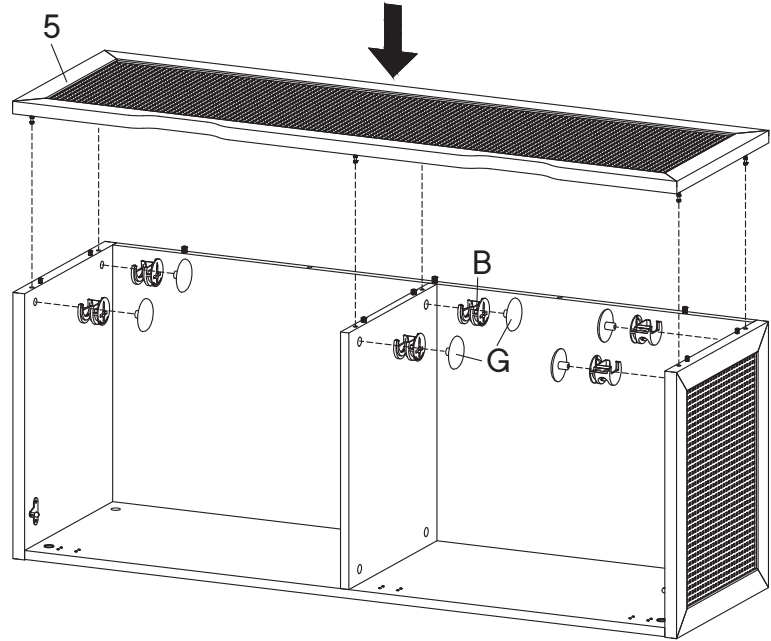
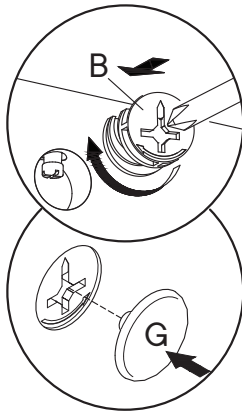


STEP 09

HARDWARE

- B** Cam Lock Ø15 mm x6


9.1 Insert Cam Lock Ø15 mm (B) into Bottom Board, then tighten using screwdriver. Position as shown in the figure.

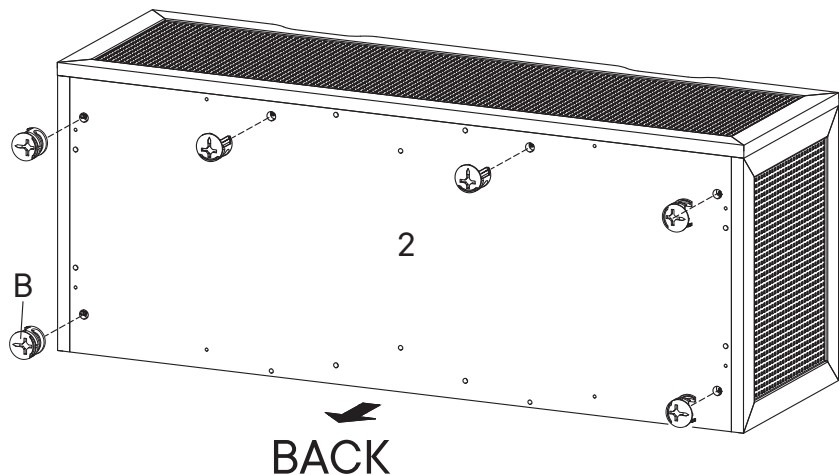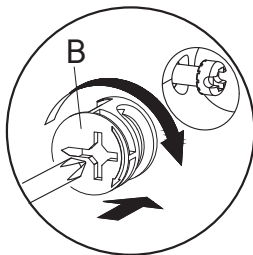

HARDWARE

A Cam Bolt Ø6 x 35 mm x8

10.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Bottom Board, then tighten using screwdriver.

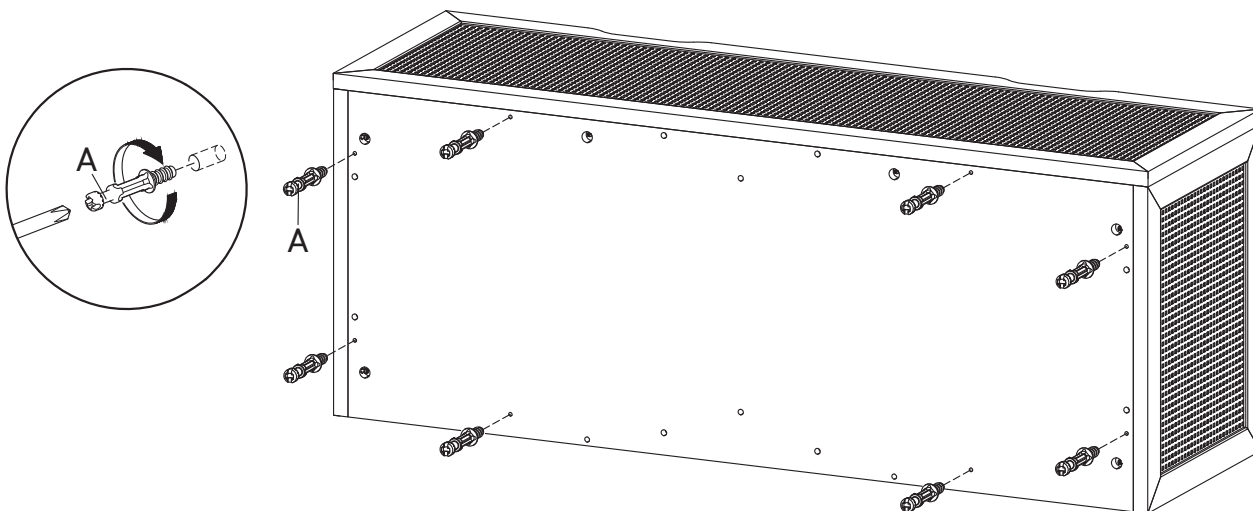

STEP 11

HARDWARE

A Cam Bolt Ø6 x 35 mm x4

L Wood Dowel Ø6 x 30 mm x4


COMPONENTS

7 Bottom Skirt 1 x2

8 Bottom Skirt 2 x2

11.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Bottom Skirt 1 (7), then tighten using screwdriver.

11.2 Insert Wood Dowel Ø6 x 30 mm (L) into the Bottom Skirt 2 (8).

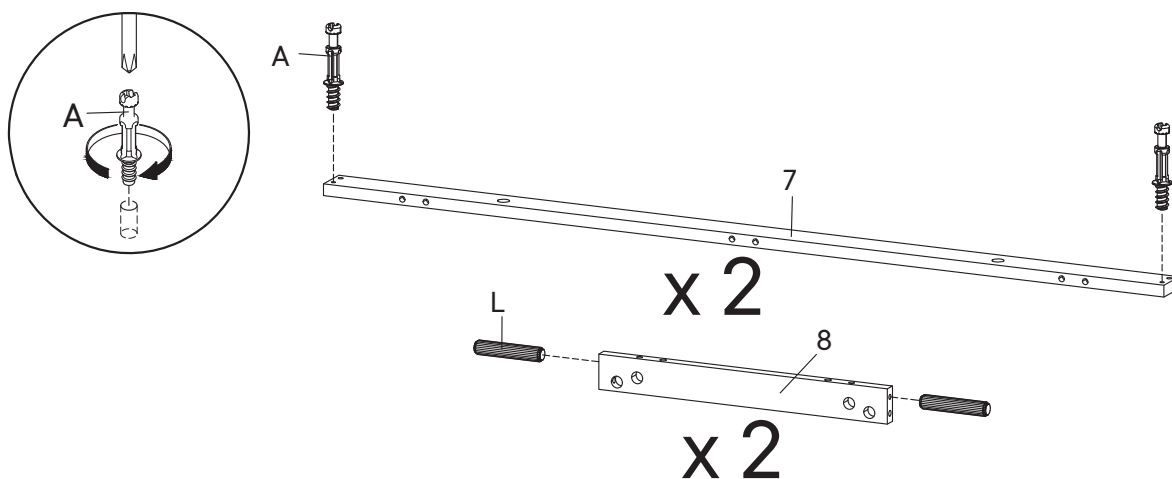

HARDWARE




B Cam Lock Ø15 mm x4

COMPONENTS

7 Bottom Skirt 1 x2

8 Bottom Skirt 2 x2

12.1 Combine Bottom Skirt 1 (7) and Bottom Skirt 2 (8) according to picture. Secure Cam Lock Ø15 mm (B) then tighten using screwdriver, Position as shown in the figure.

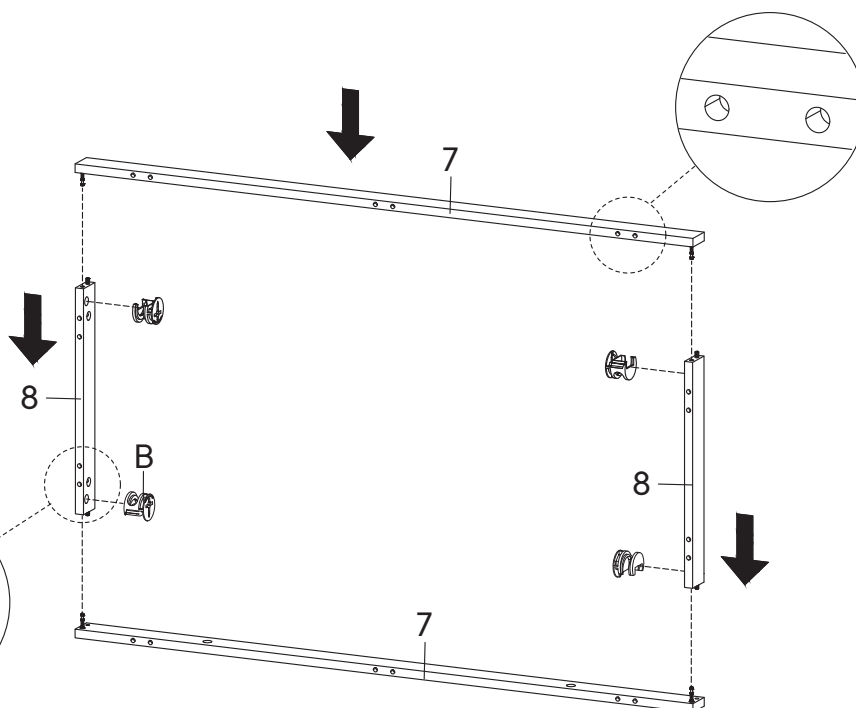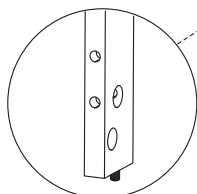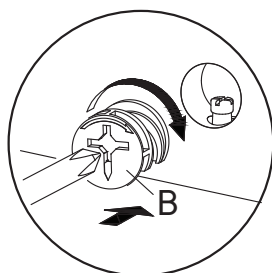


STEP 13

HARDWARE

C Wood Dowel Ø8 x 30 mm x8

13.1 Insert Wood Dowel Ø8 x 30 mm (C) into assembled Bottom Skirt from previous step.

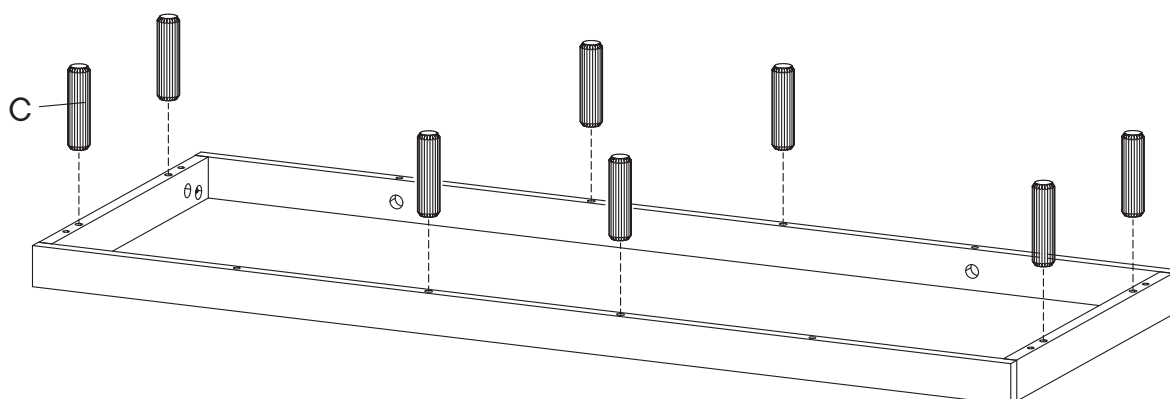

HARDWARE



B Cam Lock Ø15 mm x8

COMPONENTS

7 Bottom Skirt 1 x2

8 Bottom Skirt 2 x2

14.1 Combine Assembly Bottom Skirts into Bottom Board, secure with Cam Lock Ø15 mm (B), then tighten using screwdriver, Position as shown in the figure.

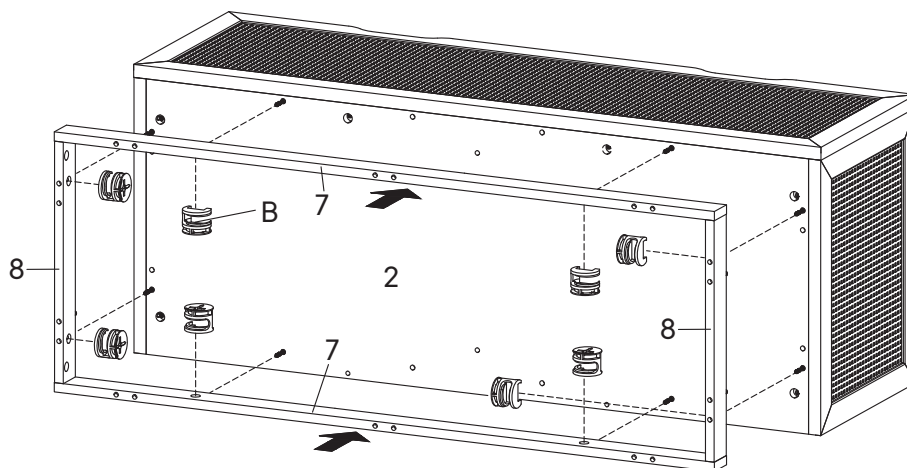
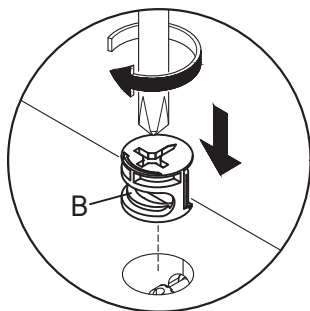


STEP 15

HARDWARE

D Floor Glide x10

15.1 Insert Floor Glide (D) into Bottom Skirts position as shown in picture.

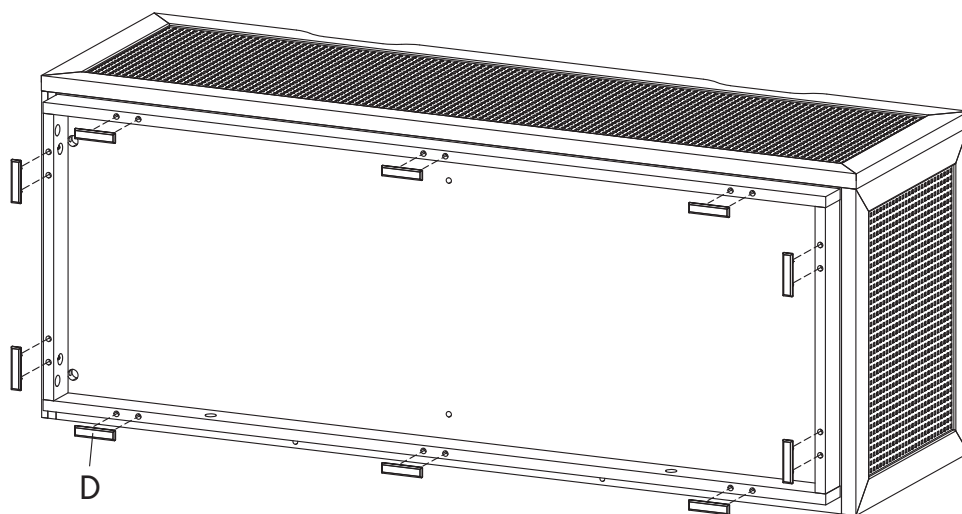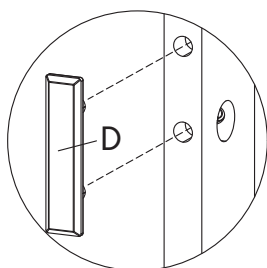

HARDWARE

F Screw M 6 x 12.5 mm x4

J Screw M 4.5 x 12.5 mm x6

K Lid Stays x2



HS26A Hinge x3

COMPONENTS

1 Top Board x1

16.1 Install the Lid Stay (K) into the Top Board (1) and secure with Screw M 6 x 12.5 mm (F), tighten screws using screwdriver. Make sure the position of Lid Stay as shown in the detail.

16.2 Insert Hinge (HS26A) into Top Board (1). Secure with Screw M 4.5 x 12.5 mm (J), then tighten using screwdriver.

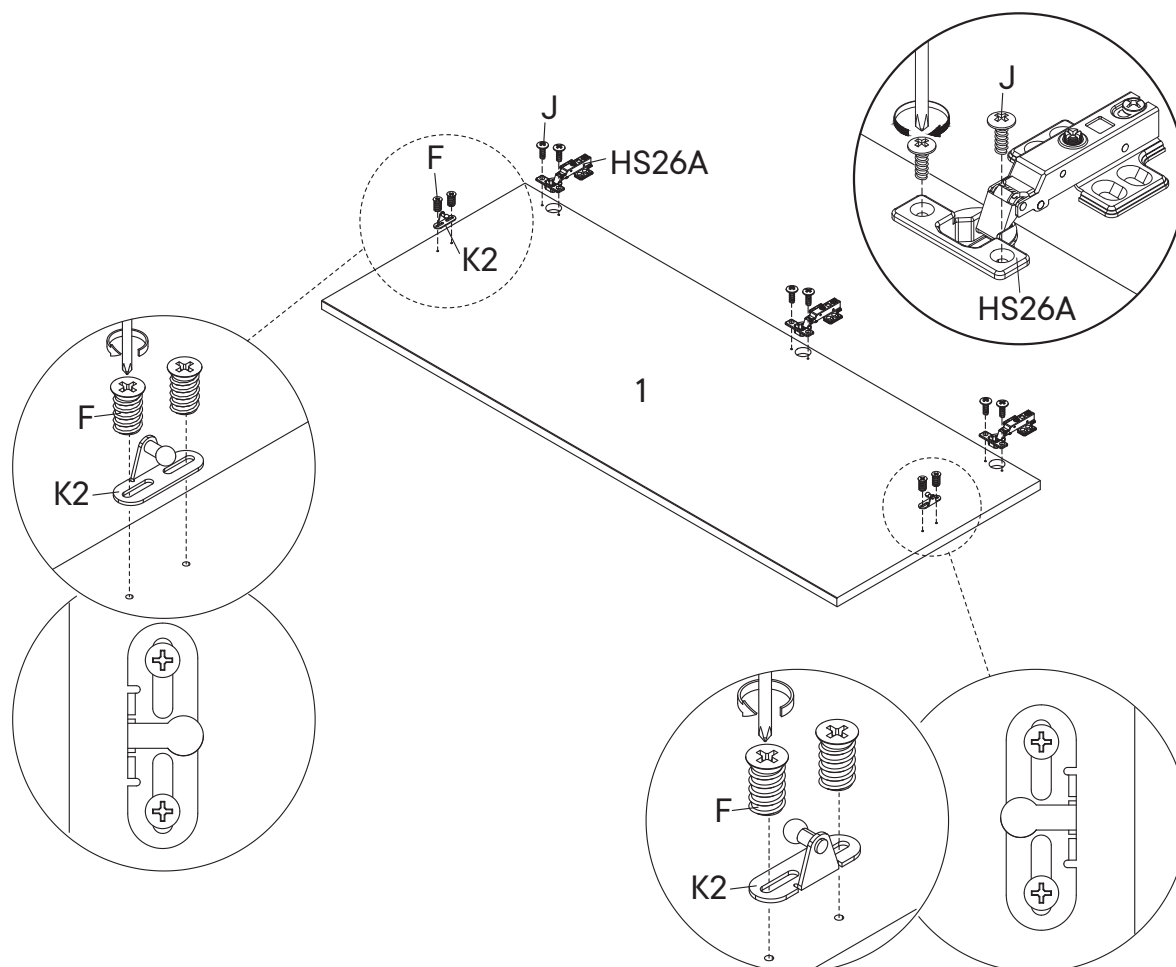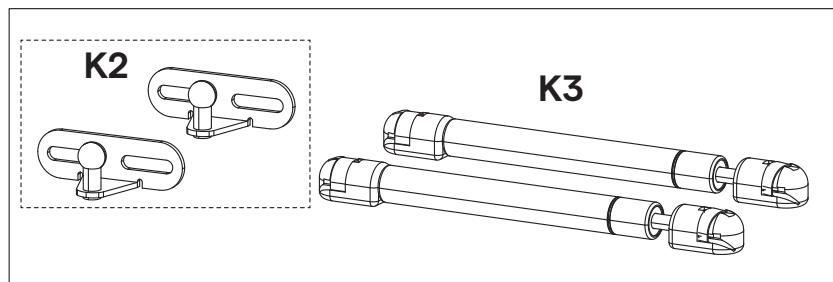

HARDWARE




J Screw M 4.5 x 12.5 mm x12

COMPONENTS

1 Top Board x1

17.1 Install Top Board (1) into Back Board.

Please see the above images carefully and secure Hinge with Screw M 4.5 x 12.5 mm (J) then tighten using screwdriver. Please refer to the last page for more guide on how to adjust hinges. Position as shown in the figure.

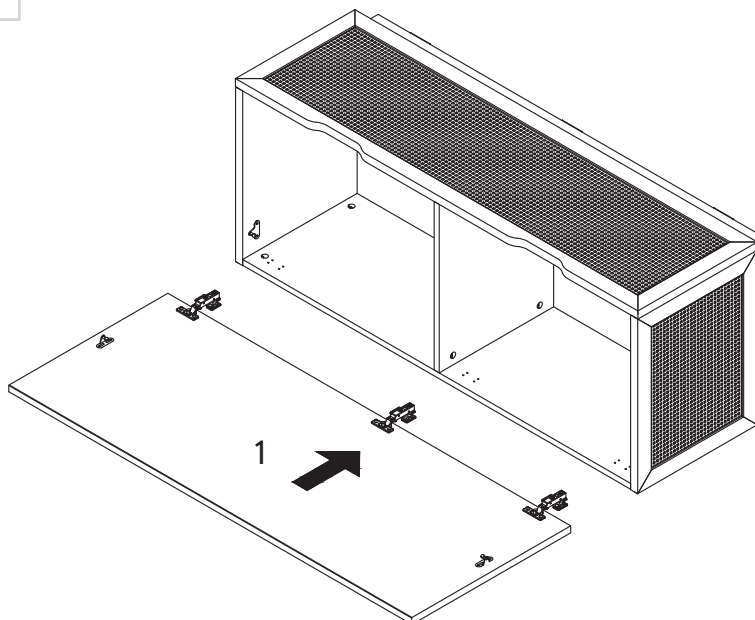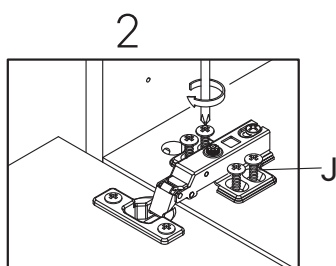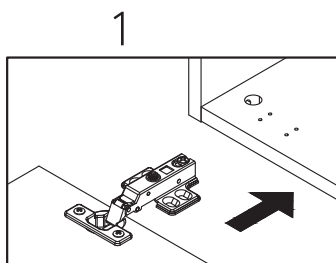

STEP 18





HARDWARE

I Silicon Bumper x5


K Lid Stay x2

18.1 Combine Lid Stay (K) into the Side Boards and Top Board. Position as shown in the figure.

18.2 Peel off the paper from the Silicon Bumper (I) and stick it. Position as shown in the figure.

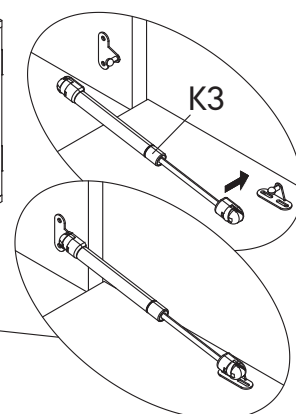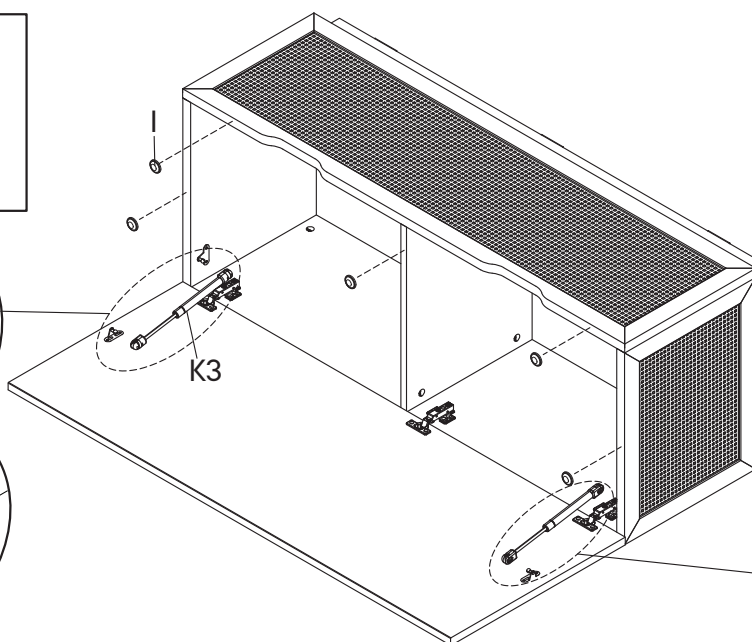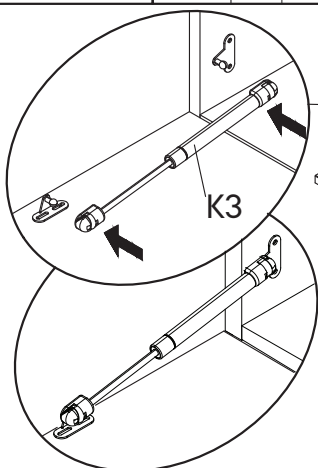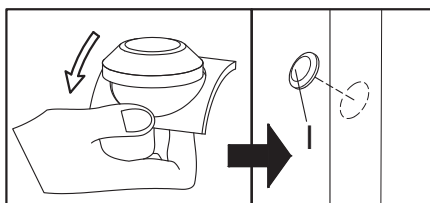

19.1 To close the storage bench Top Board, first tilt the unit to access the open panel. Carefully lower the top board cover while ensuring the support arms are properly aligned and securely connected. Then, gently press the cover down until it is fully closed and locked into place. Make sure all components are properly positioned to avoid damage during closing.

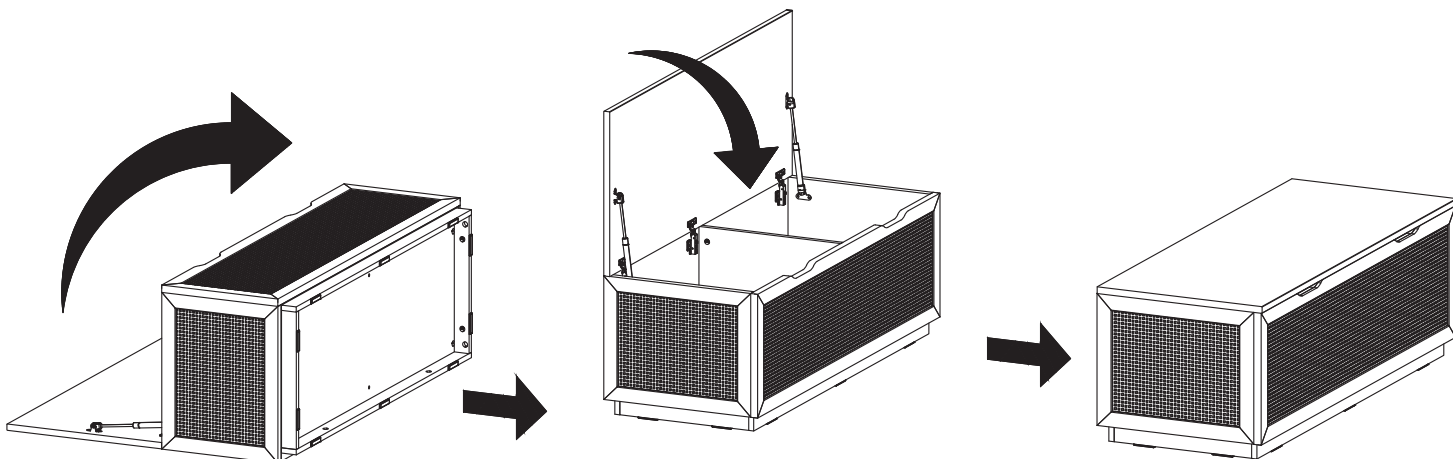


Great job!

Storage Bench assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

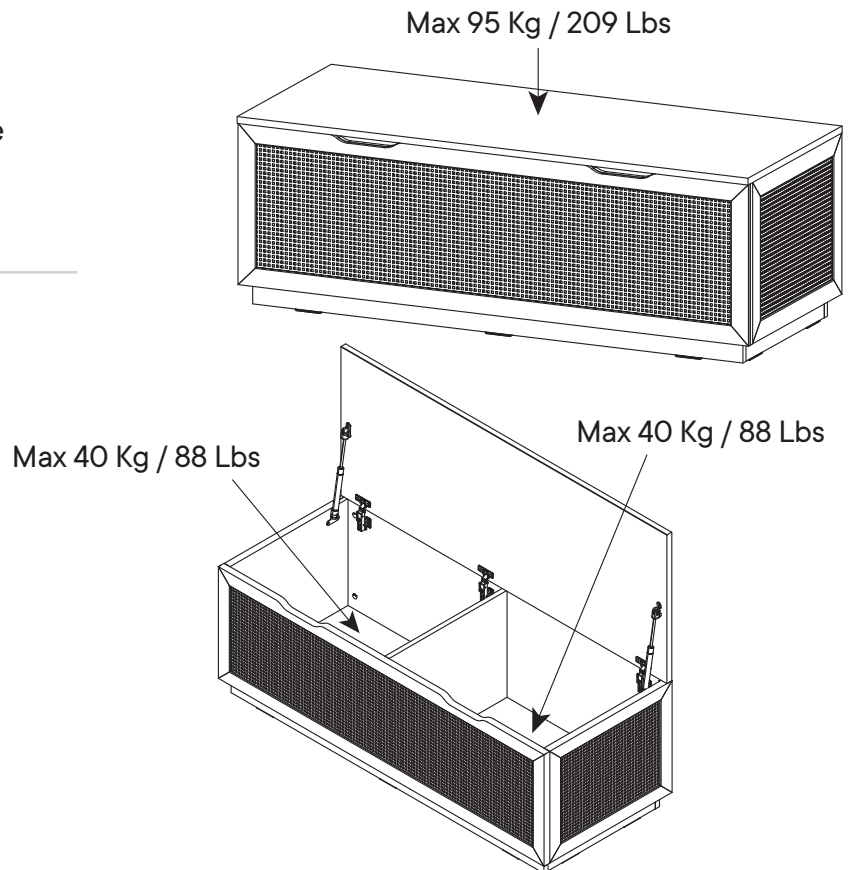

CONNECT WITH US!




Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.

modway





Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

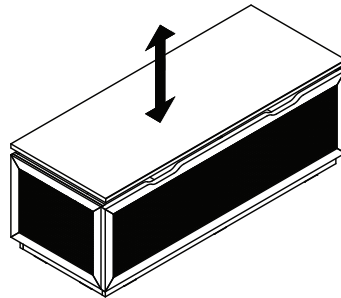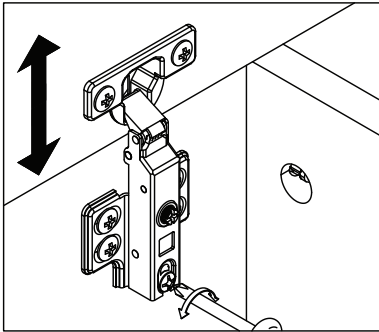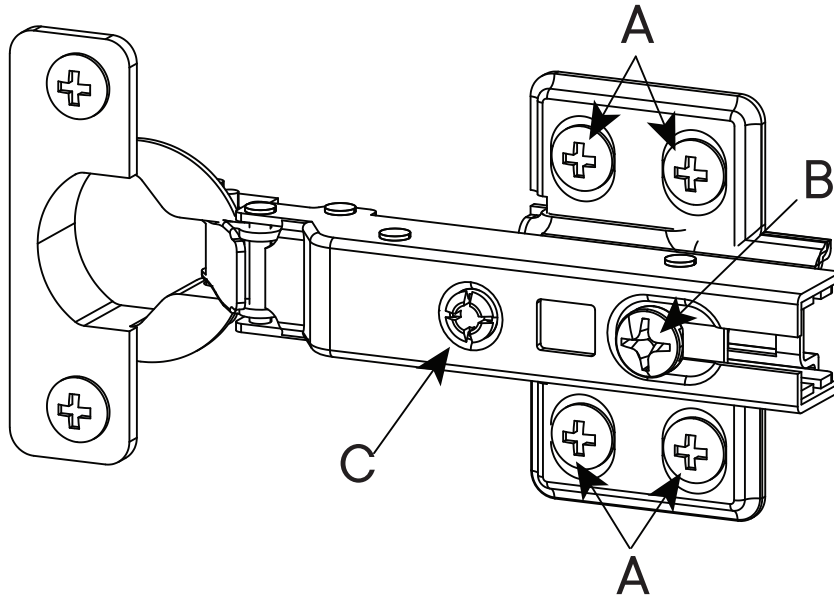

To adjust vertical.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

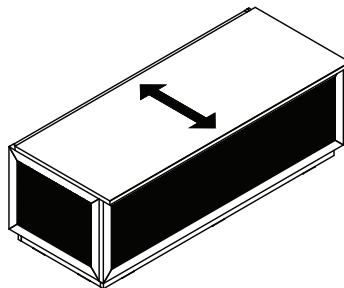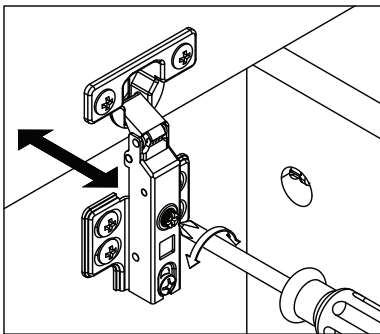

To adjust side ways.

Turn screw "C" on BOTH hinges on each door.