

CCOI Item# EC1091,EC1020,EC1021, ASSEMBLY INSTRUCTIONS

Components List

Item	Image	Q	Item	Image	Q
A		1	C		1
B		2			

Hardware List


Item	Image	Q	Item	Image	Q	Item	Image	Q
a	 Bolt 8x35mm	6	b	 17mm Washer	6			

Tools Needed

Item	Image	Q	Item	Image	Q	Item	Image	Q
c	 5x65mm	1	e	 4x30mm Self-tapping screw	3	f	 6x30mm Expansion screws	3

ASSEMBLY STEPS

Step 1 *Attach Leg (B) to Fireplace top (A) with Bolt (a) and Washer (b).*

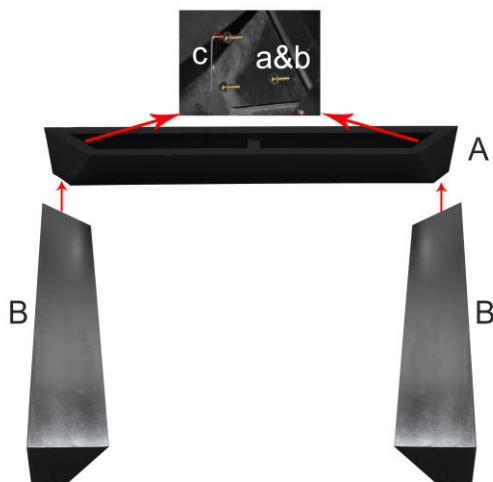

Step 2 *Attach Backboard (C) to Wall with Self-tapping screw (e) & Expansion screws (f).*



Step 3 *Attach the whole fireplace to Backboard (C).*

