


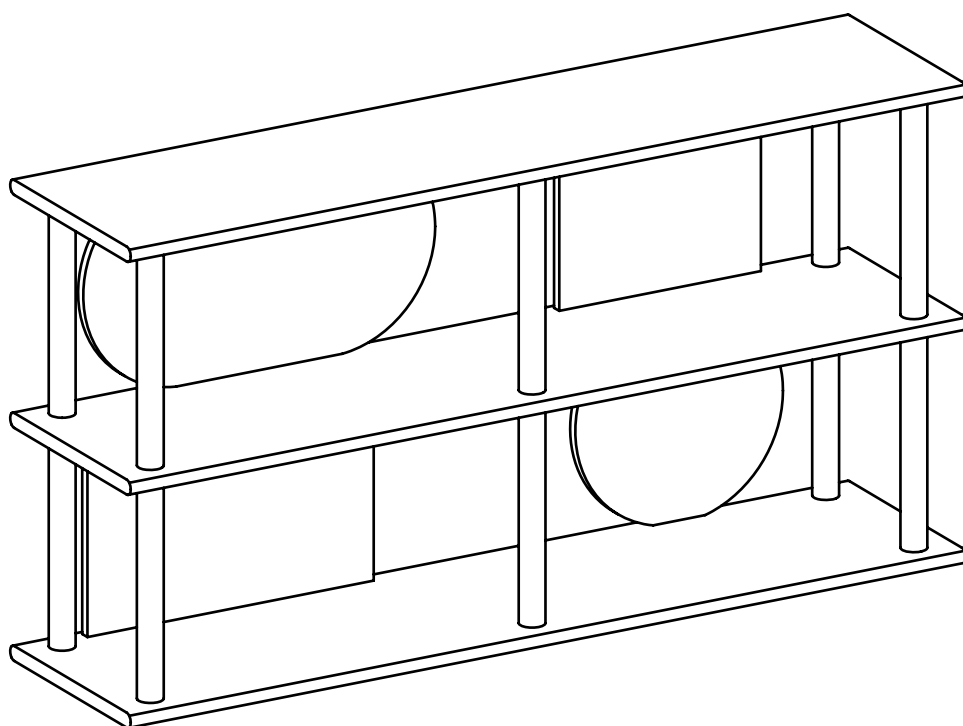

ASSEMBLY INSTRUCTIONS

2-Tier Bookshelf

EEI-7433 / V0.05.15.25

modway



Questions? Contact us!

609.256.9000
cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item

Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.



Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX>


A		Cam Lock	x8
B		Cam Bolt Ø7.5 x 32mm	x8
C		Cam Sticker	x8
D		Plastic Dowel M8 x 32mm	x14
E		Screw 10 x 33.5mm	x8
F		Hex Screw 6.3 x 50mm	x5
G		Allen Key	x1
H		Leveller	x7

WHAT YOU NEED>




Phillips Head Screwdriver

All parts are numbered with a sticker according to this list.

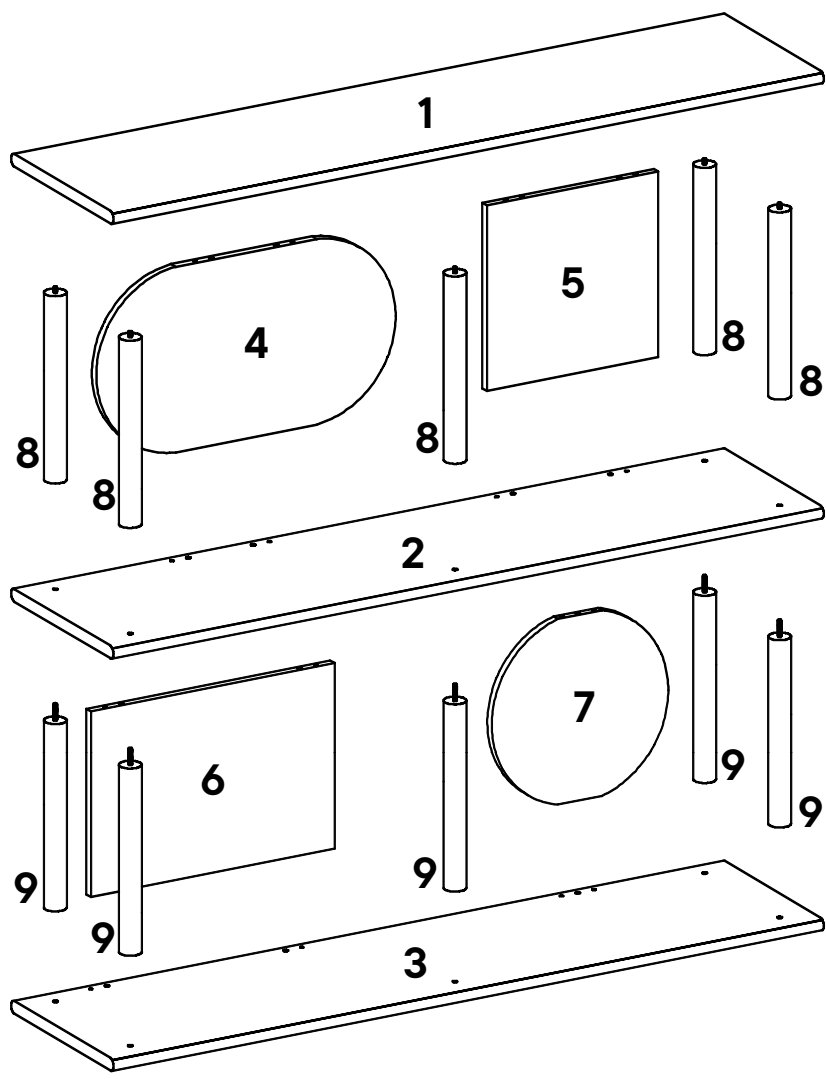

1	Top Board	x1	6	Left Bottom Rear Board	x1
2	Middle board	x1	7	Right Bottom Rear Board	x1
3	Bottom Board	x1	8	Top Pillar	x5
4	Left Top Rear Board	x1	9	Bottom Pillar	x5
5	Right Top Rear Board	x1			

1.1 Insert and screw Cam Bolt (B) into Top Board (1) and Bottom Board (2) as shown.

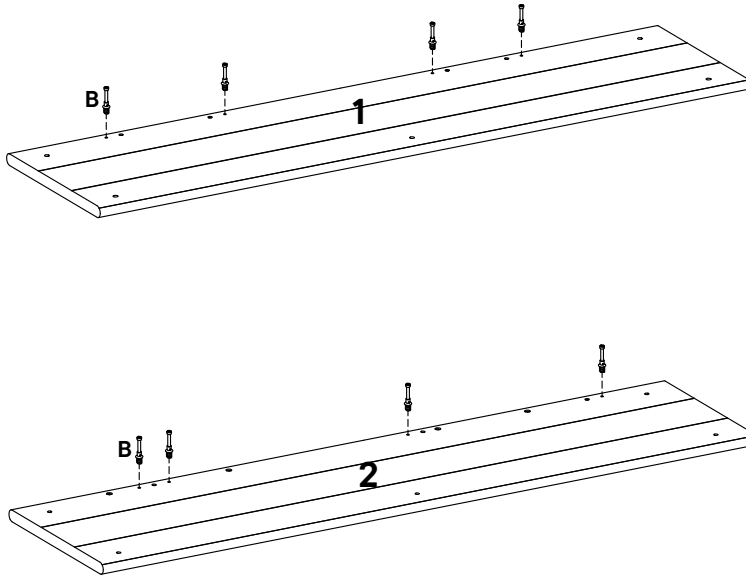

HARDWARE

B Cam Bolt Ø7.5 × 32mm x8

COMPONENTS

1 Top Board x1


2 Bottom Board x1

TOOLS

1 Phillips Head Screwdriver x1

STEP 02

2.1 Insert Plastic Dowel (D) into Left Top Divider Board (4), Right Top Rear Board (5), Left Bottom Rear Board (6) and Right Bottom Rear Board (7) as shown.

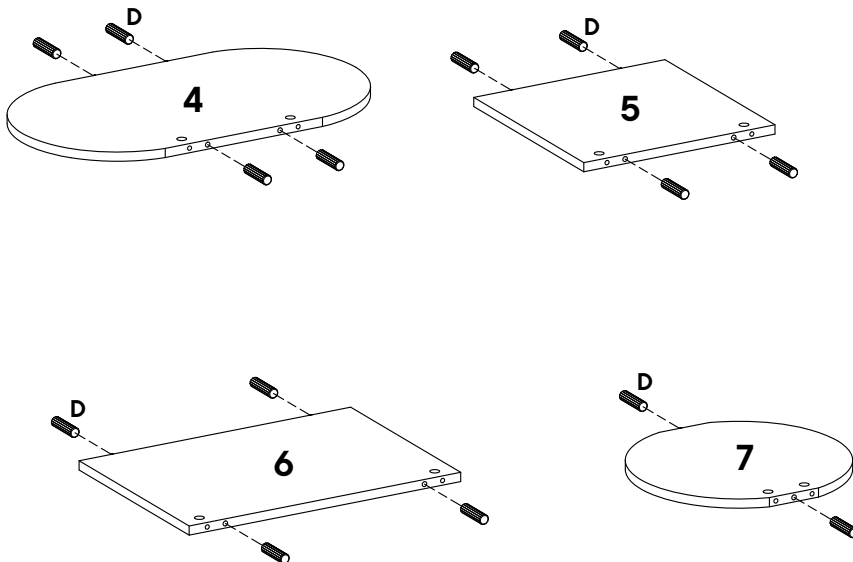

HARDWARE

D Plastic Dowel M8 x 32mm x14

COMPONENTS

4 Left Top Rear Board x1


5 Right Top Rear Board x1

6 Left Bottom Rear Board x1

7 Right Bottom Rear Board x1

3.1 Attach Left Top Rear Board (4) and Right Top Rear Board (5) to Top Board (1) as shown.

3.2 Insert Cam Lock (A) to Left Top Rear Board (4) and Right Top Rear Board (5), then tighten it using screwdriver.

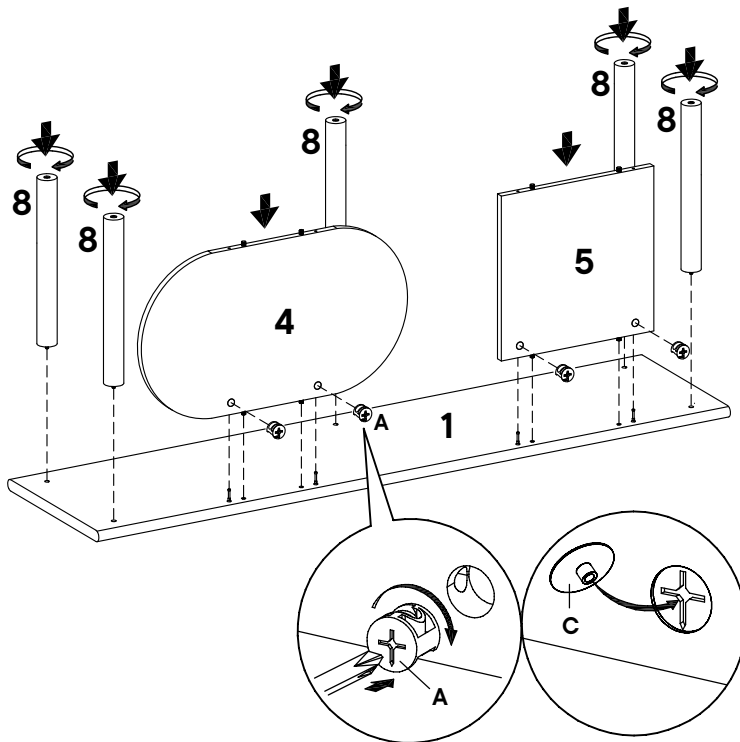

HARDWARE

A Cam Lock x4

C Cam Sticker x4

COMPONENTS

1 Top Board x1

4 Left Top Rear Board x1

5 Right Top Rear Board x1

8 Top Pillar x5

TOOLS


1 Phillips Head Screwdriver x1

3.3 Paste Cam Sticker (C) to the Cam Lock (A).

3.4 Attach five Top Pillar (8) to Top Board (1) as shown.

STEP 04

4.1 Attach Top Board (1) to case assembly using four screw (E).

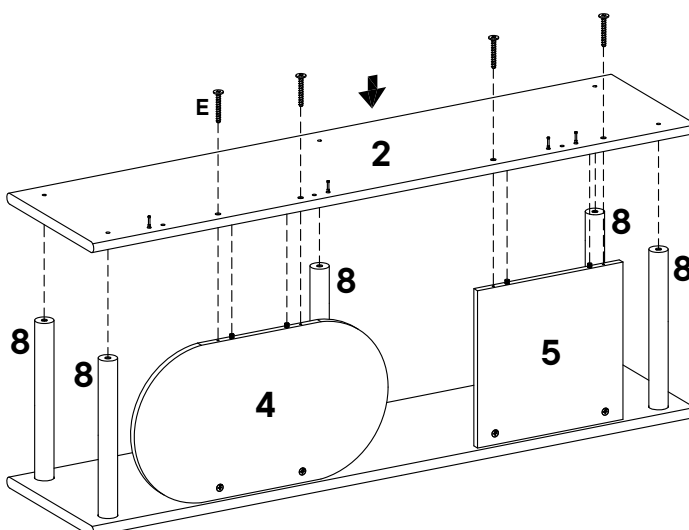

HARDWARE

E Screw 10 x 33.5mm x4

COMPONENTS

2 Middle Board x1

4 Left Top Rear Board x1


5 Right Top Rear Board x1

8 Top Pillar x5

TOOLS

1 Phillips Head Screwdriver x1

5.1 Attach Left Bottom Rear Board (6) and Right Bottom Rear Board (7) to Top Board (1) as shown.

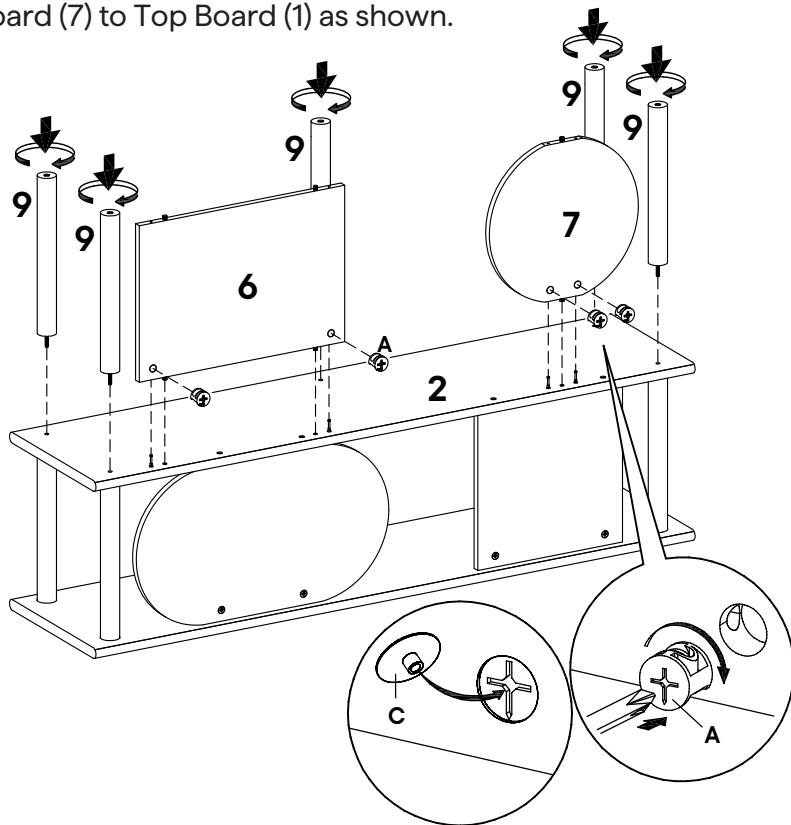

5.2 Insert Cam Lock (A) to Left Bottom Rear Board (6) and Right Bottom Rear Board (5), then tighten it using screwdriver.

HARDWARE

- A** Cam Lock x4
- C** Cam Sticker x4

COMPONENTS

- 2** Middle Board x1
- 6** Left Bottom Rear Board x1
- 7** Right Bottom Rear Board x1
- 9** Bottom Pillar x5


TOOLS

- 1** Phillips Head Screwdriver x1

5.3 Paste Cam Sticker (C) to the Cam Lock (A).

5.4 Attach five Bottom Pillar (9) to Top Board (1) as shown.

STEP 06

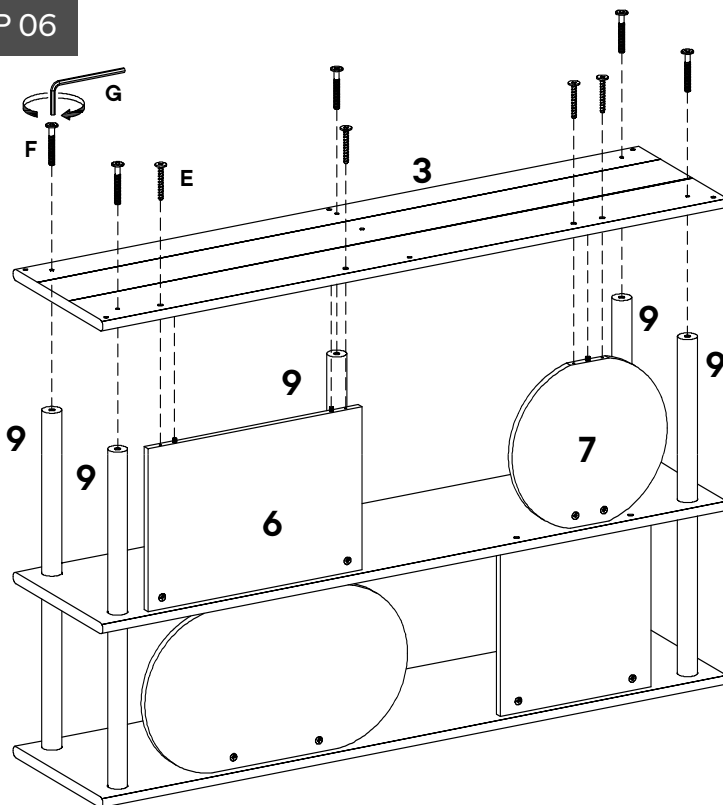

6.1 Attach Bottom Board (3) to case assembly using four screw (E) and five hex screw (F). Tighten hex screw with Allen Key (G).

HARDWARE

- E** Screw 10 x 33.5mm x4
- F** Hex Screw 6.3 x 50mm x5

COMPONENTS


- 3** Bottom Board x1
- 6** Left Bottom Rear Board x1
- 7** Right Bottom Rear Board x1
- 9** Bottom Pillar x5

TOOLS

- G** Allen Key x1
- 1** Phillips Head Screwdriver x1

7.1 Install seven Leveller (H) on the Bottom Side of the Bottom Board (3).



7.2 Flip the bookcase 180°

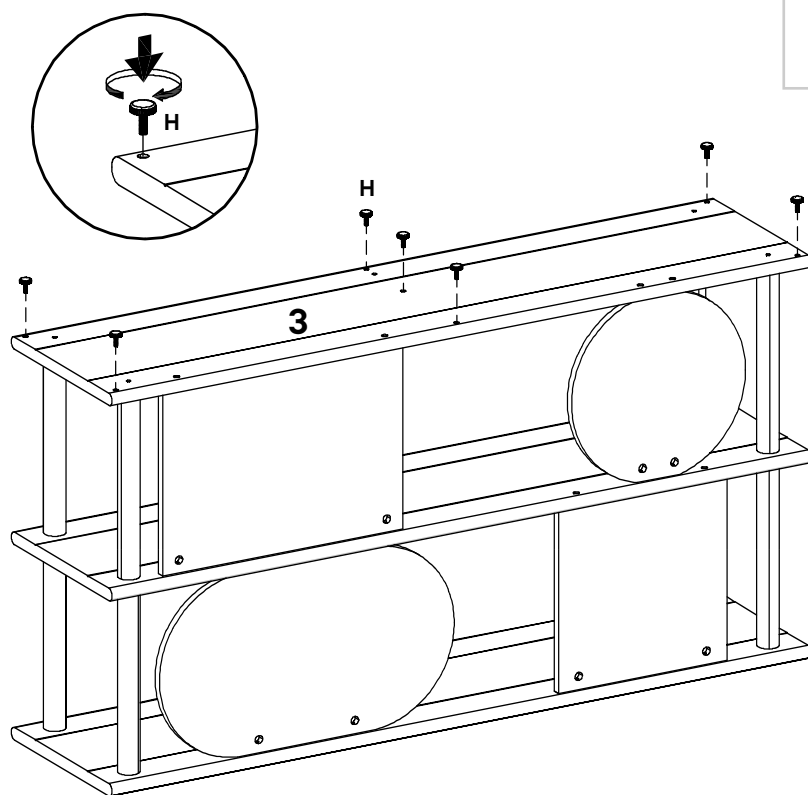**HARDWARE**

H Leveller **x7**

COMPONENTS

3 Bottom Board **x1**

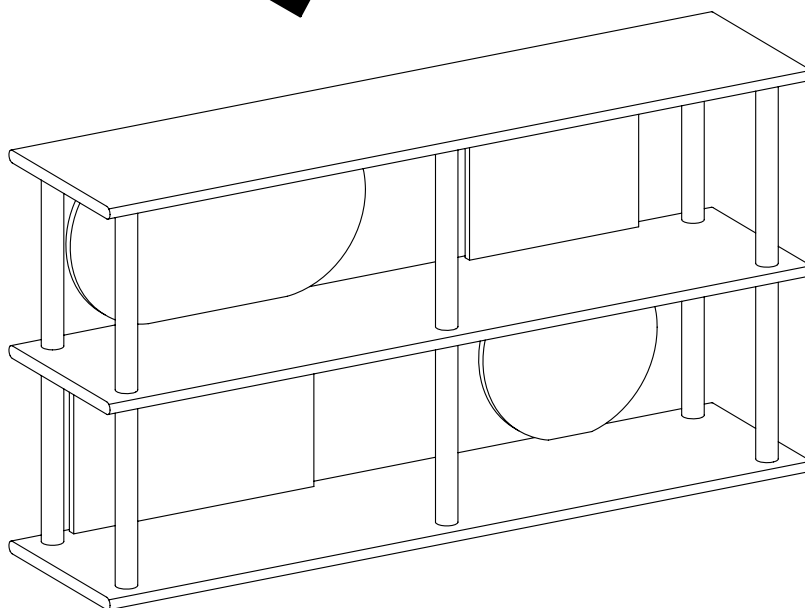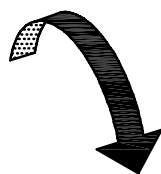


Great job!

Bookshelf assembly is complete and ready for sink installation.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

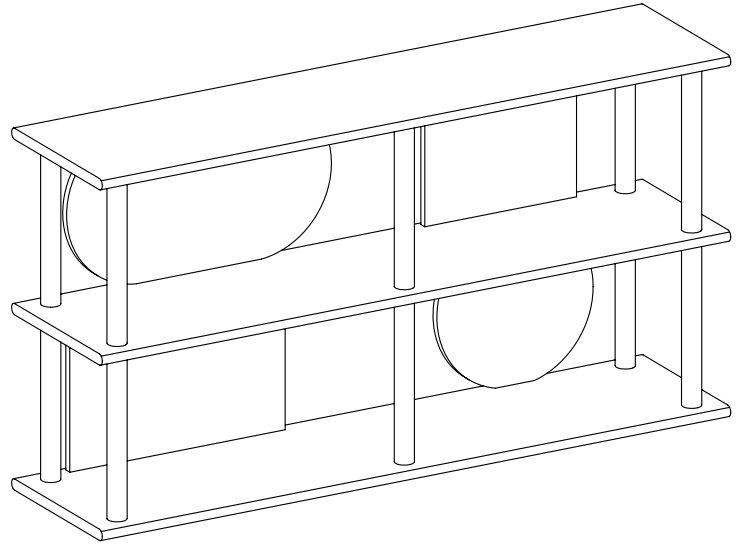

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com