


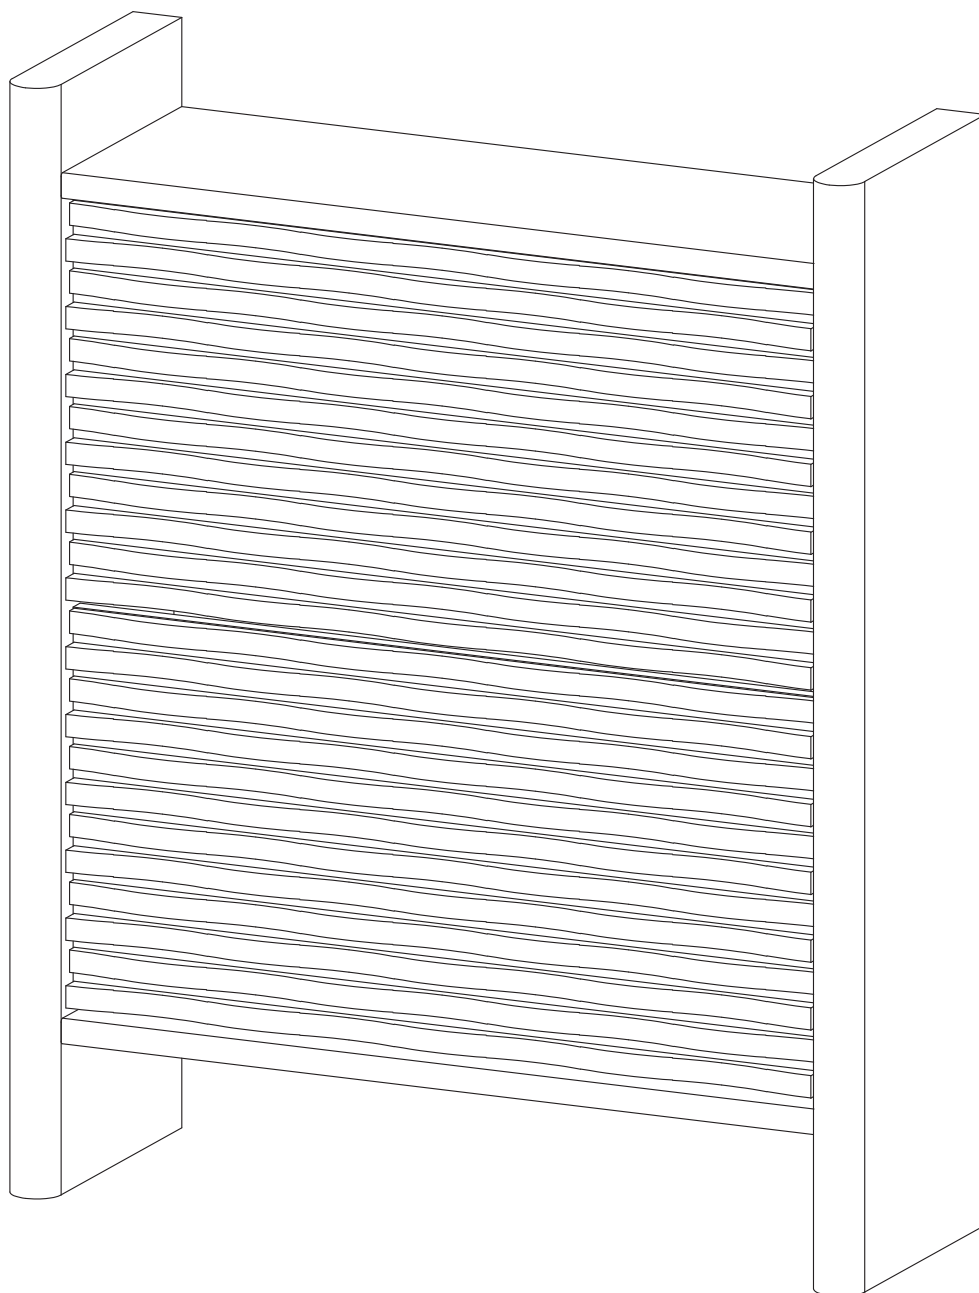

ASSEMBLY INSTRUCTIONS

Shoe Cabinet

EEI-7447 / V0.07.28.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.






Care instructions are listed in the last step of this manual.


WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x10
B		Cam Lock Ø15 mm	x10
C		Wood Dowel Ø8 x 30 mm	x10
D		Stopper	x4
E		Screw M 6.5 x 12.5 mm	x12
F		Screw M 4.5 x 12.5 mm	x4
G		Floor Glide	x4
H		Grommet Cover	x2
I		Wedge	x16
J		Screw M 3.5 x 15.5 mm	x16
K		Screw M 3.5 x 15.5 mm	x16
L	Shoe Rack Fitting		x2

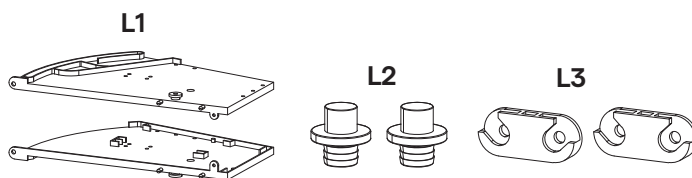


WHAT YOU NEED:



Phillips Head Screwdriver

All parts are numbered with a sticker according to this list.

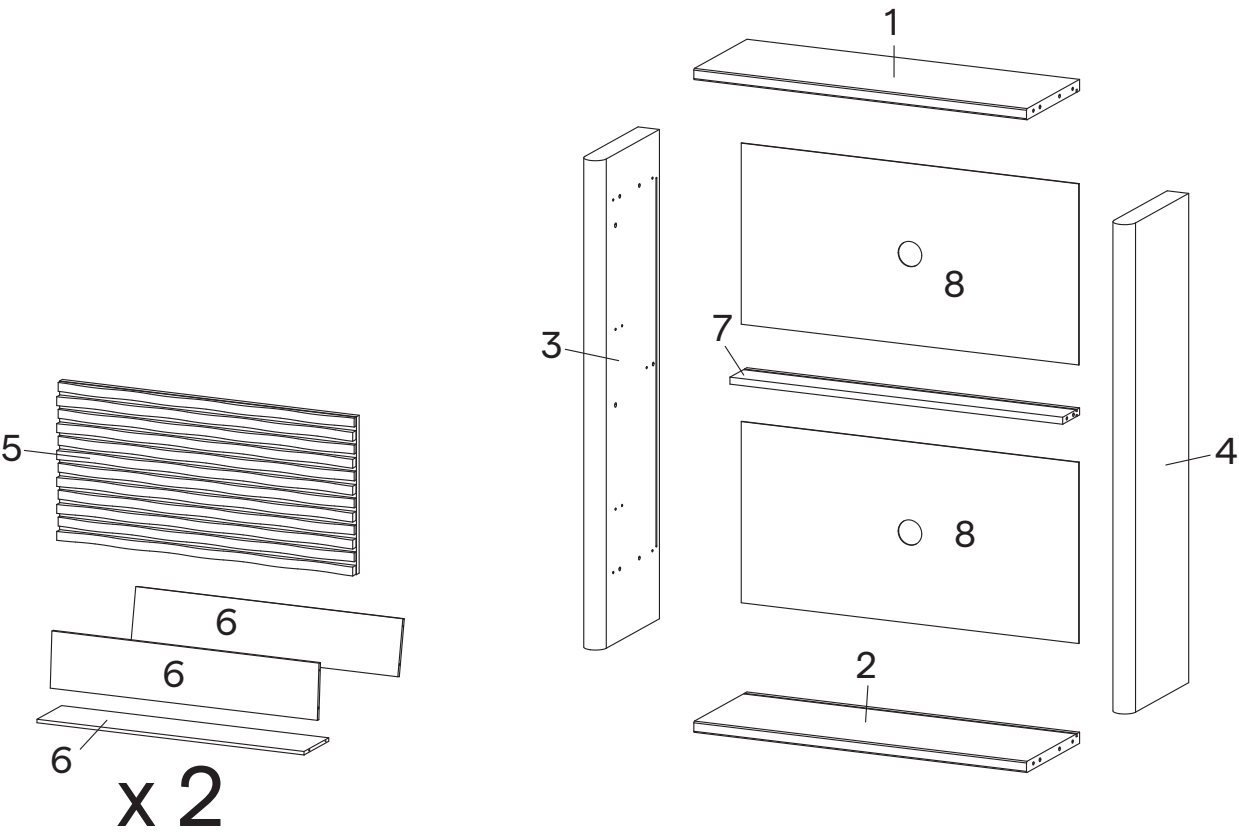

1	Top Board	x1	7	Support Board	x1
2	Bottom Board	x1	8	Back Board	x2
3	Side Board Left	x1			
4	Side Board Right	x1			
5	Front Drawer	x2			
6	Support Drawer	x6			

HARDWARE


- A** Cam Bolt Ø6 x 35 mm x10
G Floor Glide x4

COMPONENTS

- 3** Side Board Left x1
4 Side Board Right x1

1.1 Insert Cam Bolt Ø6 x 35 mm (A) and Floor Glide (G) into the Side Board Left (3), then tighten the Cam Bolt using screwdriver. Position as shown in the figure.

1.2 Insert Cam Bolt Ø6 x 35 mm (A) and Floor Glide (G) into the Side Board Right (4), then tighten the Cam Bolt using screwdriver. Position as shown in the figure.

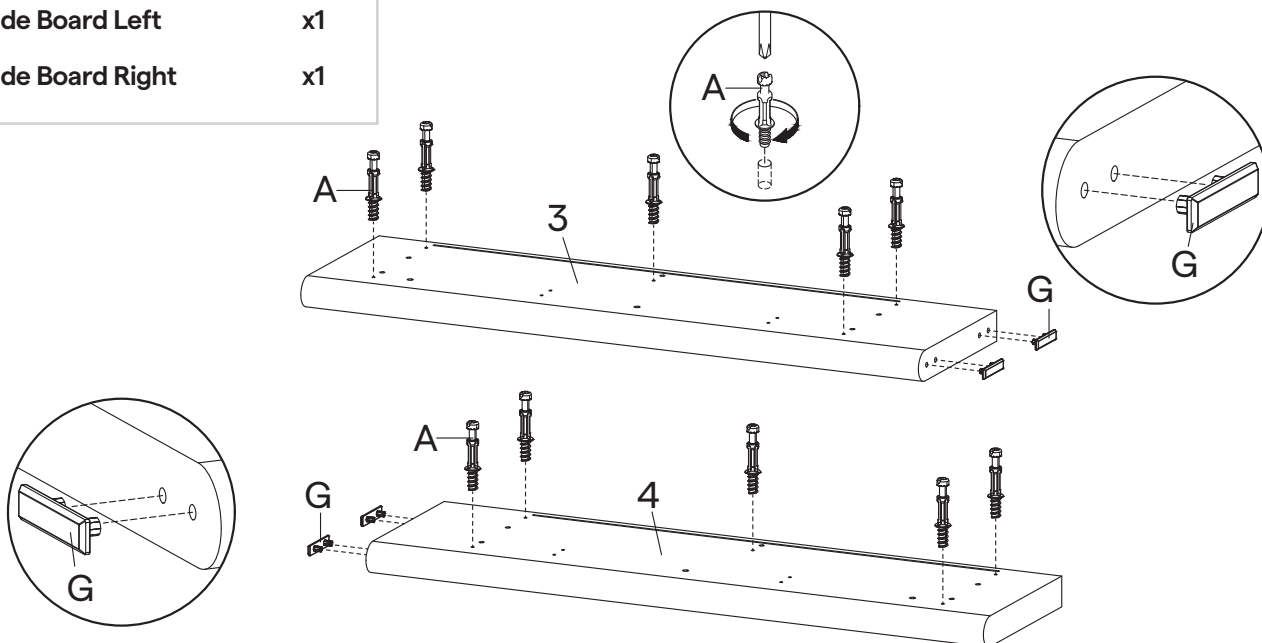

STEP 02

HARDWARE



- E** Screw M 6.5 x 12.5 mm x8
L Shoe Rack Fitting x2

COMPONENTS

- 3** Side Board Left x1
4 Side Board Right x1

2.1 Install the Shoe Rack Fitting (L3) into Side Board Left (3) secure with screw M 6.5 x 12.5 mm (E) then tighten using screwdriver and Insert the Shoe Rack Fitting (L2) then gently tap using a hammer. Position as shown in the figure.

2.2 Install the Shoe Rack Fitting (L3) into the Side Board Right (4) and secure with screw M 6.5 x 12.5 mm (E) then tighten using screwdriver and Insert the Shoe Rack Fitting (L2) then gently tap using a hammer. Position as shown in the figure.

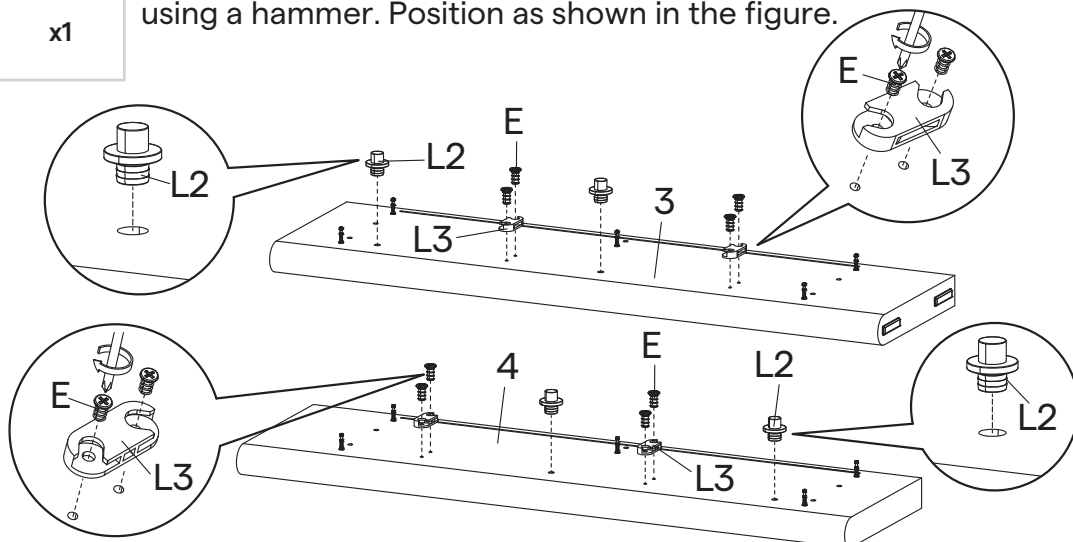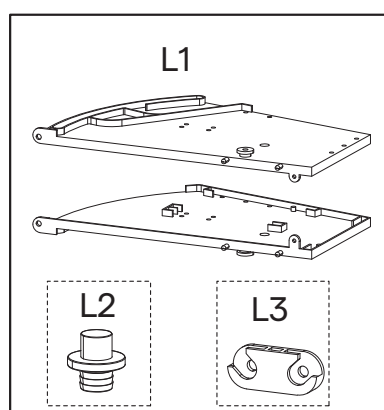

HARDWARE

C Wood Dowel Ø8 x 30 mm x10


COMPONENTS

1 Top Board x1

2 Bottom Board x1

7 Support Board x1

3.1 Insert Wood Dowel Ø8 x 30 mm (C) into the Top Board (1), Bottom Board (2) and Support Board (7).

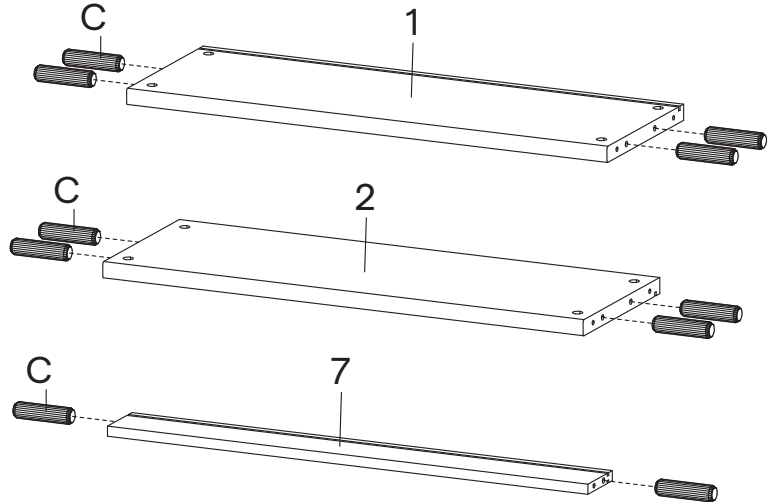

STEP 04

HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS


1 Top Board x1

2 Bottom Board x1

4 Side Board Right x1

7 Support Board x1


4.1 Attach Top Board (1), Bottom Board (2) and Support Board (7) into Side Board Right (4) secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown in the figure.

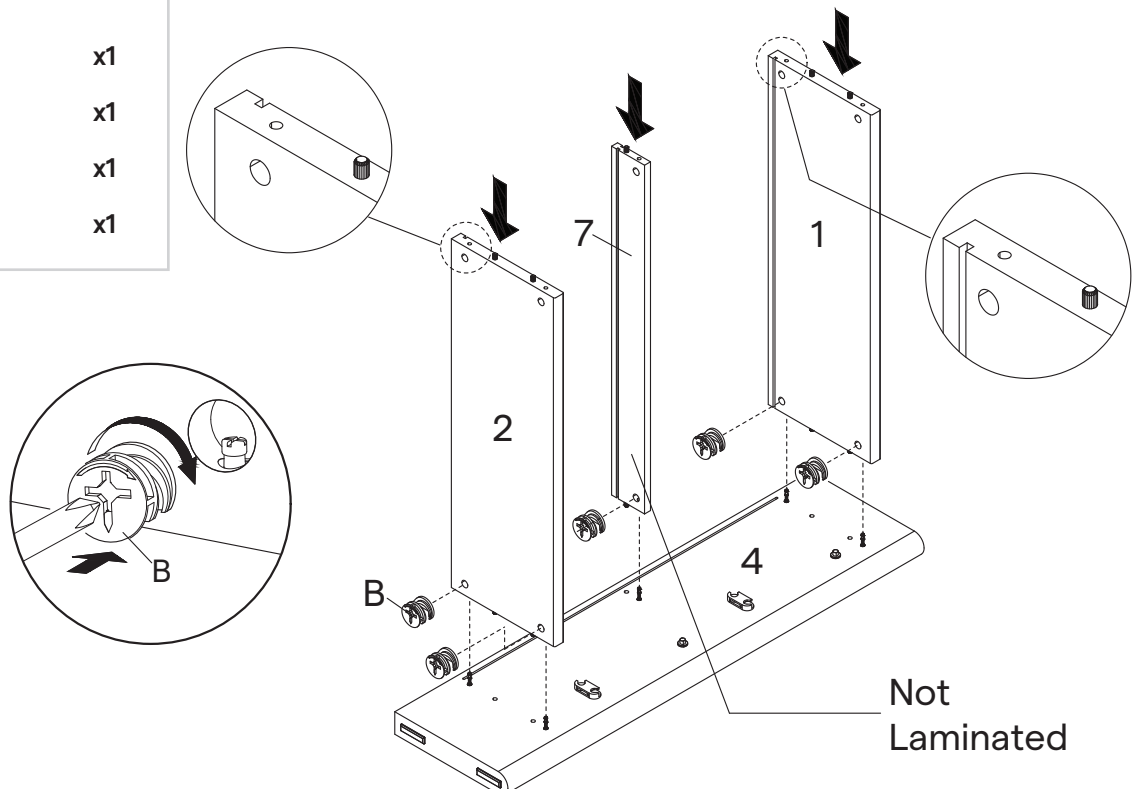

COMPONENTS

8 Back Board x2

5.1 Insert Back Board (8) into Side Board Right. Position as shown in the figure.

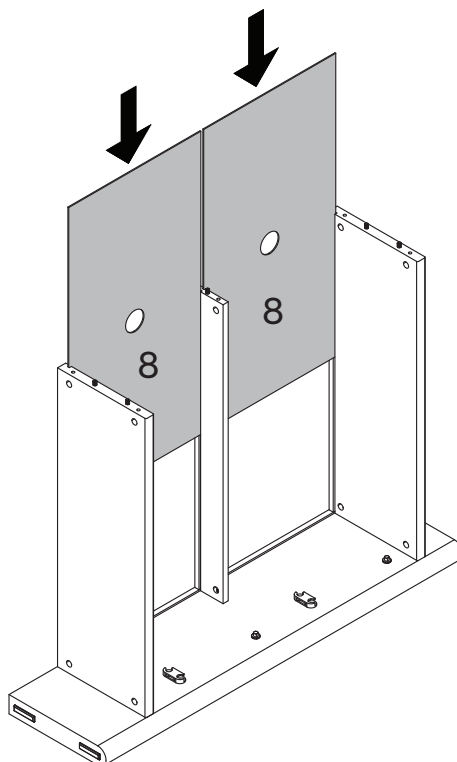

STEP 06



HARDWARE

B Cam Lock Ø15 mm x5

COMPONENTS

3 Side Board Left x1



6.1 Insert Side Board Left (3) into pre-assembly from previous step, secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown in the figure.

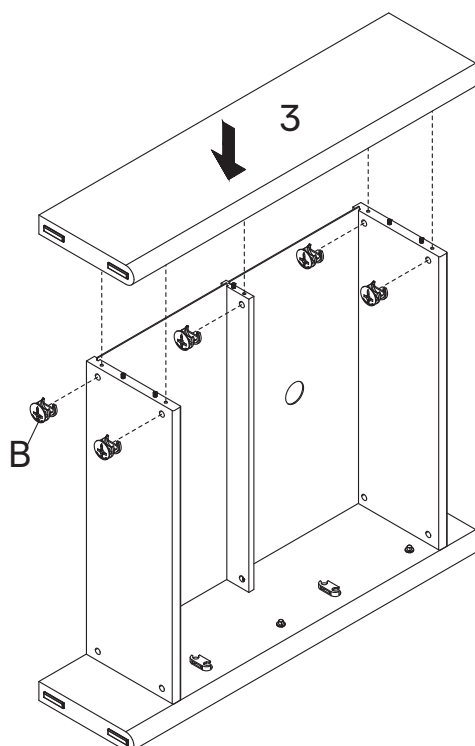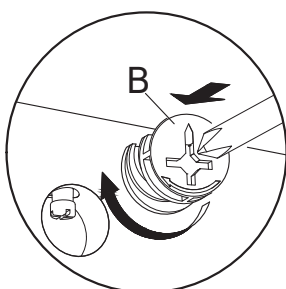

HARDWARE

H Grommet Cover x2

7.1 Install the Grommet Cover (H) into Back Board (8), then press and make sure the part is properly secured as shown in the details below.

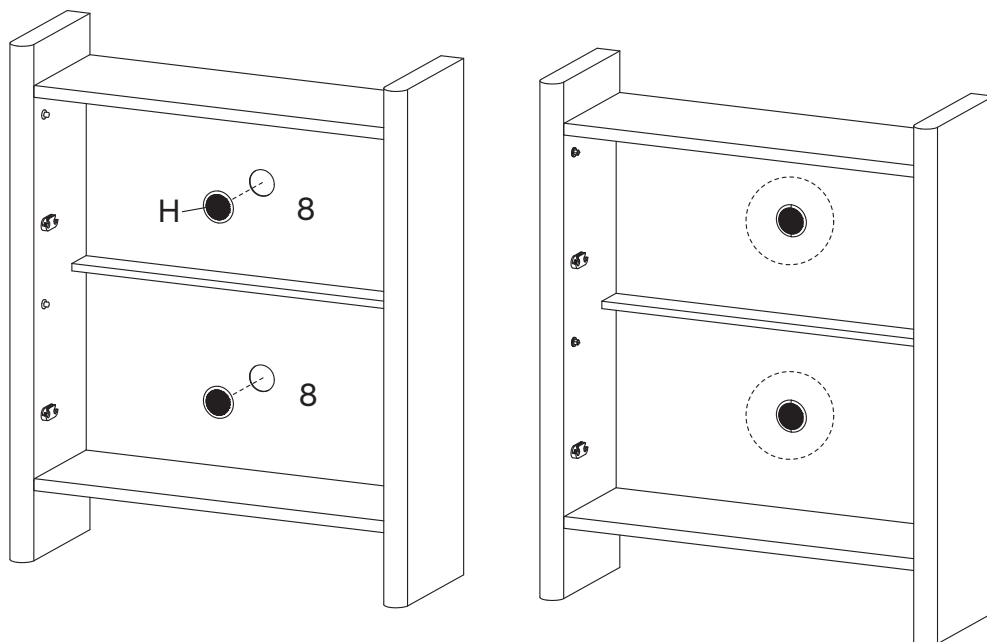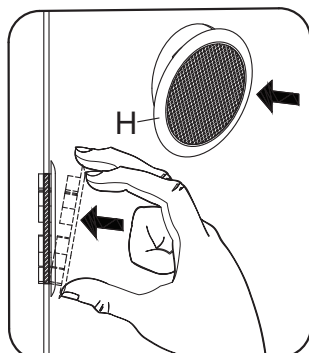

STEP 08

HARDWARE

E Screw M 6.5 x 12.5 mm x4

D Stopper x4

F Screw M 4.5 x 12.5 mm x4


L Shoe Rack Fitting x2

COMPONENTS

5 Front Drawer x2

8.1 Install Shoe Rack Fitting (L1) into Front Drawer (5), secure with Screw M 6.5 x 12.5 mm (E) then tighten using screwdriver. Position as shown in the figure.


8.2 Install Stopper (D) into Front Drawer (5), secure with Screw M 4.5 x 12.5 mm (F) then tighten using screwdriver. Position as shown in the figure.

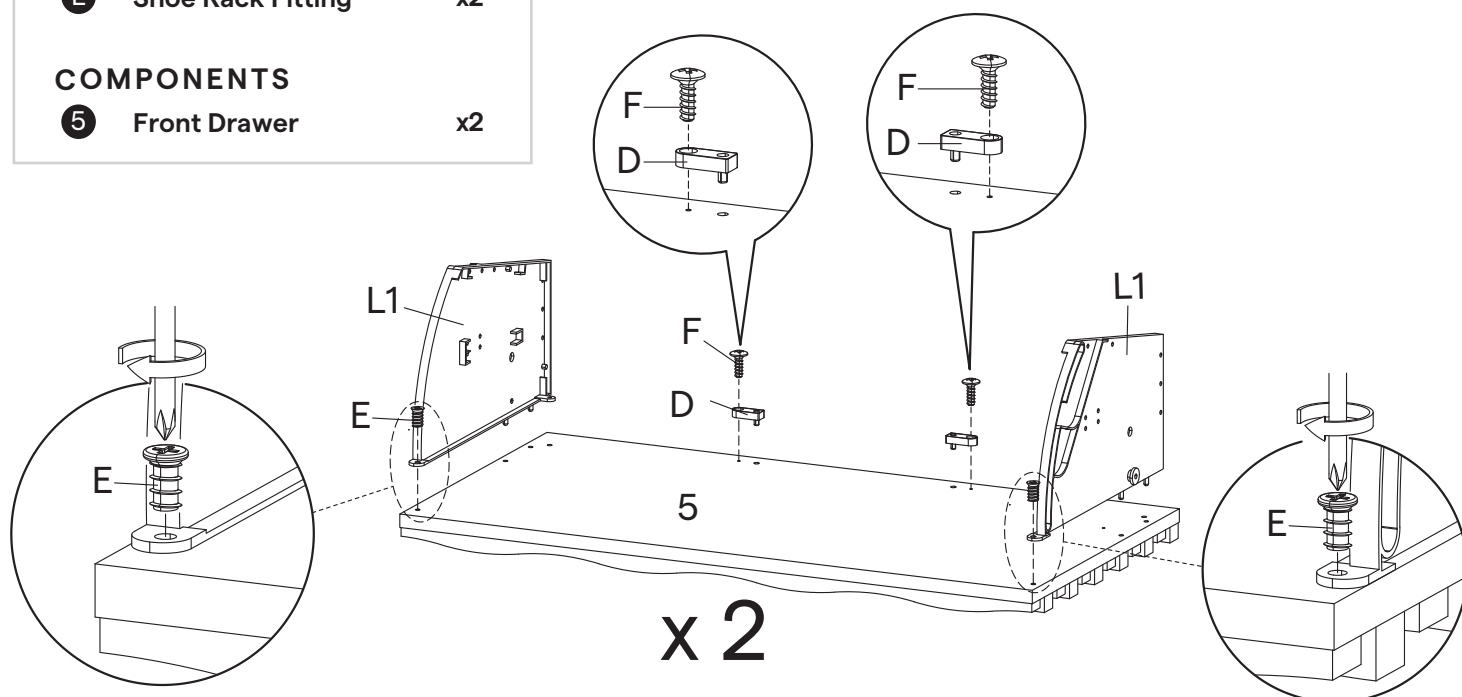

COMPONENTS

⑥ Support Drawer **x2**

9.1 Install the Support Drawer (6) into Shoe Rack Fitting is already installed in the Front Drawer. Position as shown in the figure.

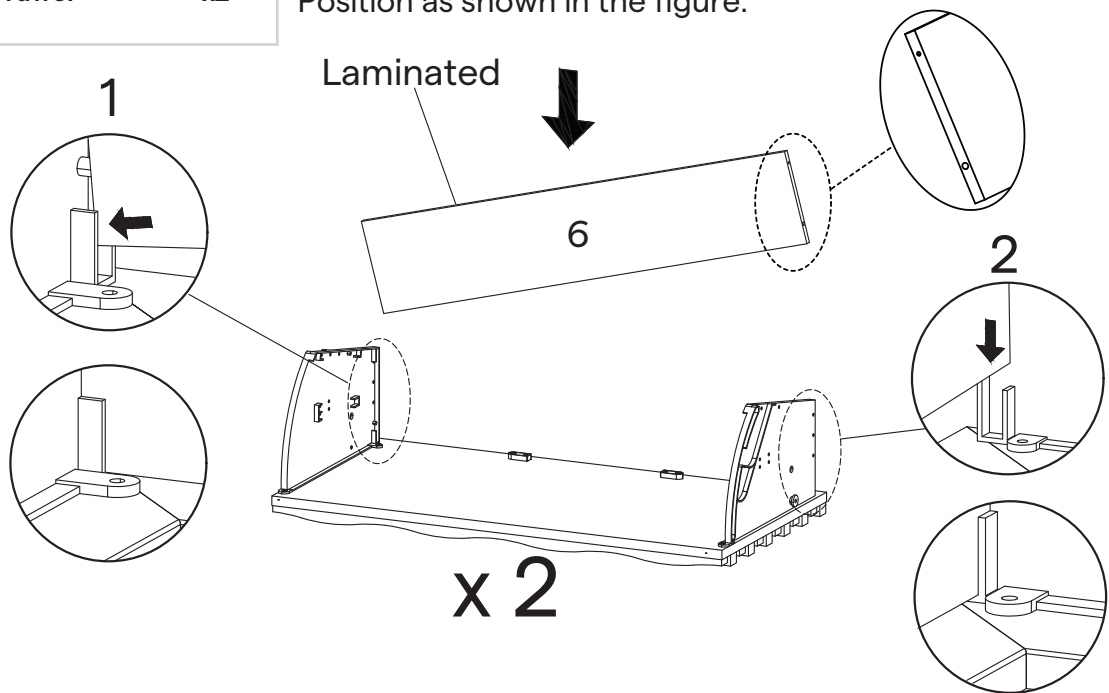
**STEP 10****HARDWARE**

(K) Screw M 3.5 x 15.5 mm **x4**

COMPONENTS


⑥ Support Drawer **x2**

10.1 Install the Support Drawer (6) into the Shoe Rack that is already installed in the Front Drawer and secure with the Screw M 3.5 x 15.5 mm (K) then tighten using screwdriver. Position as shown in the figure.

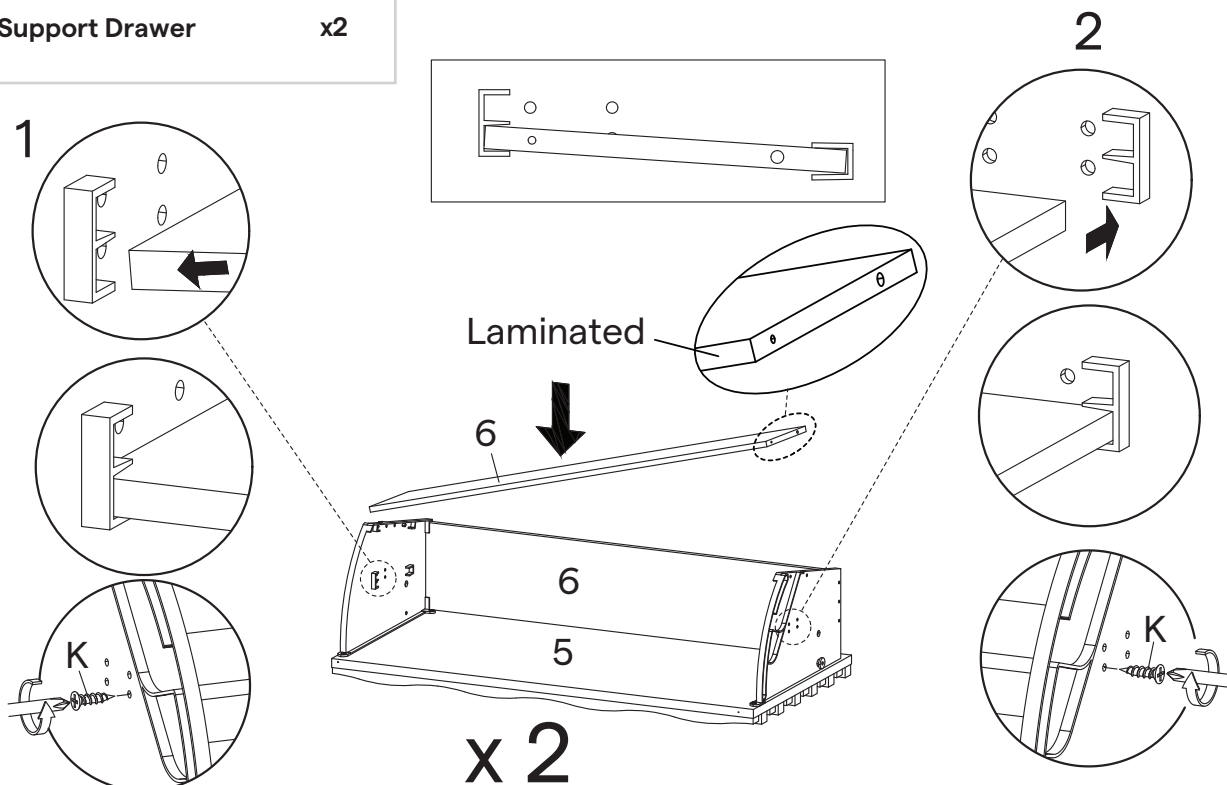


COMPONENTS**⑥** Support Drawer x2


11.1 Install the Support Drawer (6) into the Shoe Rack Fitting is already installed in the Front Drawer. Position as shown in the figure.

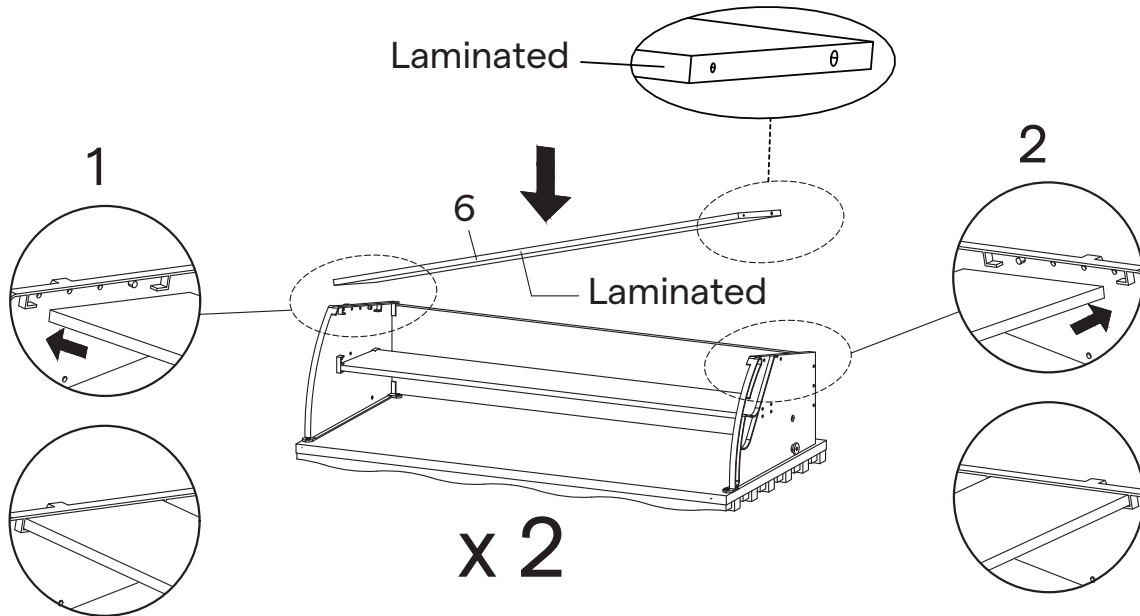**STEP 12****HARDWARE****Ⓚ** Screw M 3.5 x 15.5 mm x12

12.1 Secure the Support Drawer (6) with Shoe Rack Fitting (L1) using Screw 3.5 x 15.5 mm (K) then tighten using screwdriver. Position as shown in the figure.

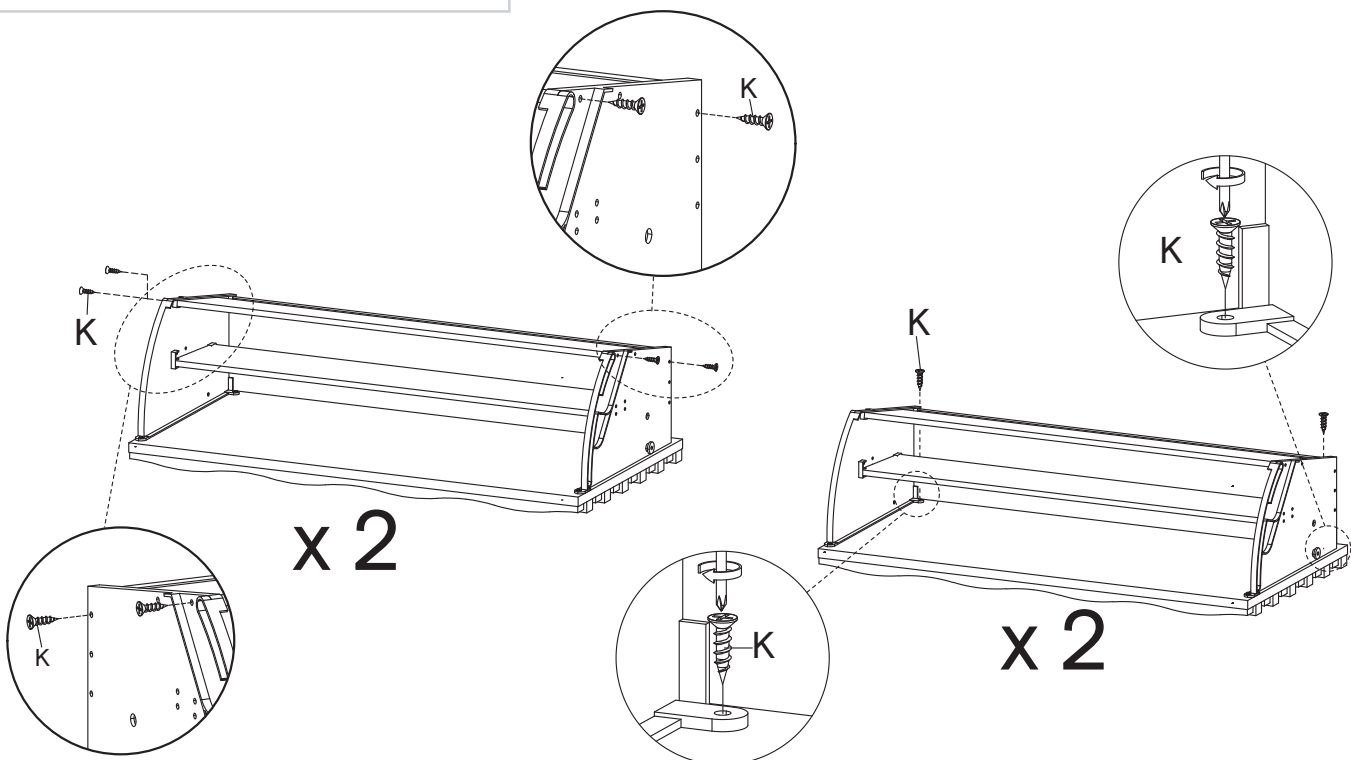

13.1 Insert the Shoe Rack Fitting (L2) to rail on the Shoe Rack Fitting (L1), Then secure the bottom part by aligning the locking mechanism to Shoe Rack Fitting (L3) push down firmly to lock it into place until hear a click.

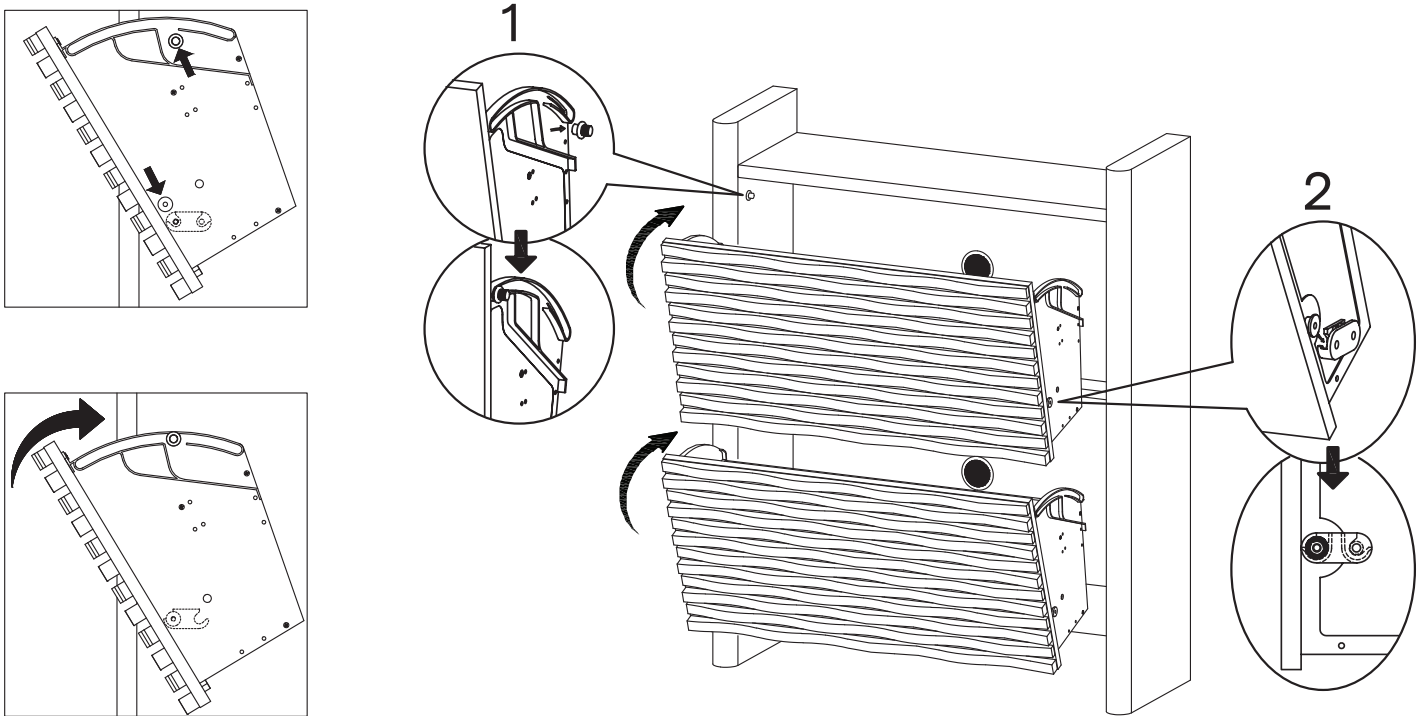


STEP 14

HARDWARE

- | | | |
|----------|-----------------------|-----|
| I | Wedge | x16 |
| J | Screw M 3.5 x 15.5 mm | x16 |

14.1 Use the Wedge (I) and Screw M 3.5 x 15.5 mm (J) to tighten the back of the cabinet using screwdriver. Before securing the wedges (I), ensure that the top board and bottom board are aligned at a 90° angle against the cabinet.

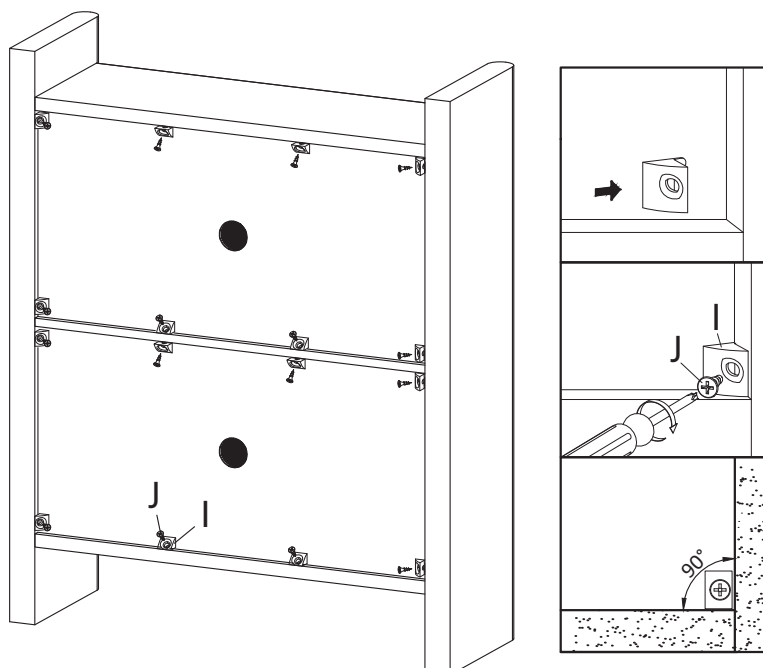


Great job!

Shoe Cabinet assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

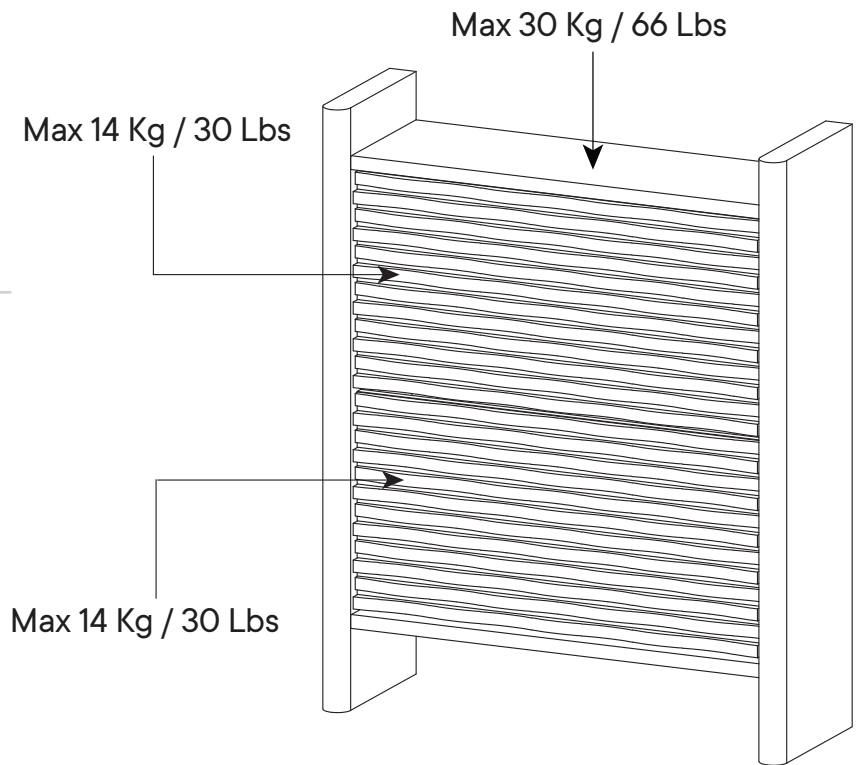

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway





Questions? Contact us!
609.256.9000
cs@modway.com

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

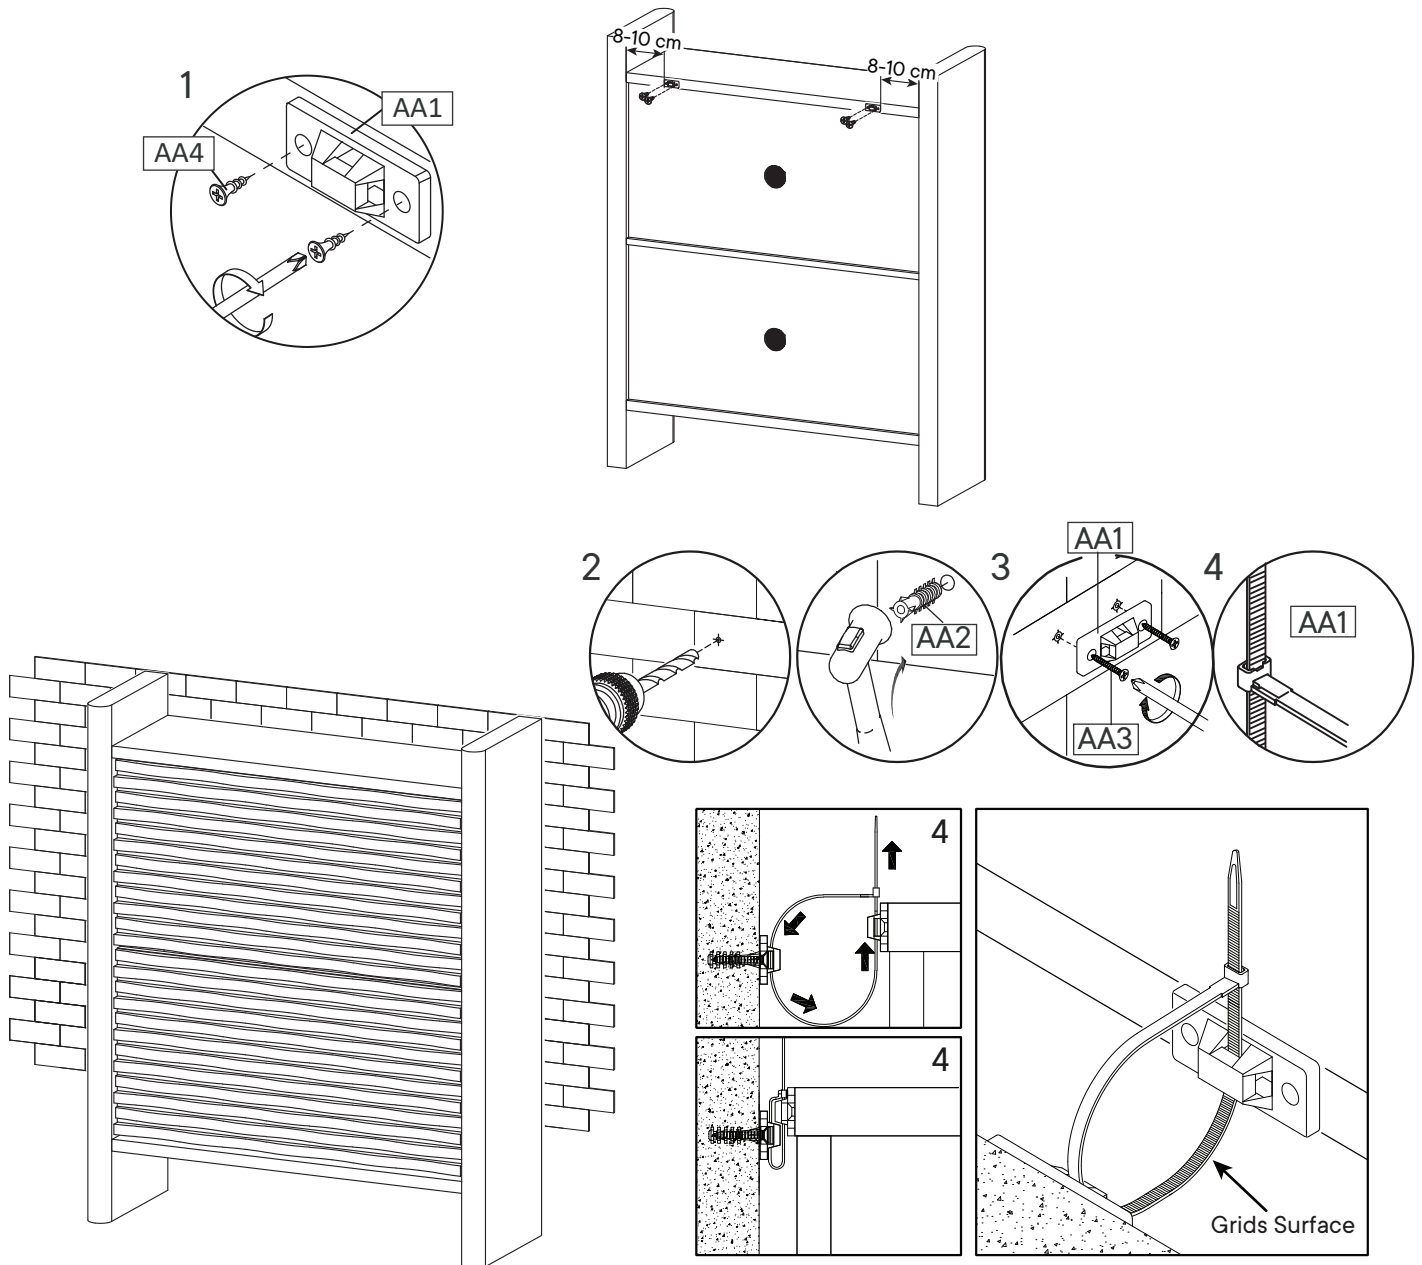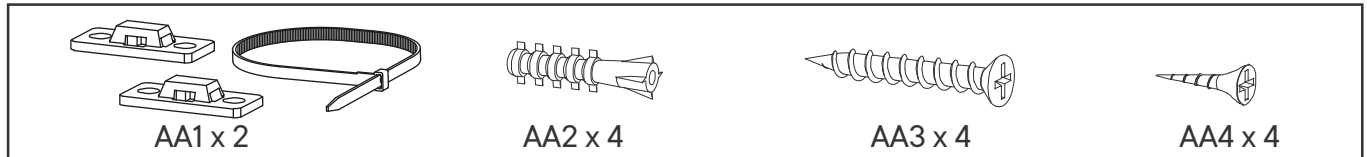

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.