

ECO642 WOODEN FEET ASSEMBLY



STEP 1: PULL OUT THE TOP LEFT DRAWER TO GET THE 4 WOODEN FOOTINGS





STEP 2: UNPACK THE 4 WOODEN FOOTINGS

10MM X 20MM SCREW NUT

10MM X 35MM ALLEN BOLTS



STEP 3: LAY DOWN THE CABINET (BACK FLAT) TO ACCESS THE IMBEDDED BOLT NUTS FOR THE WOODEN FEET

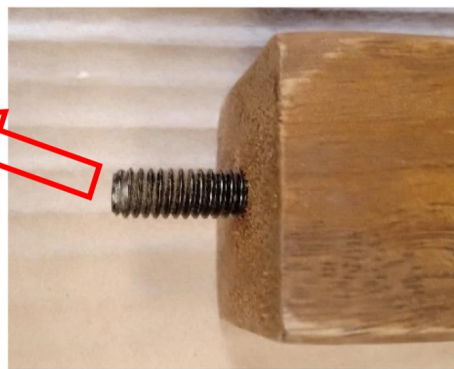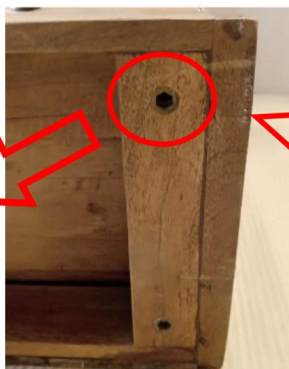

STEP 4: ASSEMBLE AND TIGHTEN THE FEET (4 WOODEN FEET) BY SCREWING THE WOODEN FEET BOLT TO THE IMBEDDED NUTS.



FULLY ASSEMBLED CABINET WITH WOODEN FEET