


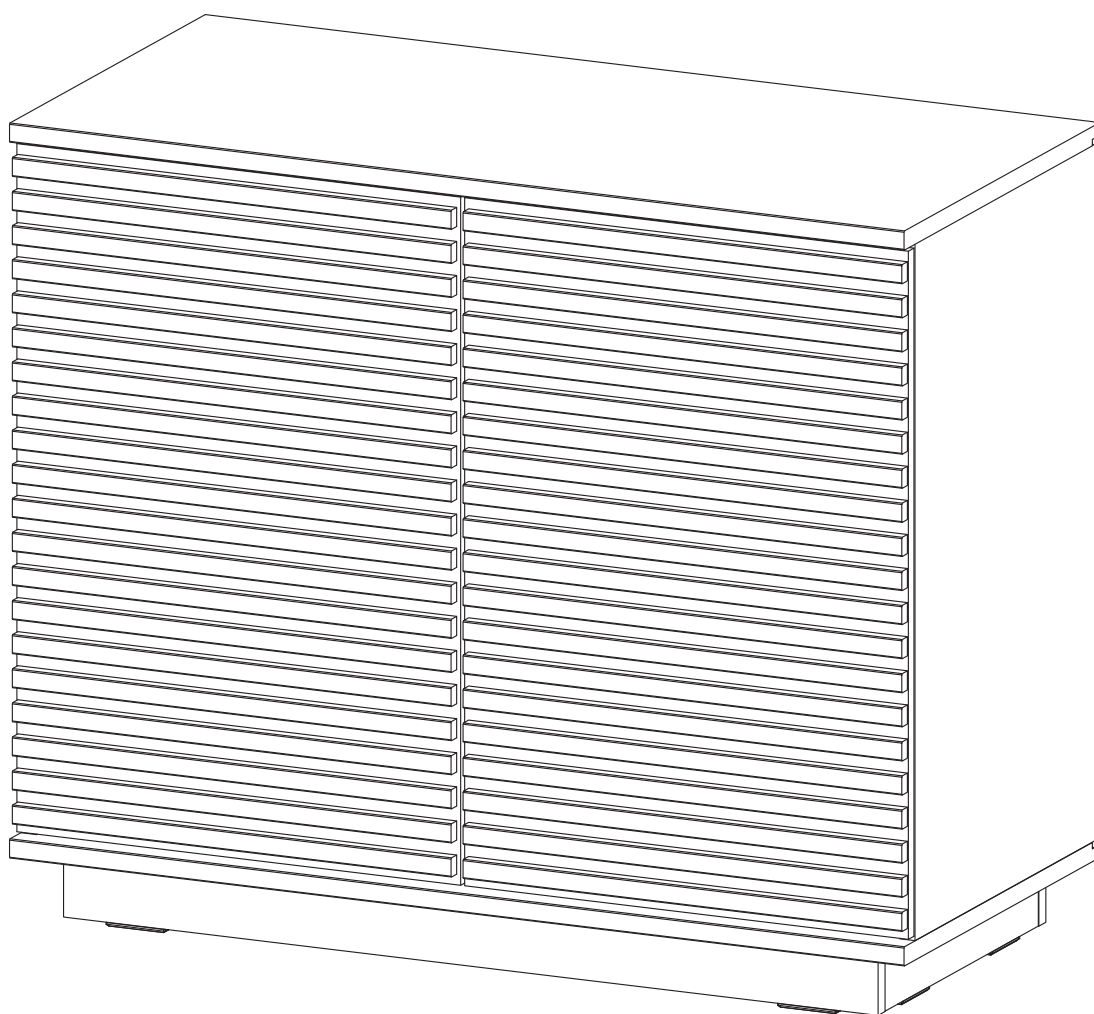

ASSEMBLY INSTRUCTIONS

Cabinet

EEI-7476 / V0.07.16.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.










Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x20
B		Cam Lock Ø15 mm	x20
C		Wood Dowel Ø8 x 30 mm	x28
D		Screw M 7 x 50 mm	x5
E		Allen Key	x2
F		Shelf Pin	x4
G		Screw M 3.5 x 13 mm	x4
H		Screw M 4.5 x 12.5 mm	x24
I		Screw M 3.5 x 15.5 mm	x10
J		Wedge	x10
K		Floor Glide	x8
L		Push Tool	x2
M		Screw Cap Ø15 mm	x4
N		Joining Strip	x1
HS26A		Hinge	x4

WHAT YOU NEED:




Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 15

All parts are numbered with a sticker according to this list.

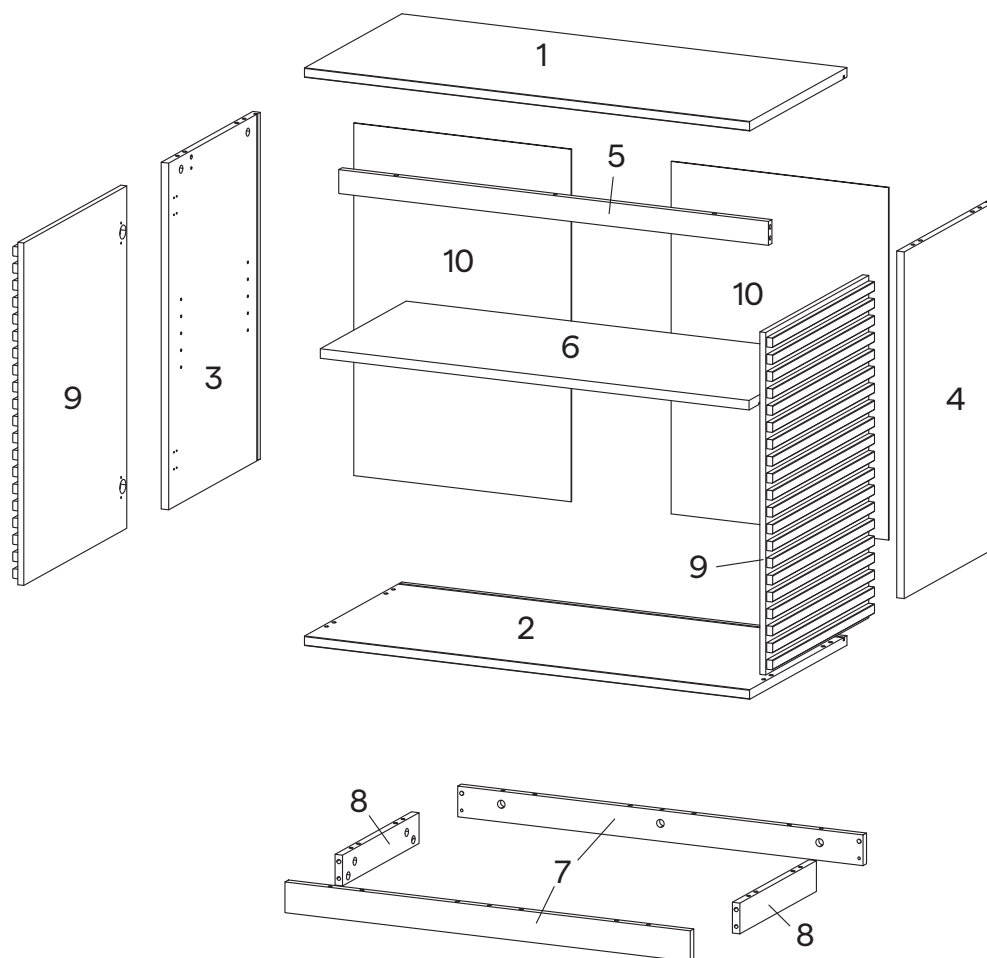

1	Top Board	x1	7	Bottom Skirt 1	x2
2	Bottom Board	x1	8	Bottom Skirt 2	x2
3	Side Board Left	x1	9	Door	x2
4	Side Board Right	x1	10	Back Board	x2
5	Support Board	x1			
6	Adjustable Shelf	x1			

HARDWARE


- A** Cam Bolt Ø6 x 35 mm x4
- G** Screw M 3.5 x 13 mm x4
- L** Push Tool x2

COMPONENTS

- 1** Top Board x1

1.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Top Board (1), then tighten using screwdriver.

1.2 Separate the Push Tool (L) by pressing down the hook at the back. Separate the base, ensuring the front hook (see figure) is at the edge of the front side, and secure it with the Screw M 3.5 x 13 mm (G). Align the front part of the Push Tool body with the bumper to the hook, then press down the back part of the Push Tool.

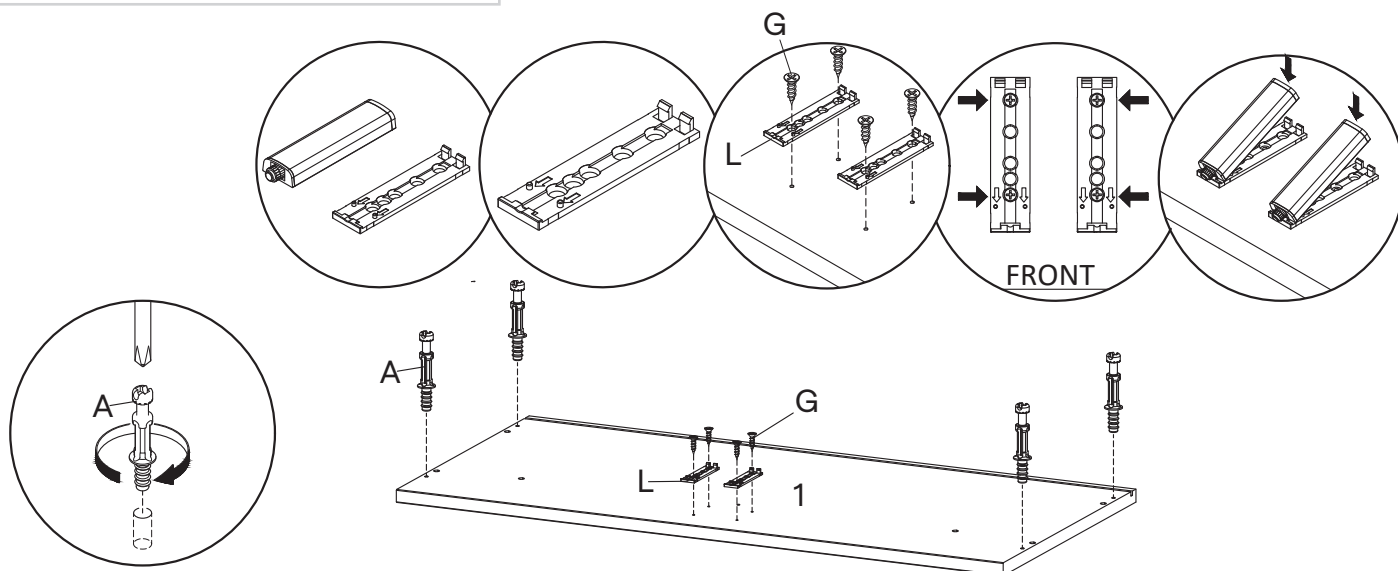

STEP 02


HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2
- C** Wood Dowel Ø8 x 30 mm x12

COMPONENTS

- 3** Side Board Left x1
- 4** Side Board Right x1
- 5** Support Board x1

2.1 Insert Cam Bolt Ø6 x 35 mm (A) into Side Board Left (3), Side Board Right (4), tighten using screwdriver. Then Insert Dowel Ø8 x 30 mm (C) into Side Board Left (3), Side Board Right (4) and Support Board (5).

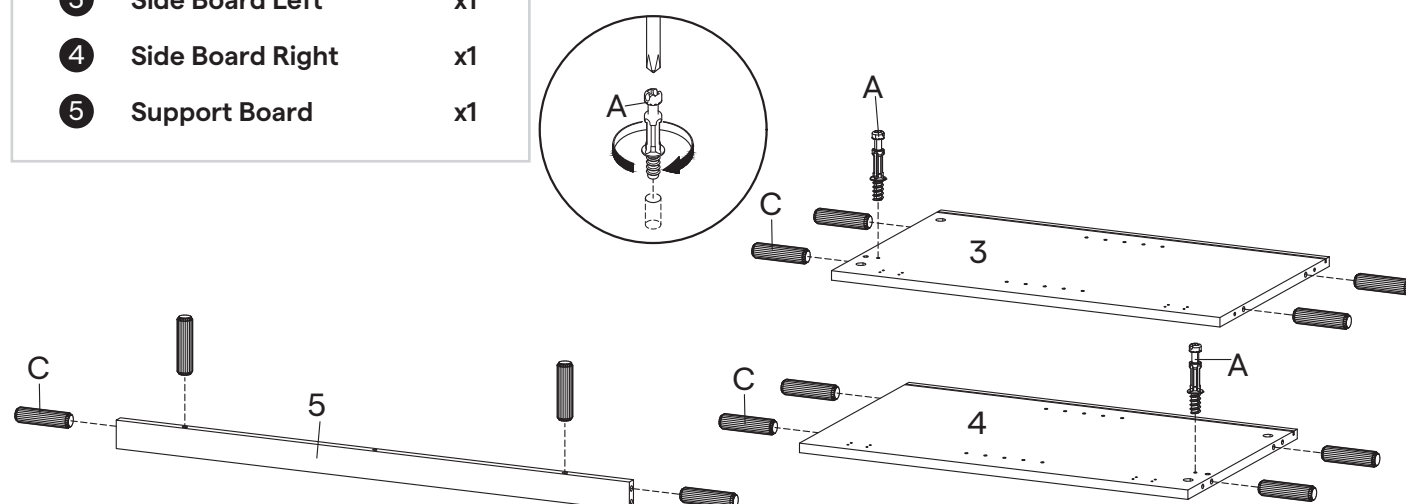

HARDWARE

(B) Cam Lock Ø15 mm x2


COMPONENTS

(3) Side Board Left x1

(4) Side Board Right x1

(5) Support Board x1

3.1 Combine Side Board Left (3), Support Board (5) and Side Board Right (4) according to picture. Secure with Cam Lock Ø15 mm (B) then tighten using screwdriver, Position as shown in the figure.

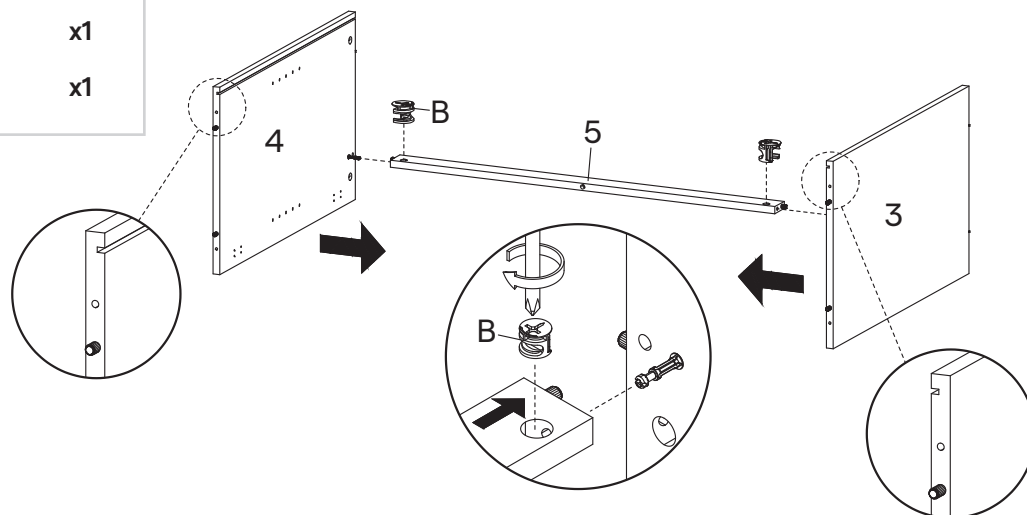

STEP 04

HARDWARE


(B) Cam Lock Ø15 mm x4

(M) Screw Cap Ø15 mm x4

COMPONENTS

(1) Top Board x1



4.1 Attach Top Board to pre-assembly from previous step and secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. And put Screw Cap Ø15 mm (M) to cam lock on Side Boards. Position as shown in the figure.

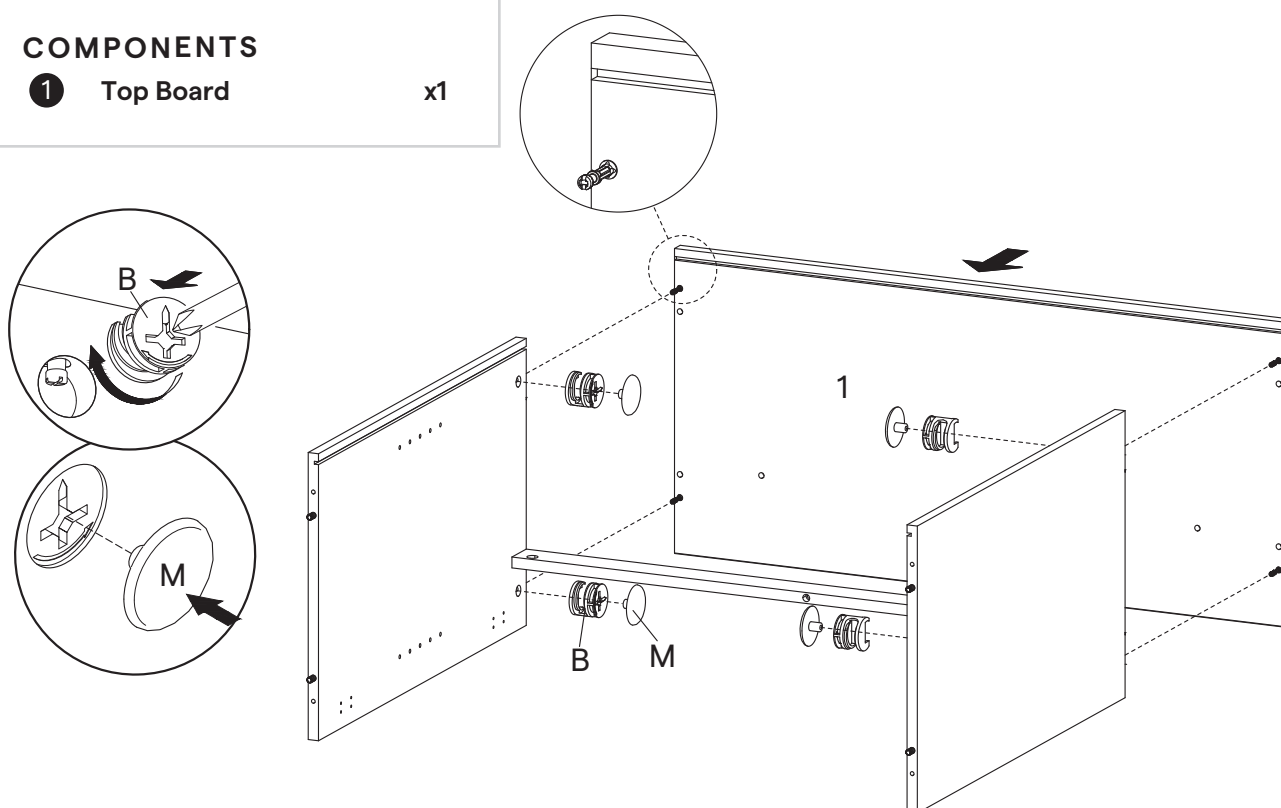

HARDWARE

- D** Screw M 7 x 50 mm x1
- E** Allen Key x1

5.1 Insert Screw M 7 x 50 mm (D) into Support Board, tighten screws using Allen Key (E).

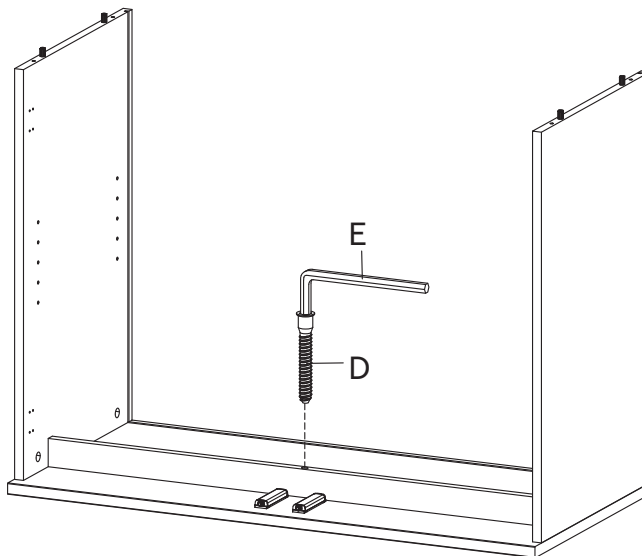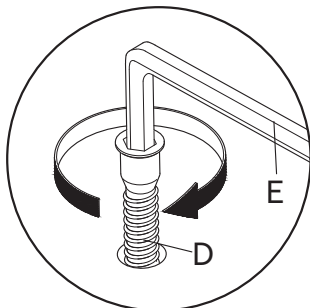

STEP 06




HARDWARE

- N** Joining Strip x1

COMPONENTS



- 10** Back Board x2

6.1 Insert Back Boards (10) into Top Board. Insert Joining Strip (N) in between the Back Boards (10).

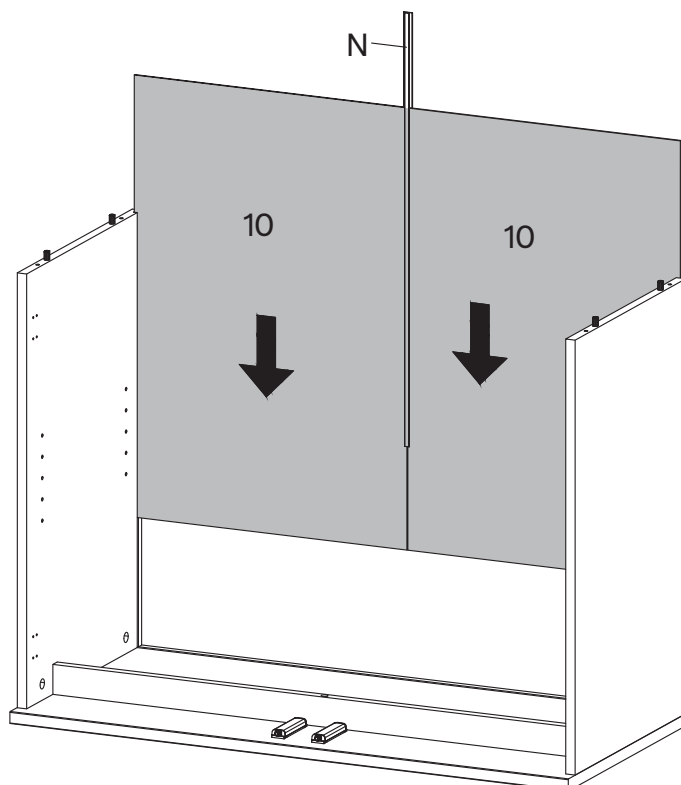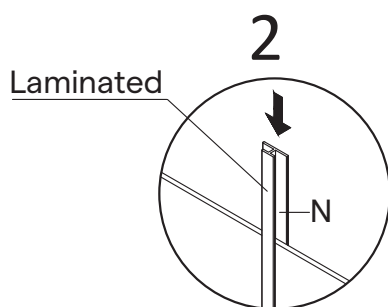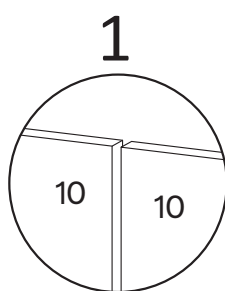

HARDWARE**D** Screw M 7 x 50 mm x4**E** Allen Key x1**COMPONENTS****2** Bottom Board x1



7.1 Insert Bottom Board (2) and secure with Screw M 7 x 50 mm (D), tighten screws using Allen Key (E).

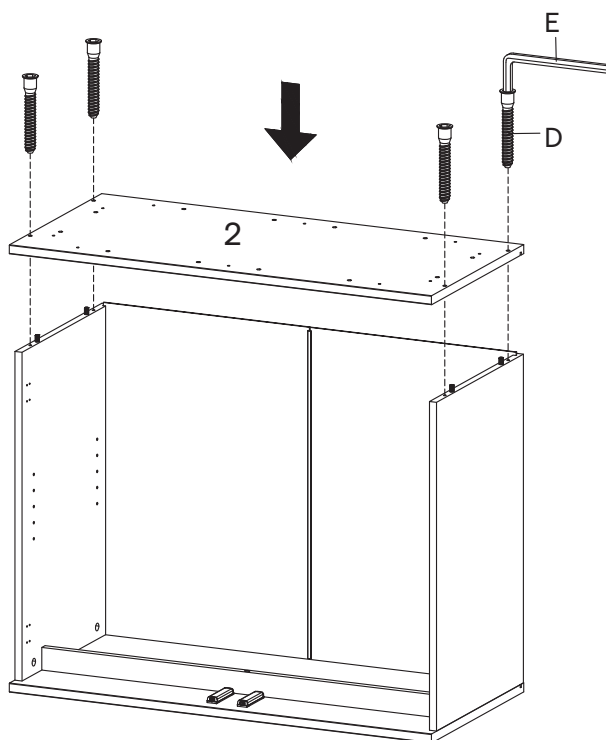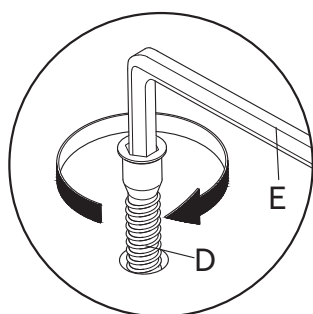

STEP 08

HARDWARE**A** Cam Bolt Ø6 x 35 mm x10

8.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Bottom Board (2), then tighten using screwdriver.

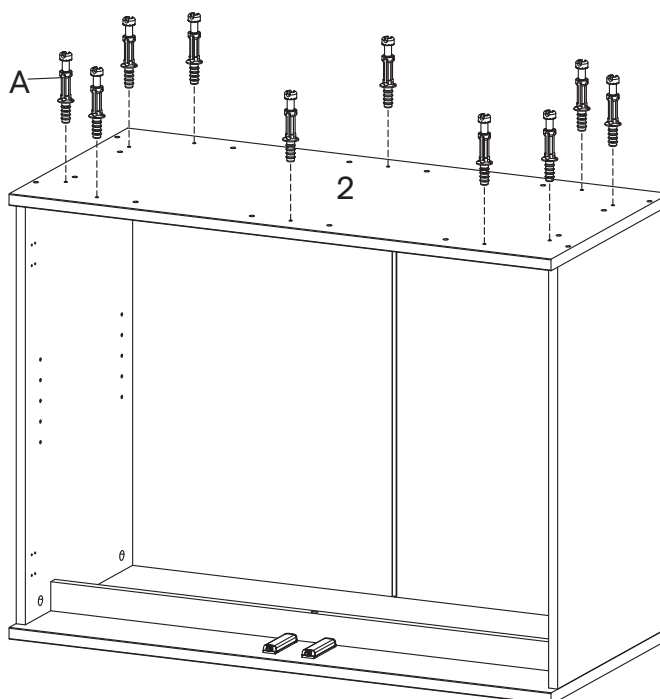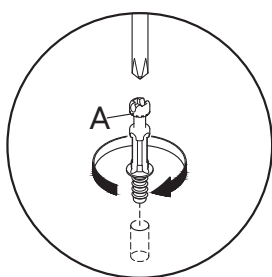


HARDWARE

- A** Cam Bolt Ø6 x 35 mm x4
C Wood Dowel Ø8 x 30 mm x4


COMPONENTS

- 7** Bottom Skirt 1 x2
8 Bottom Skirt 2 x2

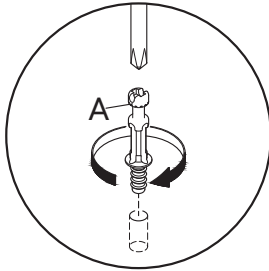

9.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Bottom Skirt 1 (7), then tighten using screwdriver.

9.2 Insert Wood Dowel Ø8 x 30 mm (C) into the Bottom Skirt 2 (8).

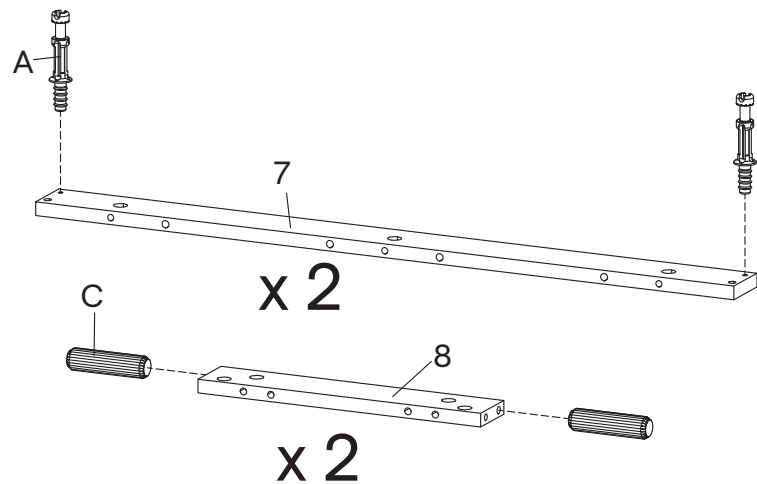

STEP 10



HARDWARE




- B** Cam Lock Ø15 mm x4

COMPONENTS

- 7** Bottom Skirt 1 x2
8 Bottom Skirt 2 x2

10.1 Combine Bottom Skirt 1 (7) and Bottom Skirt 2 (8), secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown in the figure.

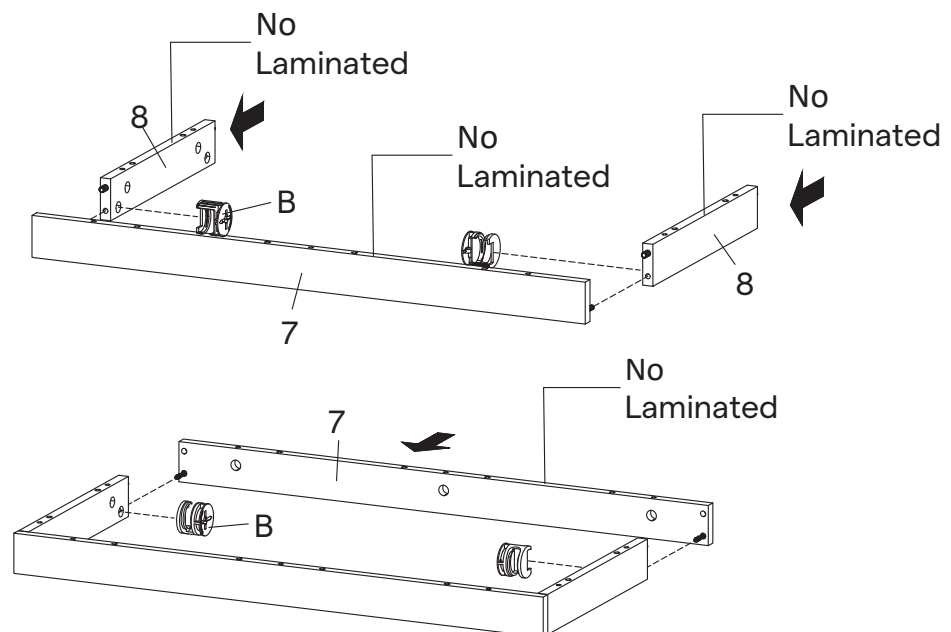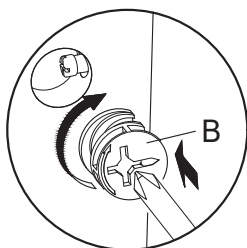


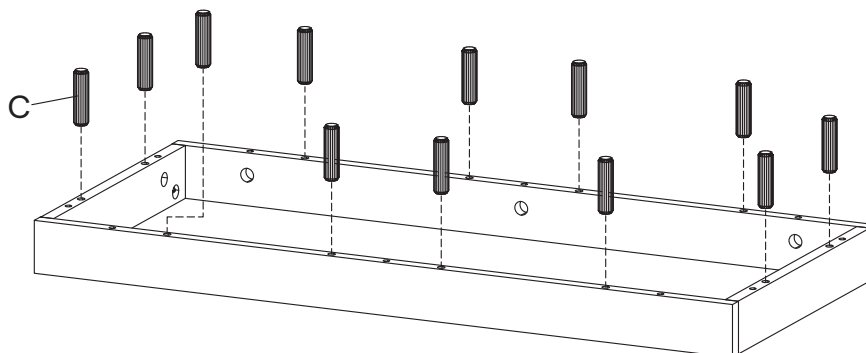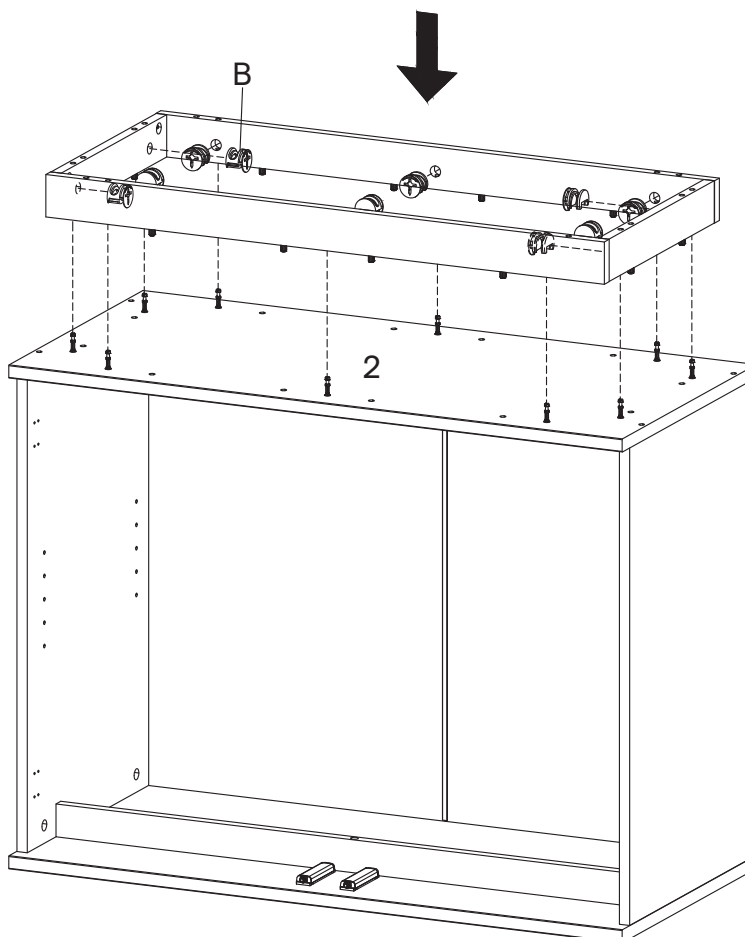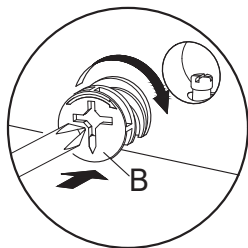HARDWARE**C** Wood Dowel Ø8 x 30 mm x12**11.1** Insert Wood Dowel Ø8 x 30 mm (C) into assembled from previous step.**STEP 12****HARDWARE****B** Cam Lock Ø15 mm x10**12.1** Attach Bottom Skirts from previous step into Bottom Board secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

HARDWARE

(K) Floor Glide x8

13.1 Insert Floor Glide (K) into Bottom Skirts from previous step. Position as shown in the figure.

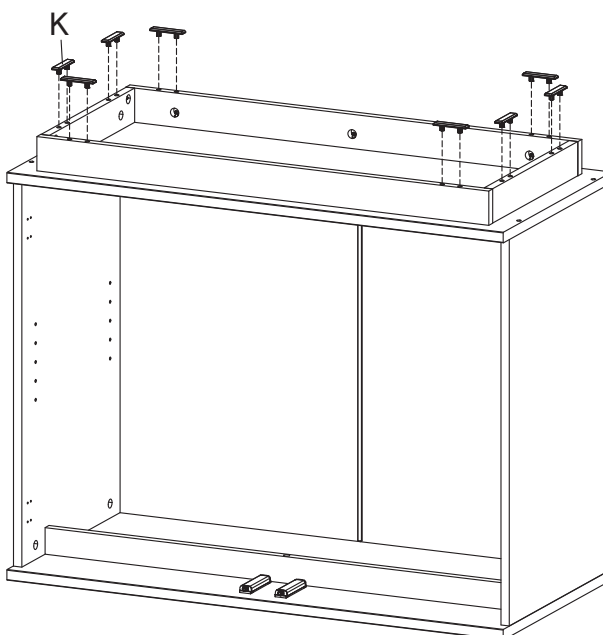

STEP 14



HARDWARE

(F) Shelf Pin x4

COMPONENTS


(6) Adjustable Shelf x1

14.1 Insert Shelf Pin (F) into the holes on the Side Boards at the desired level. Then, place the Adjustable Shelf (6) by aligning its hole with the Shelf Pin (F) and inserting it securely.

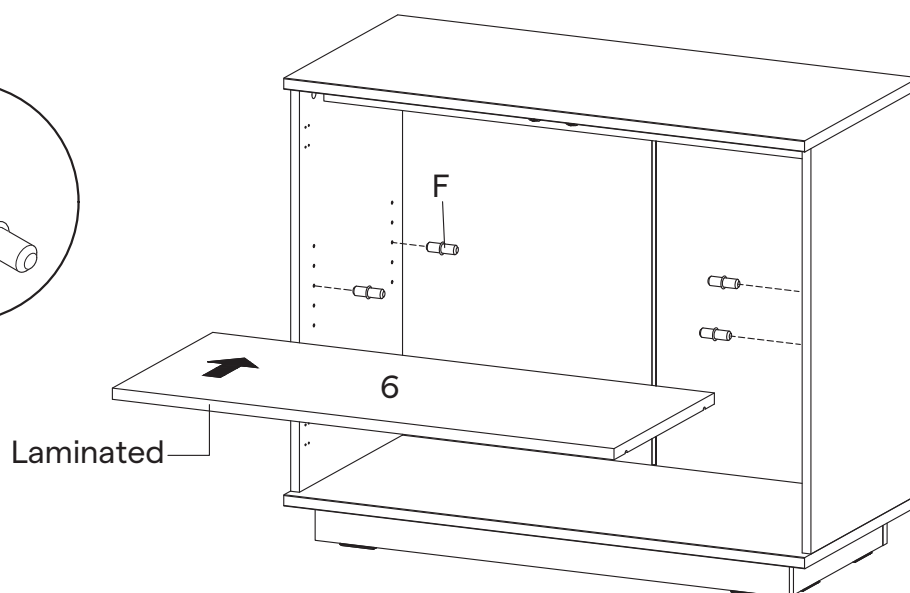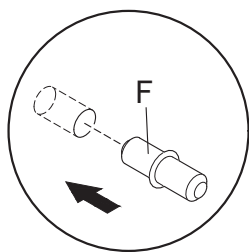

HARDWARE**H** Screw M 4.5 x 12.5 mm x8**HS26A** Hinge x4**COMPONENTS****9** Door x2



15.1 Install Hinge (HS26A) to Door (9). Secure with Screw M 4.5 x 12.5 mm (H), then tighten using screwdriver. Position as shown in the figure.

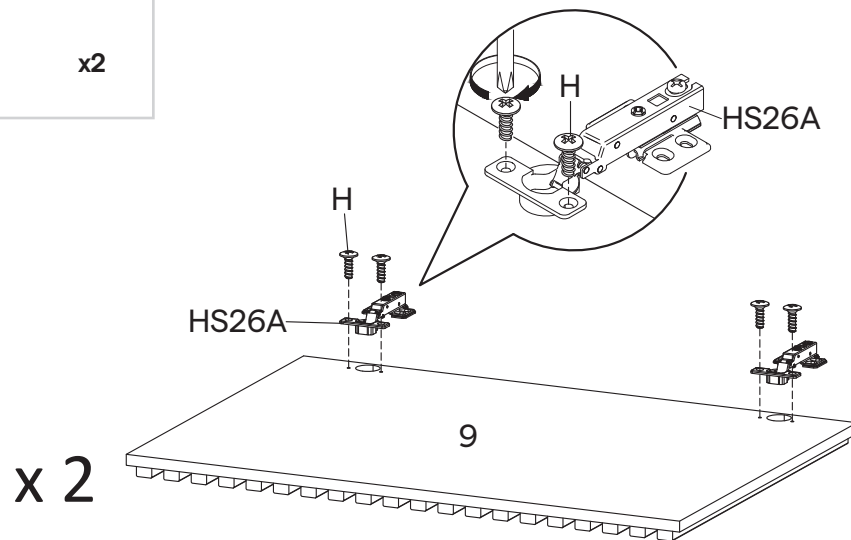

STEP 16

HARDWARE**H** Screw M 4.5 x 12.5 mm x16**COMPONENTS****9** Door x2



16.1 Install Door (9) to Side Board, secure the hinges with Screw M 4.5 x 12.5 mm (H) then tighten using screwdriver. Please refer to the last page for more guide on how to adjust hinges.

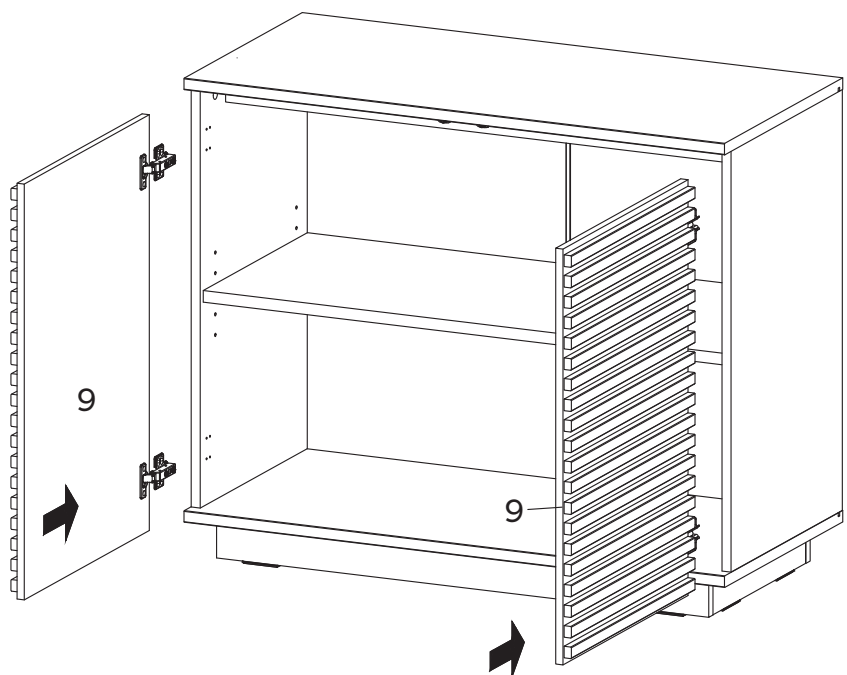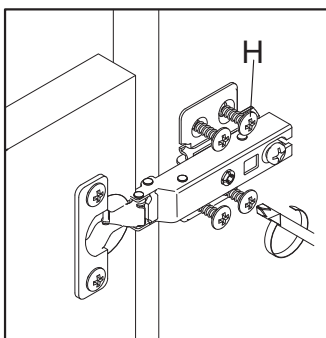

HARDWARE

- | | | |
|----------|-----------------------|-----|
| I | Screw M 3.5 x 15.5 mm | x10 |
| J | Wedge | x10 |

17.1 Use the Wedge (J) and Screw M 3.5 x 15.5 mm (I) to tighten the back of the cabinet using screwdriver. Before securing the wedges (J), ensure that the top board and bottom board are aligned at a 90° angle against the cabinet.

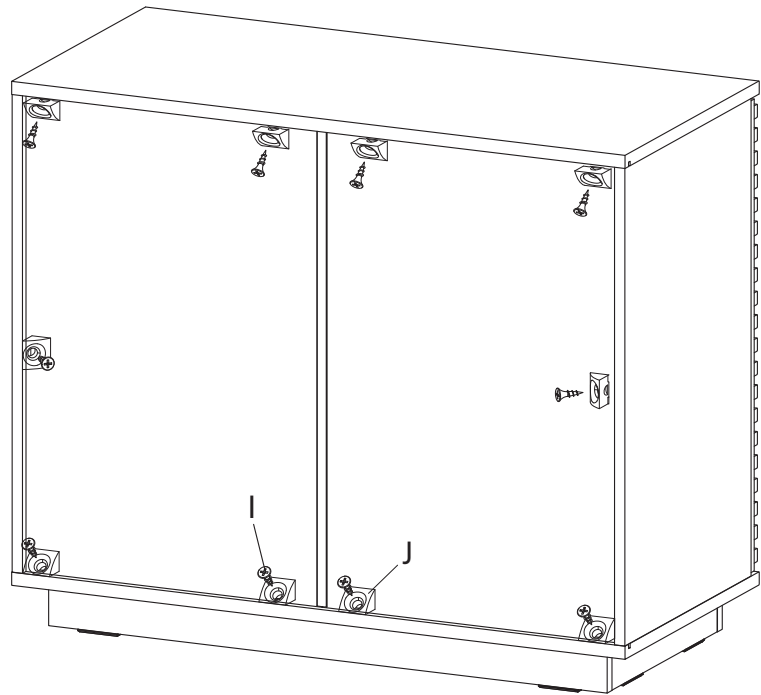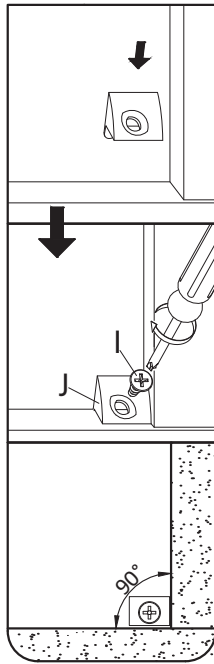


Great job!

Cabinet assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

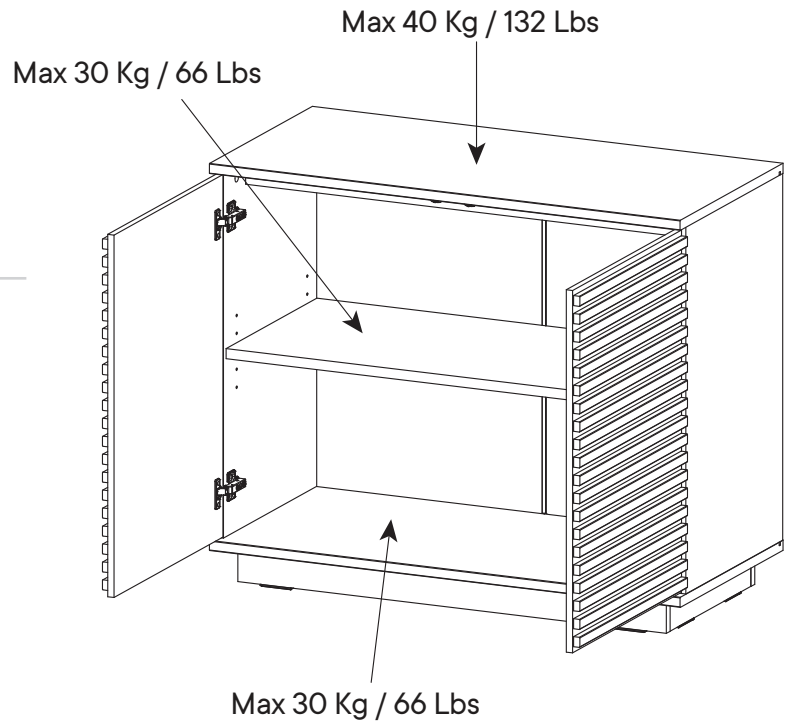

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway




Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

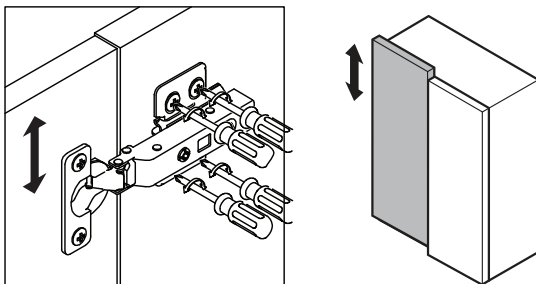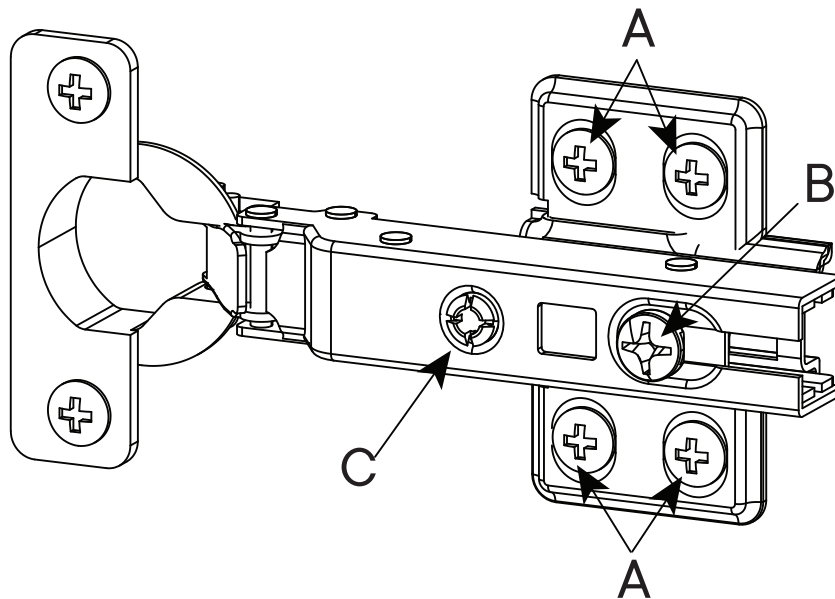


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

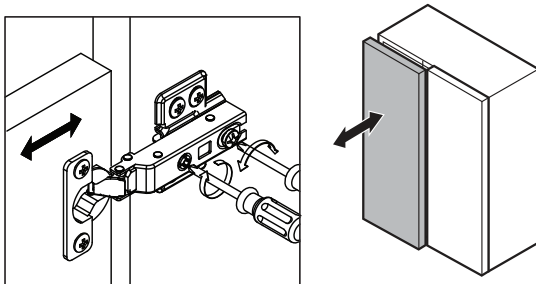

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

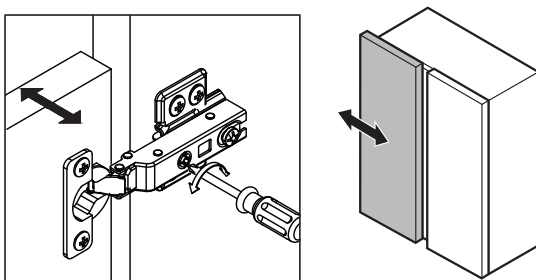

To adjust side ways.



Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

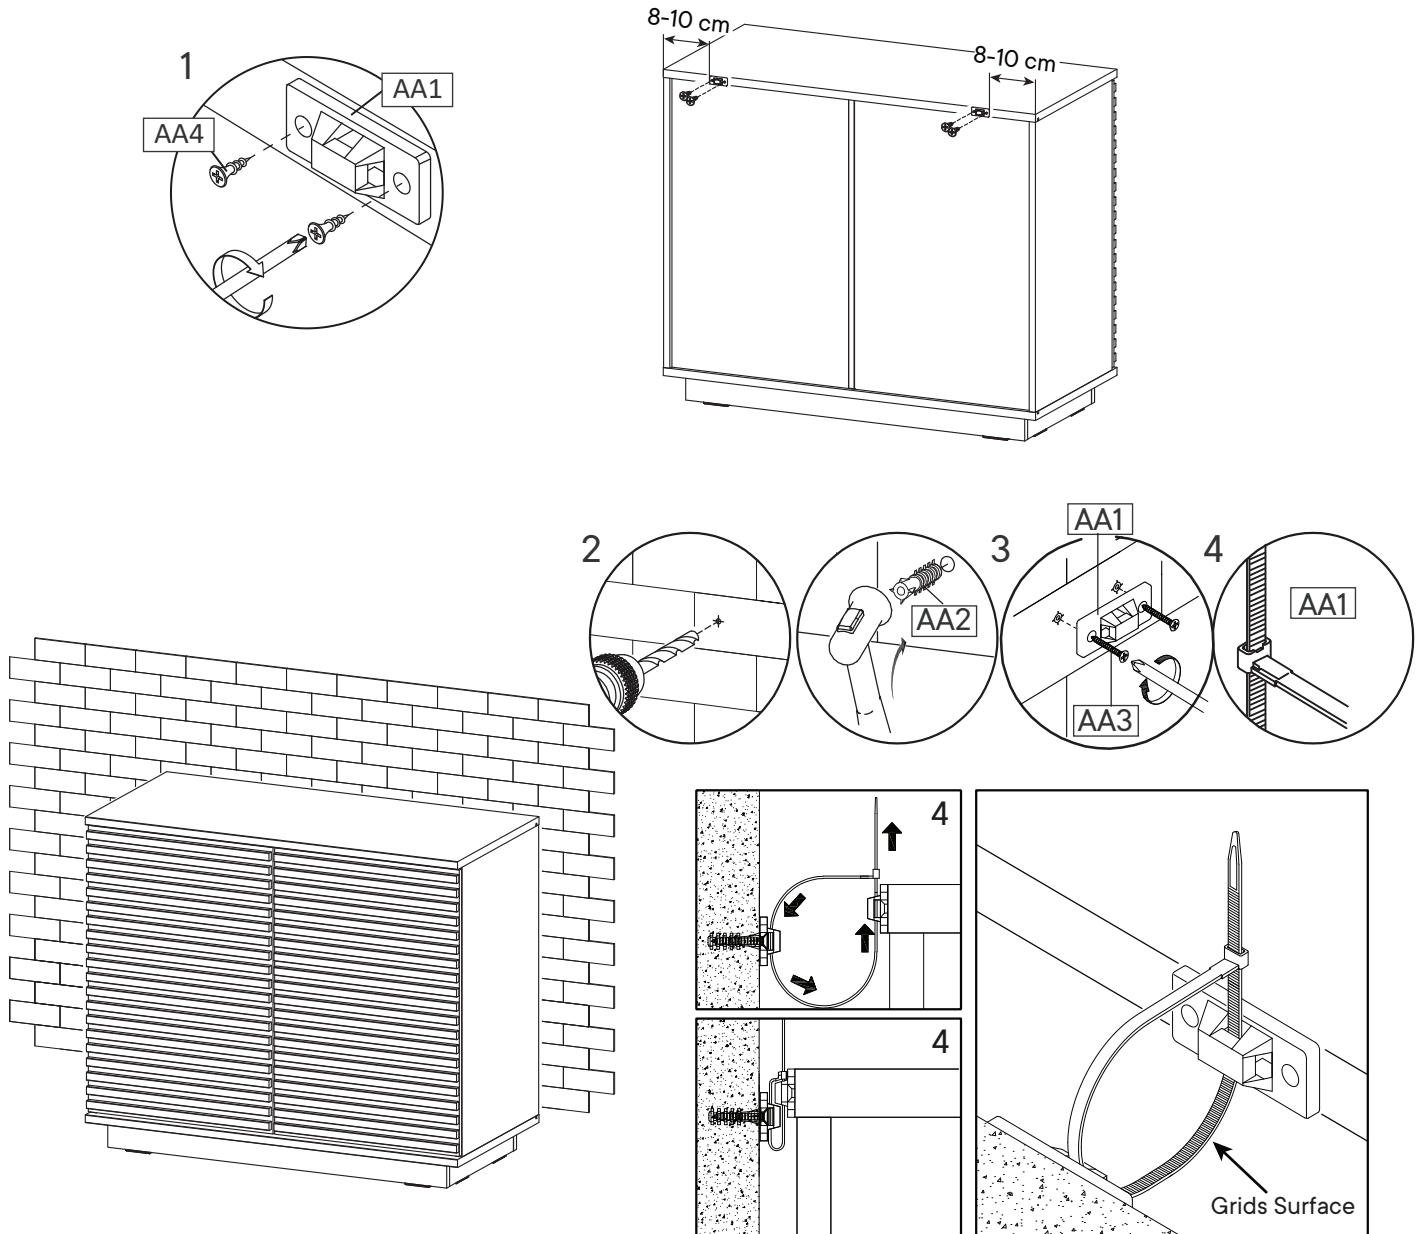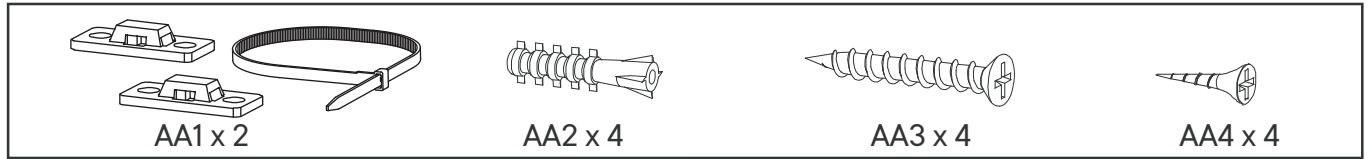

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.