


ASSEMBLY INSTRUCTIONS

EEI-7354-NAT

V0.13.02.25

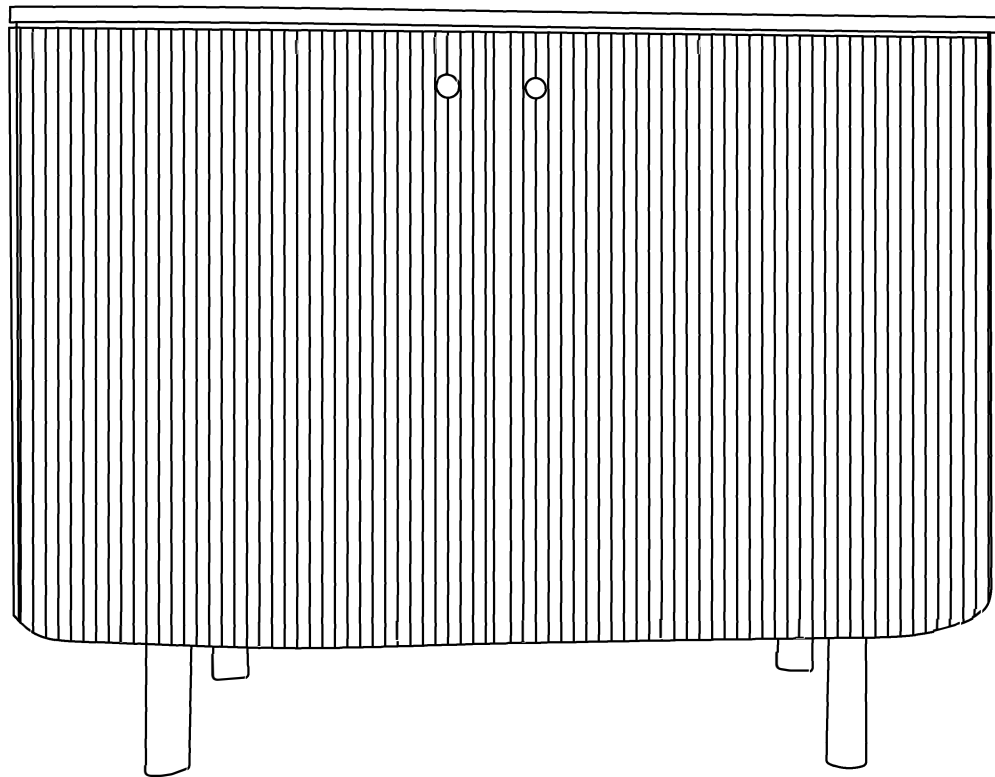

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components :

1	Legs	x2
2	Bottom Panel	x1
3	Right Side Panel	x1
4	Left Side Panel	x1
5	Partition Panel	x1
6	Back Panel	x1
7	Marble Top with Frame	x1
8	Left Shelf	x1
9	Right Shelf	x1
10	Left Door	x1
11	Right Door	x1

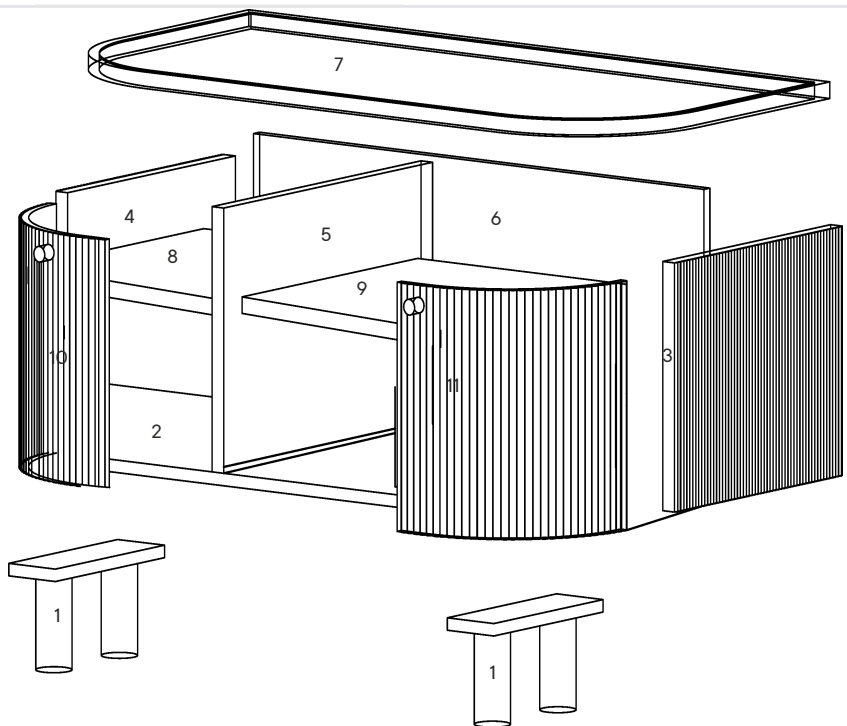

Provided hardware :

A		Allen Bolt 6 x 30 mm	x12
B		Allen Bolt 6 x 40 mm	x8
C		Washer 8x20mm	x22
D		Allen Key M4	x1
E		Hinge 0°	x4
F		Screw 4x13	x24
G		Knob	x2
H		Knob Screw 4x35	x2
I		Shelf Pin	x8
J		Adjustable Leveler (Pre-assembled)	x4
K		Allen Bolt 6x12	x2

What You Need:



Phillips Head Screwdriver

Phillips

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

HARDWARE

A	Allen Bolt 6x30mm	x10
C	Washer 8x20mm	x10
D	Allen Key M4	x1

COMPONENTS

1	Leg	x2
2	Bottom Panel	x1

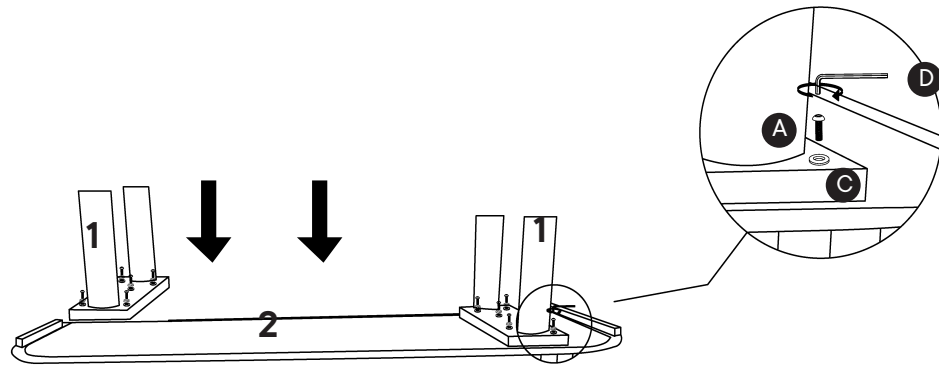


Step 2

HARDWARE

B	Allen Bolt 6x40mm	x4
C	Washer 8x20mm	x4
D	Allen Key M4	x1

COMPONENTS

3	Right Side Panel	x1
4	Left Side Panel	x1

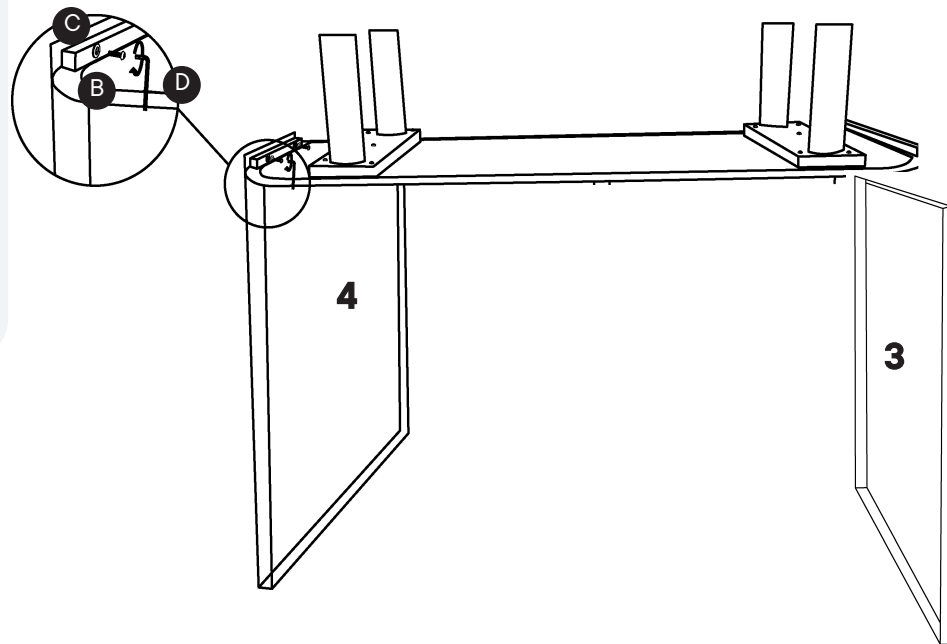


Step 3

HARDWARE

A	Allen Bolt 6x30mm	x2
C	Washer 8x20mm	x2
D	Allen Key M4	x1

COMPONENTS


5	Partition Panel	x1
----------	-----------------	----

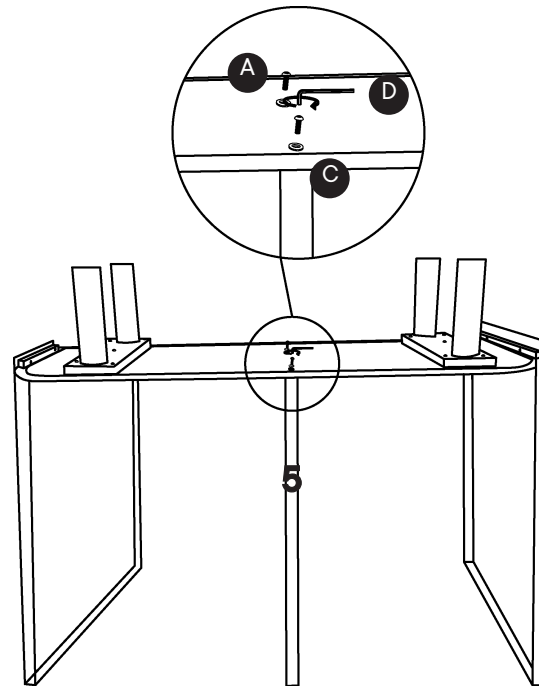

Step 4

COMPONENTS

6	Back Panel	x1
----------	------------	----

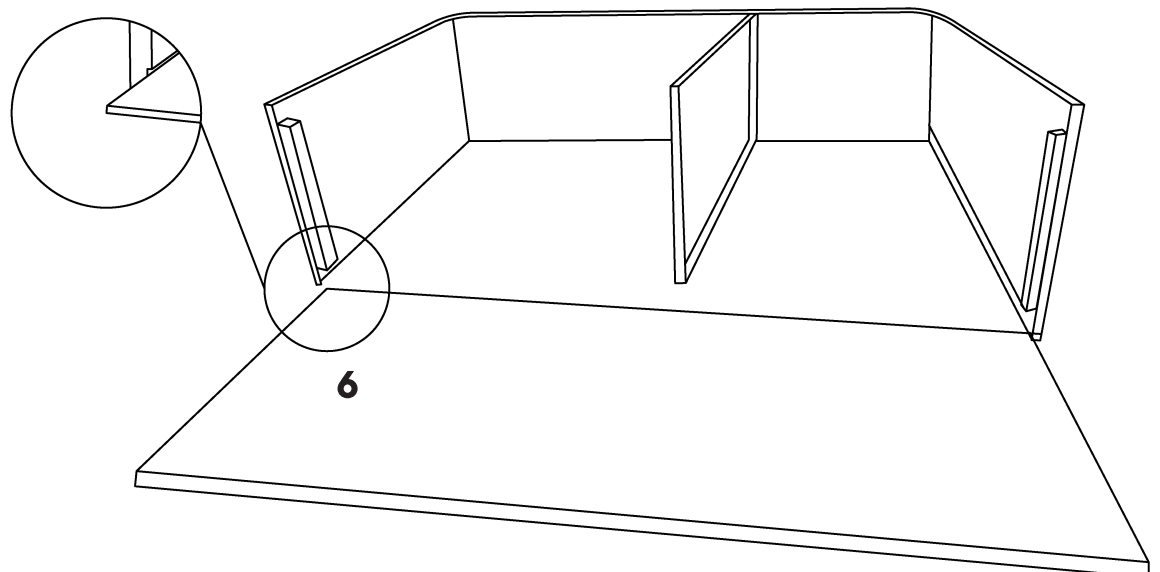


Step 5

HARDWARE

B	Allen Bolt 6x40mm	x4
C	Washer 8x20mm	x6
D	Allen Key M4	x1
K	Allen Bolt 12 x 6	x2

COMPONENTS

7	Marble Top with frame	x1
----------	-----------------------	----

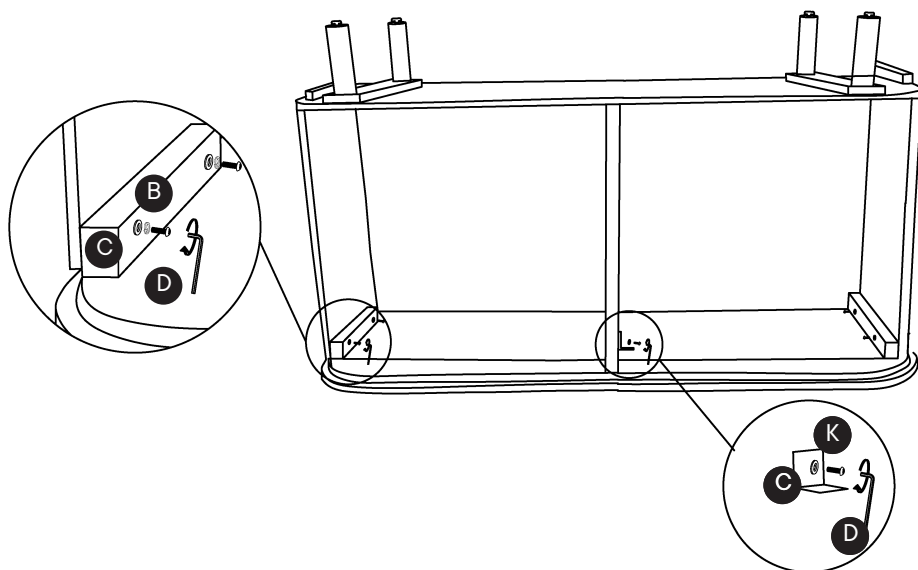

Product Up Side Down



Step 6

HARDWARE

E	Hinge 0°	x4
F	Screw 4x13	x8

COMPONENTS

10	Left Door	x1
11	Right Door	x1

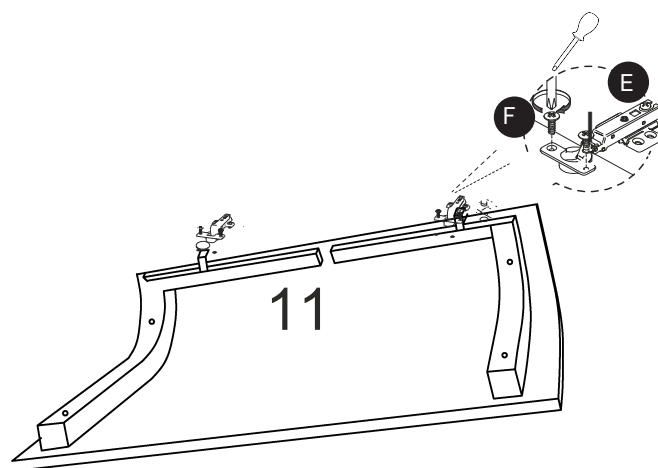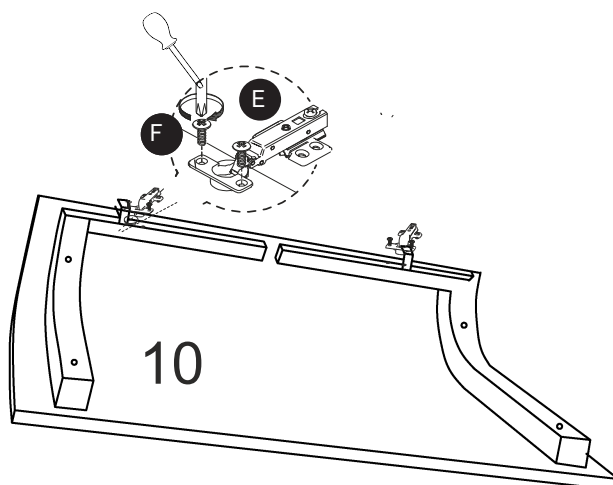


Step 7

HARDWARE

G Knob	x2
H Knob Screw 4x35	x2
F Screw 4x13	x16

COMPONENTS


10 Left Door	x1
11 Right Door	x1

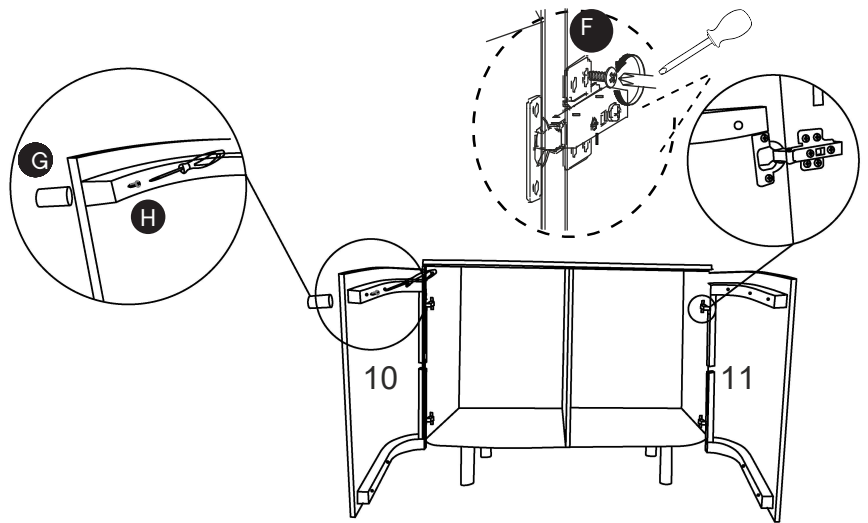

Step 8

HARDWARE

I Shelf Pin	x8
--------------------	----

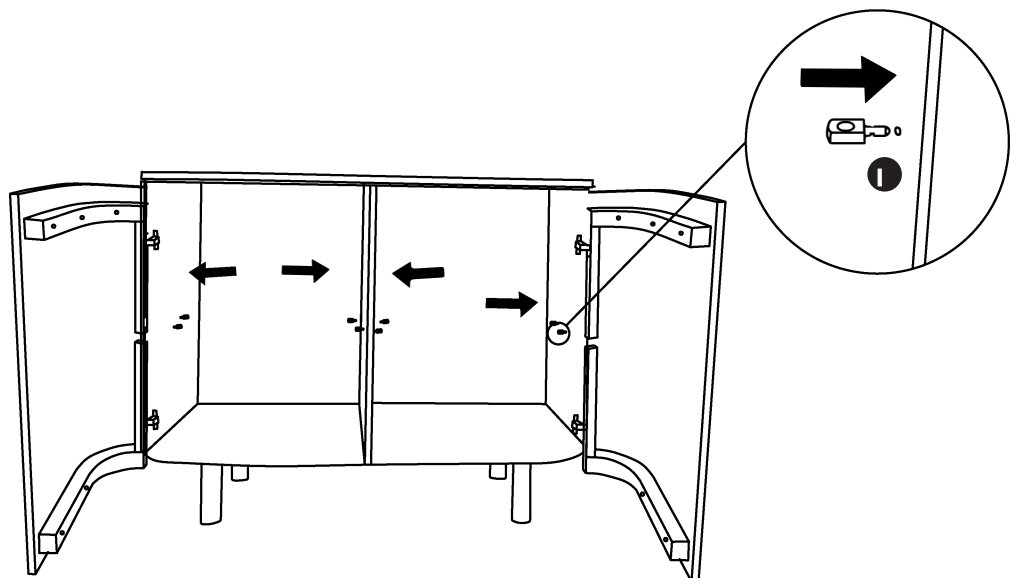

Step 9


HARDWARE

J Adjustable Leveler (Pre-assembled) x4

COMPONENTS

8 Left Shelf x1

9 Right Shelf x1

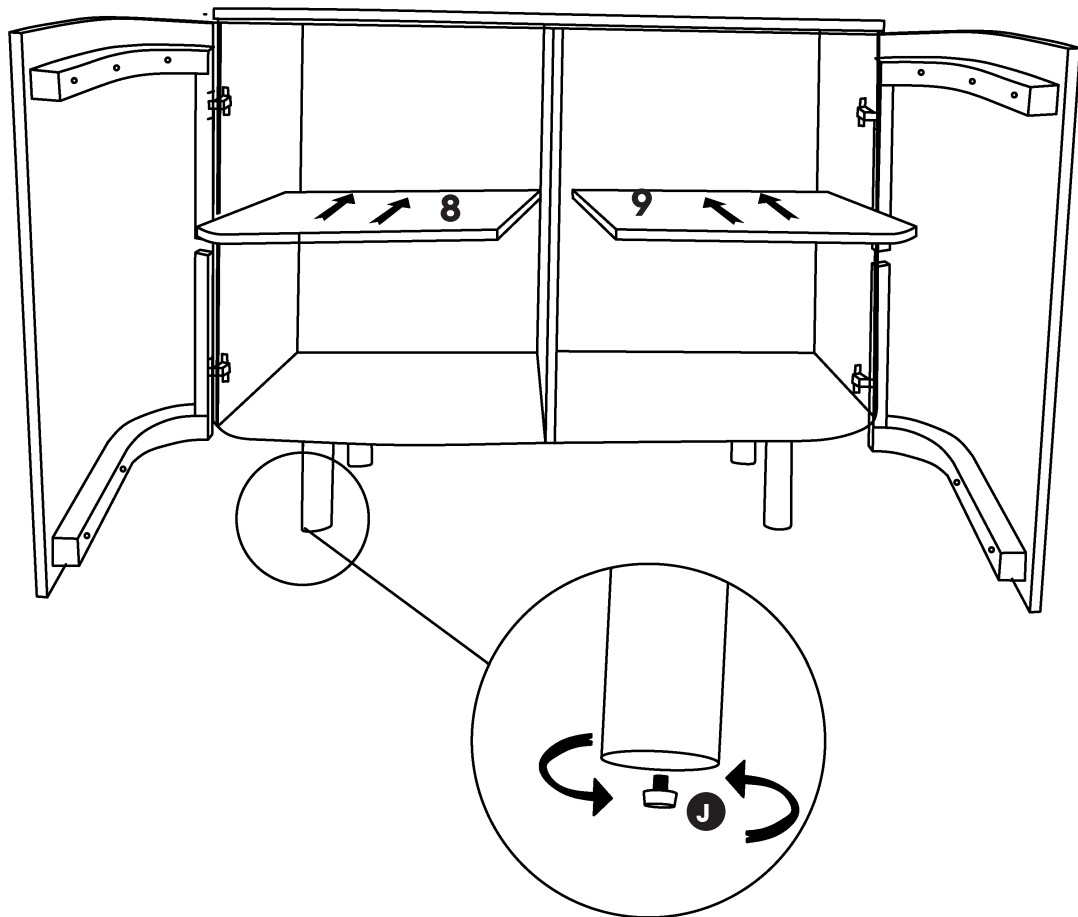

Great job!

Your new 2 Door Sideboard is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner.

Never use harsh chemicals,
as they could damage the finish
or integrity of the item.

CONNECT WITH US!   

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

