


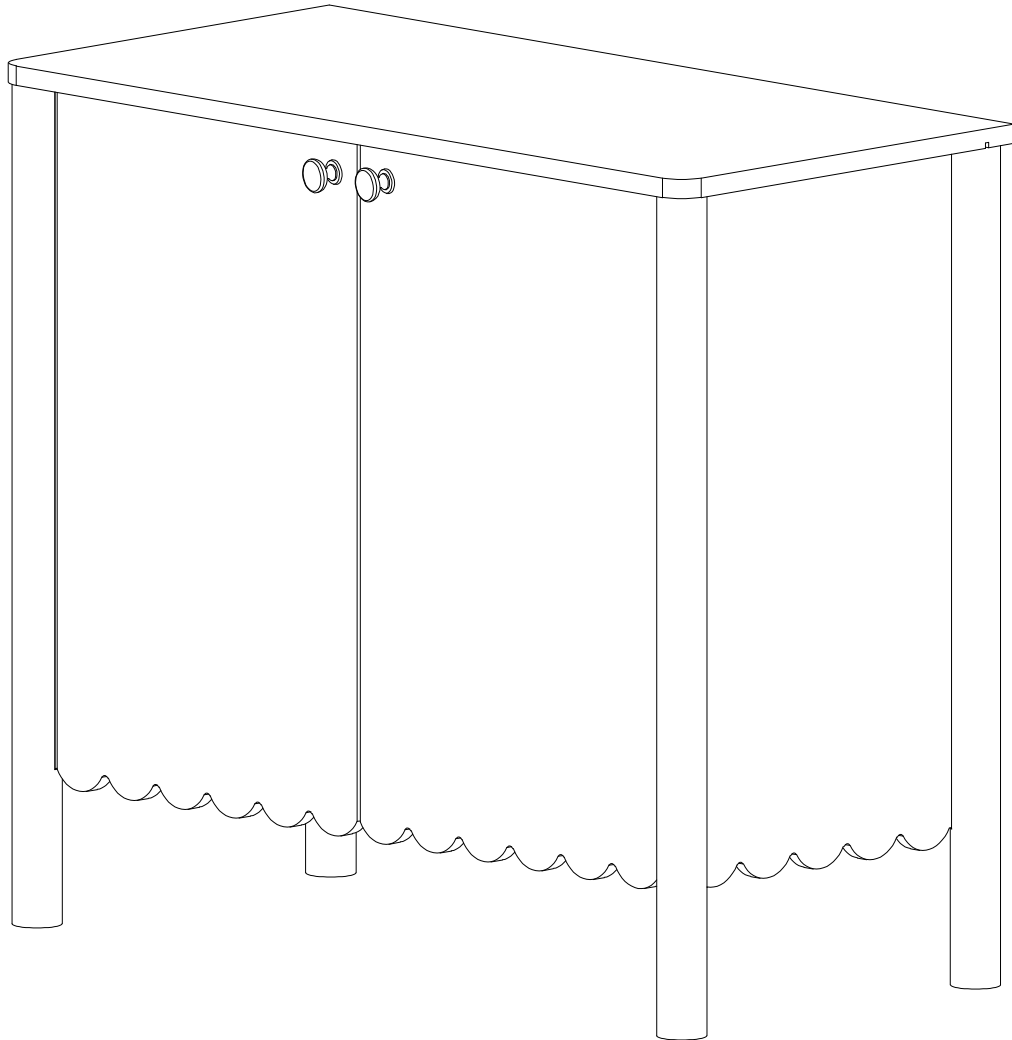

ASSEMBLY INSTRUCTIONS

2 Door Sideboard

EEL-7152 / V2.06.26.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome. Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.


Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Screw M3.5 x 15mm	x16
B		Screw M6 x 13mm	x8
C		Screw M6 x 40mm	x3
D		Wood Dowel Ø6 x 20mm	x2
E		Wood Dowel Ø8 x 25mm	x14
F		Cam Bolt 20 x 5 mm	x13
G		Cam Lock 15/12	x9
H		Cam Lock 15/10	x4
J		Hinges 7/8"	x4
K		Handle	x2
L		Plastic Leg Stud	x4
M		Shelf Pin	x4
N		Allen Key	x1
P		Wedge	x8
		Tipping Restraint Kit	x1

WHAT YOU NEED:




Phillips Head Screwdriver



Mallet

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

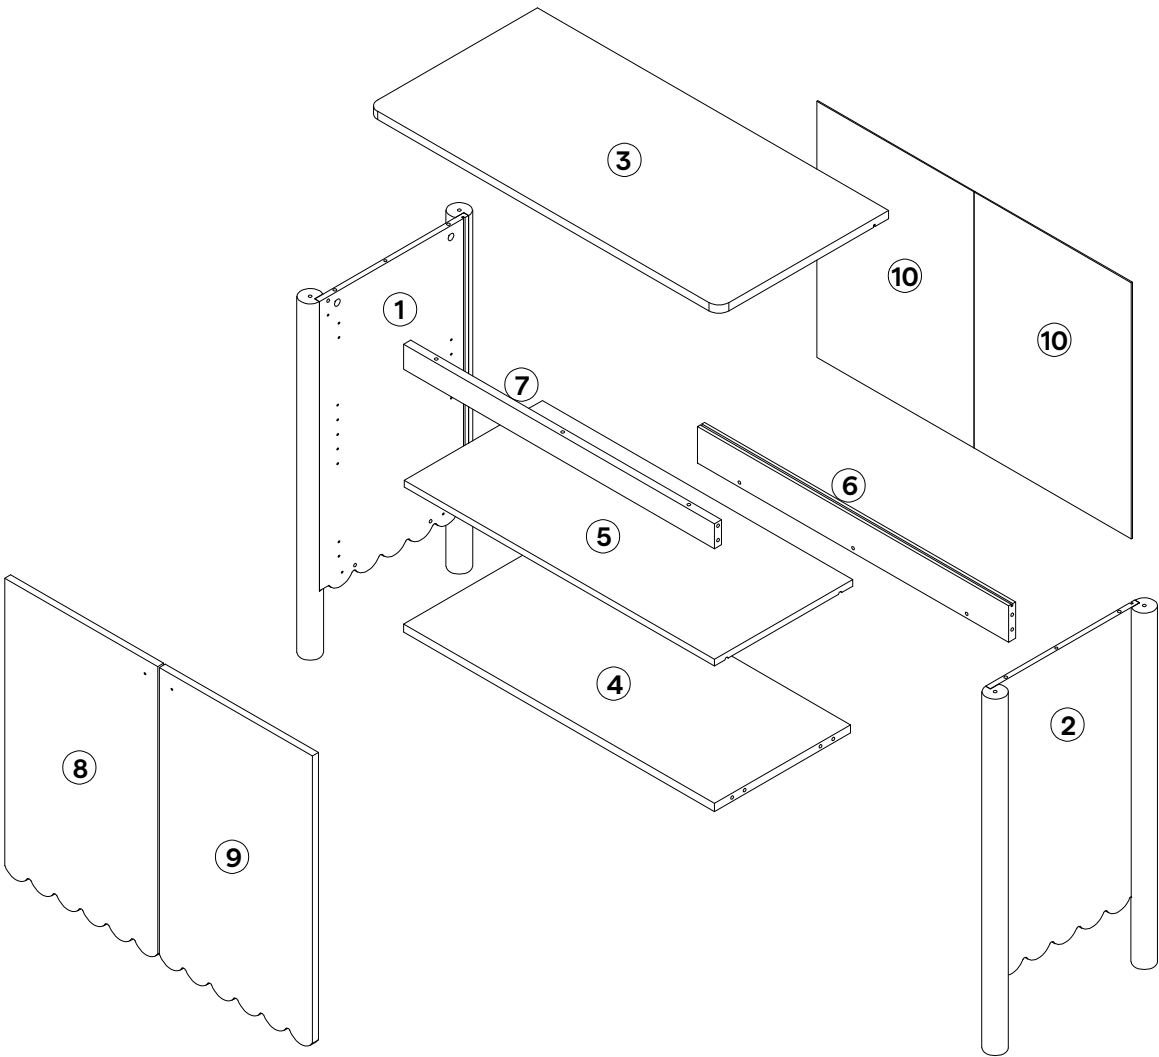

1	Left Side Panel	x1	5	Adjustable Panel	x1	8	Left Door Panel	x1
2	Right Side Panel	x1	6	Support Panel	x1	9	Right Door Panel	x1
3	Top Panel	x1	7	Rail Panel	x1	10	Back Panel	x2
4	Bottom Panel	x1						

HARDWARE

- D** Wood Dowel Ø6 x 20mm x2
E Wood Dowel Ø8 x 25mm x14
F Cam Bolt 20 x 5mm x8


COMPONENTS

- 1** Left Side Panel x1
2 Right Side Panel x1
4 Bottom Panel x1
6 Support Panel x1
7 Rail Panel x1

1.1 Insert **Wood Dowel (D)** into the innermost pre-drilled holes on the top edge of **Left Side Panel (1)** and **Right Side Panel (2)**.


1.2 Insert **Wood Dowel (E)** into the innermost pre-drilled holes on the top edge of **Left Side Panel (1)**, **Right Side Panel (2)**, left and right edge of **Bottom Panel (4)**, left edge ,right edge and top edge of **Rail Panel (7)** ,left edge and right edge of **Support Panel (6)**.

1.3 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the right side of **Left Side Panel (1)** and the left side of **Right Side Panel (2)**.

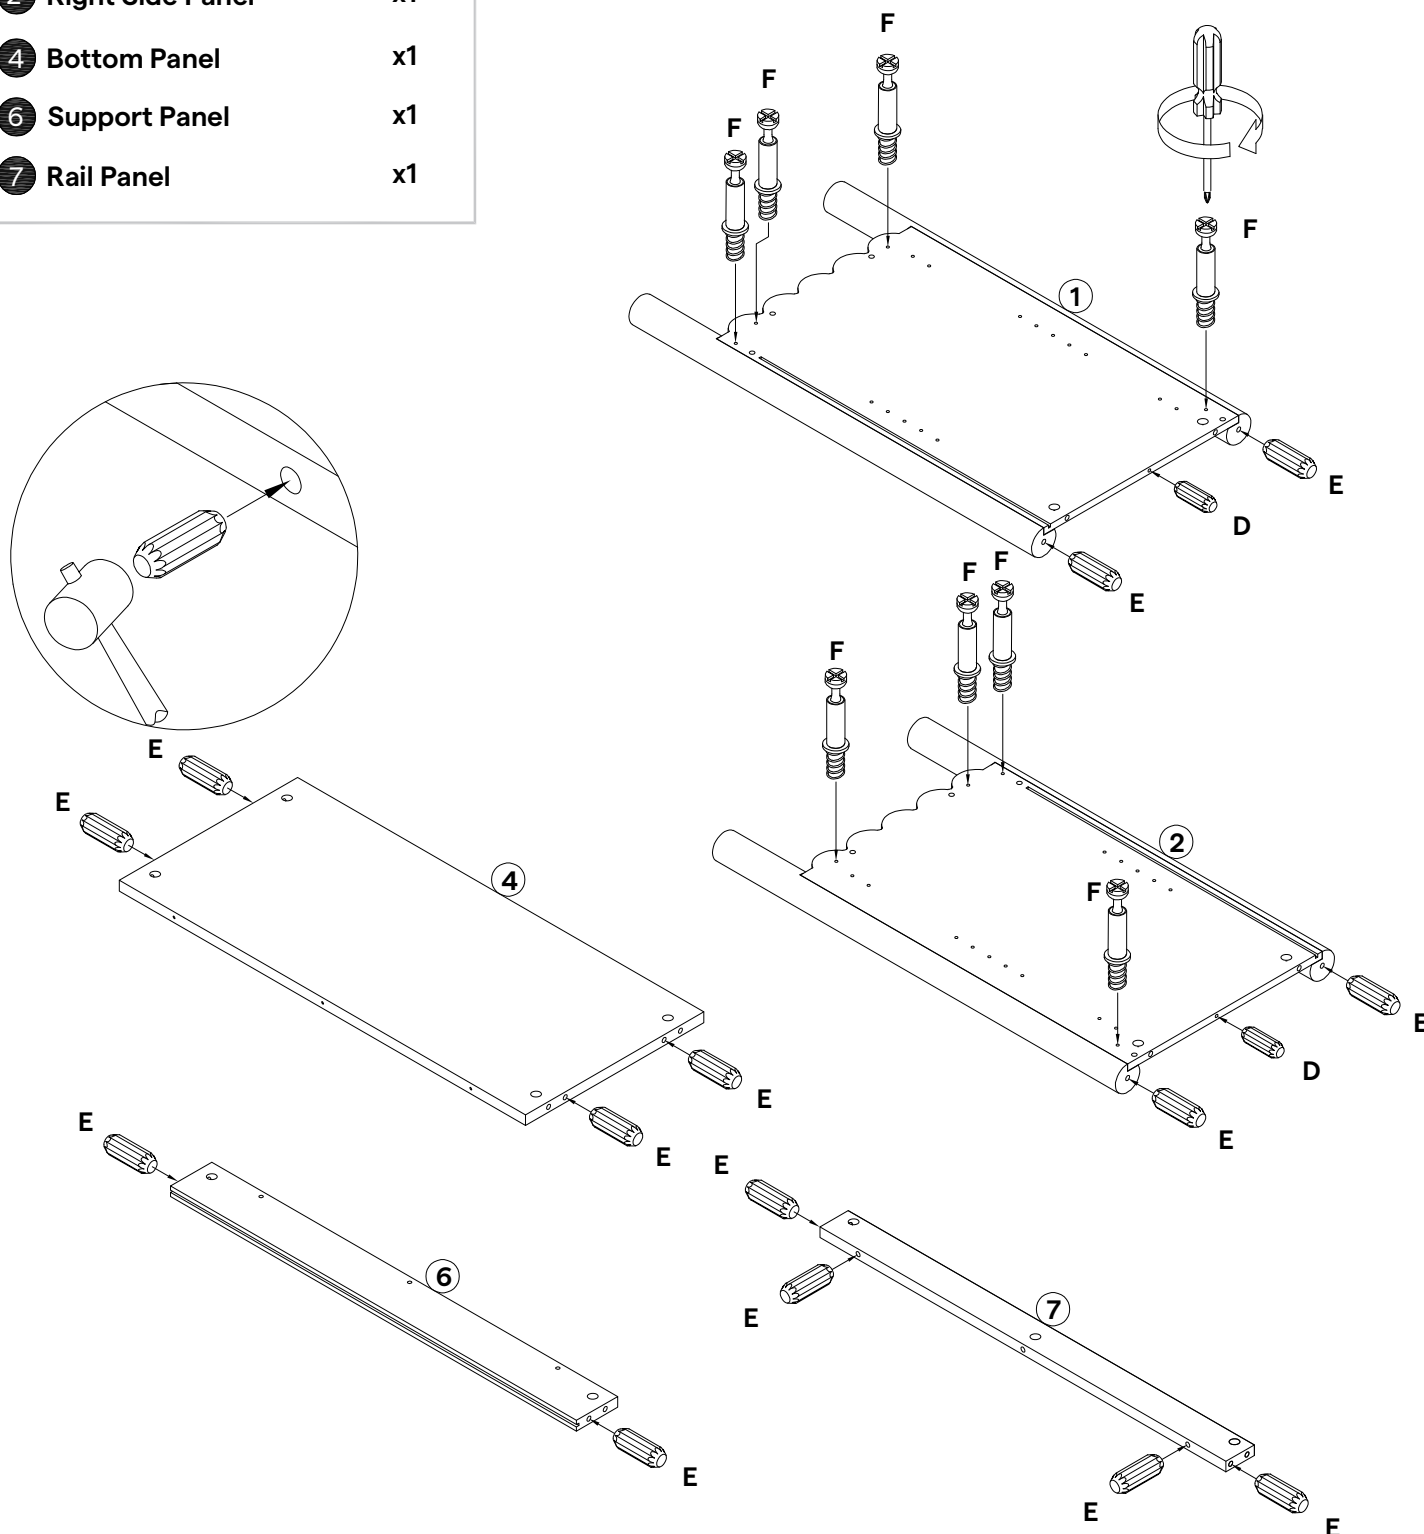

HARDWARE**C** Screw M6 x 40mm x3**COMPONENTS****4** Bottom Panel x1**6** Support Panel x1**TOOLS****N** Allen Key


2.1 Secure **Support Panel (6)** to **Bottom Panel (4)** by tightening 3 **Screw (C)** with the provided **Allen Key (N)**.

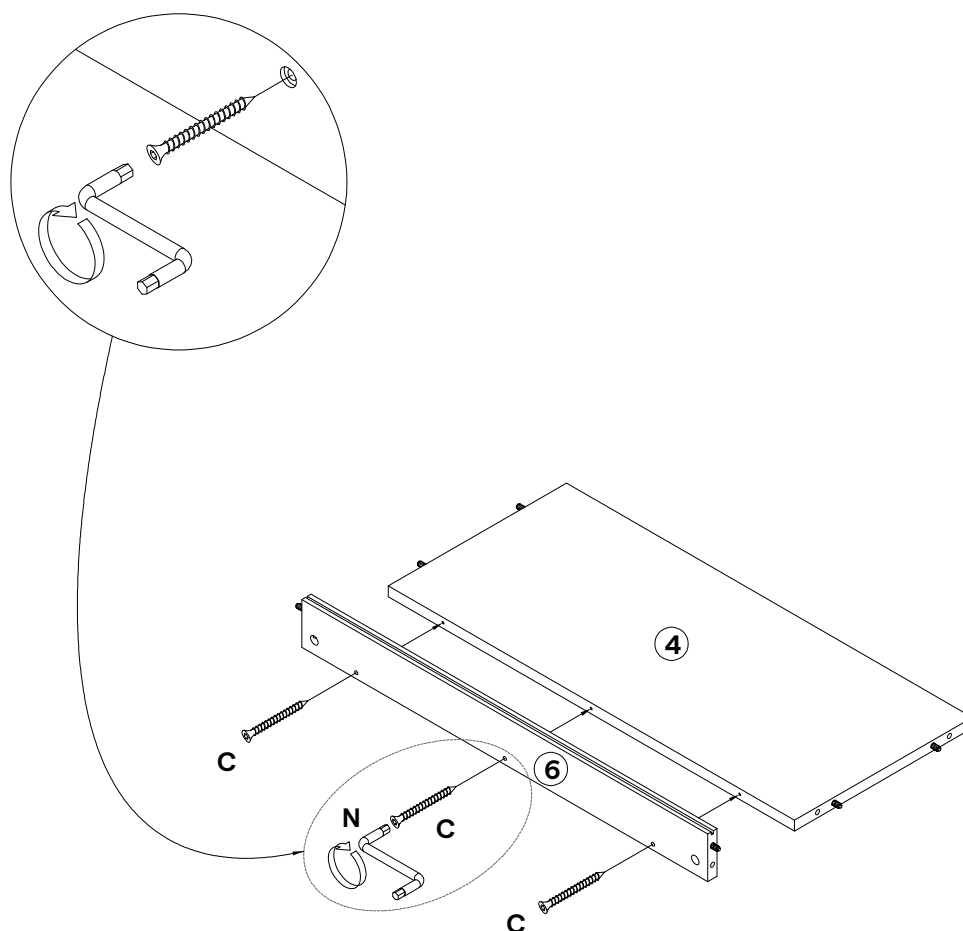

HARDWARE**G** Cam Lock 15/12 x8**L** Plastic Leg Stud x4**COMPONENTS****1** Left Side Panel x1**2** Right Side Panel x1**4** Bottom Panel x1**6** Support Panel x1**7** Rail Panel x1

3.1 Connect **Left and Right Side Panel (1 and 2)** to **Bottom Panel (4)**, **Support Panel (6)** and **Rail Panel (7)** by inserting **Cam Lock (G)** into the innermost pre-drilled holes.


3.2 Insert **Plastic Leg Stud (L)** into the bottom edge of **Left Side Panel (1)** and **Right Side Panel (2)**.

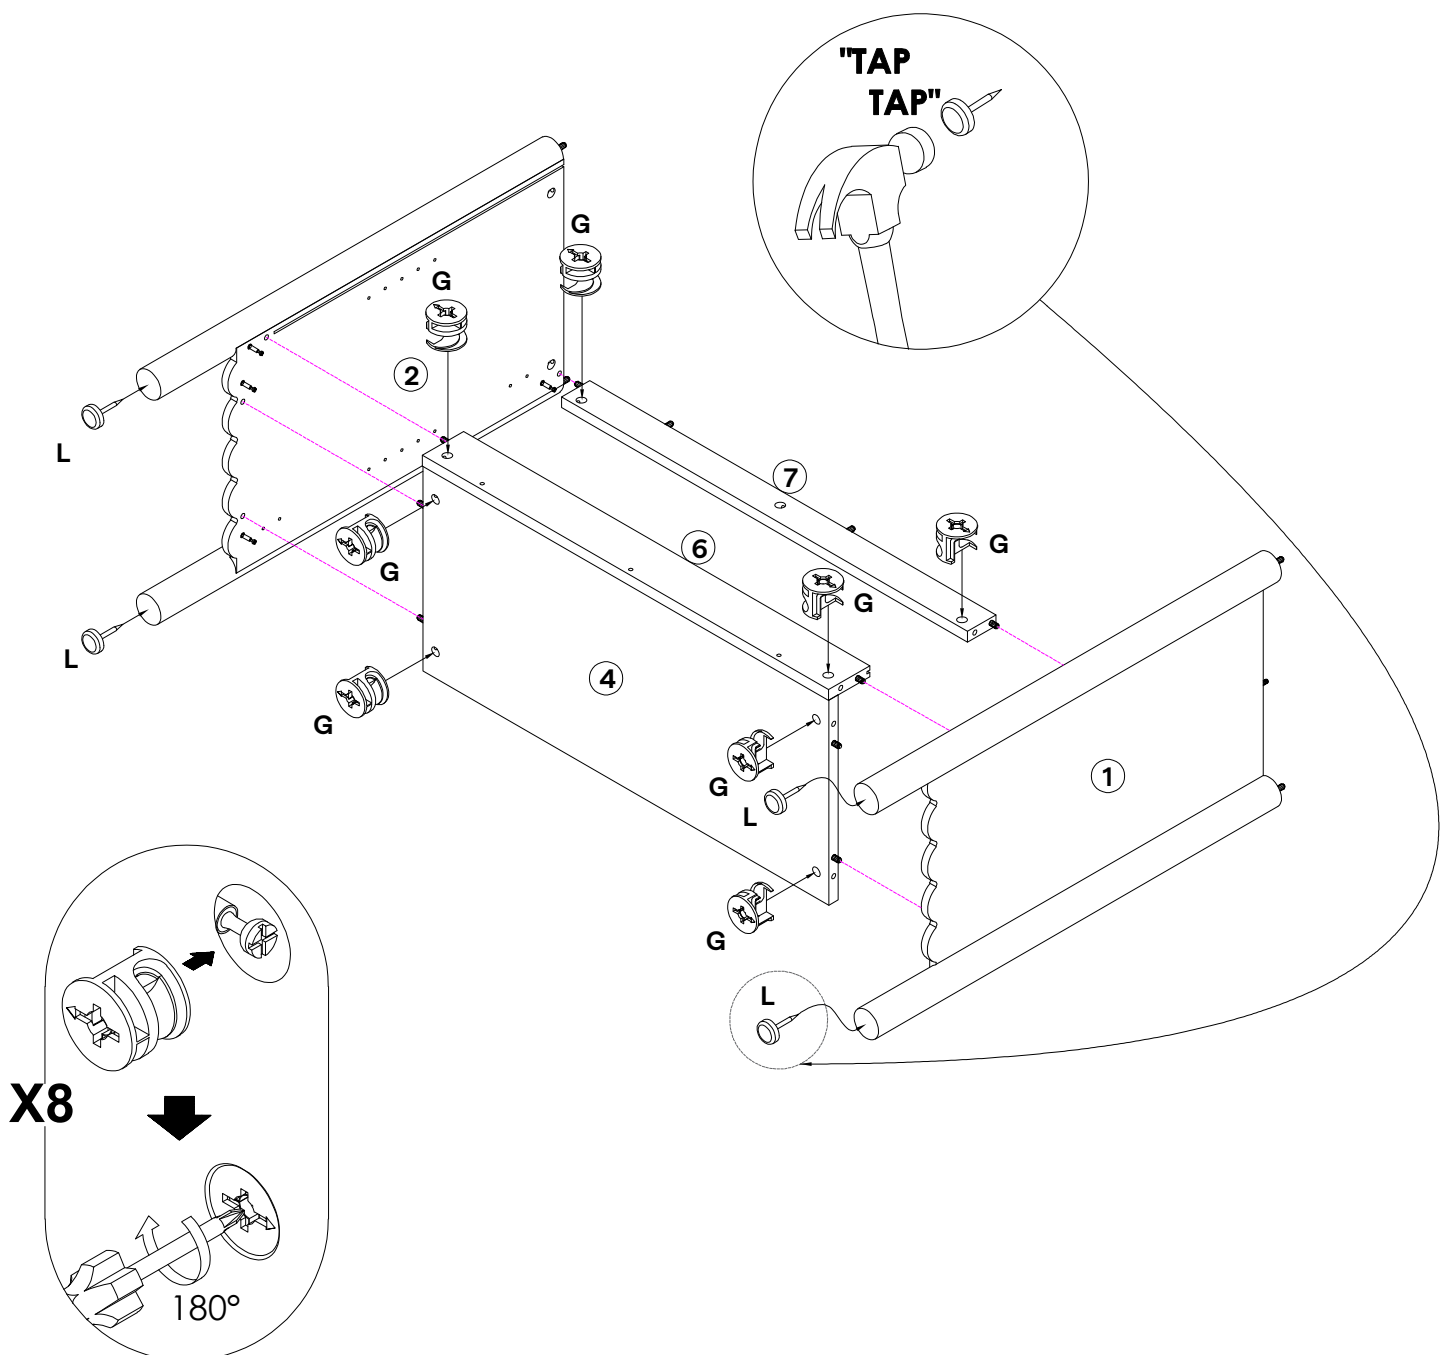

COMPONENTS

10 Back Panel x2

4.1 Slots the **Back Panel (10)** into the body.

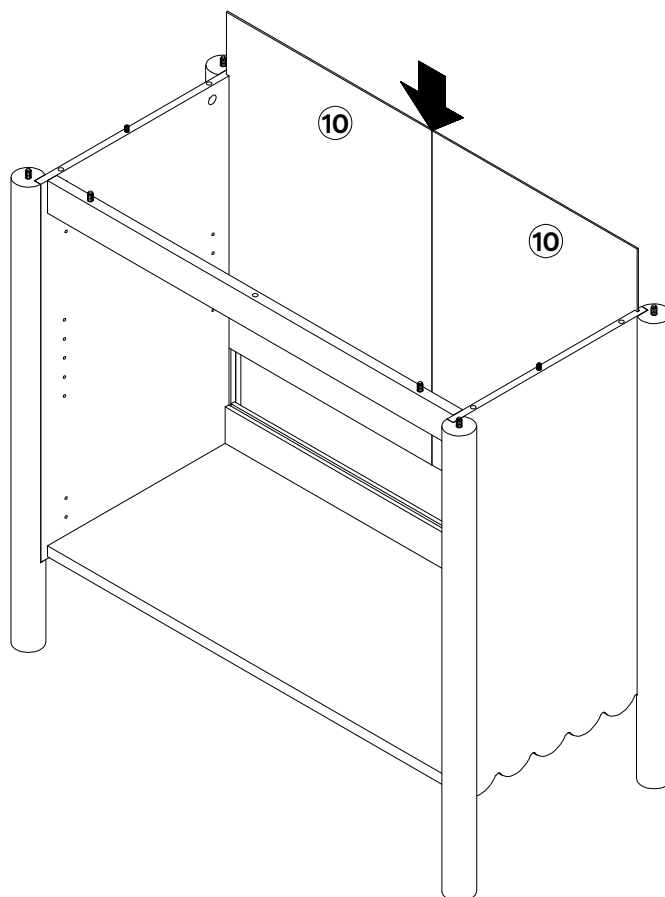

STEP 05


5.1 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the bottom side of **Top Panel (3)**.

HARDWARE

F Cam Bolt 20 x 5mm x5

COMPONENTS



3 Top Panel x1

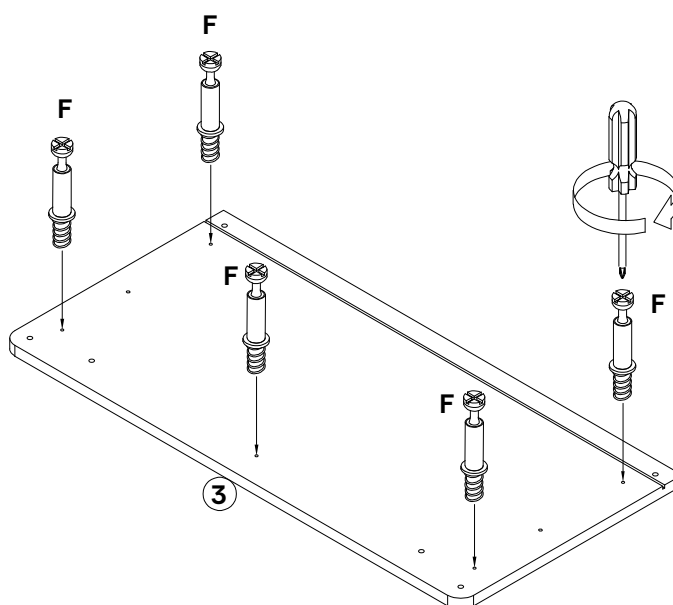

HARDWARE**G** Cam Lock 15/12 x1**H** Cam Lock 15/10 x4**COMPONENTS****1** Left Side Panel x1**2** Right Side Panel x1**3** Top Panel x1**7** Rail Panel x1

6.1 Connect **Top Panel (3)** to **Left Side Panel (1)**, **Right Side Panel (2)** and **Rail Panel (7)** by inserting **Cam Lock (H)** into the innermost pre-drilled holes on the right side of **Left Side Panel (1)** and left Side of **Right Side Panel (2)**.

6.2 Insert **Cam Lock (G)** into the innermost pre-drilled holes on the back side of **Rail Panel (7)**.

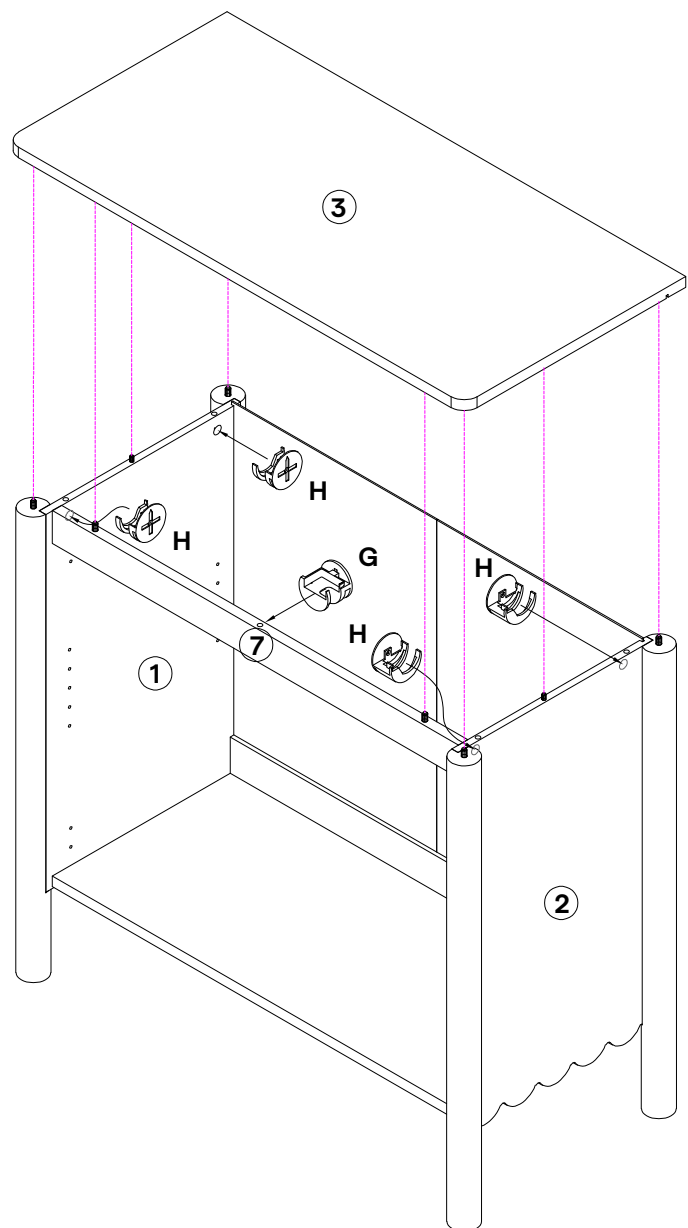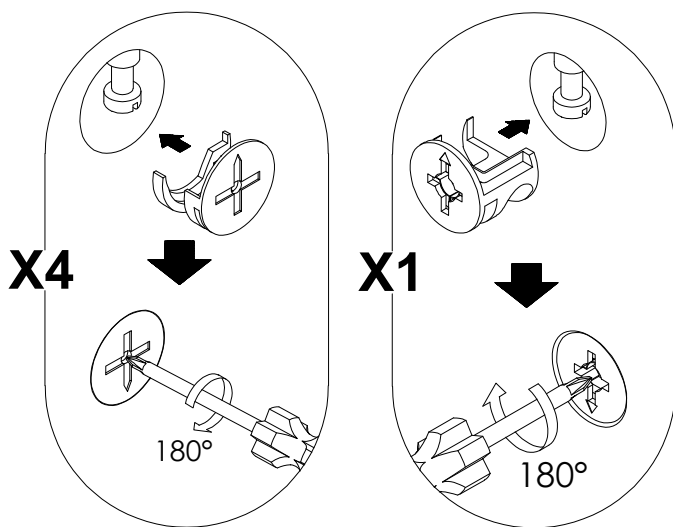



COMPONENTS

(M) Shelf Pin x4

COMPONENTS

(5) Adjustable Panel x1

7.1 Insert **Adjustable panel (5)** into the body by inserting **Shelf Pin (M)** to the innermost pre-drilled holes.

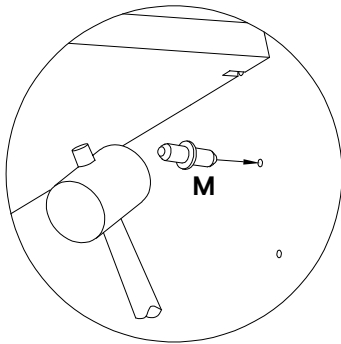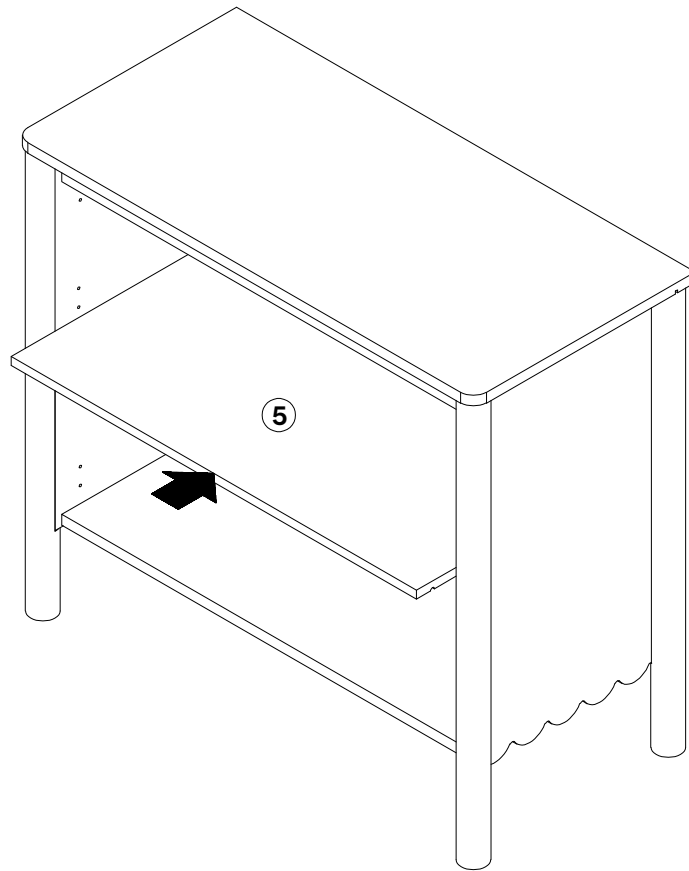

STEP 08

COMPONENTS

(A) Screw M3.5 x 15mm x8



(J) Hinges 7/8" x4

HARDWARE

(8) Left Door Panel x1

(9) Right Door Panel x1

8.1 Attach **Hinges (J)** to the back side of **Left and Right Door Panel (8 and 9)** and secure it with **Screw (A)**

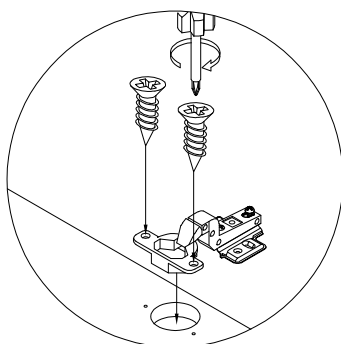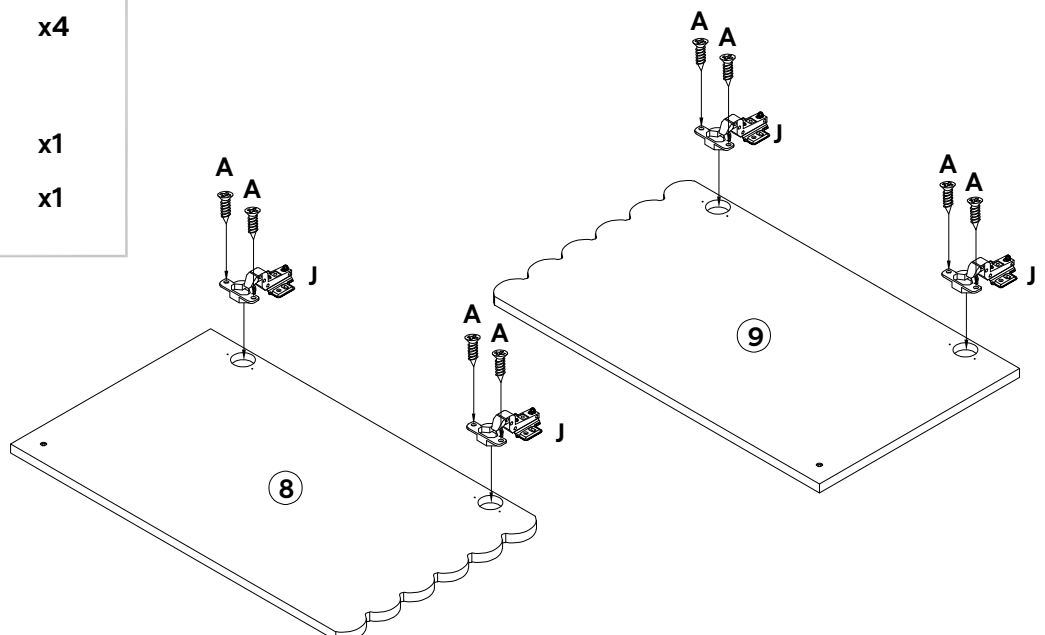

HARDWARE



B Screw M6 x 13mm	x8
K Handle	x2




COMPONENTS

1 Left Side Panel	x1
2 Right Side Panel	x1
8 Left Door Panel	x1
9 Right Door Panel	x1

9.1 Attach **Left Door Panel (8)** to **Left Side Panel (1)** and **Right Door Panel (9)** to **Right Side Panel (2)** and secure it with **Screw (B)**.



9.2 Attach **Handle (K)** on the right side of **Left Side Panel (8)** and the left side of **Right Side Panel (2)**

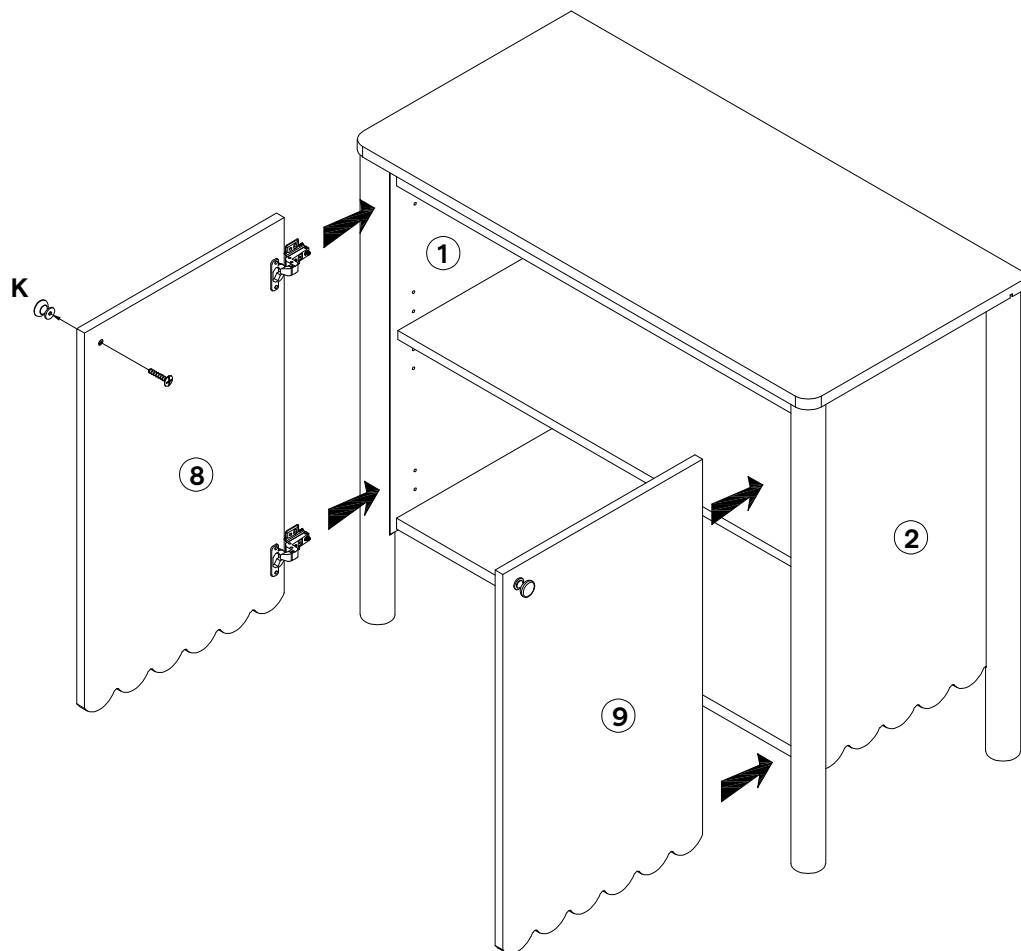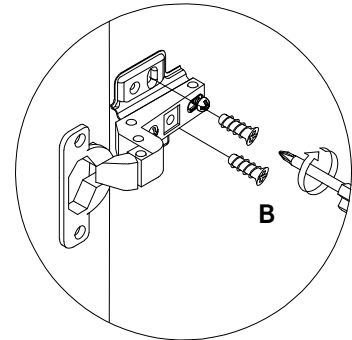

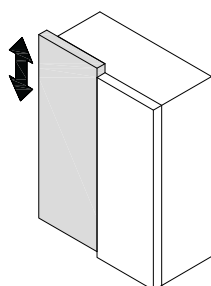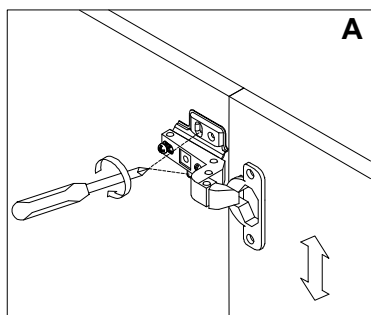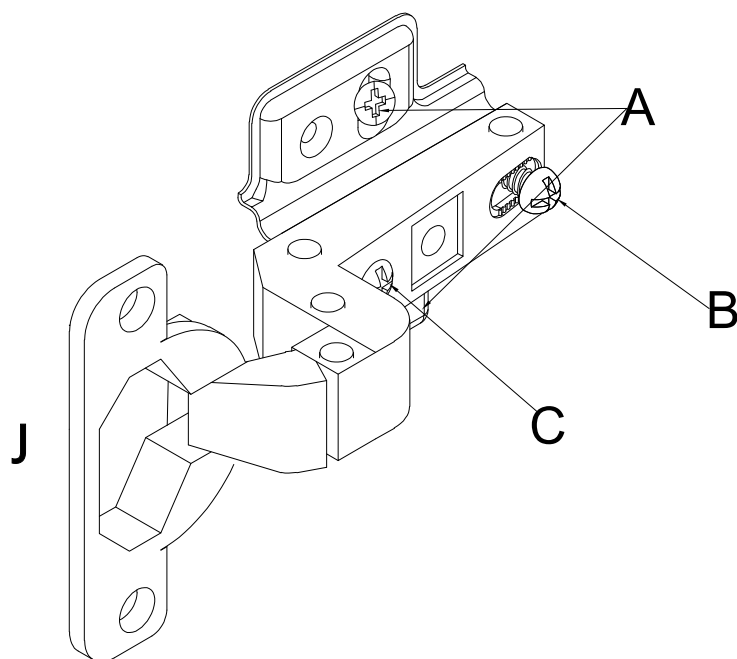



To Adjust the Vertical height.

Loosen the two screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

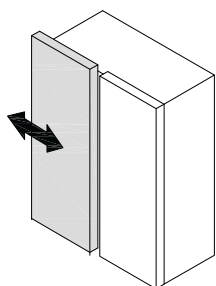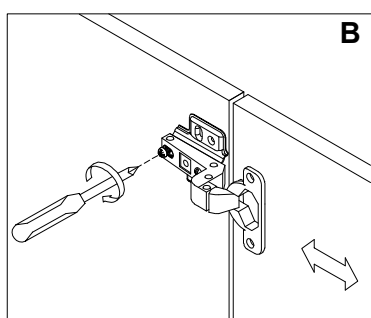

To Adjust depth.

Loosen Screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

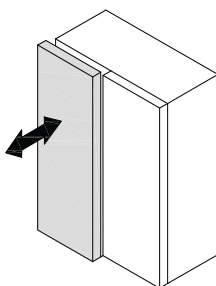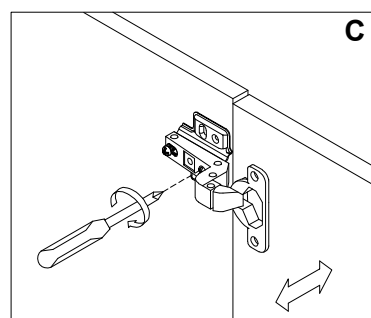

To adjust side ways.


Turn screw "C" on BOTH hinges on each door.

HARDWARE

- A** Screw M3.5 x 15mm x8
- P** Wedge x8


COMPONENTS

- 10** Back Panel x2

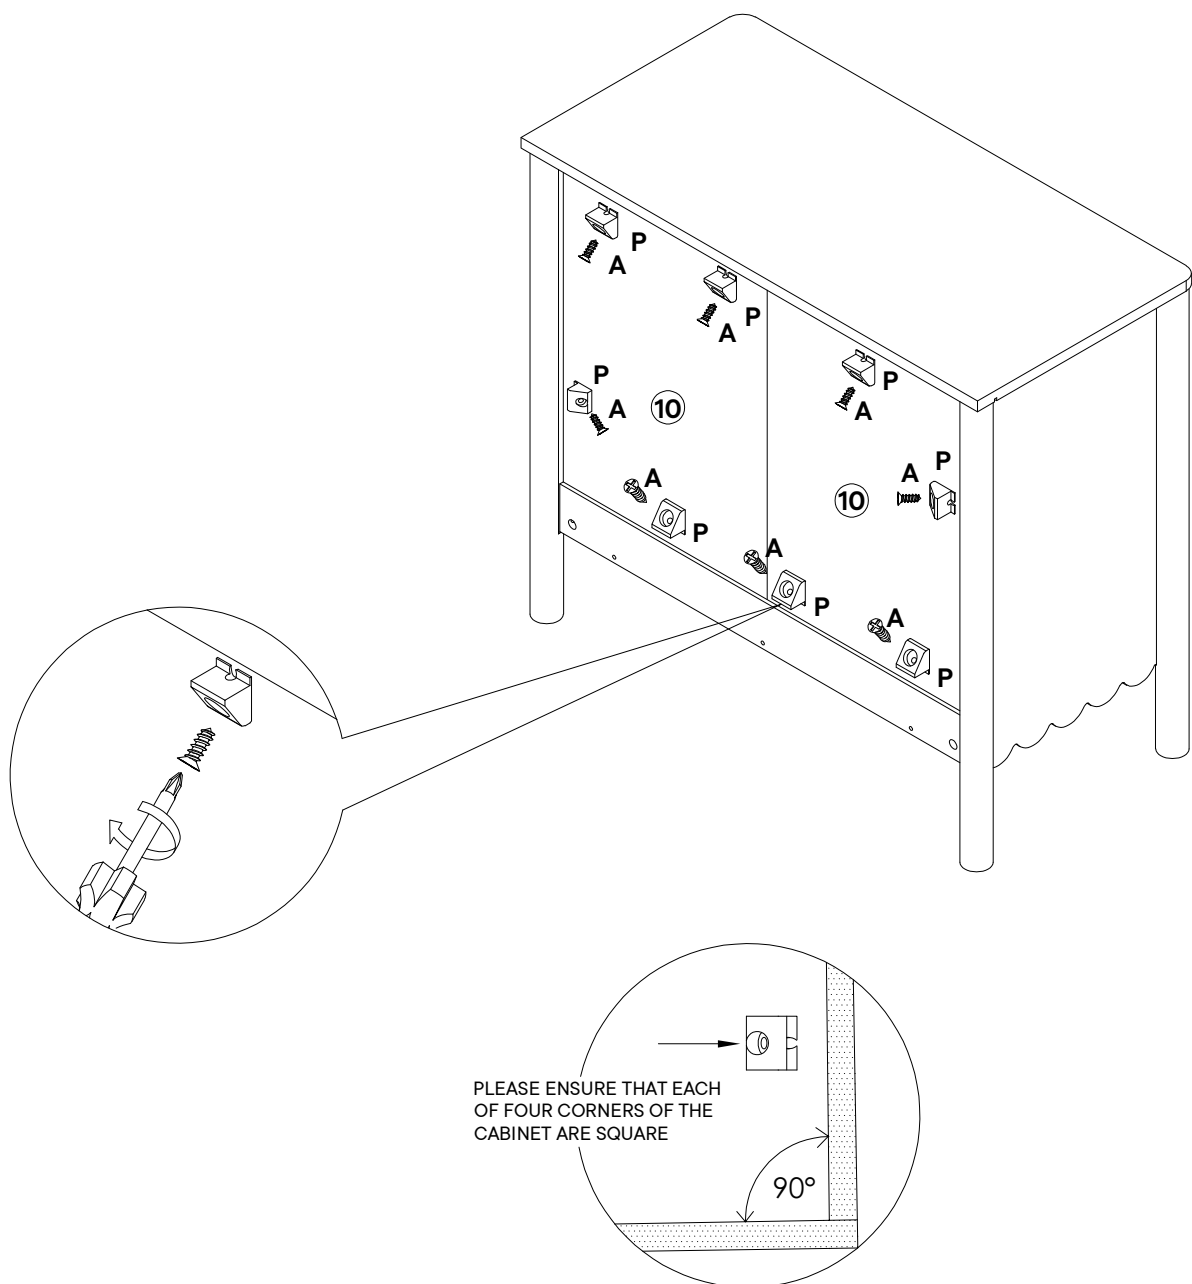10.1 Attach **Wedge (P)** to **Back Panel (10)** and secure it with **Screw (A)**

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

This tipping restraint is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

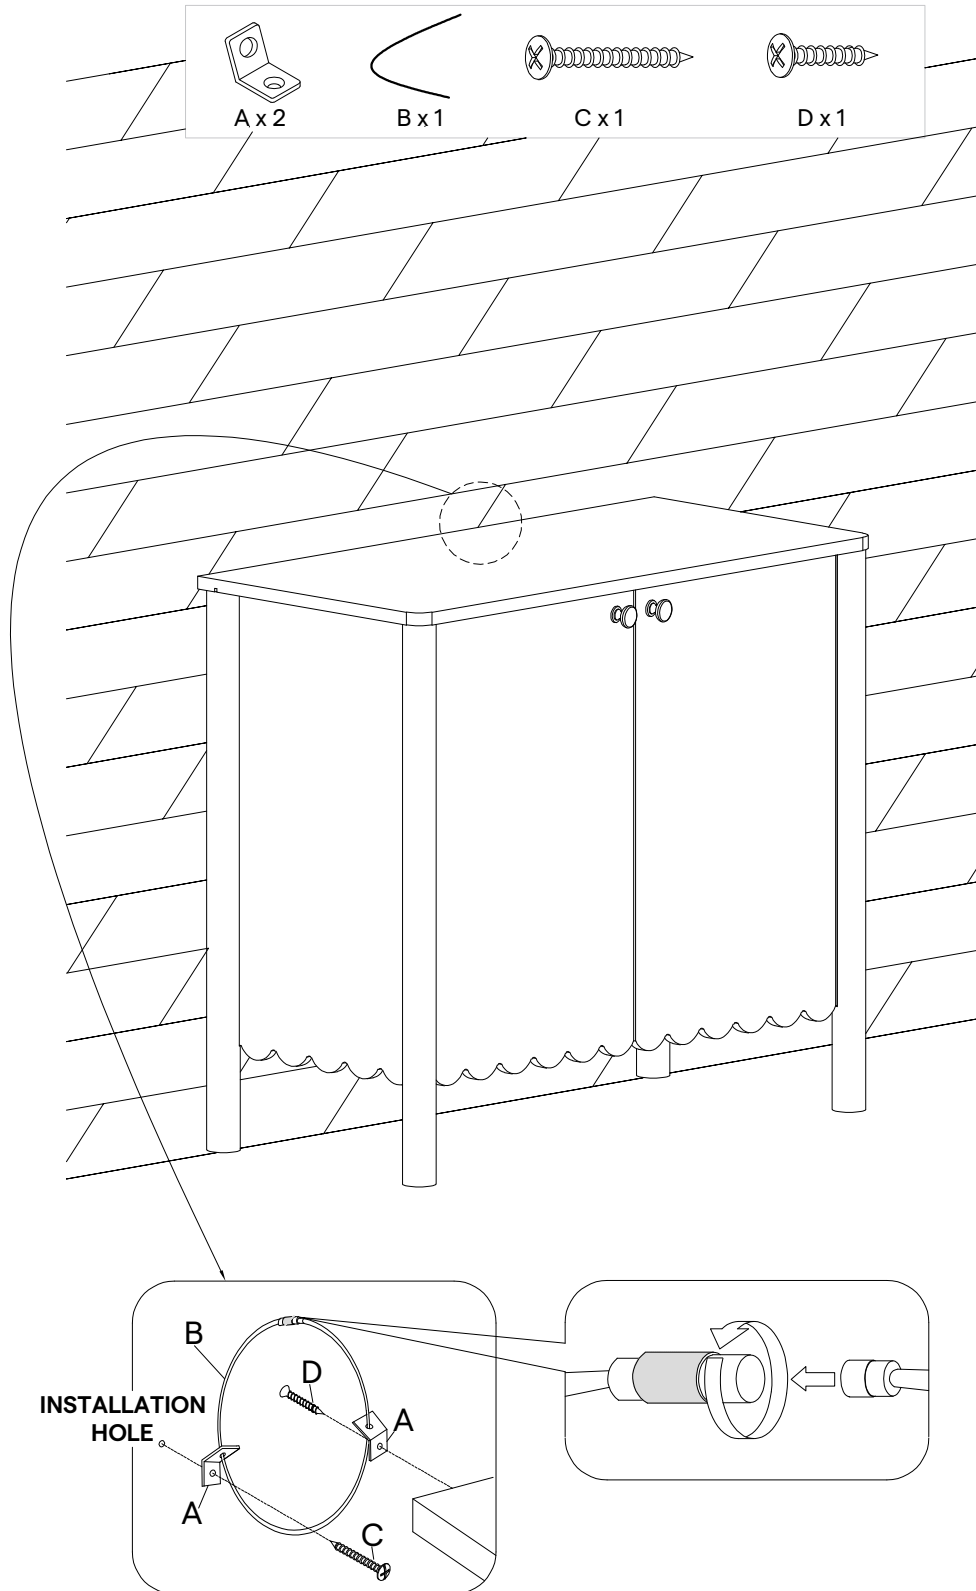

Installation Instructions :

1. Determine where the furniture is to be placed and find the center line of a wooden stud using a stud finder.
2. Drill a 1/8" pilot hole on the wooden stud approximately 3" below the height of unit top.
3. Attach one bracket (A) securely with screw (C) into the pilot hole on the wall.
4. Position the furniture in place and attach the other bracket (A) with screw (D) to the back edge of unit top in line with the bracket (A) on the wall.
5. Put the male end of the steel cable (B) through each bracket. Securely connect both ends together by turning the female connector clockwise.


Great job!

Max 90Kgs/200Lbs

Your sideboard assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

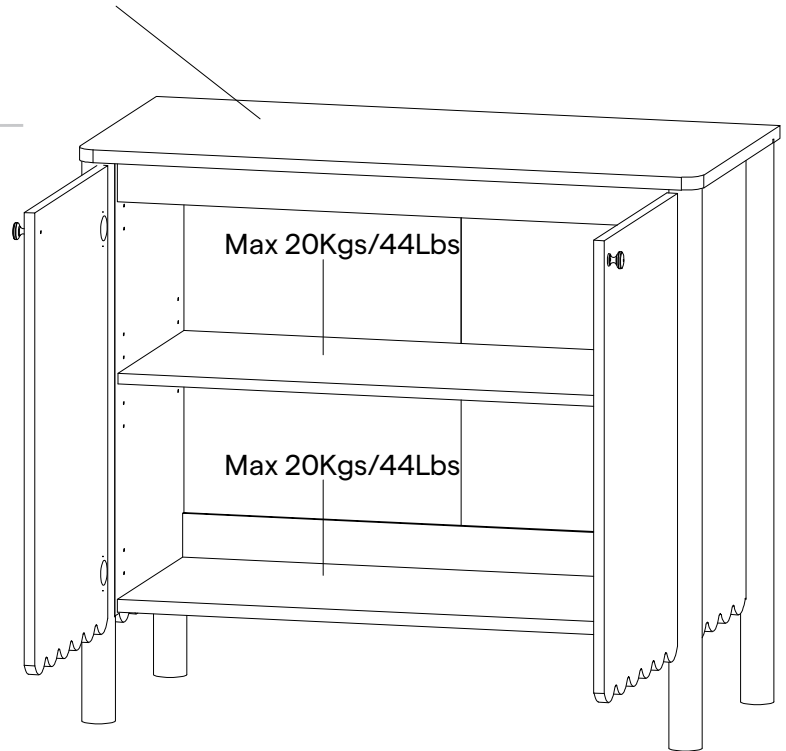

CONNECT WITH US!

Tag us [@modway.furniture](#) and [#MyModwayHome](#) for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com