


## ASSEMBLY INSTRUCTIONS

# EEI-7319

VO.11.02.25

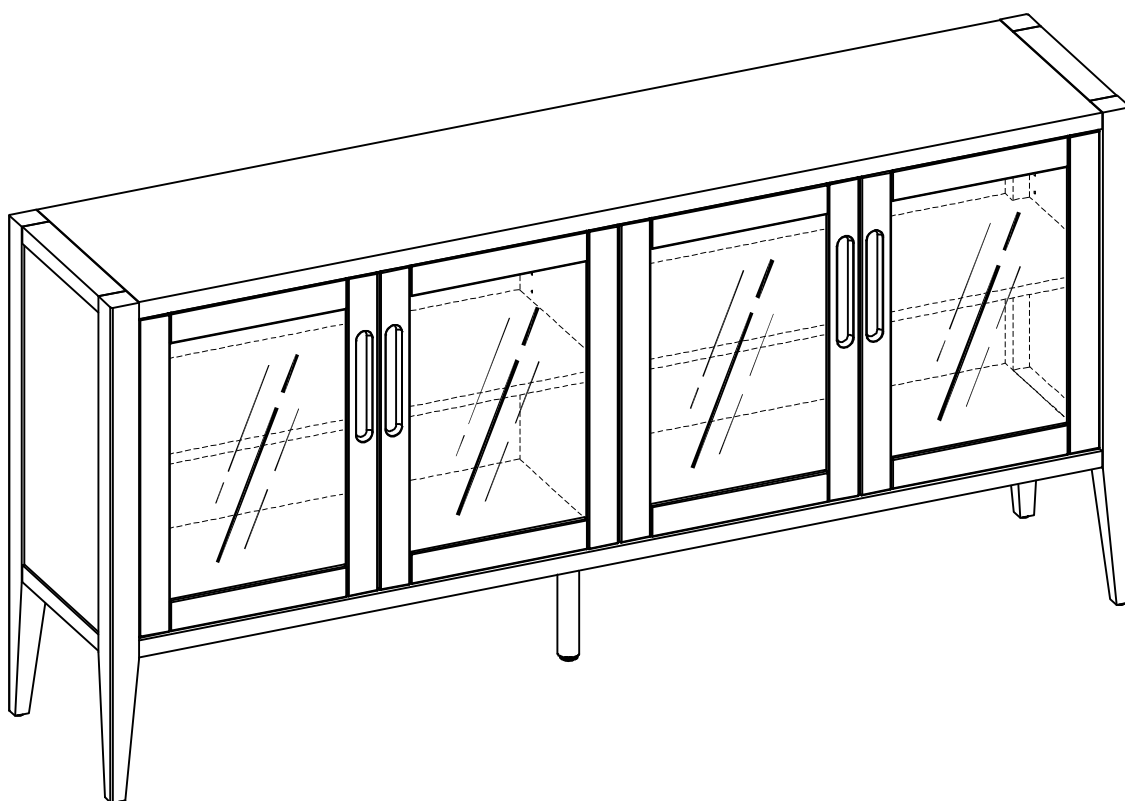

**Questions? Contact us!**

609.256.9000 • [cs@modway.com](mailto:cs@modway.com)

[www.modway.com](http://www.modway.com)

**\*modway**

# Let's get started!

\*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

**Only use hand tools to assemble this item.** Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.



Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

## Furniture components:

|    |                   |    |
|----|-------------------|----|
| 1  | Top panel         | x1 |
| 2  | Bottom panel      | x1 |
| 3  | Right side panel  | x1 |
| 4  | Left side panel   | x1 |
| 5  | Apron panel       | x1 |
| 6  | Middle panel      | x1 |
| 7  | Front apron       | x1 |
| 8  | Right shelf panel | x1 |
| 9  | Left shelf panel  | x1 |
| 10 | Middle support    | x1 |
| 11 | Top back panel    | x1 |
| 12 | Bottom back panel | x1 |
| 13 | Right door panel  | x2 |
| 14 | Left door panel   | x2 |
| 15 | Hole back cover   | x2 |

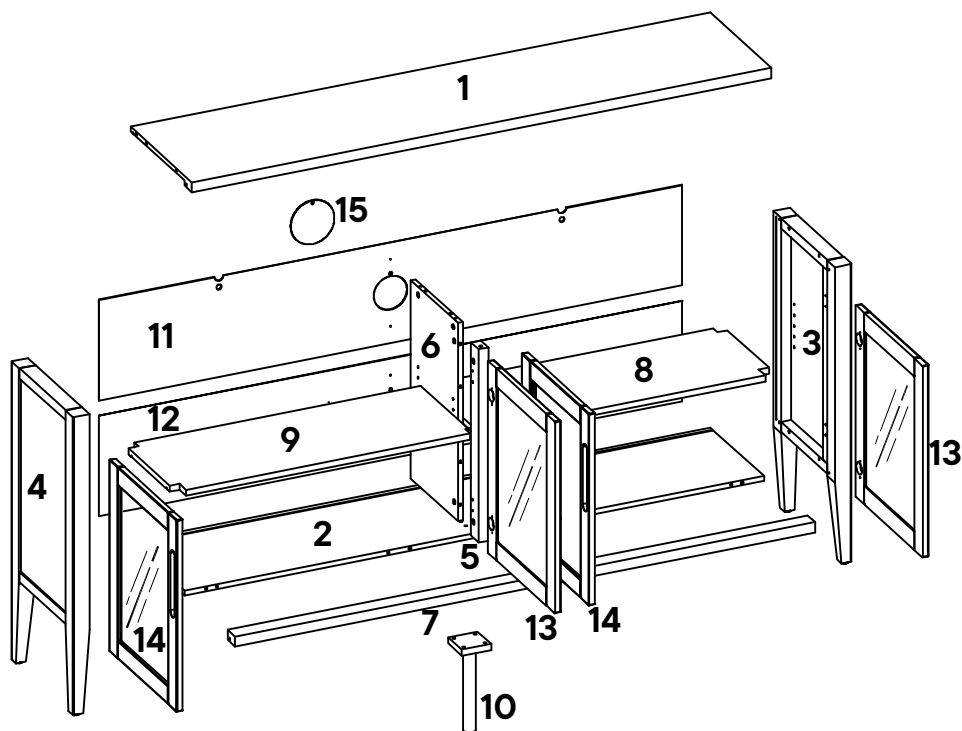

**Missing parts or hardware? Need assistance?**

Contact us before returning your item. We're here to help!  
609.256.9000 • [cs@modway.com](mailto:cs@modway.com)

## Provided hardware:

|    |                                                                                     |                      |     |
|----|-------------------------------------------------------------------------------------|----------------------|-----|
| A. |    | Cam bolt Ø6 x 32 mm  | x14 |
| B. |    | Cam lock Ø15 x 12 mm | x16 |
| C. |    | Cover cap            | x4  |
| D. |    | Dowel Ø7.8 x 32 mm   | x20 |
| E. |    | Hole plug            | x2  |
| F. |    | Connecting bolt      | x2  |
| G. |    | Connecting nut       | x2  |
| H. |    | Side hinge           | x4  |
| I. |    | Middle hinge         | x4  |
| J. |    | Screw Ø7 x 13 mm     | x16 |
| K. |   | Pin shelf            | x8  |
| L. |  | Screw Ø4 x 12 mm     | x4  |
| M. |  | Screw Ø6 x 19 mm     | x14 |
| N. |  | Wedge                | x14 |
| O. |  | Adjustable leveller  | x4  |
| P. |  | Stoper               | x4  |
| Q. |  | Rear clamp           | x1  |
| R. |  | Wall fixing          | x2  |
| S. |  | Screw Ø6 x 12 mm     | x2  |
| T. |  | Metal support        | x1  |

|    |                                                                                    |                    |    |
|----|------------------------------------------------------------------------------------|--------------------|----|
| U. |   | Screw Ø12 x 25 mm  | x5 |
| V. |  | Assembly screw     | x2 |
| W. |   | Bolt M6 x 25 mm    | x4 |
| X. |   | Washer M6 x 16 mm  | x4 |
| Y. |   | Bolt JF Ø6 x 15 mm | x2 |
| Z. |   | Nut                | x2 |

## What you need:



## You may also need:

+ Power Drill  
 + Level  
 + Mallet

**Wait!**

**Missing parts or hardware? Need assistance?**

Contact us before returning your item. We're here to help!

609.256.9000 • [cs@modway.com](mailto:cs@modway.com)



# Step 1

## COMPONENTS

|   |              |    |
|---|--------------|----|
| 1 | Top panel    | x1 |
| 5 | Apron panel  | x1 |
| 6 | Middle panel | x1 |

## HARDWARE

|   |                    |     |
|---|--------------------|-----|
| A | Cambolt Ø6 x 32 mm | x2  |
| D | Dowel Ø7.8 x 32 mm | x12 |
| F | Connecting bolt    | x2  |
| G | Connecting nut     | x2  |
| P | Stoper             | x4  |

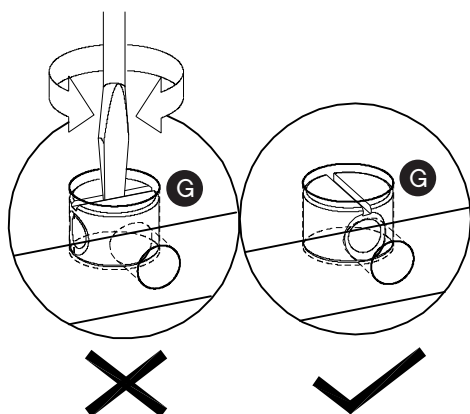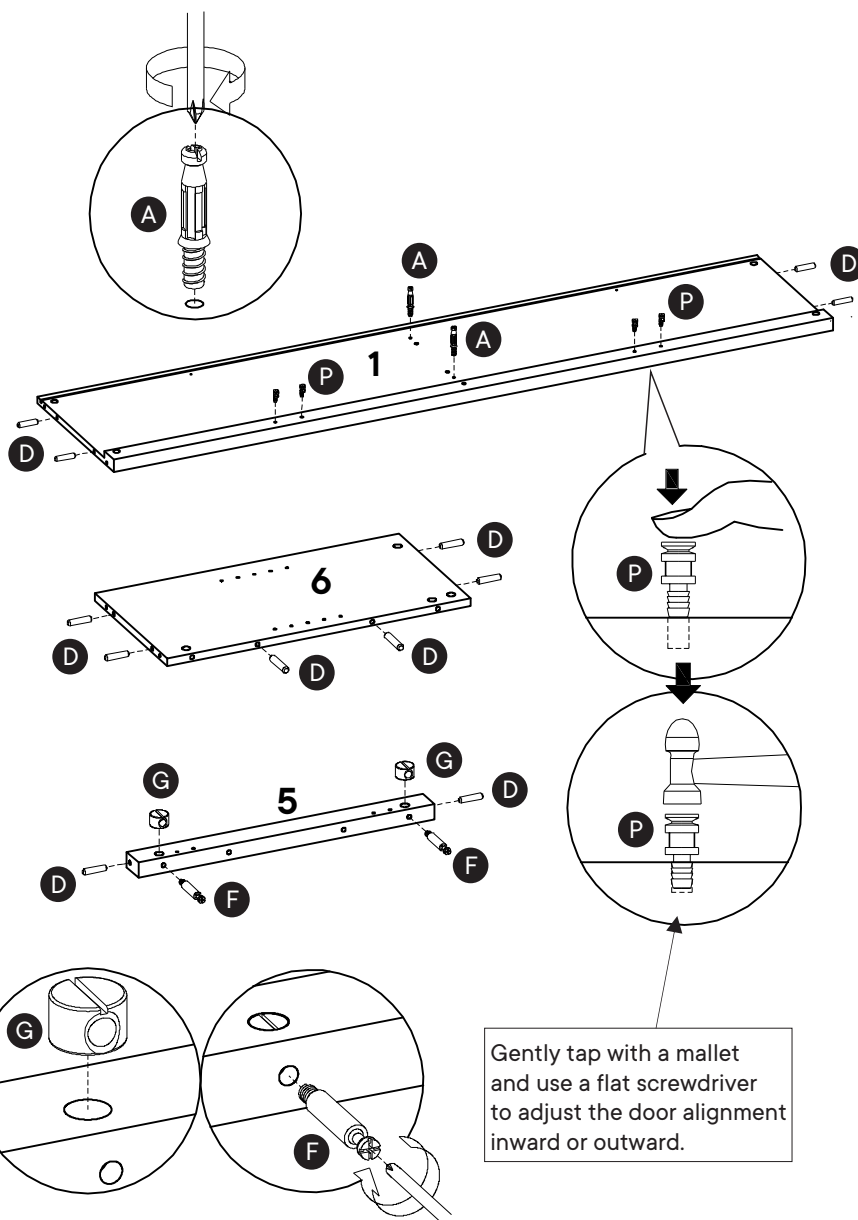


# Step 2

## COMPONENTS

|   |              |    |
|---|--------------|----|
| 5 | Apron panel  | x1 |
| 6 | Middle panel | x1 |

## HARDWARE

|   |                     |    |
|---|---------------------|----|
| B | Camlock Ø15 x 12 mm | x2 |
| C | Cover cap           | x2 |
| E | Hole plug           | x2 |

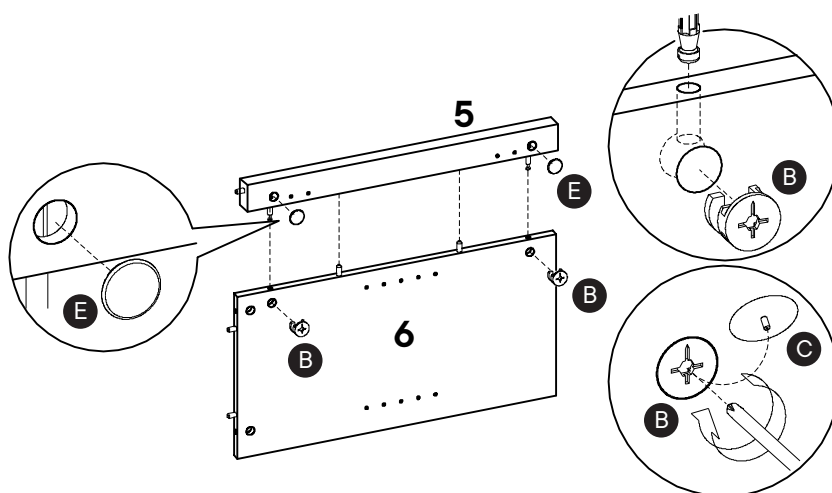



## Step 3

### COMPONENTS

- |          |              |    |
|----------|--------------|----|
| <b>1</b> | Top panel    | x1 |
| <b>6</b> | Middle panel | x1 |

### HARDWARE

- |          |                     |    |
|----------|---------------------|----|
| <b>B</b> | Camlock Ø15 x 12 mm | x2 |
| <b>C</b> | Cover cap           | x2 |

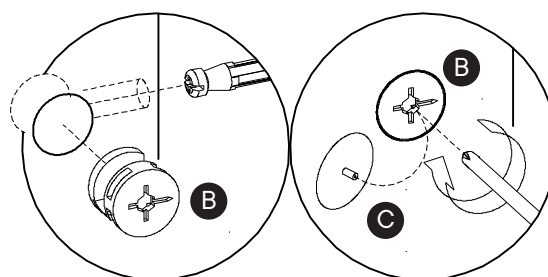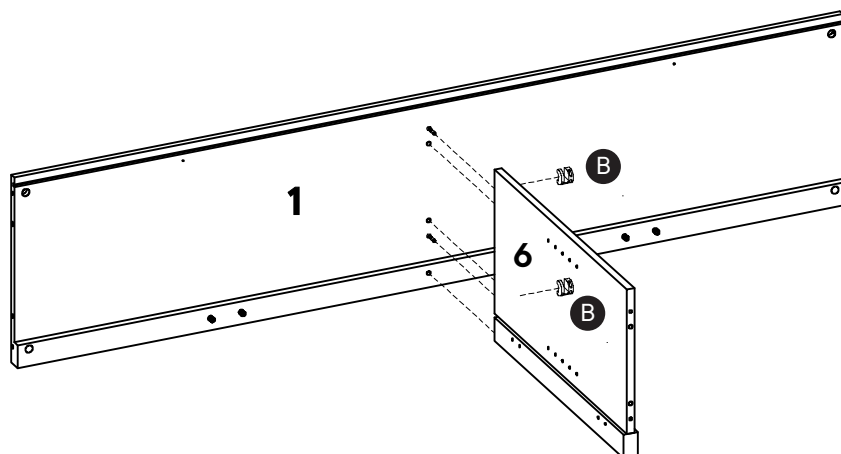


## Step 4

### COMPONENTS

- |          |              |    |
|----------|--------------|----|
| <b>2</b> | Bottom panel | x1 |
| <b>7</b> | Front apron  | x1 |

### HARDWARE

- |          |                    |    |
|----------|--------------------|----|
| <b>A</b> | Cambolt Ø6 x 32 mm | x4 |
| <b>D</b> | Dowel Ø7.8 x 32 mm | x8 |
| <b>T</b> | Metal support      | x1 |
| <b>U</b> | Screw Ø12 x 25 mm  | x5 |

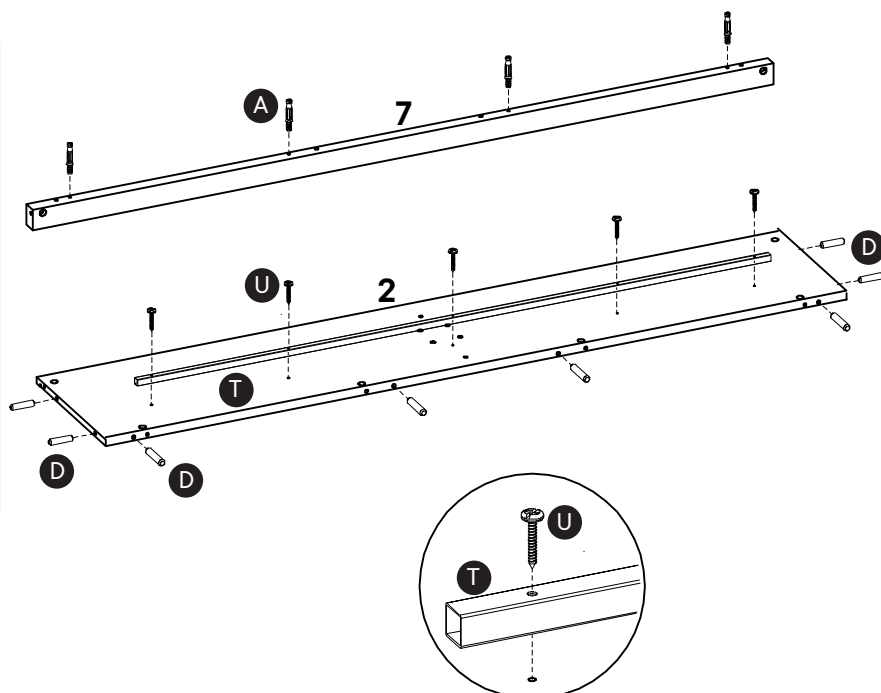


## Step 5

### COMPONENTS

- |          |              |    |
|----------|--------------|----|
| <b>2</b> | Bottom panel | x1 |
| <b>7</b> | Front apron  | x1 |

### HARDWARE

- |          |                     |    |
|----------|---------------------|----|
| <b>B</b> | Camlock Ø15 x 12 mm | x4 |
|----------|---------------------|----|

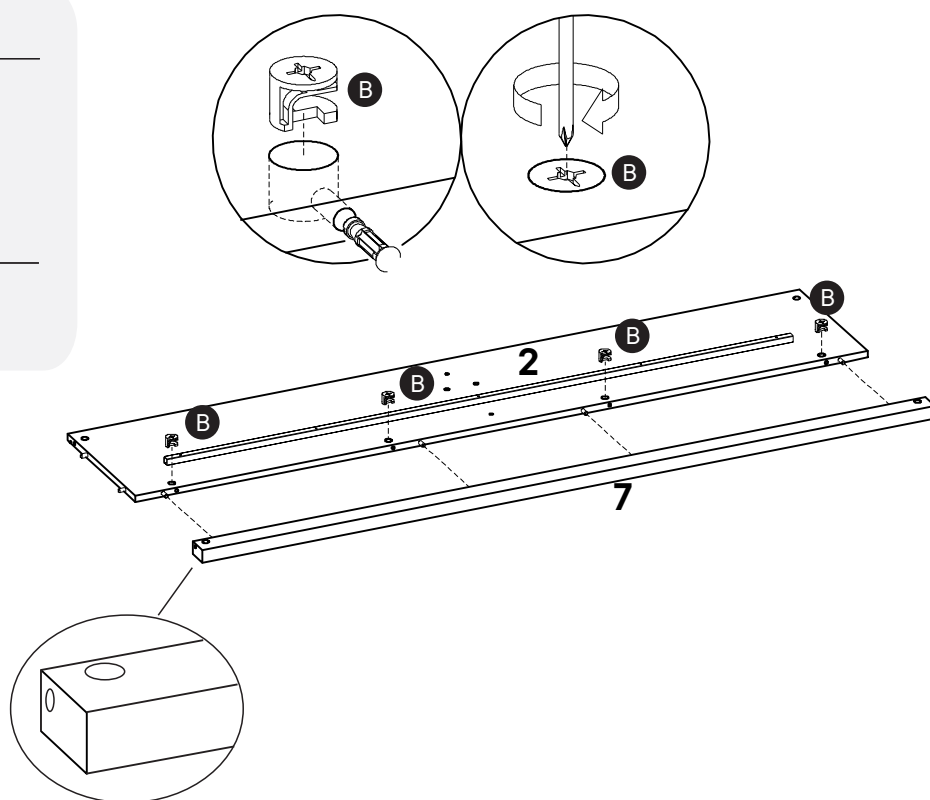


## Step 6

### COMPONENTS

- |          |              |    |
|----------|--------------|----|
| <b>2</b> | Bottom panel | x1 |
|----------|--------------|----|

### HARDWARE

- |          |                |    |
|----------|----------------|----|
| <b>V</b> | Assembly screw | x2 |
|----------|----------------|----|

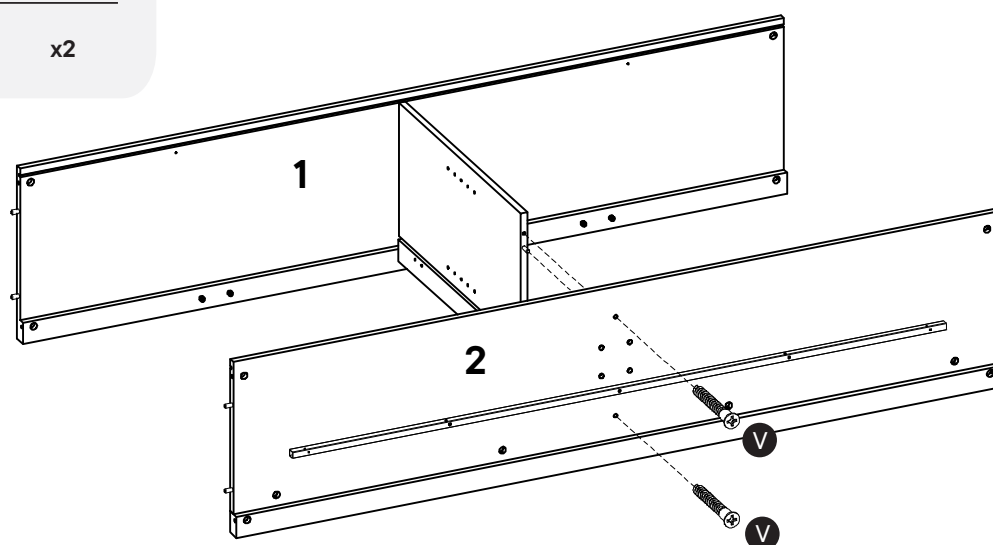

## Step 7



### COMPONENTS

③ Right side panel x1

④ Left side panel x1

### HARDWARE

Ⓐ Cambolt Ø6 x 32 mm x8

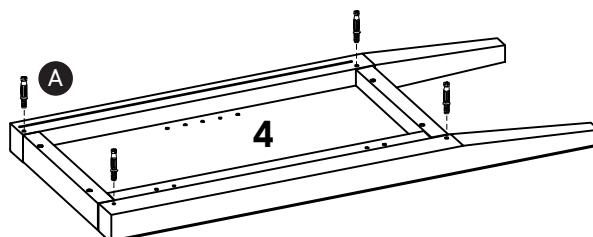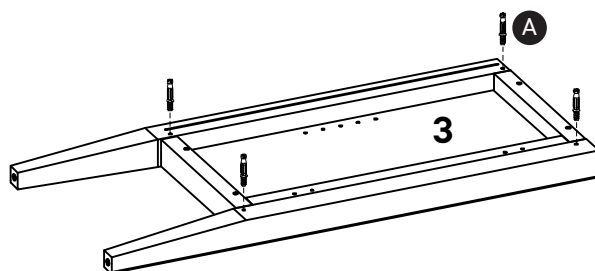



## Step 8

### COMPONENTS

④ Left side panel x1

### HARDWARE

Ⓑ Camlock Ø15 x 12 mm x4

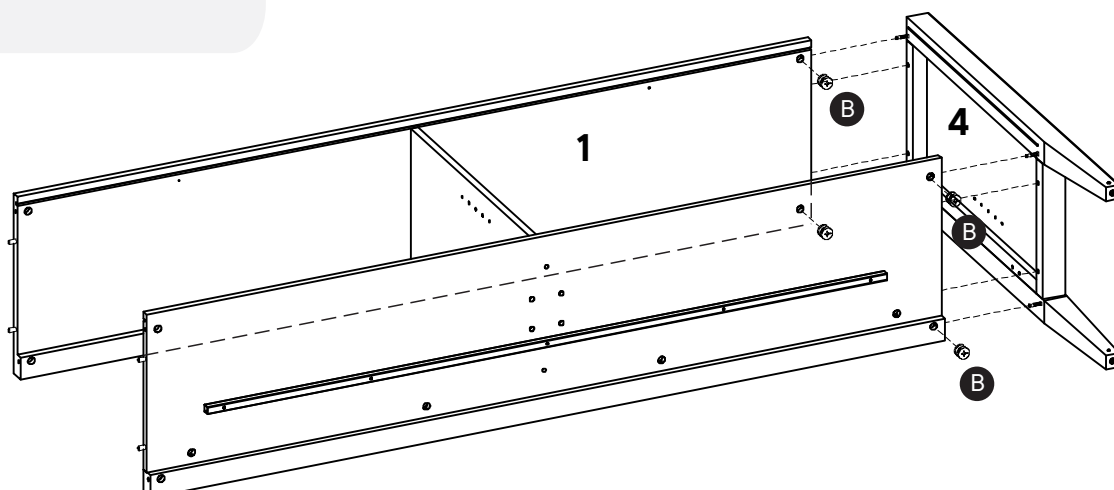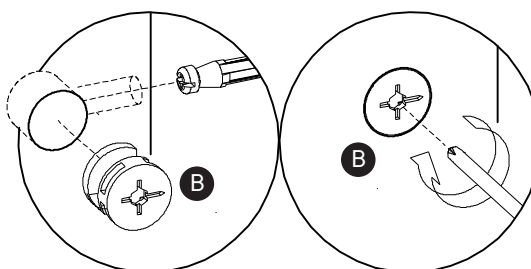


## Step 9

### COMPONENTS

|    |                   |    |
|----|-------------------|----|
| 11 | Top back panel    | x1 |
| 12 | Bottom back panel | x1 |
| 15 | Hole back cover   | x2 |

### HARDWARE

|   |                    |    |
|---|--------------------|----|
| Y | Bolt JF Ø6 x 15 mm | x2 |
| Z | Nut                | x2 |

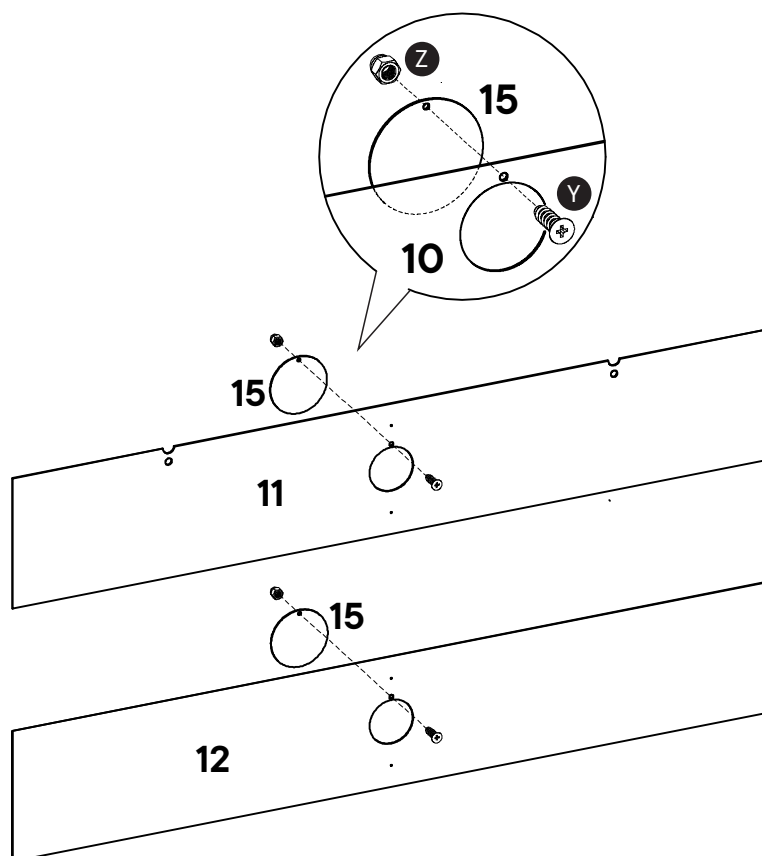


## Step 10

### COMPONENTS

|    |                   |    |
|----|-------------------|----|
| 11 | Top back panel    | x1 |
| 12 | Bottom back panel | x1 |

### HARDWARE

|   |            |    |
|---|------------|----|
| Q | Rear clamp | x1 |
|---|------------|----|

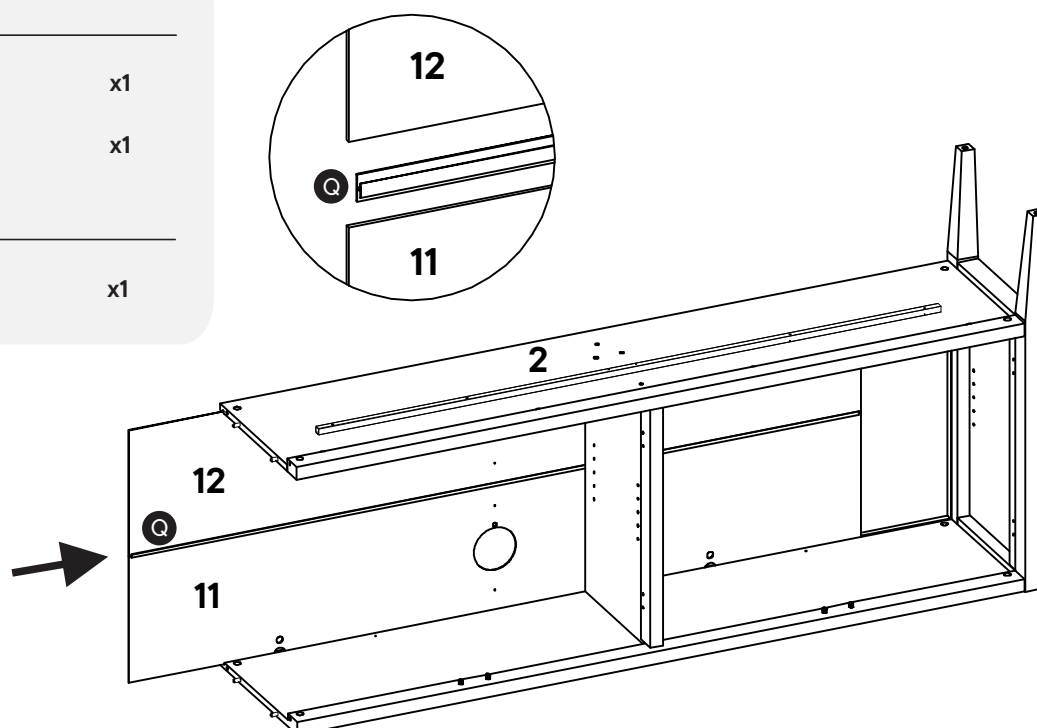


## Step 11

### COMPONENTS

3 Right side panel x1

### HARDWARE

B Camlock Ø15 mm x4

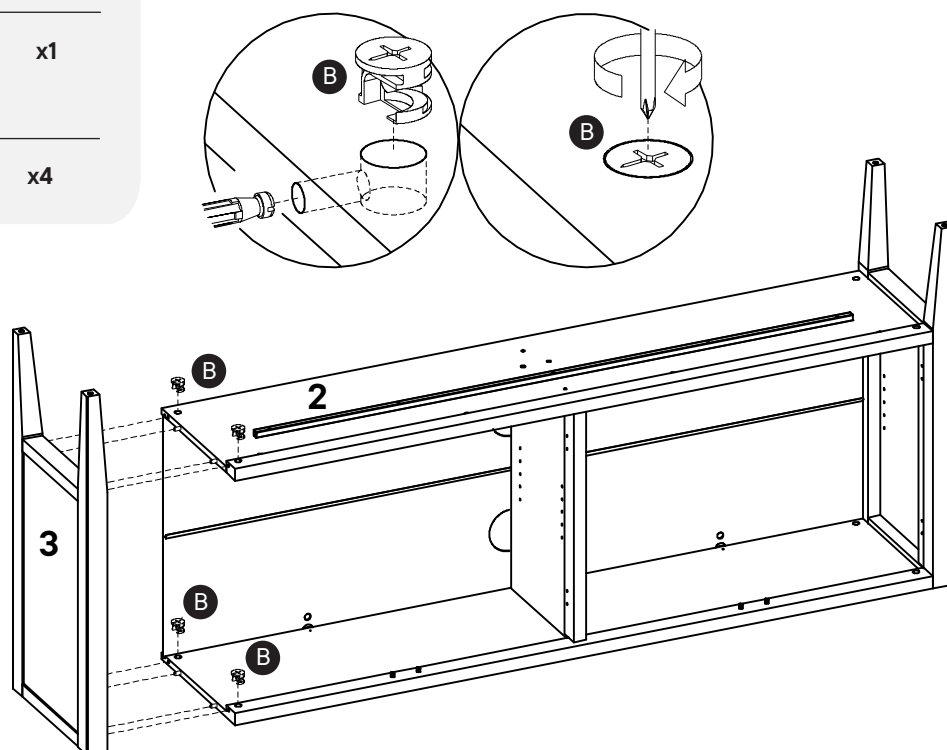

## Step 12

### COMPONENTS


10 Middle bottom support x1

### HARDWARE

O Adjustable leveller x4

W Bolt M6 x 25 mm x4



X Washer M6 x 16 mm x4

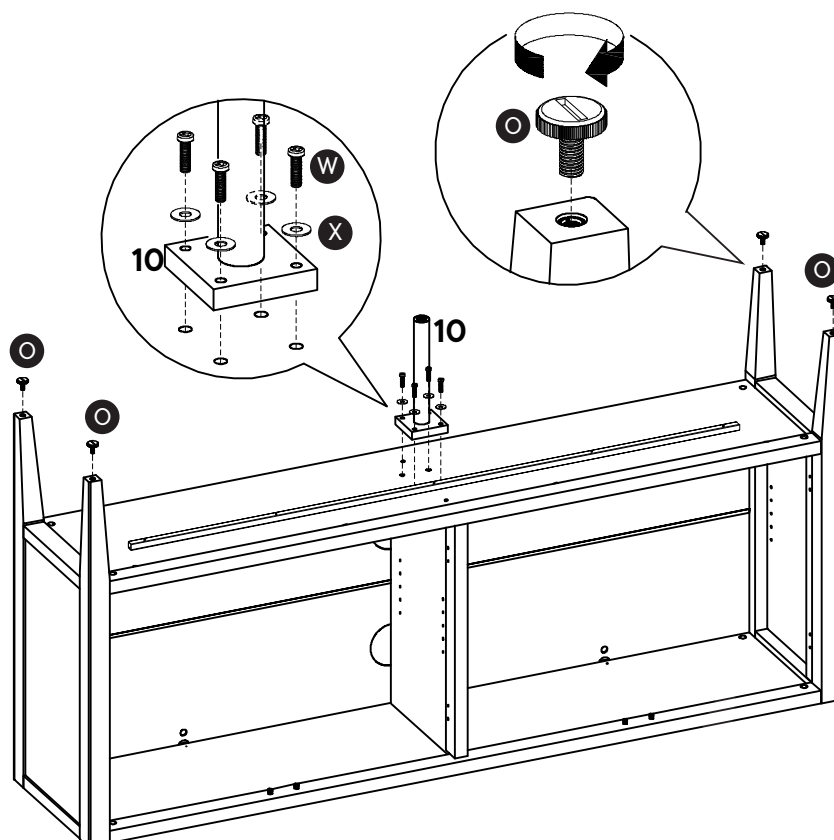

## Step 13

### HARDWARE

|          |                  |     |
|----------|------------------|-----|
| <b>L</b> | Screw Ø4 x 12 mm | x4  |
| <b>M</b> | Screw Ø6 x 19 mm | x14 |
| <b>N</b> | Wedge            | x14 |

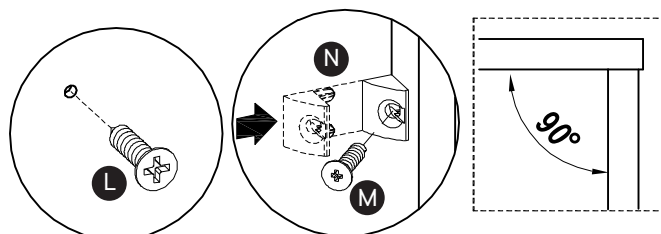
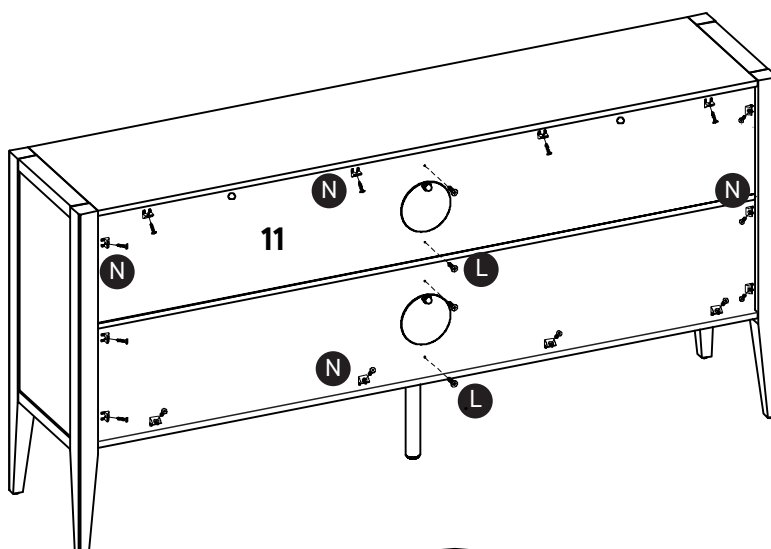


## Step 14

### HARDWARE

|          |                  |    |
|----------|------------------|----|
| <b>R</b> | Wall fixing      | x2 |
| <b>S</b> | Screw Ø6 x 12 mm | x2 |

From back to inset

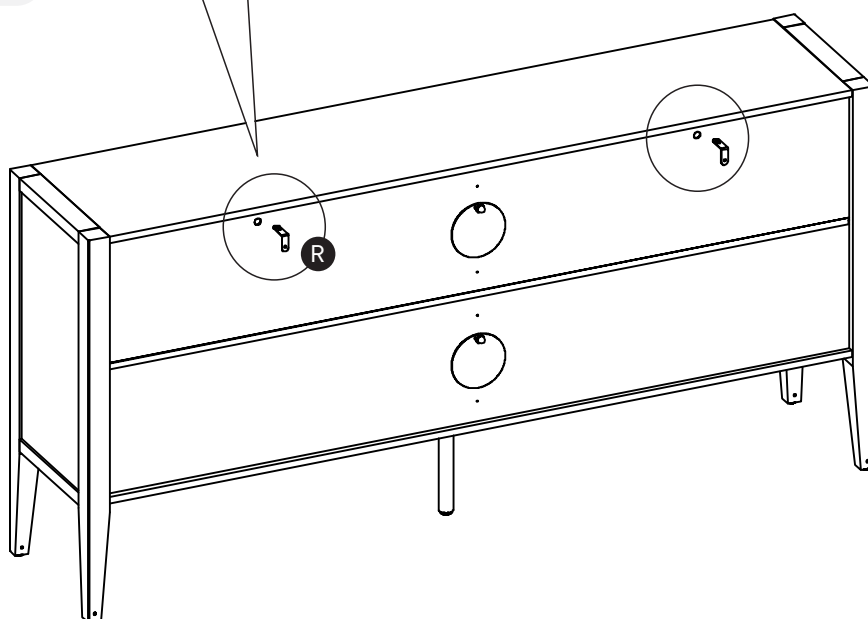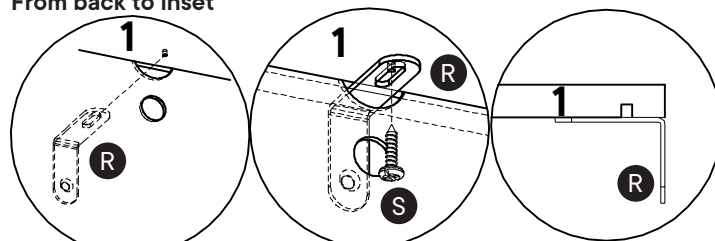

## Step 15


### COMPONENTS

8 Right side panel x1

9 Left side panel x1

### HARDWARE

K Shelf pin x8

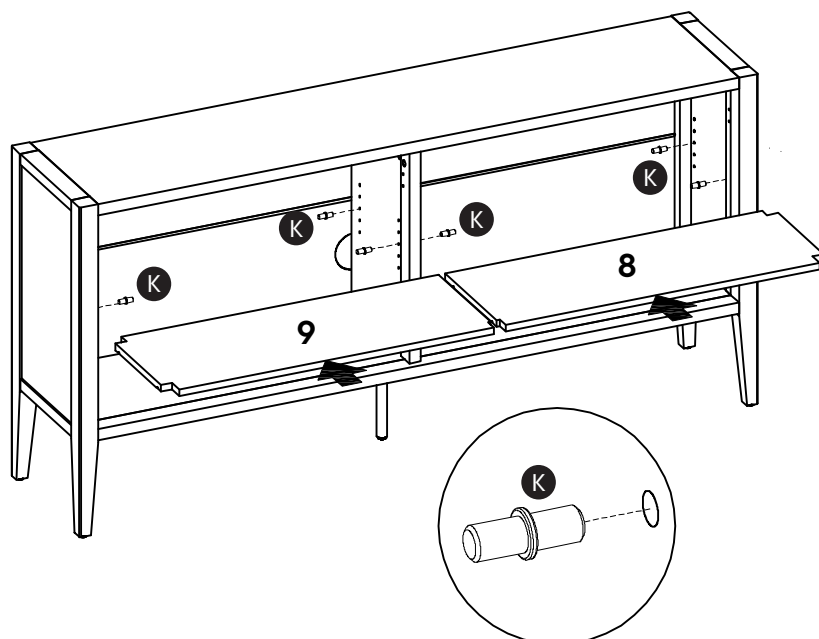

## Step 16

### COMPONENTS

13 Right door panel (a/b) x2




14 Left door panel (a/b) x2

### HARDWARE

H Side hinge x4

I Middle hinge x4





J Screw Ø7 x 13 mm x16

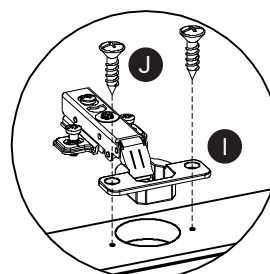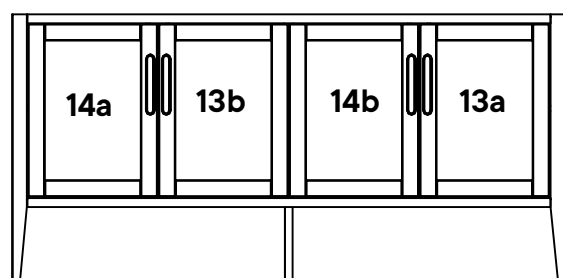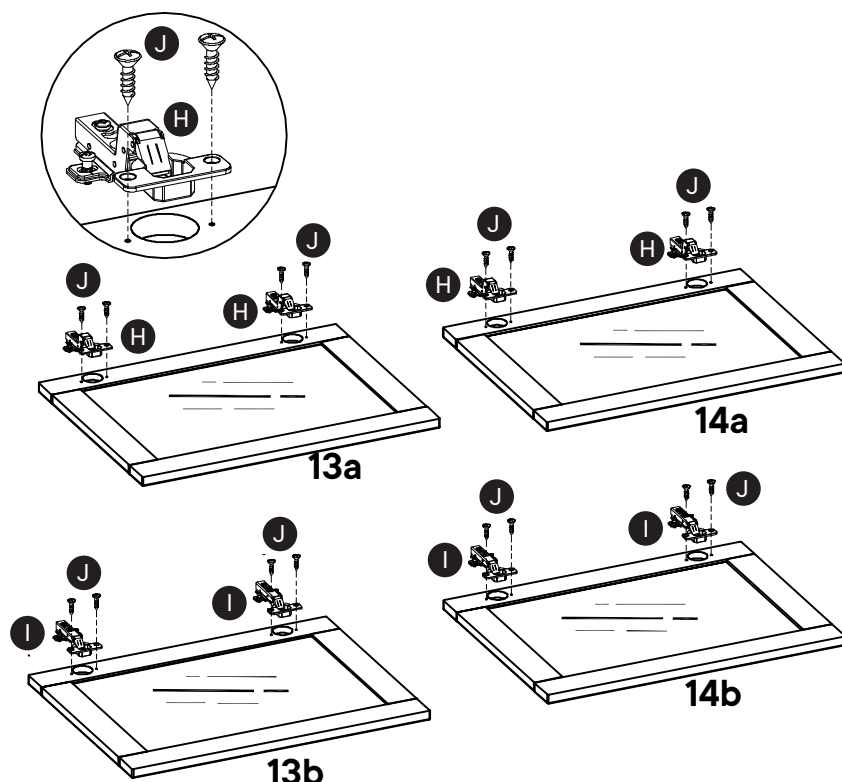





# Step 17

## COMPONENTS

- 13 Right door panel (a/b) x2
- 14 Left door panel (a/b) x2

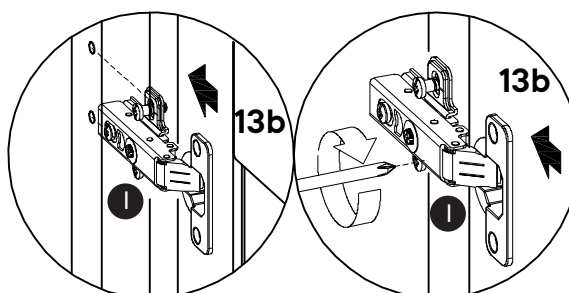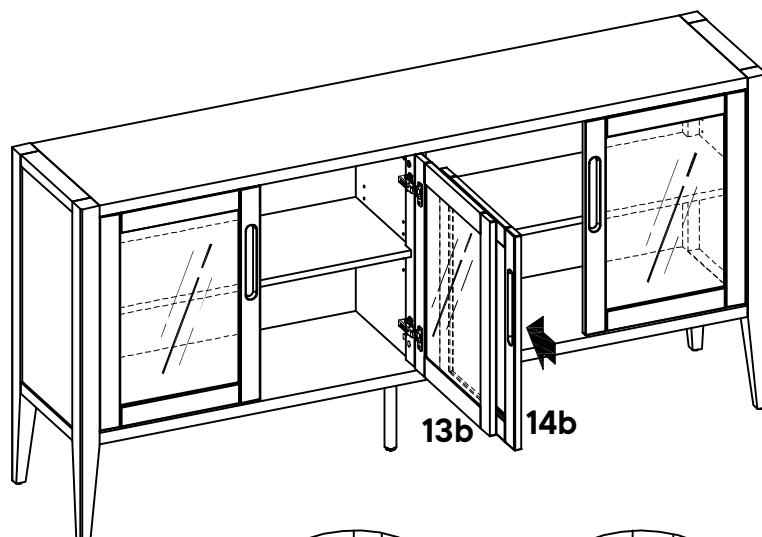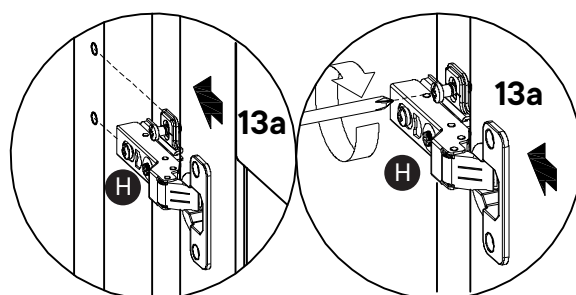
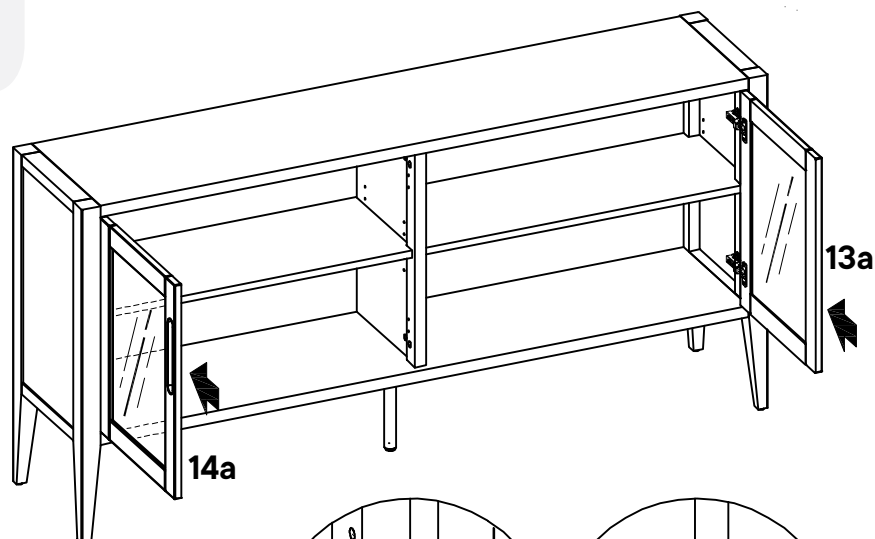


# Sideboard Door Alignment

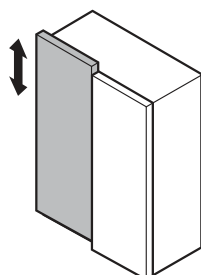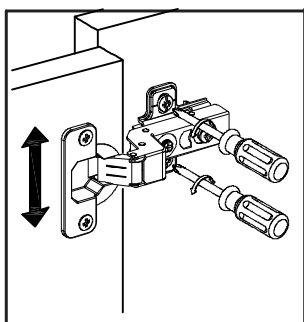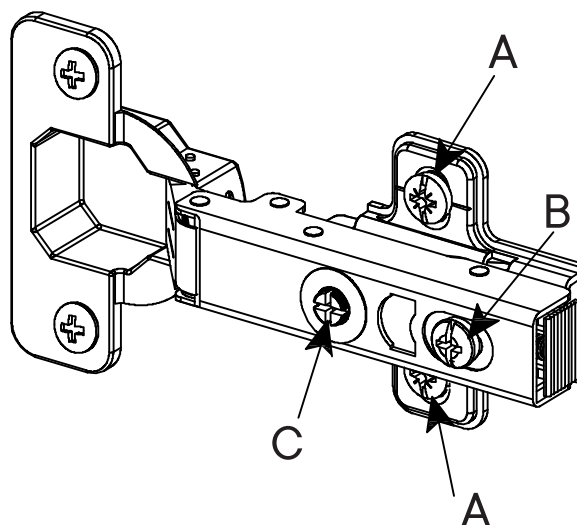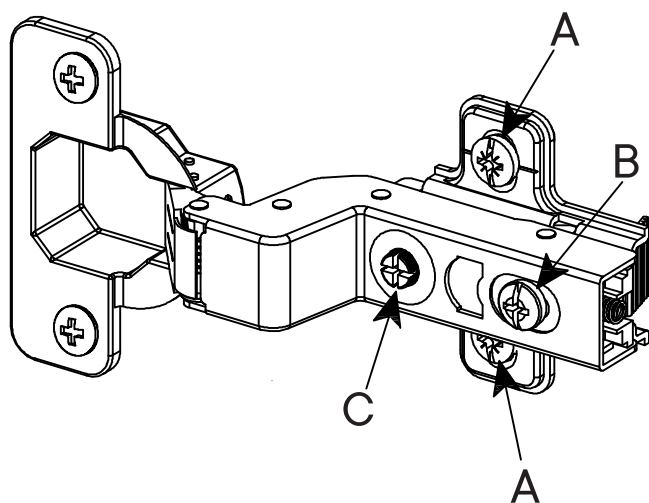



## To adjust the vertical height.

Loosen the two screws A on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

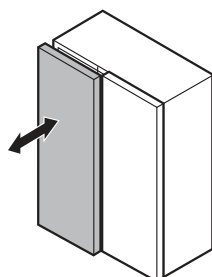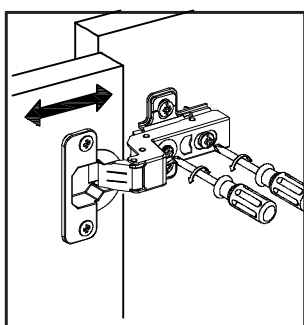

## To adjust depth.

Loosen screw B and adjust door, if the door can not be adjusted, please loosen screw C, then try again. Tighten screw B and C.

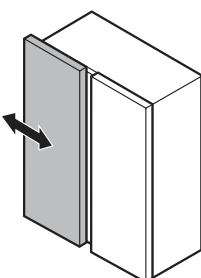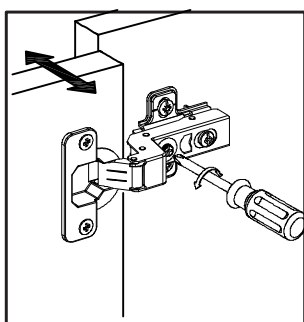


## To adjust side ways.

Turn screw C on BOTH hinges on each door.

## Step 18


Adjust the door's stopper, if required.

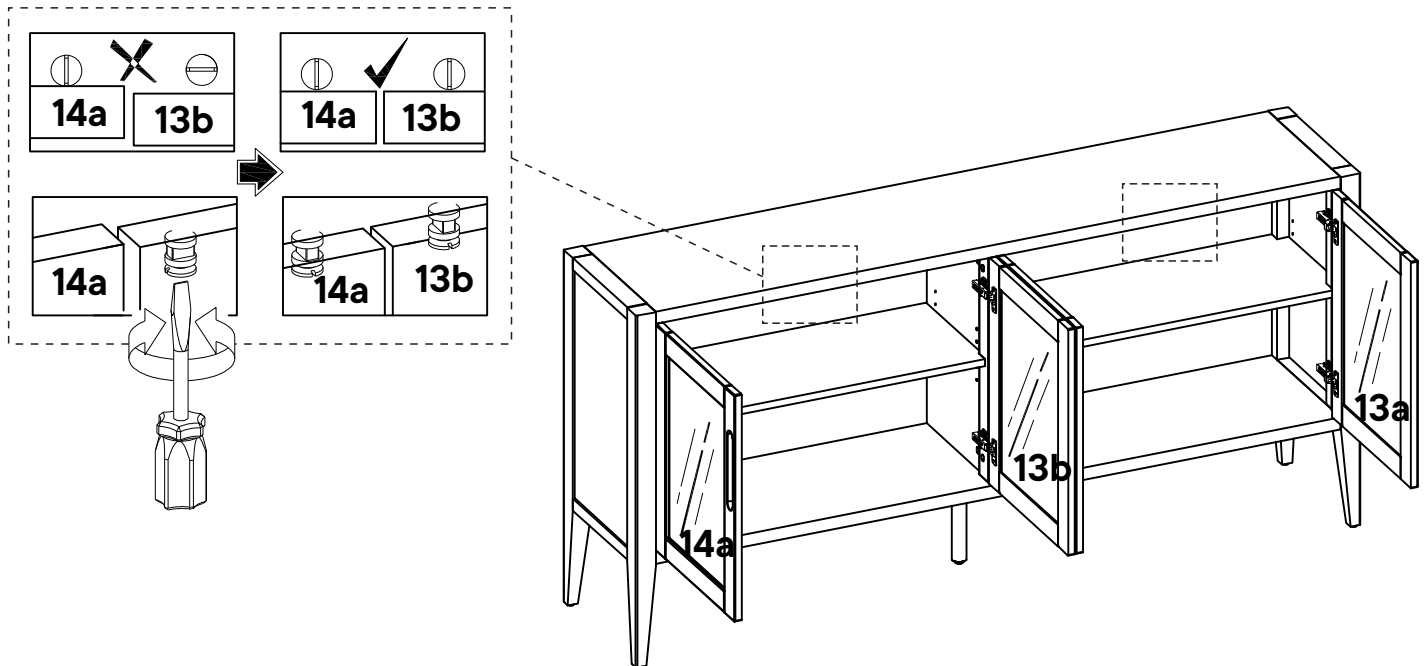

## Step 19

### ATTENTION

For your safety it is imperative to fix your furniture to the wall.  
Please source the right wall mounting hardware according to the nature of wall.

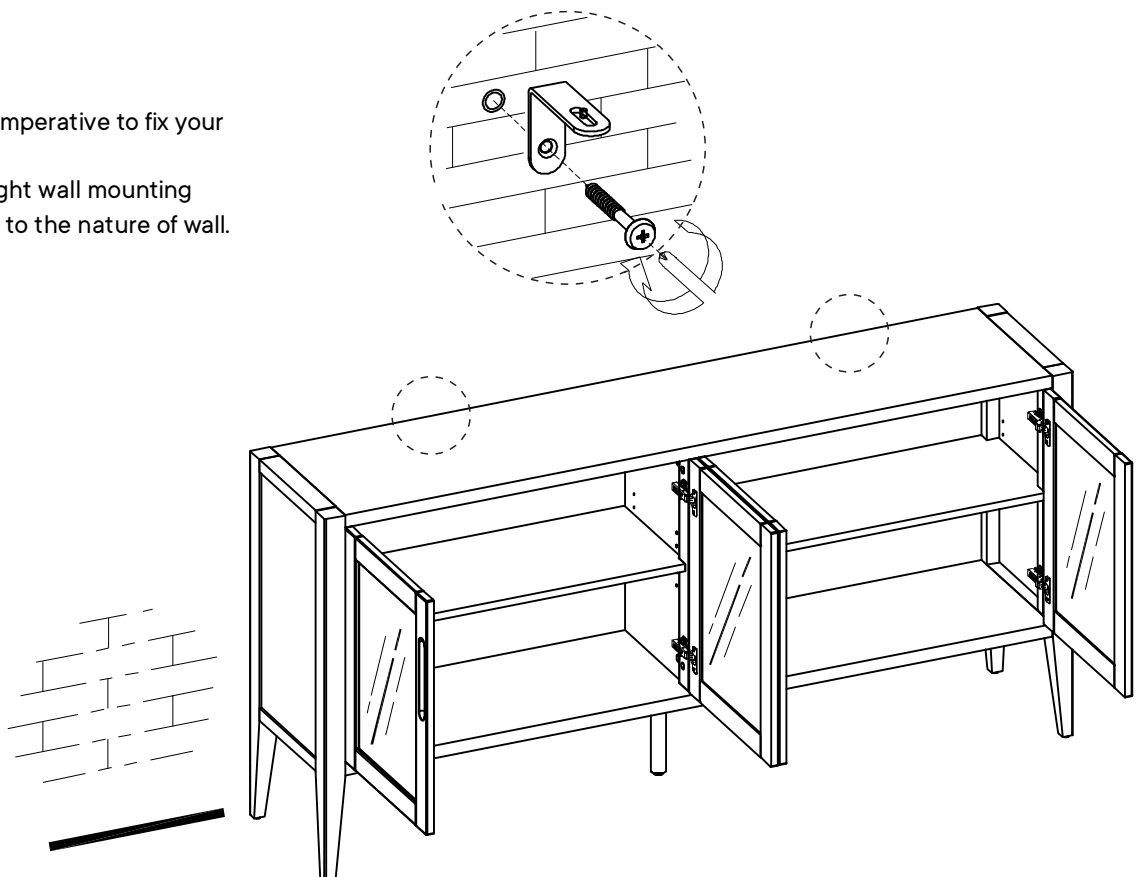

# Great job!

Your Sideboard is complete.



## CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

## CONNECT WITH US!



Tag us **@modway\_furniture** and **#modway** for a chance to be featured.

