


ASSEMBLY INSTRUCTIONS

EEI-6599

V1.10.10.23

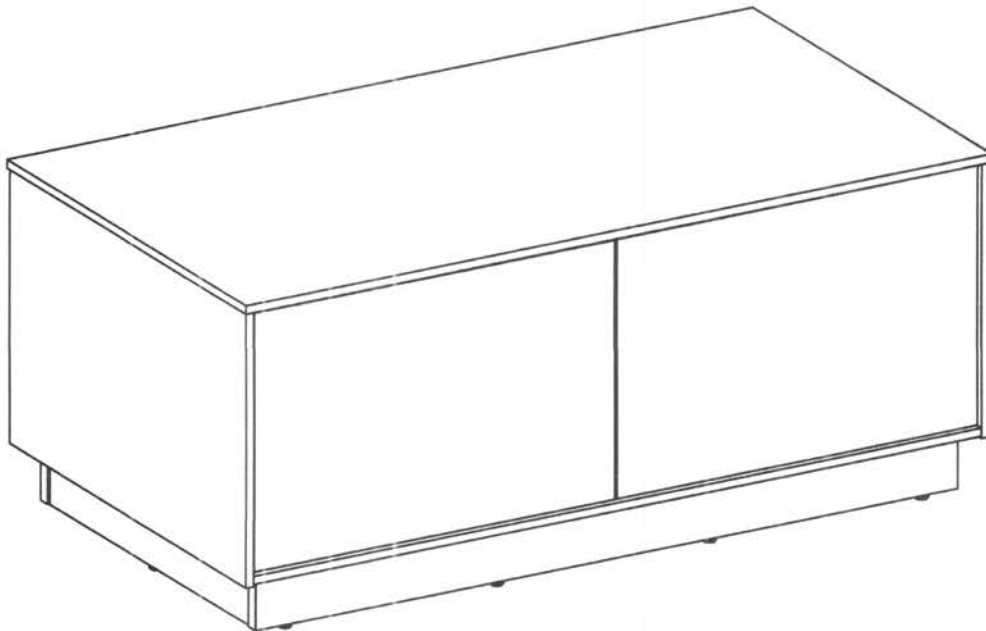

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 45 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1	8	Small Bottom Support	x3
2	Bottom Board	x1	9	Rear Drawer	X2
3	Left Board	x1	10	Left Drawer	X2
4	Right Board	x1	11	Right Drawer	X2
5	Divider Board	x1	12	Bottom Drawer	X2
6	Rear Board	x1	13	Left Front Drawer	x1
7	Large Bottom Support	x2	14	Right Front Drawer	X1

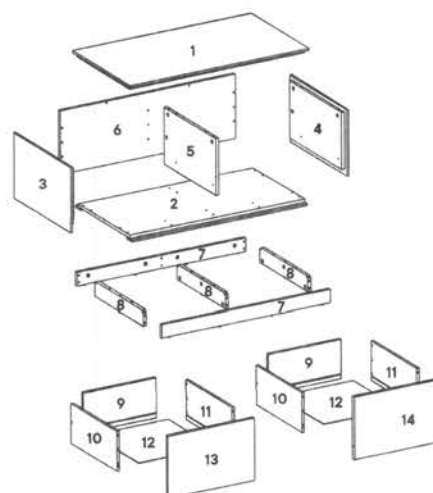

Provided hardware:

A		Cam Lock Ø15 mm	x26	I		Cam Lock Ø12 mm	x4
B		Cam Bolt Ø7.5 x 32 mm	x30	J		Drawer Rail	x2
C		Cam Cover Ø17 mm	x26	K		Cam Cover Ø15 mm	x4
D		Plastic Dowel M6 x 30 mm x50		L		Cam Fix Bolt Ø7.5 x 16 mm	x2
E		Screw M6 x 8 mm	x12	M		Push To Open	x2
F		Screw M6 x 13 mm	x8	N		Backply Stopper	x8
G		Screw M10 x 33.5 mm	x14	O		Screw M4 x 19 mm	x8
H		Holder	x2				

What you need:



Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

HARDWARE

B	Cam Bolt Ø7.5 x 32 mm	x17
E	Screw M6 x 8 mm	x4
H	Holder	x2
M	Push To Open	x2

COMPONENTS

1	Top Board	x1
2	Bottom Board	x1

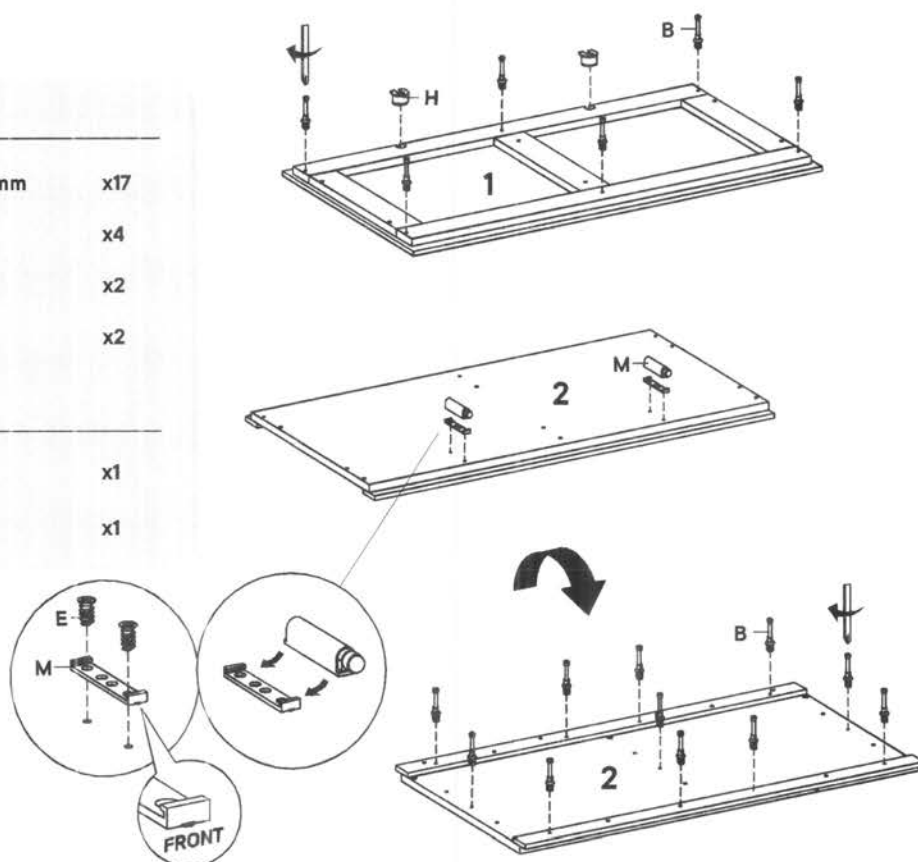


Step 2

HARDWARE

D	Plastic Dowel M6 x 30 mm	x12
E	Screw M6 x 8 mm	x4
J	Drawer Rail	x1

COMPONENTS

3	Left Board	x1
4	Right Board	x1

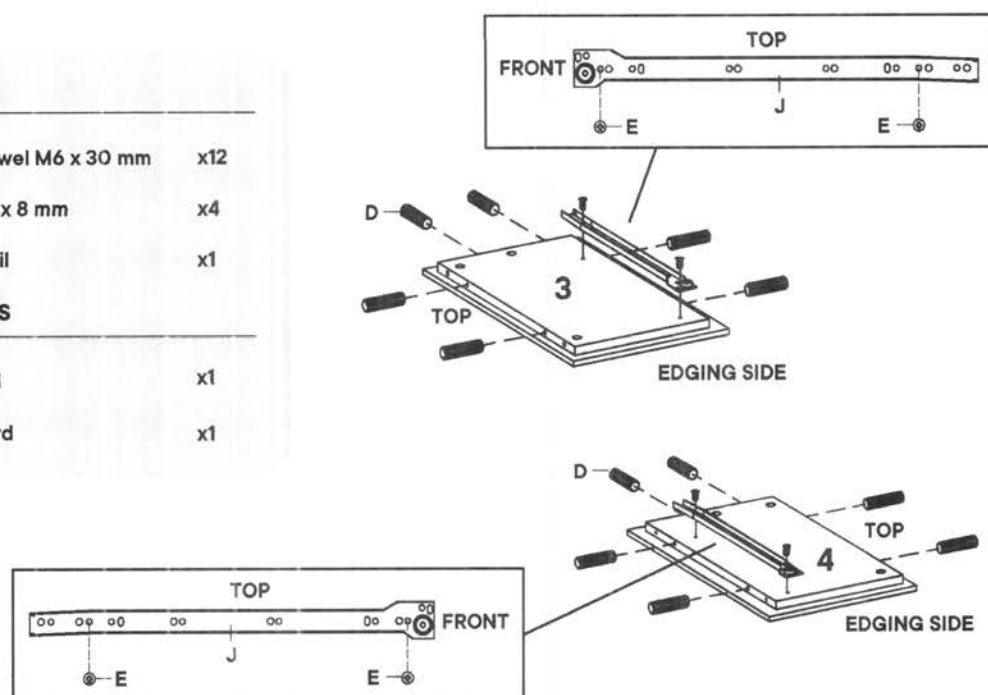


Step 3

HARDWARE

D	Plastic Dowel M6 x 30 mm	x6
E	Screw M6 x 8 mm	x4
J	Drawer Rail	x1

COMPONENTS

5	Divider Board	x1
----------	---------------	----

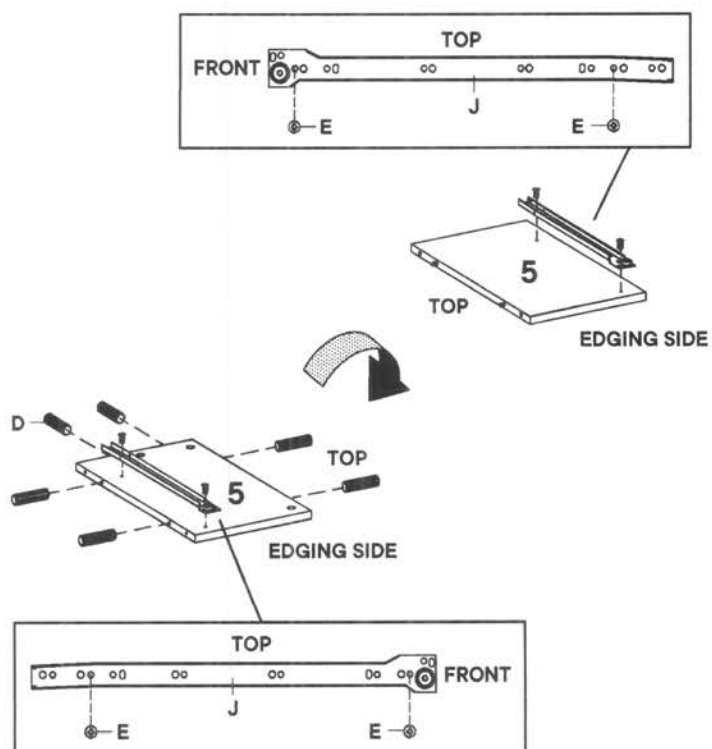


Step 4

HARDWARE

B	Cam Bolt Ø7.5 x 32 mm	x9
D	Plastic Dowel M6 x 30 mm	x16
L	Cam Fix Bolt Ø7.5 x 16 mm	x2

COMPONENTS

6	Rear Board	x1
7	Large Bottom Support	x2
8	Small Bottom Support	x3

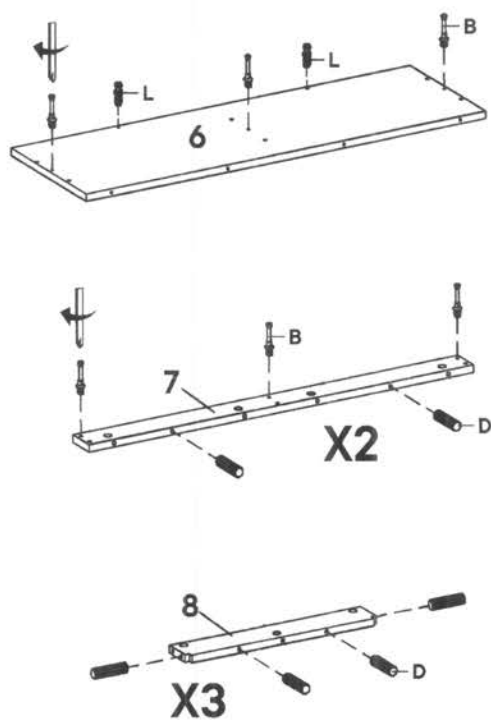


Step 5

HARDWARE

A	Cam Lock Ø15 mm	x3
C	Cam Cover Ø17 mm	x3

COMPONENTS

3	Left Board	x1
4	Right Board	x1
5	Divider Board	x1
6	Rear Board	x1

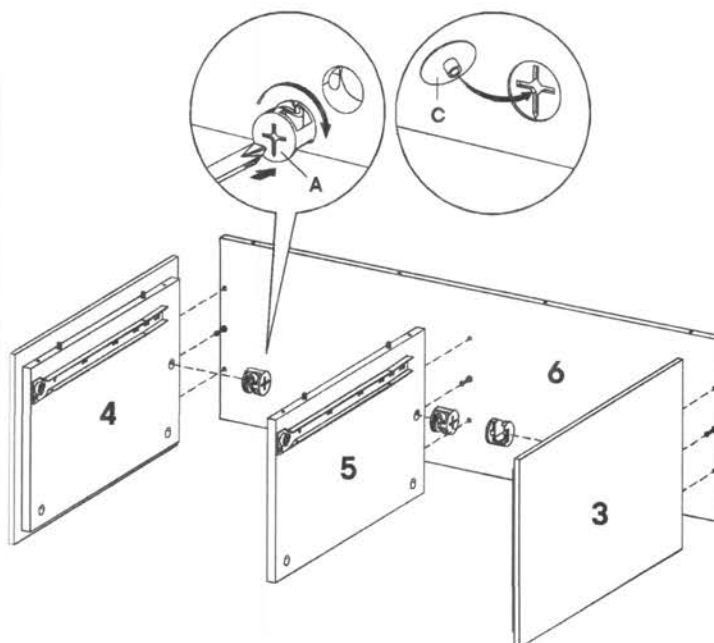


Step 6

HARDWARE

G	Screw M10 x 33.5 mm	x10
----------	---------------------	-----

COMPONENTS

2	Bottom Board	x1
3	Left Board	x1
4	Right Board	x1
5	Divider Board	x1
6	Rear Board	x1

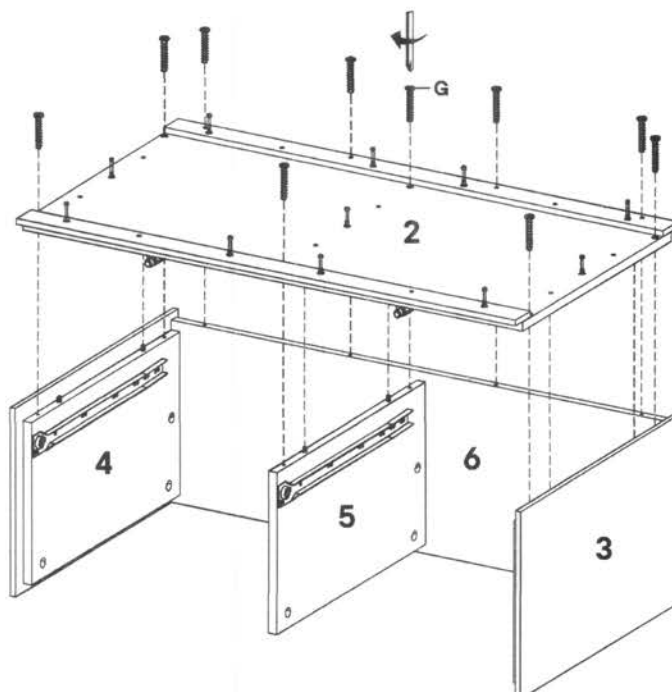


Step 7

HARDWARE

- | | | |
|----------|------------------|----|
| A | Cam Lock Ø15 mm | x6 |
| C | Cam Cover Ø17 mm | x6 |

COMPONENTS

- | | | |
|----------|----------------------|----|
| 7 | Large Bottom Support | x2 |
| 8 | Small Bottom Support | x3 |

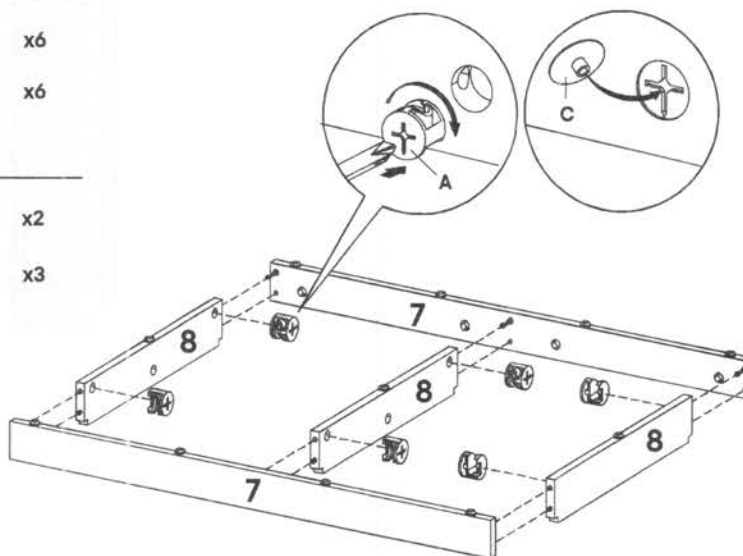


Step 8

HARDWARE

- | | | |
|----------|------------------|-----|
| A | Cam Lock Ø15 mm | x11 |
| C | Cam Cover Ø17 mm | x11 |

COMPONENTS

- | | | |
|----------|----------------------|----|
| 2 | Bottom Board | x1 |
| 7 | Large Bottom Support | x2 |
| 8 | Small Bottom Support | x3 |

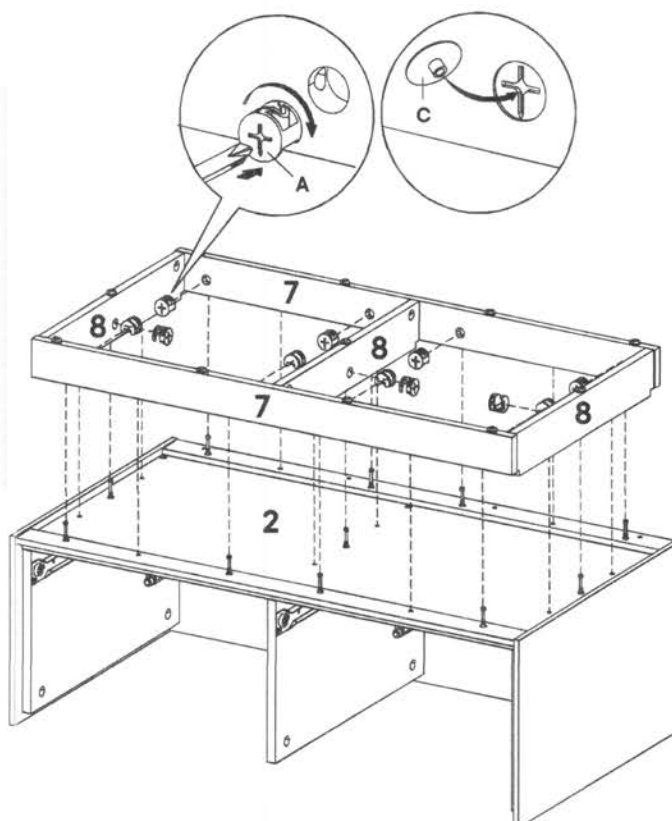


Step 9

HARDWARE

A	Cam Lock Ø15 mm	x6
C	Cam Cover Ø17 mm	x6

COMPONENTS

1	Top Board	x1
3	Left Board	x1
4	Right Board	x1
5	Divider Board	x1
6	Rear Board	x1

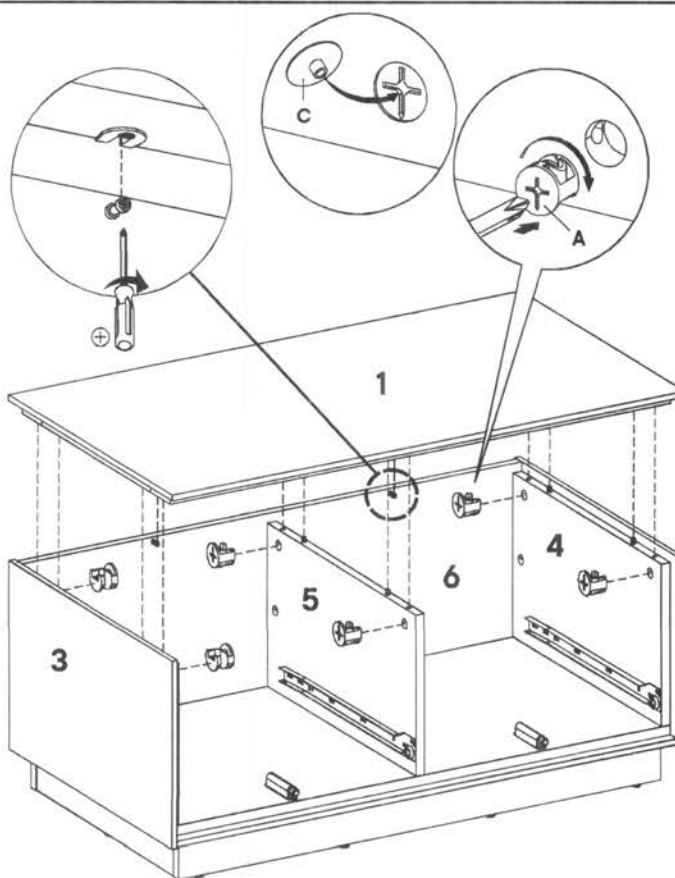


Step 10

HARDWARE

B	Cam Bolt Ø7.5 x 32 mm	x4
D	Plastic Dowel M6 x 30 mm	x16

COMPONENTS

9	Rear Drawer	x2
10	Left Drawer	x2
11	Right Drawer	x2
13	Left Front Drawer	x1
14	Right Front Drawer	x1

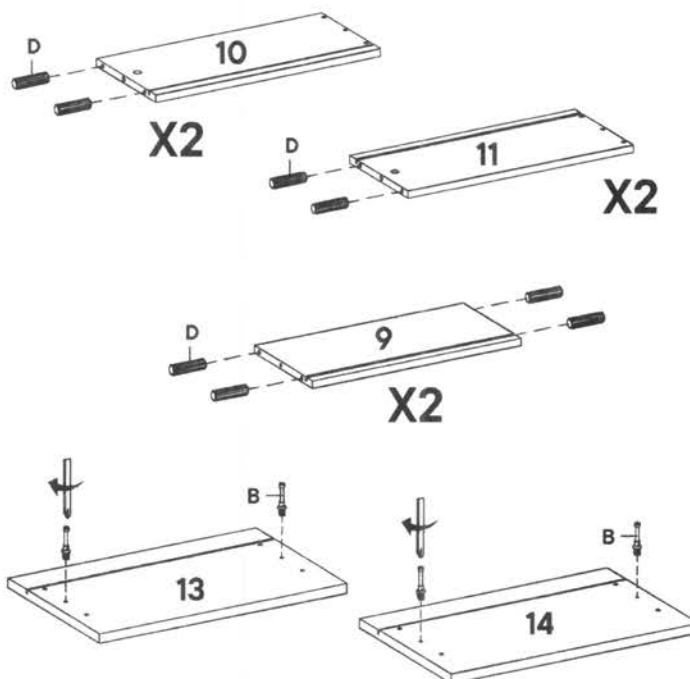


Step 11

HARDWARE

- | | | |
|----------|---------------------|----|
| G | Screw M10 x 33.5 mm | x4 |
|----------|---------------------|----|

COMPONENTS

- | | | |
|-----------|---------------|----|
| 9 | Rear Drawer | x2 |
| 10 | Left Drawer | x2 |
| 11 | Right Drawer | x2 |
| 12 | Bottom Drawer | x2 |

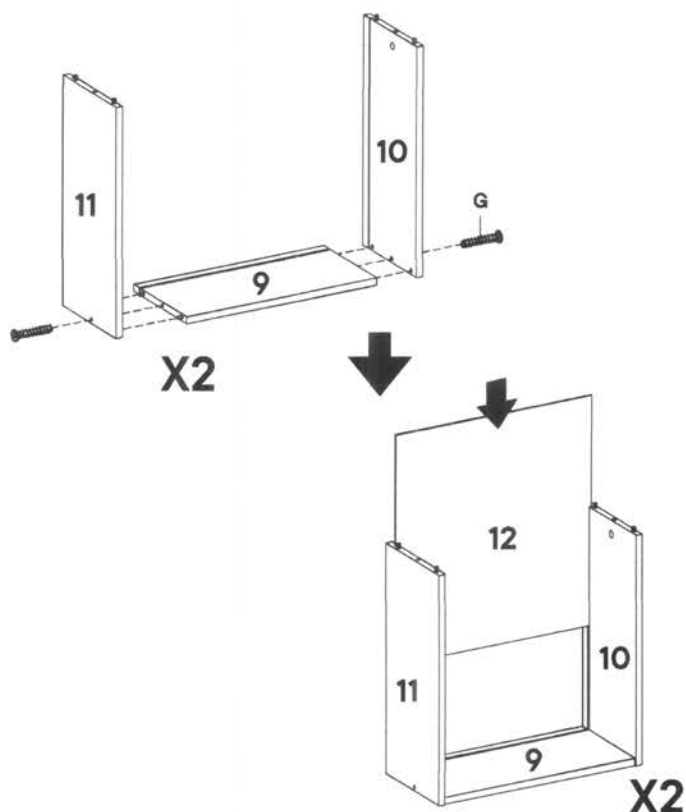


Step 12

HARDWARE

- | | | |
|----------|------------------|----|
| I | Cam Lock Ø12 mm | x4 |
| K | Cam Cover Ø15 mm | x4 |

COMPONENTS

- | | | |
|-----------|--------------------|----|
| 9 | Rear Drawer | X2 |
| 10 | Left Drawer | X2 |
| 11 | Right Drawer | X2 |
| 12 | Bottom Drawer | X2 |
| 13 | Left Front Drawer | x1 |
| 14 | Right Front Drawer | x1 |

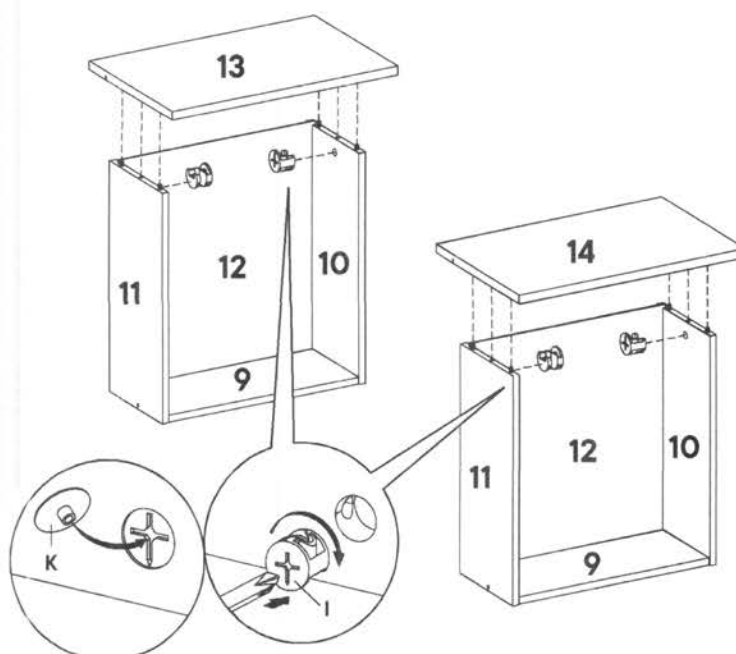


Step 13

HARDWARE

N	Backply Stopper	x8
O	Screw M4 x 19 mm	x8

COMPONENTS

10	Left Drawer	x2
11	Right Drawer	x2
12	Bottom Drawer	x2
13	Left Front Drawer	x1
14	Right Front Drawer	x1

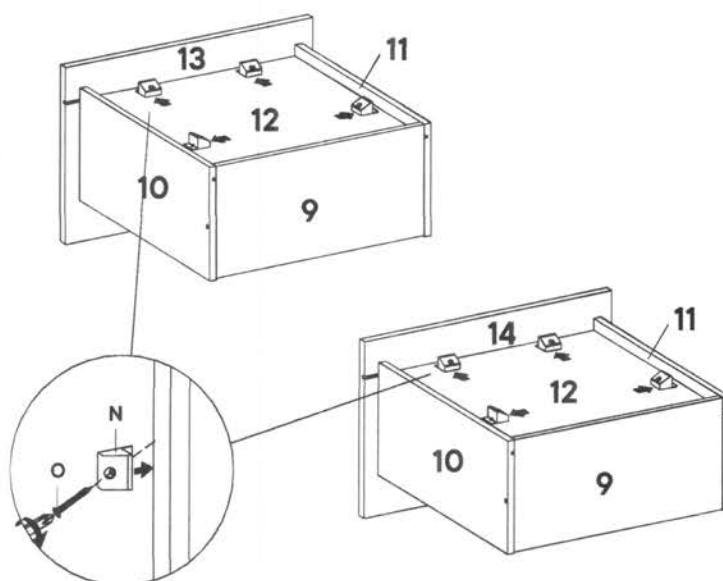


Step 14

HARDWARE

F	Screw M6 x 13 mm	x8
J	Drawer Rail	x2

COMPONENTS


10	Left Drawer	x2
11	Right Drawer	x2

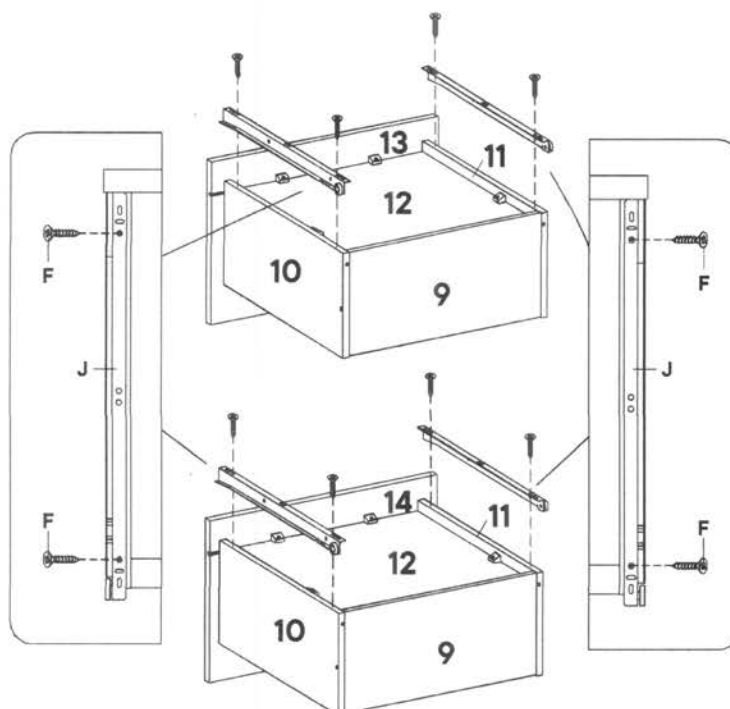

Step 15

COMPONENTS

3	Left Board	x1
4	Right Board	x1
5	Divider Board	x1
13	Left Front Drawer	x1
14	Right Front Drawer	x1

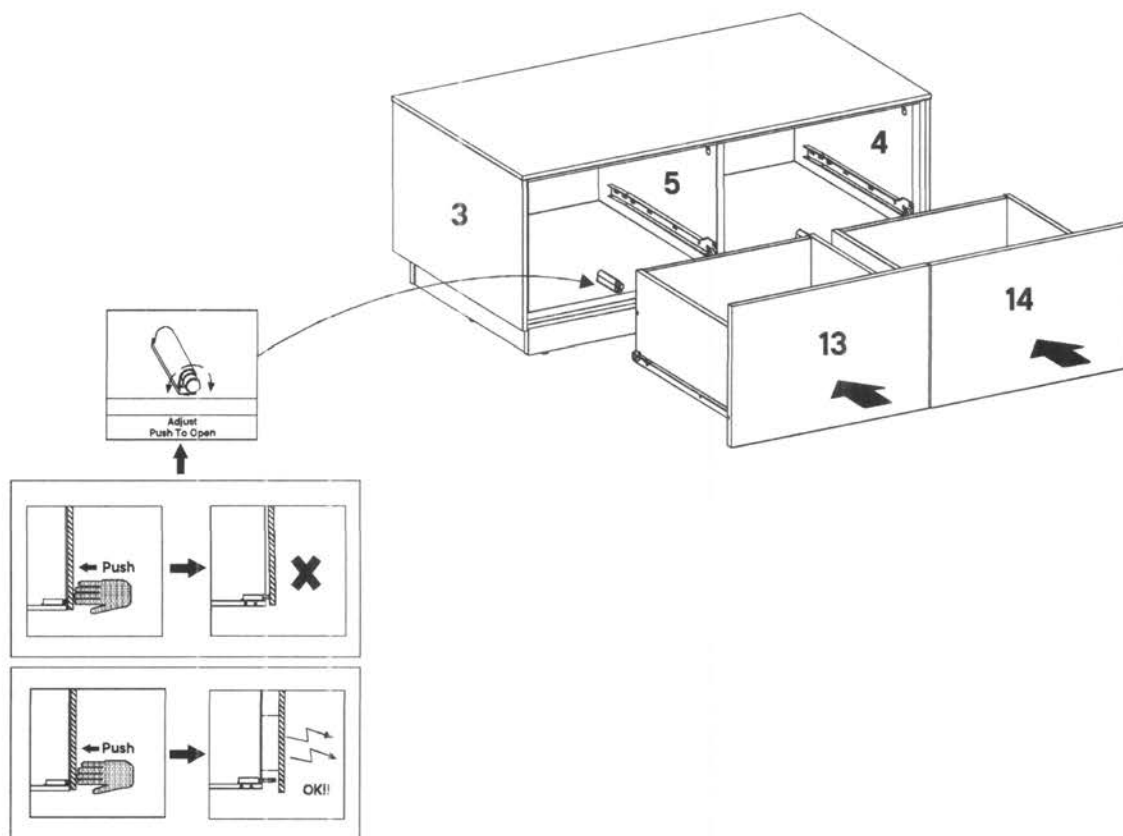

Great job!

Coffee Table assembly is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!

Tag us @modway_furniture and #modway for a chance to be featured.

