


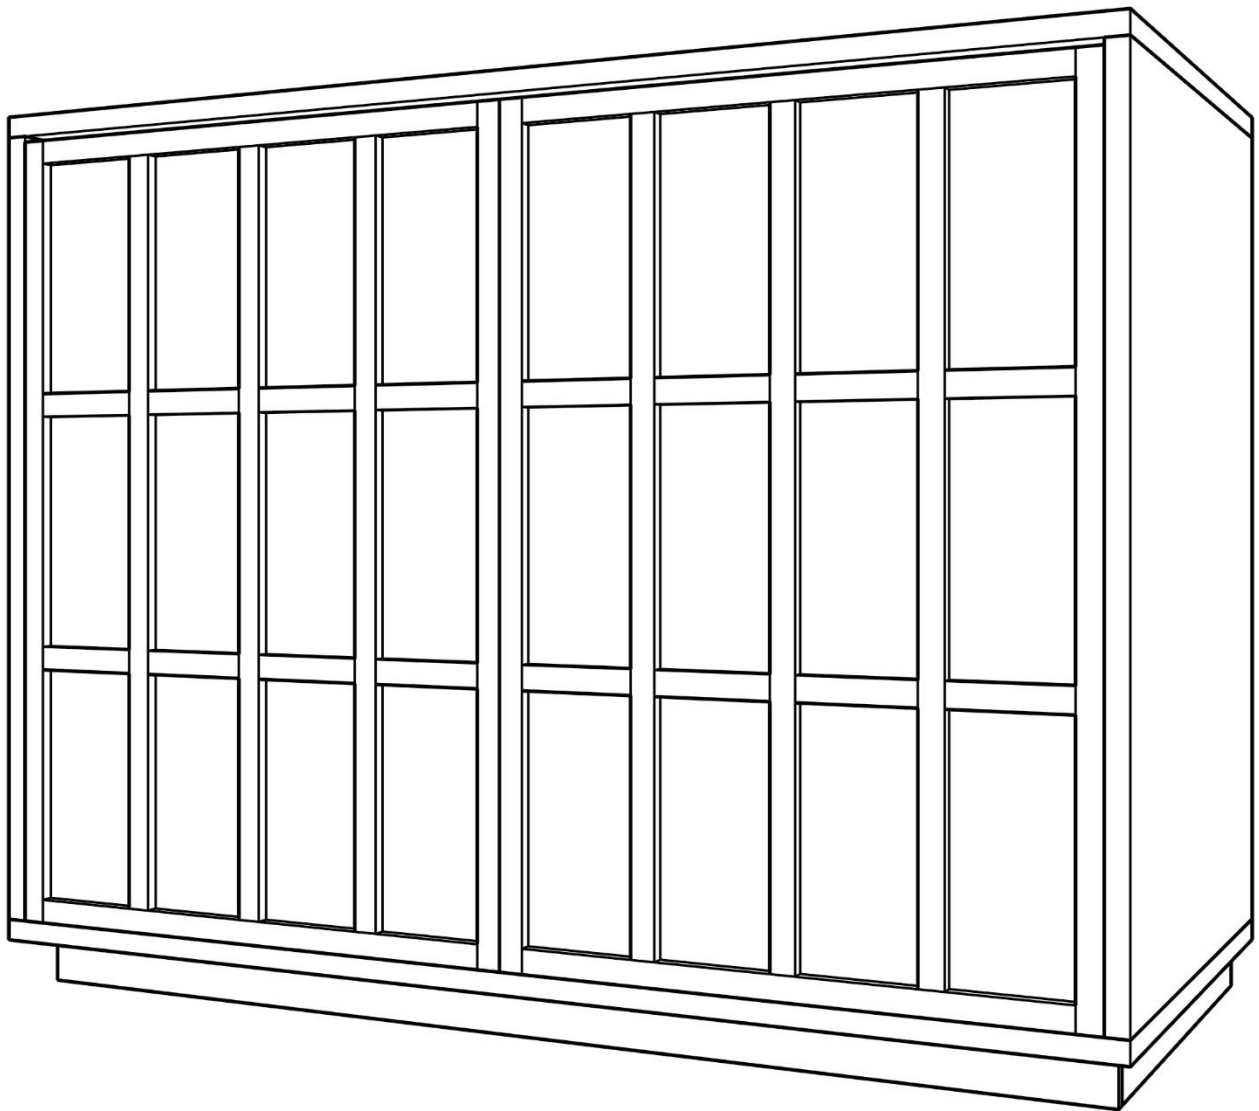

ASSEMBLY INSTRUCTIONS

Cabinet

EEL-7558/V0.09.01.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 40 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item.
Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.





Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Wood Dowel Ø8 x 25 mm	x12
B		Screw M 6 x 30 mm	x18
C		Screw M 3.5 x 15 mm	x28
D		Shelf Pin	x4
E		Hinge	x4
F		Allen Key	x1
AA1		Bracket	x2
AA1		Drawstring	x2
AA2		Millet	x4
AA3		Screw M 3 x 30	x4
AA4		Screw M 3 X 15	x4

WHAT YOU NEED:



Philips




Philips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:


Page 03 of 13

All parts are numbered with a sticker according to this list.

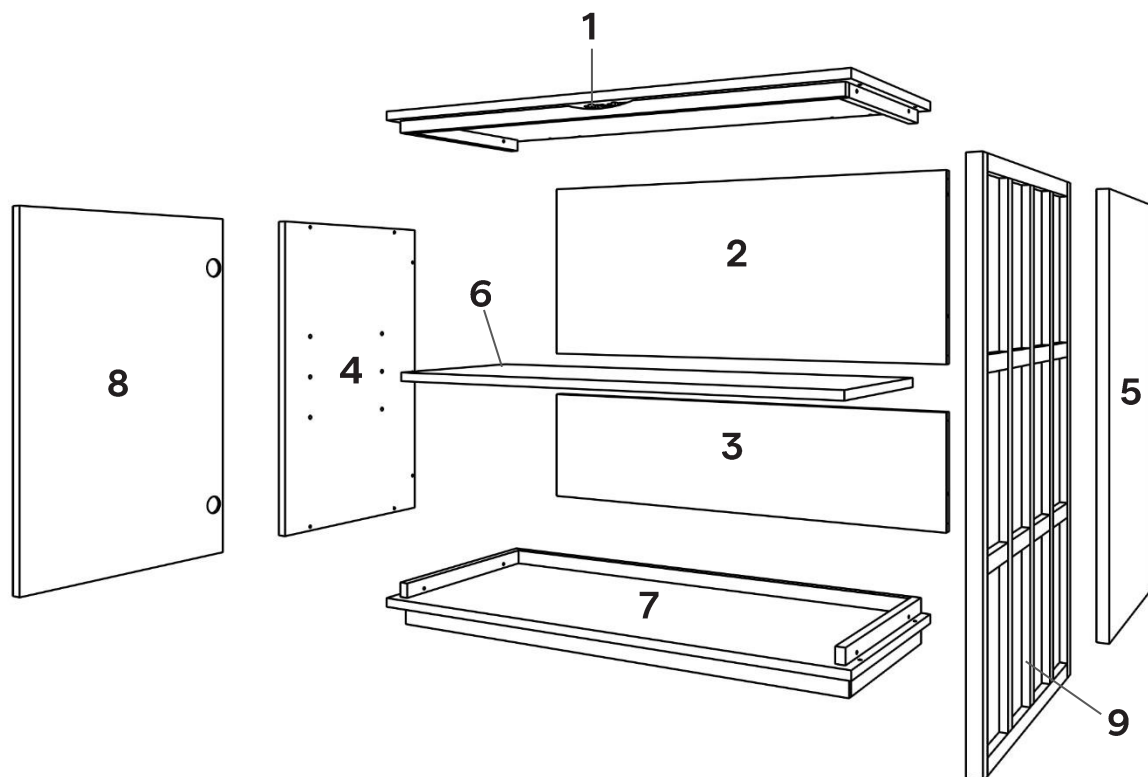

1	Top Board	x1
2	Back Board Above	x1
3	Back Board Below	x1
4	Side Board Left	x1

5	Side Board Right	x1
6	Adjustable Shelf	x1
7	Bottom Board	x1
8	Door 1	x1
9	Door 2	x1

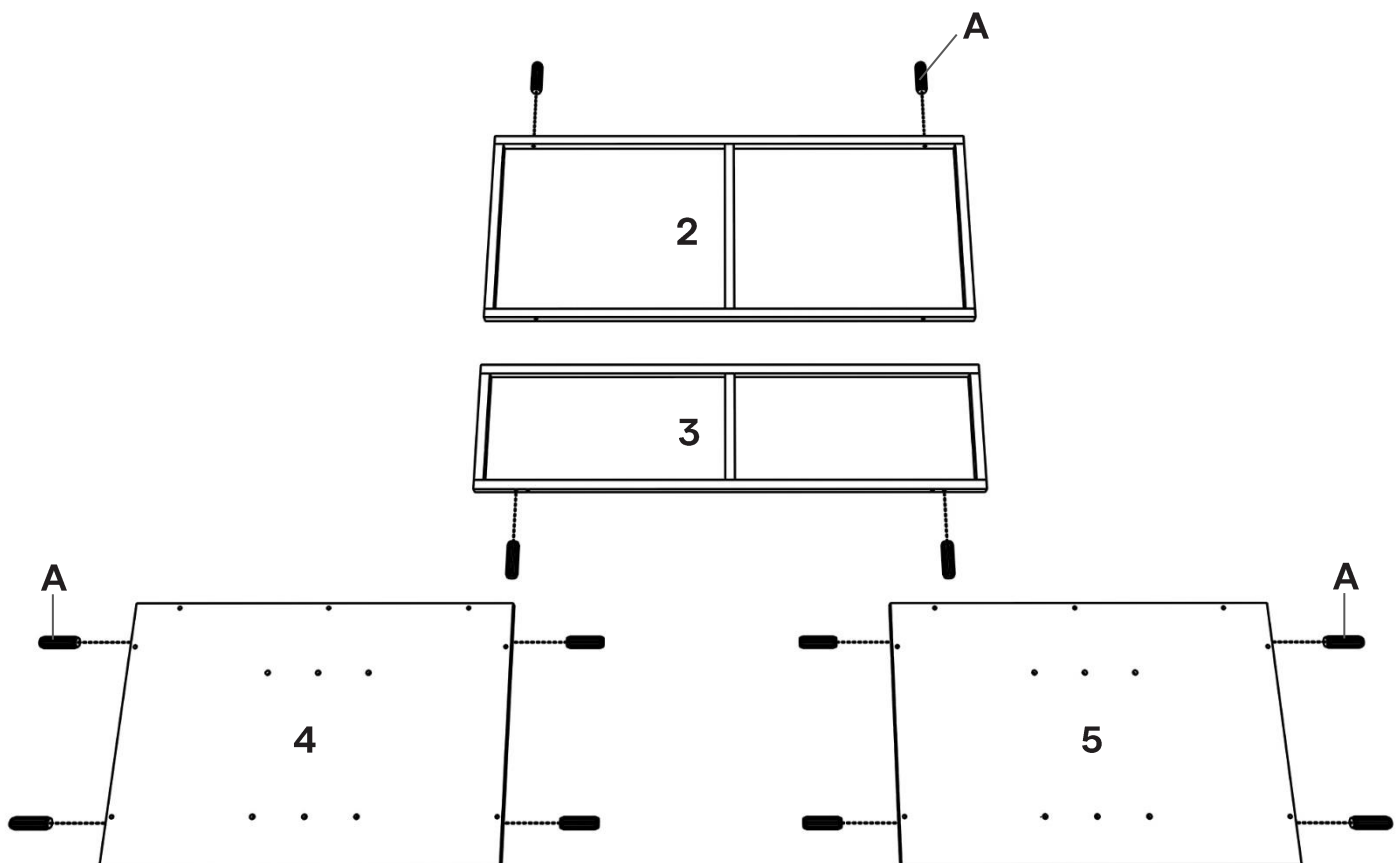
HARDWARE**A** Wood Dowel Ø8 x 25 mm x12**COMPONENTS****2** Back Board Above x1**3** Back Board Below x1**4** Side Board Left x1**5** Side Board Right x1**1.1** Insert wood Dowel Ø8 x 25 mm (A) into the (2).**1.2** Insert wood Dowel Ø8 x 25 mm (A) into the (3).**1.3** Insert wood Dowel Ø8 x 25 mm (A) into the (4).**1.4** Insert wood Dowel Ø8 x 25 mm (A) into the (5).

COMPONENTS

1	Top Board	x1
4	Side Board Left	x1
5	Side Board Right	x1

2.1 Insert Side Board Left (4) into the Top Board (1).

2.2 Insert Side Board Right (5) into the Top Board (1).

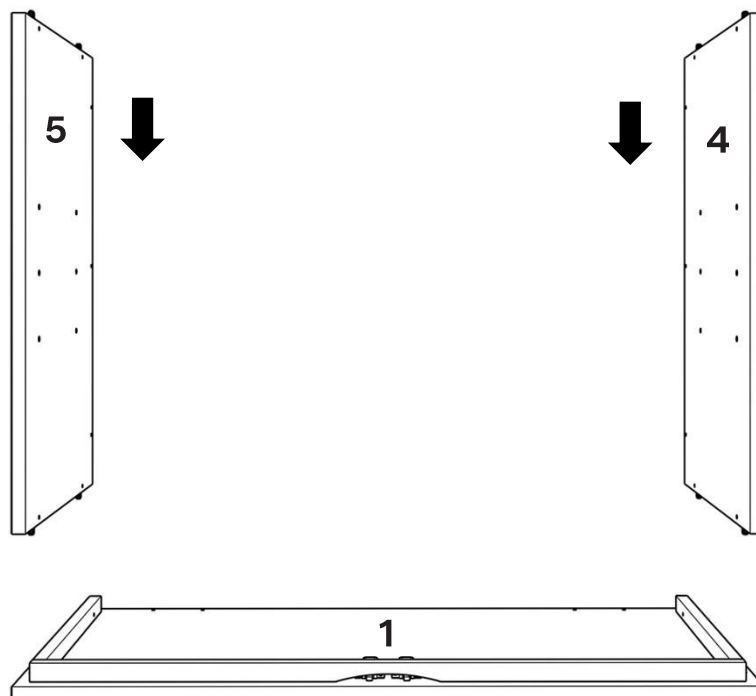

STEP 03



HARDWARE

B	Screw M 6 x 30 mm	x4
F	Allen Key	x1

COMPONENTS

1	Top Board	x1
4	Side Board Left	x1
5	Side Board Right	x1

3.1 Secure with Screw M 6 x 30 mm (B), tighten Screws using Allen Key (F)

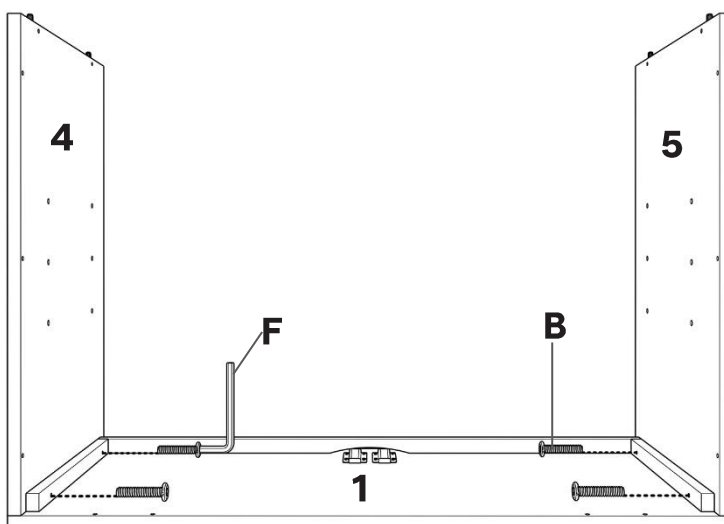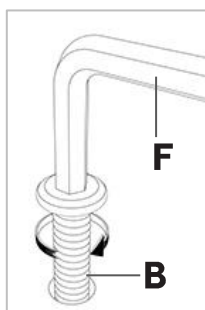


HARDWARE

- B** Screw M 6 x 30 mm x4
F Allen Key x1

COMPONENTS

- 2** Back Board Above x1
3 Back Board Below x1

4.1 Insert Back Board Above(2) into the Back Board Below (3). Fix the boards with Screw M 6 x 30 mm (B), tighten the Screw with Allen Key (F)

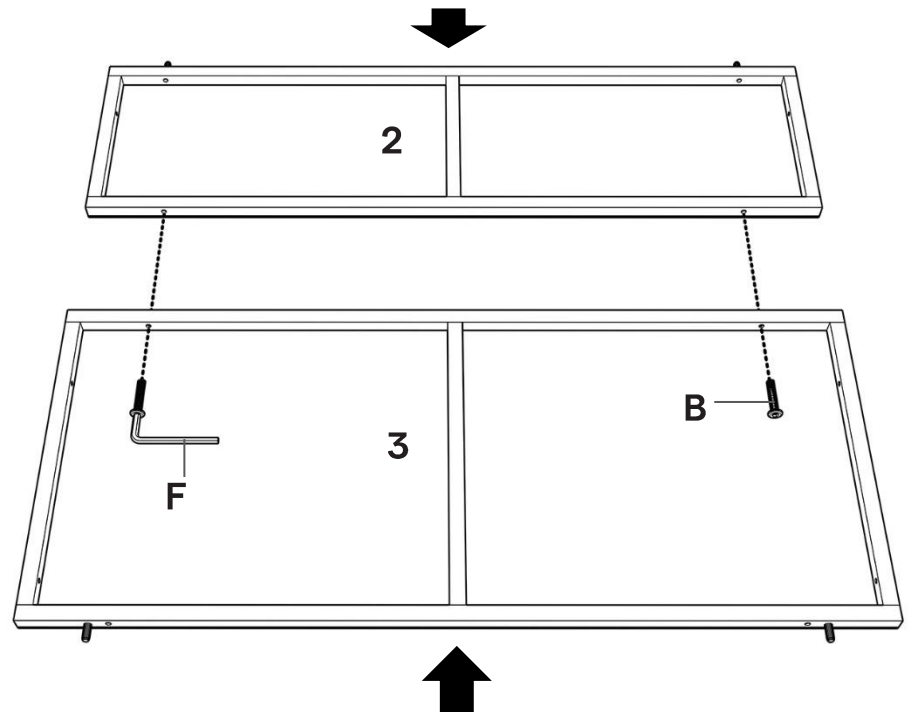


STEP 05

COMPONENTS

- 1** Top Board x1
2 Back Board Above x1
3 Back Board Below x1

5.1 Insert Back Board Above(2), Back Board Below (3) into the Top Board (1)

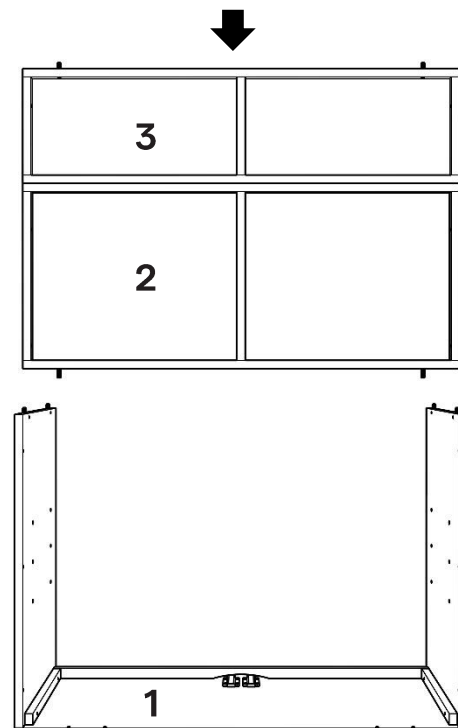


HARDWARE

B	Screw M 6 x 30 mm	x8
F	Allen Key	x1

COMPONENTS

1	Top Board	x1
2	Back Board Above	x1
3	Back Board Below	x1
4	Side Board Left	x1
5	Side Board Right	x1

6.1 Fix the boards with Screw M 6 x 30 mm (B), tighten the Screw with Allen Key (F)

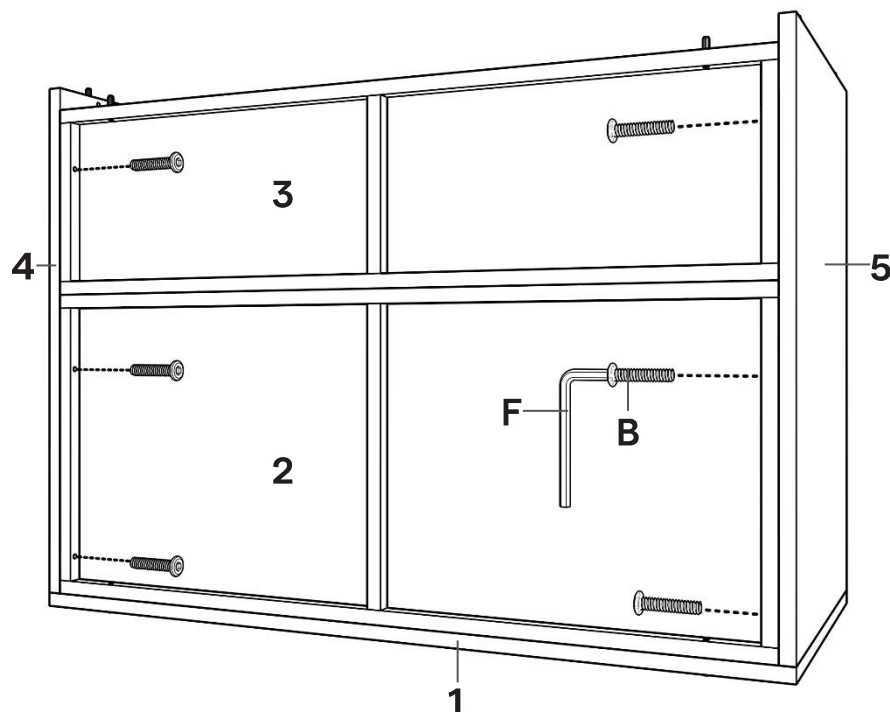

STEP 07


HARDWARE

B	Screw M 6 x 30 mm	x2
F	Allen Key	x1

COMPONENTS

3	Back Board Below	x1
7	Bottom Board	x1

7.1 Insert Bottom Board (7) into the Back Board Below (3), Fix the boards with Screw M 6 x 30 mm (B), tighten the Screw with Allen Key (F).

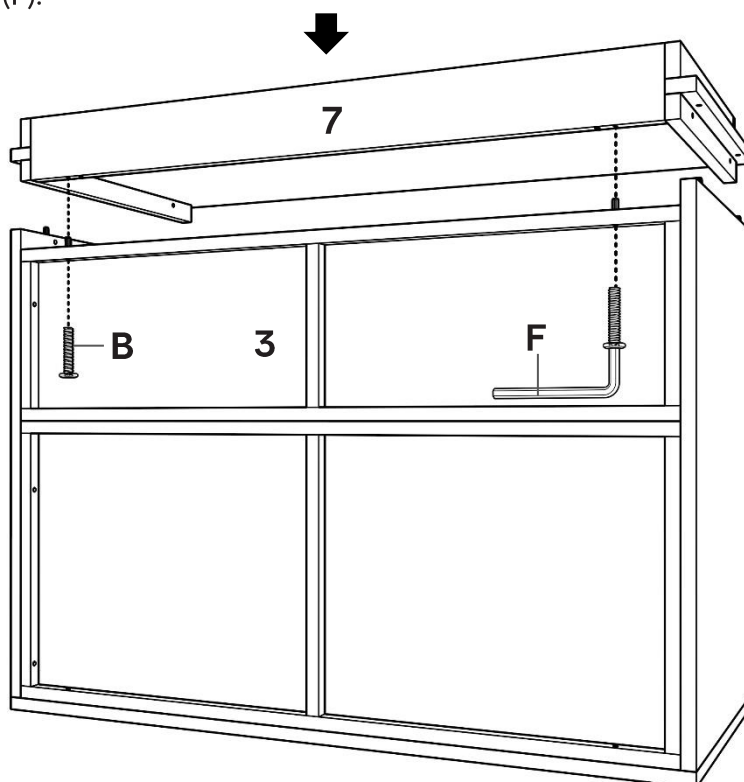


HARDWARE

- B** Screw M 6 x 30 mm x4
F Allen Key x1

COMPONENTS

- 1** Top Board x1

8.1 Secure Top Board (1) using Screw M 6 x 30 mm (B), and tighten it with Allen Key (F).

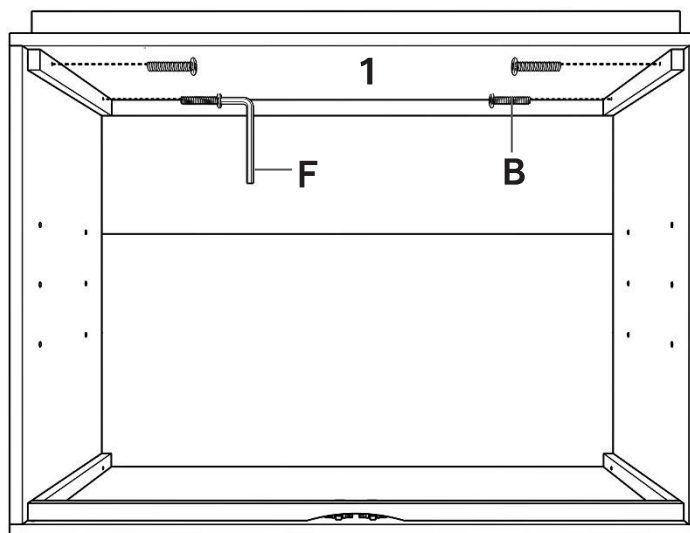

STEP 09



HARDWARE

- D** Shelf Pin x4

COMPONENTS

- 6** Adjustable Shelf x1

9.1 After positioning the product upright, insert Shelf Pin (D) into the holes on the Side Board and Center Board at the desired level. Then, place the Adjustable Shelf (6) by aligning its hole with the Shelf Pin (D) and inserting it securely.

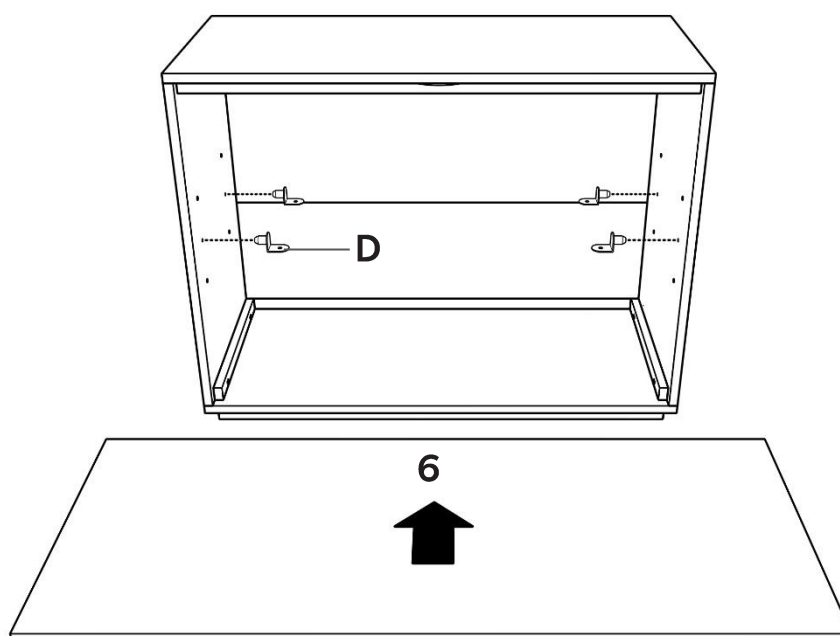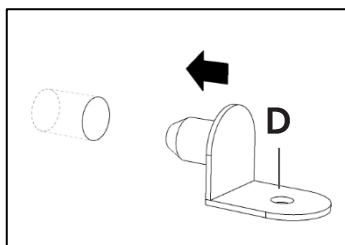



HARDWARE

- C** Screw M 3.5 x 15 mm x4
D Shelf Pin x4

COMPONENTS

- 6** Adjustable Shelf x1

10.1 Optional step: Secure the Adjustable Shelf (6) using a Screw M 3.5 x 15 mm (C), or simply place it on the Shelf pins (D).

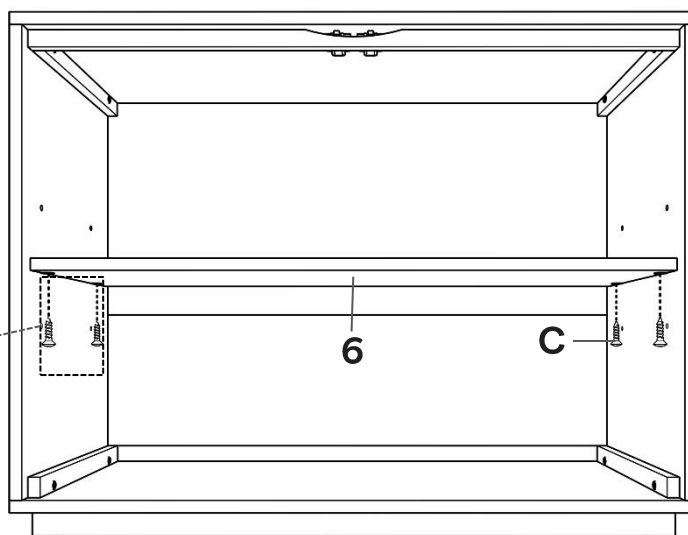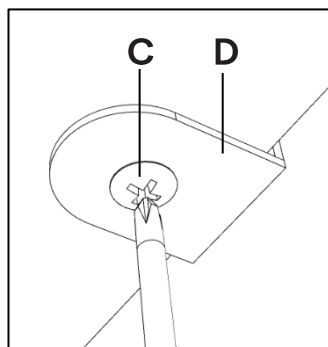

STEP 11



HARDWARE

- C** Screw M 3.5 x 15 mm x8
E Hinge x4

COMPONENTS

- 8** Door 1 x1
9 Door 2 x1

11.1 Insert Hinges (E) into Door 1 (8) and Door (9), secure with Screw M 3.5 x 15 mm (C).

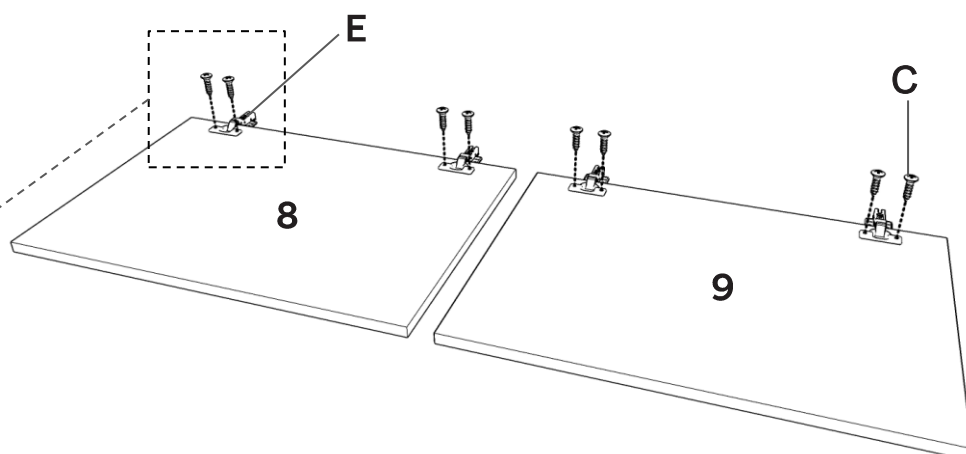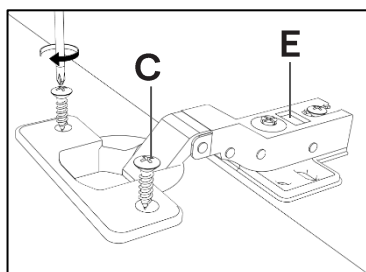



HARDWARE

- C** Screw M 3.5 x 15 mm x16
E Hinge x4

COMPONENTS

- 8** Door 1 x1
9 Door 2 x1

12.1 Install Door 1 (8) and Door 2 (9) into Side Board. Please see the above images carefully. Secure with Screw 3.5 x 15 mm (C). Please refer to the last page for more guide on how to adjust hinges. Position as shown in the figure. Adjust the push tool as needed to ensure doors opening and closing smoothly.

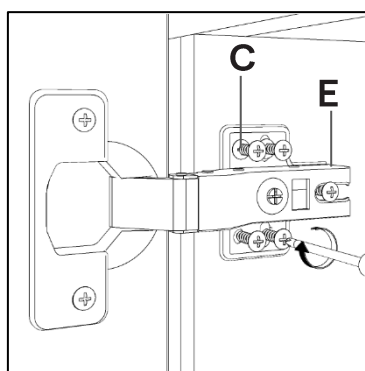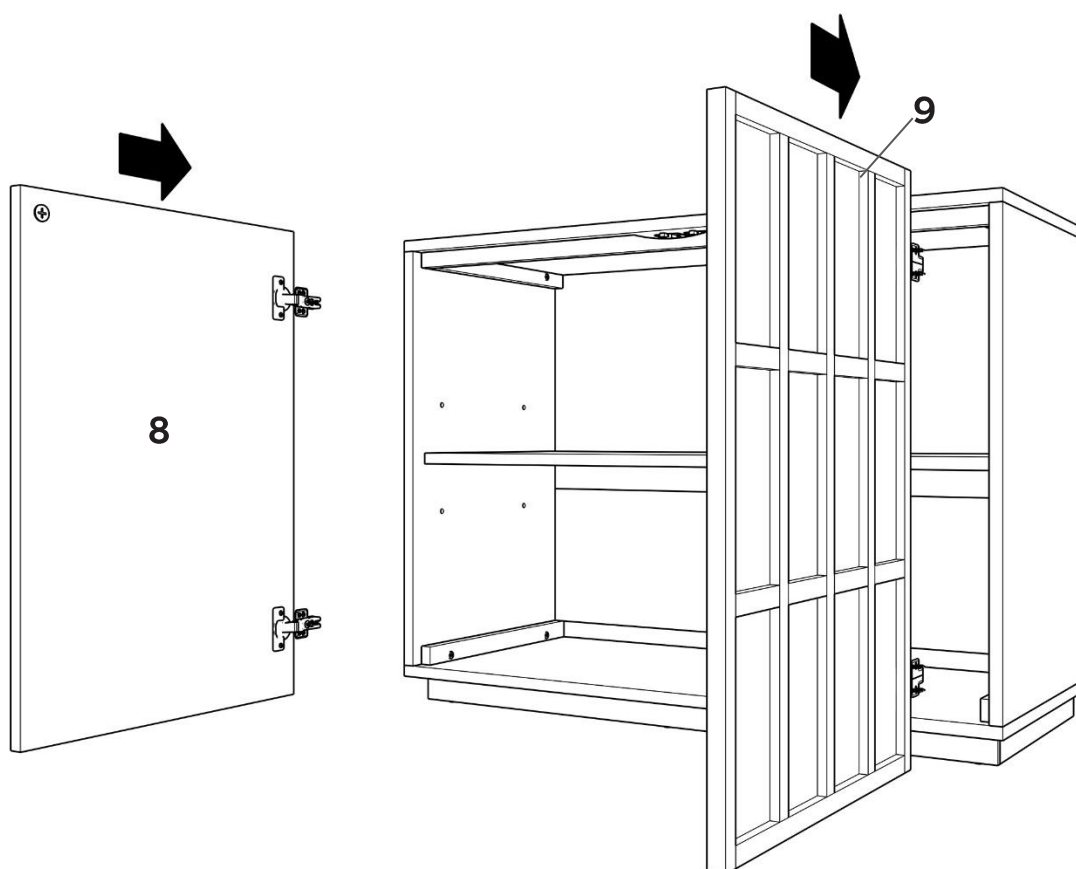


Great job!

Sideboard assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

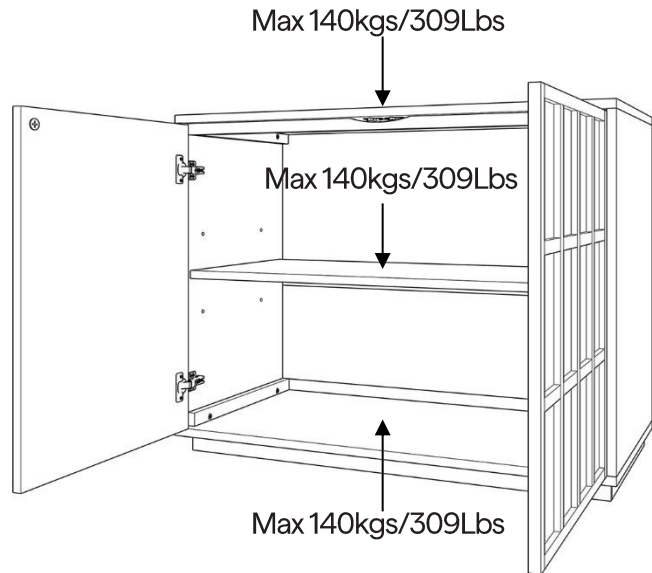

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway






Questions? Contact us!

609.256.9000



cs@modway.com

Cabinet Door Alignment

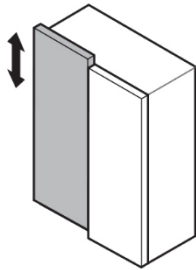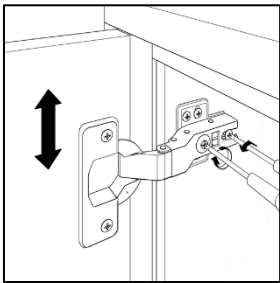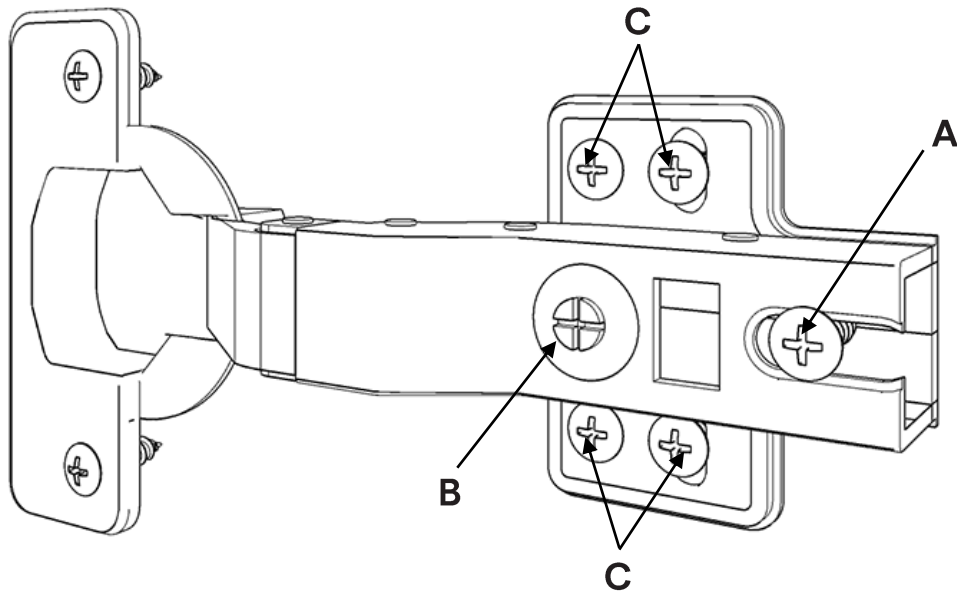



To adjust the vertical height.

Loosen the four screws “E” on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

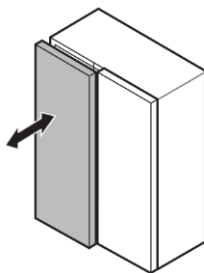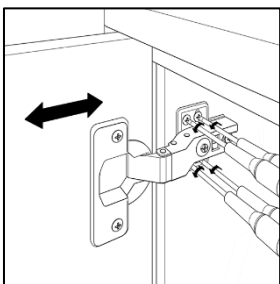

To adjust depth.

Loosen screw “C” and adjust door, if the door can not be adjusted, please loosen screw “B”, then try again. Tighten screw “A” and “B”.

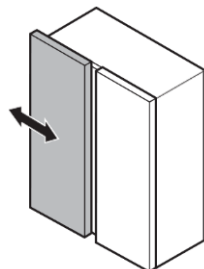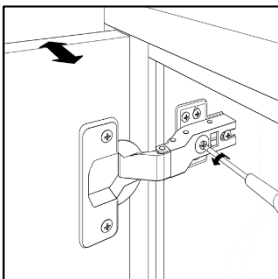

To adjust side ways.


Turn screw “B” on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

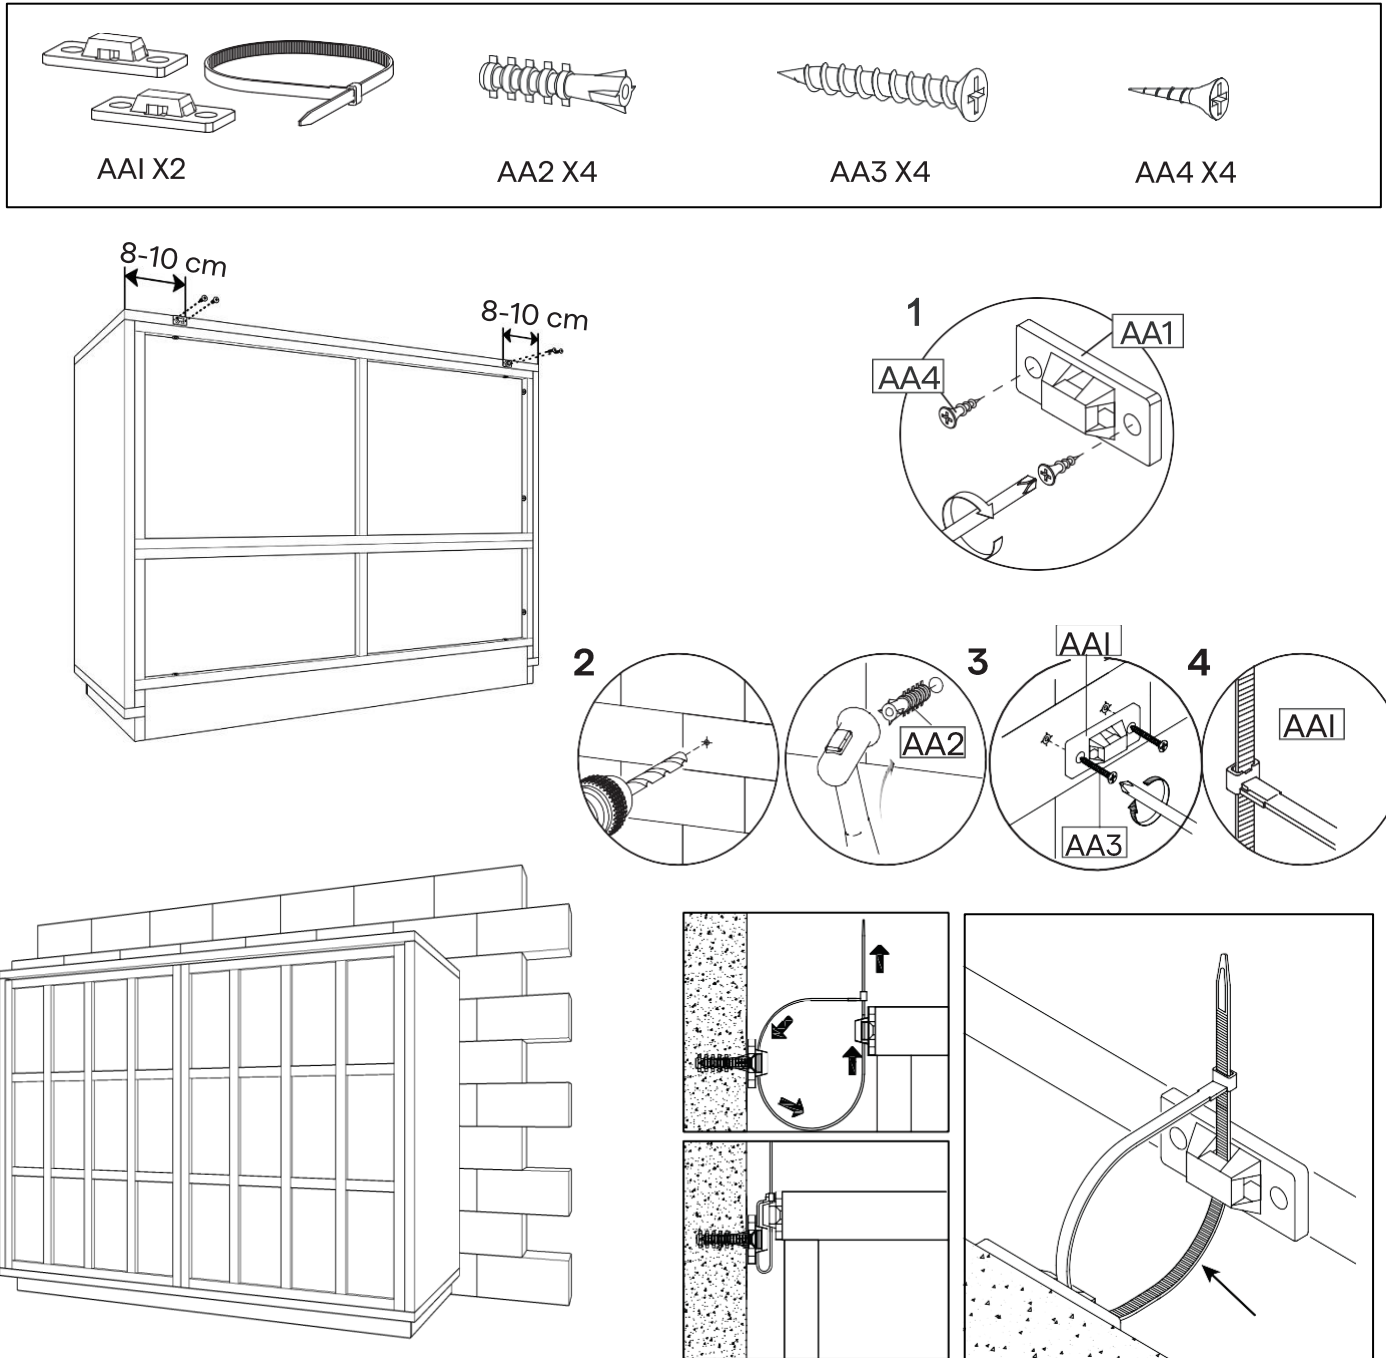

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 – 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.