


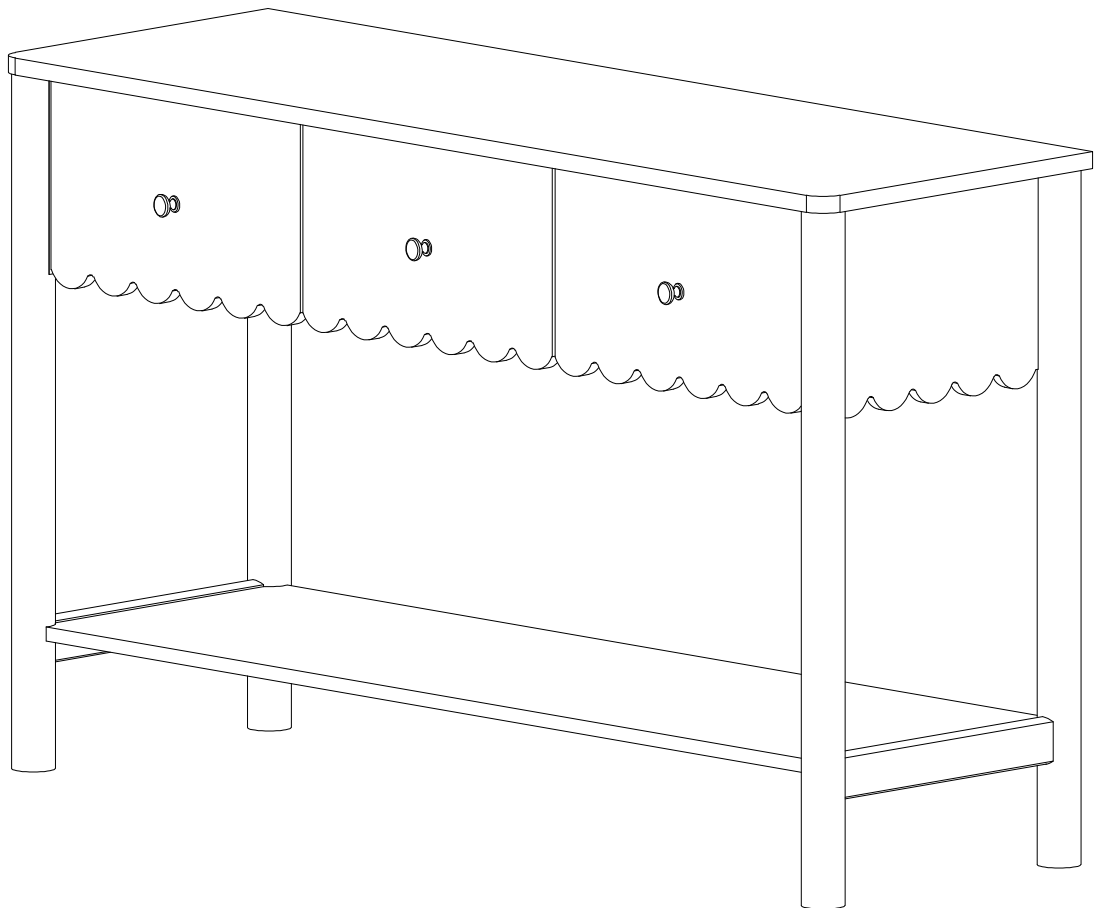

ASSEMBLY INSTRUCTIONS

3 Drawer Console Table

EEL-7154 / V3.06.26.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome. Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.





Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Screw M3 x 12 mm	x6
B		Screw M3.5 x 12 mm	x18
C		Screw M4.5 x 32 mm	x3
D		Screw M6 x 9 mm	x12
E		Screw M6 x 13 mm (Head 11mm)	x4
F		Screw M6 x40 mm	x14
G		Wood Dowel Ø6x 20 mm	x14
H		Wood Dowel Ø8x 25 mm	x24
J		Cam Bolt 20 x 5 mm	x32
K		Cam Lock 15/12	x22
L		Cam Lock 15/10	x10
M		Handle	x3
N1		Drawer Slide CR (300mm)	x3
N2		Drawer Slide CL (300mm)	x3
P1		Drawer Slide DR (300mm)	x3
P2		Drawer Slide DL (300mm)	x3
Q		Plastic Leg Stud	x4
R		Allen Key	x1
S		Metal Support Bar	x1
T		Tipping Restraint Kit	x2

WHAT YOU NEED:




Phillips Head Screwdriver



Mallet

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

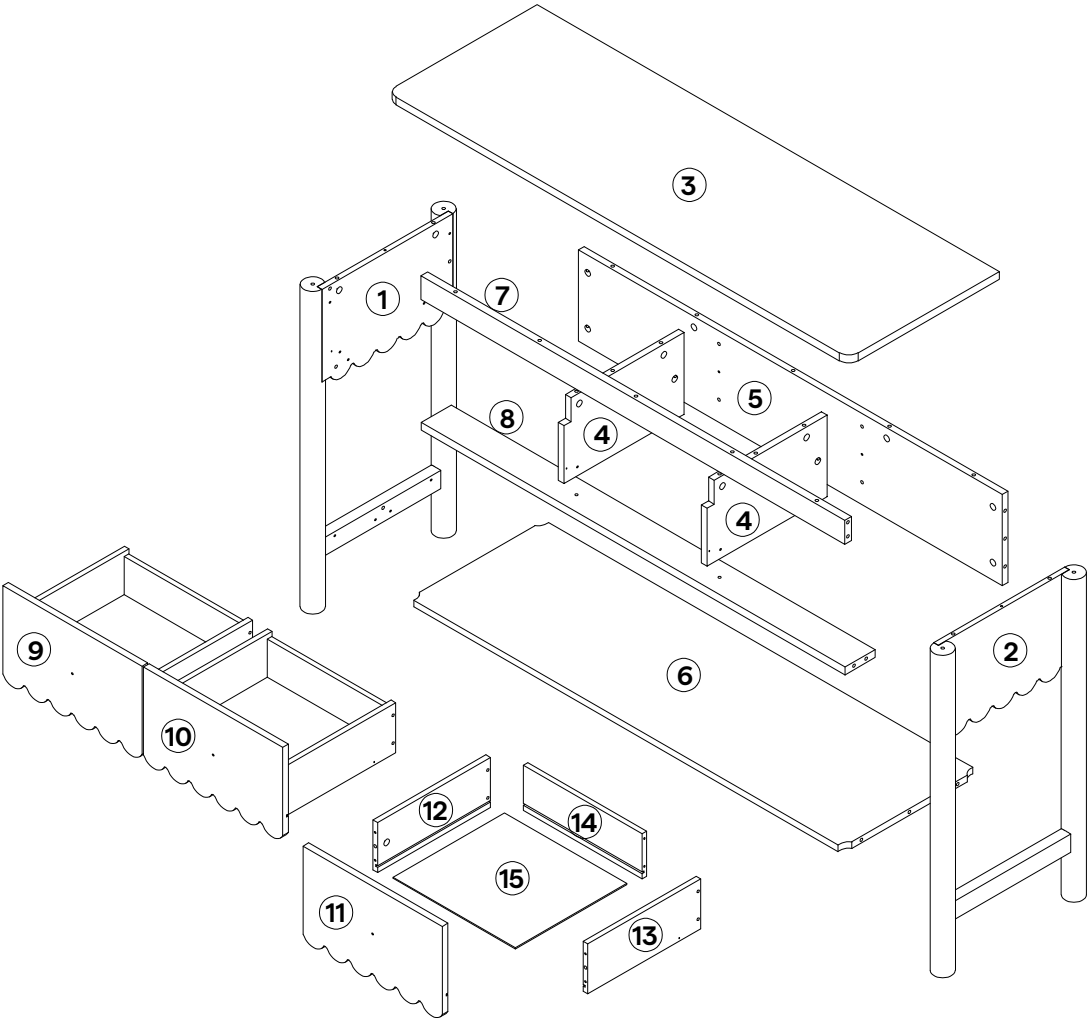

1	Left Side Panel	x1	6	Bottom Panel	x1	11	Right Drawer Front	x1
2	Right Side Panel	x1	7	Front Rail Panel Top	x1	12	Left Drawer Side	x3
3	Top Panel	x1	8	Rail Panel	x1	13	Right Drawer Side	x3
4	Divider Panel	x2	9	Left Drawer Front	x1	14	Drawer Back	x3
5	Back Panel	x1	10	Center Drawer Front	x1	15	Drawer Bottom	x3

HARDWARE

- G** Wood Dowel Ø6 x 20mm x2
H Wood Dowel Ø8 x 25mm x24
J Cam Bolt 20 x 5 mm x14


COMPONENTS

- 1** Left Side Panel x1
2 Right Side Panel x1
4 Divider Panel x2
5 Back Panel x1
6 Bottom Panel x1
7 Front Rail Panel Top x1
8 Rail Panel x1

1.1 Insert **Wood Dowel (G)** into the innermost pre-drilled holes on the top edge of **Left Side Panel (1)** and **Right Side Panel (2)**.

1.2 Insert **Wood Dowel (H)** into the innermost pre-drilled holes on the top edge of **Left Side Panel (1)**, **Right Side Panel (2)**, **Divider Panel (4)**, **Back Panel (5)** and **Front Rail Panel Top (7)** left and right edge of **Back Panel (5)**, **Bottom Panel (6)**, **Front Rail Panel Top (7)**, **Rail Panel (8)** and right edge of **Divider Panel (4)**.

1.3 Insert **Cam Bolt (J)** into the innermost pre-drilled holes on the right side of **Left Side Panel (1)**, left side of **Right Side Panel (2)** and front side of **Back Panel (5)**.

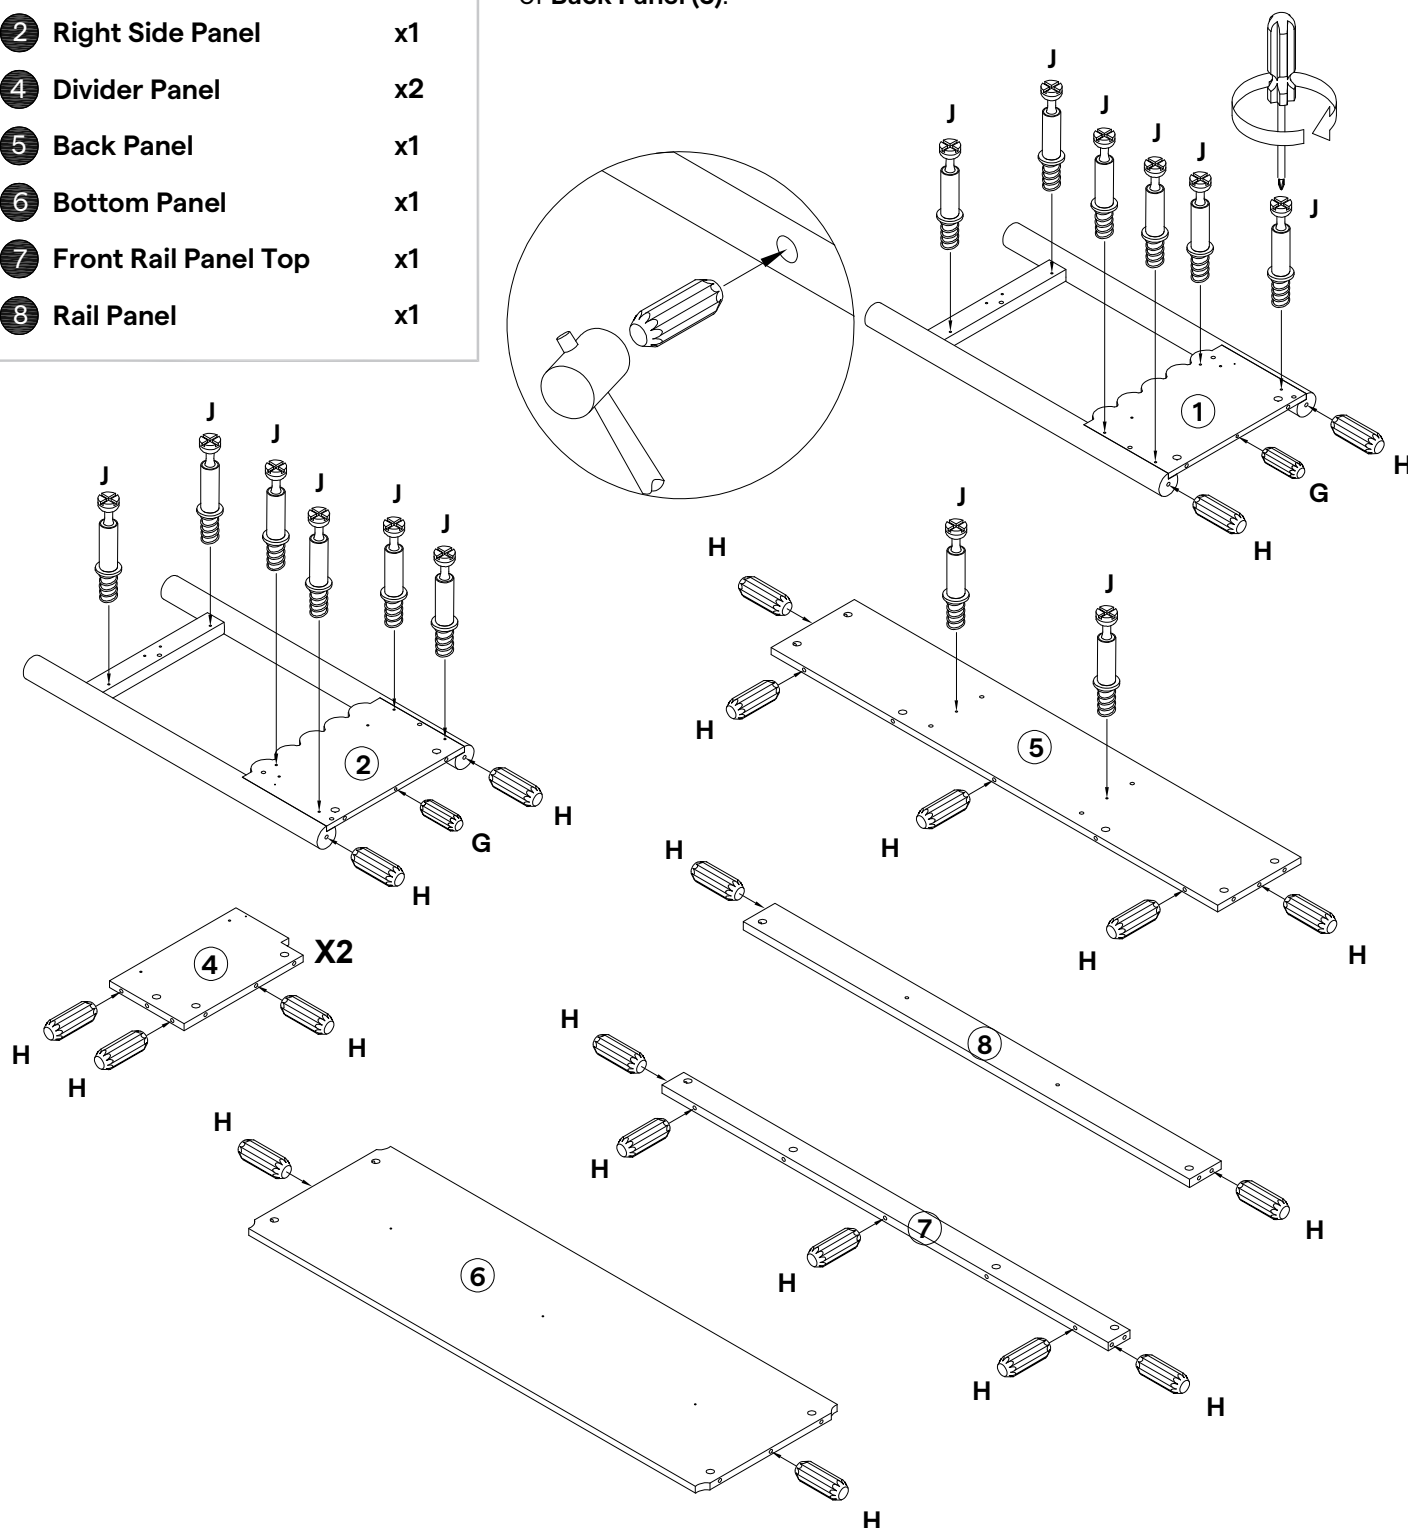

HARDWARE





- A** Screw M3 x 12mm x2
- D** Screw M6 x 9mm x4
- N1** Drawer Slide CR (300mm) x1
- N2** Drawer Slide CL (300mm) x1

COMPONENTS

- 1** Left Side Panel x1
- 2** Right Side Panel x1

2.1 Attach **Drawer Slide CL (N2)** to the right side of **Left Side Panel (1)** using **Screw (A)** and **Screw (D)**.

2.2 Attach **Drawer Slide CR (N1)** to the left side of **Right Side Panel (2)** using **Screw (A)** and **Screw (D)**.

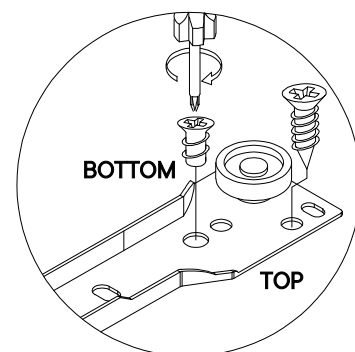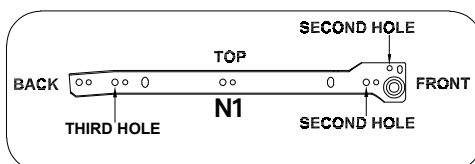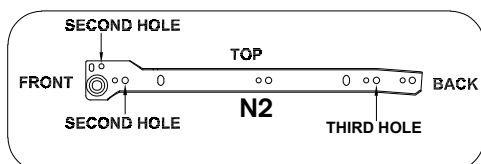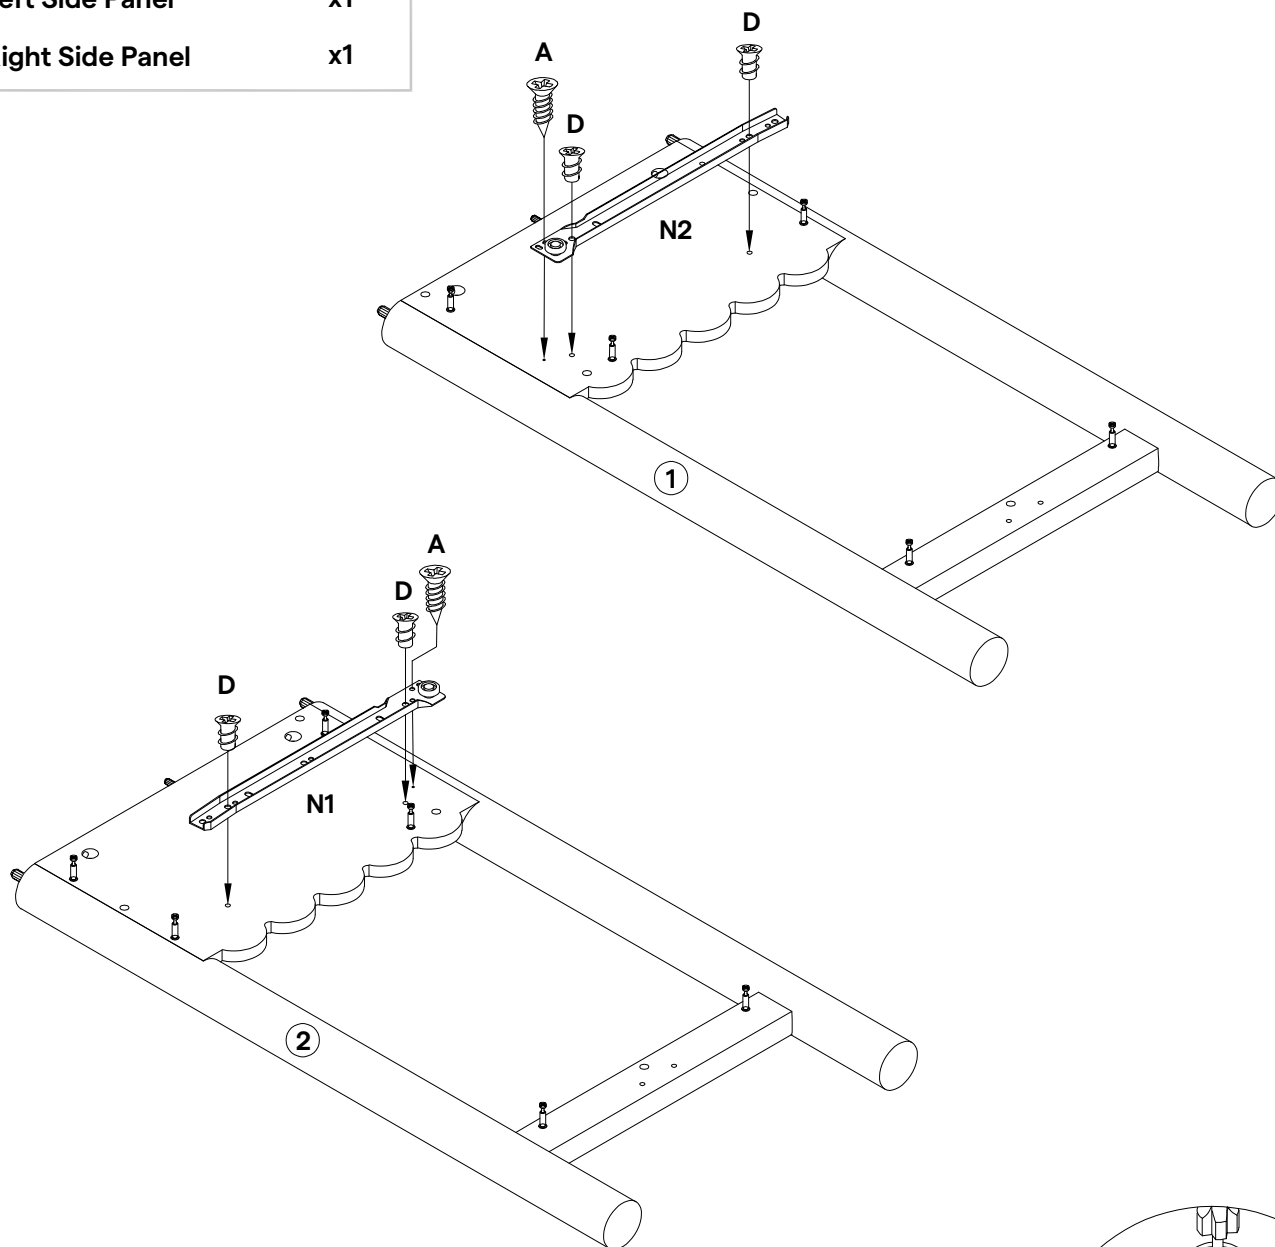

HARDWARE




- A** Screw M3 x 12mm x4
- D** Screw M6 x 9mm x8
- N1** Drawer Slide CR (300mm) x2
- N2** Drawer Slide CL (300mm) x2

COMPONENTS

- 4** Divider Panel x1

3.1 Attach **Drawer Slide CL (N2)** to the right side of **Divider Panel (4)** using **Screw (A)** and **Screw (D)**.

3.2 Attach **Drawer Slide CR (N1)** to the left side of **Divider Panel (4)** using **Screw (A)** and **Screw (D)**.

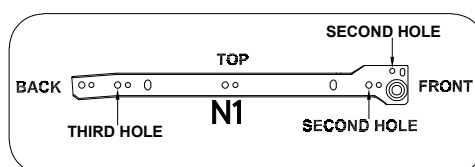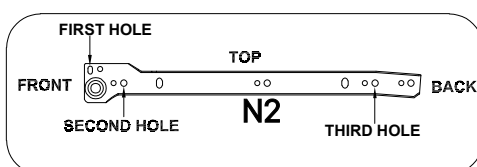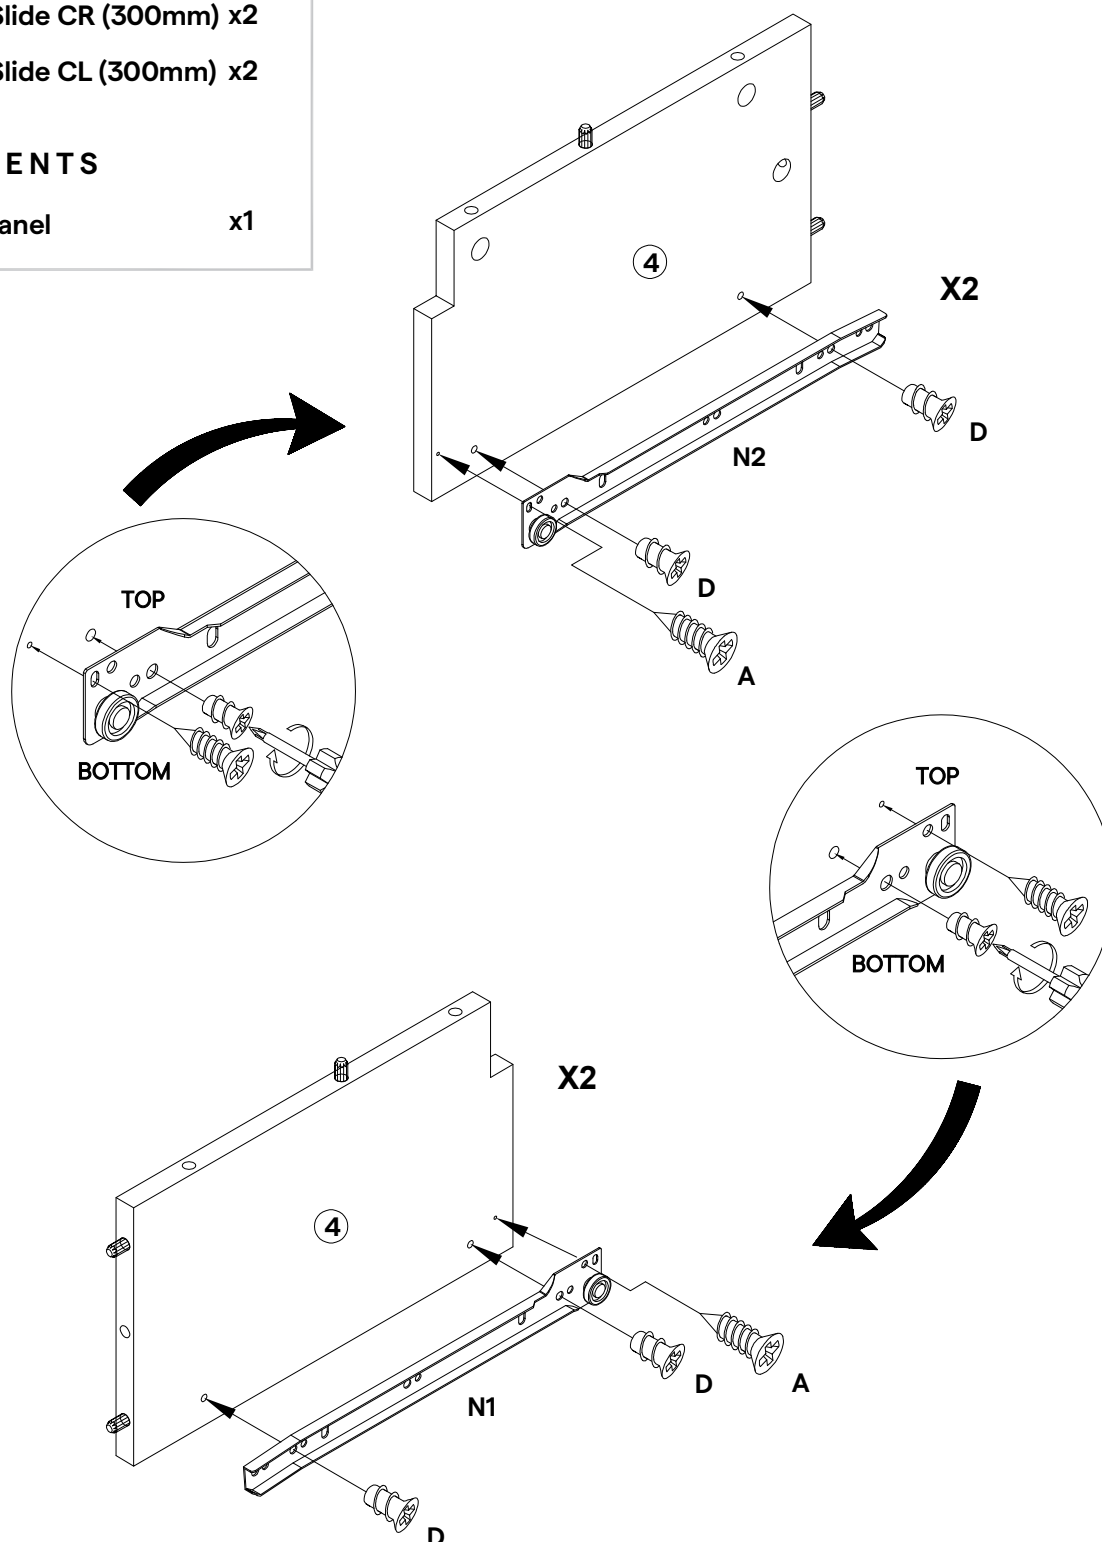

HARDWARE


K Cam Lock 15/12 x2

COMPONENTS

4 Divider Panel x2

5 Back Panel x1

4.1 Connect **Divider Panel (4)** to **Back Panel (5)** by inserting **Cam Lock (K)** to the corresponding holes.

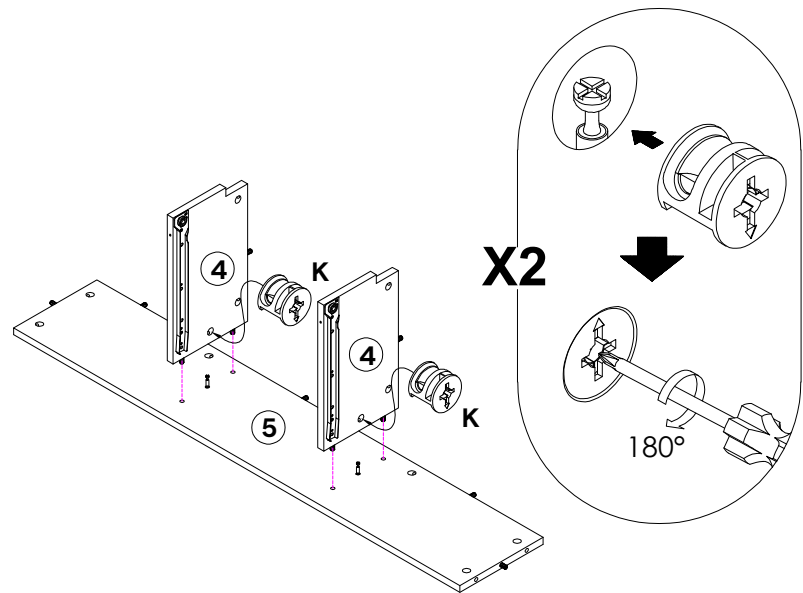

STEP 05

HARDWARE

F Screw M6 x 40 mm x2

COMPONENTS


4 Divider Panel x2

8 Rail Panel x1

TOOLS

R Allen Key

5.1 Secure **Rail Panel (8)** to **Divider Panel (4)** with **Screw (F)** using the provided **Allen Key (R)**.

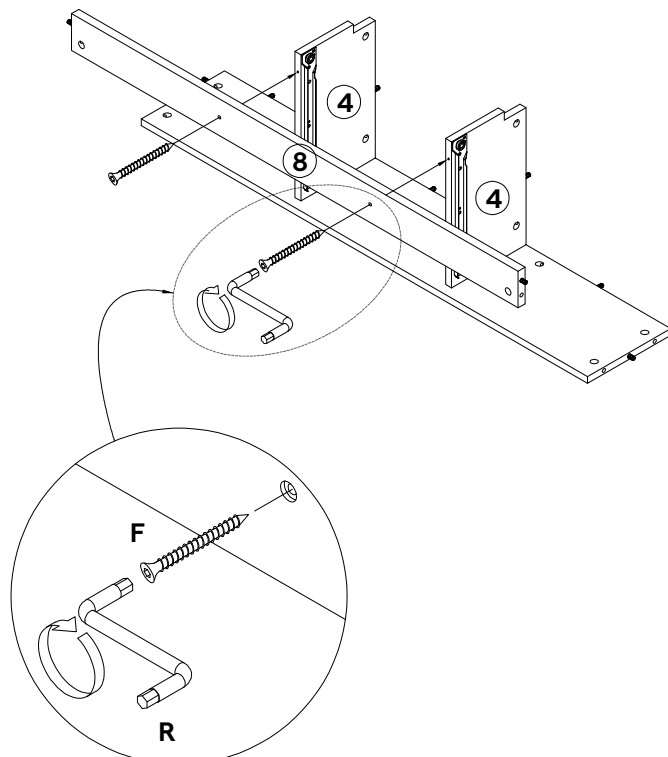

HARDWARE

K Cam Lock 15/12 x4

COMPONENTS



1 Left Side Panel x1

5 Back Panel x1

7 Front Rail Panel Top x1

8 Left Drawer Front x1

6.1 Connect **Left Side Panel (1)** to **Back Panel (5)**, **Front Rail Panel Top (7)** and **Left Drawer Front (8)** by inserting **Cam Lock (K)** to the corresponding holes.

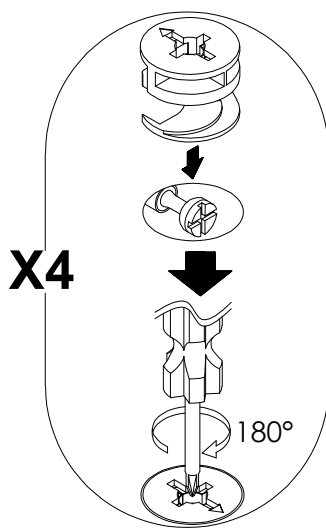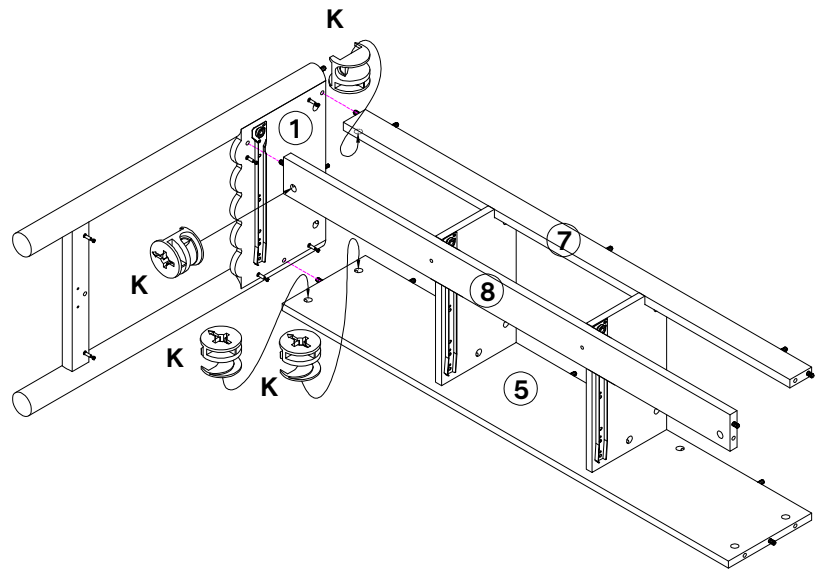

STEP 07

HARDWARE


C Screw M4.5 x 32 mm x3

S Metal Support Bar x1

COMPONENTS

6 Bottom Panel x1

7.1 Secure **Metal Support Bar (S)** to the bottom side of **Bottom Panel (6)** with **Screw (C)**.

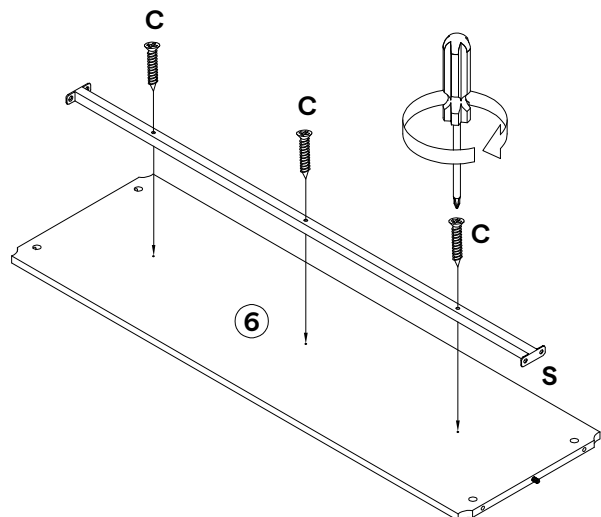

HARDWARE

E Screw M6 x 13 mm (Head 11mm) x2



K Cam Lock 15/12 x2

COMPONENTS

1 Left Side Panel x1

6 Bottom Panel x1

8.1 Secure **Bottom Panel (6)** to **Left Side Panel (1)** with **Screw (E)** and by Inserting **Cam Lock (K)** to the corresponding holes.

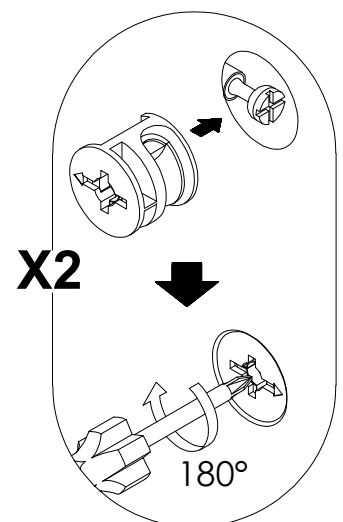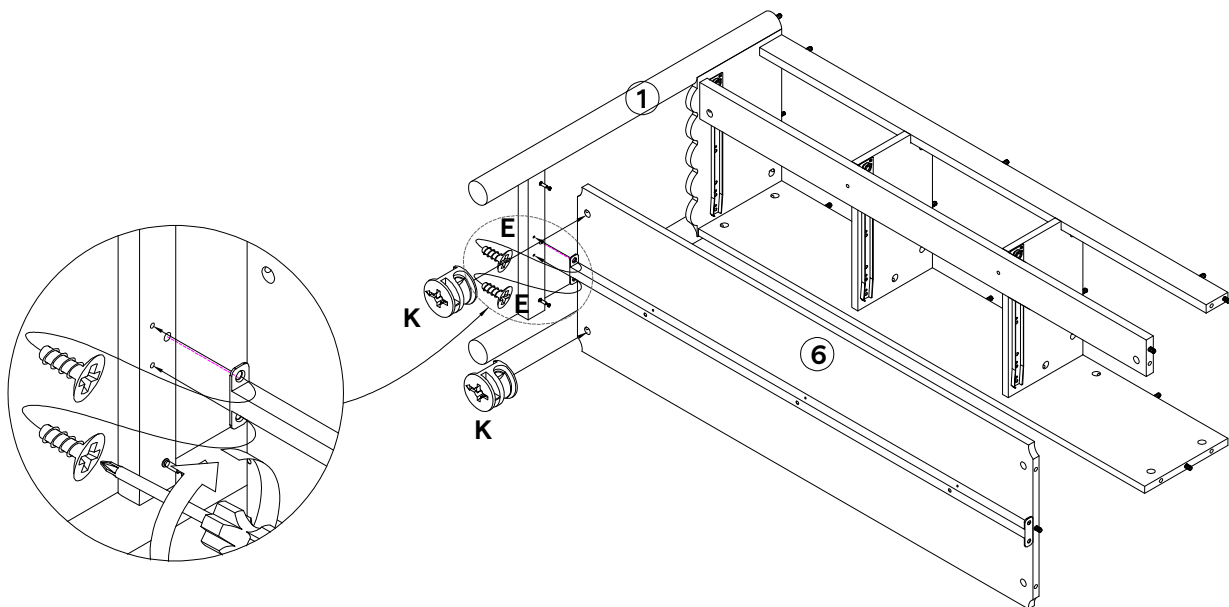

HARDWARE

E Screw M6 x 13 mm (Head 11mm) x2

K Cam Lock 15/12 x6

Q Plastic Leg Stud x4

COMPONENTS

1 Left Side Panel x1

2 Right Side Panel x1

5 Back Panel x1


6 Bottom Panel x1

7 Front Rail Panel Top x1

8 Rail Panel x1

9.1 Connect **Right Side Panel (2)** to **Back Panel (5)**, **Front Rail Panel Top (7)**, and **Rail Panel (8)** by inserting **Cam Lock (K)** to the corresponding holes and to **Bottom Panel (6)** with **Screw (E)** and by inserting **Cam Lock (K)** to the corresponding holes.

9.2 Insert **Plastic Leg Stud (Q)** to the bottom side of **Left Side Panel (1)** and **Right Side Panel (2)**.

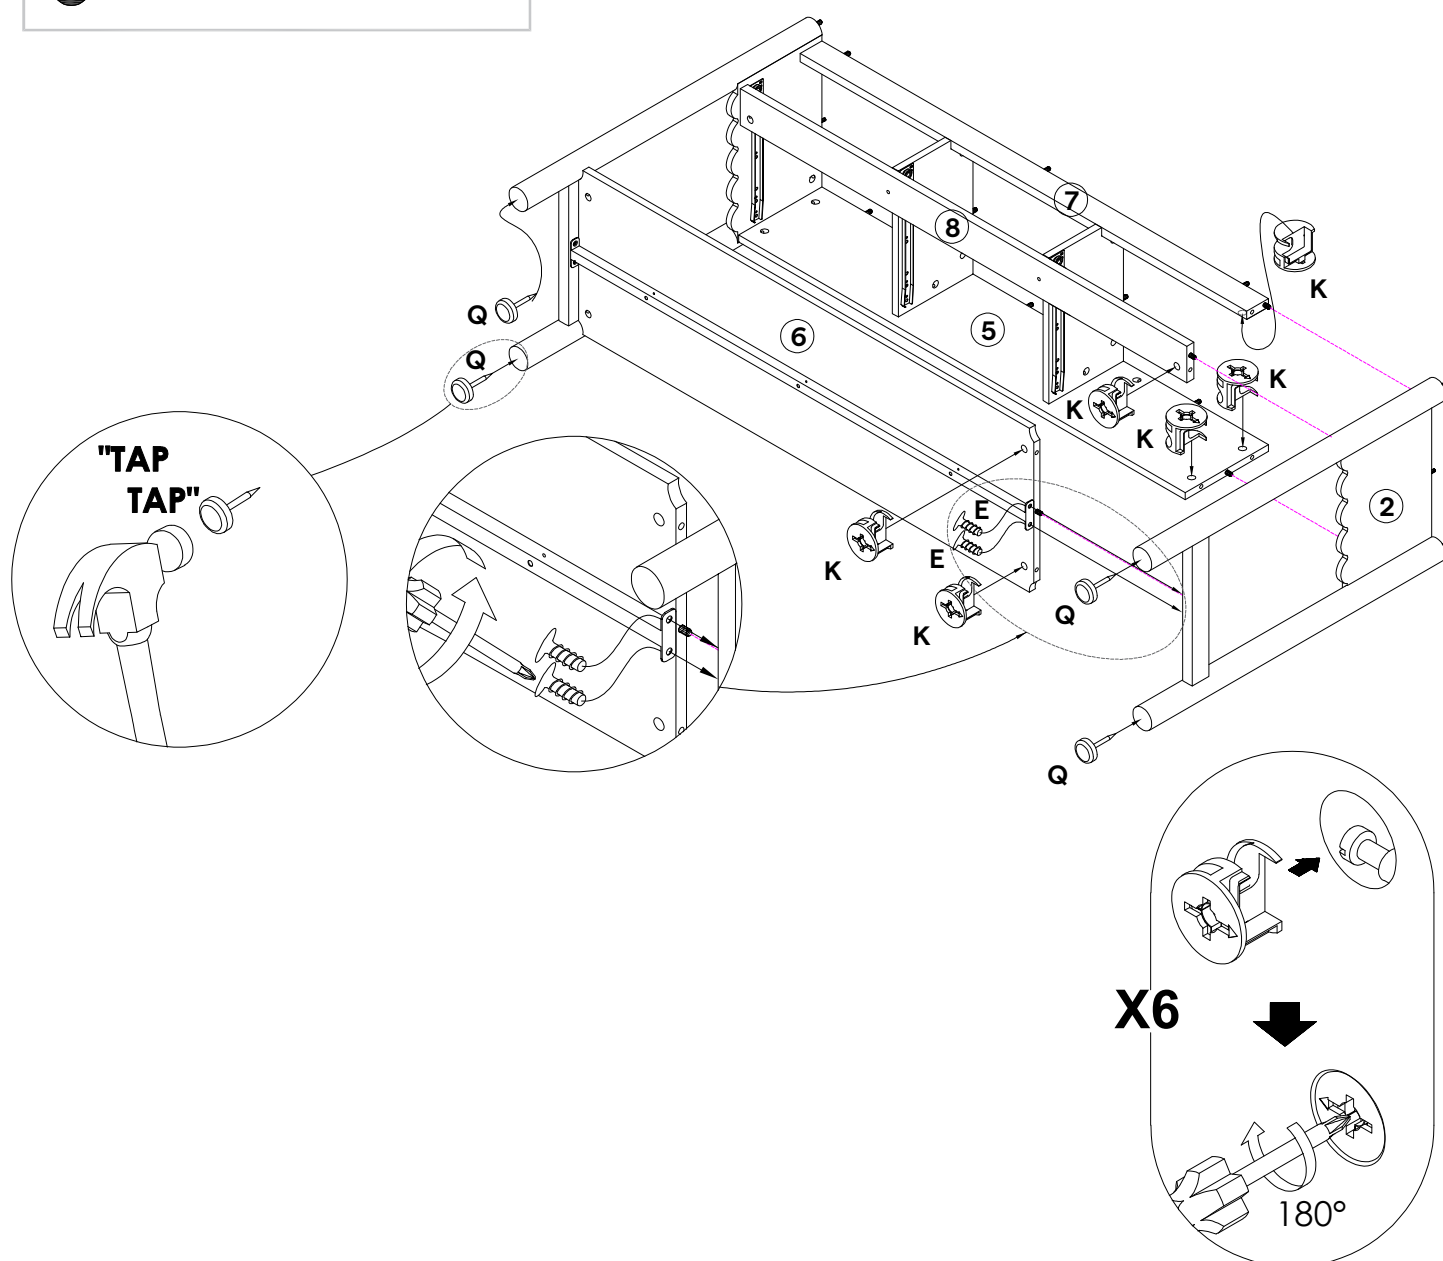


HARDWARE

J Cam Bolt 20 x 5 mm x12

COMPONENTS

3 Top Panel x1

10.1 Insert **Cam Bolt (J)** into the innermost pre-drilled holes on the bottom side of **Top Panel (3)**.

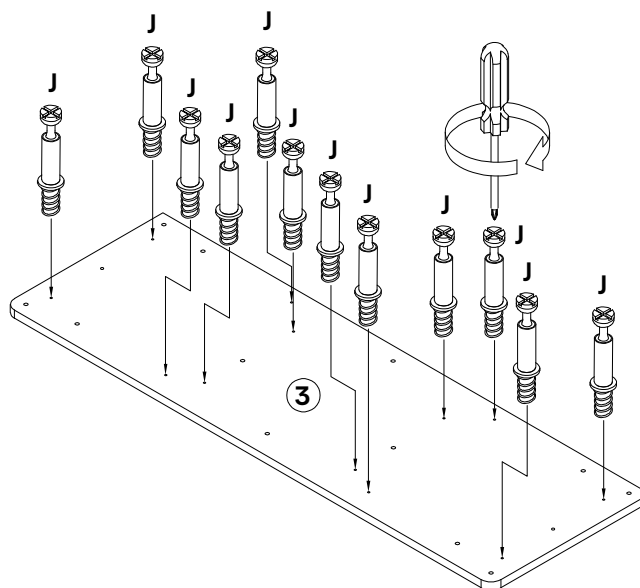

STEP 11

HARDWARE

K Cam Lock 15/12 x8

L Cam Lock 15/10 x4

COMPONENTS

1 Left Side Panel x1

2 Right Side Panel x1



3 Top Panel x1

4 Divider Panel x2

5 Back Panel x1

7 Front Rail Panel Top x1


11.1 Connect **Top Panel (3)** to **Left Side Panel (1)**, **Right Side Panel (2)**, **Divider Panel (4)** and **Back Panel (5)** by inserting **Cam Lock (K)** and **Cam Lock (L)** to the corresponding holes.

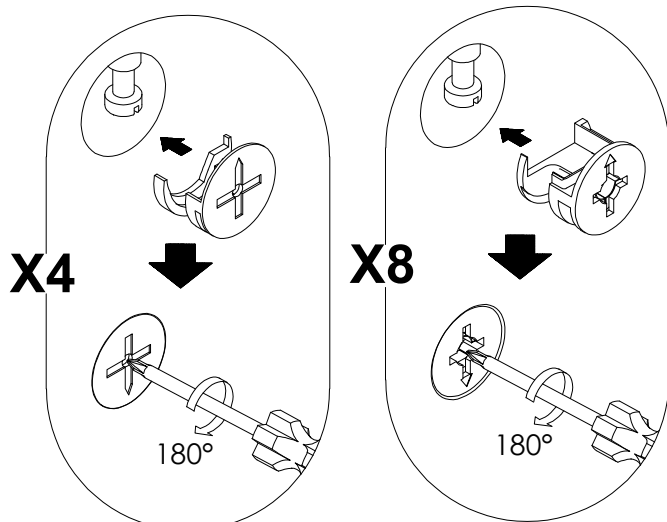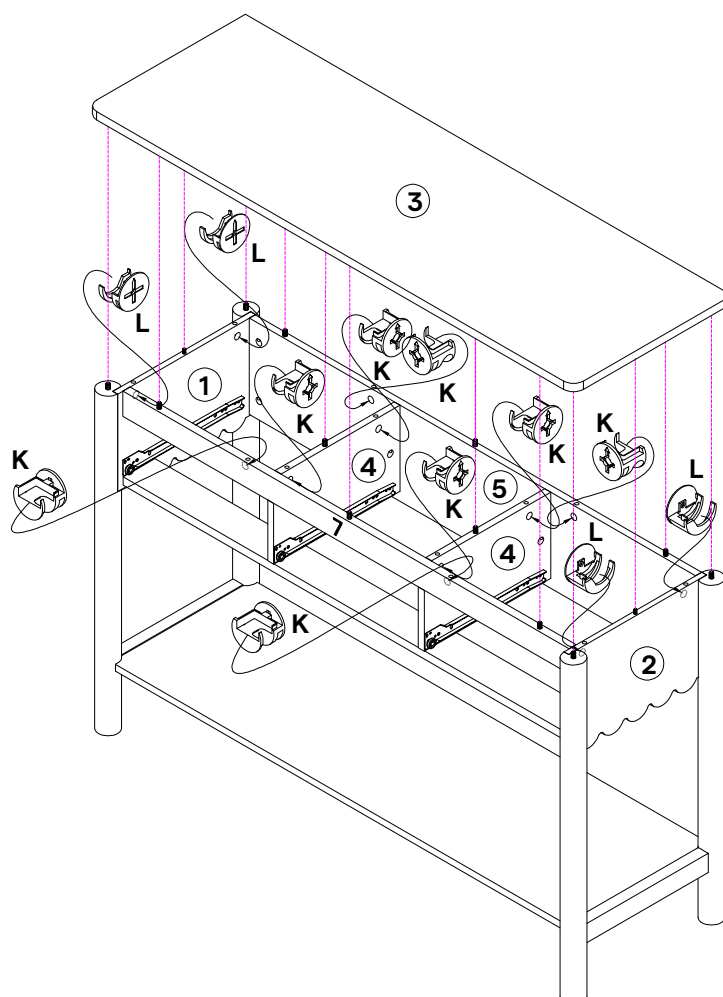

HARDWARE**G** Wood Dowel Ø6 x 20mm x12**J** Cam Bolt 20 x 5 mm x6**COMPONENTS****9** Left Drawer Front x1**10** Center Drawer Front x1**11** Right Drawer Front x1**12** Left Drawer Side x3**13** Right Drawer Side x3

12.1 Insert **Wood Dowel (G)** into the innermost pre-drilled holes on the left edge of **Left Drawer Side (12)** and **Right Drawer Side (13)**.

12.2 Insert **Cam Bolt (J)** into the innermost pre-drilled holes on the back side of **Left Drawer Front (9)**, **Center Drawer Front (10)** and **Right Drawer Front (11)**.

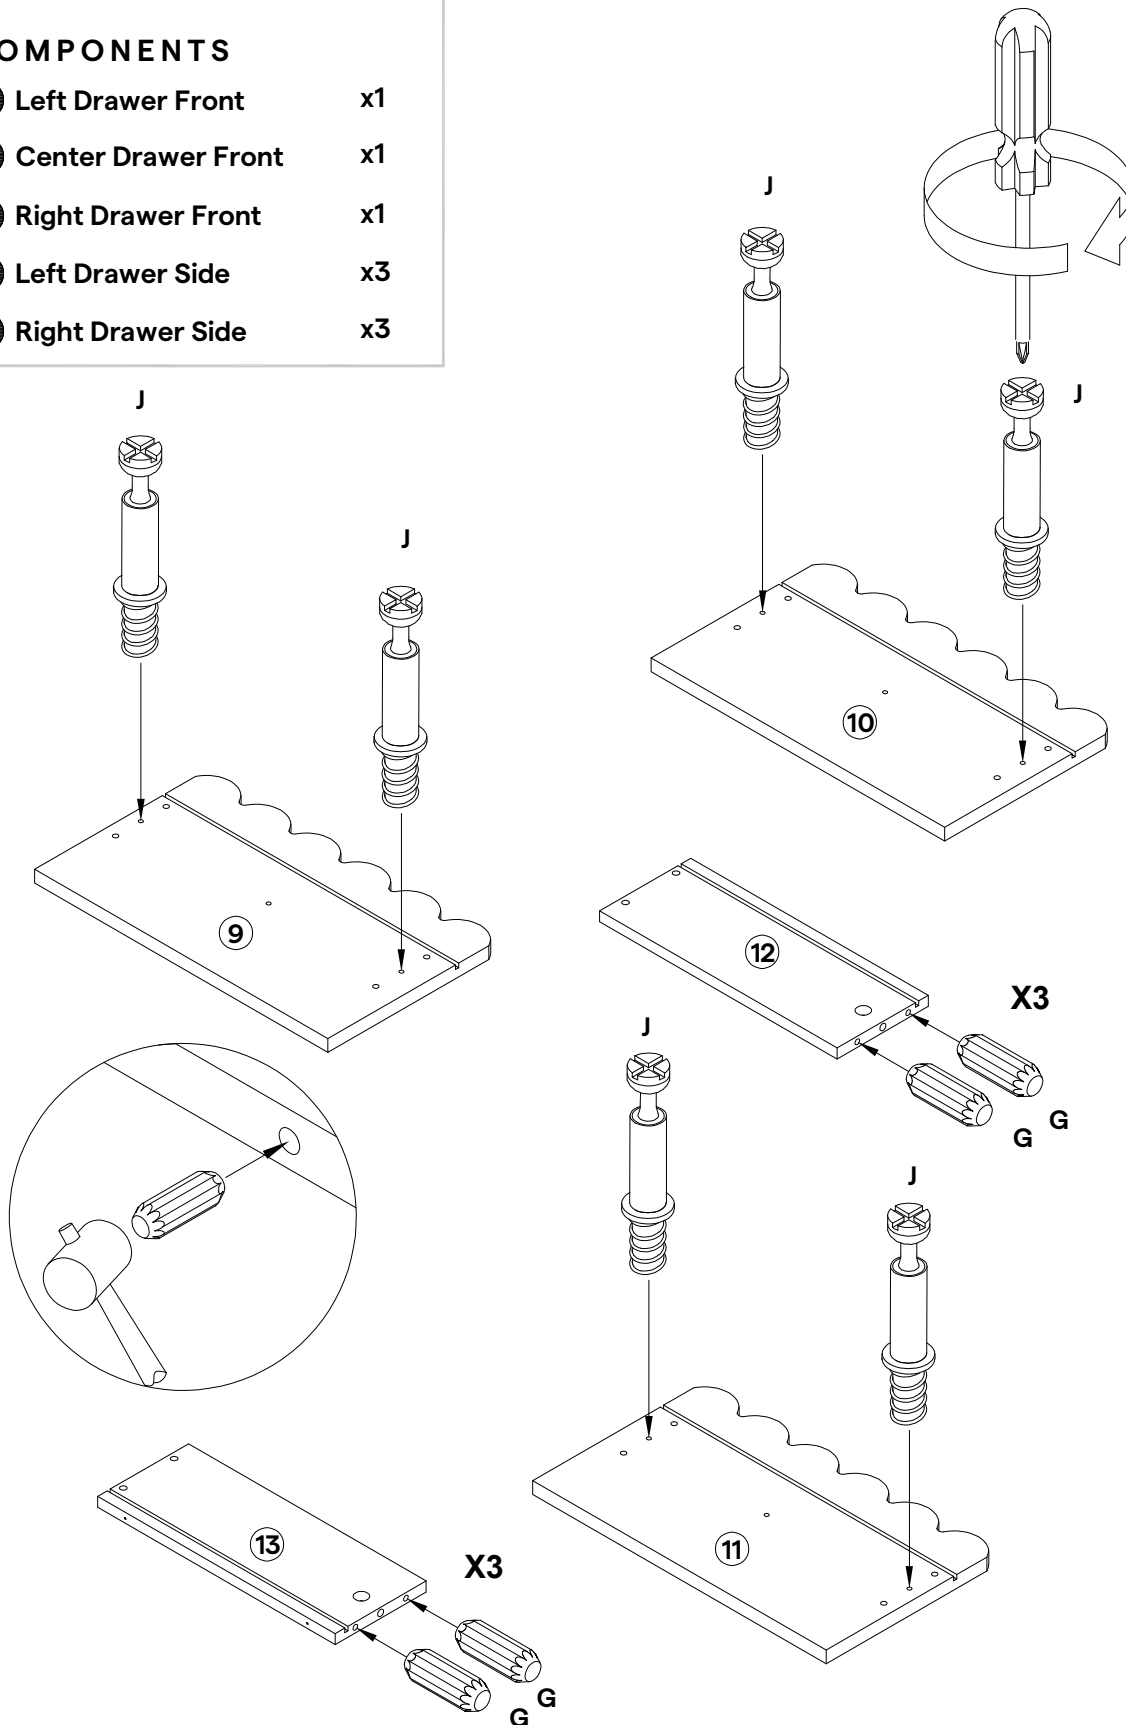

HARDWARE

L Cam Lock 15/10 x6

COMPONENTS

9 Left Drawer Front x1

10 Center Drawer Front x1

11 Right Drawer Front x1


12 Left Drawer Side x3

13 Right Drawer Side x3

15 Drawer Bottom x3

13.1 Connect **Left Drawer Side (12)** and **Right Drawer Side (13)** to **Left Drawer Front (9)**, **Center Drawer Front (10)**, **Right Drawer Side (12)** by inserting **Cam Lock (L)** to the corresponding holes.

13.2 Insert the **Drawer Bottom (15)** into the drawer body.

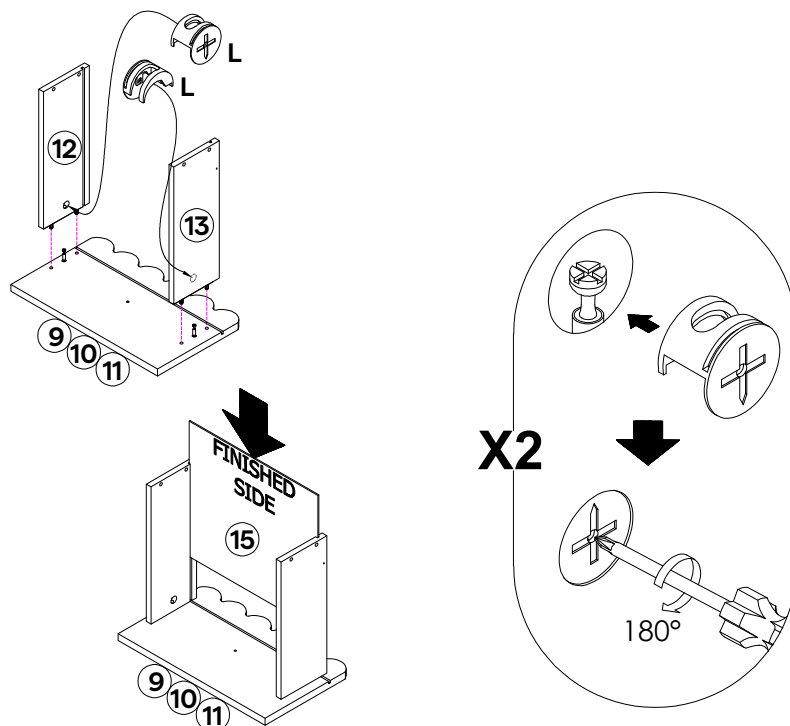

STEP 14

HARDWARE

F Screw M6 x 40 mm x12

COMPONENTS

12 Left Drawer Side x3


13 Right Drawer Side x3

14 Drawer Back x3

TOOLS


R Allen Key

14.1 Secure **Drawer Back (14)** to **Left Drawer Side (12)** and **Right Drawer Side (13)** with **Screw (F)** using the provided **Allen Key (R)**.

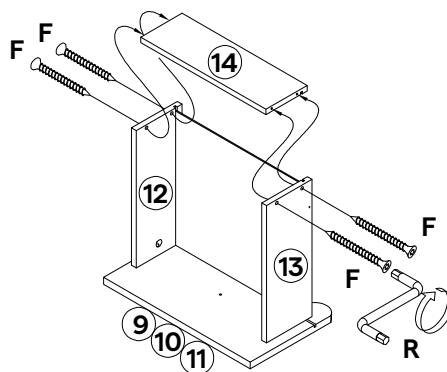

HARDWARE**M** Handle x3**COMPONENTS****9** Left Drawer Front x1**10** Center Drawer Front x1**11** Right Drawer Front x1

15.1 Attach Handle (**M**) to Left Drawer Front (**9**), Center Drawer Front (**10**) and Right Drawer Front (**11**).

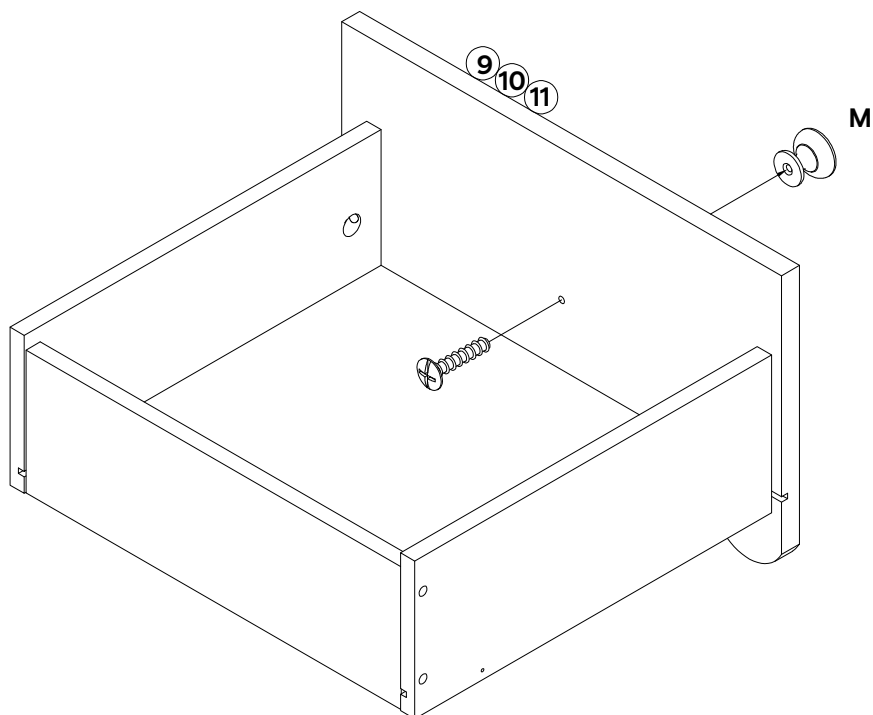

HARDWARE

B Screw M3.5 x 12 mm x18

P1 Drawer Slide DR (300mm) x3






P2 Drawer Slide DL (300mm) x3


COMPONENTS

12 Left Drawer Side x3

13 Right Drawer Side x3




16.1 Attach **Drawer Slide DL (P2)** to **Left Drawer Side (12)** and Attach **Drawer Slide DR (P1)** to **Right Drawer Side (13)** using **Screw (B)**.

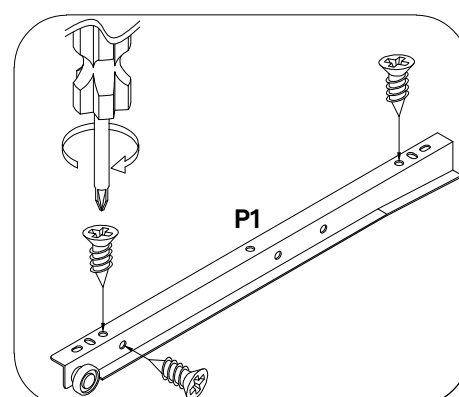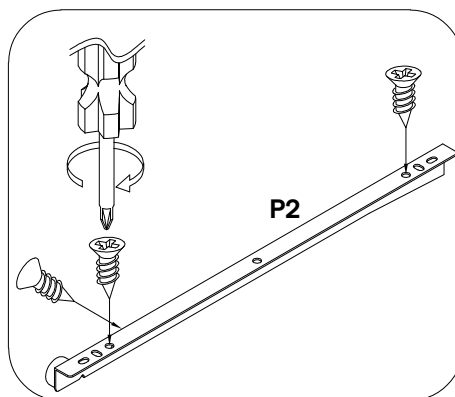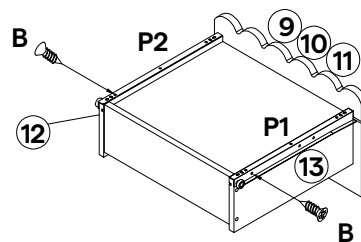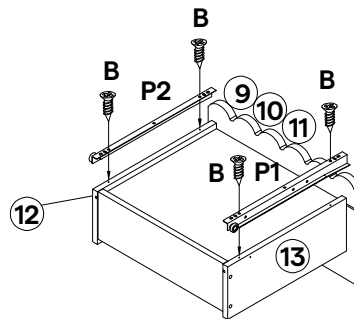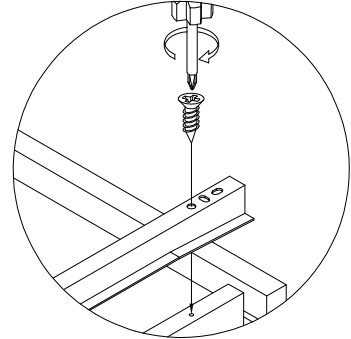

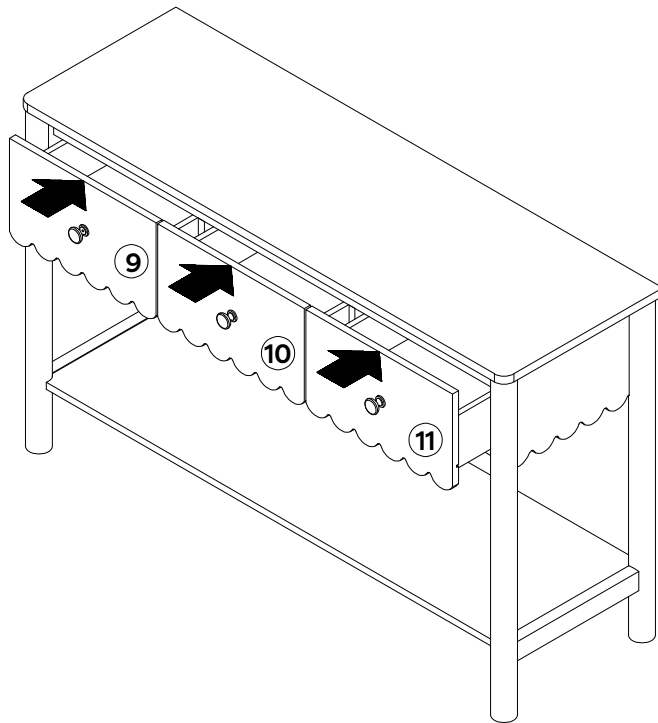

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

This tipping restraint is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

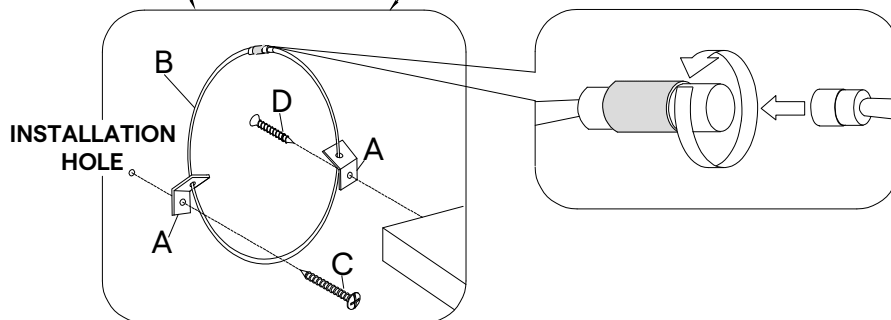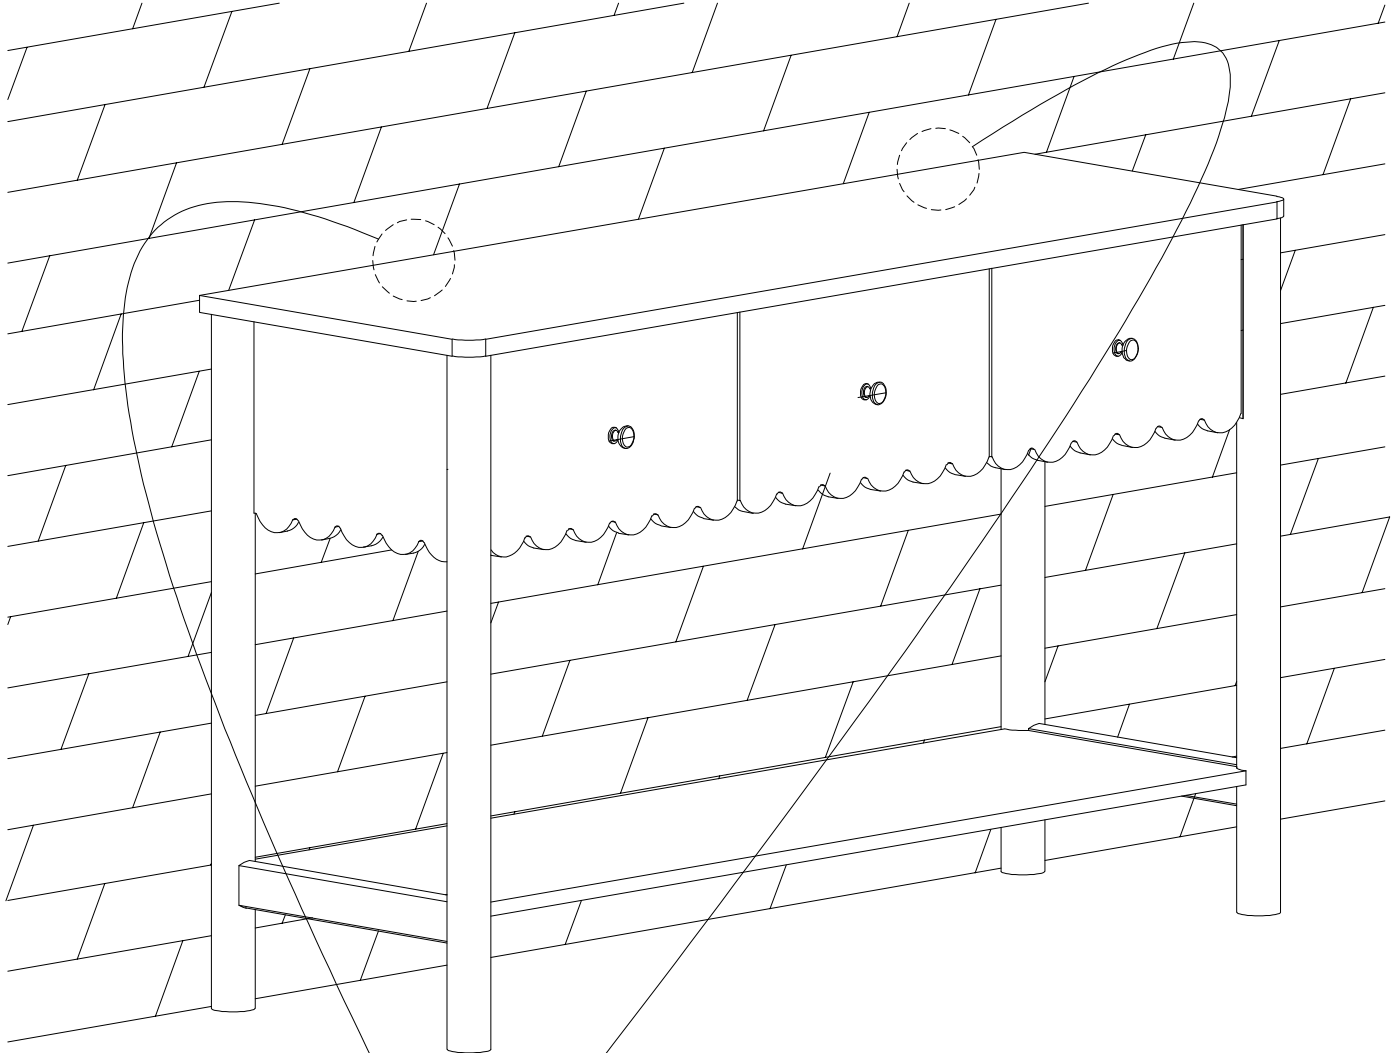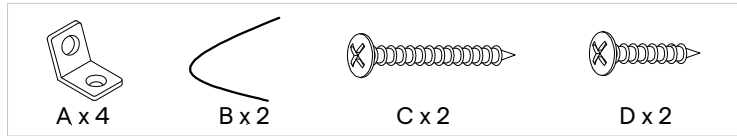

Installation Instructions :


1. Determine where the furniture is to be placed and find the center line of a wooden stud using a stud finder.
2. Drill a 1/8" pilot hole on the wooden stud approximately 3" below the height of unit top.
3. Attach one bracket (A) securely with screw (C) into the pilot hole on the wall.
4. Position the furniture in place and attach the other bracket (A) with screw (D) to the back edge of unit top in line with the bracket (A) on the wall.
5. Put the male end of the steel cable (B) through each bracket. Securely connect both ends together by turning the female connector clockwise.

Great job!

Your console table assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

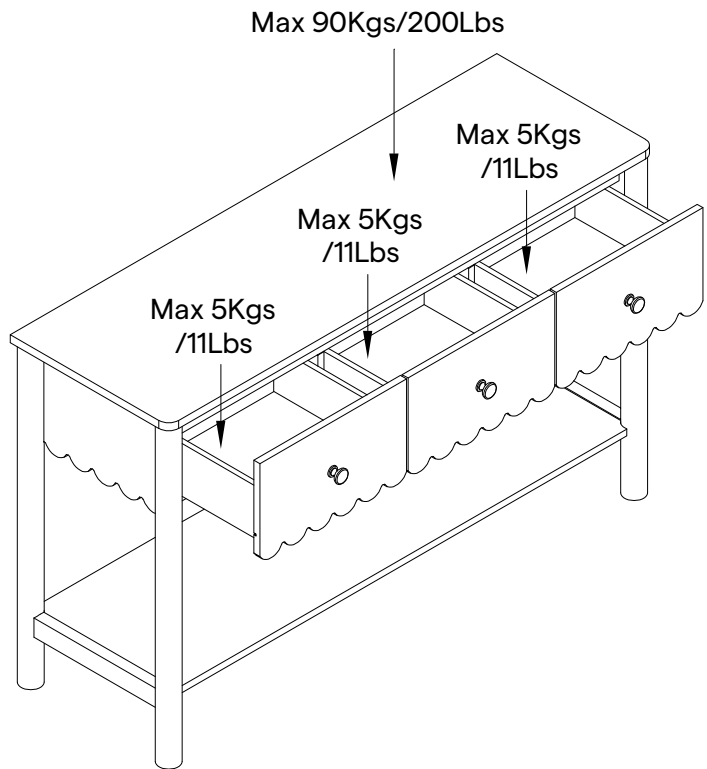

CONNECT WITH US!

Tag us [@modway.furniture](#) and [#MyModwayHome](#) for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com