


EEI-6902

V0.02.02.24

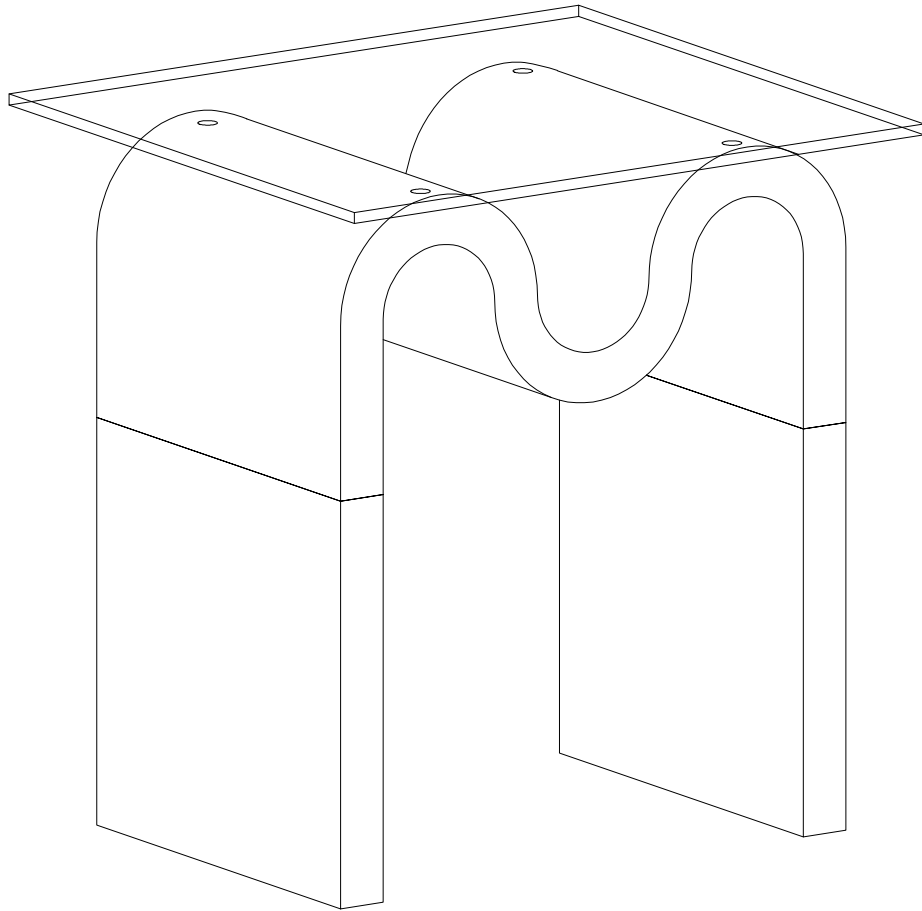

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screw completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screw and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat carpeted area, with plenty of space to work. this will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture component :

1	Top	x1
2	Leg left	x1
3	Leg right	x1
4	Glass	x1

Provided hardware:

A		Wood dowel Ø8 x 40mm	x4
B		Allen bolt M10 x 310mm	x4
C		Washer M10 x 20mm	x4
D		Allen Key 8mm	x1
E		Leveler (pre assembled)	x4
F		Clear Bump-on (pre assembled)	x4

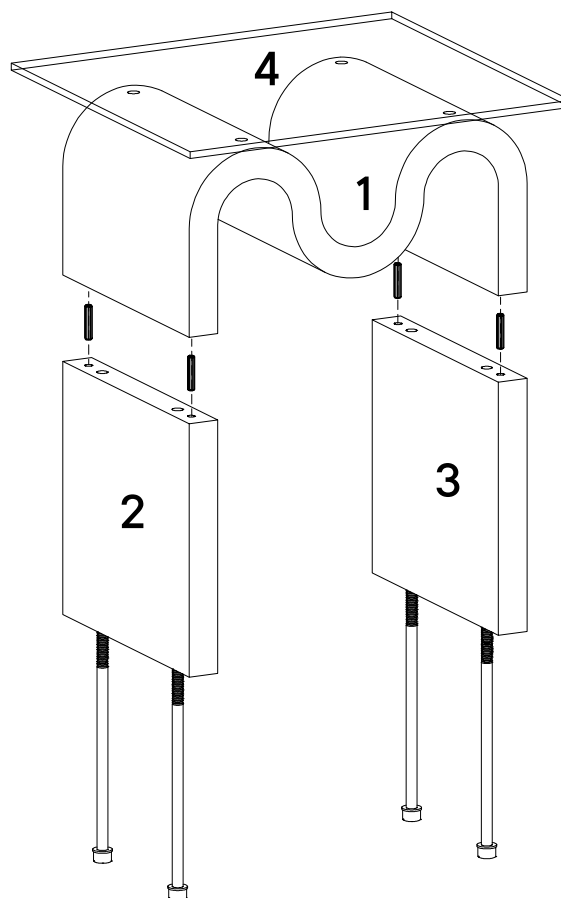

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your items. We're here to help!
609.256.9000 . cs@modway.com


Step 1

HARDWARE

A Wood dowel Ø8 x 40mm x4

COMPONENTS

1 TOP x1

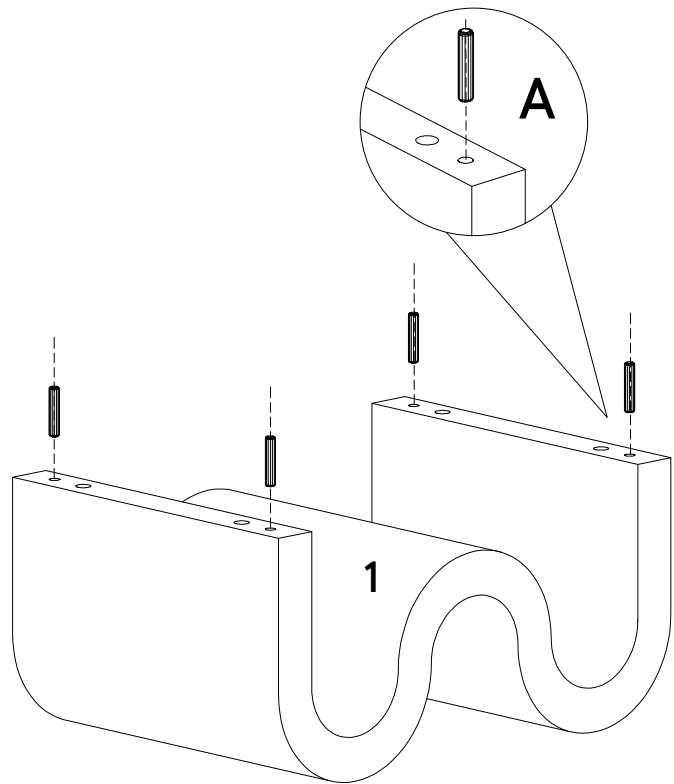


Step 2

COMPONENTS

1 Top x1

2 Leg left x1

3 Leg Right x1

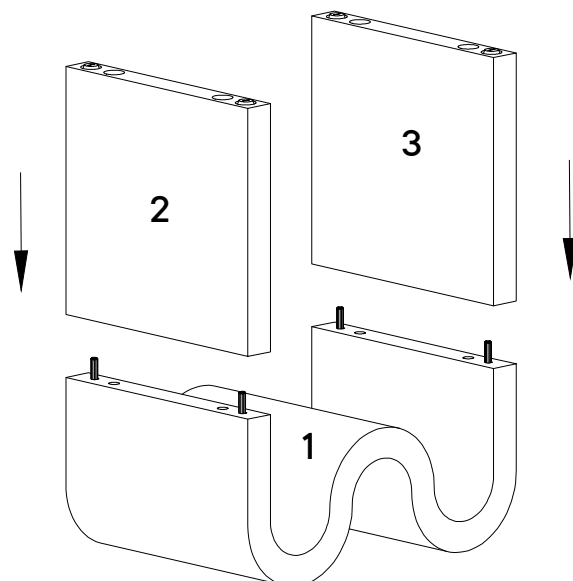

Step 3

HARDWARE


- B** Allen bolt M10 x 310mm x4
- C** Washer M10 x 20mm x4

COMPONENTS

- 1** Top x1
- 2** Leg left x1
- 3** Leg Right x1

TOOLS

- D** Allen Key 8mm x1

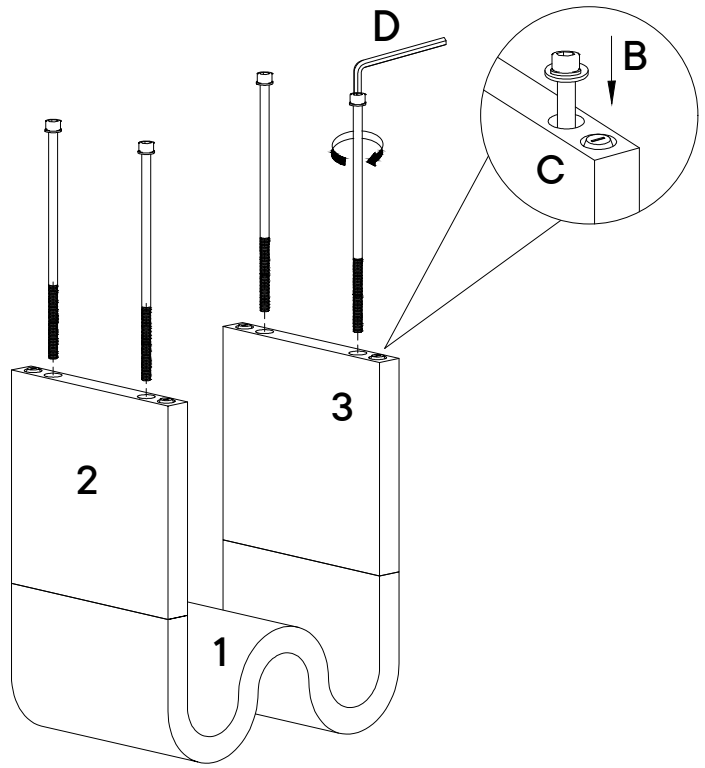

Step 4

HARDWARE


- B** Allen bolt M10 x 310mm x4
- C** Washer M10 x 20mm x4

COMPONENTS

- 1** Top x1
- 2** Leg left x1
- 3** Leg Right x1

TOOLS

- D** Allen Key 8mm x1

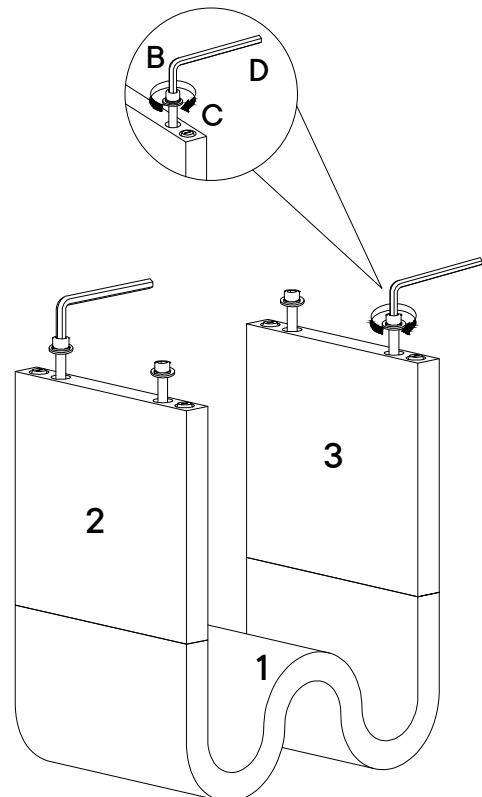

Step 5

HARDWARE


E Leveler (pre assembled) x4

COMPONENTS

1 Top x1

2 Leg left x1

3 Leg Right x1

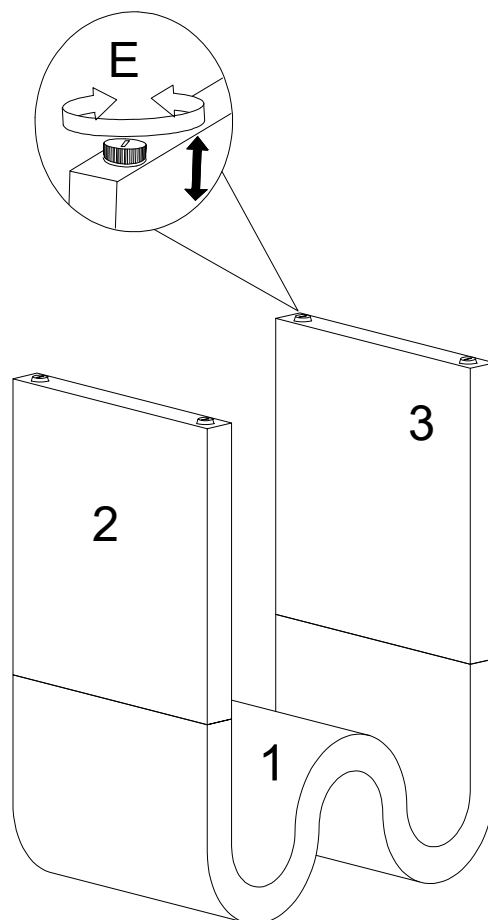

Step 6

HARDWARE


F Clear Bump-on (pre assembled) x4

COMPONENTS

1 Top x1

2 Leg left x1


3 Leg Right x1

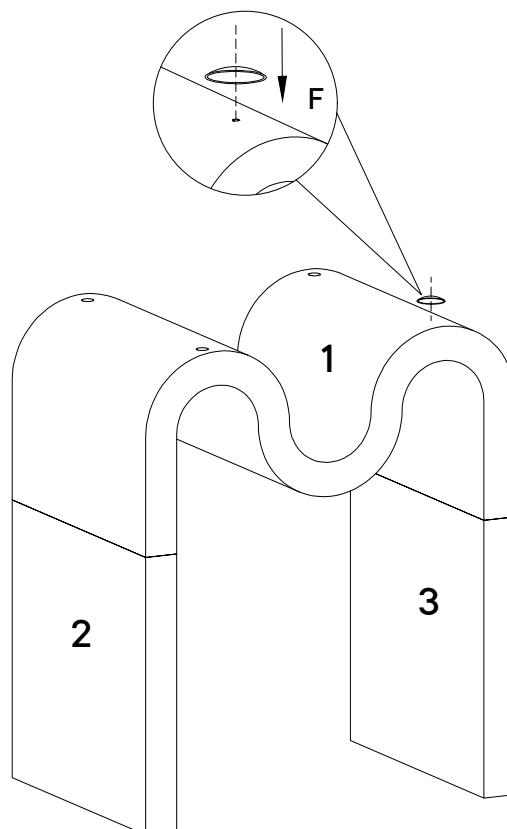

Step 7

COMPONENTS

- | | | |
|---|-----------|----|
| 1 | Top | x1 |
| 2 | Leg left | x1 |
| 3 | Leg Right | x1 |

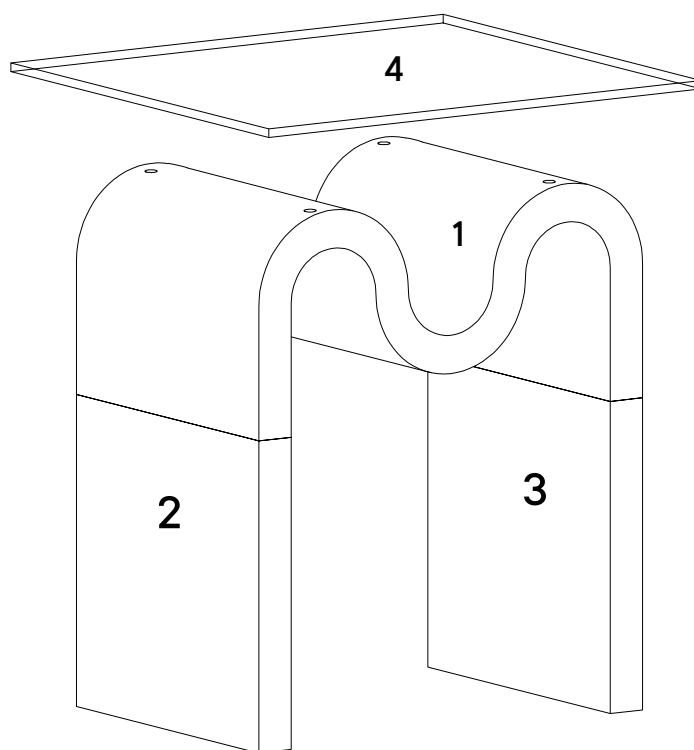

Great job!

Side table assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth
and a mild cleaner.

Never use harsh chemicals,
as they could damage the finish
or integrity of the item.

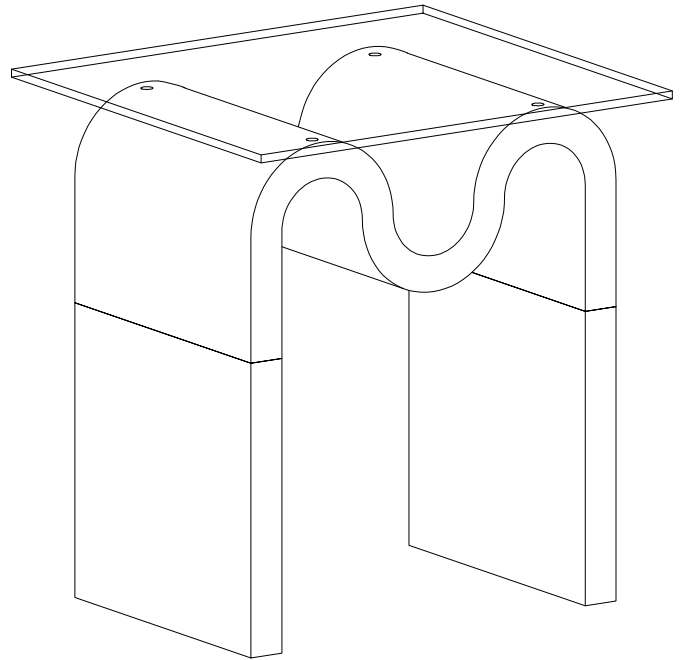

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway**
for a chance to be featured.