


ASSEMBLY INSTRUCTIONS

EEI-6970

V0.03.18.24

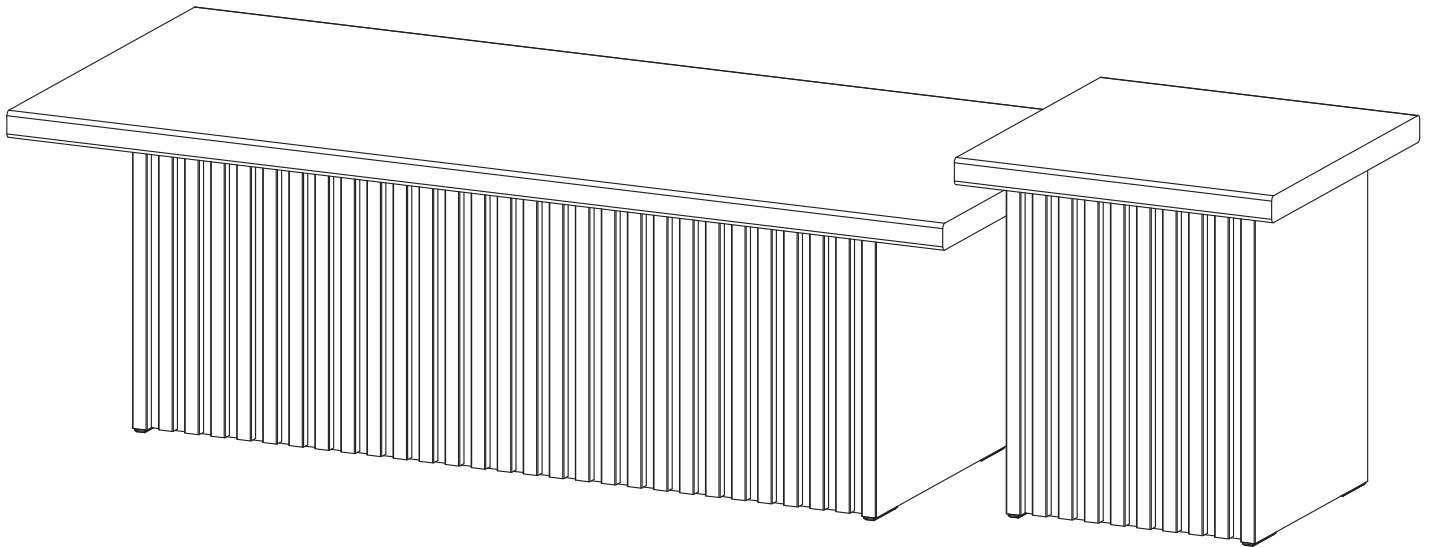

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway

Let's get started!

*modway



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board Big	x1
2	Side Board 1 Big	x2
3	Side Board 2 Big	x2
4	Center Board Big	x1
5	Support Board Big	x2
6	Top Board Small	x1
7	Side Board 1 Small	x2
8	Side Board 2 Small	x2
9	Support Board Small	x2

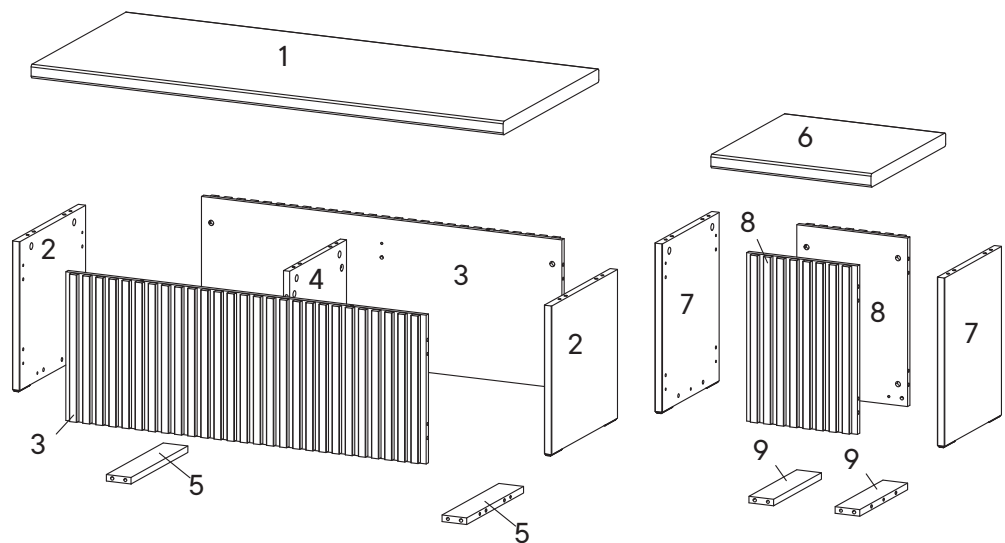


Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x32
B		Cam Bolt Ø6 x 32 mm	x12
C		Cam Lock Ø15 mm	x28
D		Cam Lock Ø12 mm	x16
E		Wood Dowel Ø8 x 30 mm	x30
F		Wood Dowel Ø6 x 30 mm	x20
G		Floor Glide	x10

What you need:



Phillips



Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x18
- E** Wood Dowel Ø8 x 30 mm x18

COMPONENTS

- 1** Top Board Big x1
- 2** Side Board 1 Big x2
- 4** Center Board Big x1
- 5** Support Board Big x2

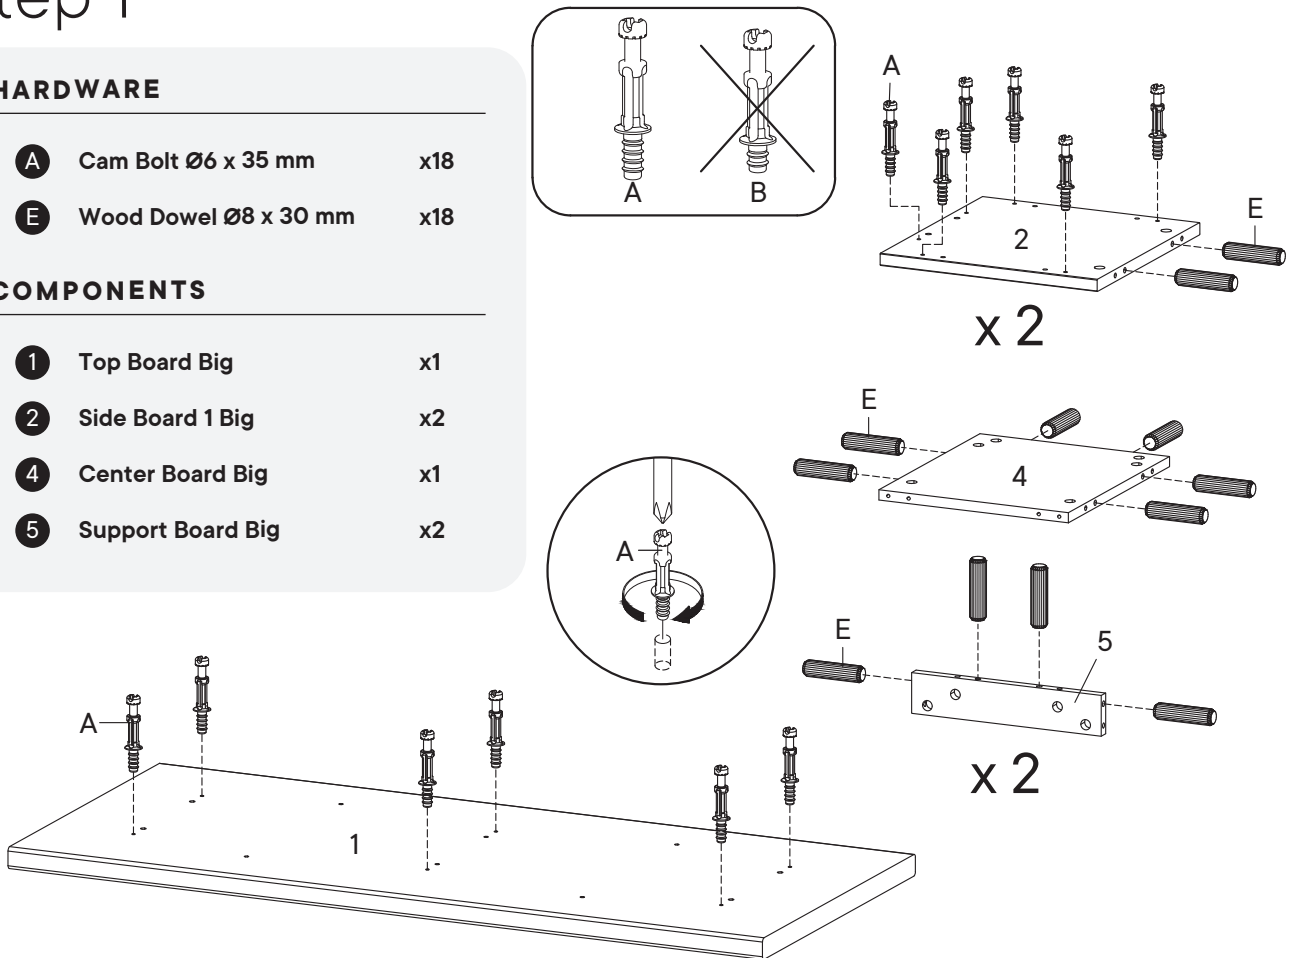


Step 2

HARDWARE

- B** Cam Bolt Ø6 x 32 mm x8
- F** Wood Dowel Ø6 x 30 mm x12

COMPONENTS

- 3** Side Board 2 Big x2

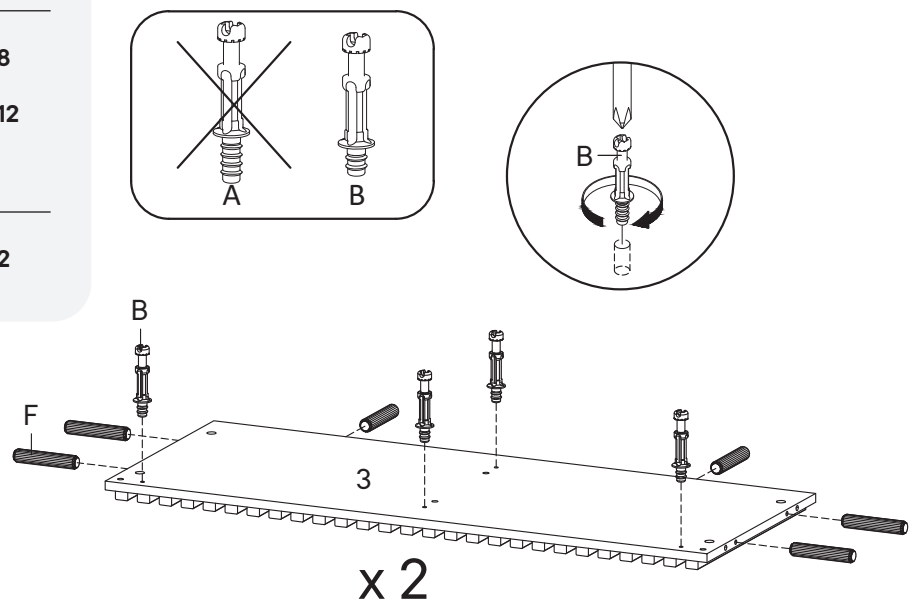



Step 3

HARDWARE

- C** Cam Lock Ø15 mm x4

COMPONENTS

- 3** Side Board 2 Big x1
4 Center Board Big x1
5 Support Board Big x2

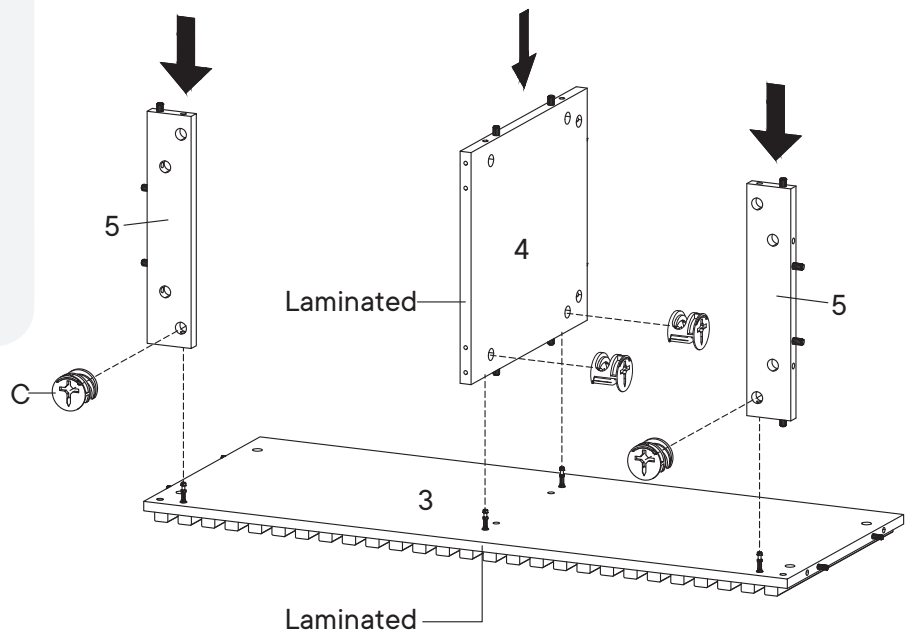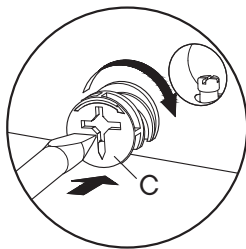



Step 4

HARDWARE

- C** Cam Lock Ø15 mm x4

COMPONENTS

- 3** Side Board 2 Big x1

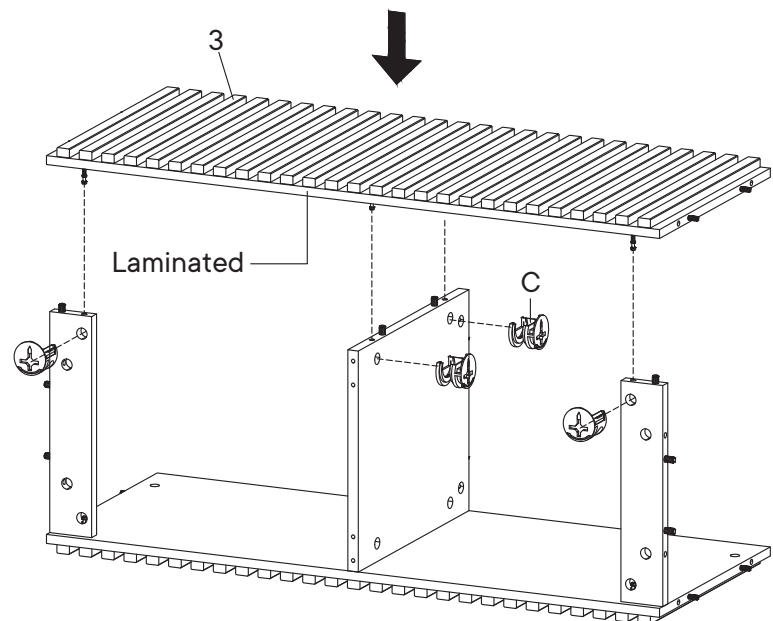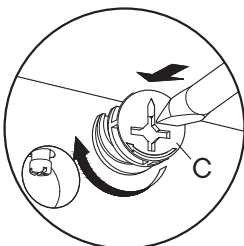



Step 5

HARDWARE

- C** Cam Lock Ø15 mm x4
- D** Cam Lock Ø12 mm x8

COMPONENTS

- 2** Side Board 1 Big x2

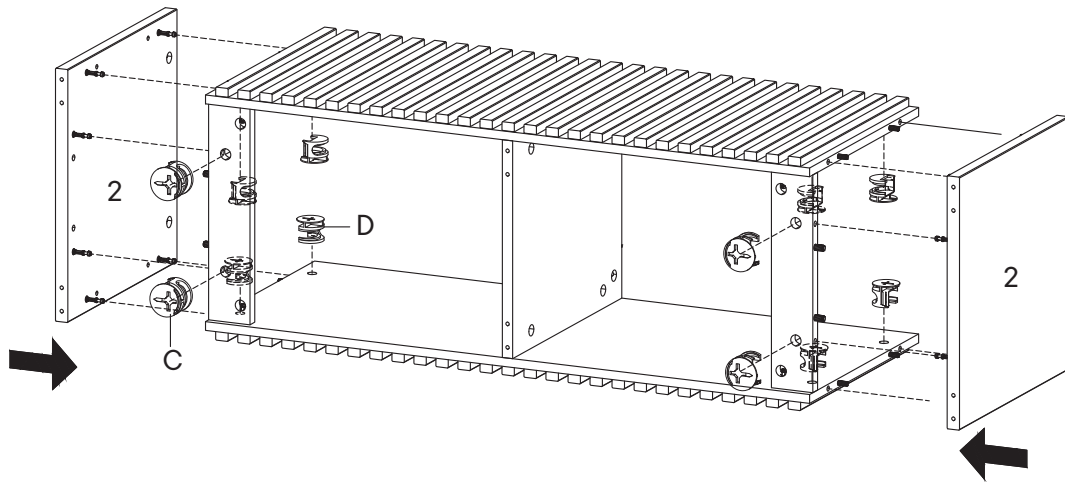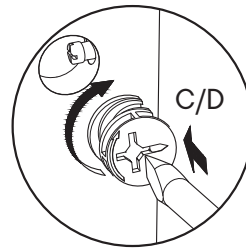



Step 6

HARDWARE

- C** Cam Lock Ø15 mm x6

COMPONENTS

- 1** Top Board Big x1

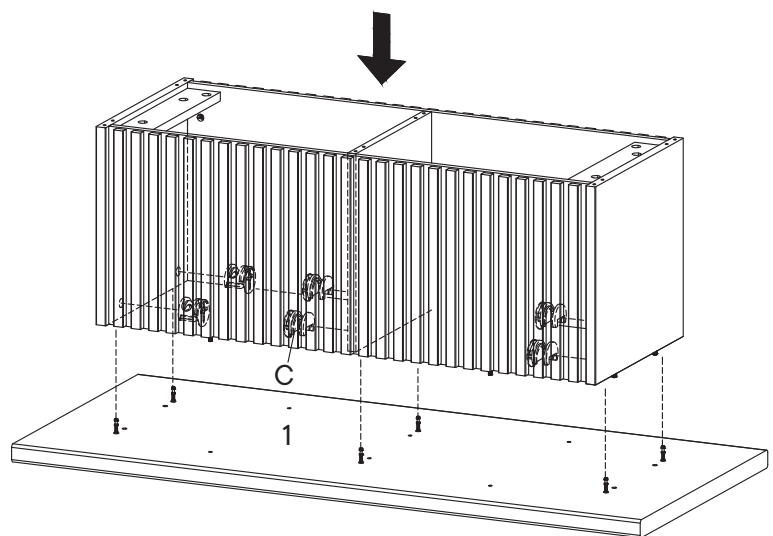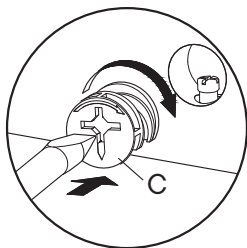


Step 7

HARDWARE




Floor Glide

x6

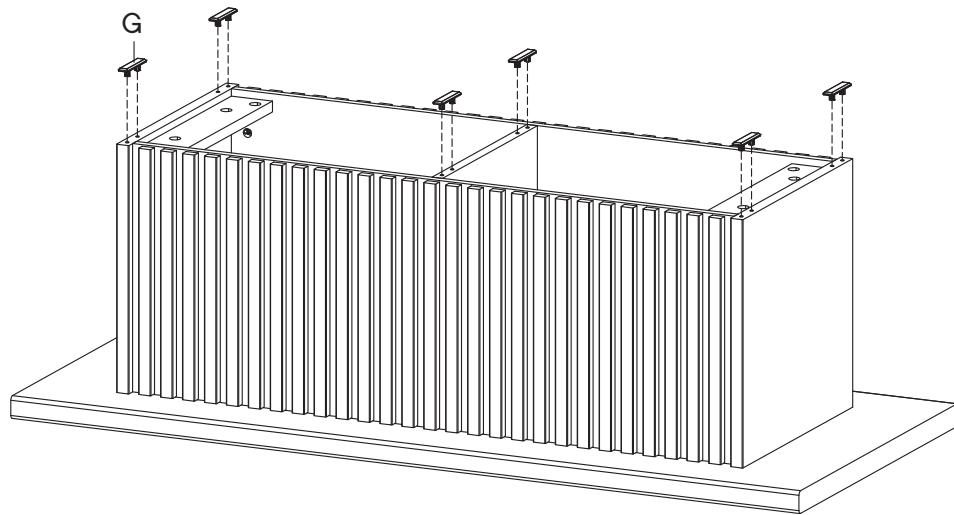

Step 8

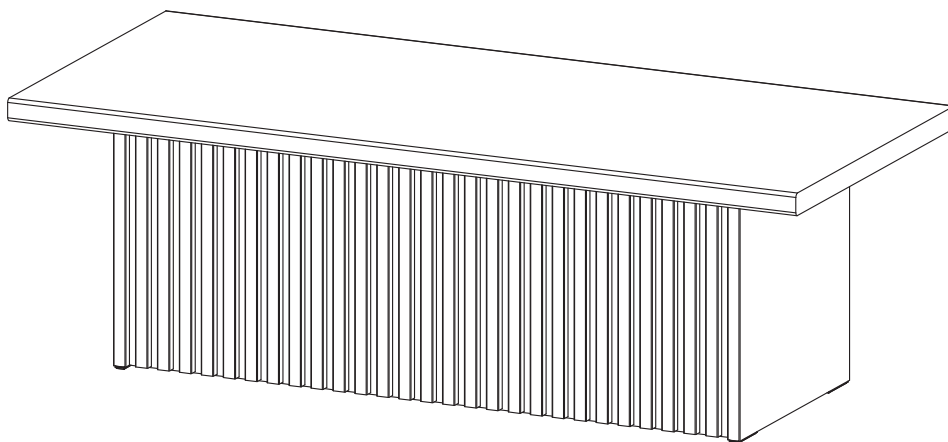




Step 9

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x14
- E** Wood Dowel Ø8 x 30 mm x12

COMPONENTS

- 6** Top Board Small x1
- 7** Side Board 1 Small x2
- 9** Support Board Small x2

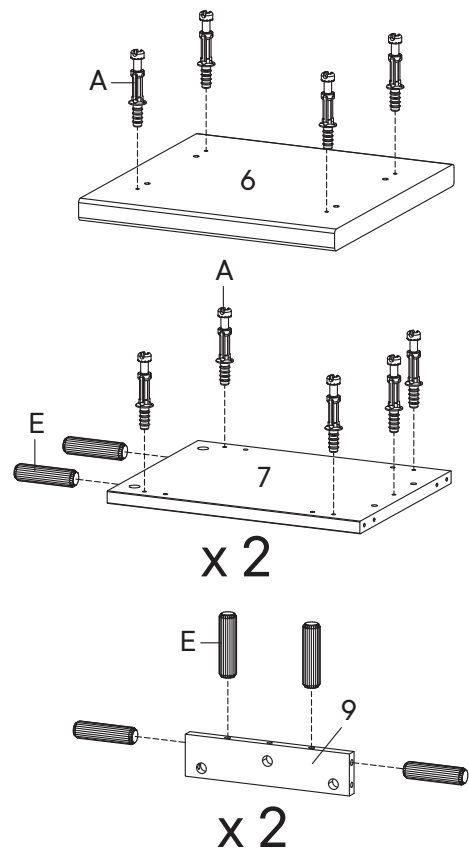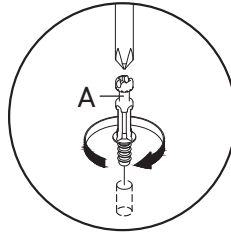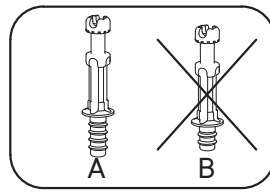




Step 10

HARDWARE

- B** Cam Bolt Ø6 x 32 mm x4
- F** Wood Dowel Ø6 x 30 mm x8

COMPONENTS

- 8** Side Board 2 Small x2

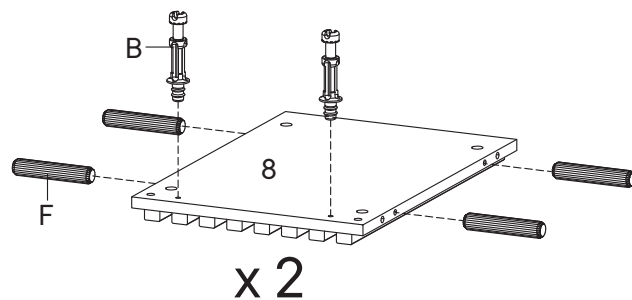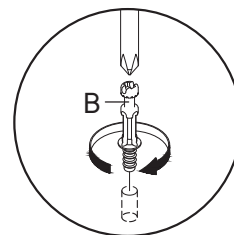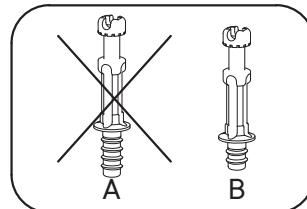


Step 11

HARDWARE

- C** Cam Lock Ø15 mm x4

COMPONENTS

- 8** Side Board 2 Small x2
9 Support Board Small x2

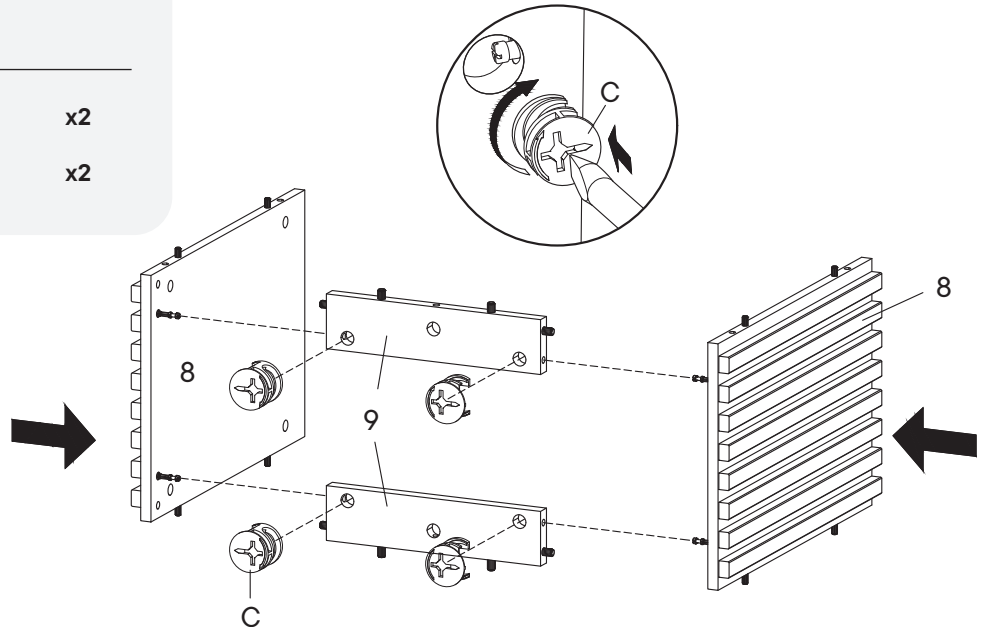


Step 12

HARDWARE

- C** Cam Lock Ø15 mm x2
D Cam Lock Ø12 mm x8

COMPONENTS

- 7** Side Board 1 Small x2

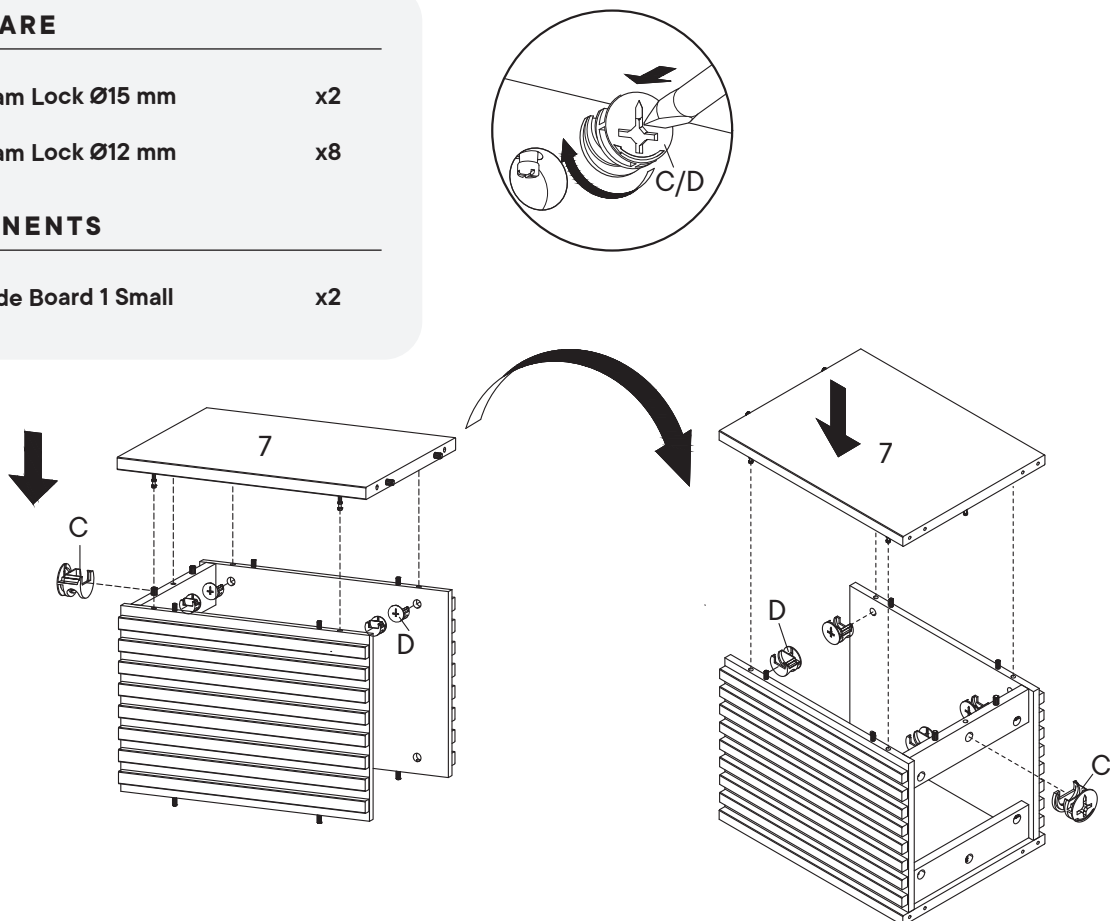



Step 13

HARDWARE

C Cam Lock Ø15 mm x4

COMPONENTS


6 Top Board Small x1

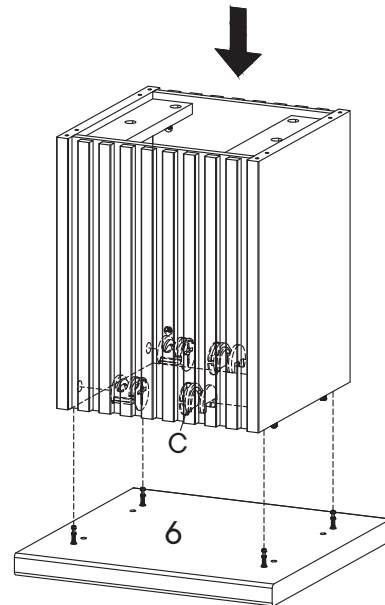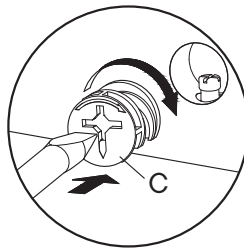

Step 14

HARDWARE

G Floor Glide x4

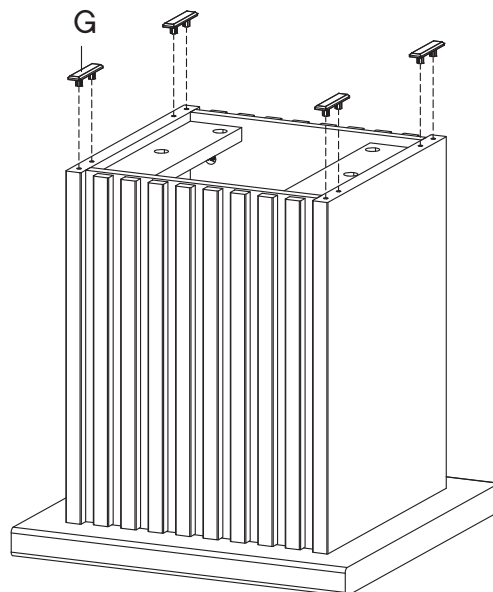

Great job!

Coffee Table assembly is complete

♥ CARING FOR YOUR ITEM


Indoor use only.

Not contract grade.


Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

Max 111Kgs / 245Lbs

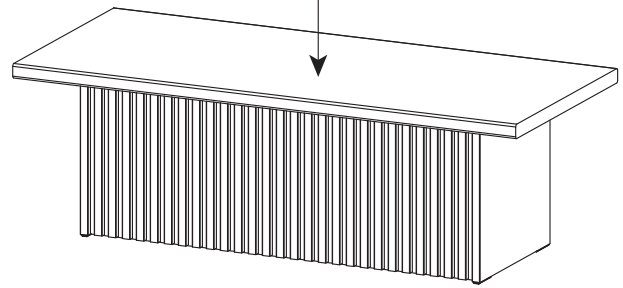

Max 30Kgs / 66Lbs

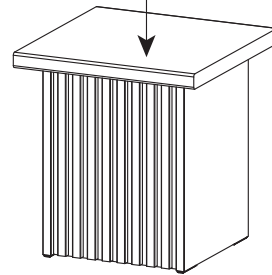

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.