


ASSEMBLY INSTRUCTIONS

EEI-7344

V0.14.03.25

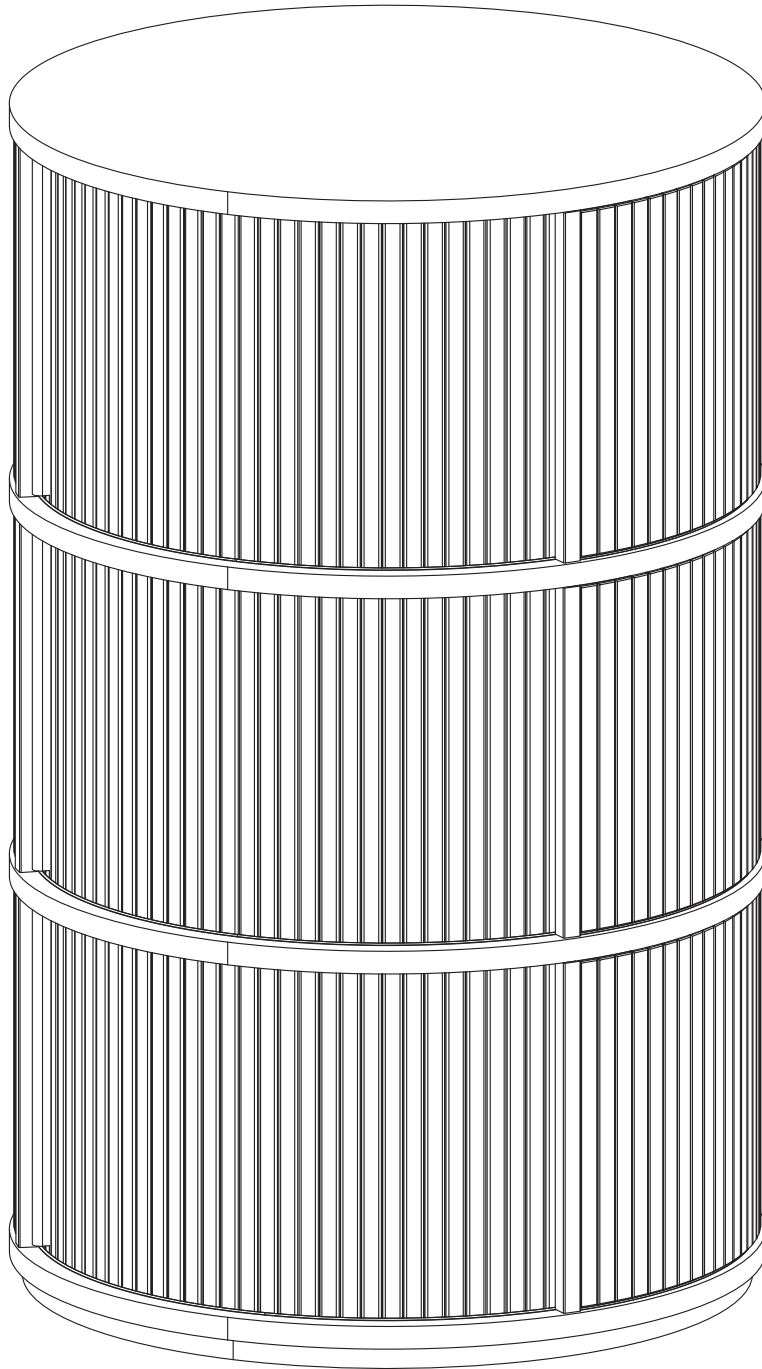

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Approx. 60 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1
2	Bottom Board 1	x1
3	Fixed Shelf	x2
4	Bar Side Board	x3
5	Support Side Bar	x6
6	Bar Sliding Door	x3
7	Handle	x3
8	Bottom Board 2	x1
9	Back Board	x3
10	Pillar	x6

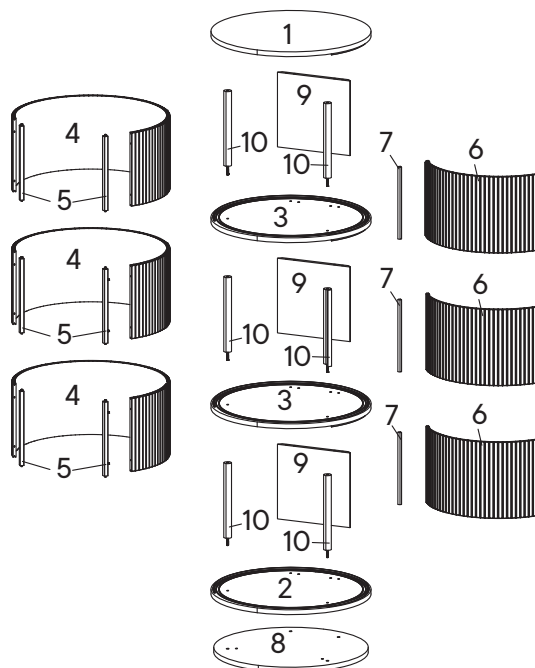

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x6
B		Cam Lock Ø15 mm	x6
C		Wood Dowel Ø8 x 30 mm	x14
D		JCN Nut	x2
E		Allen Key	x2
F		Screw M 7 x 70 mm	x2
G		Screw M 7 x 50 mm	x4
H		Screw M 4 x 10 mm	x6
I		Stud Bolt	x2

J		PVC Sheet	x2
K		Floor Protector	x4

What you need:

+		Phillips Head Screwdriver
---	--	---------------------------

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2
- C** Wood Dowel Ø8 x 30 mm x12

COMPONENTS

- 1** Top board x1
- 9** Back Board x3

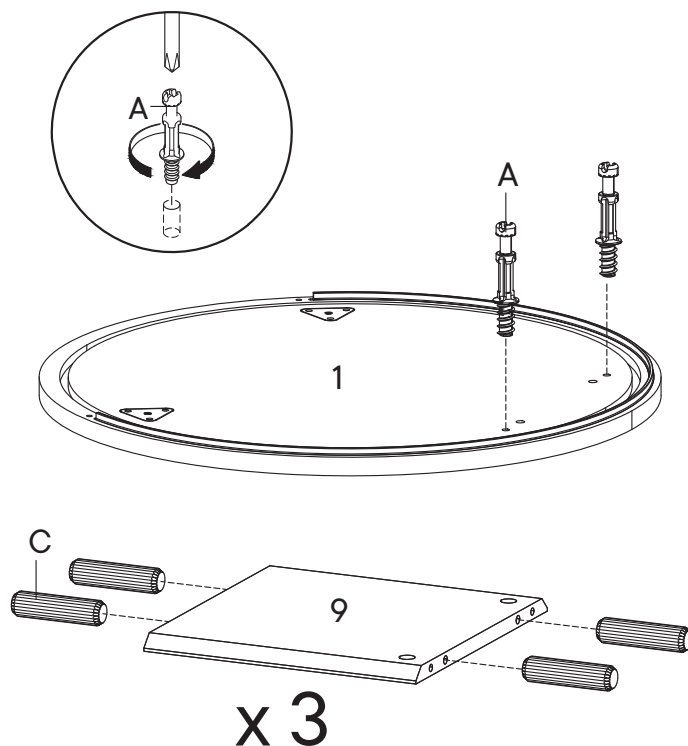



Step 2

HARDWARE

- B** Cam Lock Ø15 mm x2
- I** Stud Bolt x2

COMPONENTS

- 1** Top Board x1
- 9** Back Board x1
- 10** Pillar x2

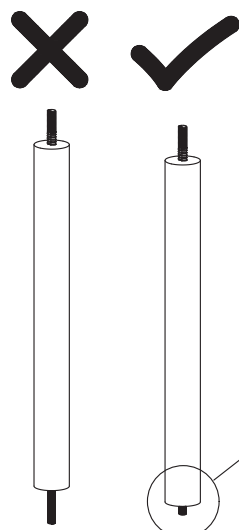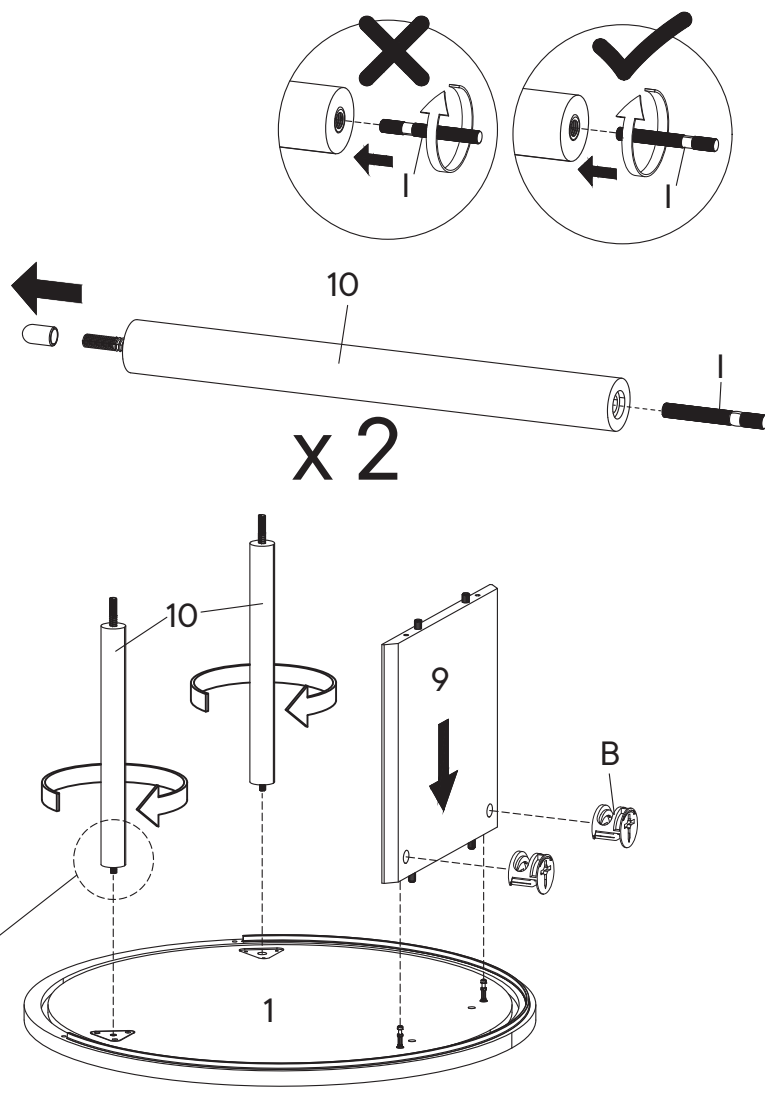

Step 3


HARDWARE

H Screw M 4 x 10 mm x6

COMPONENTS

6 Bar Sliding Door x3


7 Handle x3

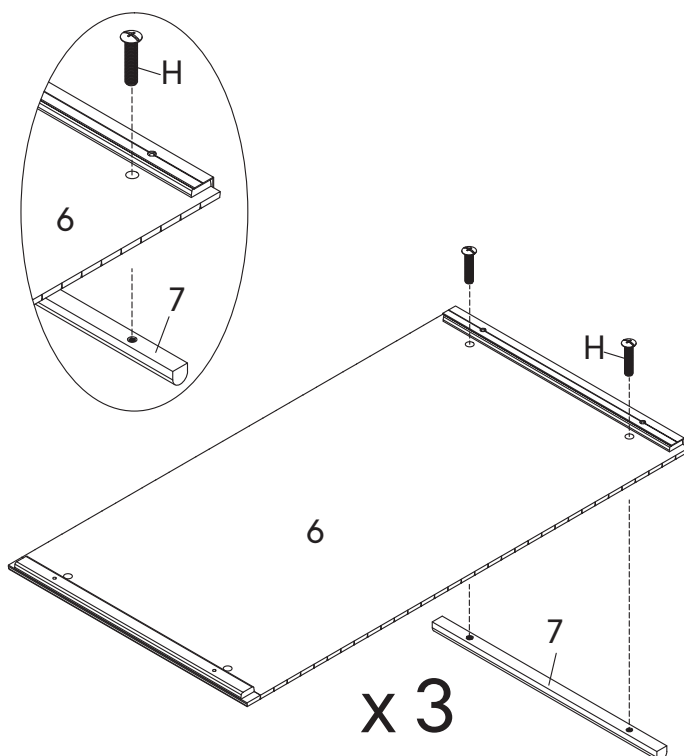

Step 4

COMPONENTS

6 Bar Sliding Door x1

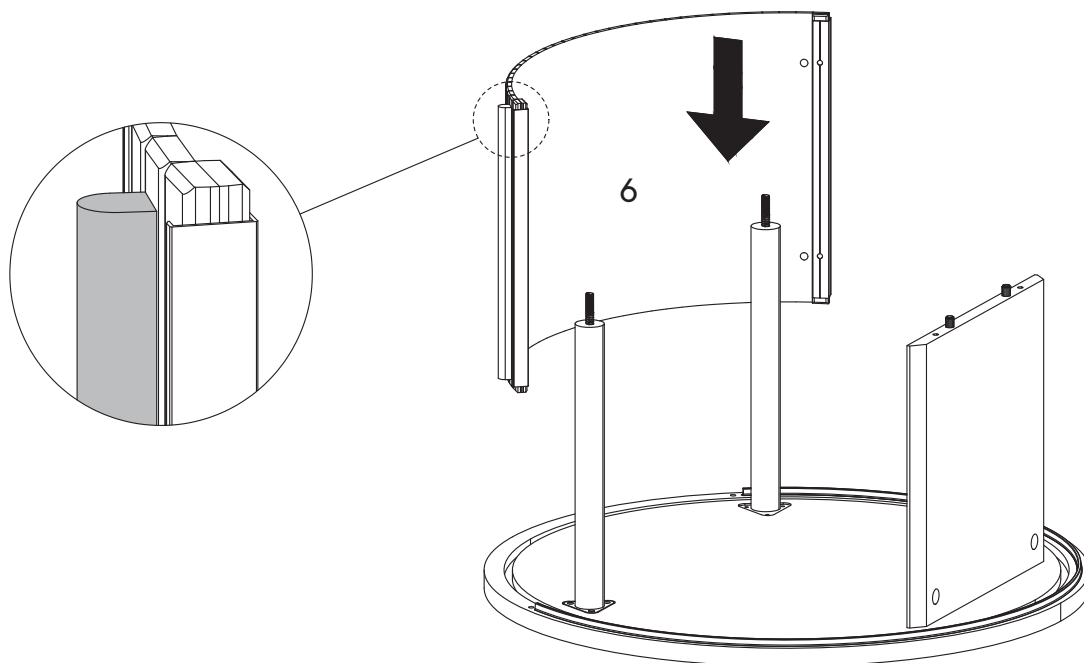



Step 5

HARDWARE

- E** Allen Key x1
- G** Screw M 7 x 50 mm x2

COMPONENTS

- 3** Fixed Shelf x1

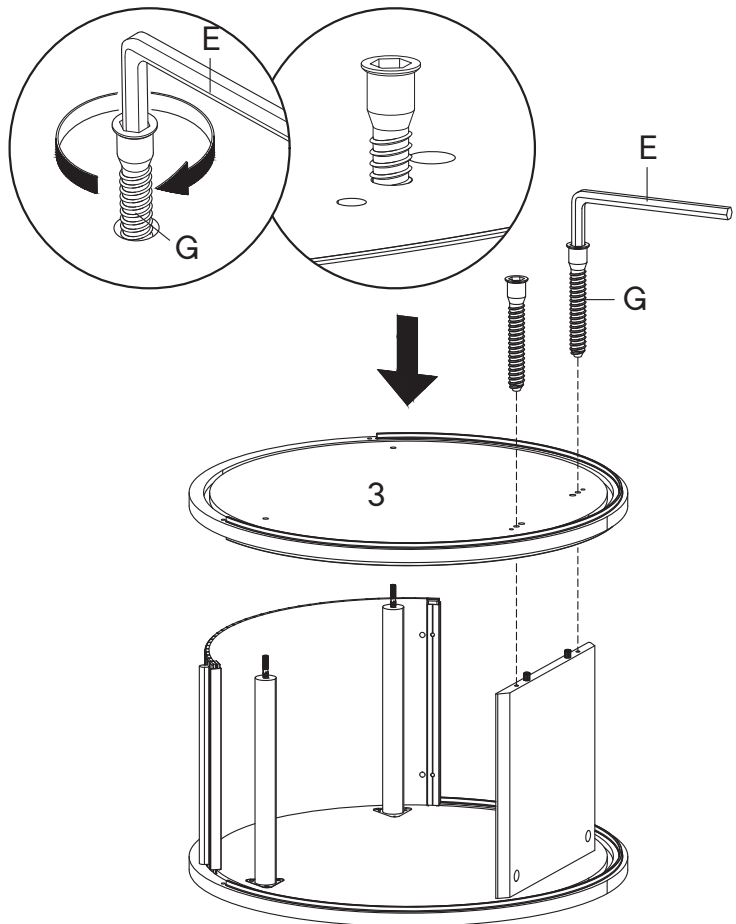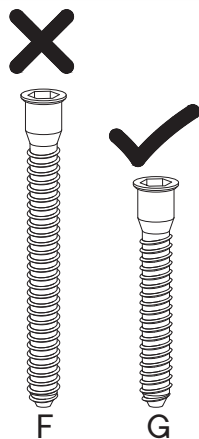


Step 6

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2
- B** Cam Lock Ø15 mm x2

COMPONENTS


- 9** Back Board x1
- 10** Pillar x2

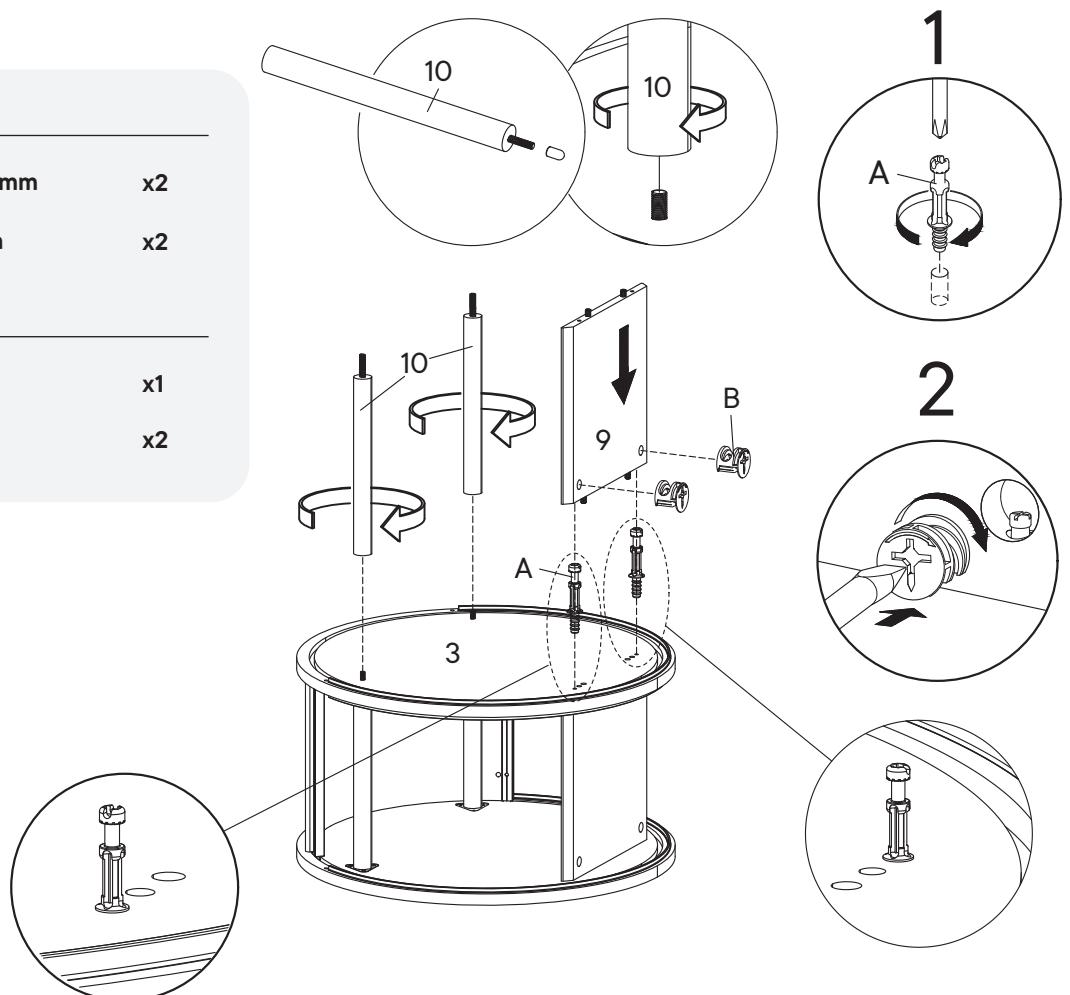

Step 7

COMPONENTS

- 6 Bar Sliding Door x1

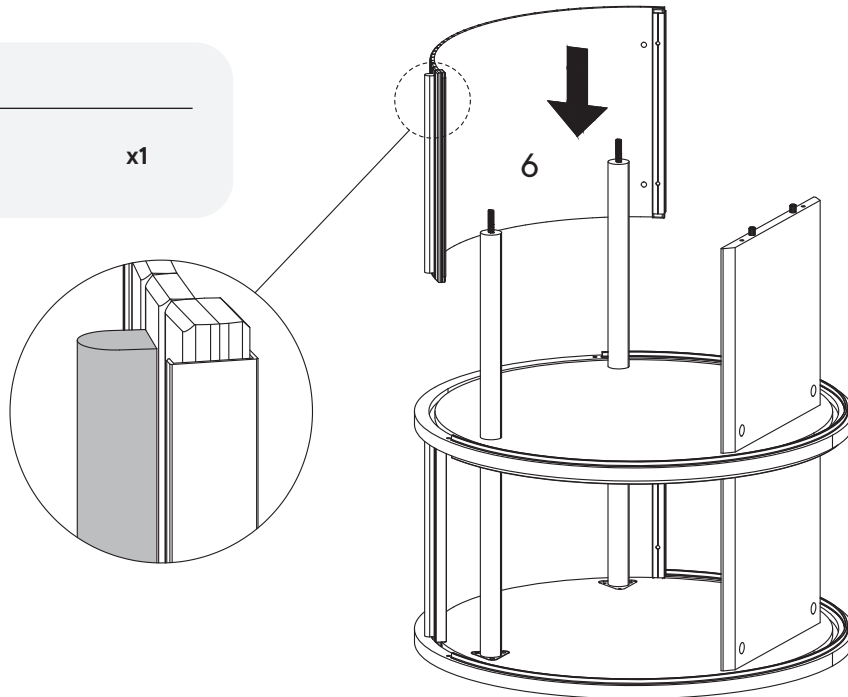


Step 8

HARDWARE

- E Allen Key x1
G Screw M 7 x 50 mm x2

COMPONENTS

- 3 Fixed Shelf x1

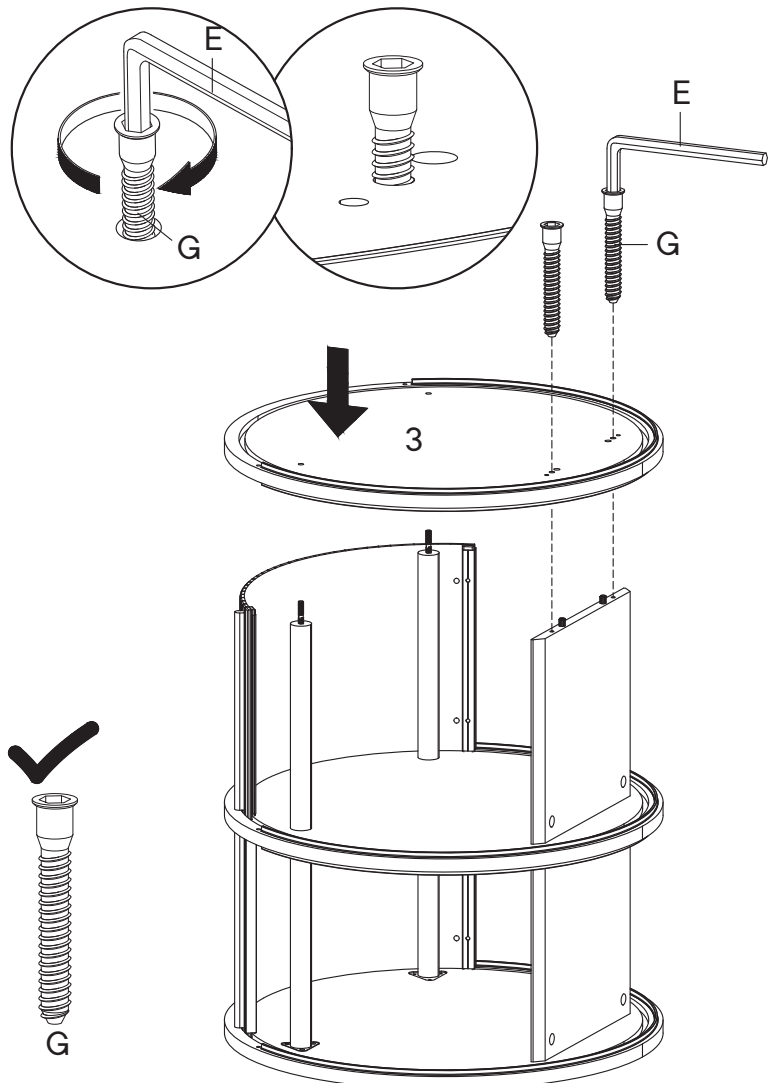


Step 9

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x2
- B** Cam Lock Ø15 mm x2

COMPONENTS


- 9** Back Board x1
- 10** Pillar x2

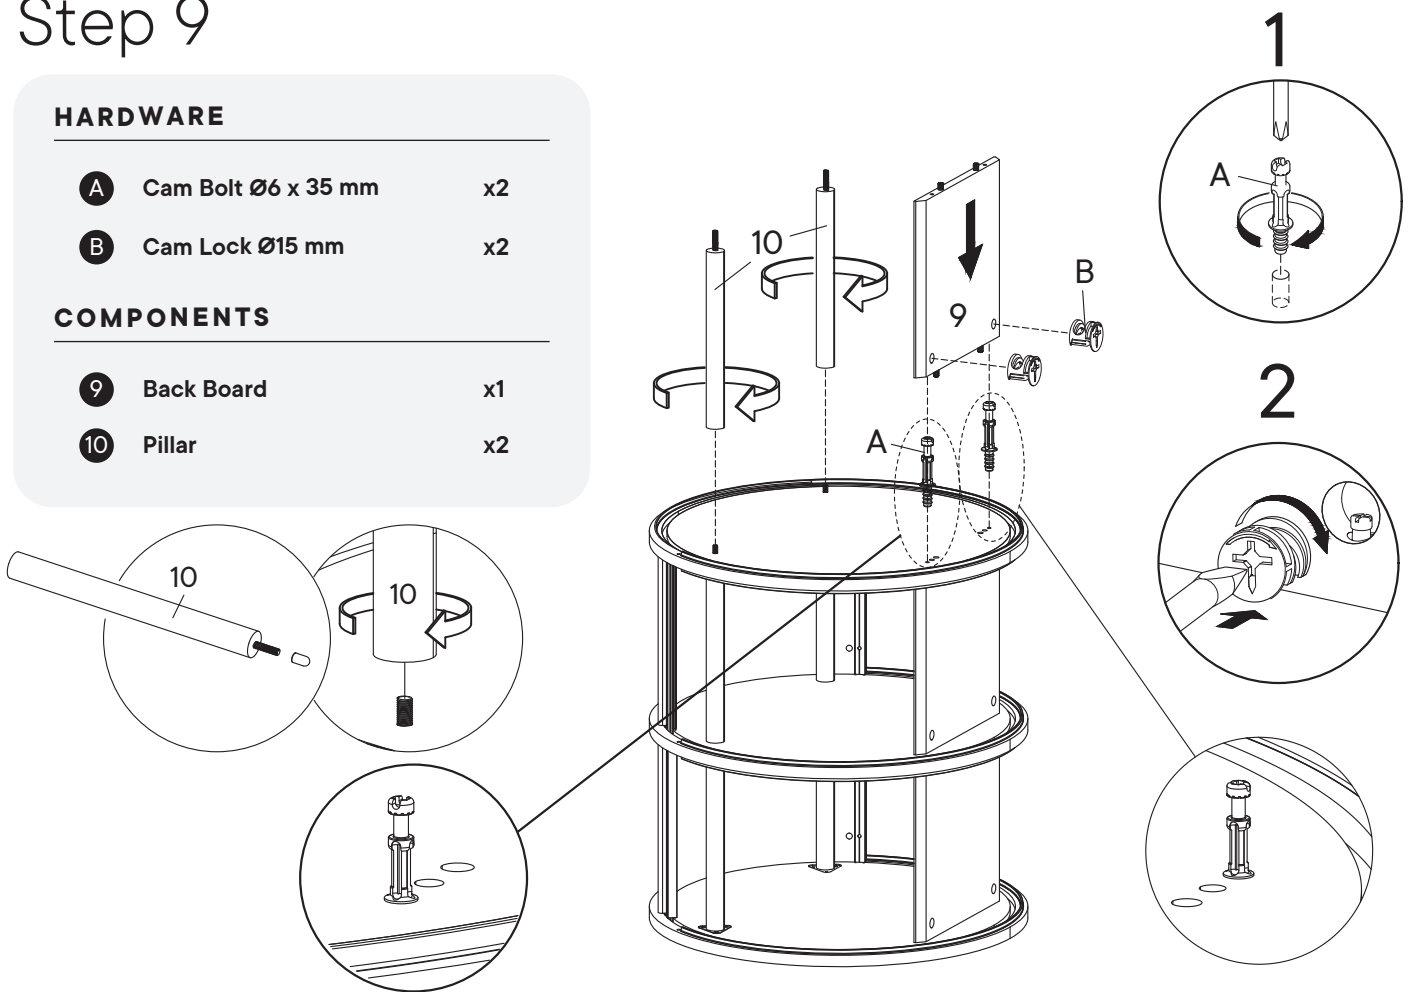

Step 10

COMPONENTS


- 2** Bottom Board 1 x1
- 6** Bar Sliding Door x1

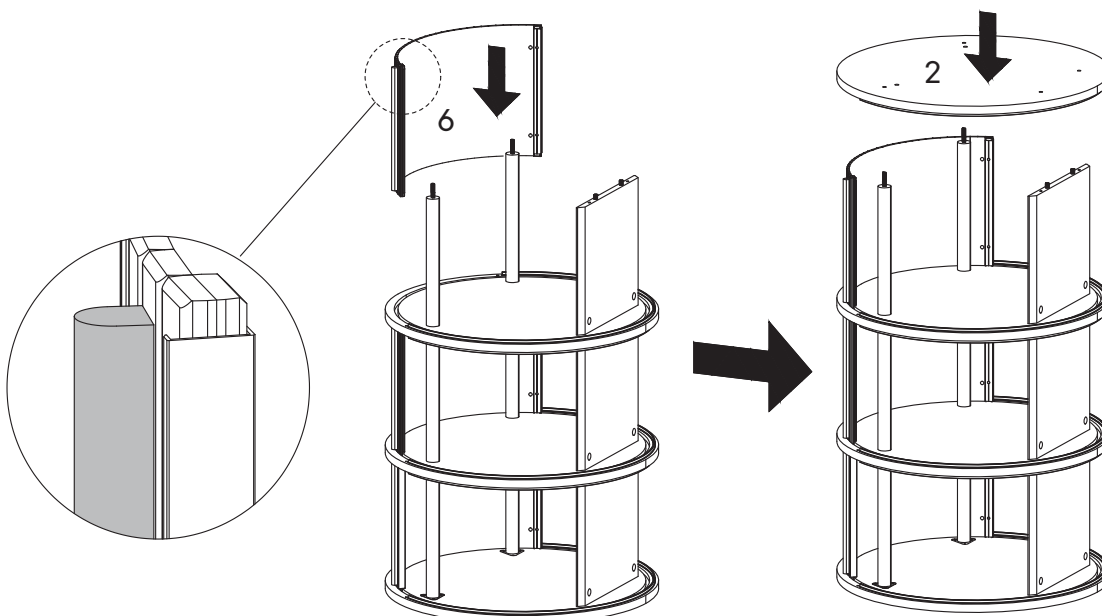

Step 11

HARDWARE

- C** Wood Dowel Ø8 x 30 mm x2

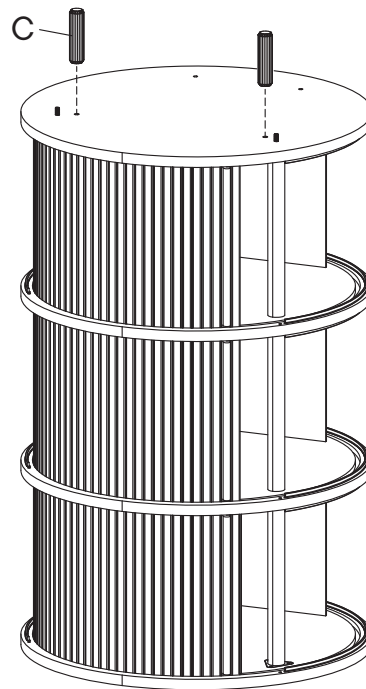


Step 12

HARDWARE

- D** JCN Nut x2
E Allen Key x1
F Screw M 7 x 70 mm x2

COMPONENTS



- 8** Bottom Board 2 x1

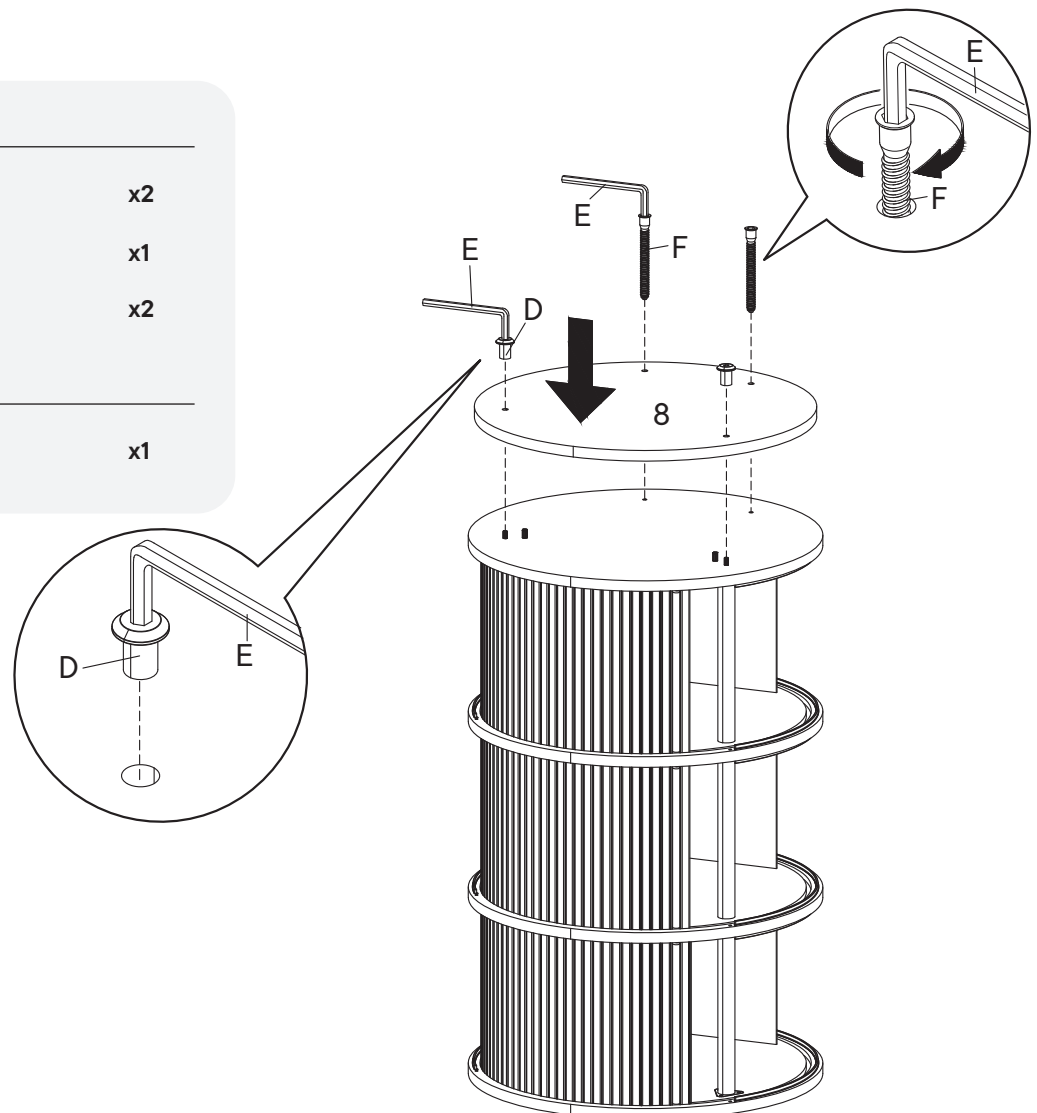

Step 13

HARDWARE

K Floor Protector x4

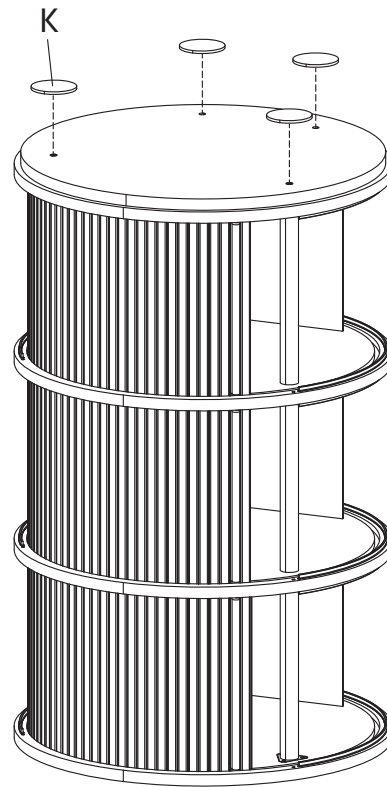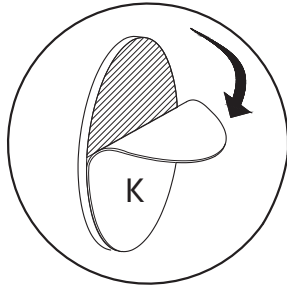

Step 14



HARDWARE

J PVC Sheet x1

COMPONENTS

5 Support Side Bar x3


Rotate the furniture position after step 13 is complete

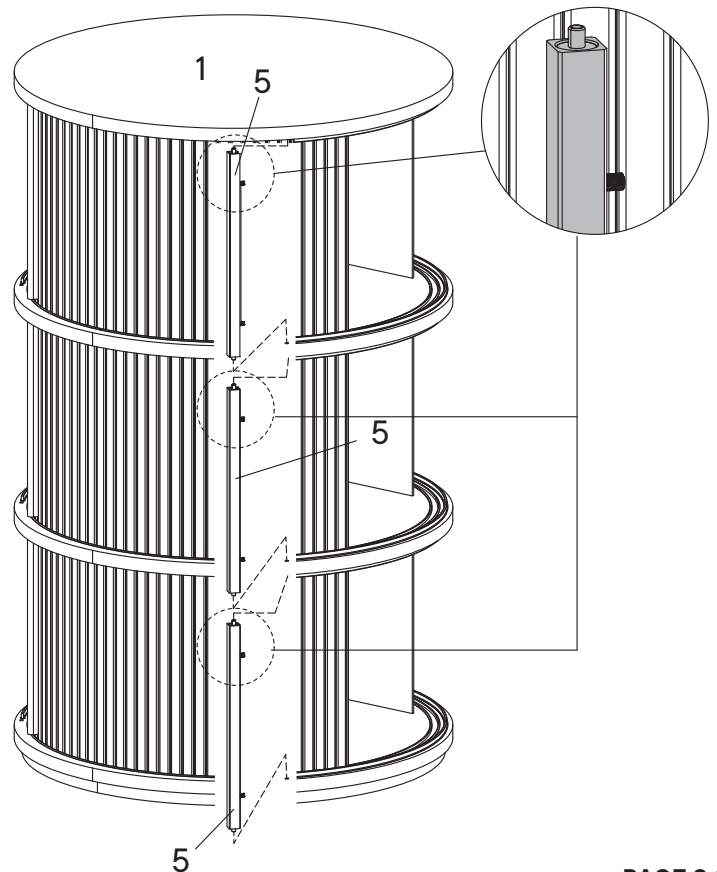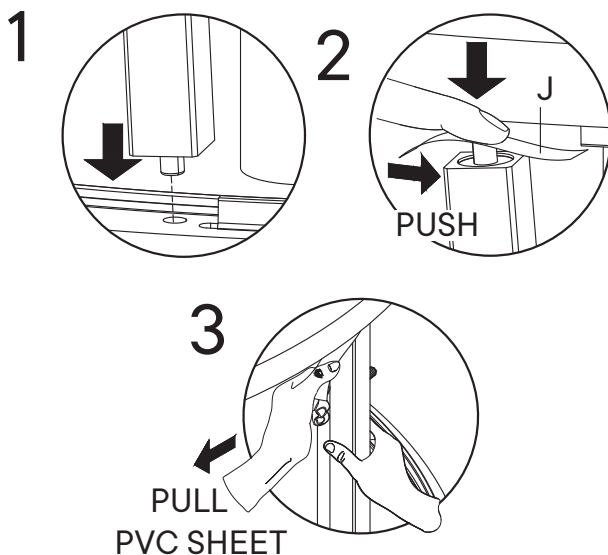

Step 15

COMPONENTS


4 Bar Side Board x1

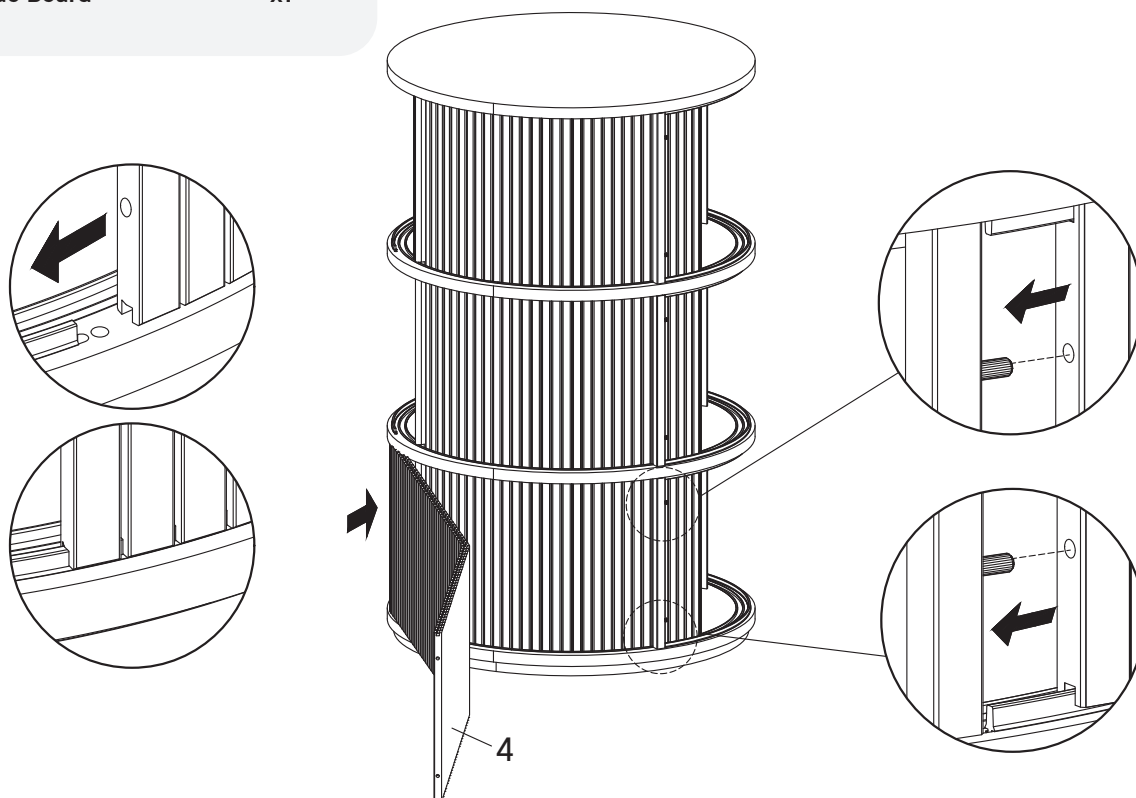

Step 16

COMPONENTS


4 Bar Side Board x1

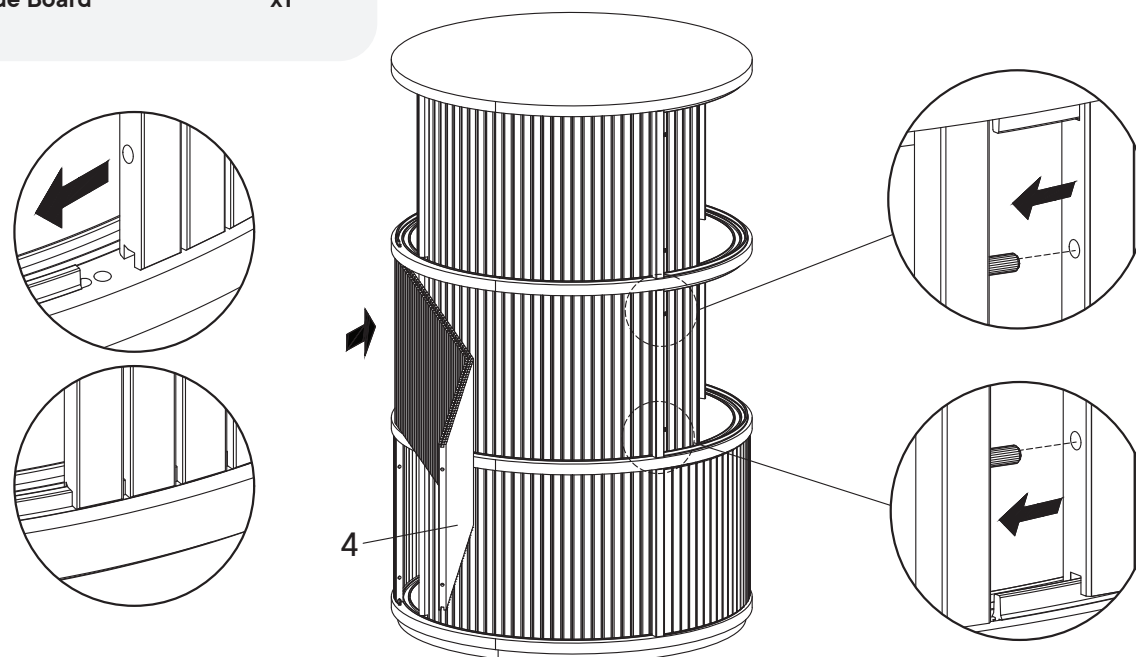

Step 17

COMPONENTS

- ④ Bar Side Board x1

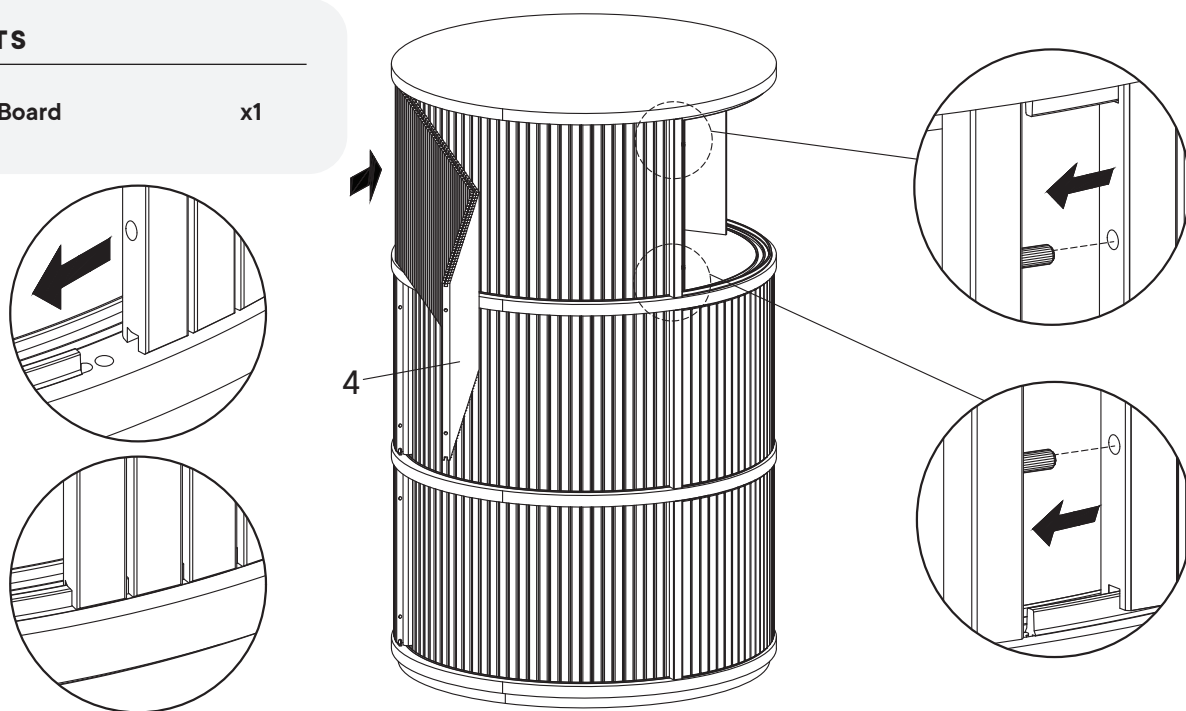



Step 18

HARDWARE

- ① PVC Sheet x1


COMPONENTS

- ⑤ Support Side Bar x3

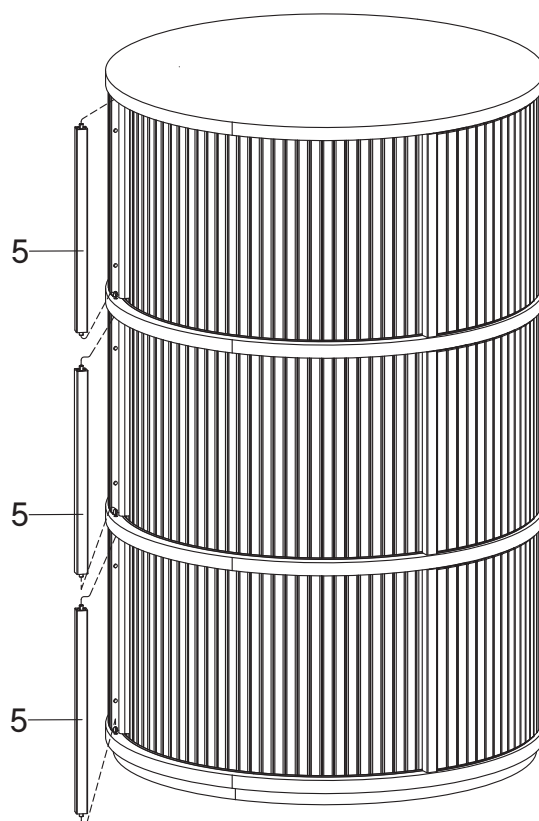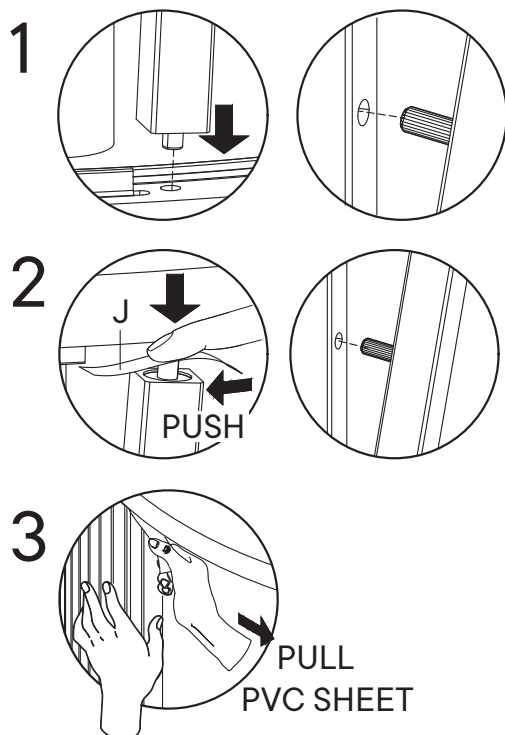


Step 19

Option 1

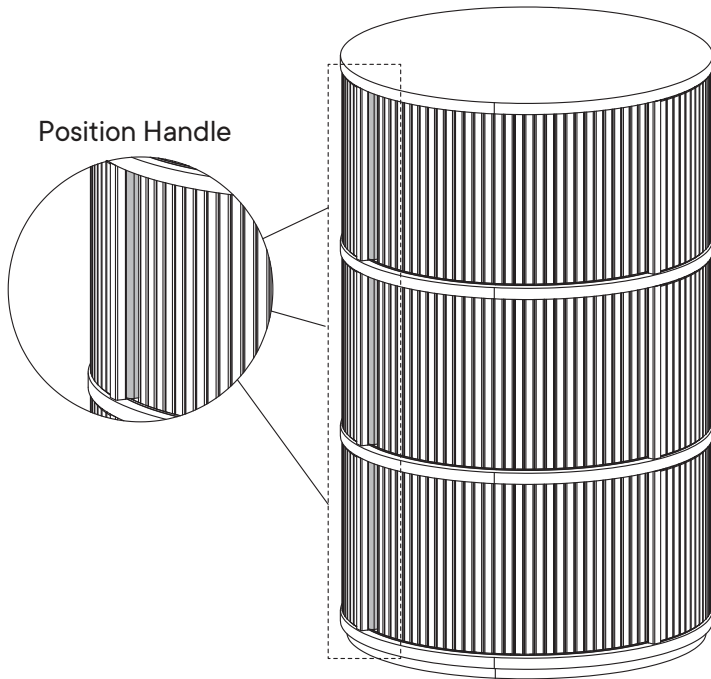

Option 2

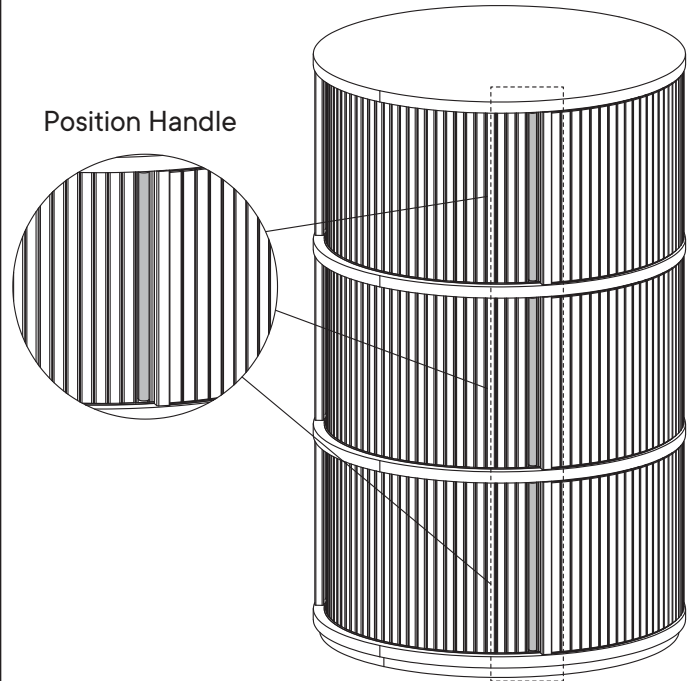

Great job!

Side Table assembly is complete.

♥ CARING FOR YOUR ITEM


Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

This product must be mounted on the wall and use the Anti-Tip

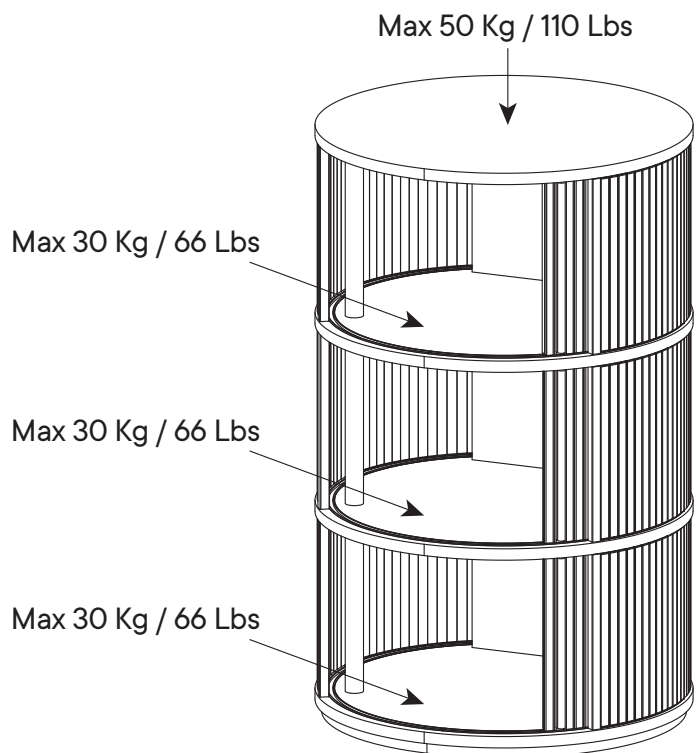

CONNECT WITH US!   








Tag us @modway_furniture and #modway for a chance to be featured.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

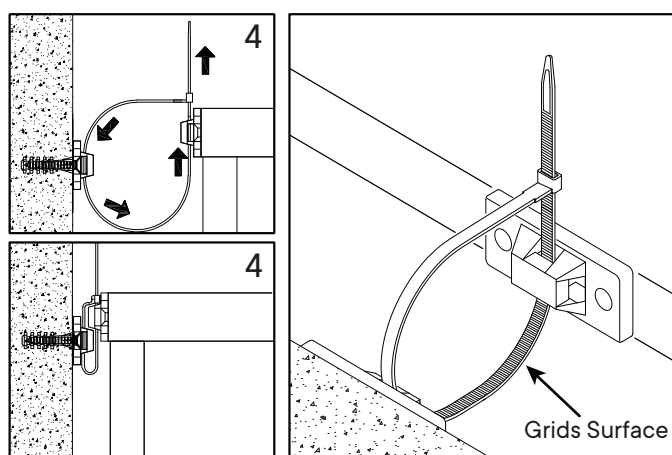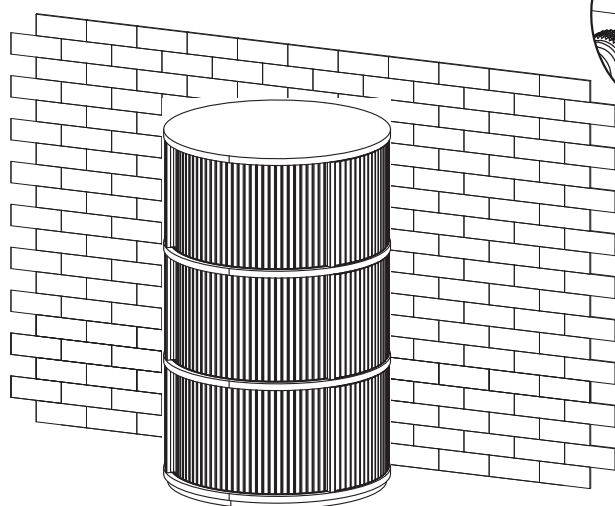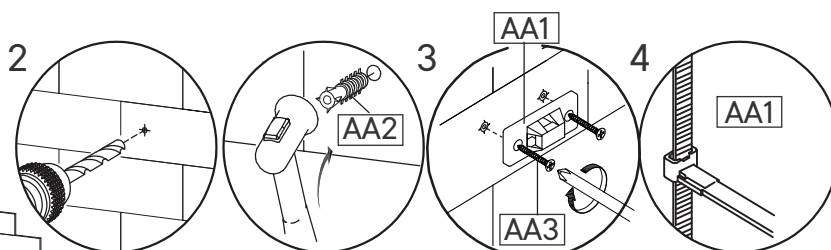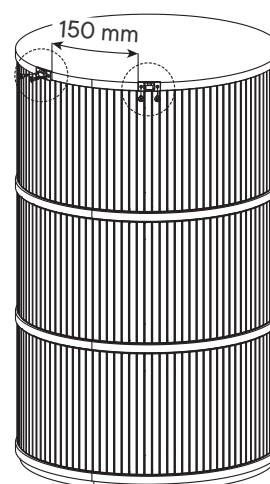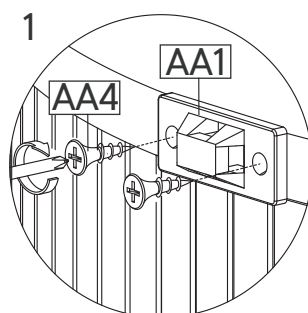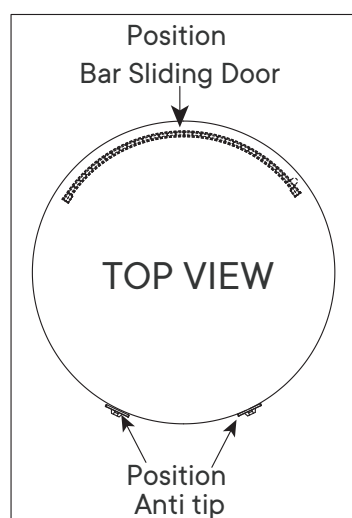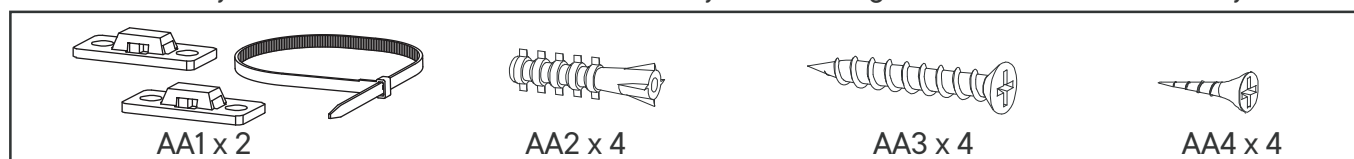

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.