


ASSEMBLY INSTRUCTIONS

EEI-6908

V0.29.01.24

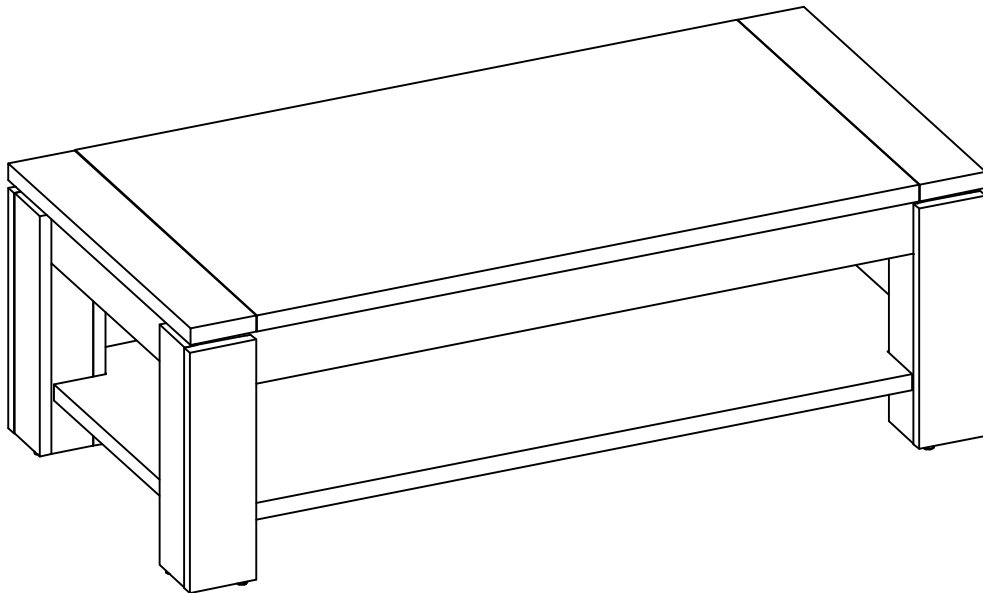

Questions? Contact us!

609.256.9000 • cs@modway.com

www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Side top panel	x1
2	Middle top panel	x1
3	Bottom panel	x1
4	Horizontal frame	x2
5	Short frame	x2
6	Middle panel	x1
7	Centre support	x1
8	Right leg	x2
9	Left leg	x2

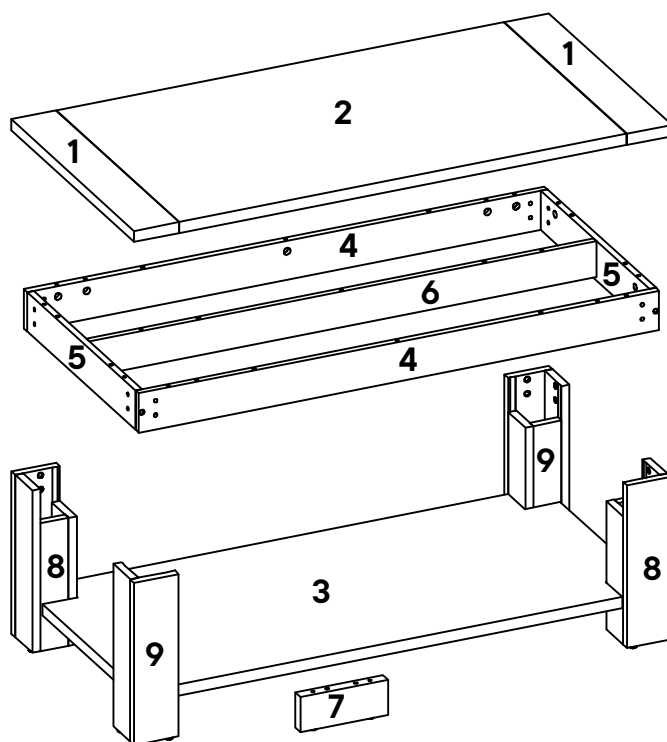

Provided hardware:

A.		Cambolt Ø6 x 32 mm	x21
B.		Camlock Ø15 mm	x25
C.		Bolt M6 x 30mm	x16
D.		Dowel Ø7.8 x 32 mm	x28
E.		Connecting Bolt	x4
F.		Burrel Nut	x4
G.		Assembly screw	x4
H.		Travix	x4
I.		Floor Glide	x10


What you need:



Phillips



Phillips Head Screwdriver



Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

COMPONENTS

4	Horizontal frame	x2
5	Short frame	x2
6	Middle Panel	x1

HARDWARE

A	Cambolt Ø6 x 32 mm	x2
D	Dowel Ø7.8 x 32 mm	x20

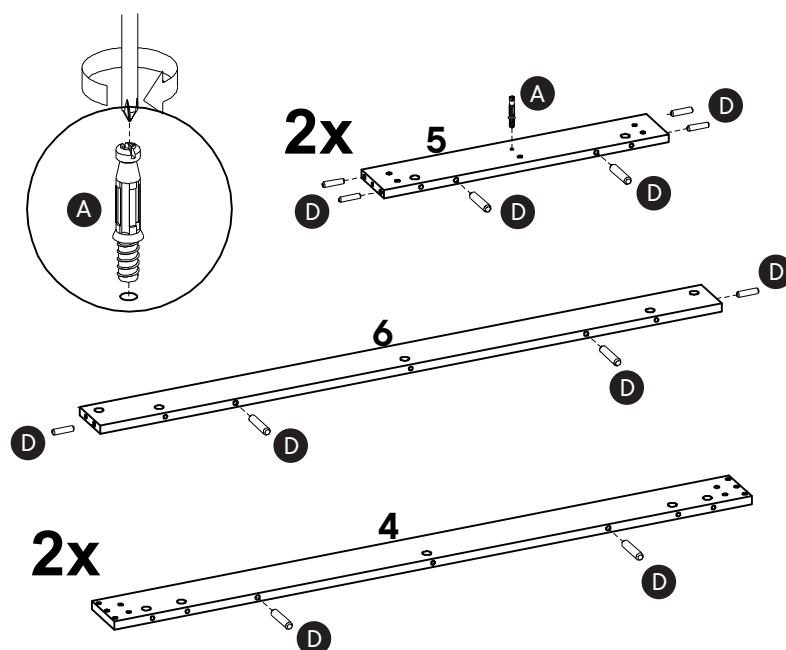


Step 2

COMPONENTS

5	Short frame	x2
6	Middle Panel	x1

HARDWARE

B	Camlock Ø15 mm	x2
---	----------------	----

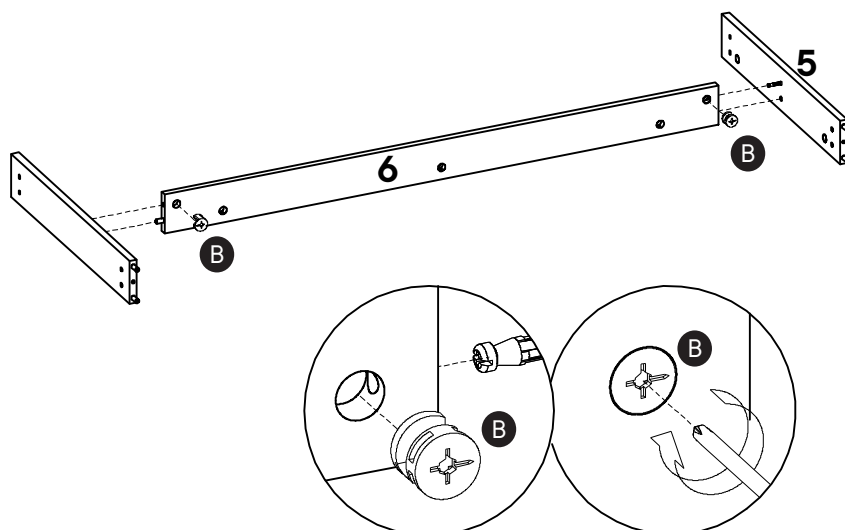


Step 3

COMPONENTS

4 Horizontal frame x2

HARDWARE

G Assembly screw x4

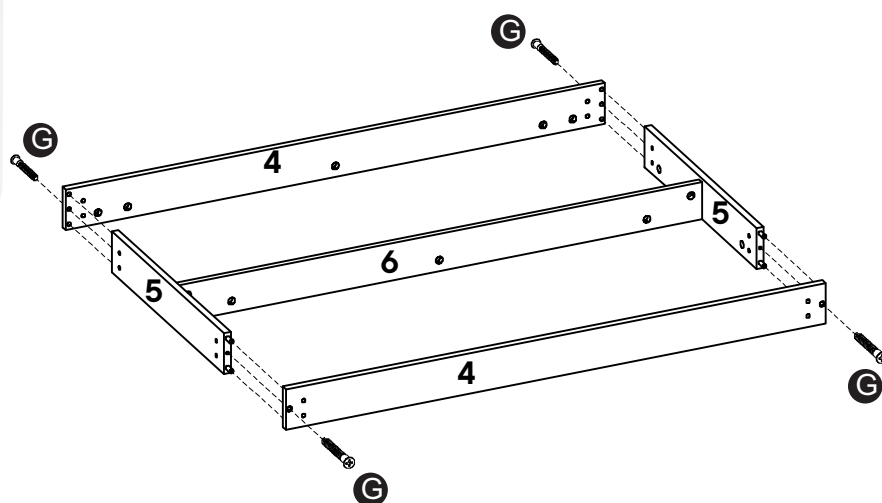

Step 4

COMPONENTS

1 Side top panel x2

2 Top panel x1



HARDWARE

A Cambolt Ø6 x 32 mm x17

D Dowel Ø7.8 x 32 mm x6

E Connecting bolt x4

F Barrel nut x4

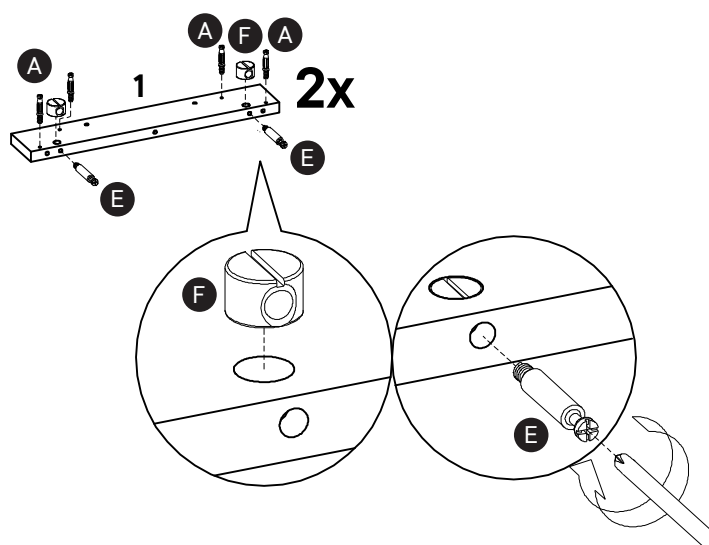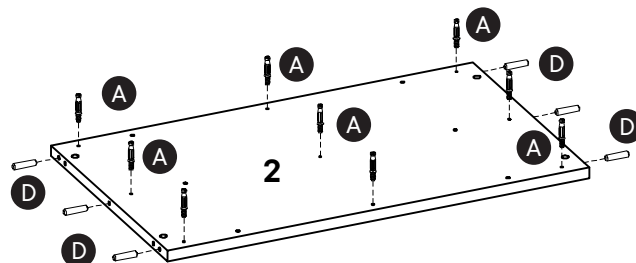


Step 5

COMPONENTS

- | | | |
|---|----------------|----|
| 1 | Side top panel | x2 |
| 2 | Top panel | x1 |

HARDWARE


- | | | |
|---|----------------|----|
| B | Camlock Ø15 mm | x4 |
|---|----------------|----|

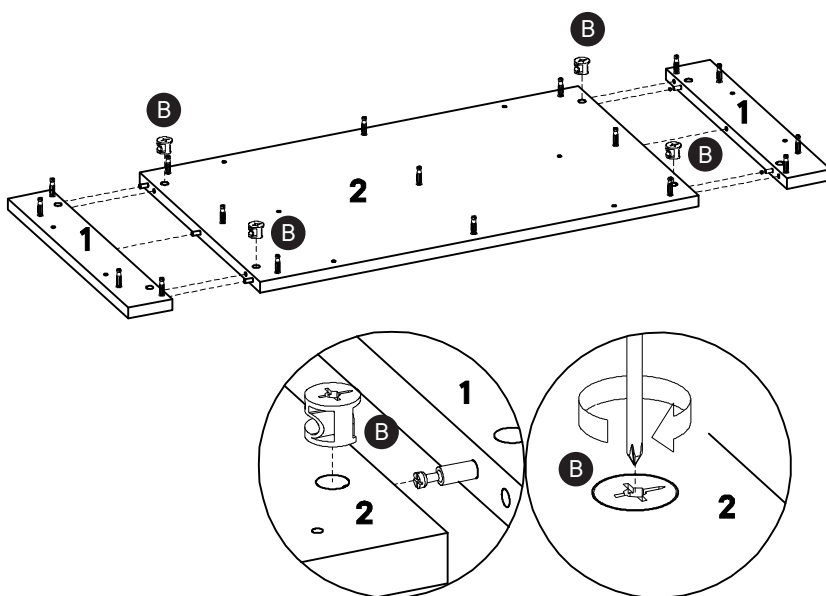

Step 6

HARDWARE

- | | | |
|---|----------------|-----|
| B | Camlock Ø15 mm | x17 |
|---|----------------|-----|

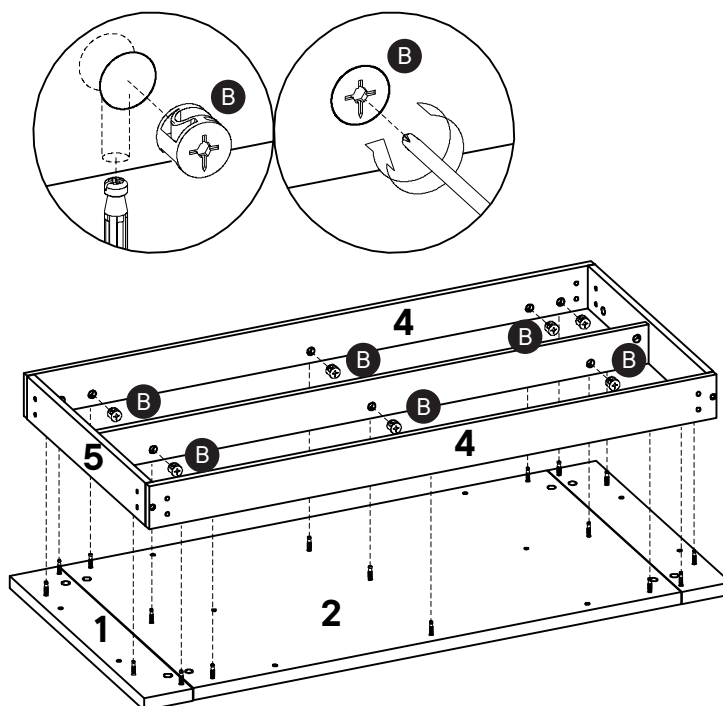


Step 7

COMPONENTS

3	Bottom panel	x1
7	Centre support	x1
8	Right leg	x2
9	Left leg	x2

HARDWARE


A	Cambolt Ø6 x 32 mm	x2
D	Dowel Ø7.8 x 32 mm	x2
H	Travix	x4
I	Floor glide	x8

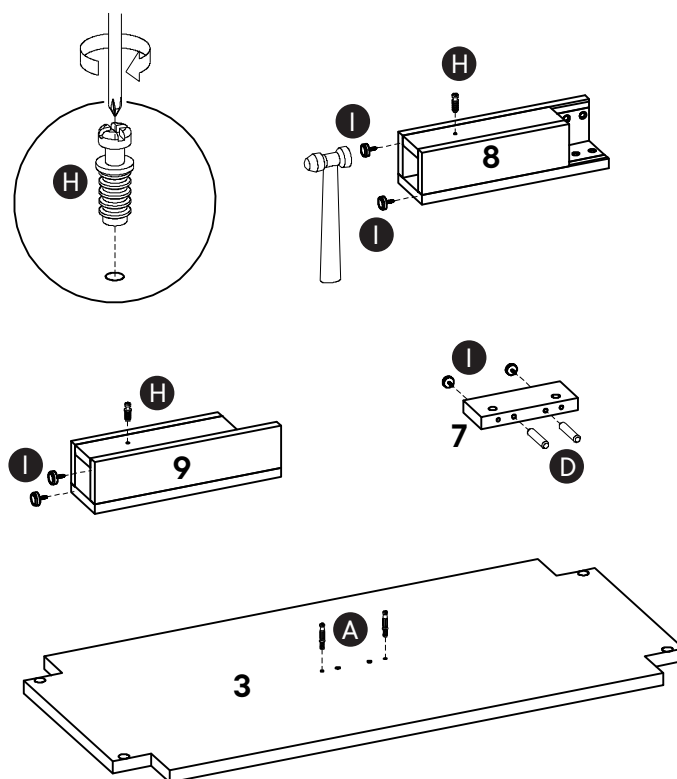

Step 8

COMPONENTS


8	Right leg	x2
9	Left leg	x2

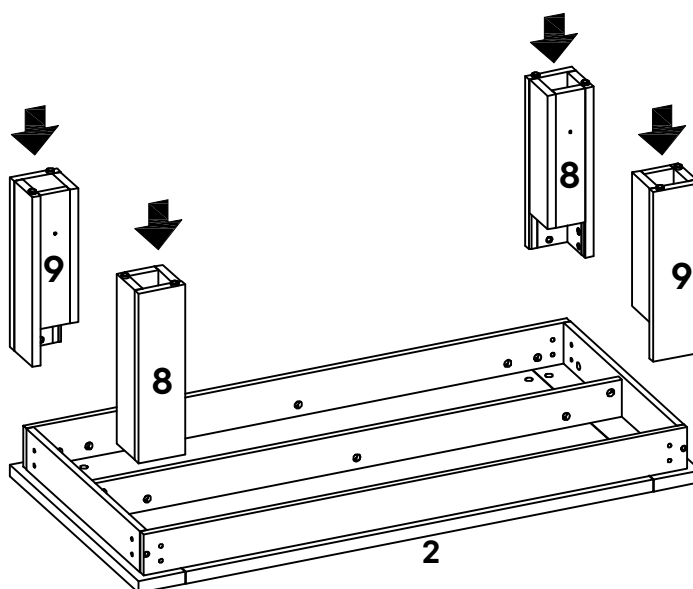

Step 9

HARDWARE

- C** Bolt M6 x 30mm x12

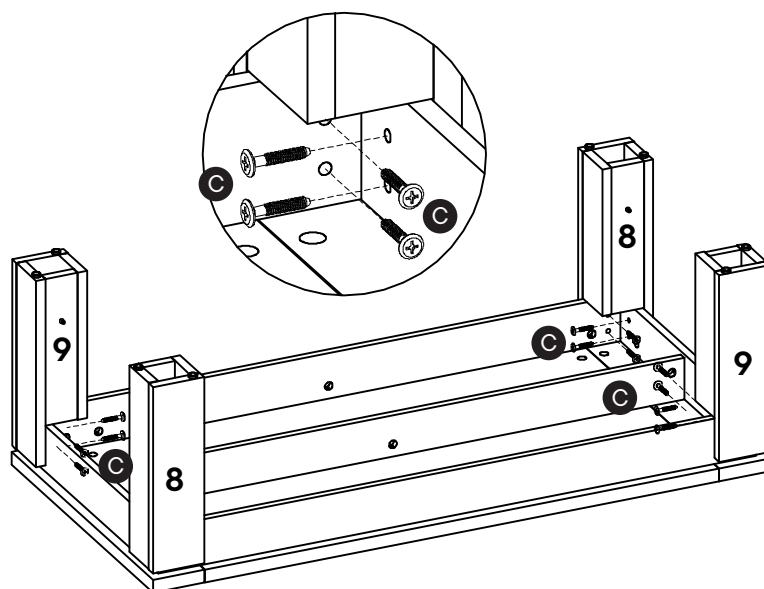


Step 10

COMPONENTS

- 3** Centre support x1
7 Bottom panel x1

HARDWARE


- B** Camlock Ø15 mm x2

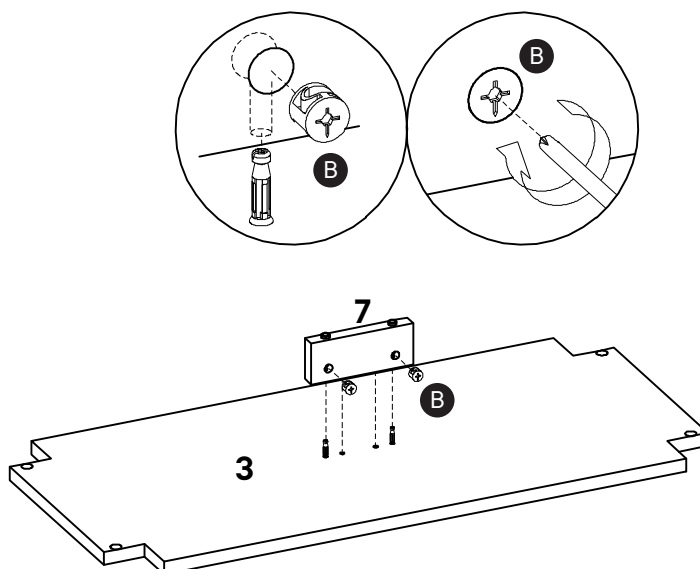



Step 11

COMPONENTS

3 Bottom panel x1

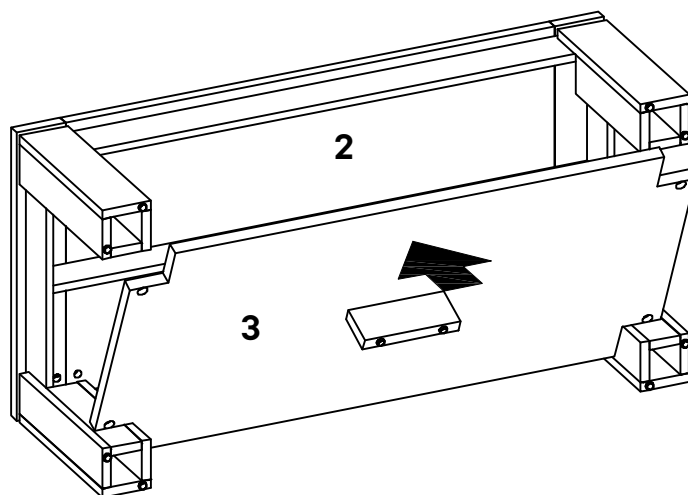

Step 12

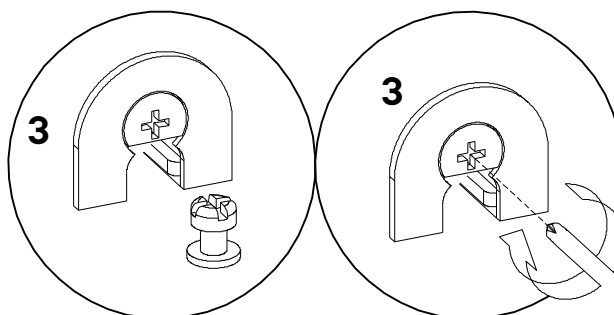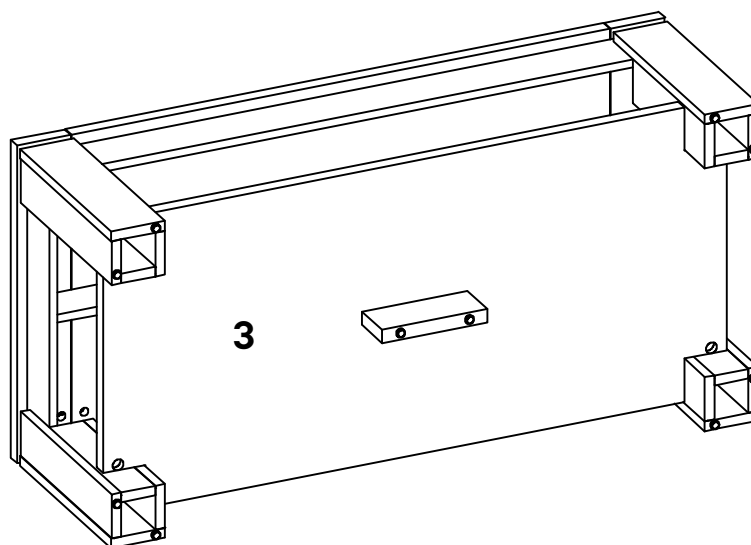

Great job!

Your Coffee table is complete.




CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

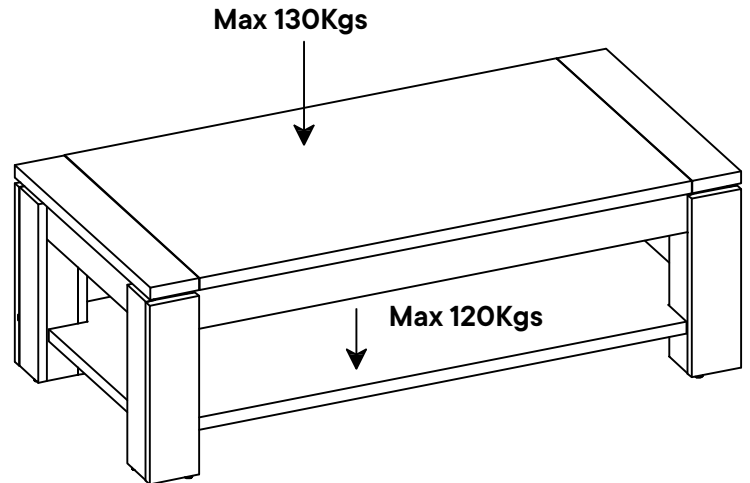

CONNECT WITH US!



Tag us **@modway_furniture** and **#modway** for a chance to be featured.