


ASSEMBLY INSTRUCTIONS

EEI-6525

V1.04.24.24

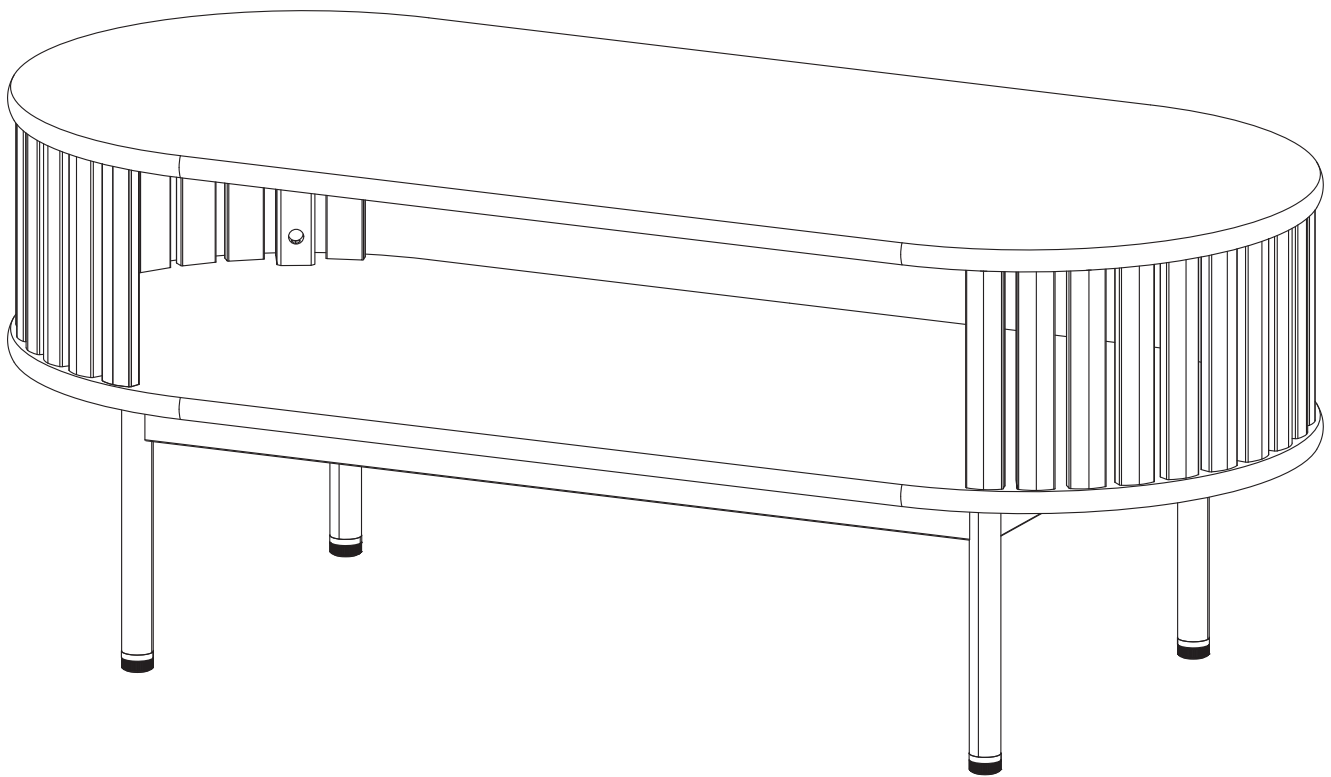

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Top Board	x1
2	Bottom Board	x1
3	Bar Side 1	x4
4	Bar Side 2	x27

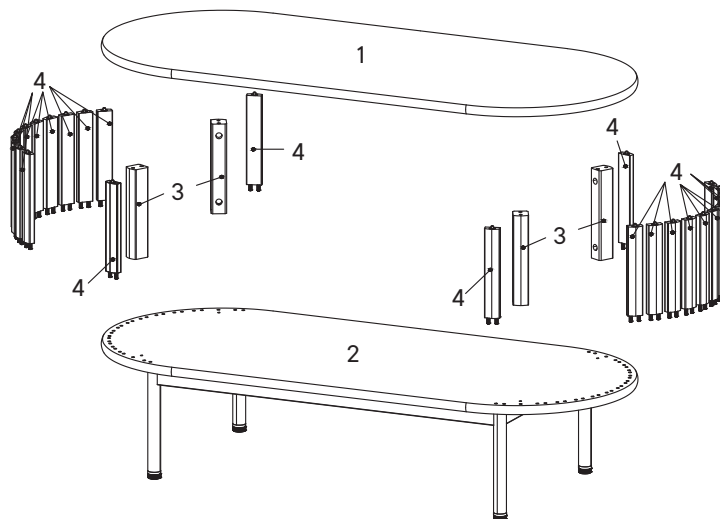

Provided hardware:

A		Cam Bolt Ø6 x 35 mm	x8
B		Cam Lock Ø15 mm	x8
C		Screw Cap Ø15 mm	x8
D		Wood Dowel Ø6 x 30 mm	x8
E		Allen Key	x2
F		PVC Sheet	x2
G		Screw M 6.4 x 45 mm	x10
H		Screw M 6 x 40 mm	x4
I		Support Corner Brace	x4

J		Corner Brace	x4
K		Metal Leg	x4
L		Support Metal Leg 1	x2
M		Support Metal Leg 2	x2

What you need:

	Phillips Head Screwdriver
--	---------------------------

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

HARDWARE

- A** Cam Bolt Ø6 x 35 mm x8
- D** Wood Dowel Ø6 x 30 mm x8

COMPONENTS

- 1** Top Board x1
- 2** Bottom Board x1
- 3** Bar Side 1 x4

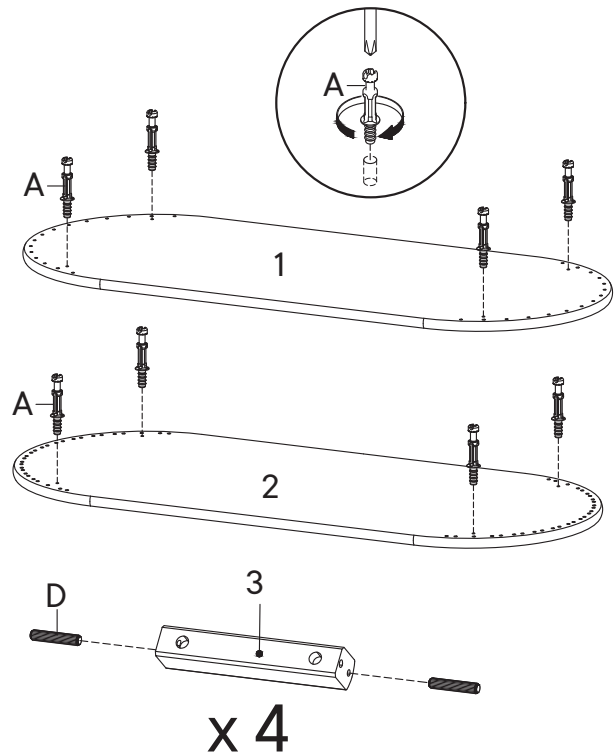


Step 2

HARDWARE

- B** Cam Lock Ø15 mm x4
- C** Screw Cap Ø15 mm x4

COMPONENTS

- 1** Top Board x1
- 3** Bar Side 1 x4

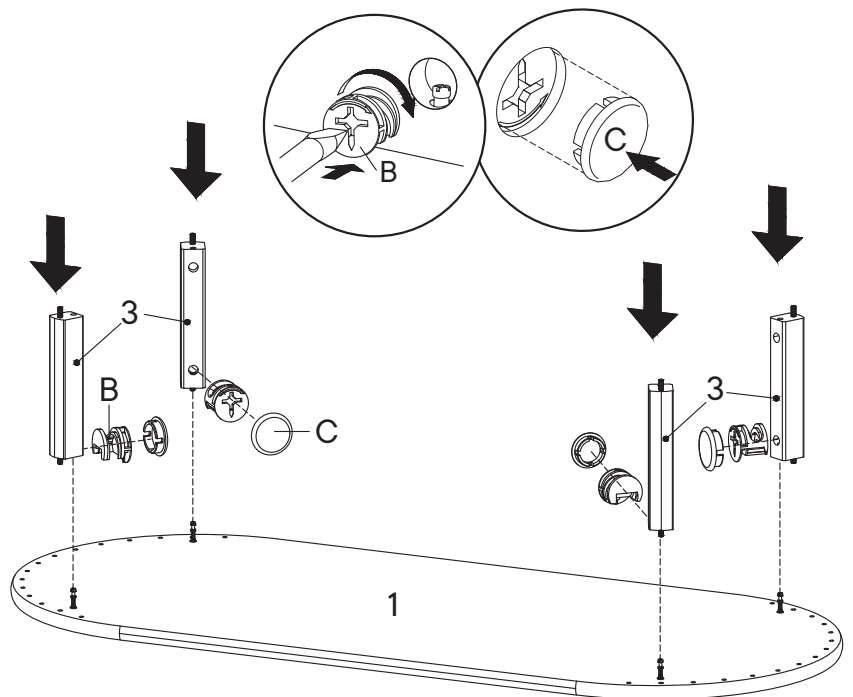



Step 3

HARDWARE

- B** Cam Lock Ø15 mm x4
- C** Screw Cap Ø15 mm x4

COMPONENTS



- 2** Bottom Board x1

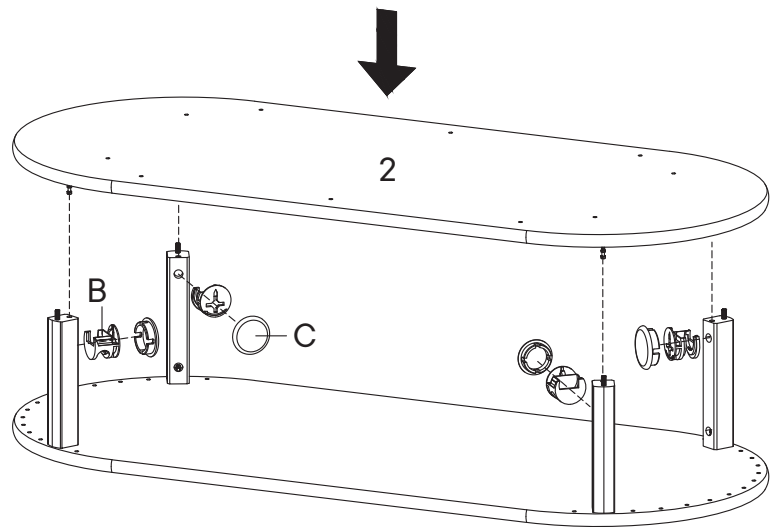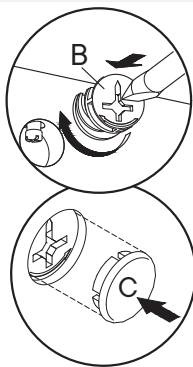

Step 4

HARDWARE




- E** Allen Key x1
- H** Screw M 6 x 40 mm x4
- I** Support Corner Brace x4
- J** Corner Brace x4
- K** Metal Leg x4
- L** Support Metal Leg 1 x2
- M** Support Metal Leg 2 x2

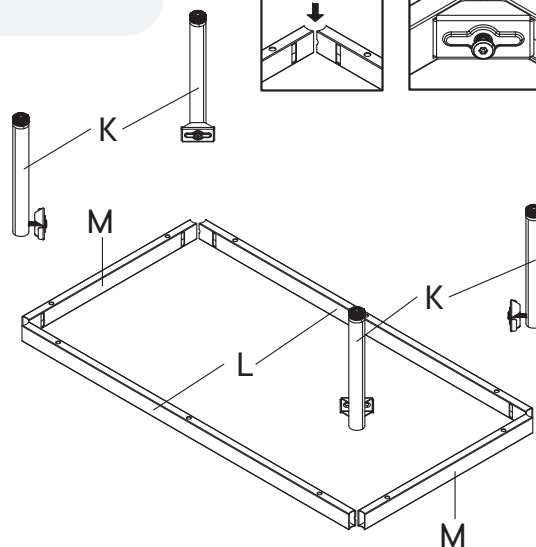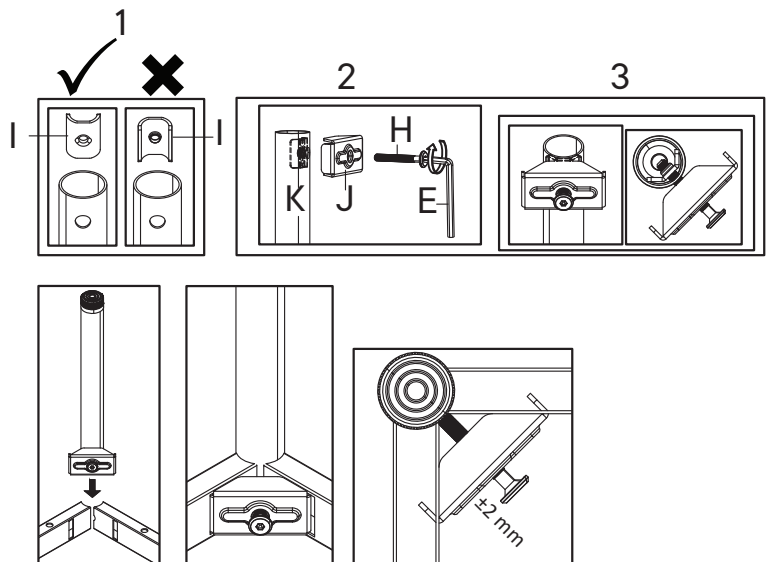

Step 5

HARDWARE

- G** Screw M 6.4 x 45 mm x10
- E** Allen Key x1

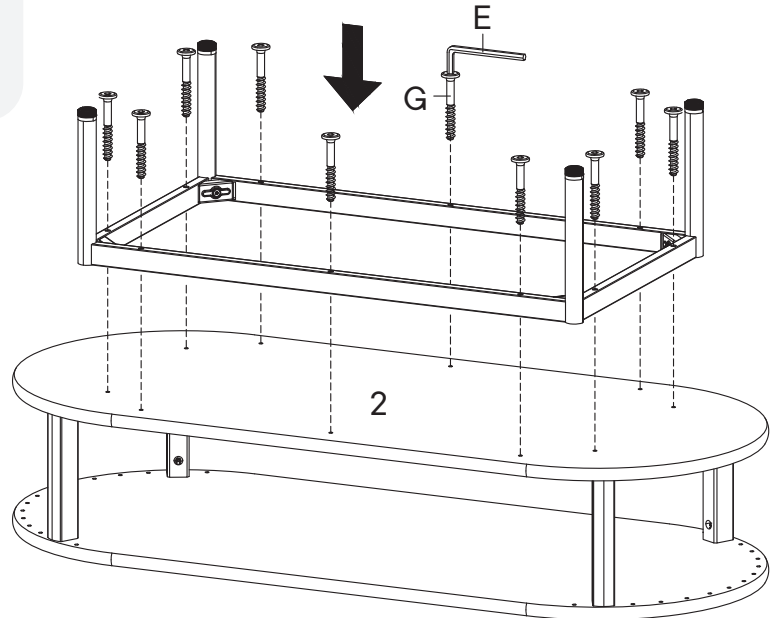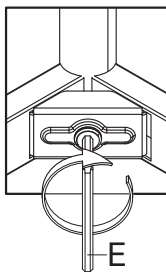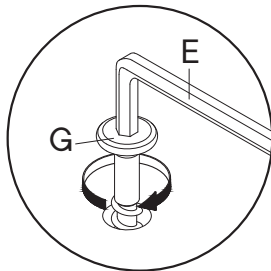


Step 6

HARDWARE


- F** PVC Sheet x2

COMPONENTS



- 4** Bar Side 2 x27

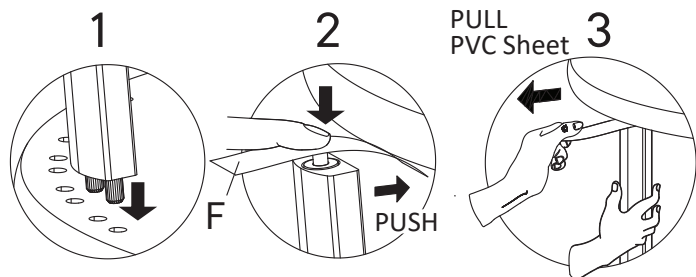

Only need 26 pcs of (4) Bar Side 2 for assembly, the package comes with extra 1 piece for spare.

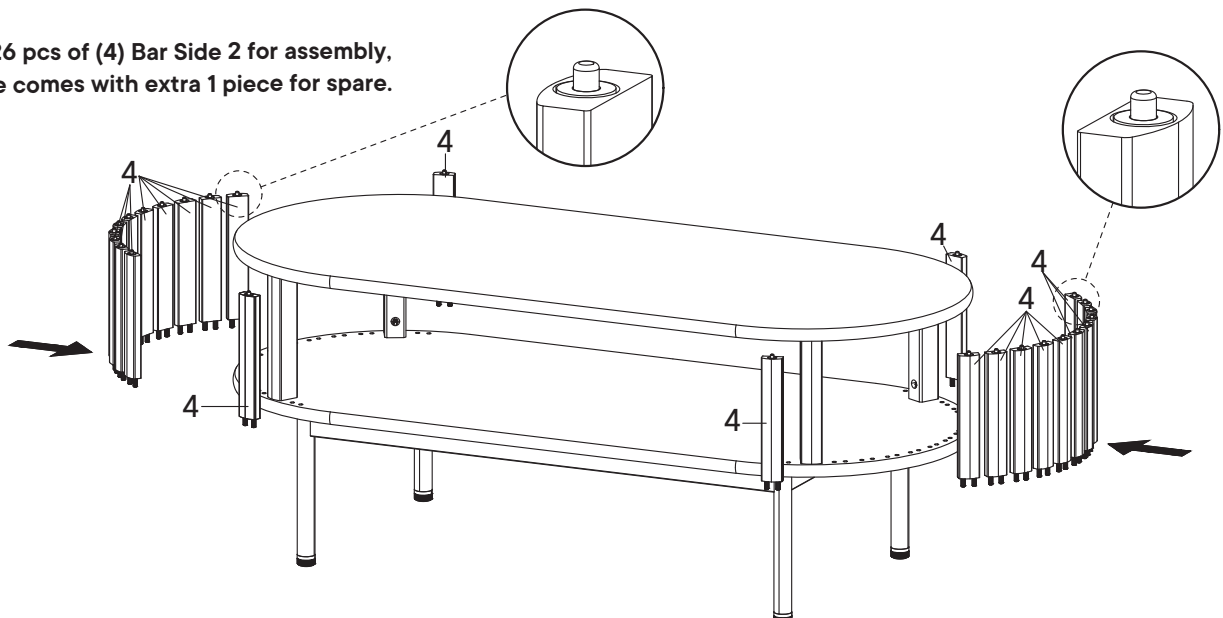

Step 7

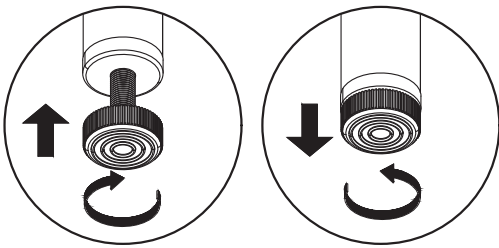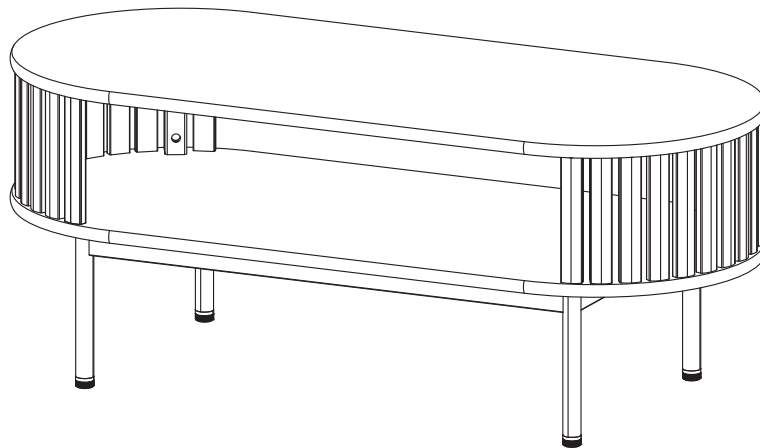

Great job!

Coffee Table assembly is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

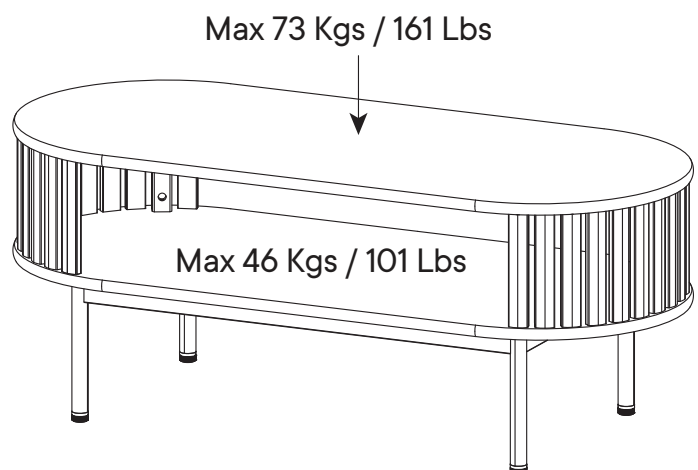

CONNECT WITH US!

Tag us [@modway_furniture](#) and [#modway](#) for a chance to be featured.