


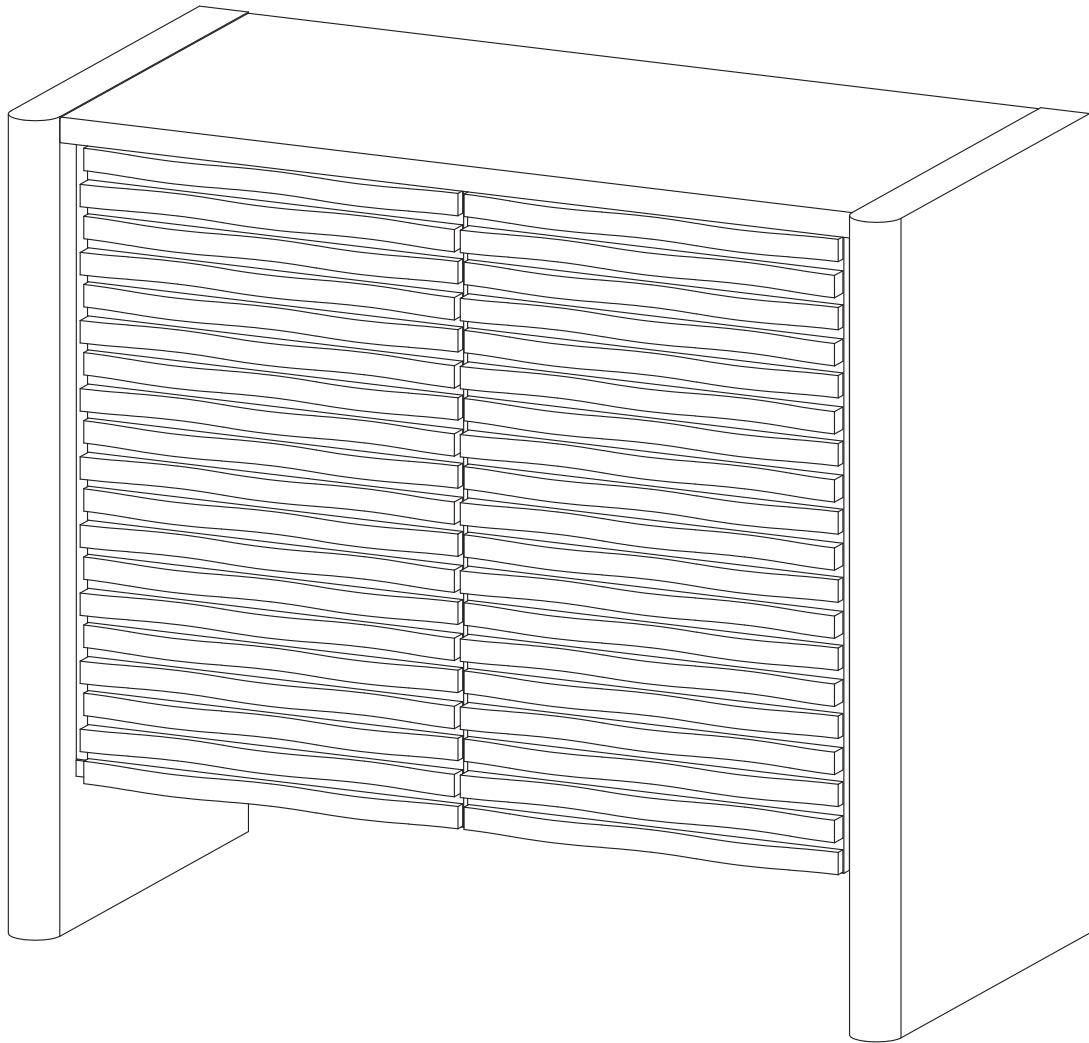

ASSEMBLY INSTRUCTIONS

Cabinet

EEI-7444 / V0.04.22.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.










Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x8
B		Cam Lock Ø15 mm	x8
C		Wood Dowel Ø8 x 30 mm	x12
D		Screw M 6.4 x 35 mm	x8
E		Floor Glide	x4
F		Screw M 3.5 x 13 mm	x4
G		Screw M 4.5 x 12.5 mm	x24
H		Allen Key	x2
I		Shelf Pin	x4
J		Screw M 3.5 x 15.5 mm	x10
K		Wedge	x10
L		Joining Strip	x1
M		Push Tool	x2
N		Screw M 6.4 x 14 mm	x4
O		Anti Deflection - Bar	x1
HS26B		Hinge	x4

WHAT YOU NEED:




Phillips



Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

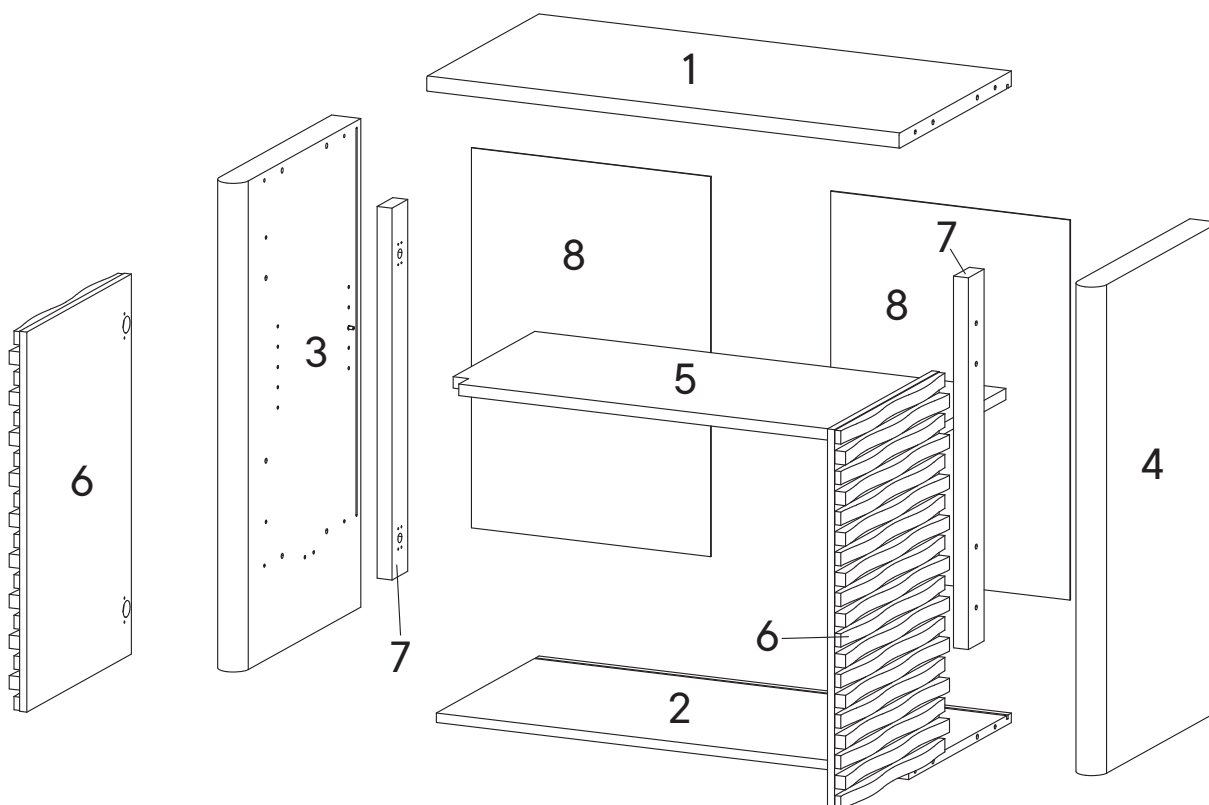

1	Top Board	x1	7	Support Board	x2
2	Bottom Board	x1	8	Back Board	x2
3	Side Board Left	x1			
4	Side Board Right	x1			
5	Adjustable Shelf	x1			
6	Door	x2			

HARDWARE

A Cam Bolt Ø6 x 35 mm x8

E Floor Glide x4


COMPONENTS

3 Side Board Left x1

4 Side Board Right x1

1.1 Insert Cam Bolt Ø6 x 35 mm (A) to Side Board Left (3) then secure with screwdriver and Insert Floor Glide (E).

1.2 Insert Cam Bolt Ø6 x 35 mm (A) to Side Board Right (4) then secure with screwdriver and Insert Floor Glide (E).

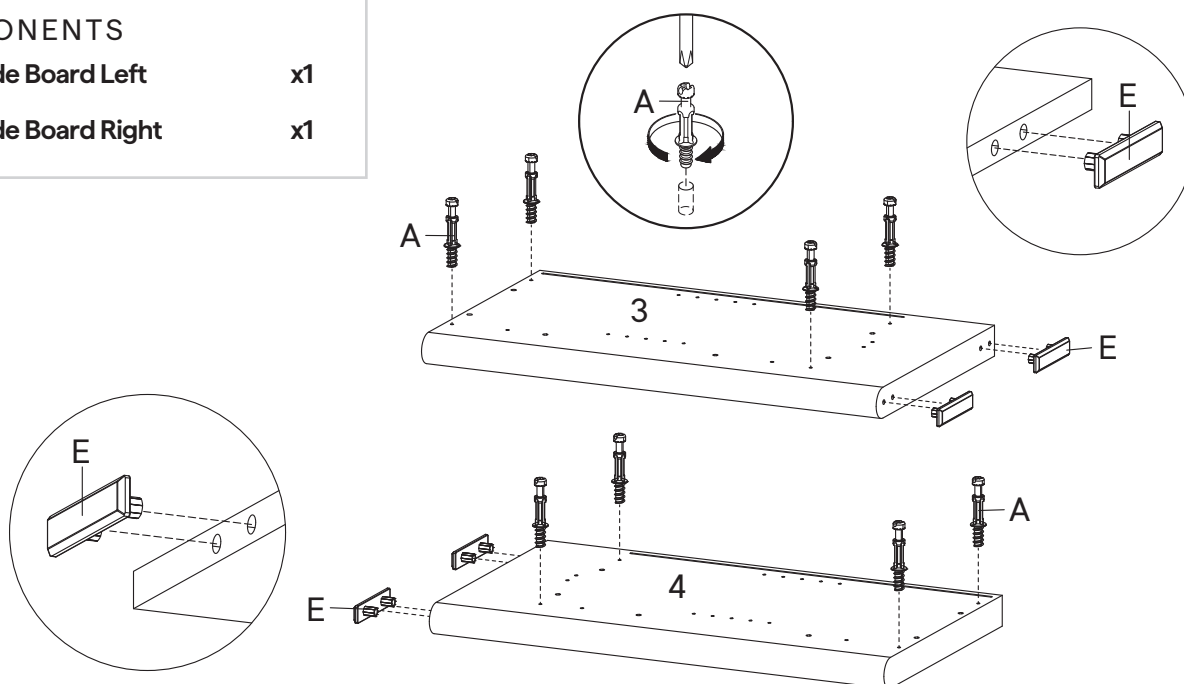

STEP 02

HARDWARE

C Wood Dowel Ø8 x 30 mm x4

F Screw M 3.5 x 13 mm x4


M Push Tool x2

COMPONENTS

1 Top Board x1

2.1 Insert Wood Dowel Ø8 x 30 mm (C) into the Top Board (1).

2.2 Install Push tool (M) into Top Board (1) and secure with the Screw M 3.5 x 13 mm (F). Align the front part of the Push Tool body with the bumper to the hook, then press down the back part of the Push Tool.

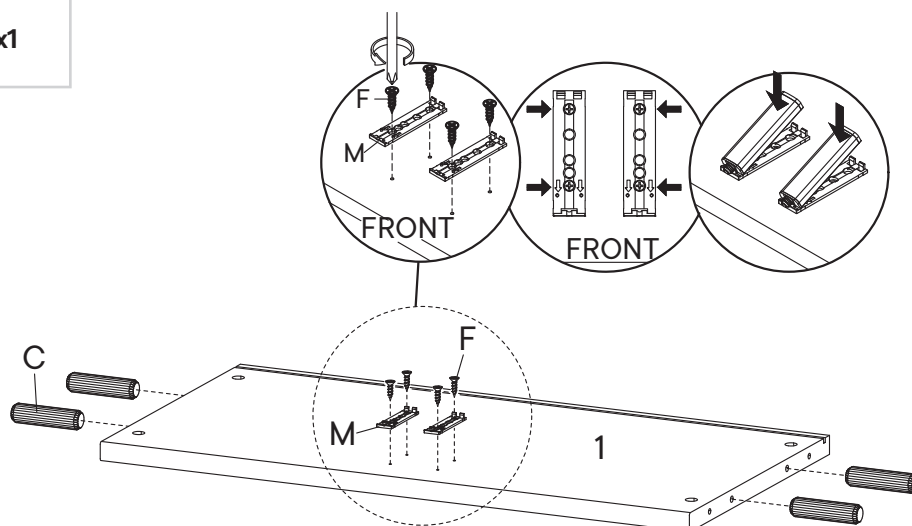

HARDWARE


- C** Wood Dowel Ø8 x 30 mm x4
- D** Screw M 6.4 x 35 mm x4
- H** Allen Key x1
- O** Anti - Deflection Bar x1

COMPONENTS

- 2** Bottom Board x1

3.1 install the Anti - Deflection Bar (O) into the Bottom Board (2) and secure with Screw M 6.4 x 35 mm (D), tighten screws using Allen Key (H). Make sure the position of Anti - Deflection Bar as shown in the detail.

3.2 Insert Wood Dowel Ø8 x 30 mm (C) into the Bottom Board (2).

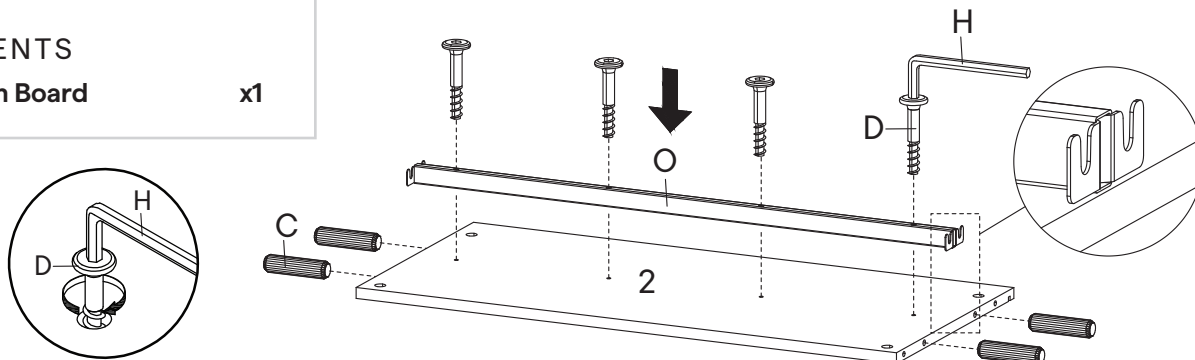

STEP 04

HARDWARE


- B** Cam Lock Ø15 mm x4
- H** Allen Key x1
- N** Screw M 6.4 x 14 mm x2

COMPONENTS

- 1** Top Board x1
- 2** Bottom Board x1
- 4** Side Board Right x1

4.1 Combine Bottom Board (2) into Side Board Right (4) secure with Screw M 6.4 x 14 mm (N) on the Anti - Deflection Bar holes, then tighten screws using Allen Key (H). Position as shown in the figure.

4.2 Then combine Top Board (1) into Side Board Right (4) and insert Cam Lock Ø15 mm (B) to the holes of component Top Board & Bottom Board, then tighten using a screwdriver. Position as shown in the figure.

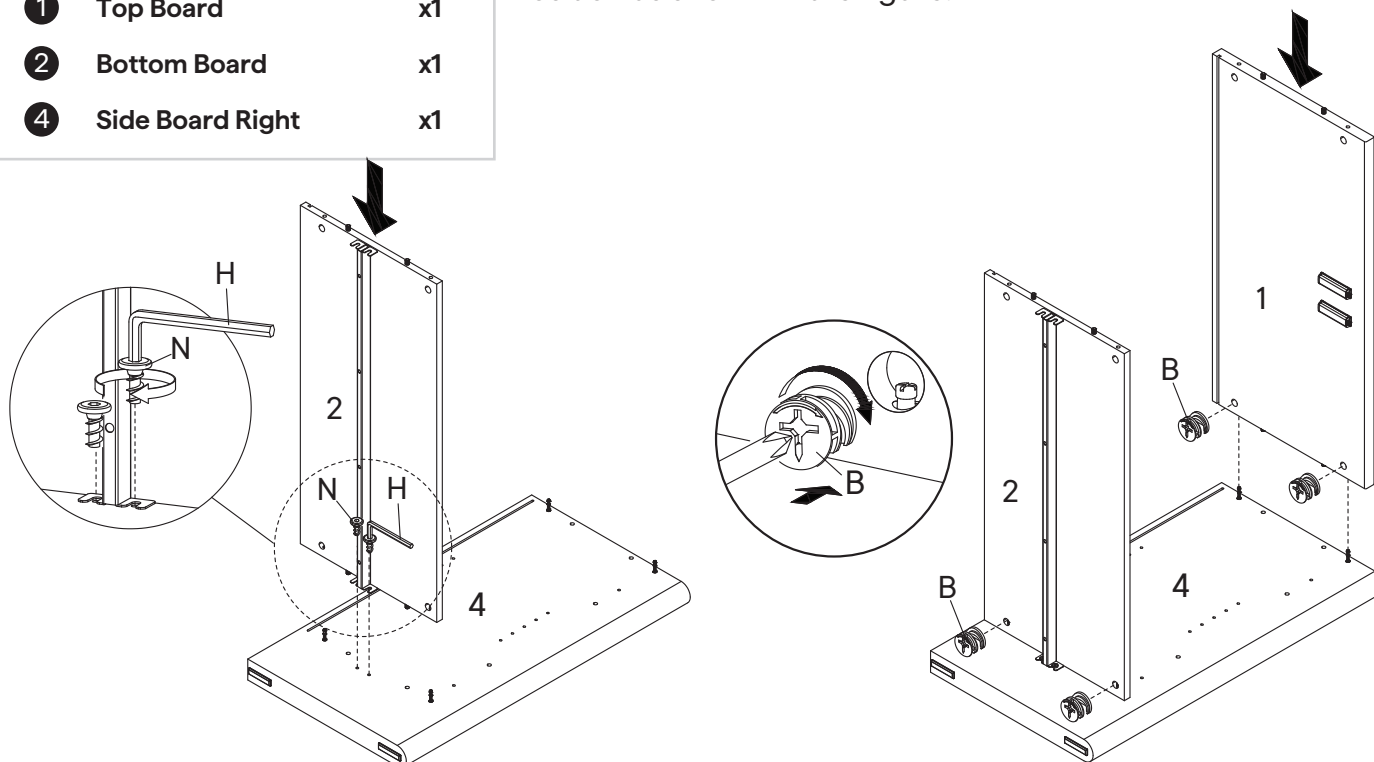



HARDWARE

L Joining Strip x1


COMPONENTS

8 Back Board x2

5.1 Insert Back Boards (8) into Side Board Right and insert Joining Strip (L) in between the Back Boards (8). Position as shown in the figure.

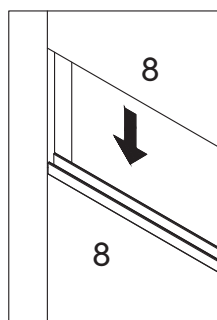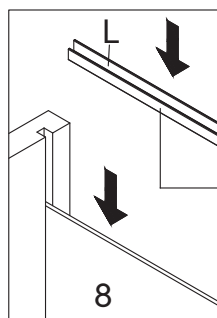

Laminated

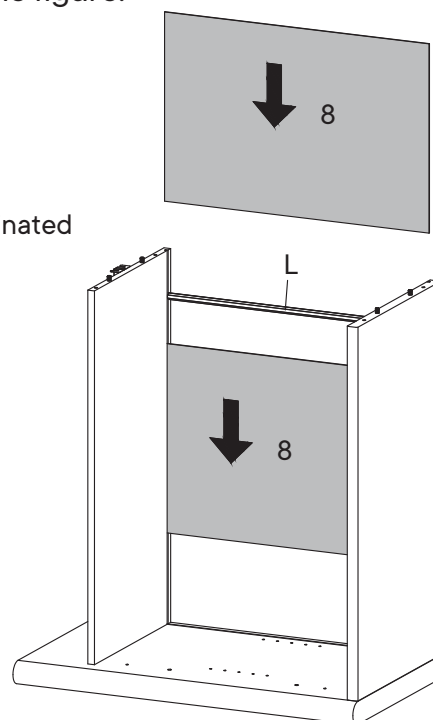

STEP 06

HARDWARE

B Cam Lock Ø15 mm x4




H Allen Key x1

N Screw M 6.4 x 14 mm x2

COMPONENTS

3 Side Board Left x1

6.1 Combine Side Board Left (3) and the component has been previously assembled. Secure with Cam Lock Ø15 mm (B), then tighten using screwdriver and secure Anti-Deflection Bar with the Screw M 6.4 x 14 mm (N) then tighten screws using Allen Key (H). Position as shown in the figure.

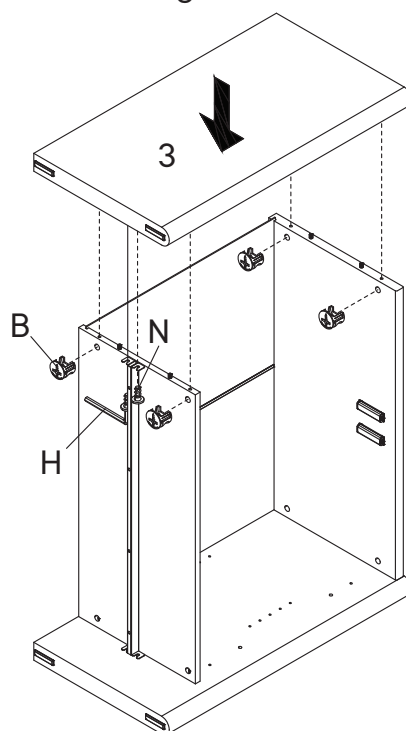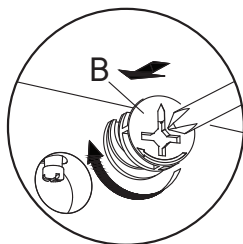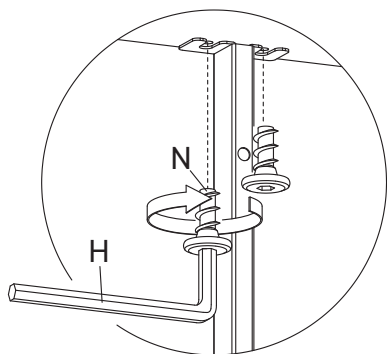


HARDWARE

Ⓒ Wood Dowel Ø8 x 30 mm x4

COMPONENTS

⑦ Support Board x2

7.1 Insert Wood Dowel Ø8 x 30 mm (C) into the Support Board (7).

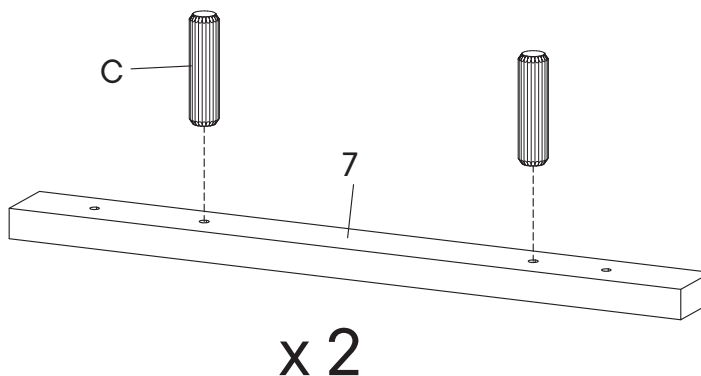

STEP 08

HARDWARE


Ⓓ Screw M 6.4 x 35 mm x4

Ⓗ Allen Key x1

COMPONENTS

⑦ Support Board x2

8.1 Combine Support Board (7) into Side Boards, and secure with Screw M 6.4 x 35 mm (D), tighten screws using Allen Key (H). Position as shown in the figure.

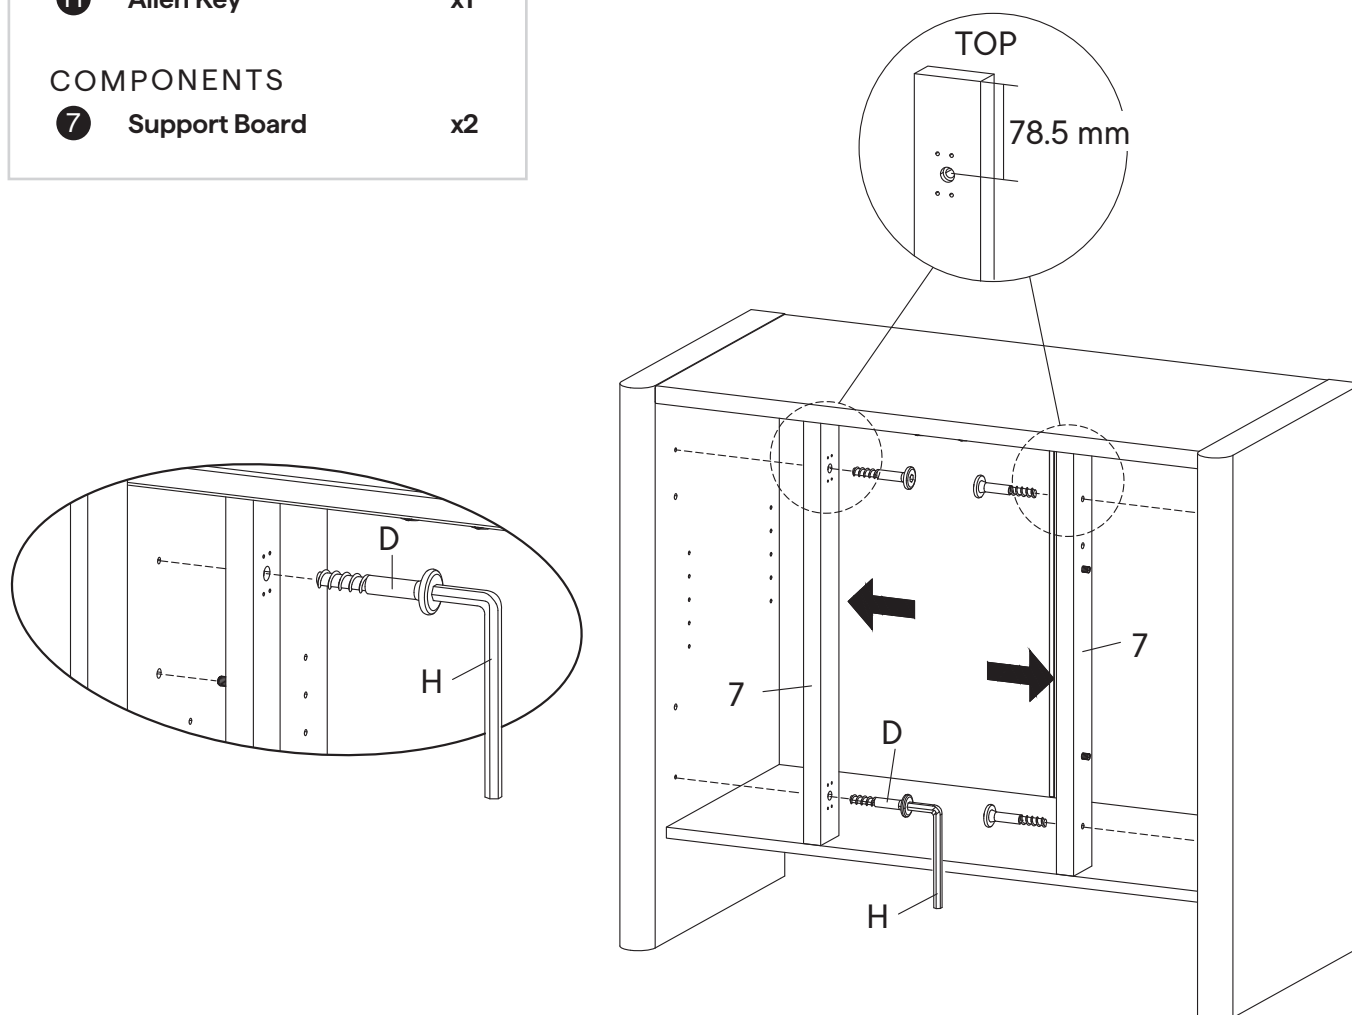


HARDWARE

I Shelf Pin x4

COMPONENTS

5 Adjustable Shelf x1

9.1 Insert Shelf Pin (I) into the holes on the Side Boards at the desired level. Then, place the Adjustable Shelf (5) by aligning its hole with the Shelf Pin (I) and inserting it securely.

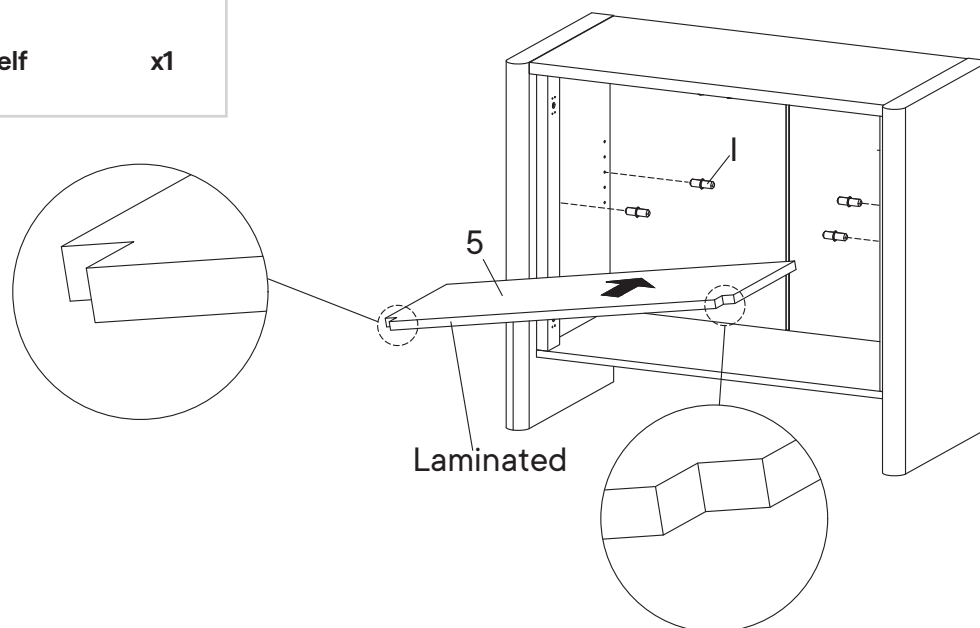

STEP 10

HARDWARE


G Screw M 4.5 x 12.5 mm x8

HS26B Hinge x4

COMPONENTS

6 Door x2

10.1 Insert Hinge (HS26B) into Door (6). Secure with Screw M 4.5 x 12.5 mm (G). Then tighten using screwdriver.

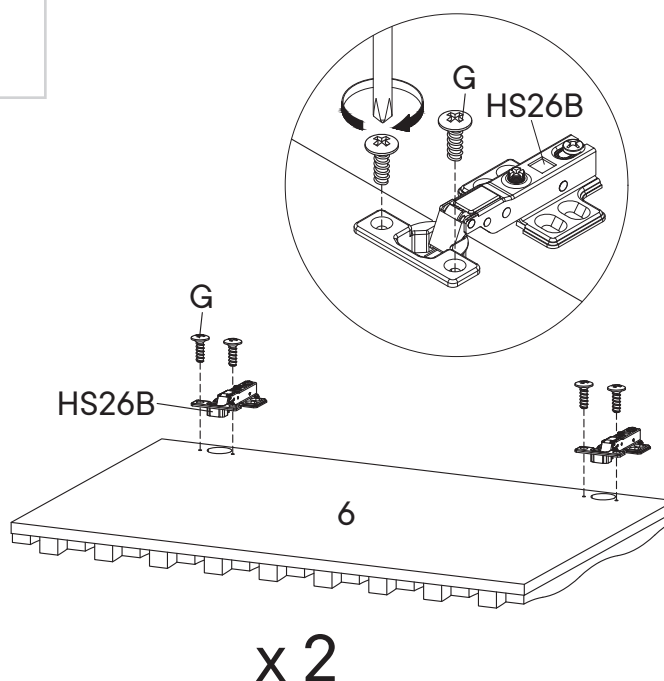



HARDWARE

G Screw M 4.5 x 12.5 mm x16

COMPONENTS

6 Door x2

11.1 Install Door (6) into Support Board and secure with Screw M 4.5 x 12.5 mm (G). Please refer to the last page for more guide on how to adjust hinges. Position as shown in the figure.

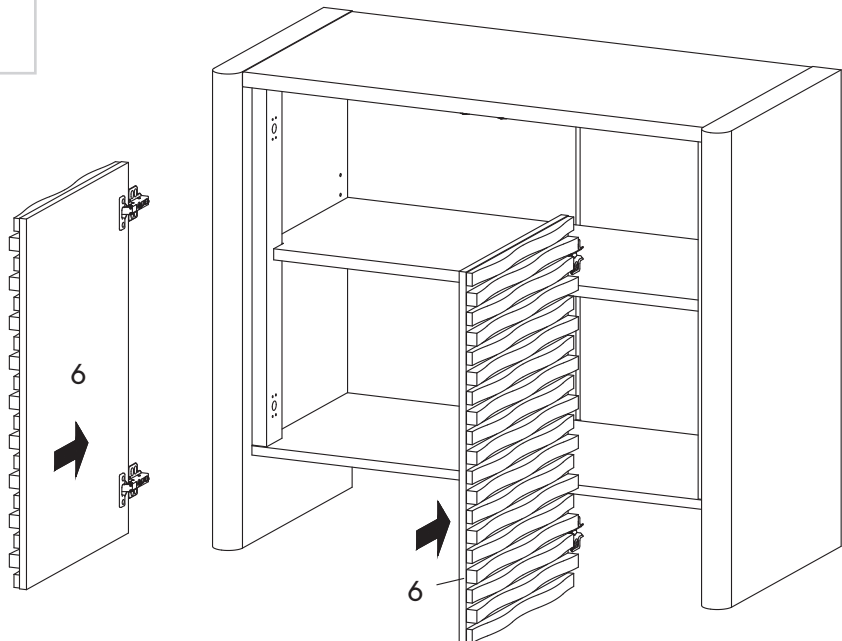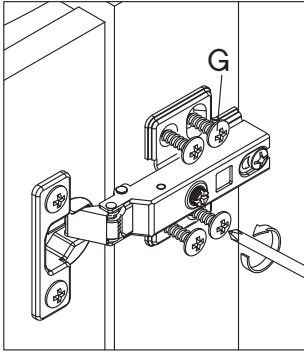



STEP 12

HARDWARE

J Screw M 3.5 x 15.5 mm x10

K Wedge x10

12.1 Use the Wedge (K) and Screw M 3.5 x 15.5 mm (J) to tighten the back of the cabinet using screwdriver. Before securing the wedges (K), ensure that the top board and bottom board are aligned at a 90° angle against the cabinet.

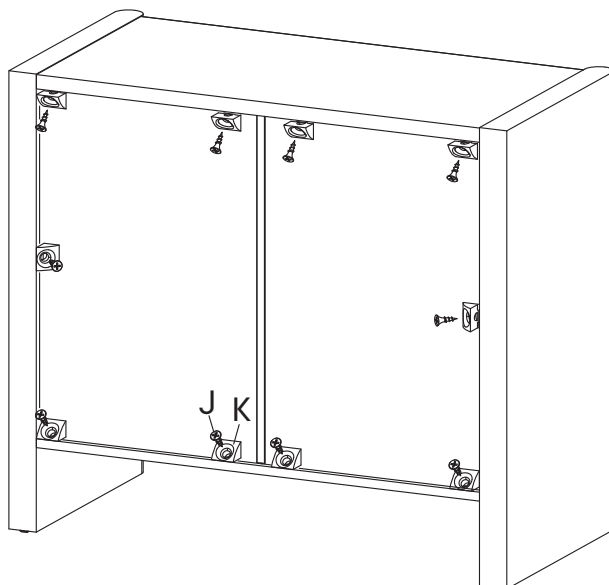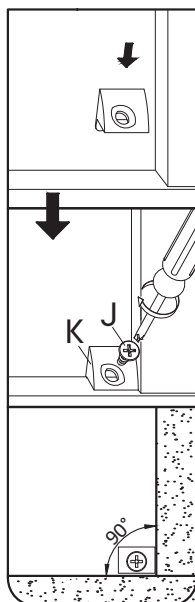


Great job!

Cabinet assembly is complete

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

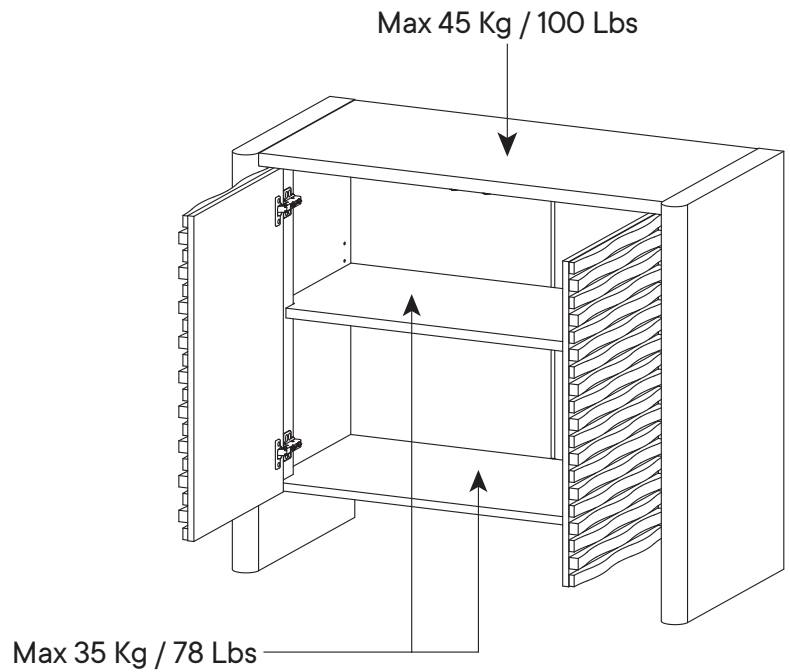

CONNECT WITH US!




Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

modway





Questions? Contact us!
609.256.9000
cs@modway.com

Cabinet Door Alignment

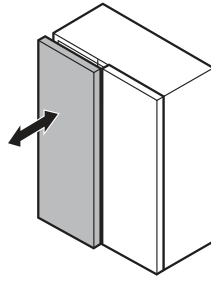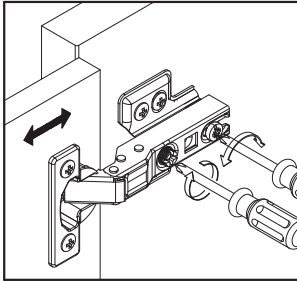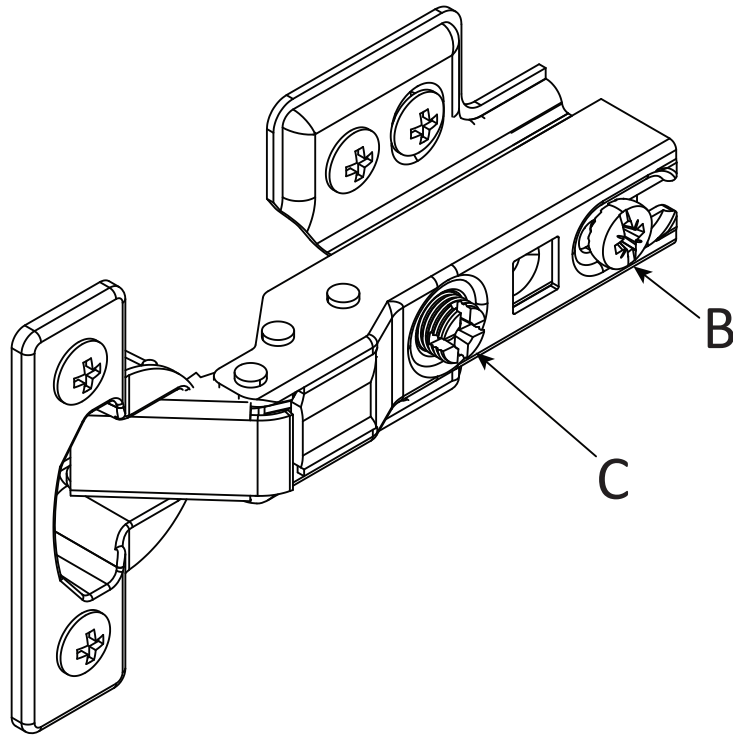

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

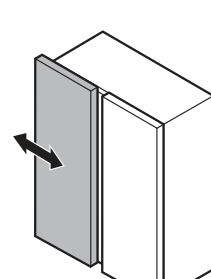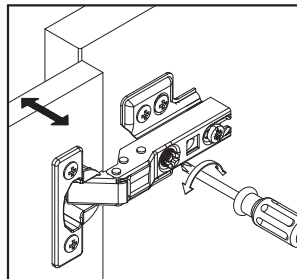

To adjust side ways.








Turn screw "C" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

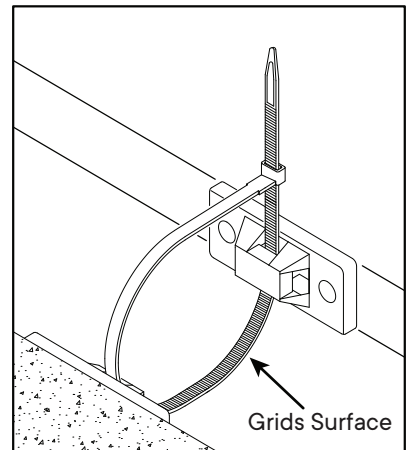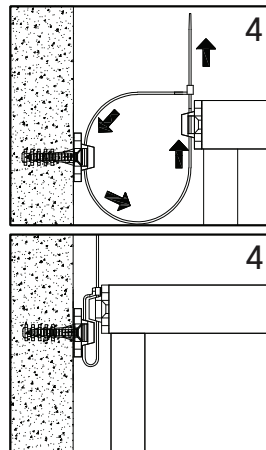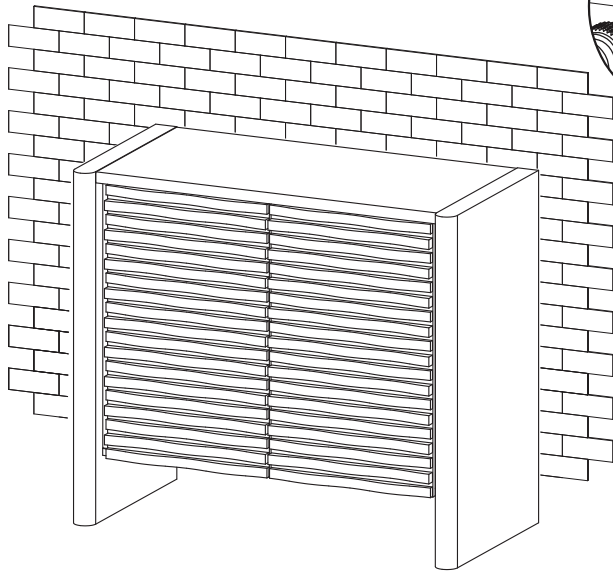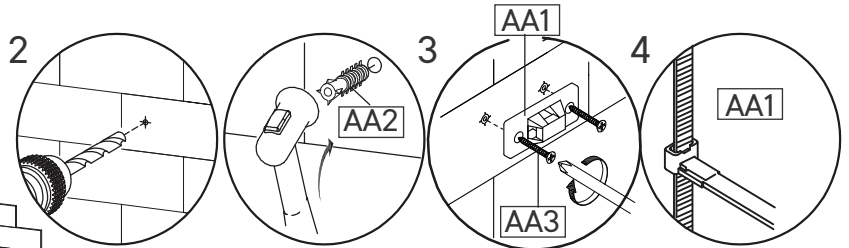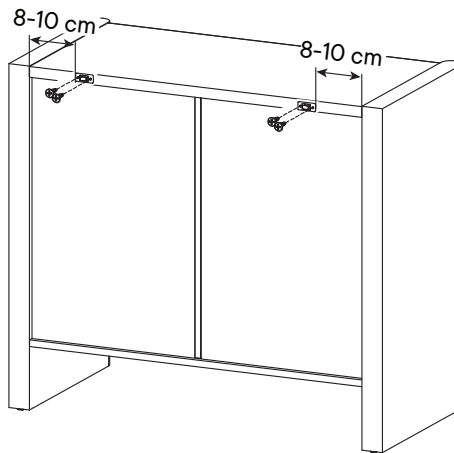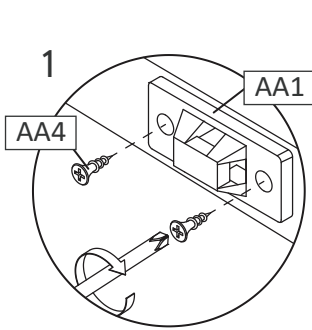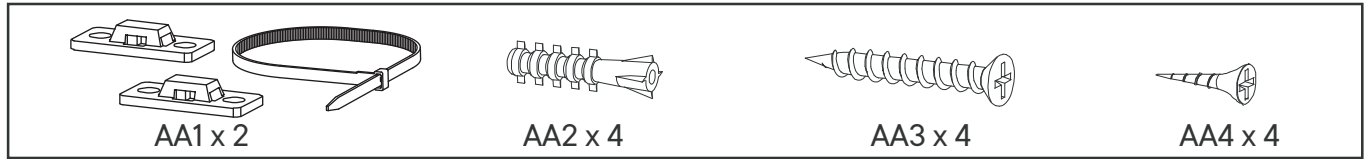

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit. Attach the wall plugs (AA2).
3. Install the other bracket (AA1) on the wall over wall plugs (AA2), secure with screw (AA3). Place furniture into position so both brackets (AA1) are aligned.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.