


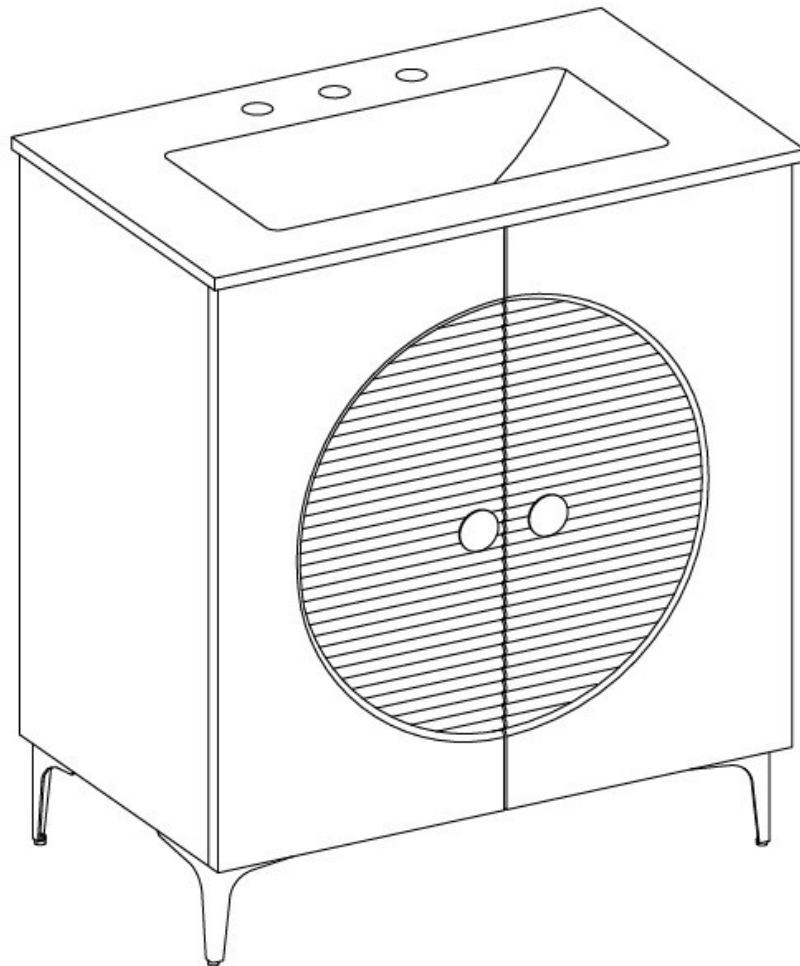

ASSEMBLY INSTRUCTIONS

Bathroom Vanity

EEI-7453 / V0.05.08.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

For vanity and plumbing installation, we suggest hiring a professional contractor and plumber.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.






Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35mm	x14
B		Cam Lock Ø15 x 13mm	x14
C		Wooden Dowel Ø8 x 40mm	x6
D		Screw 4 x 16mm	x16
E		Shelf Pin	x4
F		Door Hinges	x4
G		Hinge Screw 4 x 16mm	x8
H		Allen Bolt M6 x 12mm	x16
I		Knob	x2
J		Knob Screw	x2
K		Corner Bracket	x4
L		Allen Key M4	x1

WHAT YOU NEED:




Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 9

All parts are numbered with a sticker according to this list.


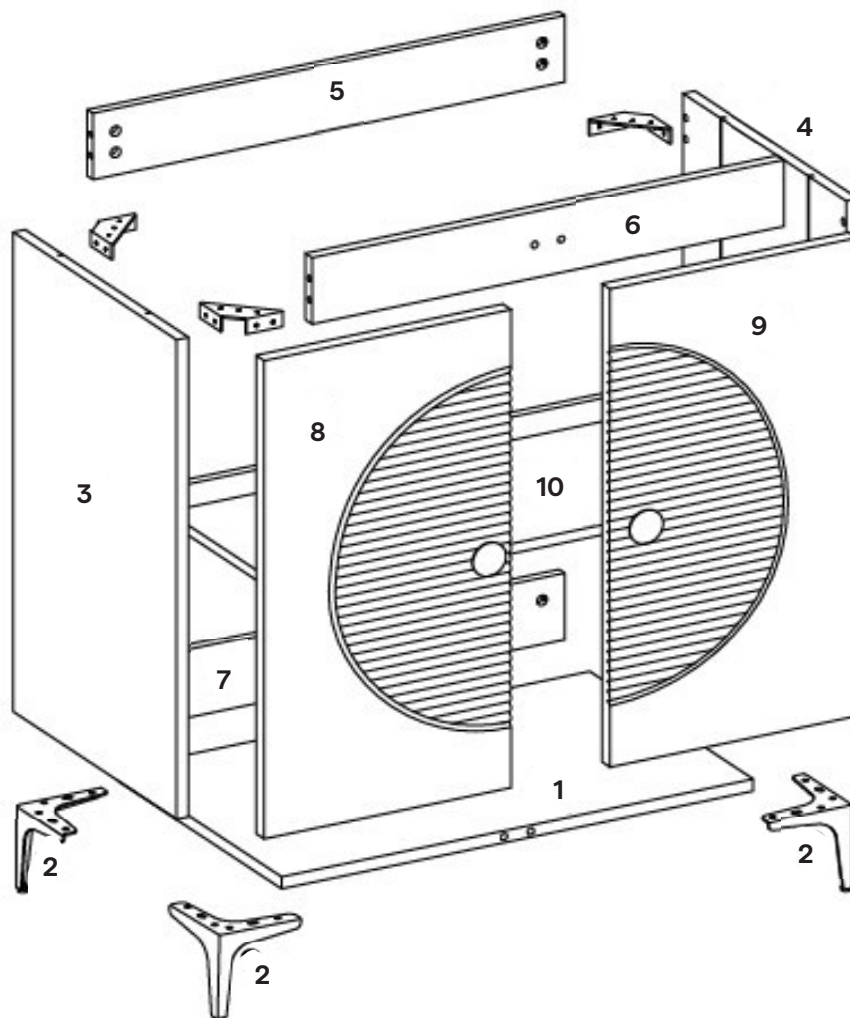


1	Bottom Panel	x1	6	Top Front Rail	x1
2	Metal Legs	x4	7	Bottom Back Rail	x1
3	Left Side Panel	x1	8	Left Door Panel	x1
4	Right Side Panel	x1	9	Right Door Panel	x1
5	Top Back Rail	x1	10	Shelf	x1



HARDWARE**(C)** Wooden Dowel Ø8 x 40mm x6**(H)** Allen Bolt M6 x 12mm x16**COMPONENTS****(1)** Bottom Panel x1**(2)** Metal Legs x4**(7)** Bottom Back Rail x1**TOOLS****(L)** Allen Key M4 x1

1.1 Insert a **Wooden Dowel (C)** into the side hole of the **Bottom Panel (1)**. Repeat on the **Bottom Back Rail (7)**.

1.2 Connect **Metal Legs(2)** to the **Bottom Panel (1)** by inserting **Allen Bolt (H)** to the corresponding holes.

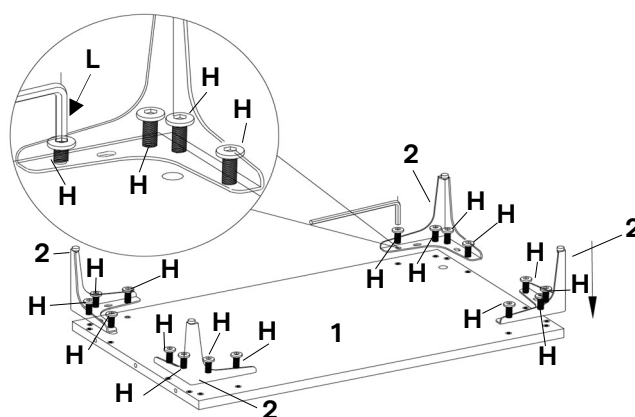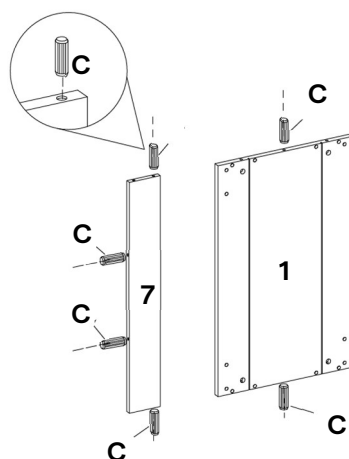

STEP 02

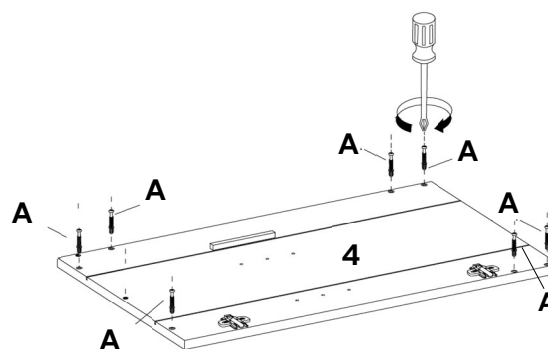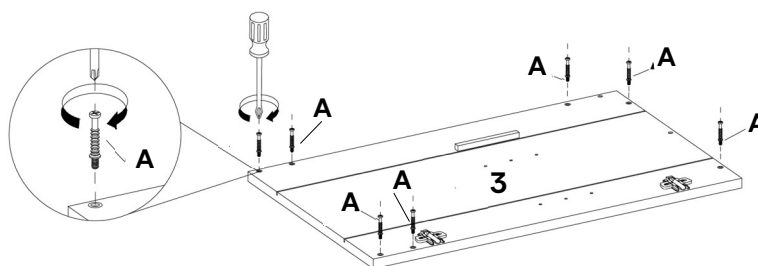HARDWARE**(A)** Cam Bolt Ø6 x 35mm x14**COMPONENTS****(3)** Left Side Panel x1**(4)** Right Side Panel x1**TOOLS****Phillips Head Screwdriver** x1

2.1 Insert and screw a **Cam Bolt (A)** into the bottom hole of the **Left Side Panel (3)**. Repeat on other **Right Side Panel(4)**.

HARDWARE

F	Door Hinges	x4
G	Hinge Screw 4 x 16mm	x8
I	Knob	x2
J	Knob Screw	x2

COMPONENTS

8	Left Door Panel	x1
9	Right Door Panel	x1

TOOLS


Phillips Head Screwdriver	x1
---------------------------	----

3.1 Lay both **Doors (8 and 9)** face-down on a flat surface.

3.2 Place the **Door Hinge (F)** on each of the pre-cut recessed spot. There are two recessed spots on each door.

3.3 Secure each **Door Hinge (F)** with two **Screws (G)**.

3.4 Place the **Knob(I)** on each Door as shown in diagram below and tight the **Knob Screw(J)** on each door.

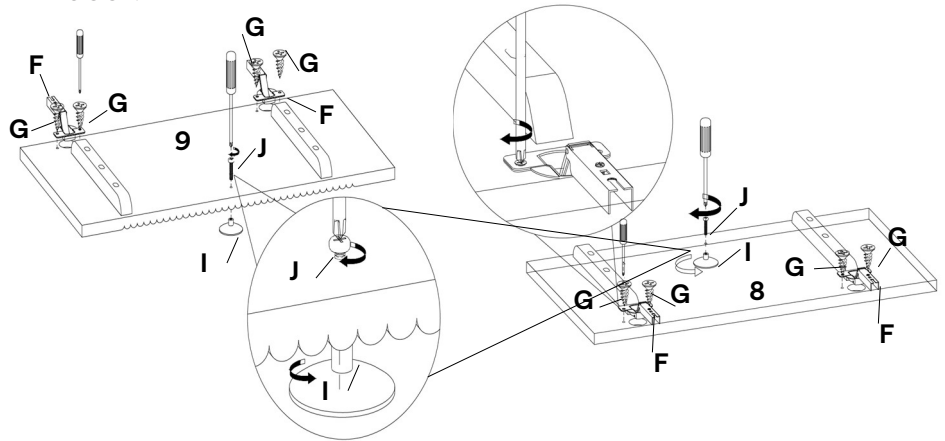

STEP 04

HARDWARE


B	Cam Lock	x7
----------	----------	----

COMPONENTS


1	Bottom Panel	x1
2	Metal Legs	x1
3	Left Side Panel	x1
5	Top Back Rail	x1
6	Top Front Rail	x1
7	Bottom Back Rail	x1

TOOLS

Phillips Head Screwdriver	x1
---------------------------	----

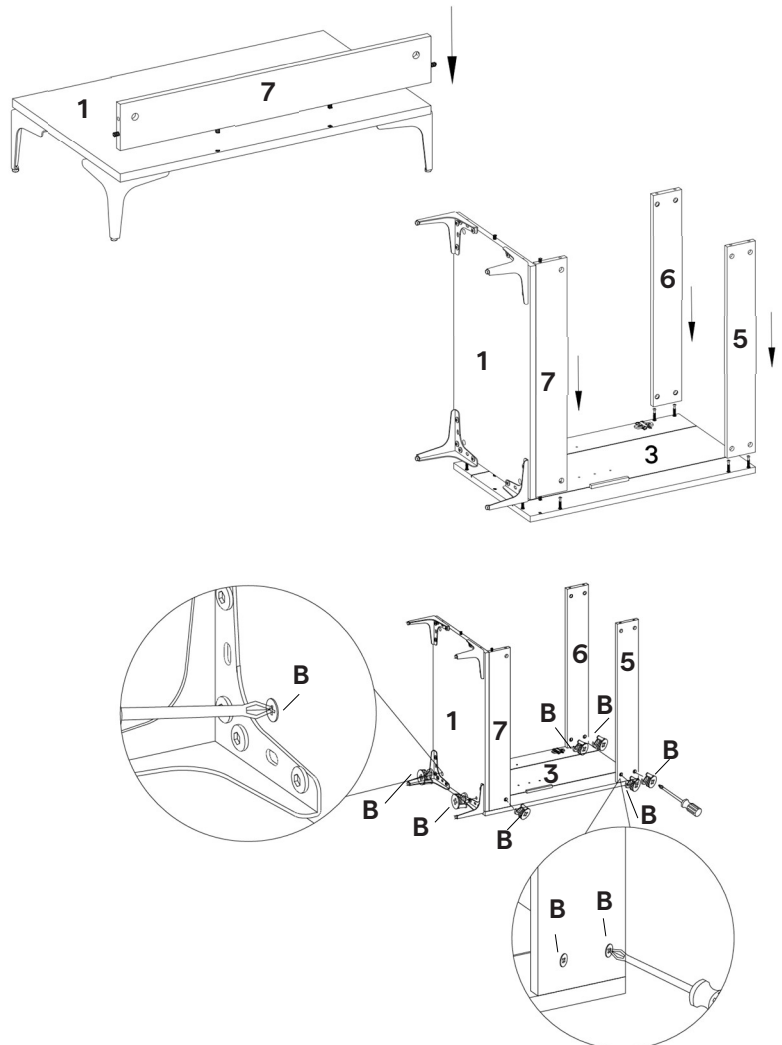

4.1 Connect **Top Back Rail (6)**, **Top Front Rail (5)**, and **Bottom Back Rail (7)** to the **Left Side Panel (3)** by inserting **Cam Locks (B)** to the corresponding holes.

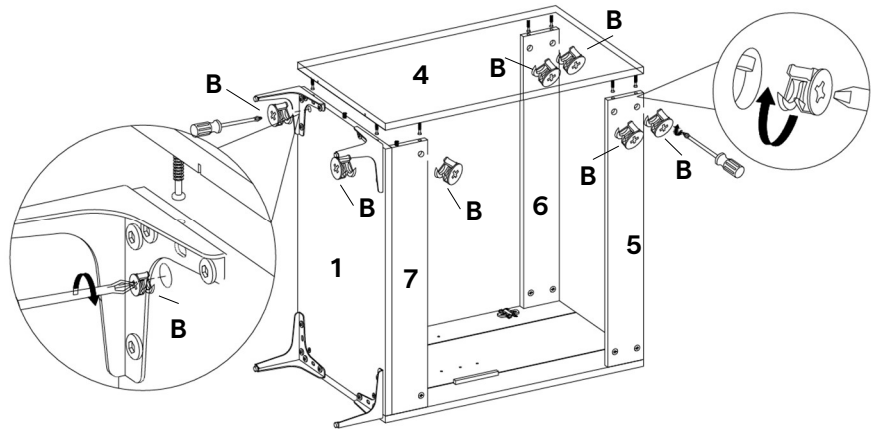
HARDWARE**(B)** Cam Lock x7**COMPONENTS****(4)** Right Side Panel x1**(5)** Top Back Rail x1**(6)** Top Front Rail x1**(7)** Bottom Back Rail x1

5.1 Connect **Top Back Rail (5)**, **Top Front Rail (6)**, and **Bottom Back Rail (7)** to the **Right Side Panel (4)** by inserting **Cam Locks (B)** to the corresponding holes.

STEP 06

HARDWARE**(D)** Screw 4 x 16mm x16**(K)** Corner Bracket x4**TOOLS**

Phillips Head Screwdriver x1

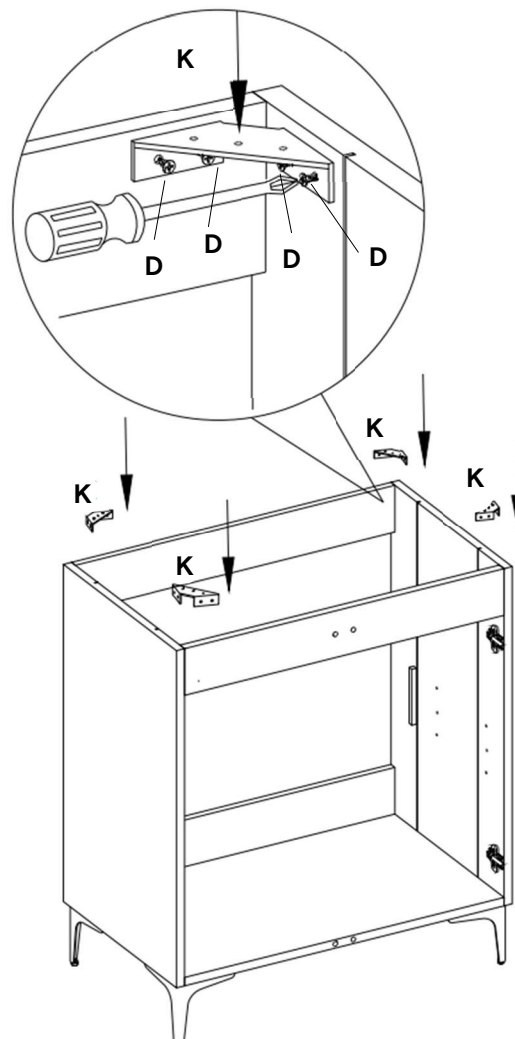

6.1 Place the **Corner Bracket (K)** into place and secure it by tightening **Screws (D)** on the corner of the cabinet. Repeat on the all corners.

6.2 Carefully tighten all of the **Screws (D)**.


COMPONENTS

- 8** Left Door Panel x1
- 9** Right Door Panel x1

TOOLS

- Phillips Head Screwdriver x1

7.1 Carefully align each **Door Panel (8 and 9)** by loosen the screw of preinstalled mounting plates and install the **Door Panel (8 and 9)** by tightening the screw of the hinge.

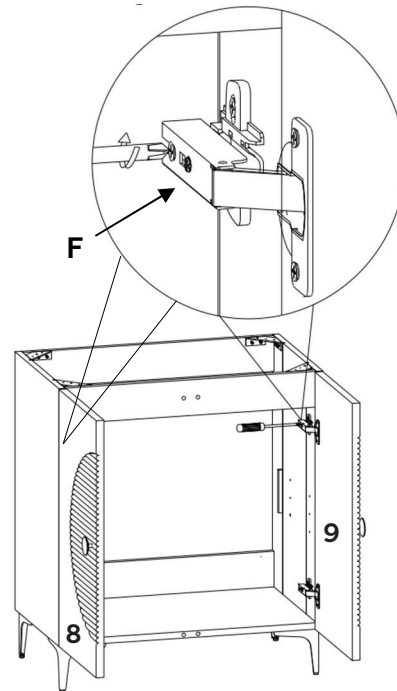

STEP 08

HARDWARE




- E** Shelf Pin x4

COMPONENTS

- 10** Shelf x1

8.1 Insert the **Shelf Pin (E)** to the desired height.


8.2 Insert the **Shelf(10)** into the cabinet at a slight tilt, and put the Shelf on the top of the **Shelf Pin (E)** to ensure the shelf stays secure.

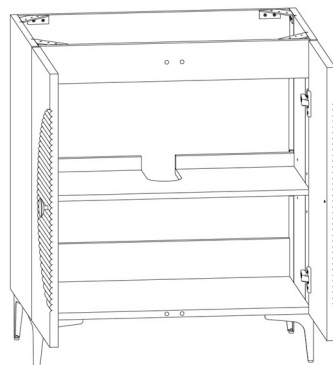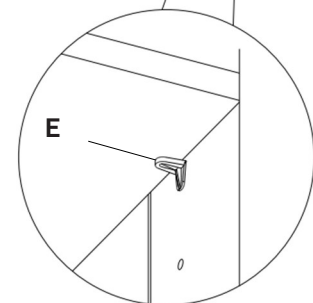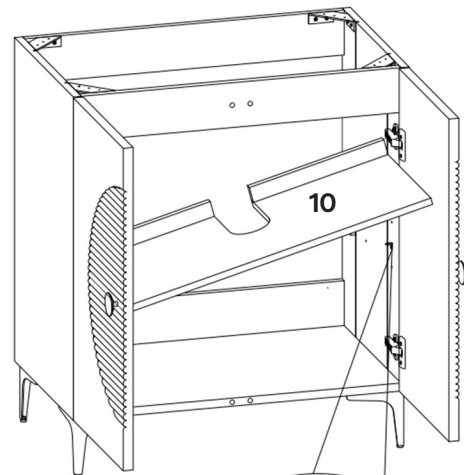

9.1 Using a bubble level, adjust the cabinet height by adjusting the leg pins.

9.2 Depending on the type of wall in the room, drill the holes and secure your new vanity cabinet.

IMPORTANT: We recommend using a professional installer when installing your vanity cabinet.

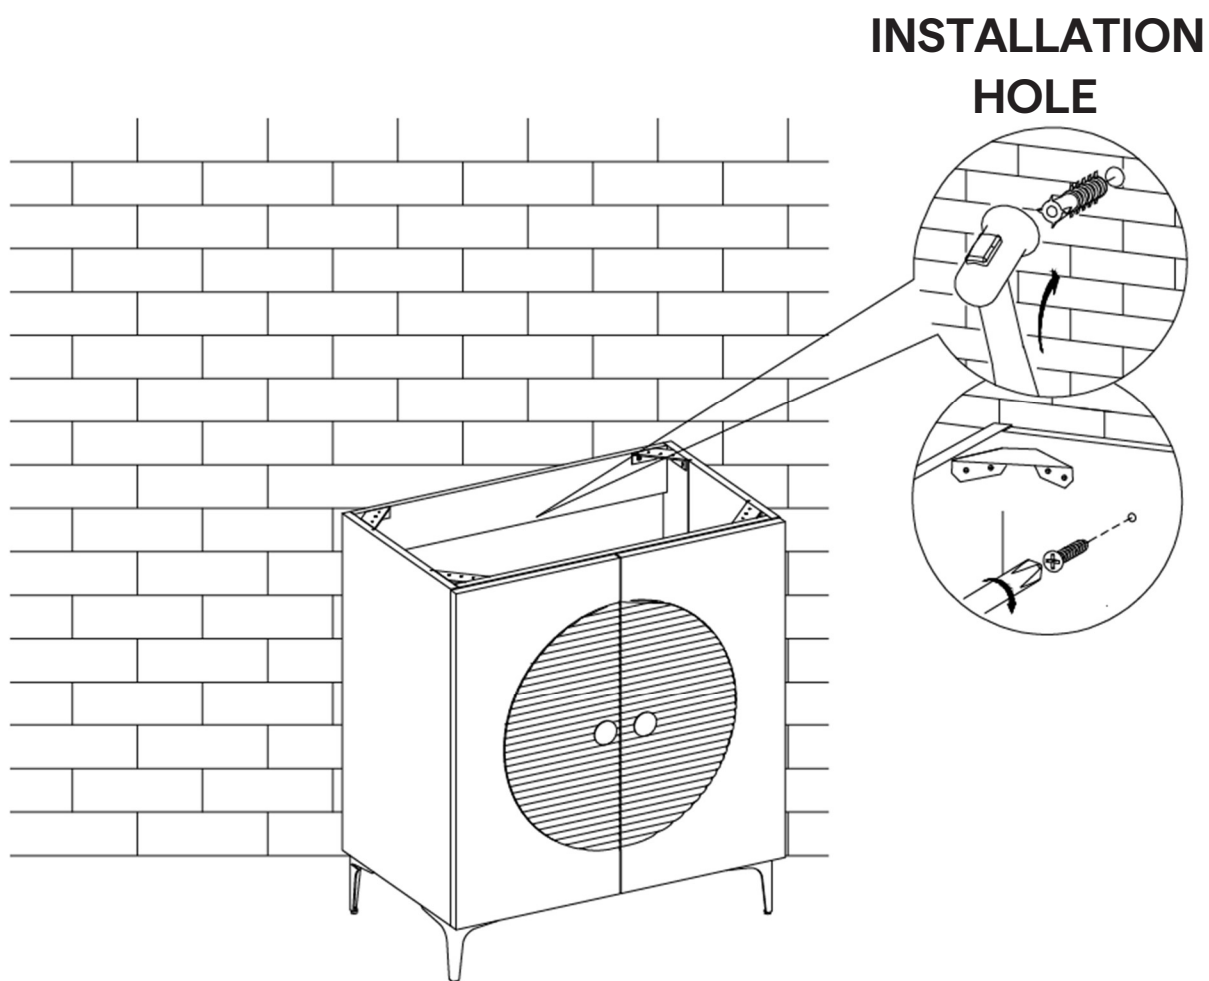


NOTE: Tools and hardware needed for installation are not included.

Great job!

Bathroom Vanity assembly is complete and ready for sink installation.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

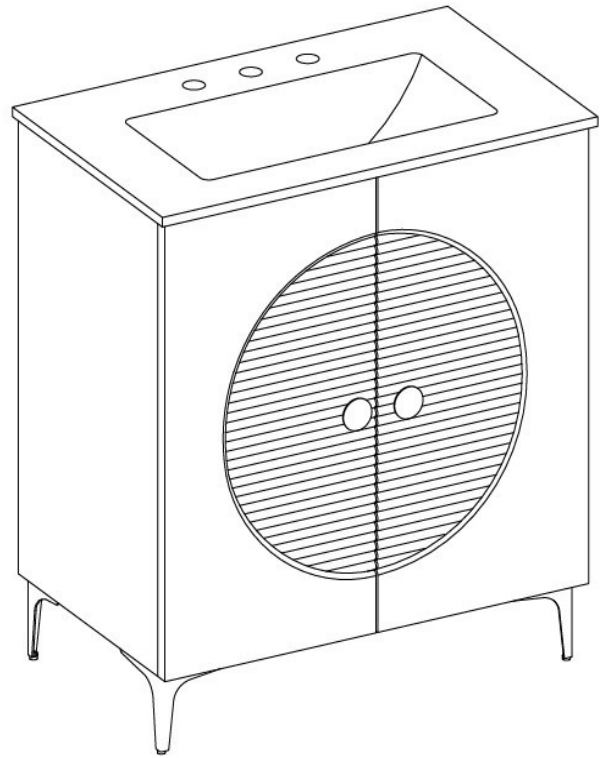

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com