


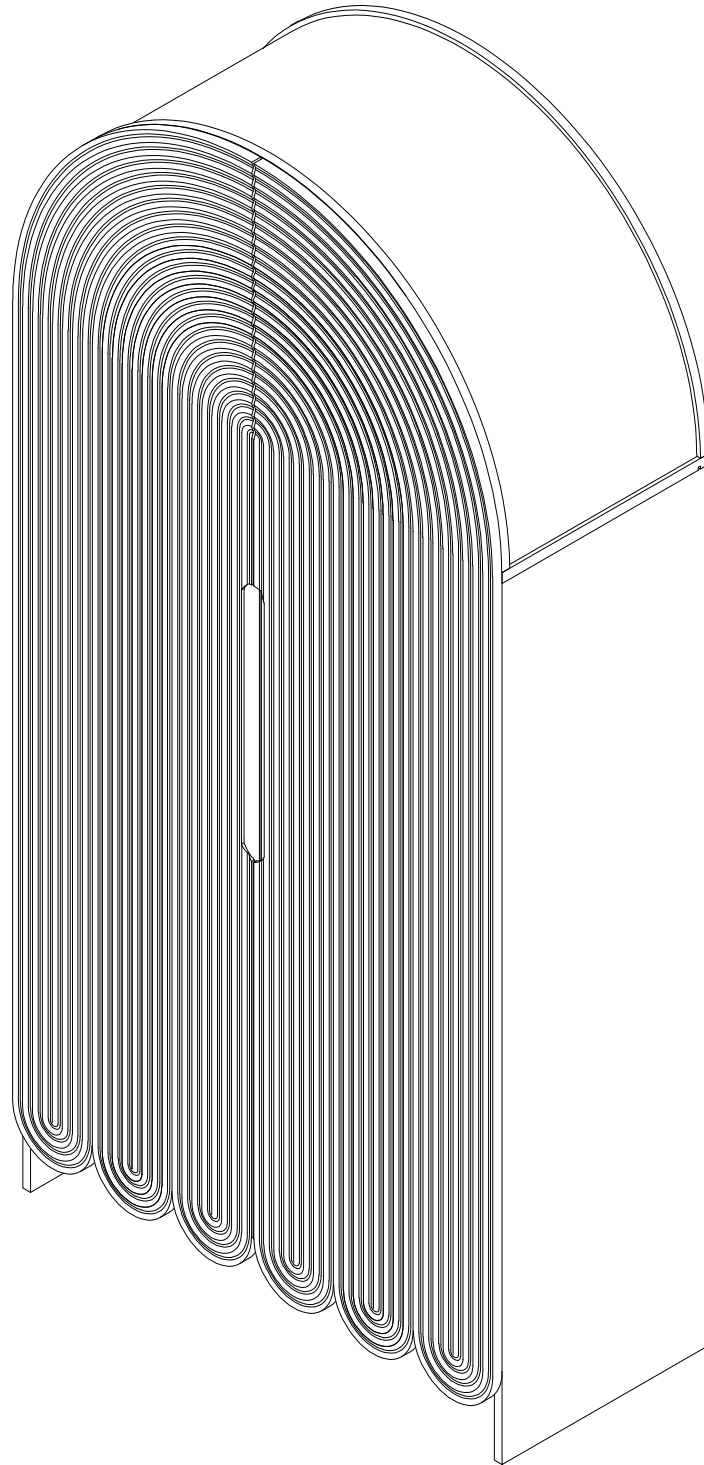

ASSEMBLY INSTRUCTIONS

Cabinet

EEL-7570 / V1.01.19.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome. Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.


Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Screw M3.5 x 15mm	x20
B		Screw M6 x 13mm	x12
C		Screw M6 x 40mm	x5
D		Wood Dowel Ø8 x 25mm	x40
E		Cam Bolt 20 x 5 mm	x37
F		Cam Lock 15/12	x37
G		Metal Soft Close Hinges (5/8") Thin Cup	x6
H		Plastic Leg Stud	x4
J		Allen Key	x1
K		Backply Stopper	x8
L		Tipping Restraint Kit	x1

WHAT YOU NEED:




Phillips Head Screwdriver



Mallet

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

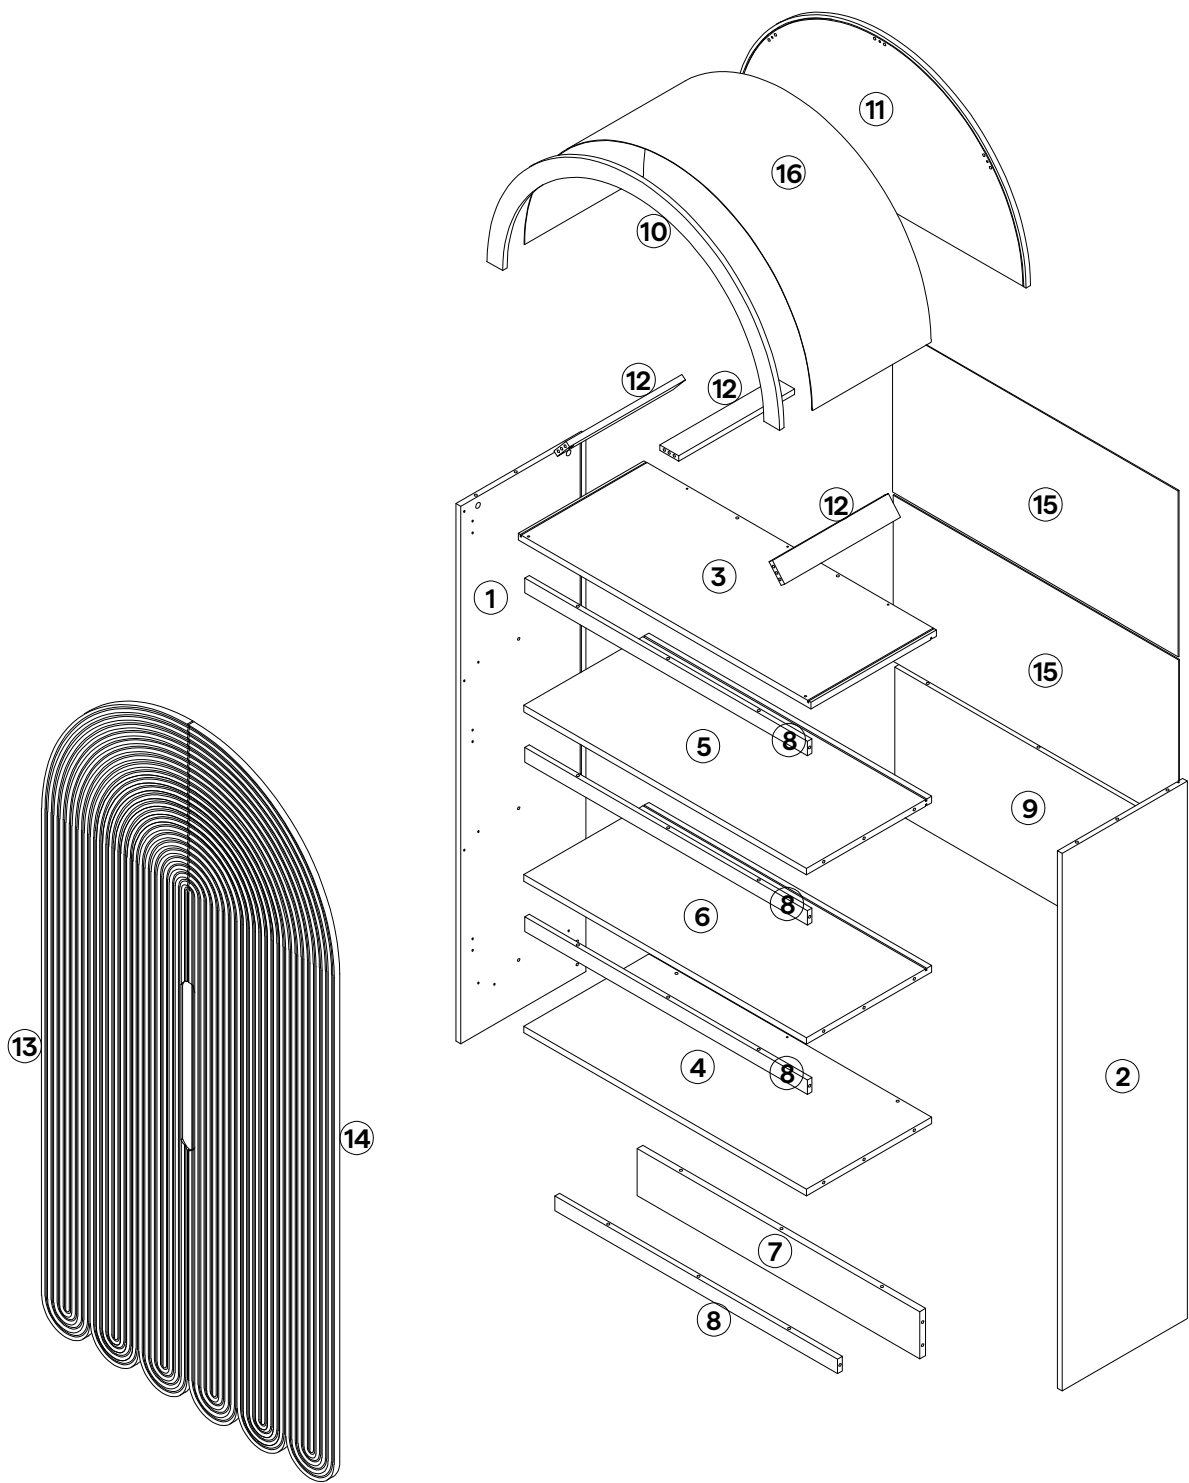

Carton 1 Of 3

Label	Description	Qty
1	Left Side Panel	x1
2	Right Side Panel	x1
3	Top Shelf Panel	x1
4	Bottom Panel	x1
5	Fixed Shelf Panel Top	x1
6	Fixed Shelf Panel Bottom	x1
7	Bottom Support Panel	x1
8	Front Panel	x4
9	Back Panel Bottom	x1
10	Top Panel Front	x1
11	Top Panel Back	x1
12	Top Support Panel	x3
15	Back Panel Top	x2
16	Top Panel Center	x1
	Hardware Pack	x1

Carton 2 Of 3

Label	Description	Qty
14	Door Panel Right	x1

Carton 3 Of 3

Label	Description	Qty
13	Door Panel Left	x1

HARDWARE


- D** Wood Dowel Ø8 x 25mm x2
E Cam Bolt 20 x 5mm x20

COMPONENTS

- 1** Left Side Panel x1
2 Right Side Panel x1

1.1 Insert **Wood Dowel (D)** into **Left Side Panel (1)** and **Right Side Panel (2)**.


1.2 Insert **Cam Bolt (E)** into **Left Side Panel (1)** and **Right Side Panel (2)** then tighten using screwdriver.

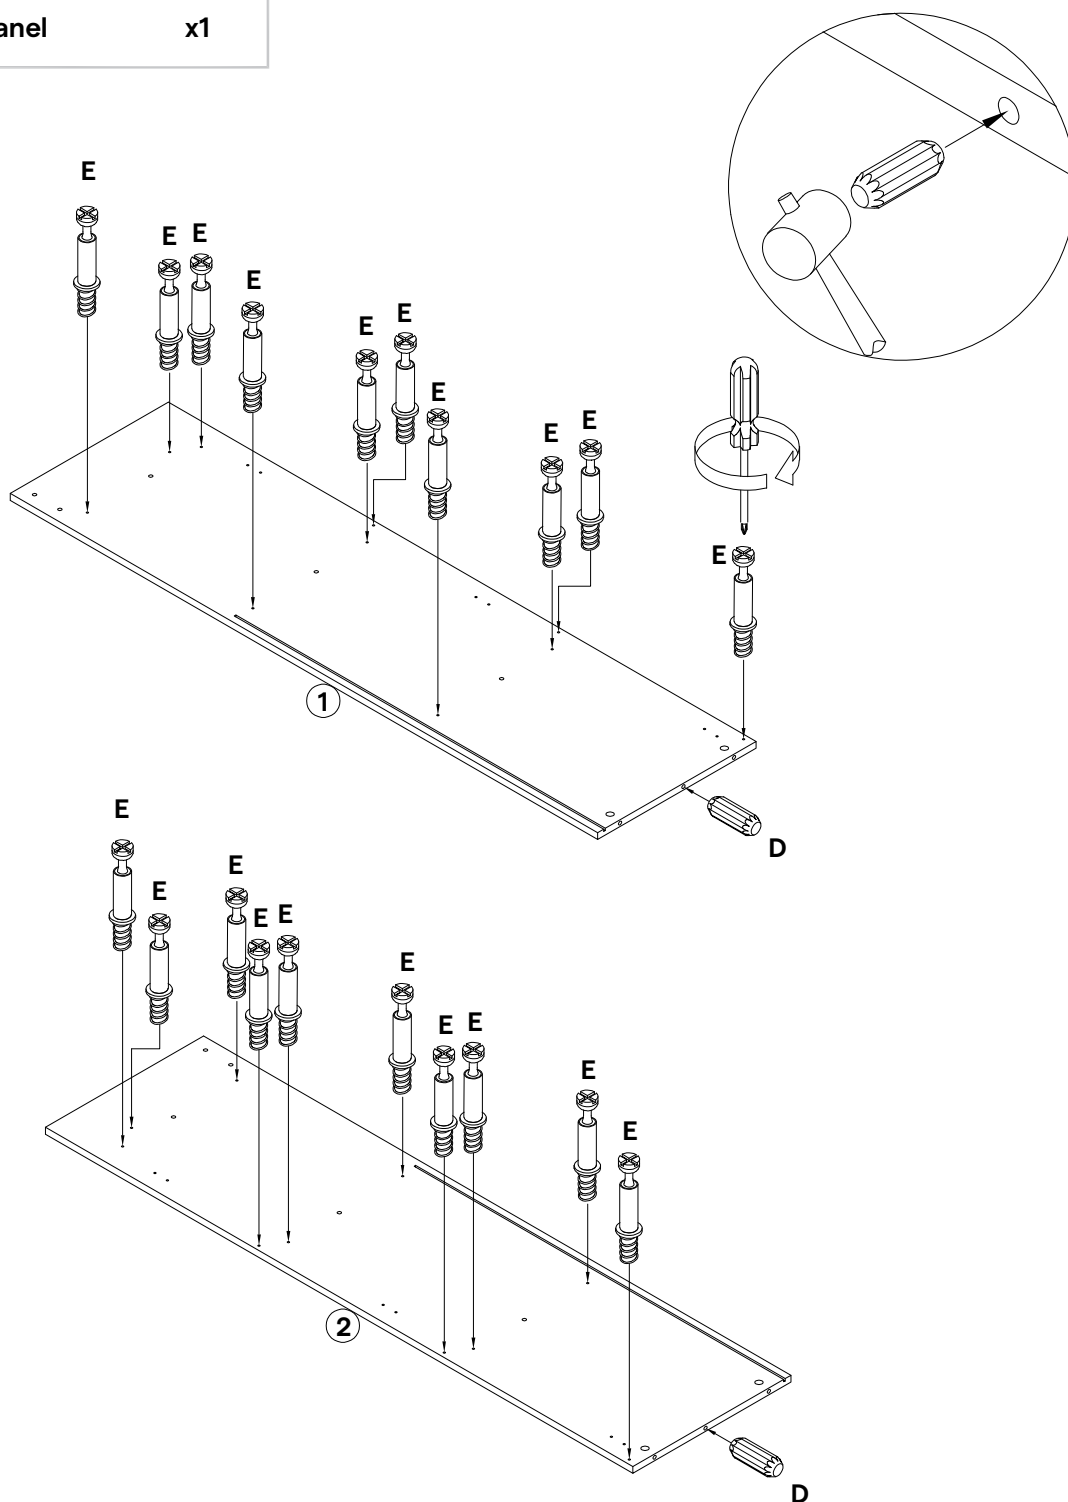

HARDWARE**D** Wood Dowel Ø8 x 25mm x27**E** Cam Bolt 20 x 5mm x6**COMPONENTS****4** Bottom Panel x1**5** Fixed Shelf Panel Top x1**6** Fixed Shelf Panel Bottom x1**7** Bottom Support Panel x1**8** Front Panel x1**9** Back Panel Bottom x1

2.1 Insert **Wood Dowel (D)** into **Bottom Panel (4)**, **Fixed Shelf Panel Top (5)**, **Fixed Shelf Panel Bottom (6)**, **Bottom Support Panel (7)**, **Front Panel (8)**, **Back Panel Bottom (9)**.

2.2 Insert **Cam Bolt (E)** into **Bottom Panel (4)**, **Fixed Shelf Panel Top (5)** and **Fixed Shelf Panel Bottom (6)** then tighten using screwdriver.

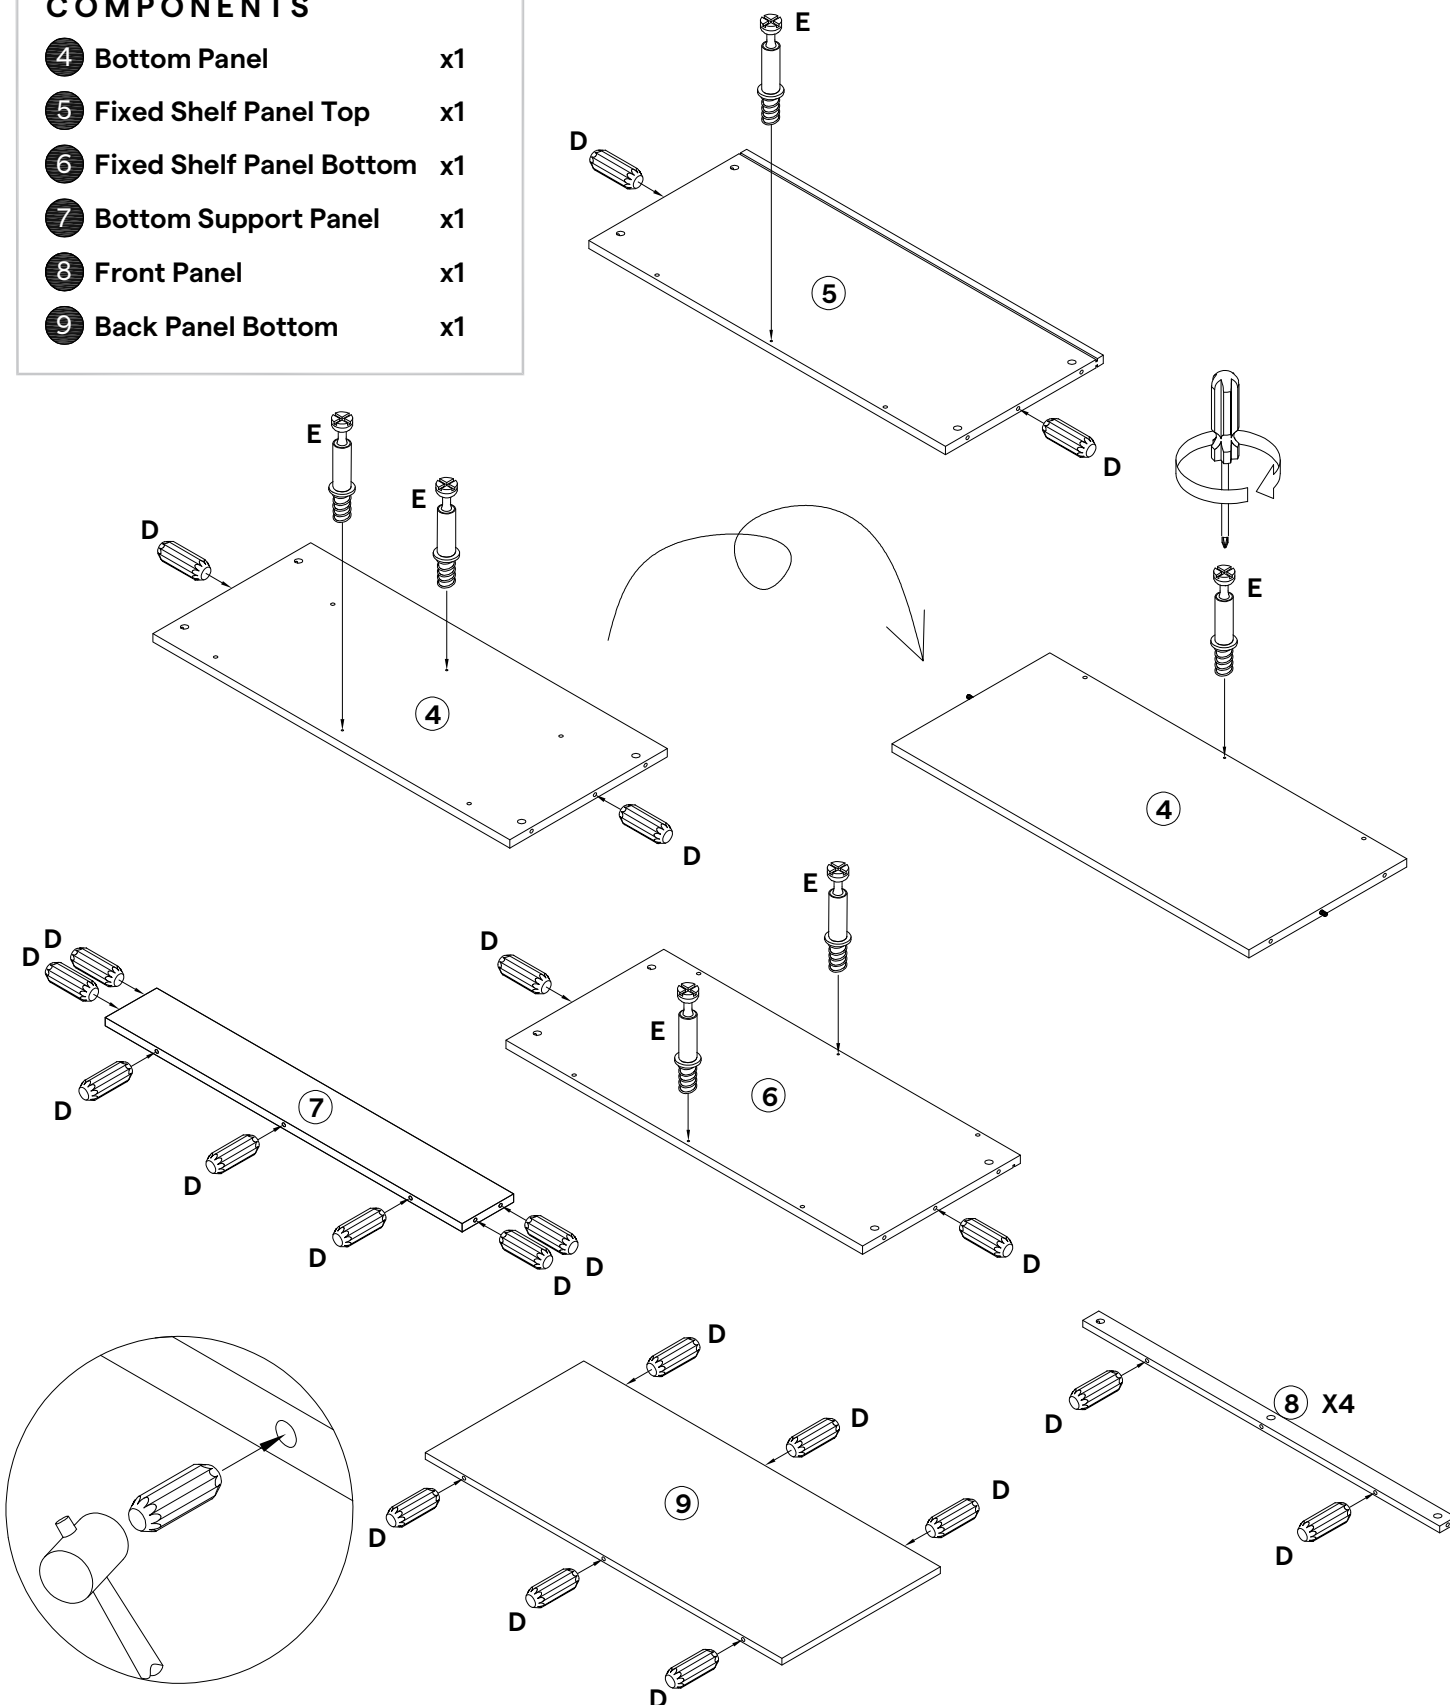

HARDWARE



F Cam Lock 15/12 x1

COMPONENTS

5 Fixed Shelf Panel Top x1

8 Front Panel x1

3.1 Connect **Front Panel (8)** to **Fixed Shelf Panel Top (5)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

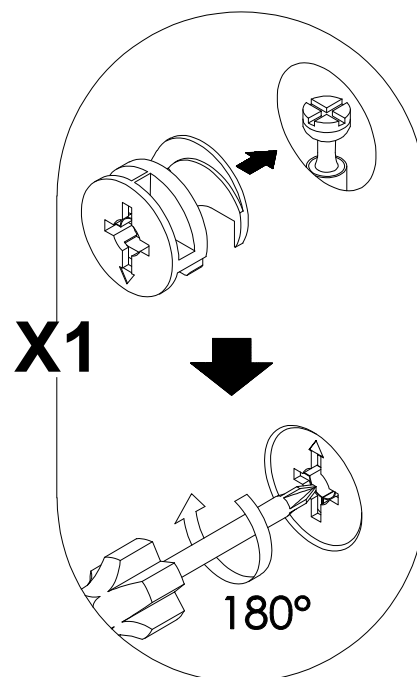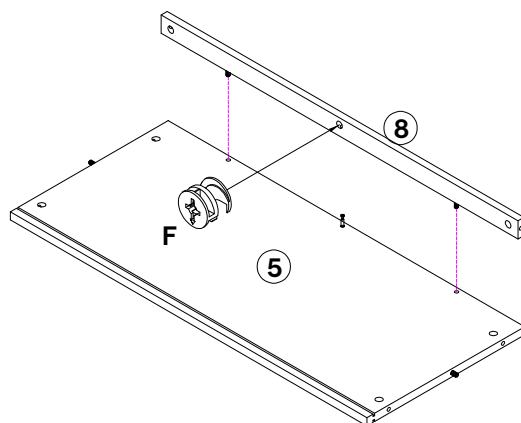

STEP 04

HARDWARE



F Cam Lock 15/12 x1

COMPONENTS

6 Fixed Shelf Panel Bottom x1

8 Front Panel x1

4.1 Connect **Front Panel (8)** to **Fixed Shelf Panel Bottom (6)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

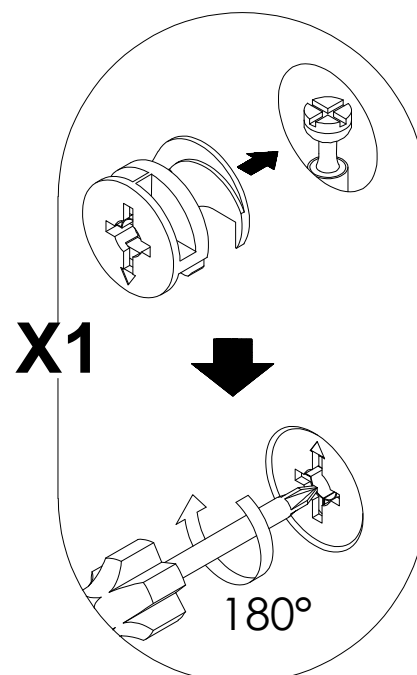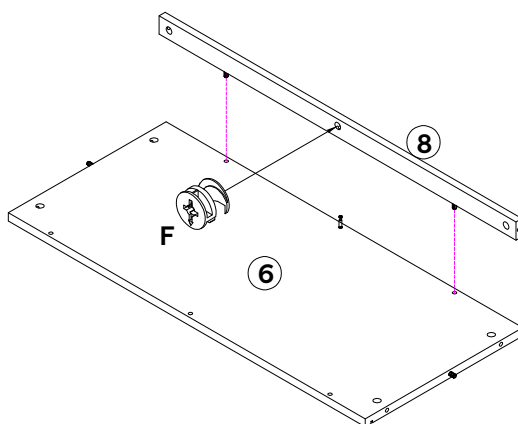

HARDWARE

F Cam Lock 15/12 x2



COMPONENTS

4 Bottom Panel x1

7 Bottom Support Panel x1

8 Front Panel x1

5.1 Connect **Bottom Support Panel (7)** and **Front Panel (8)** to **Bottom Panel (4)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

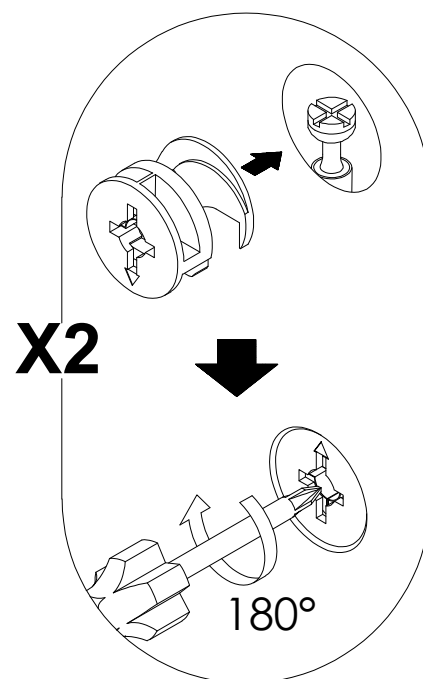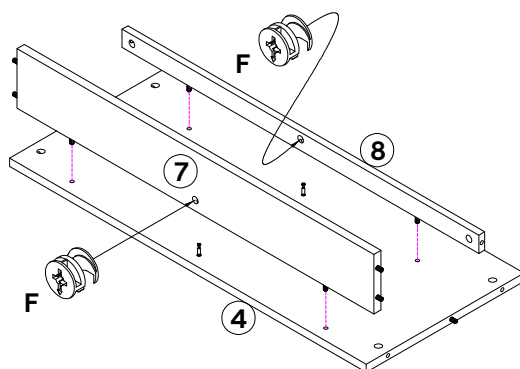

STEP 6

HARDWARE

F Cam Lock 15/12 x2



COMPONENTS

4 Bottom Panel x1

6 Fixed Shelf Panel Bottom x1

9 Back Panel Bottom x1

6.1 Connect **Bottom Panel (4)** and **Fixed Shelf Panel Bottom (6)** to **Back Panel Bottom (9)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

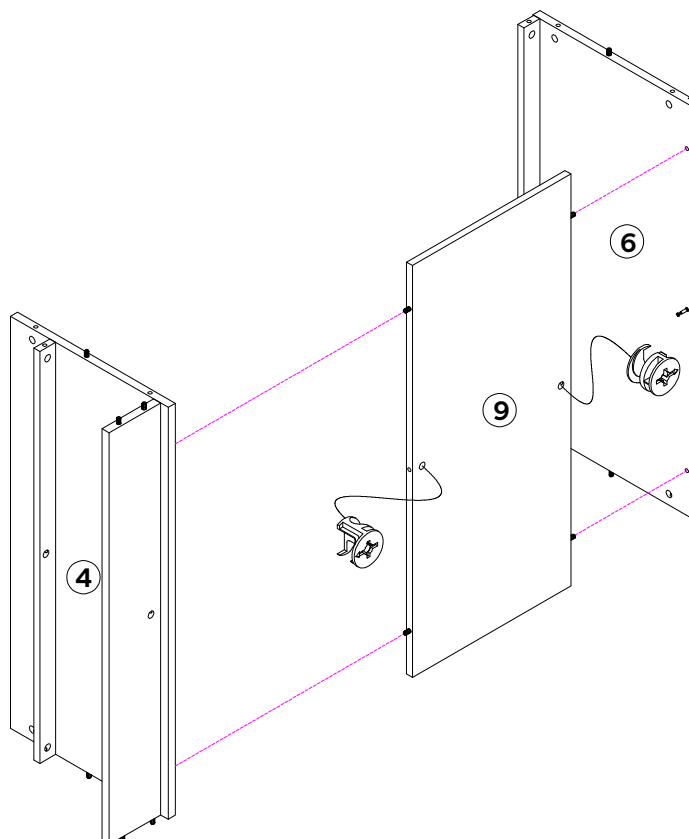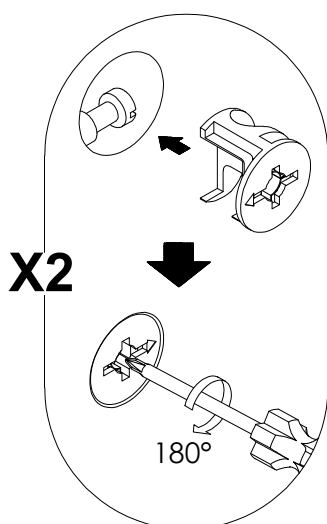

HARDWARE

F Cam Lock 15/12 x10

COMPONENTS

1 Left Side Panel x1

4 Bottom Panel x1



5 Fixed Shelf Panel Top x1

6 Fixed Shelf Panel Bottom x1

7 Bottom Support Panel x1

8 Front Panel x4


7.1 Connect **Bottom Panel (4)**, **Fixed Shelf Panel Top (5)**, **Fixed Shelf Panel Bottom (6)**, **Bottom Support Panel (7)**, **Front Panel (8)** to **Left Side Panel (1)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

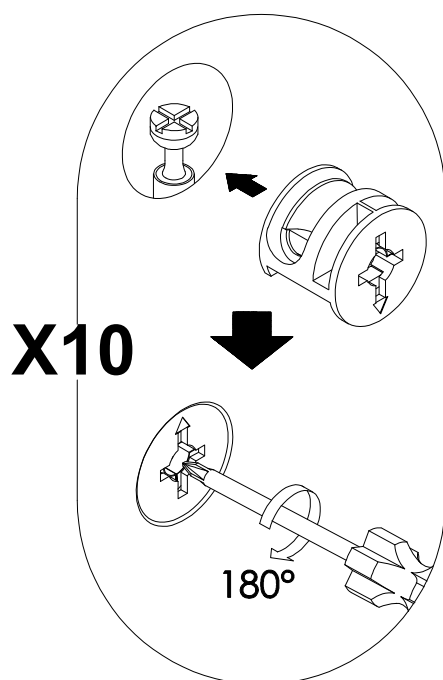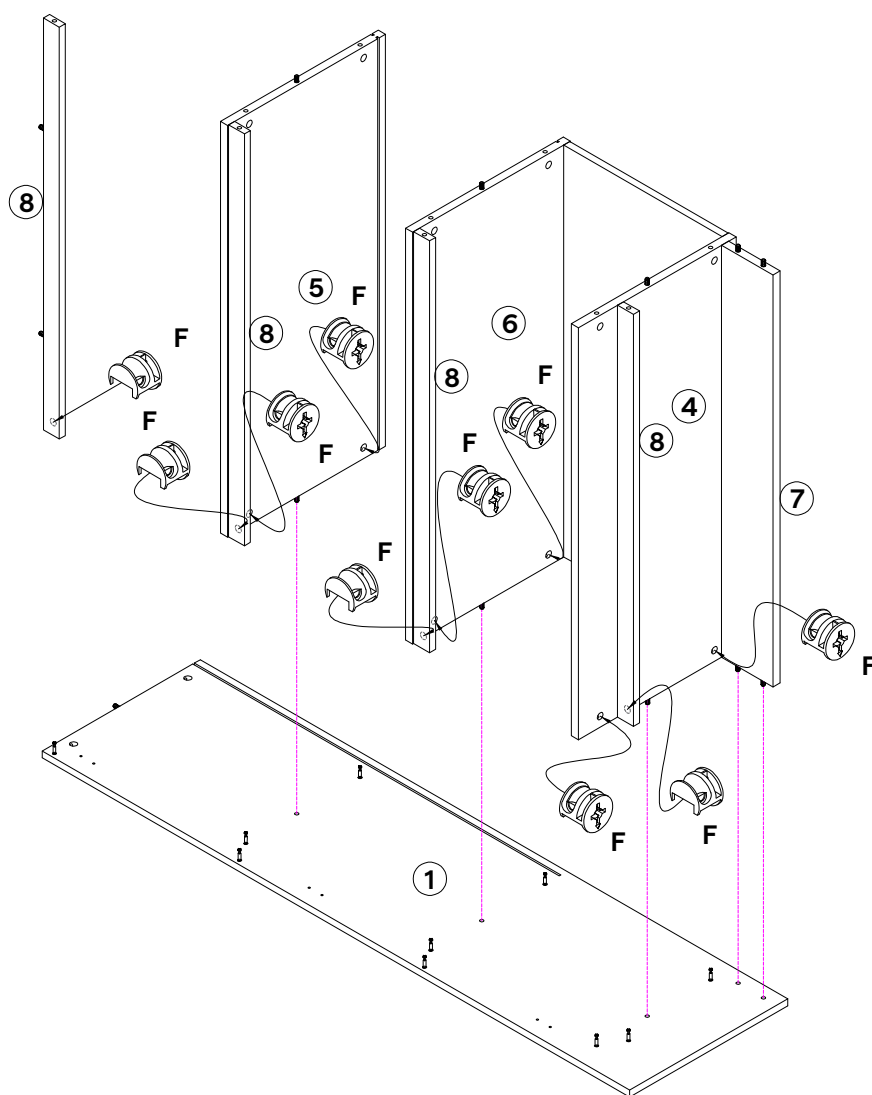

COMPONENTS

15 Back Panel Top x1

8.1 Insert **Back Panel Top (15)** into the body position as shown in the picture.

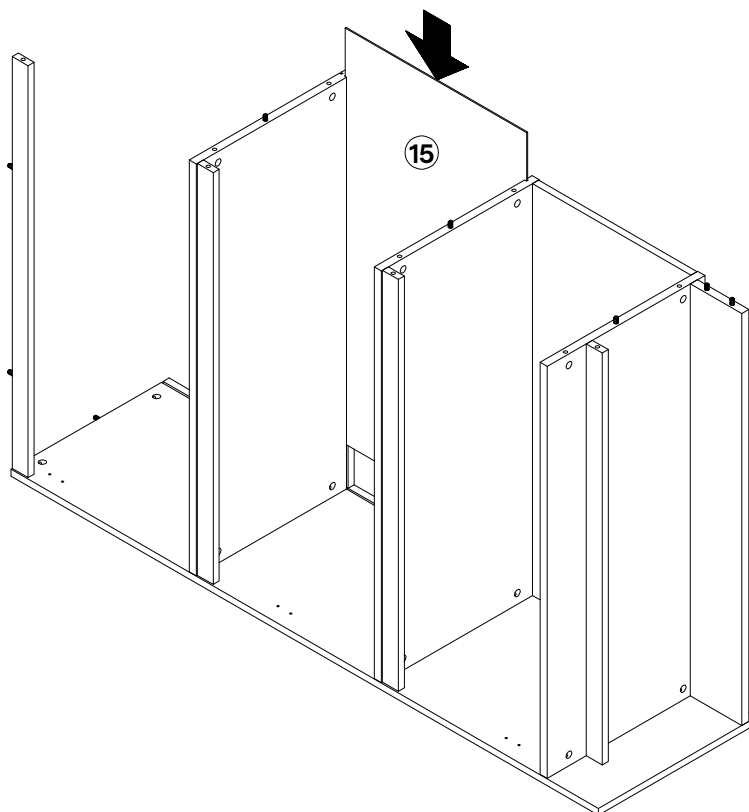

HARDWARE

F Cam Lock 15/12 x10

COMPONENTS

2 Right Side Panel x1

4 Bottom Panel x1



5 Fixed Shelf Panel Top x1

6 Fixed Shelf Panel Bottom x1

7 Bottom Support Panel x1


8 Front Panel x4

9.1 Connect **Right Side Panel (2)** to **Bottom Panel (4)**, **Fixed Shelf Panel Top (5)**, **Fixed Shelf Panel Bottom (6)**, **Bottom Support Panel (7)** and **Front Panel (8)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

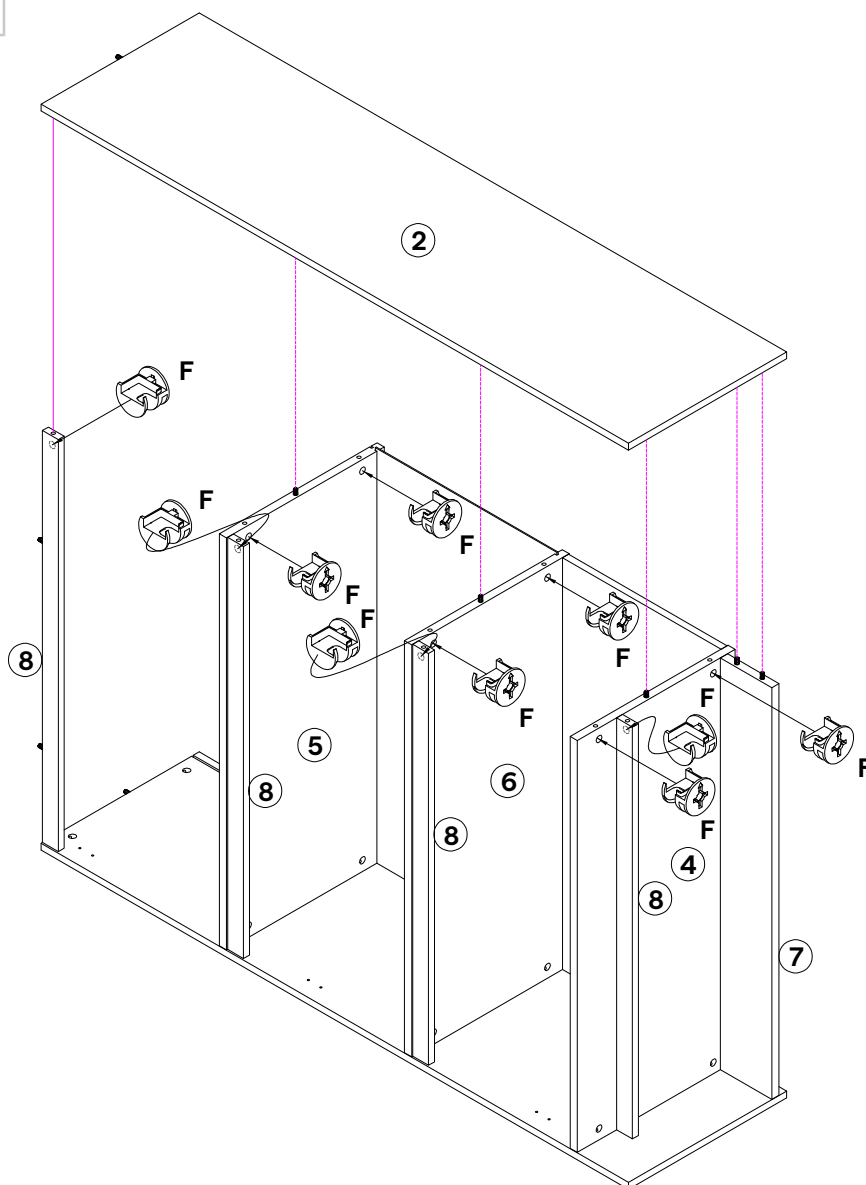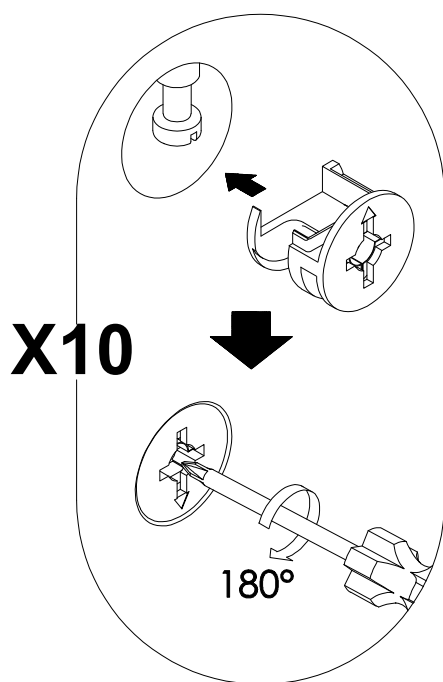


HARDWARE**H** Plastic Leg Stud x4**COMPONENTS****1** Left Side Panel x1**2** Right Side Panel x1

10.1 Insert **Plastic Leg Stud (H)** into **Left Side Panel (1)** and **Right Side Panel (2)**, position as shown in the picture.

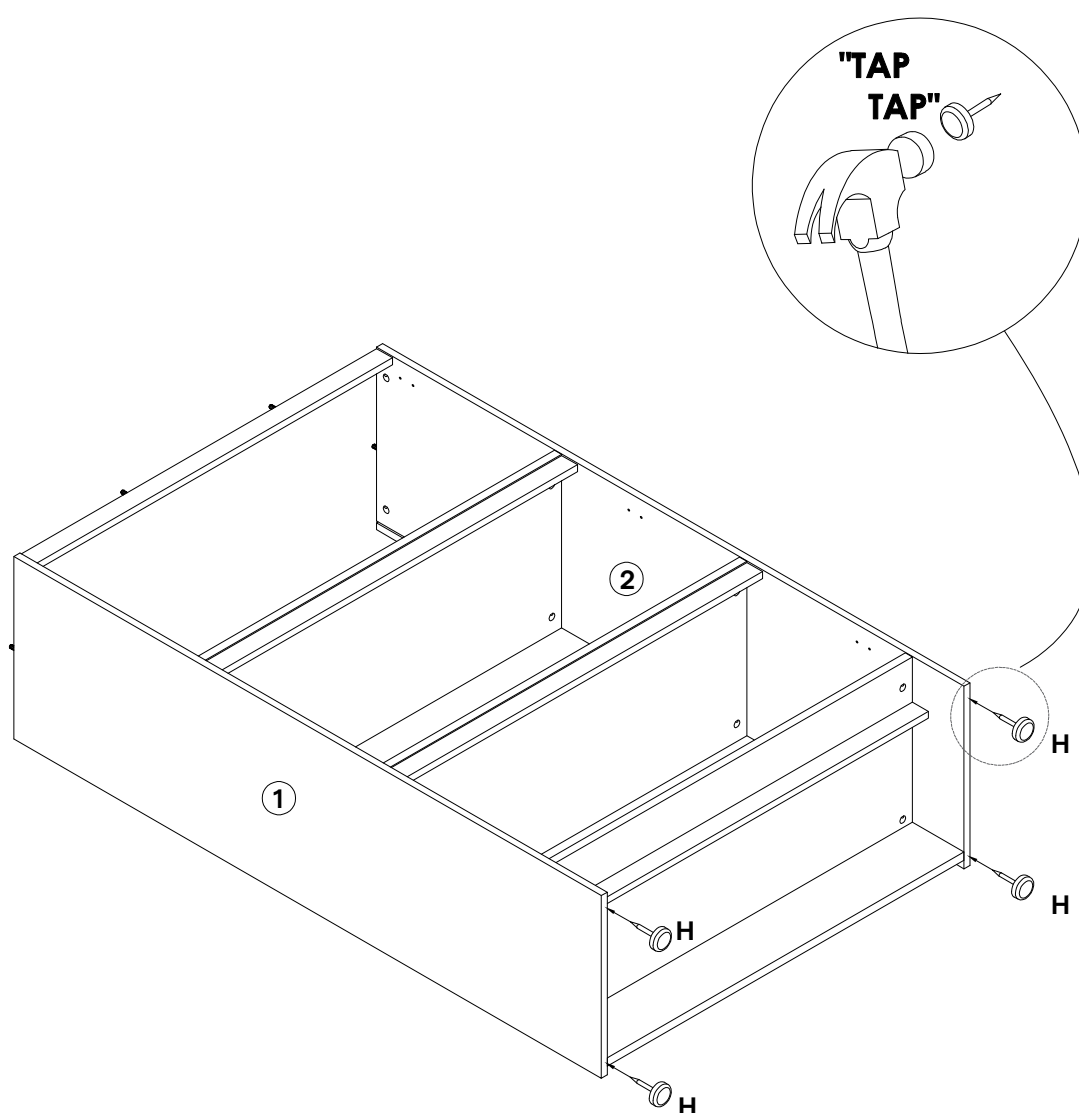

COMPONENTS**15** Back Panel Top **x1**

11.1 Insert **Back Panel Top (15)** into the body, position as shown in the picture.

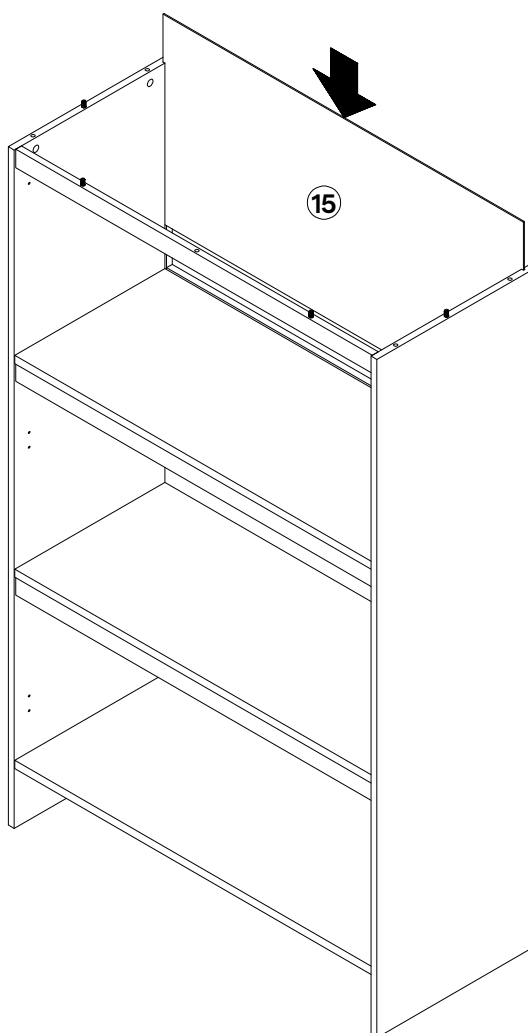

HARDWARE



- D** Wood Dowel Ø8 x 25mm x14
E Cam Bolt 20 x 5mm x11

COMPONENTS

- 3** Top Shelf Panel x1
10 Top Panel Front x1
11 Top Panel Back x1
12 Top Support Panel x1

12.1 Insert **Wood Dowel (D)** into **Top Panel Back (11)** and **Top Support Panel (12)**.

12.2 Insert **Cam Bolt (E)** into **Top Shelf Panel (3)** and **Top Panel Front (10)** then tighten using screwdriver.

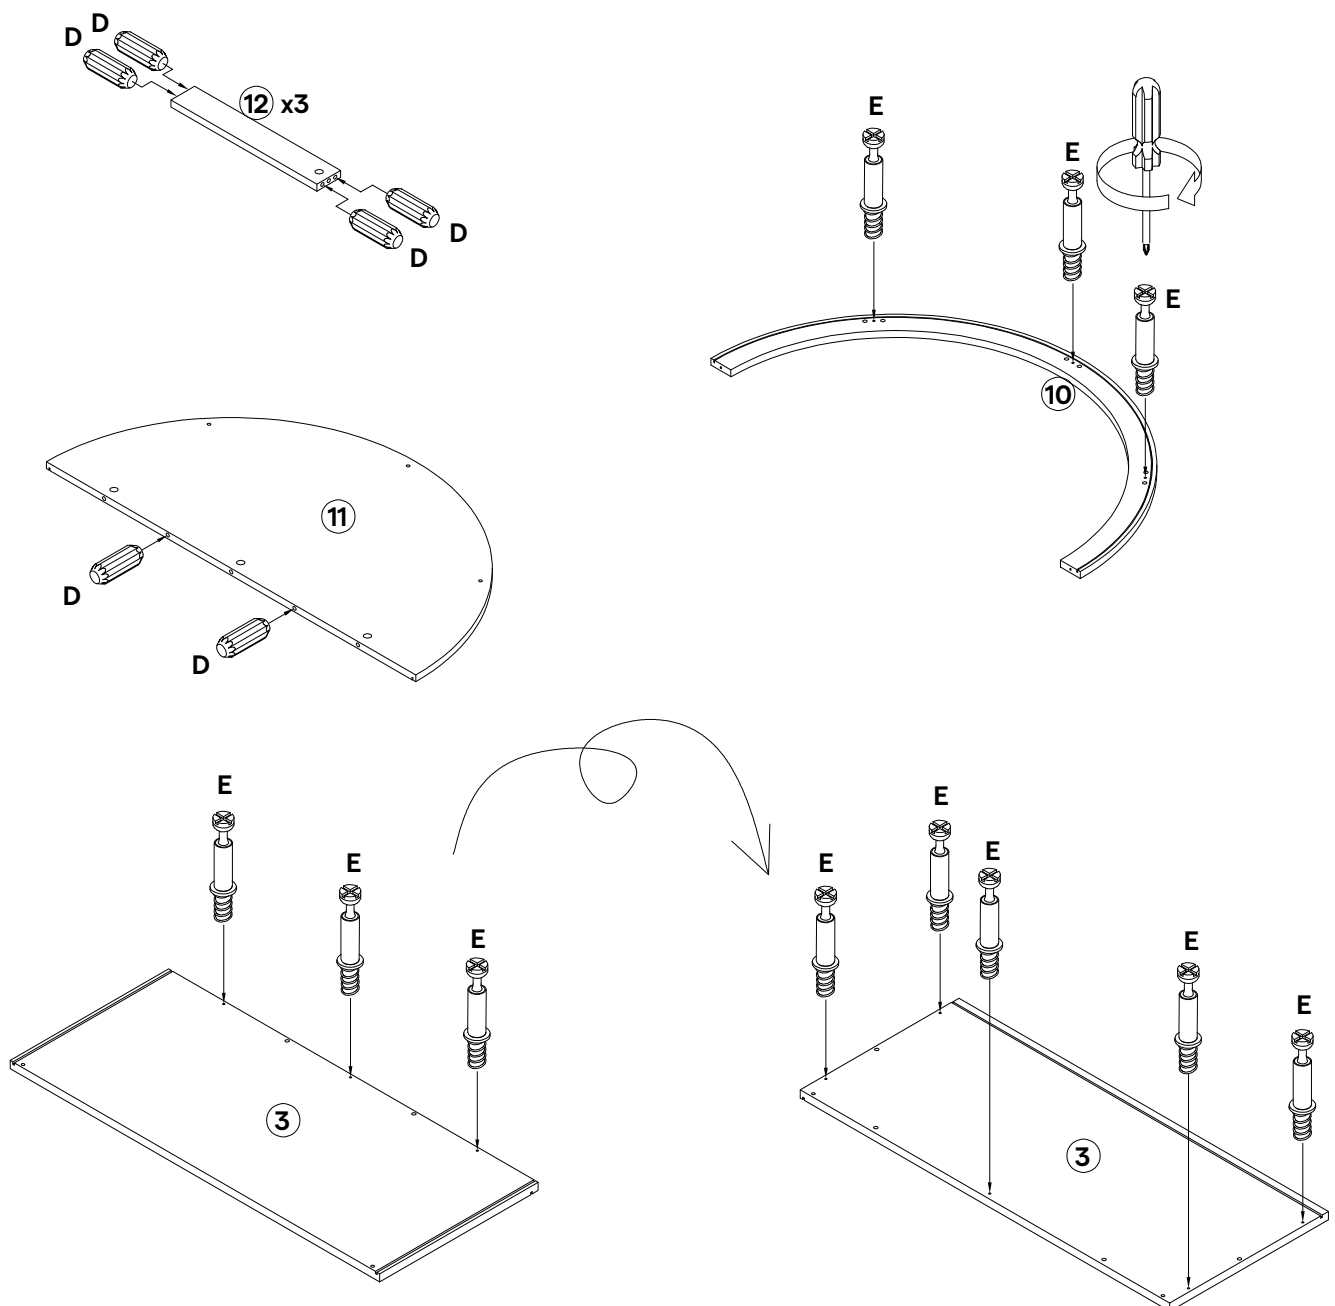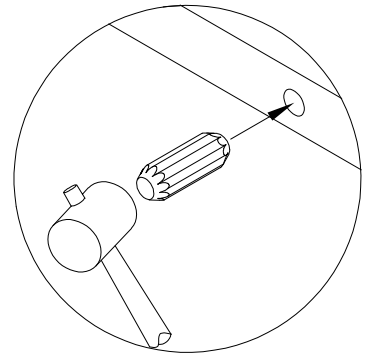

HARDWARE

C Screw M6 x 40mm x3

COMPONENTS


11 Top Panel Back x1

12 Top Support Panel x3

TOOLS

J Allen Key

13.1 Secure **Top Support Panel (12)** to **Top Panel Back (11)** with **Screw (C)** then tighten using the provided **Allen Key (J)**.

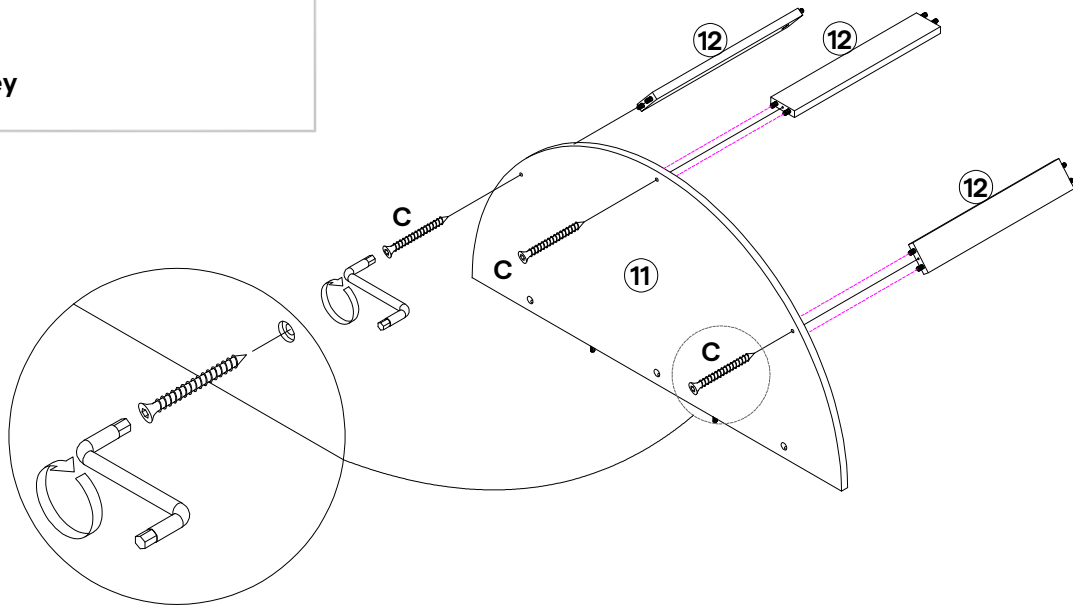


STEP 14

COMPONENTS



16 Top Panel Center x1

14.1 Insert **Top Panel Center (16)**, position as shown in the picture.

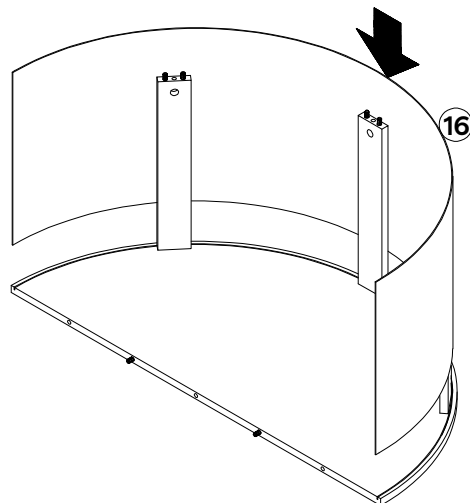

HARDWARE**F** Cam Lock 15/12 x3**COMPONENTS****10** Top Panel Front x1**12** Top Support Panel x3

15.1 Connect **Top Panel Front (10)** to **Top Support Panel (12)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

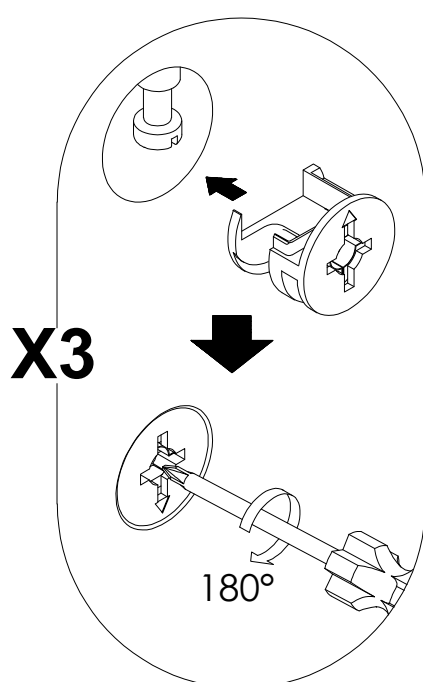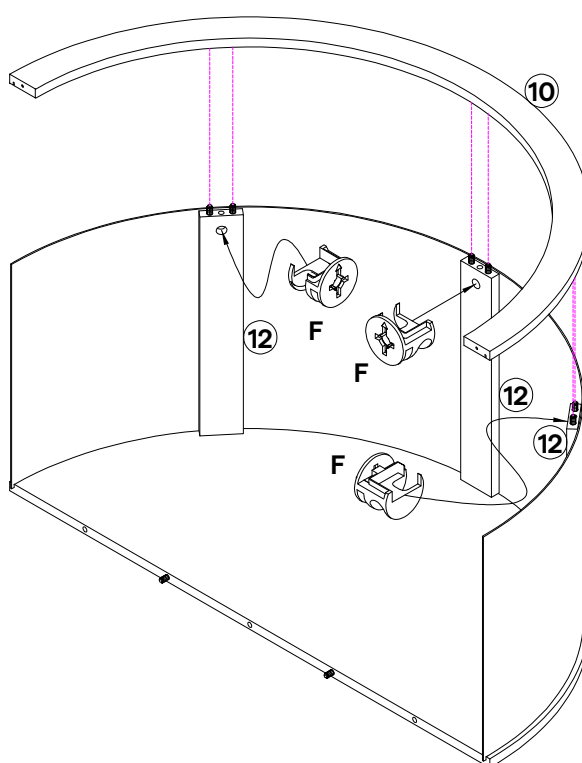

HARDWARE

- C** Screw M6 x 40mm x2
F Cam Lock 15/12 x3

COMPONENTS


- 3** Top Shelf Panel x1
10 Top Panel Front x1
11 Top Panel Back x1

TOOLS

- J** Allen Key

16.1 Connect **Top Shelf Panel (3)** to **Top Panel Back (11)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

16.2 Secure **Top Shelf Panel (3)** to **Top Panel Front (10)** with **Screw (C)** using the provided **Allen Key (J)**.

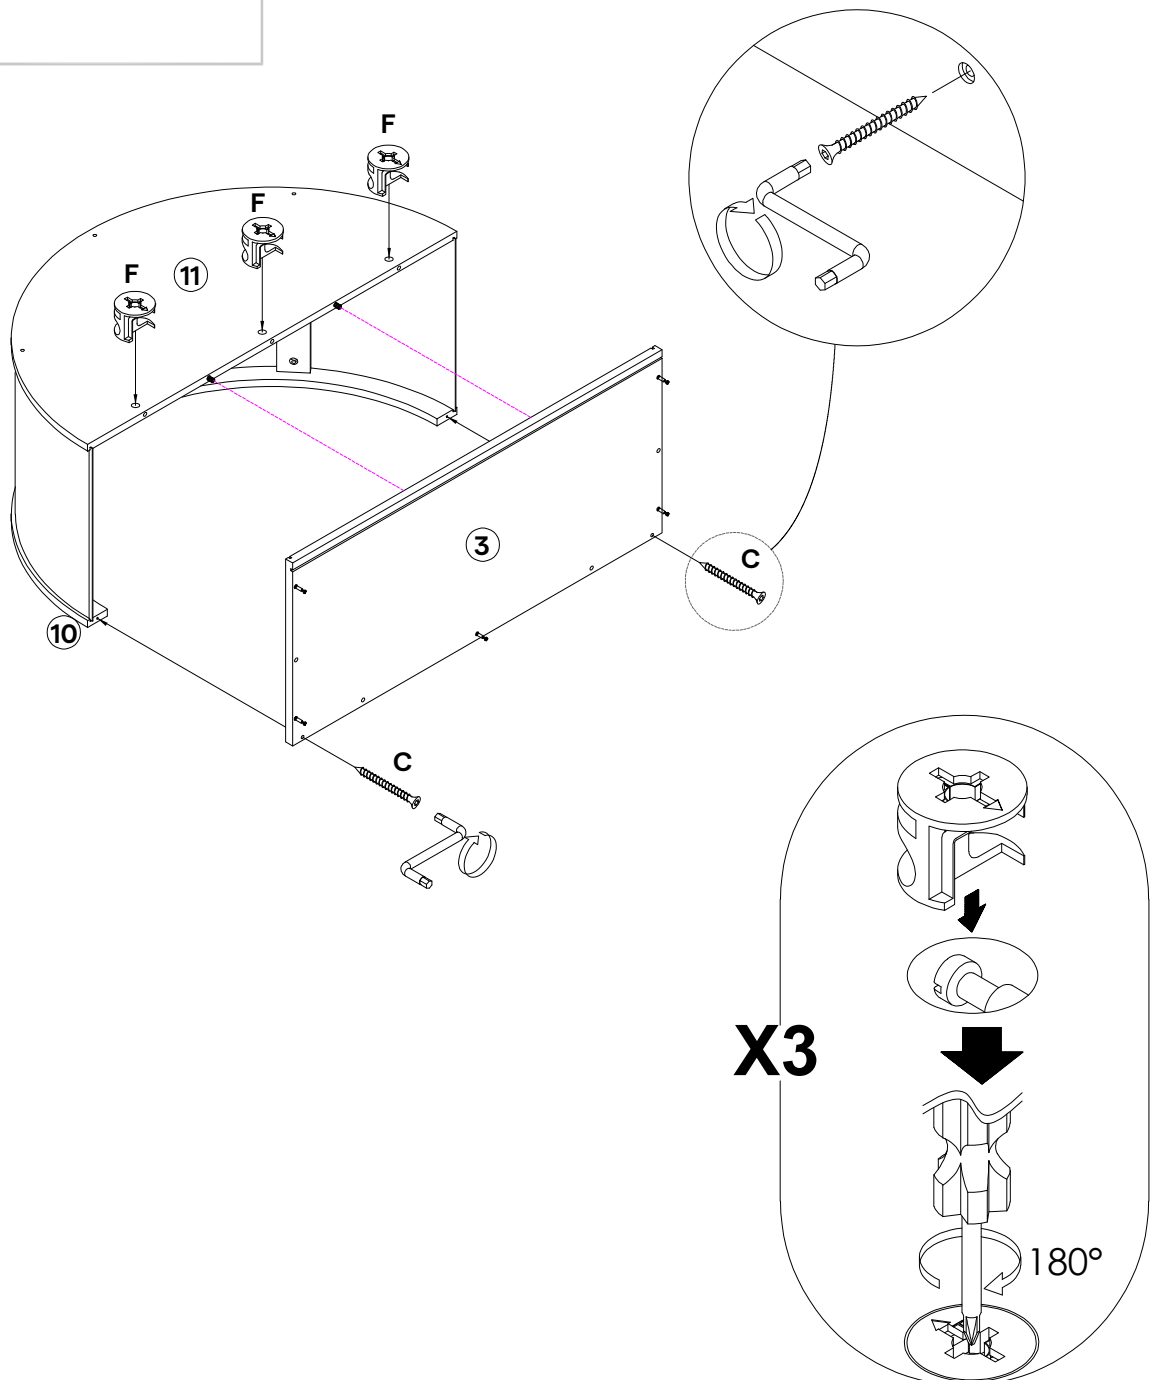

HARDWARE

F Cam Lock 15/12 x5

COMPONENTS



1 Left Side Panel x1

2 Right Side Panel x1

3 Top Shelf Panel x1

8 Front Panel x1

17.1 Connect **Top Shelf Panel (3)** to **Left Side Panel (1)**, **Right Side Panel (2)** and **Front Panel (8)** by inserting **Cam Lock (F)** into the corresponding holes then tighten using screwdriver.

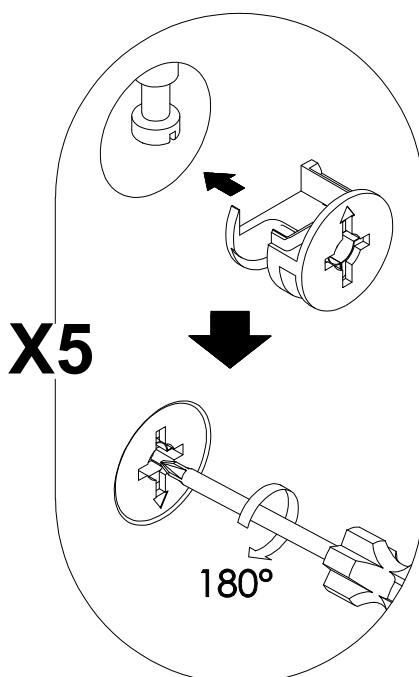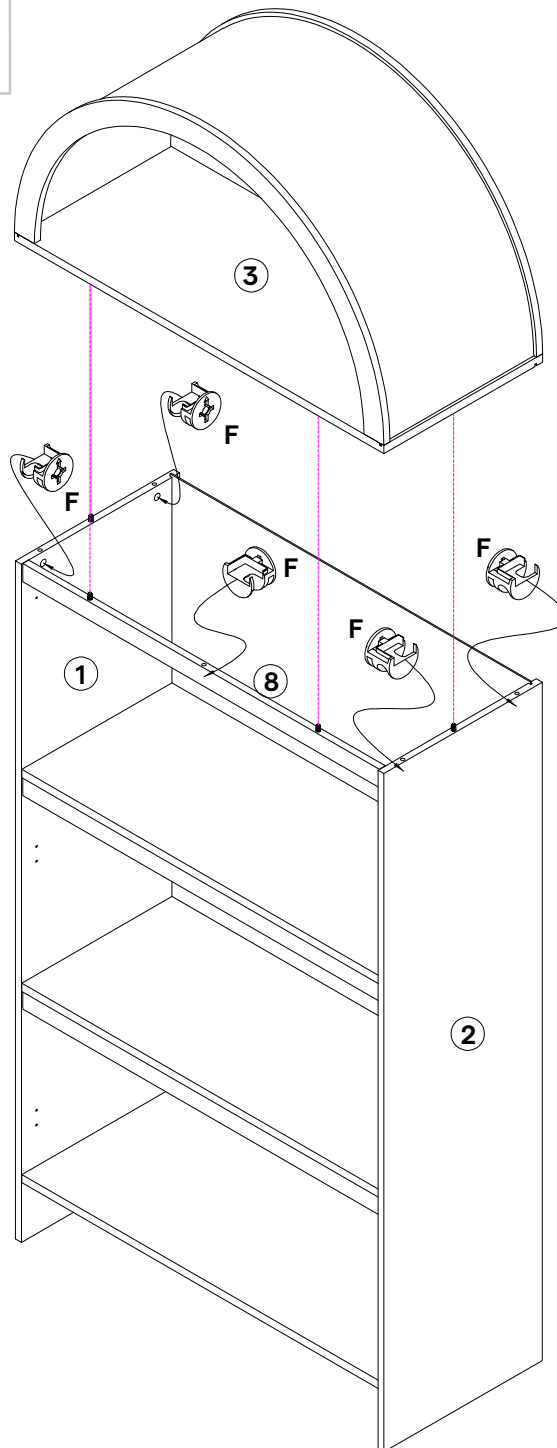


HARDWARE

A Screw M3.5 x 15mm	x12
G Metal Soft Close Hinges(5/8")	x6

COMPONENTS

13 Door Panel Left	x1
14 Door Panel Right	x1

18.1 Secure **Metal Soft Close Hinges (5/8") (G)** to **Door Panel Left (13)** and **Door Panel Right (14)** with **Screw (A)** then tighten using screwdriver.

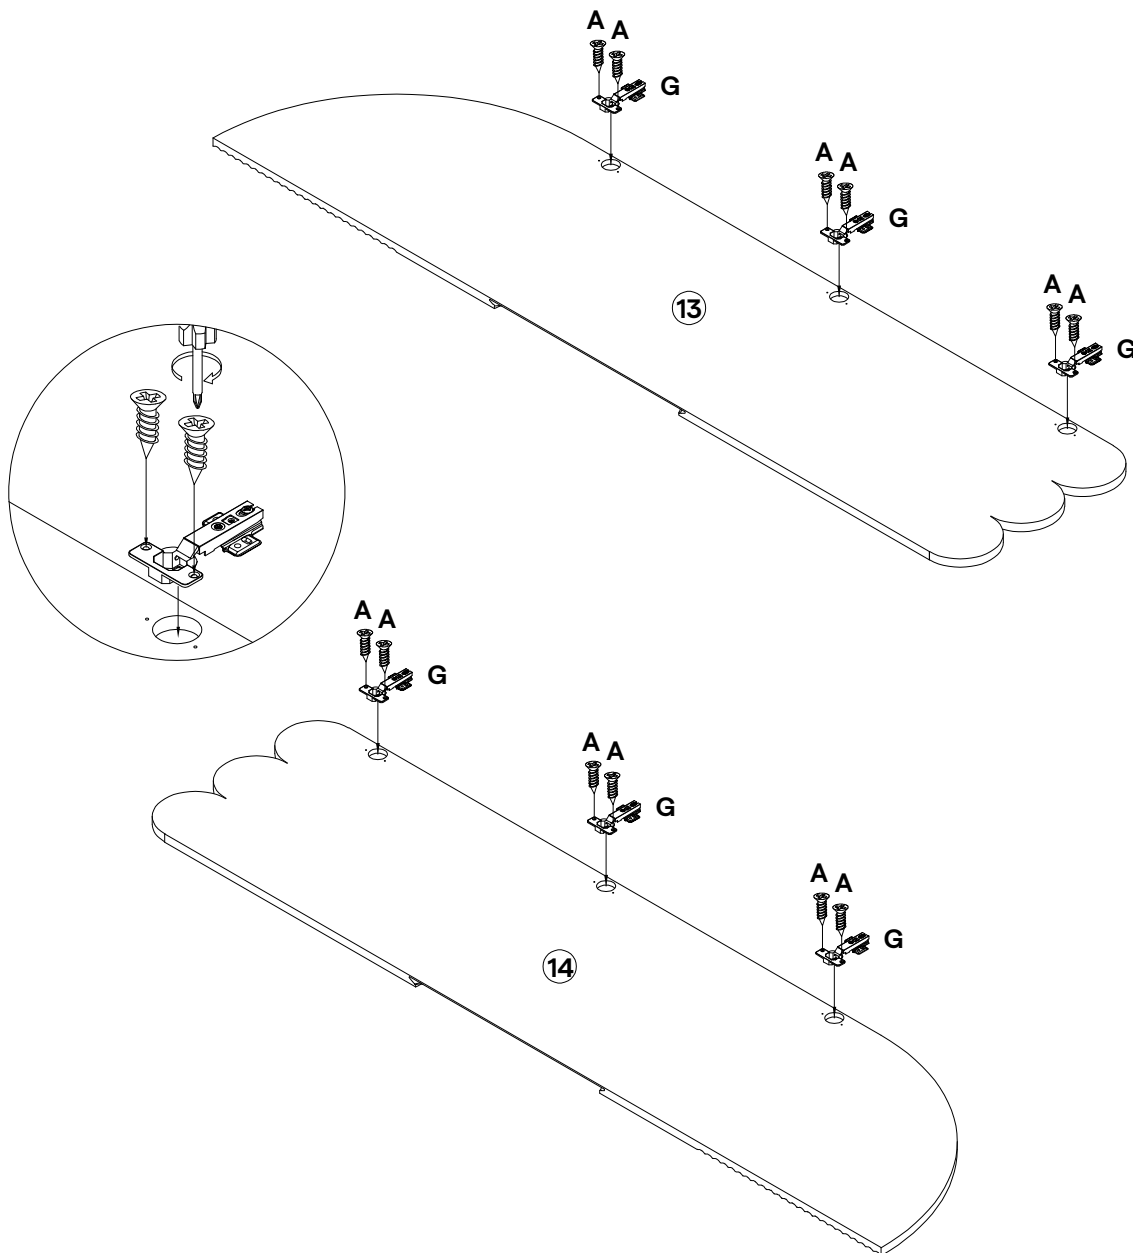

HARDWARE

(B) Screw M6 x 13mm x12

COMPONENTS

(1) Left Side Panel x1



(2) Right Side Panel x1

(13) Door Panel Left x1




(14) Door Panel Right x1

19.1 Secure **Door Panel Left (13)** to **Left Side Panel (1)** with **Screw (B)** then tighten using screwdriver.

19.2 Secure **Door Panel Right (14)** to **Right Side Panel (2)** with **Screw (B)** then tighten using screwdriver.

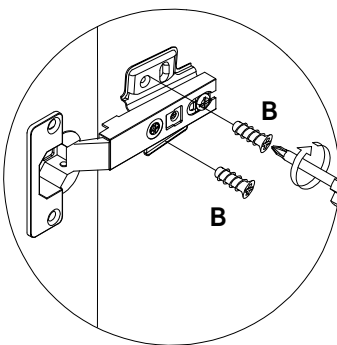
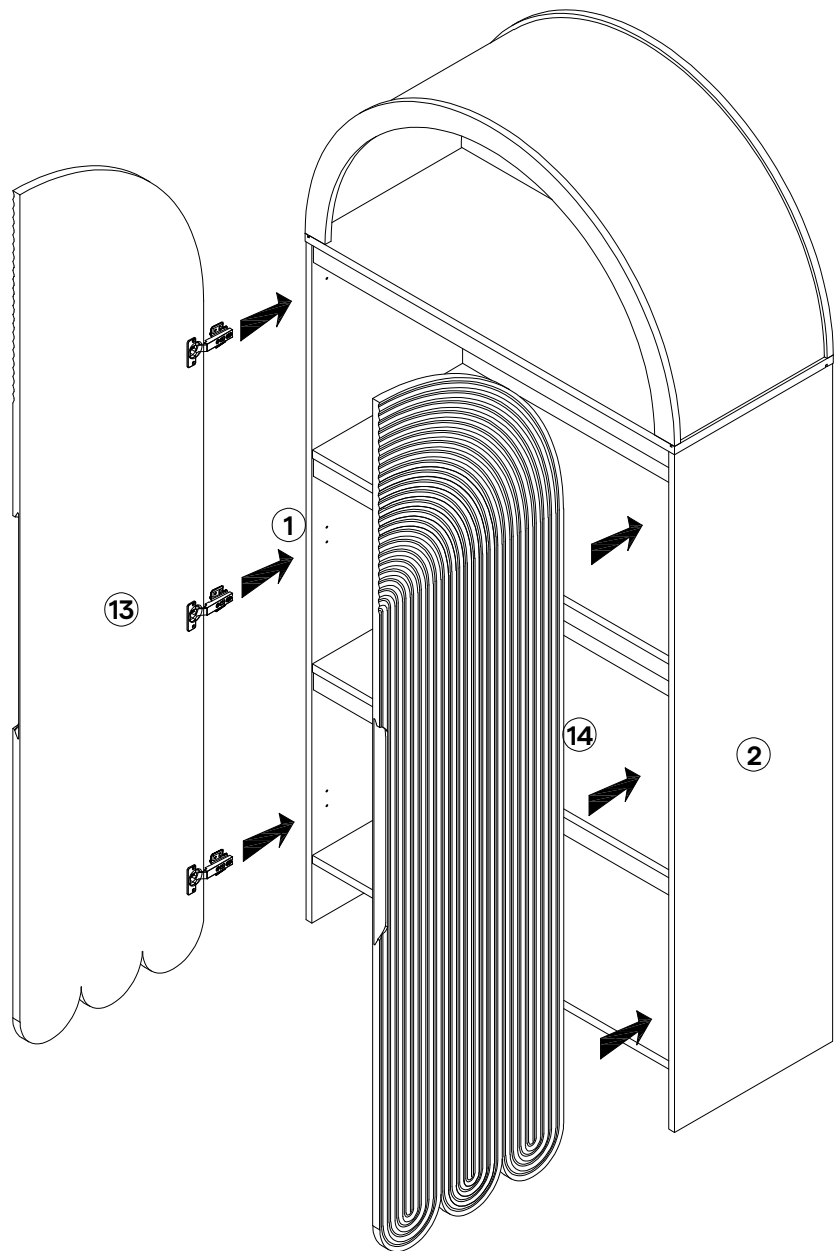


Left & Right Door Alignment

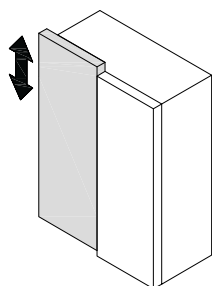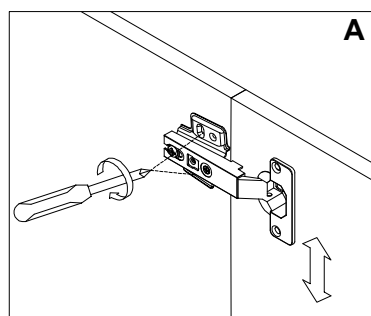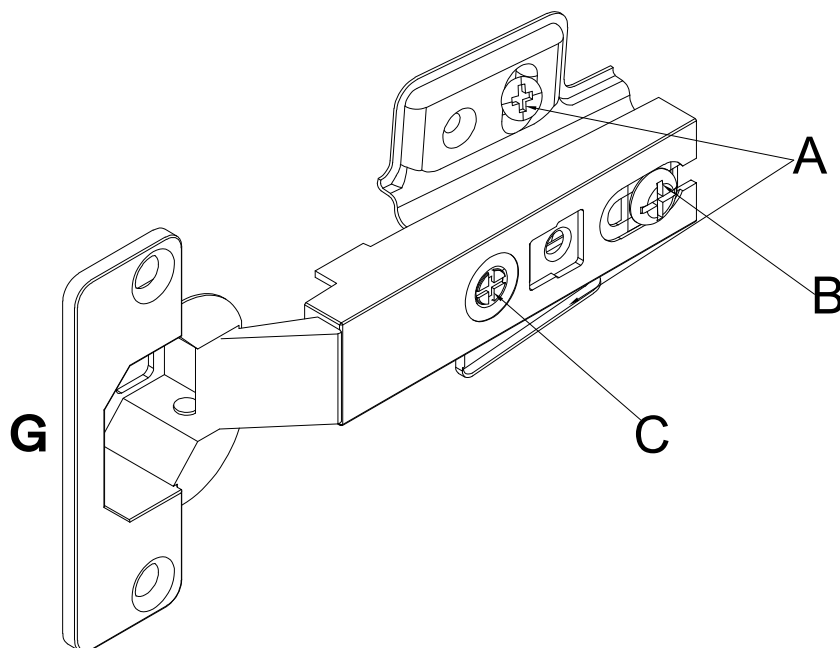



To Adjust the Vertical height.

Loosen the two screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

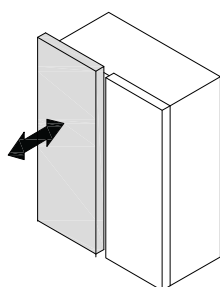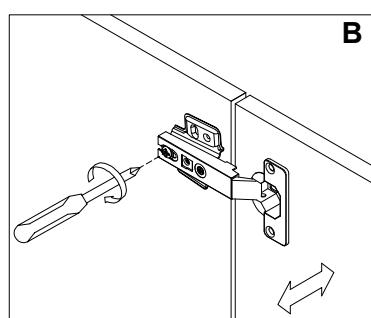

To Adjust depth.

Loosen Screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

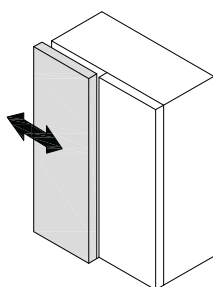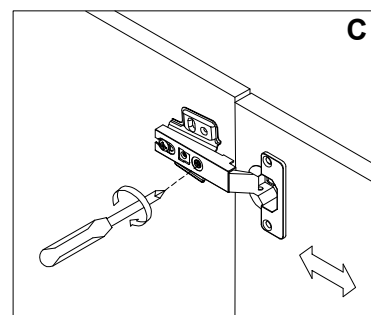

To Adjust side ways.

Turn screw "C" on BOTH hinges on each door.



HARDWARE

- A** Screw M3.5 x 15mm x8
- K** Backply Stopper x8

COMPONENTS

- 15** Back Panel Top x2

20.1 Attach **Backply Stopper (K)** to **Back Panel Top (15)** with **Screw (A)** then tighten using screwdriver, position as shown in the picture.

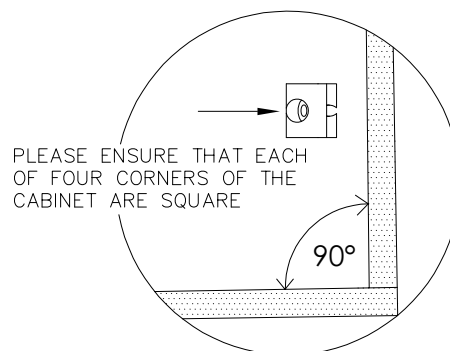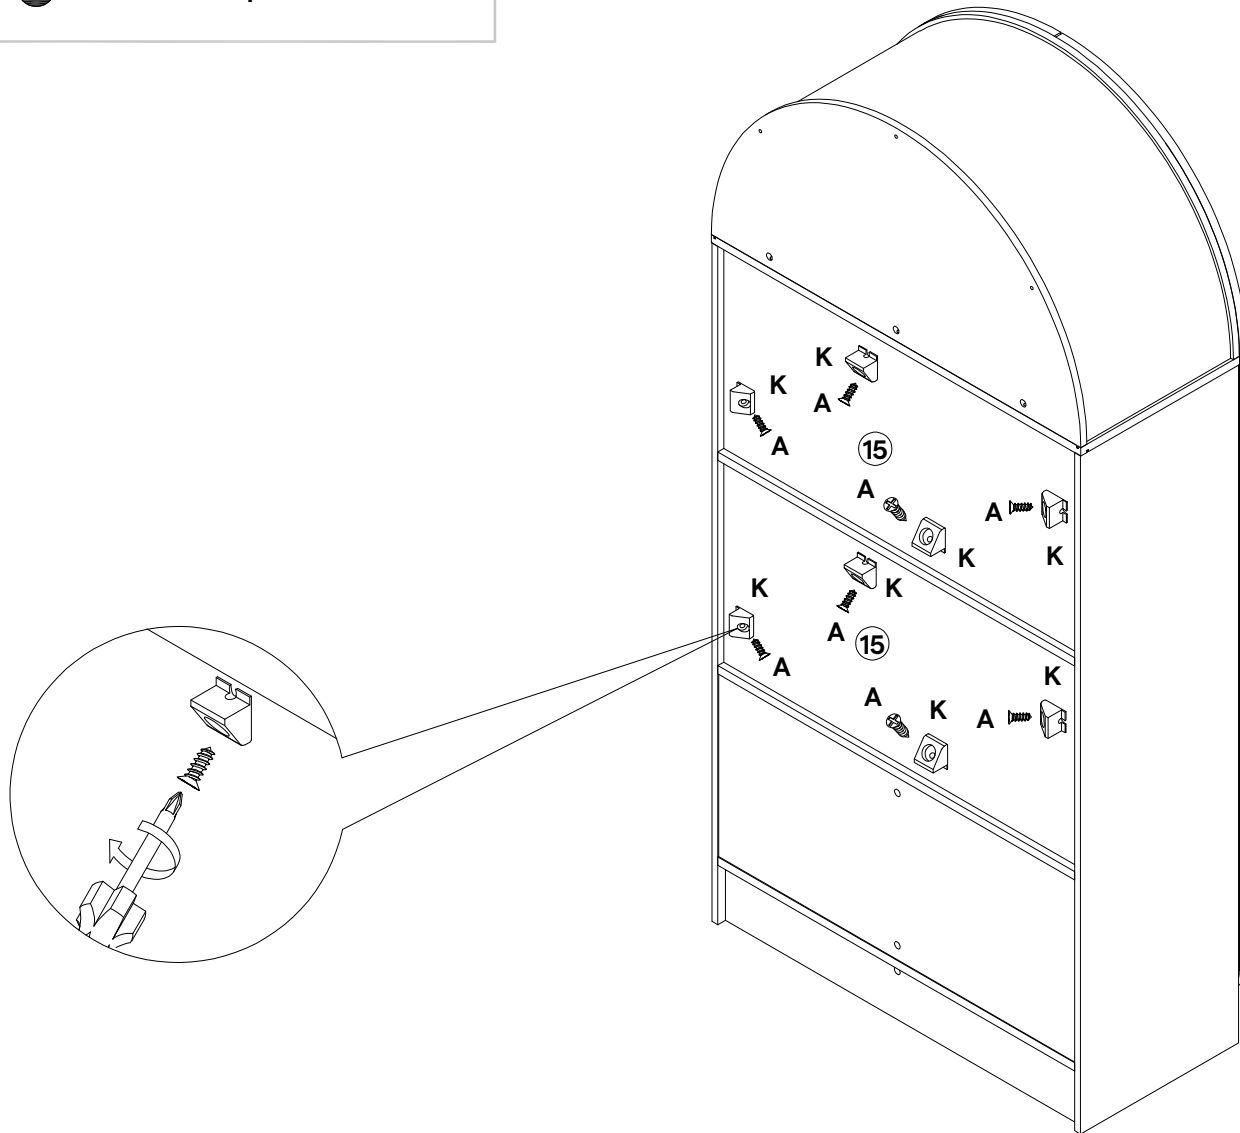


Great job!

Your cabinet is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

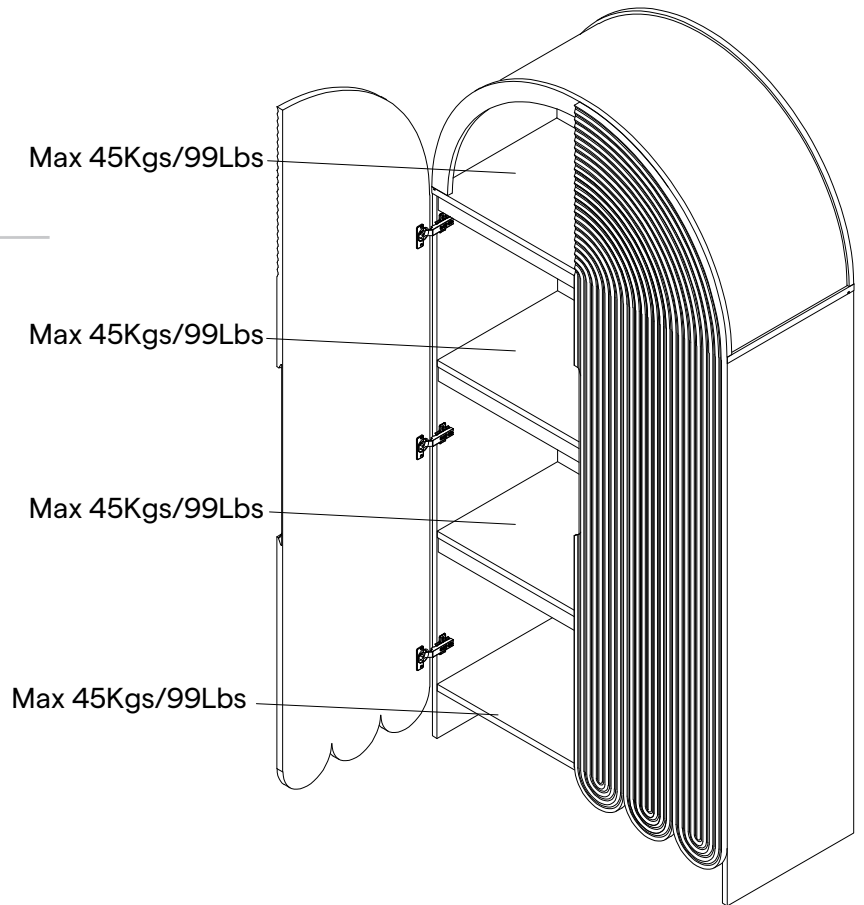

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

modway





Questions? Contact us!

609.256.9000
cs@modway.com

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

This tipping restraint is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

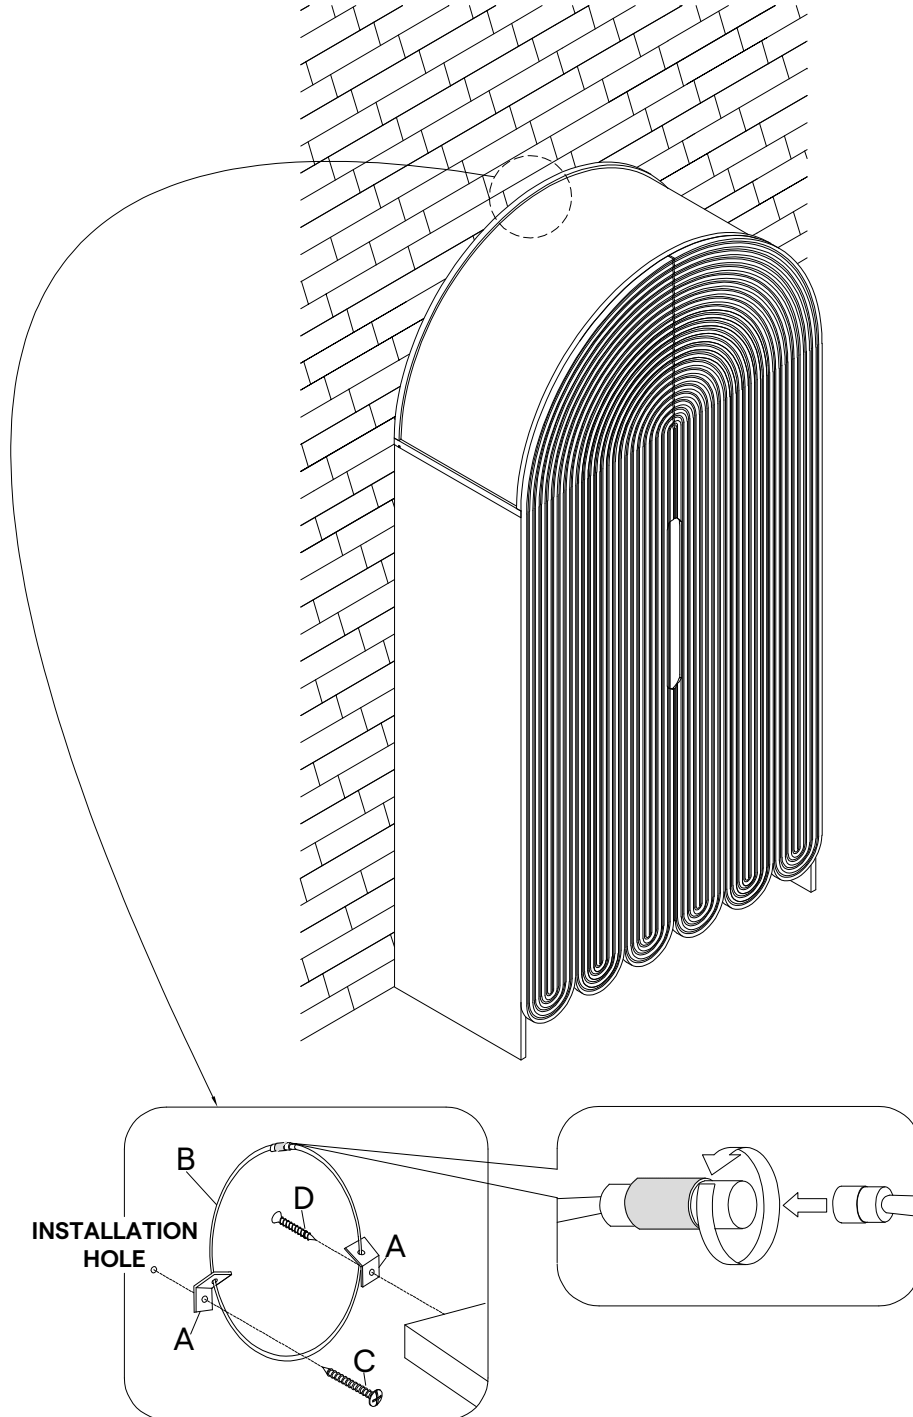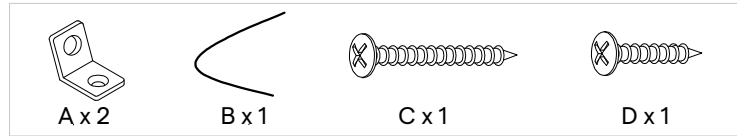

Installation Instructions :

1. Determine where the furniture is to be placed and find the center line of a wooden stud using a stud finder.
2. Drill a 1/8" pilot hole on the wooden stud approximately 3" below the height of unit top.
3. Attach one bracket (A) securely with screw (C) into the pilot hole on the wall.
4. Position the furniture in place and attach the other bracket (A) with screw (D) to the back edge of unit top in line with the bracket (A) on the wall.
5. Put the male end of the steel cable (B) through each bracket. Securely connect both ends together by turning the female connector clockwise.