


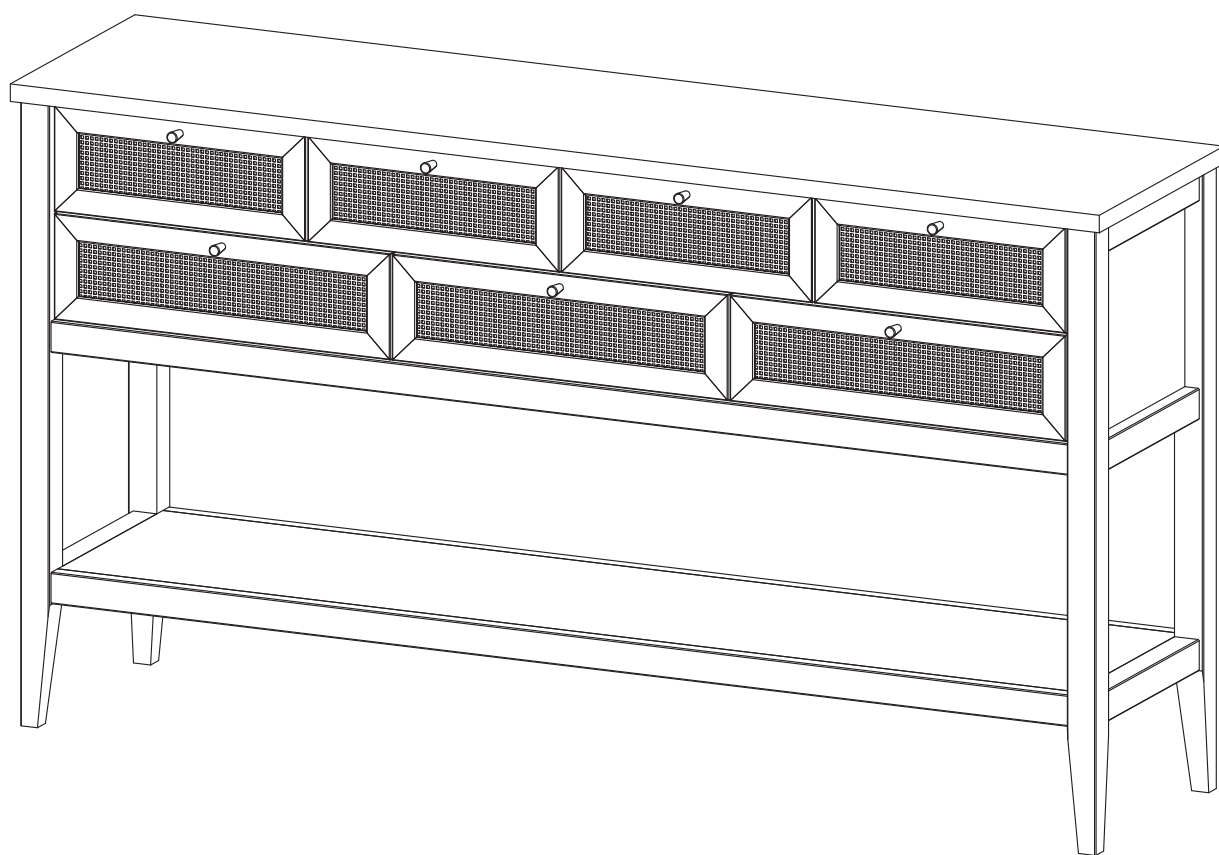

ASSEMBLY INSTRUCTIONS

Console Table

EEI-7435 / V0.08.01.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 90 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.






Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Cam Bolt Ø6 x 35 mm	x78
B		Cam Lock Ø15 mm	x42
C		Cam Lock Ø12 mm	x36
D		Wood Dowel Ø8 x 30 mm	x57
E		Wood Dowel Ø6 x 30 mm	x21
F		Handle	x7
G		Screw M 7 x 50 mm	x14
H		Anti - Deflection Bar	x3
I		Screw M 6.4 x 35 mm	x12
J		Screw M 6.4 x 14 mm	x12
K		Screw M 3.5 x 15.5 mm	x28
L		Wedge	x28
M		Screw M 3.5 x 13 mm	x42
N		Screw M 6 x 10.5 mm	x28
O		Screw M 4 x 39 mm	x28
P		Screw M 4 x 25 mm	x7
Q		Floor Protector	x4
R		Wood Dowel Ø8 x 20 mm	x8
S		Screw M 6.4 x 25 mm	x4
HGL4		Hand Grip + Allen Key	1 SET
RM30A		Drawer Runner	x7

WHAT YOU NEED:




Phillips Head Screwdriver

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 3 of 23

All parts are numbered with a sticker according to this list.

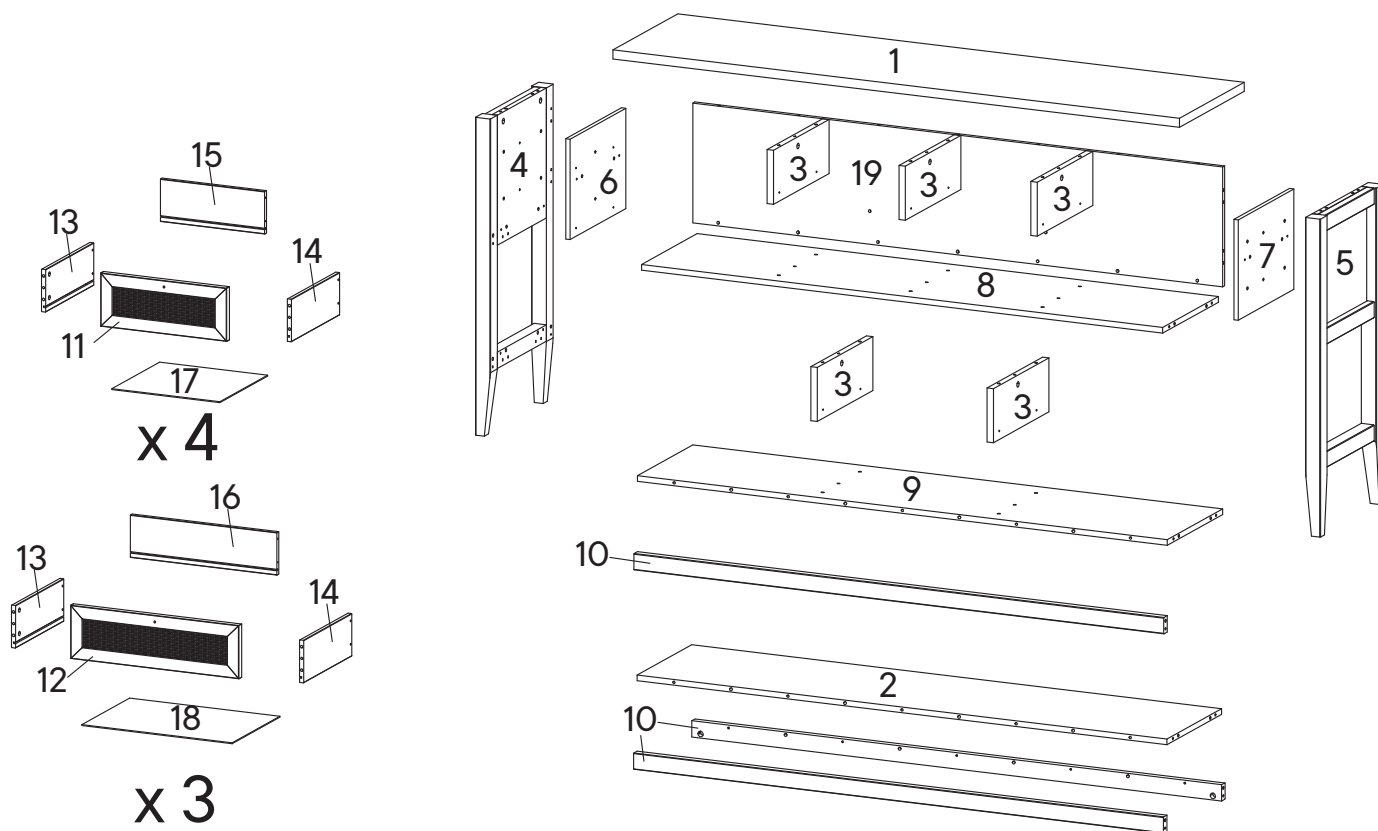

1	Top Board	x1	9	Fixed Shelf 2	x1	17	Bottom Drawer Small	x4
2	Bottom Board	x1	10	Bottom Skirt	x3	18	Bottom Drawer Big	x3
3	Center Board	x5	11	Front Drawer Small	x4	19	Back Board	x1
4	Side Board Left	x1	12	Front Drawer Big	x3			
5	Side Board Right	x1	13	Side Drawer Left	x7			
6	Support Side Board 1	x1	14	Side Drawer Right	x7			
7	Support Side Board 2	x1	15	Back Drawer Small	x4			
8	Fixed Shelf 1	x1	16	Back Drawer Big	x3			

Carton 1 Of 2

Label	Description	Qty
3	Center Board	x5
4	Side Board Left	x1
5	Side Board Right	x1
6	Support Side Board 1	x1
7	Support Side Board 2	x1
11	Front Drawer Small	x4
12	Front Drawer Big	x3
13	Side Drawer Left	x7
14	Side Drawer Right	x7
15	Back Drawer Small	x4

Carton 2 Of 2

Label	Description	Qty
16	Back Drawer Big	x3
17	Bottom Drawer Small	x4
18	Bottom Drawer Big	x3
	Hardware Pack	x1
1	Top Board	x1
2	Bottom Board	x1
8	Fixed Shelf 1	x1
9	Fixed Shelf 2	x1
10	Bottom Skirt	x3
19	Back Board	x1
	Hardware Pack	x2

HARDWARE



- A** Cam Bolt Ø6 x 35 mm x28
E Wood Dowel Ø6 x 30 mm x14

COMPONENTS

- 11** Front Drawer Small x4
12 Front Drawer Big x3
13 Side Drawer Left x7
14 Side Drawer Right x7

1.1 Insert Cam Bolt Ø6 x 35 mm (A) into the Front Drawer Small (11) and Front Drawer Big (12) then tighten using screwdriver.

1.2 Insert Wood Dowel Ø6 x 30 mm (E) into Side Drawer Left (13) and Side Drawer Right (14). Position as shown in the picture.

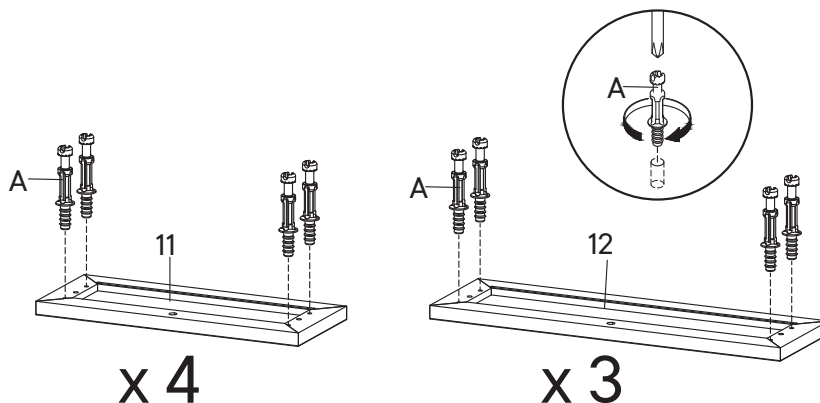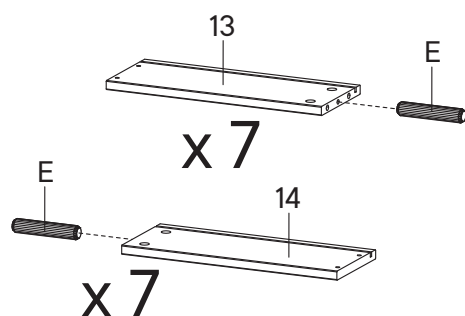

STEP 02

HARDWARE




- C** Cam Lock Ø12 mm x16

COMPONENTS

- 11** Front Drawer Small x4
13 Side Drawer Left x4
14 Side Drawer Right x4
17 Bottom Drawer Small x4

2.1 Attach Side Drawer Left (13) and Side Drawer Right (14) to Front Drawer Small (11), secure with Cam Lock Ø12 mm (C), then tighten using screwdriver.

2.2 Insert Bottom Drawer Small (17), into Front Drawer Small with laminated face facing upward.

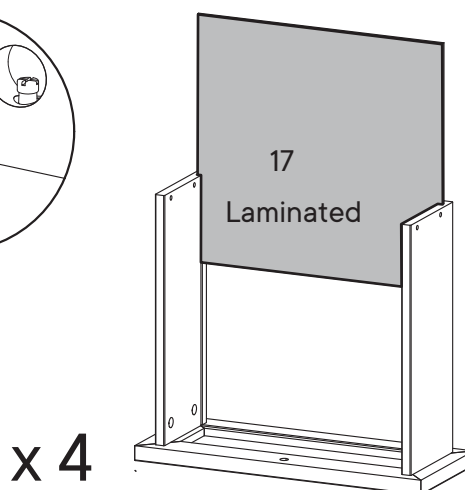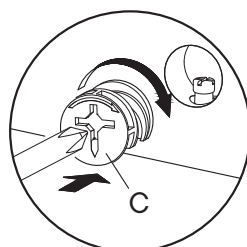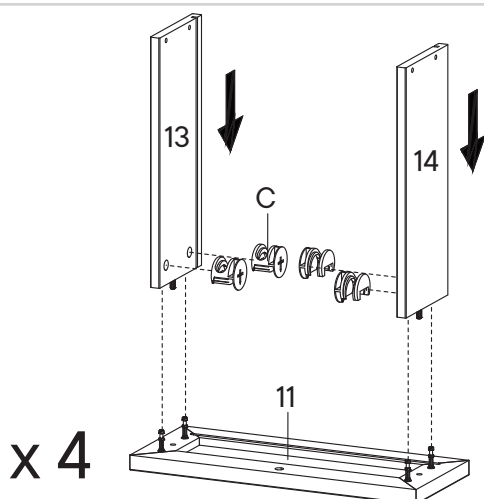

HARDWARE





F	Handle	x4
O	Screw M 4 x 39 mm	x16
P	Screw M 4 x 25 mm	x4

COMPONENTS

15	Back Drawer Small	x4
-----------	-------------------	----

3.1 Combine Back Drawer Small (15) to Pre - Assembly drawer from previous step, secure with Screw M 4 x 39 mm (O) then tighten using screwdriver, as shown in the picture.

3.2 Install Handle (F) to Front Drawer Small, secure with Screw M 4 x 25 mm (P), then tighten using screwdriver.

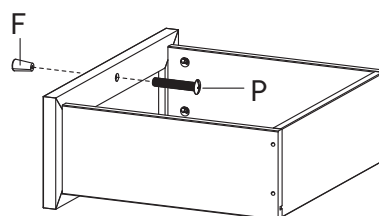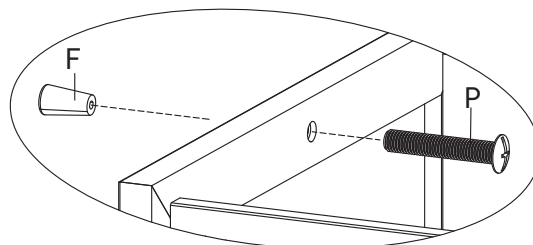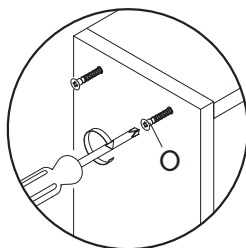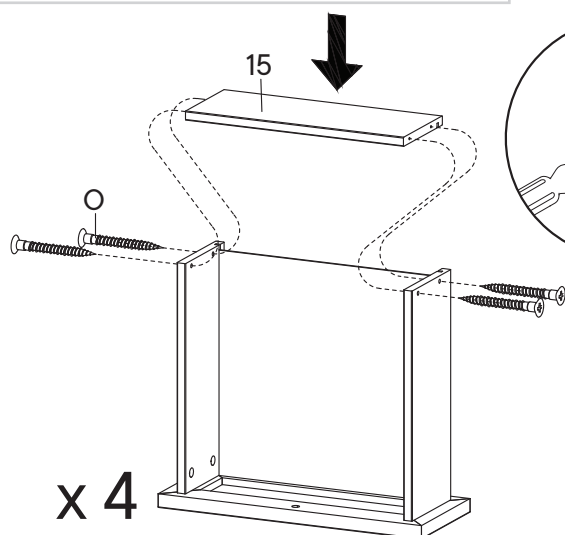

x 4




STEP 04

HARDWARE


K	Screw M 3.5 x 15.5 mm	x16
L	Wedge	x16
M	Screw M 3.5 x 13 mm	x24
RM30A	Drawer Runner	x4

4.1 Install Drawer Runner (RM30A) to Side Drawers, Secure with Screw M 3.5 x 13 mm (M), then tighten screw using screwdriver. Position as shown in the figure.

4.2 Insert the Wedge (L) and Screw M 3.5 x 15.5 mm (K) into the bottom of the drawer then tighten the screw using screwdriver and the position according to the picture.

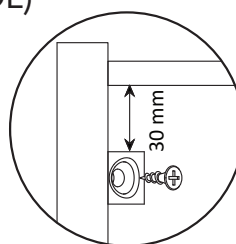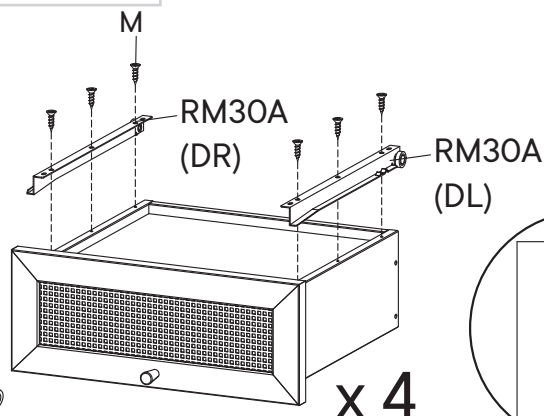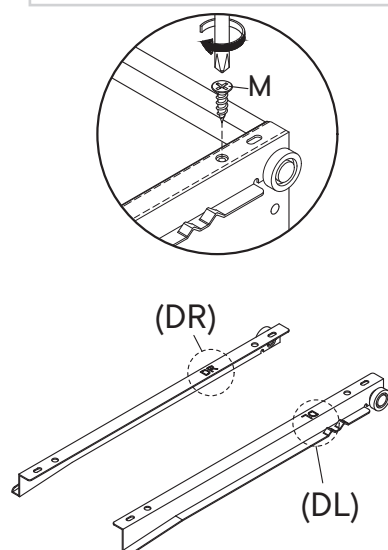

x 4

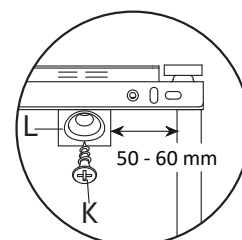

HARDWARE

Ⓒ Cam Lock Ø12 mm x12

COMPONENTS

12 Front Drawer Big x3


13 Side Drawer Left x3

14 Side Drawer Right x3

18 Bottom Drawer Big x3

5.1 Attach Side Drawer Left (13) and Side Drawer Right (14) to Front Drawer Big (12), secure with Cam Lock Ø12 mm (C), then tighten using screwdriver.

5.2 Insert Bottom Drawer Big (18), into Front Drawer Big with laminated face facing upward.

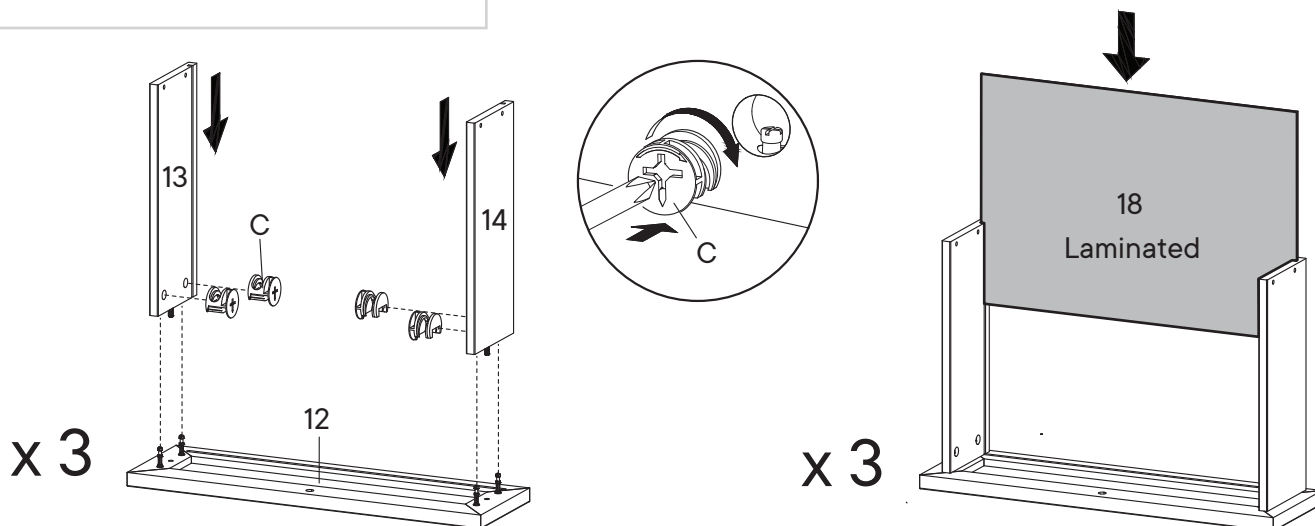

STEP 06

HARDWARE

Ⓕ Handle x3

⓪ Screw M 4 x 39 mm x12


Ⓟ Screw M 4 x 25 mm x3

COMPONENTS

16 Back Drawer Big x3

6.1 Combine Back Drawer Big (16) to Pre - Assembly drawer from previous step, secure with Screw M 4 x 39 mm (O) then tighten using screwdriver, as shown in the picture.

6.2 Install Handle (F) to Front Drawer Small, secure with Screw M 4 x 25 mm (P), then tighten using screwdriver.

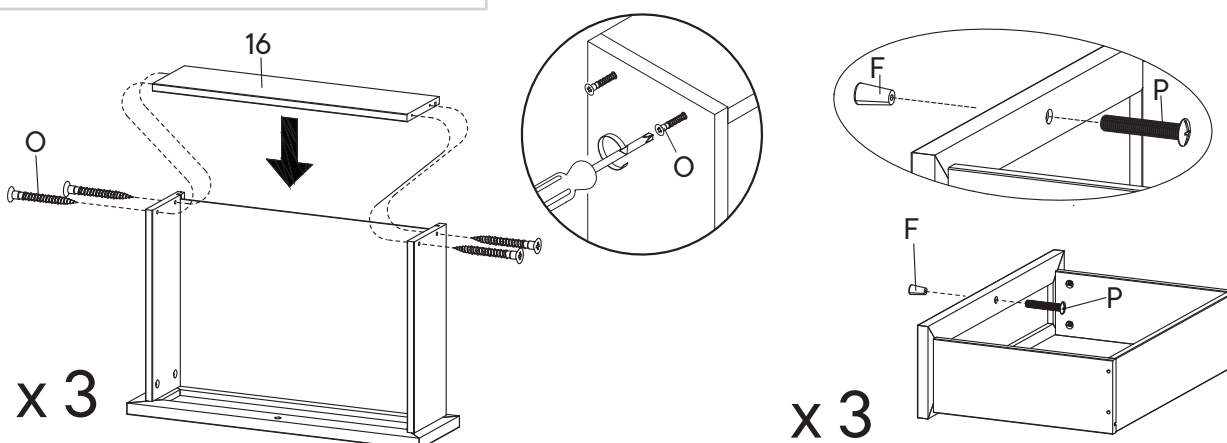


HARDWARE

K	Screw M 3.5 x 15.5 mm	x12
L	Wedge	x12
M	Screw M 3.5 x 13 mm	x18
RM30A	Drawer Runner	x3

7.1 Install Drawer Runner (RM30A) to Side Drawers, Secure with Screw M 3.5 x 13 mm (M), then tighten screw using screwdriver. Position as shown in the figure.

7.2 Insert the Wedge (L) and Screw M 3.5 x 15.5 mm (K) into the bottom of the drawer then tighten the screw using screwdriver and the position according to the picture.

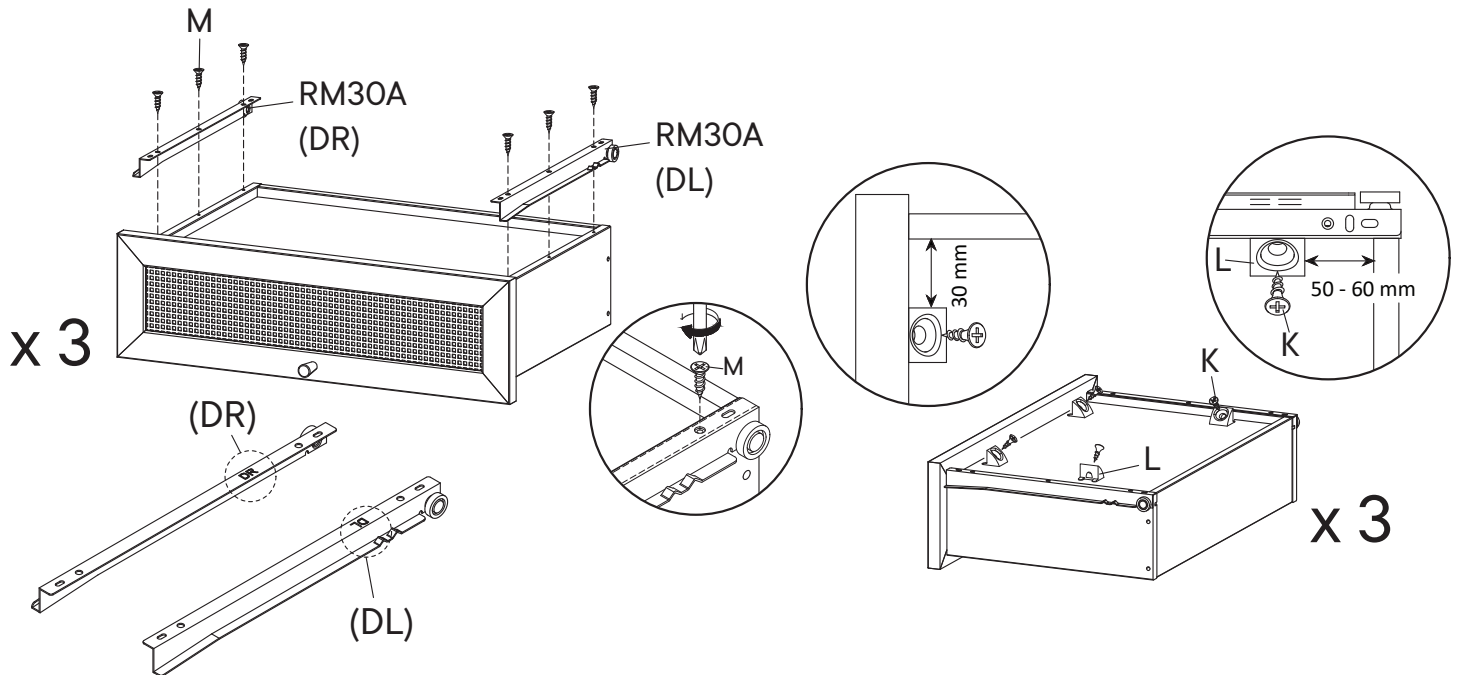

STEP 08


HARDWARE

D	Wood Dowel Ø8 x 30 mm	x20
----------	-----------------------	-----

COMPONENTS

3	Center Board	x5
----------	--------------	----

8.1 Insert Wood Dowel Ø8 x 30 mm (D) into Center Board (3). Position as shown in the picture.

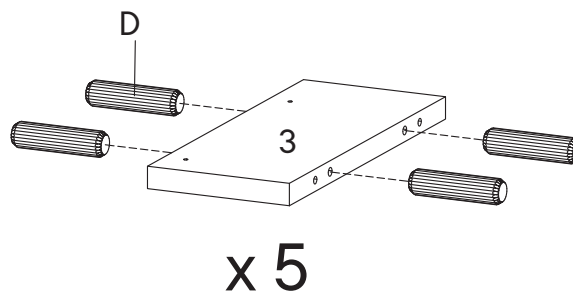

HARDWARE


(N) Screw M 6 x 10.5 mm x20

RM30A Drawer Runner x5

COMPONENTS

(3) Center Board x5

9.1 Securing part of the Drawer Runner (RM30A), into position as the above image, using screw M 6 x 10.5 mm (N). Please notice position the Drawer Runner part as per provided images. Flip the Center Board (3) to the other side then repeat the process.

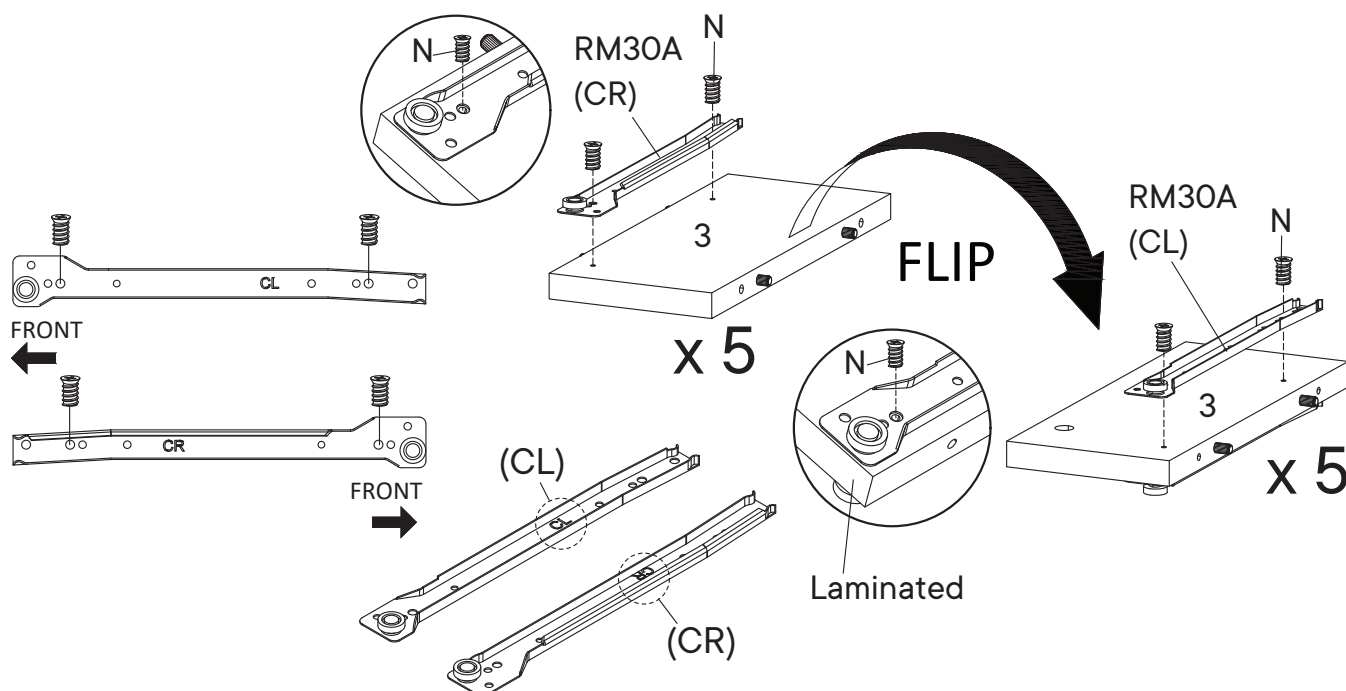

STEP 10

HARDWARE


(A) Cam Bolt Ø6 x 35 mm x2

(D) Wood Dowel Ø8 x 30 mm x4

COMPONENTS

(8) Fixed Shelf 1 x1

10.1 Insert Cam Bolt Ø6 x 35 mm (A) into Fixed Shelf 1 (8), then tighten using screwdriver. Insert Wood Dowel Ø8 x 30 mm (D). Position as shown in the picture.

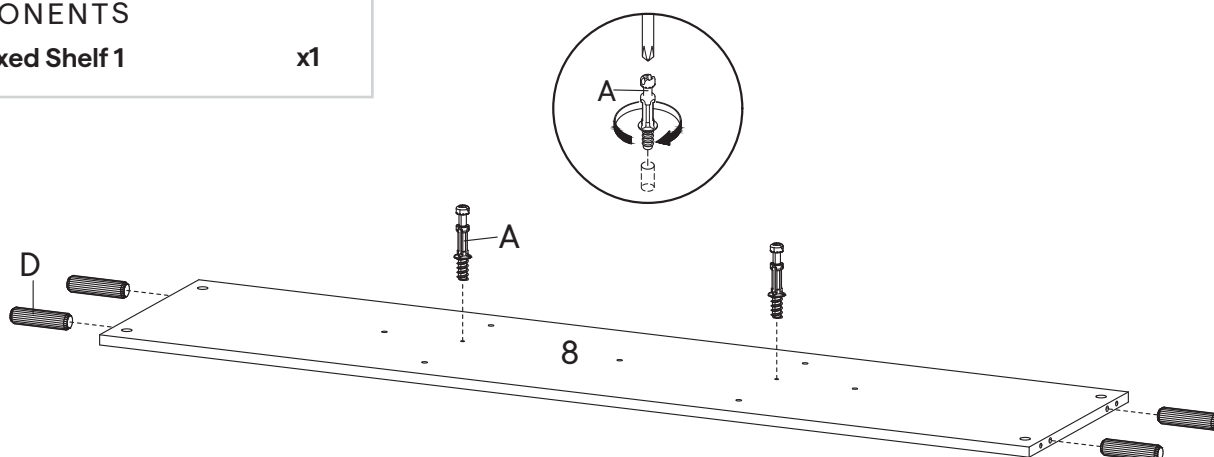

HARDWARE

G Screw M 7 x 50 mm x3

HGL4 Hand Grip + Allen Key x1


COMPONENTS

3 Center Board x3

8 Fixed Shelf 1 x1

11.1 Remove the Allen key from the hand grip (HGL4). Insert and tighten the screw following the detail.

11.2 Combine Center Board (3) and Fixed Shelf 1 (8), secure with Screw M 7 x 50 mm (G), then tighten using the Hand Grip + Allen Key (HGL4). Position as shown in the figure.

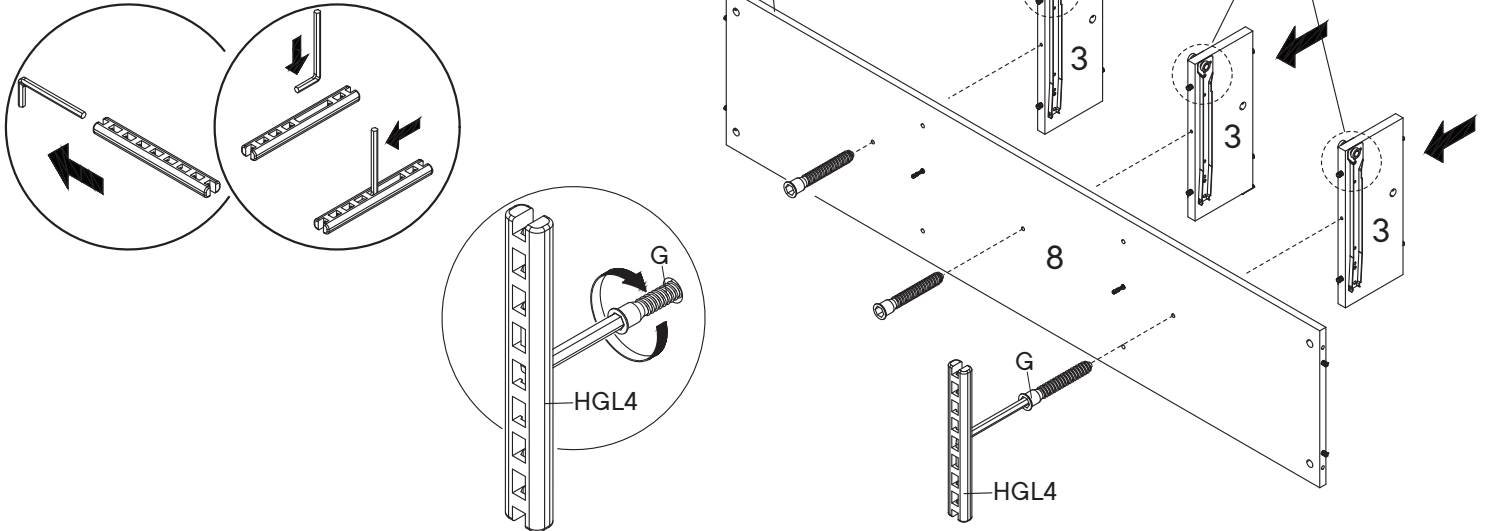

STEP 12


HARDWARE

B Cam Lock Ø15 mm x2

COMPONENTS

3 Center Board x2

12.1 Attach component Center Board (3) into Pre-Assembled component from previous step, secure with Cam Lock Ø15 mm (B) then tighten using screwdriver. Position as shown in the figure.

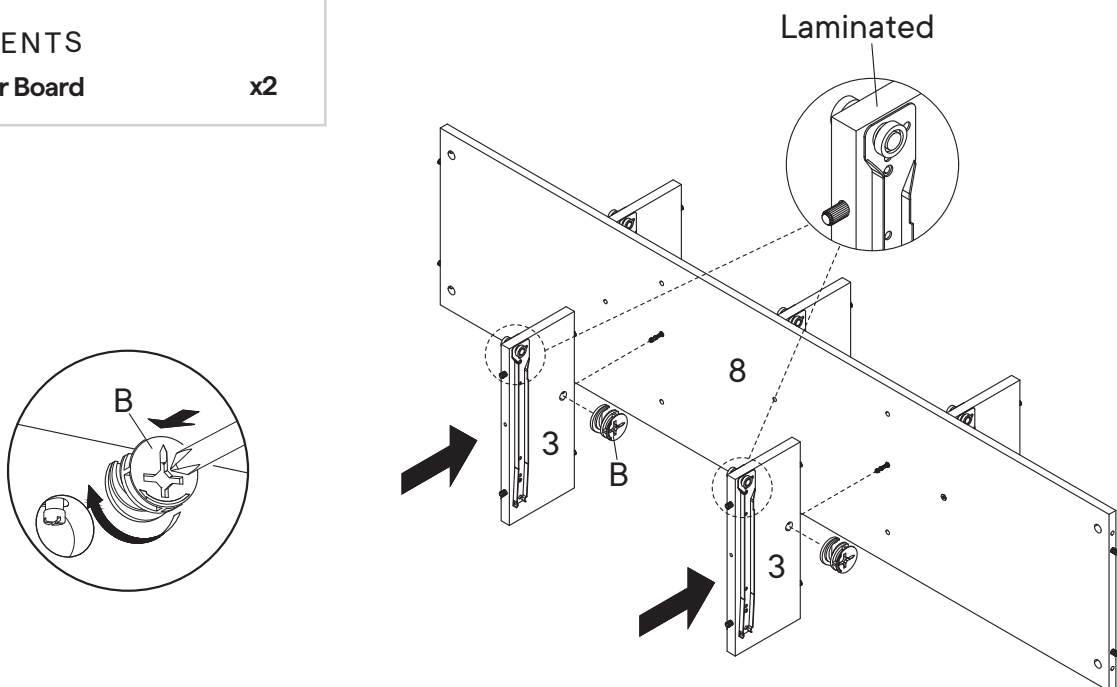

HARDWARE


- A** Cam Bolt Ø6 x 35 mm x5
D Wood Dowel Ø8 x 30 mm x13

COMPONENTS

- 9** Fixed Shelf 2 x1
10 Bottom Skirt x1

13.1 Insert Wood Dowel Ø8 x 30 mm (D) into Fixed Shelf 2 (9). Position as shown in the figure.

13.2 Insert Cam Bolt Ø6 x 35 mm (A) into the Bottom Skirt (10), then tighten using screwdriver. Position as shown in the figure.

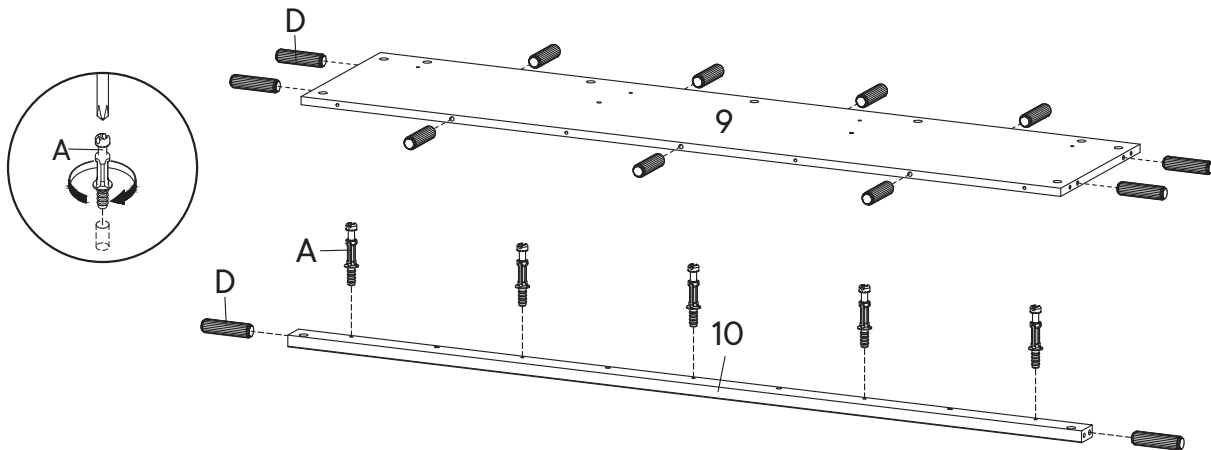

STEP 14


HARDWARE

- B** Cam Lock Ø15 mm x5

COMPONENTS

- 9** Fixed Shelf 2 x1
10 Bottom Skirt x1

14.1 Attach Bottom Skirt (10) to Fixed Shelf 2 (9), secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

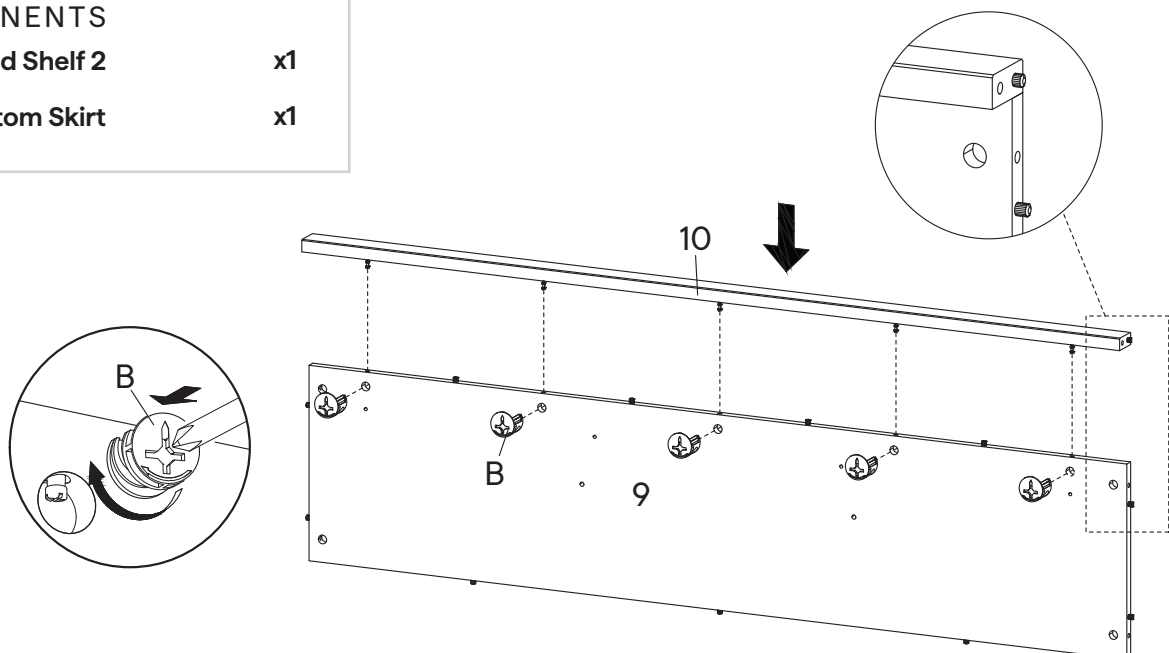

HARDWARE

G Screw M 7 x 50 mm x2



HGL4 Hand Grip + Allen Key x1

COMPONENTS

9 Fixed Shelf 2 x1

10 Bottom Skirt x1

15.1 Combine Fixed Shelf 2 (9) to Pre-Assembled from previous step and secure with Screw M 7 x 50 mm (G), then tighten using the Hand Grip + Allen Key (HGL4).

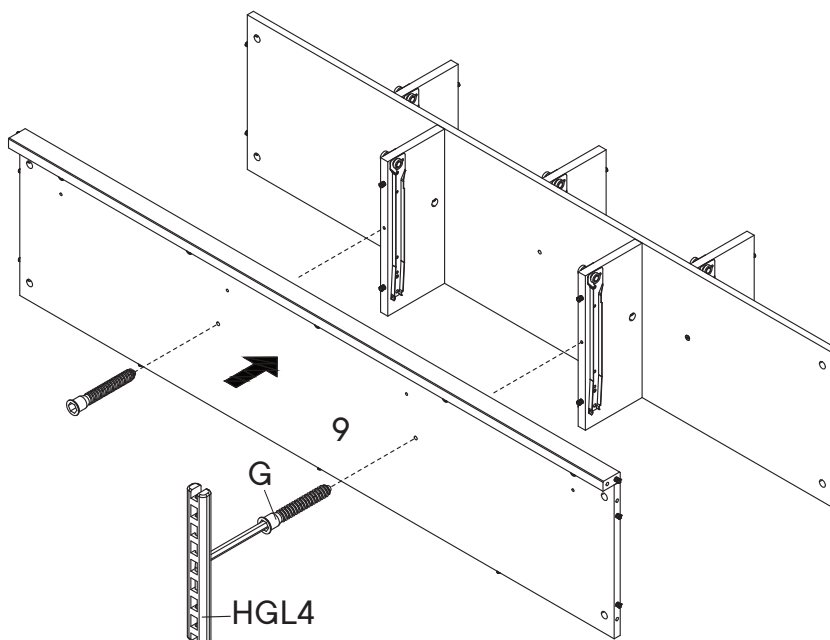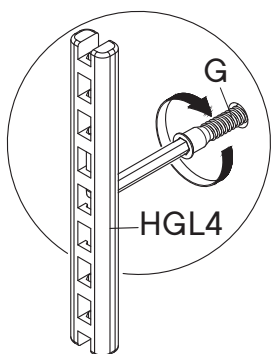

STEP 16


HARDWARE

E Wood Dowel Ø6 x 30 mm x7

COMPONENTS

19 Back Board x1

16.1 Insert Wood Dowel Ø6 x 30 mm (E) into Back Board (19). Position as shown in the picture.

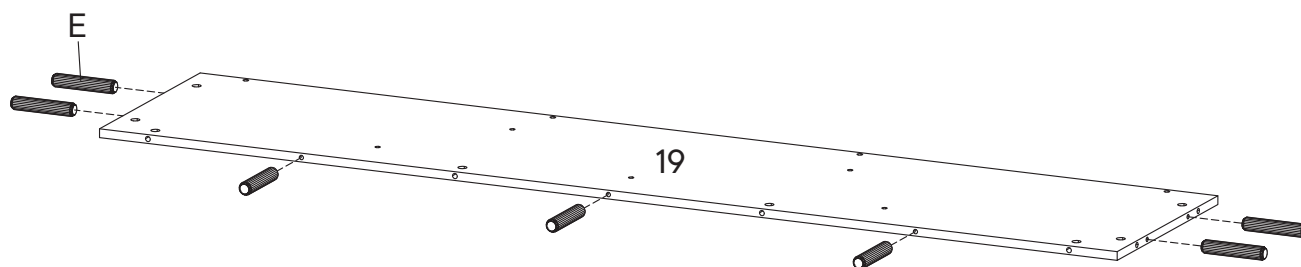

HARDWARE


G Screw M 7 x 50 mm x9

HGL4 Hand Grip + Allen Key x1


COMPONENTS

19 Back Board x1

17.1 Combine Back Board (19) to Pre-Assembled from previous step and secure with Screw M 7 x 50 mm (G), then tighten using the Hand Grip + Allen Key (HGL4). Position as shown in the figure.

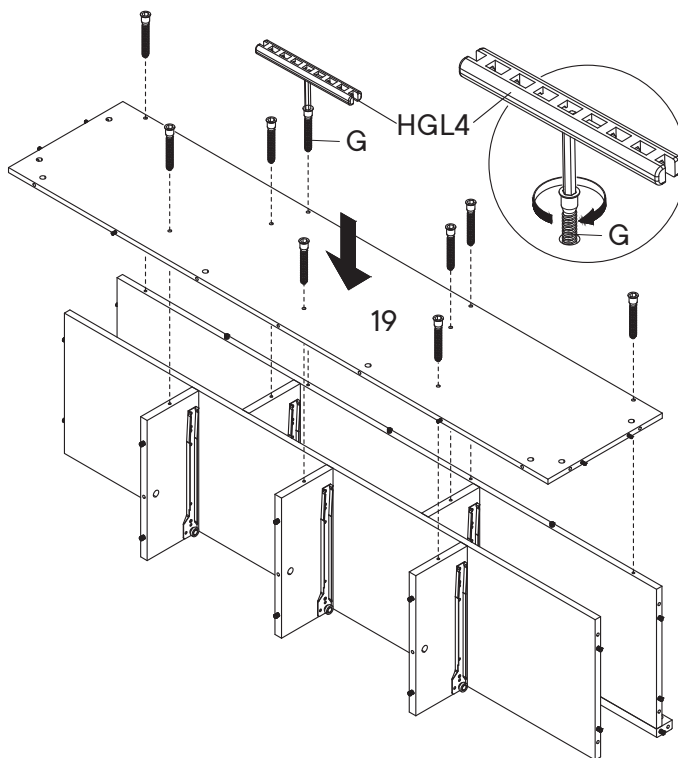

ROTATE
180°

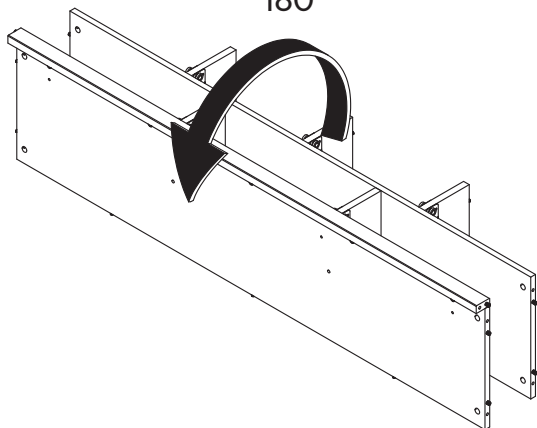

STEP 18


HARDWARE

H Anti Deflection-Bar x1




I Screw M 6.4 x 35 mm x4

HGL4 Hand Grip + Allen Key x1

18.1 Install Anti Deflection - Bar (H) into Fixed Shelf 2 and secure with Screw M 6.4 x 35 mm (I), then tighten using the Hand Grip + Allen Key (HGL4). Position as shown in the figure.

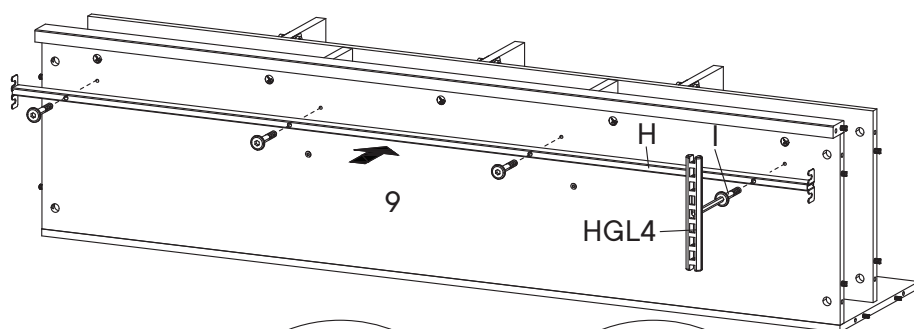

ROTATE
180°

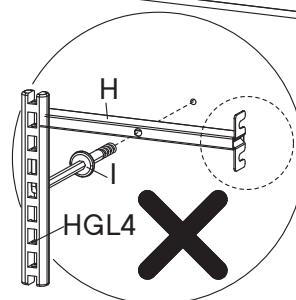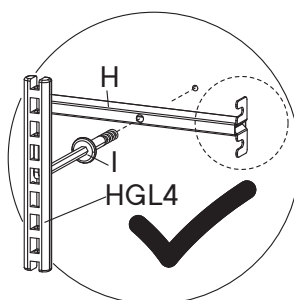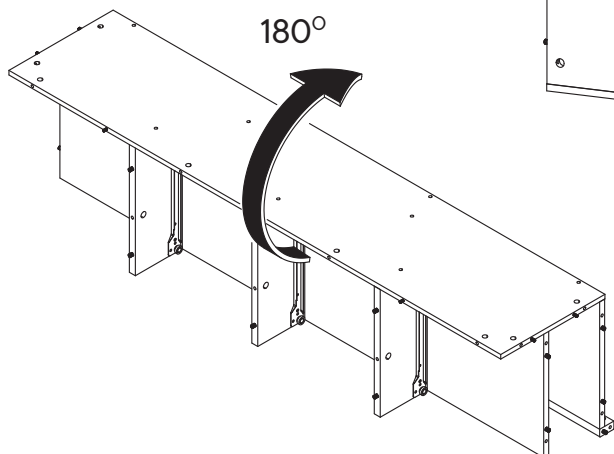

HARDWARE


- A** Cam Bolt Ø6 x 35 mm x18
D Wood Dowel Ø8 x 30 mm x4

COMPONENTS

- 4** Side Board Left x1
5 Side Board Right x1

19.1 Insert Cam Bolt Ø6 x 35 mm (A) to Side Board Left (4), tighten using screwdriver. Then insert Wood Dowel Ø8 x 30 mm (D). Position as shown in the figure.

19.2 Insert Cam Bolt Ø6 x 35 mm (A) to Side Board Right (5), tighten using screwdriver. Then insert Wood Dowel Ø8 x 30 mm (D). Position as shown in the figure.

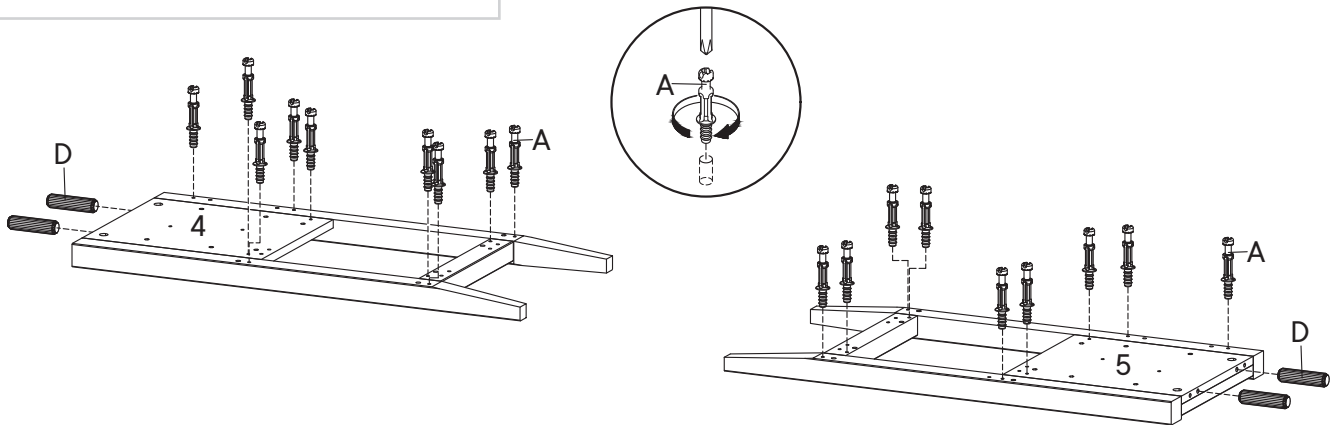

STEP 20


HARDWARE

- R** Wood Dowel Ø8 x 20 mm x8

COMPONENTS

- 6** Support Side Board 1 x1
7 Support Side Board 2 x1

20.1 Insert Wood Dowel Ø8 x 20 mm (R) into Support Side Board 1 (6) and Support Side Board 2 (7). Position as shown in the figure.

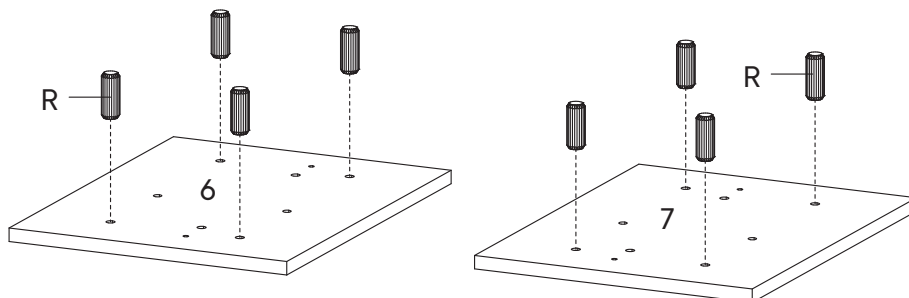

HARDWARE

S Screw M 6.4 x 25 mm x4

HGL4 Hand Grip + Allen Key x1


COMPONENTS

6 Support Side Board 1 x1

7 Support Side Board 2 x1

21.1 Combine Support Side Board 1 (6) and Side Board Left (4), secure with Screw M 6.4 x 25 mm (S), then tighten using the Hand Grip + Allen Key (HGL4). Position as shown in the figure.

21.2 Combine Support Side Board 2 (7) and Side Board Right (5), secure with Screw M 6.4 x 25 mm (S), then tighten using the Hand Grip + Allen Key (HGL4). Position as shown in the figure.

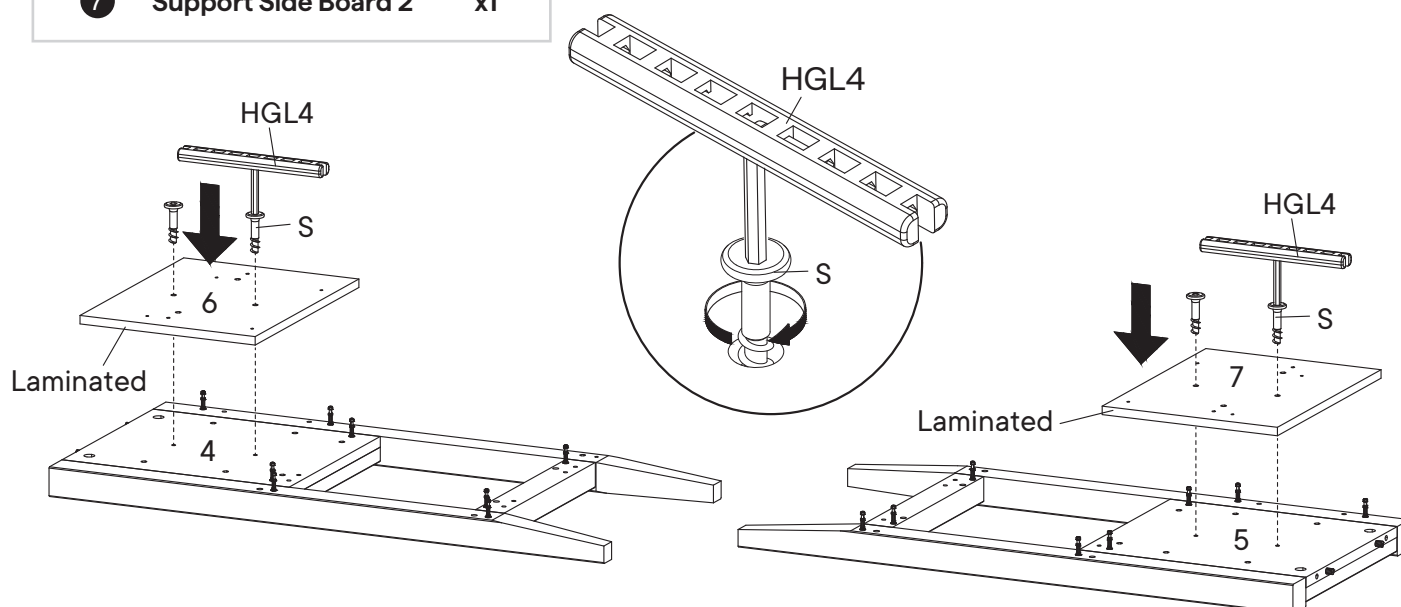

STEP 22


HARDWARE

A Cam Bolt Ø6 x 35 mm x4

Q Floor Protector x4

22.1 Insert Cam Bolt Ø6 x 35 mm (A) to Support Side Board 1 (6), tighten using screwdriver. Peel off the Paper from the Floor Protector (Q) and stick it on the Leg of Side Board. Position as shown in the figure.

22.2 Insert Cam Bolt Ø6 x 35 mm (A) to Support Side Board 2 (7), tighten using screwdriver. Peel off the Paper from the Floor Protector (Q) and stick it on the Leg of Side Board. Position as shown in the figure.

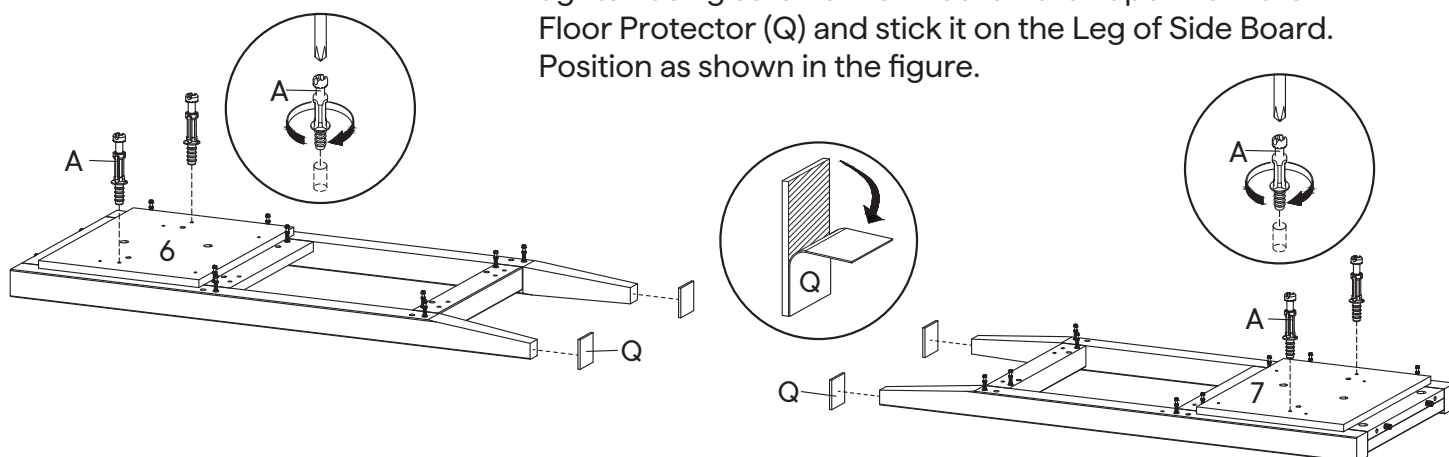


HARDWARE

(N) Screw M 6 x 10.5 mm x8

RM30A Drawer Runner x2

23.1 Install Drawer Runner (RM30A) (CL) to Side Board Left (4), secure with Screw M 6 x 10.5 mm (N), then tighten using screwdriver. Position as shown in the figure.

23.2 Install Drawer Runner (RM30A) (CR) to Side Board Right (5), secure with Screw M 6 x 10.5 mm (N), then tighten using screwdriver. Position as shown in the figure.

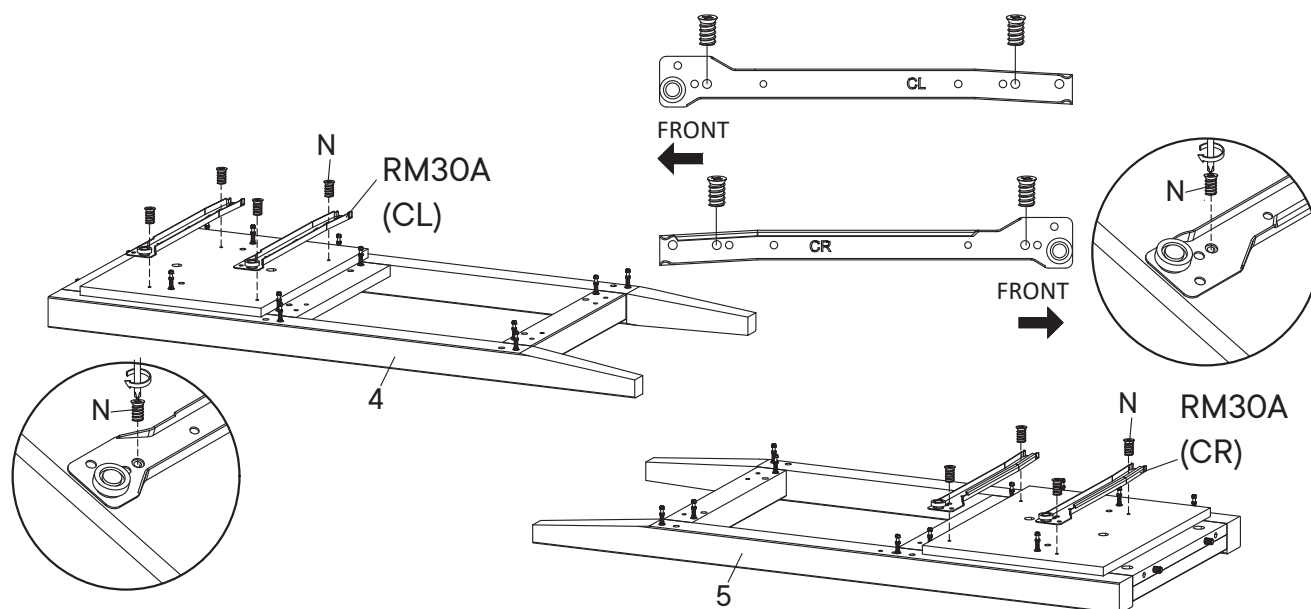

STEP 24

HARDWARE


(B) Cam Lock Ø15 mm x5

HGL4 Hand Grip + Allen Key x1

COMPONENTS

(5) Side Board Right x1

24.1 Combine Side Board Right (5) and pre-assembly item from previous step secure with Cam Lock Ø15 mm (B), then tighten using the Hand Grip + Allen Key (HGL4). Position as shown in the figure.

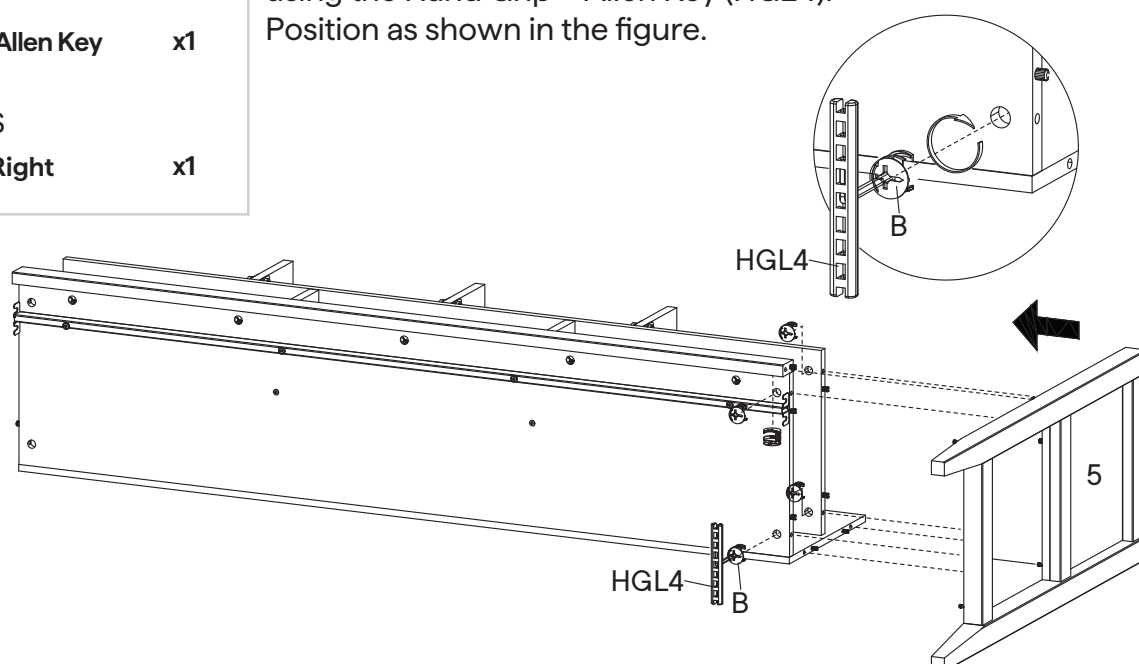

HARDWARE


- A** Cam Bolt Ø6 x 35 mm x10
D Wood Dowel Ø8 x 30 mm x16

COMPONENTS

- 2** Bottom Board x1
10 Bottom Skirt x2

25.1 Insert Wood Dowel Ø8 x 30 mm (D) into Bottom Board (2). Position as shown in the picture.

25.2 Insert Cam Bolt Ø6 x 35 mm (A) into the Bottom Skirt (10), then tighten using screwdriver. Position as shown in the figure.

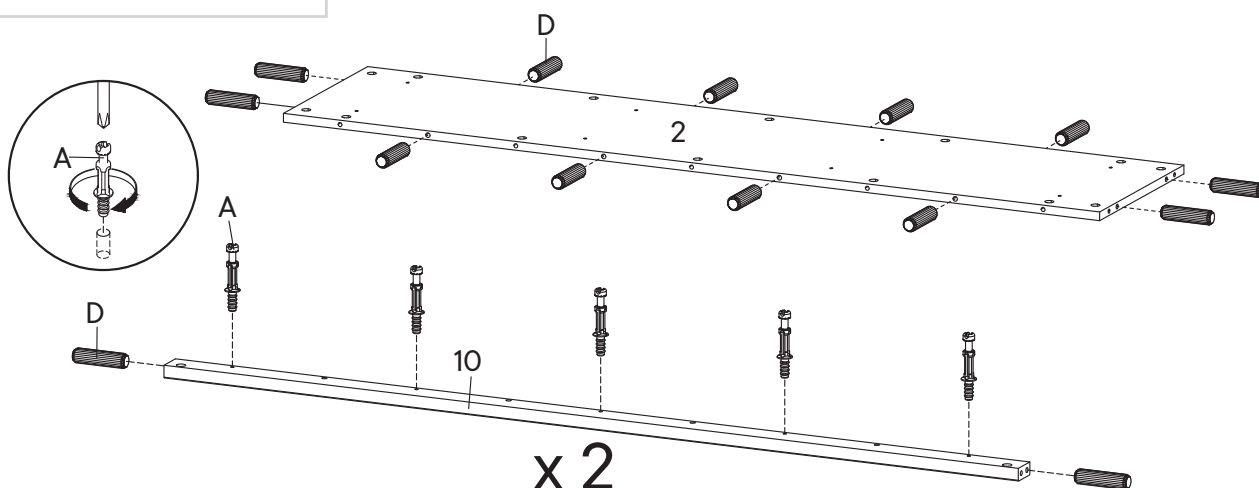

STEP 26


HARDWARE

- B** Cam Lock Ø15 mm x10

COMPONENTS

- 2** Bottom Board x1
10 Bottom Skirt x2


26.1 Combine Bottom Board (2) and Support Board (10), secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

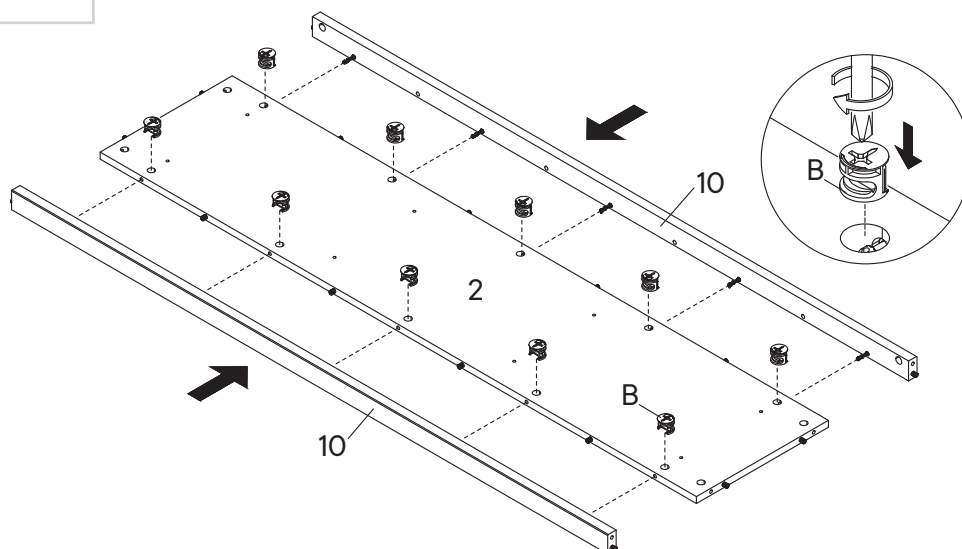

HARDWARE

H	Anti - Deflection Bar	x2
I	Screw M 6.4 x 35 mm	x8
HGL4	Hand Grip + Allen Key	x1

27.1 Install Anti Deflection - Bar (H) into Bottom Board and secure with Screw M 6.4 x 35 mm (I), then tighten using the Hand Grip + Allen Key (HGL4). Position as shown in the figure.

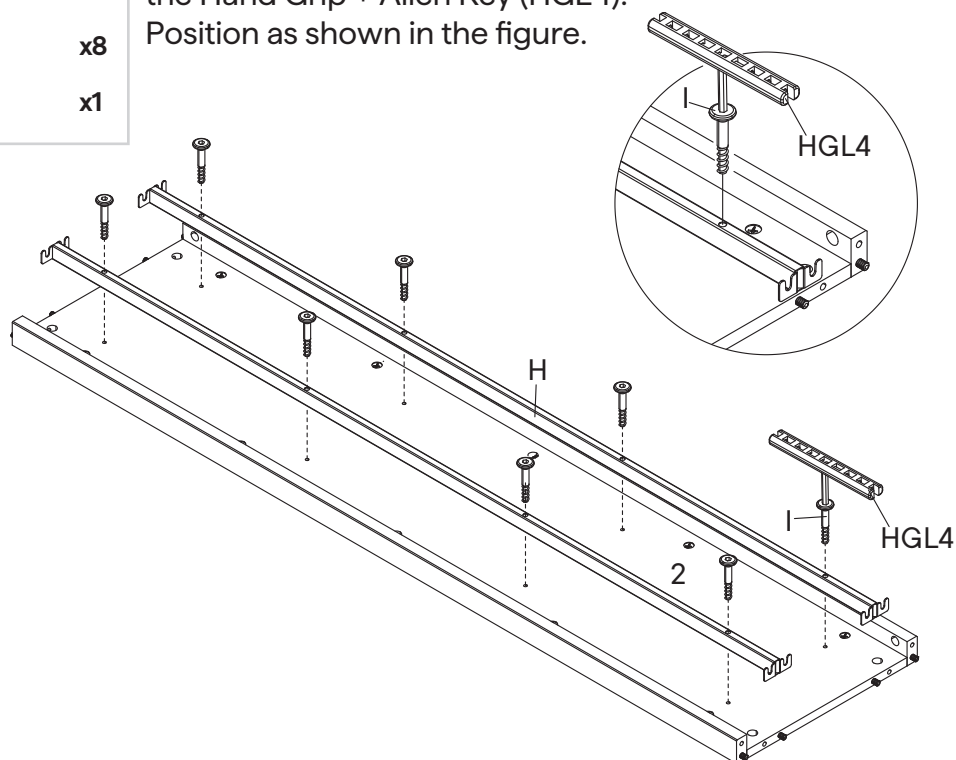

STEP 28


HARDWARE

B	Cam Lock Ø15 mm	x4
----------	-----------------	----

COMPONENTS

2	Bottom Board	x1
----------	--------------	----

28.1 Attach Bottom Board and Bottom Skirt previously assembled to Side Board Right, secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

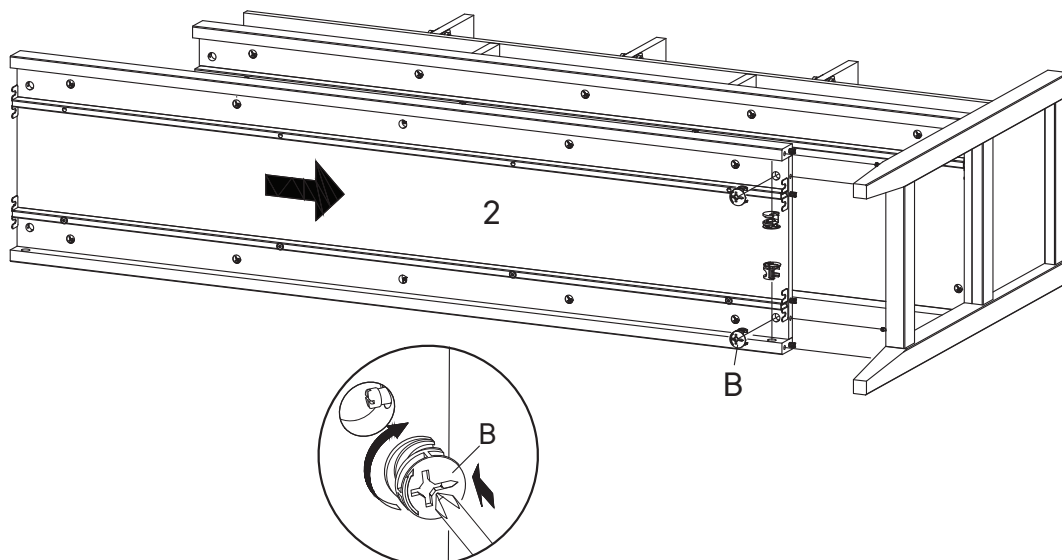

HARDWARE



B Cam Lock Ø15 mm x9

HGL4 Hand Grip + Allen Key x1

COMPONENTS

4 Side Board Left x1

29.1 Combine Side Board Left (4) and pre-assembly item from previous step secure with Cam Lock Ø15 mm (B), then tighten using the Hand Grip + Allen Key (HGL4). Position as shown in the figure.

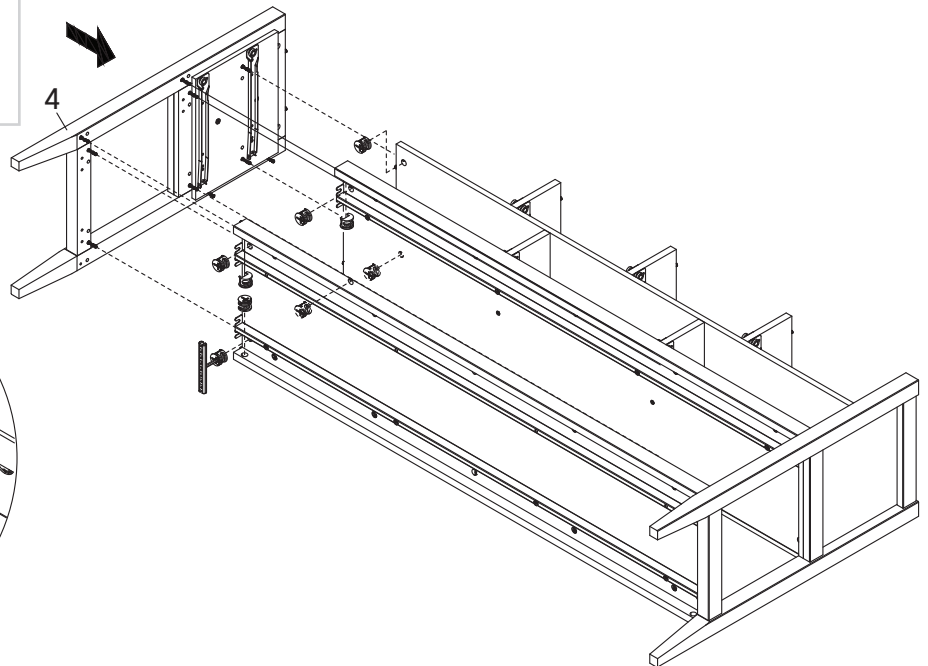
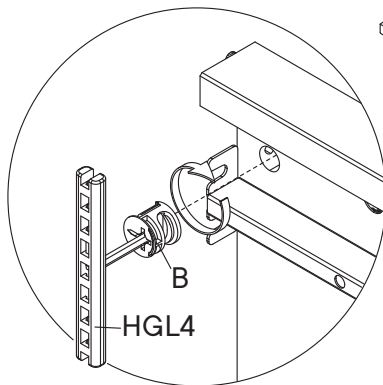


STEP 30

HARDWARE

J Screw M 6.4 x 14 mm x12

30.1 Install Screw M 6.4 x 14 mm (J) into the pre-installed anti-deflection bars. Using a screwdriver, insert and tighten each screw through the holes in the frame, securing them firmly into the metal anti-deflection bars. Ensure all screws are tightened properly to enhance structural stability and prevent bending or flexing.

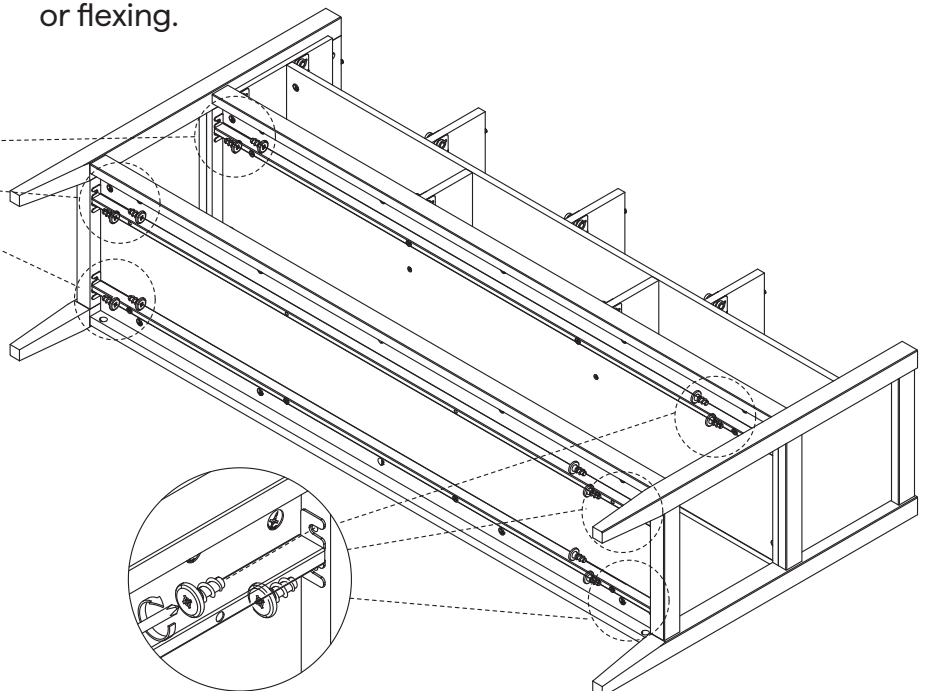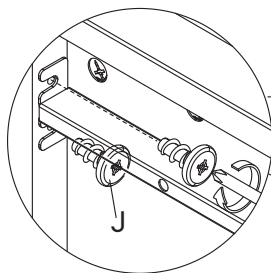


HARDWARE

A Cam Bolt Ø6 x 35 mm x11

COMPONENTS

1 Top Board x1

31.1 Insert Cam Bolt Ø6 x 35 mm (A) to Top Board (1), tighten using screwdriver. Position as shown in the figure.

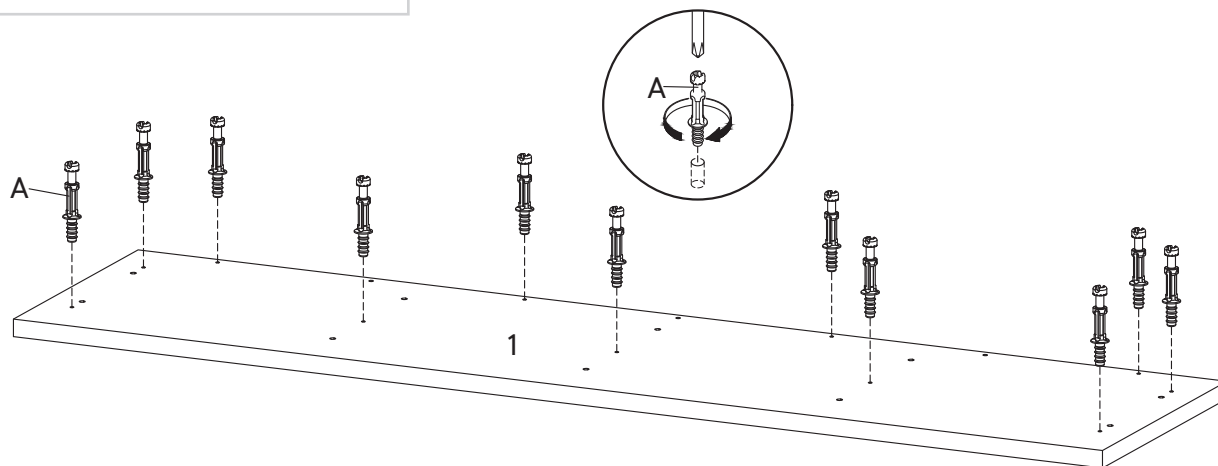

STEP 32



HARDWARE

B Cam Lock Ø15 mm x7

COMPONENTS

1 Top Board x1



32.1 Attach Top Board (1) to pre-assembly item from previous step secure with Cam Lock Ø15 mm (B), then tighten using screwdriver. Position as shown in the figure.

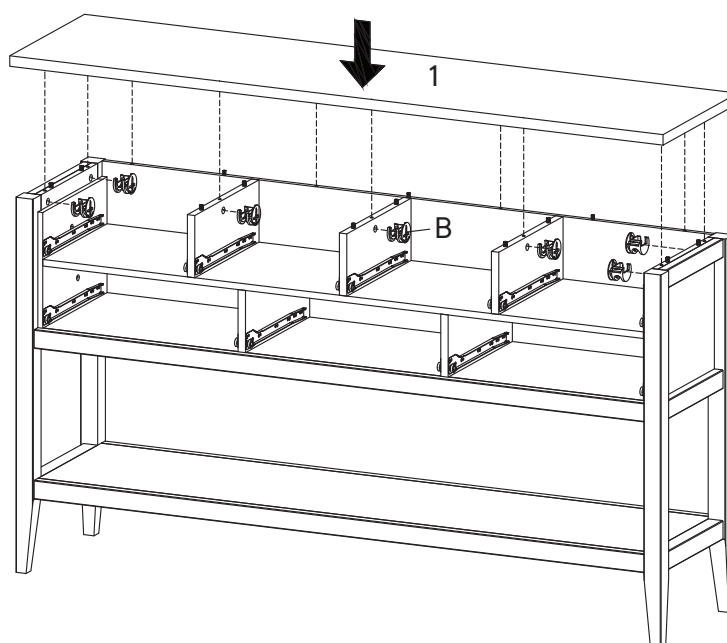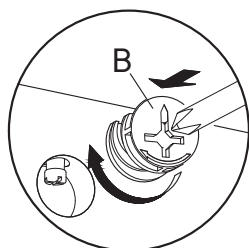

HARDWARE



C Cam Lock Ø12 mm x8

33.1 Install Cam Lock Ø12 mm (C) to Back Board, then tighten using screwdriver. Position as shown in the figure.

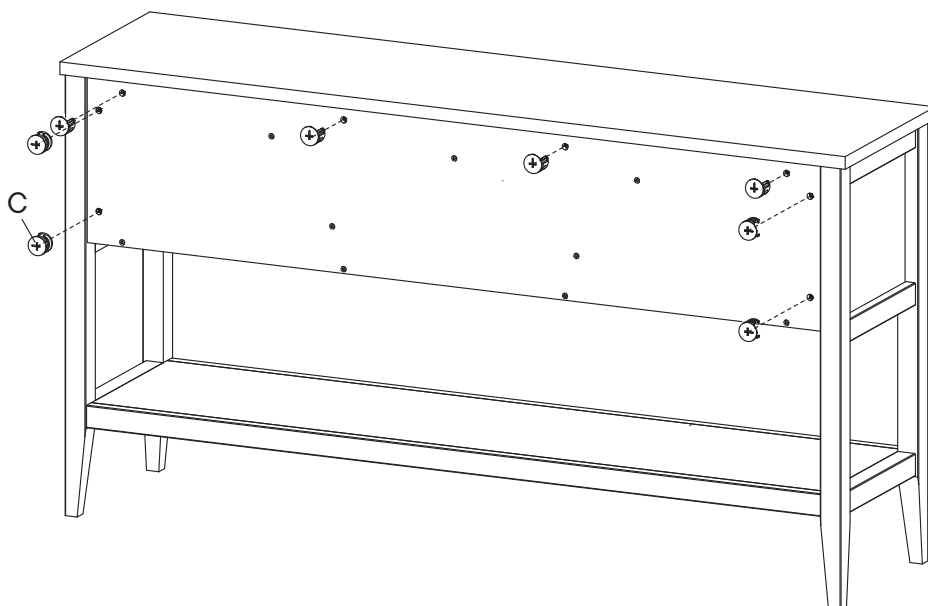
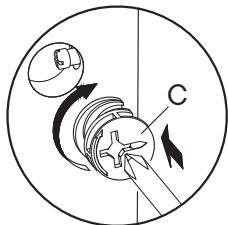


STEP 34

34.1 Hold the sides of the Drawer Big and position the wheel of the rail at the drawer back to align with the wheel of the rail on the side boards and center boards, as shown in the image.

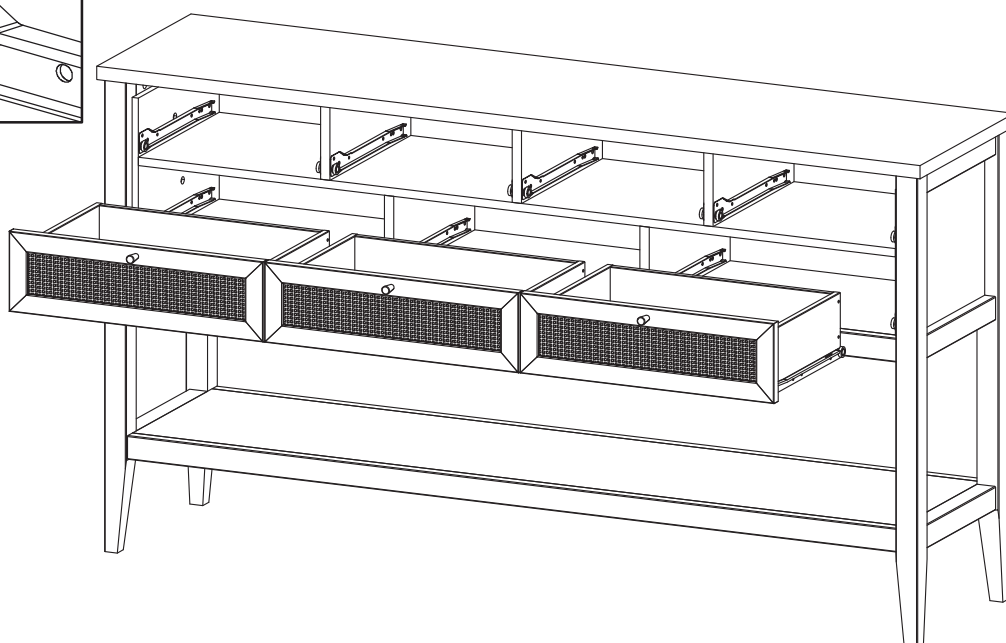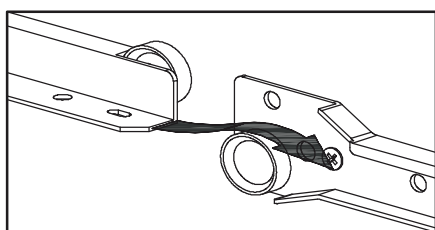


35.1 Hold the sides of the Drawer Small and position the wheel of the rail at the drawer back to align with the wheel of the rail on the side boards and center boards, as shown in the image.

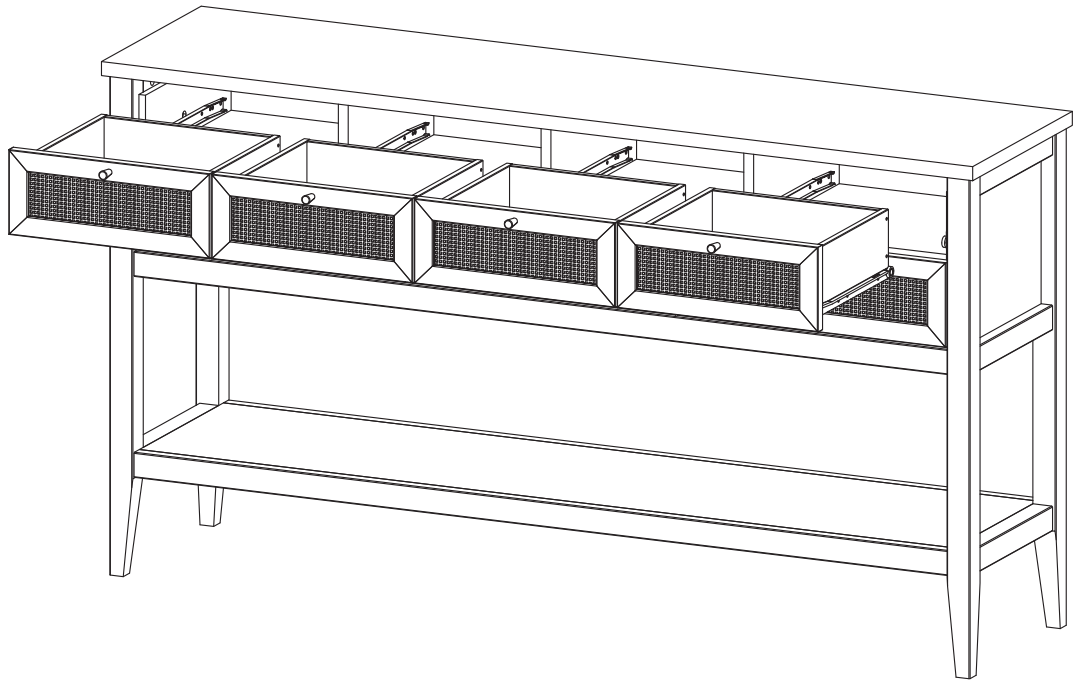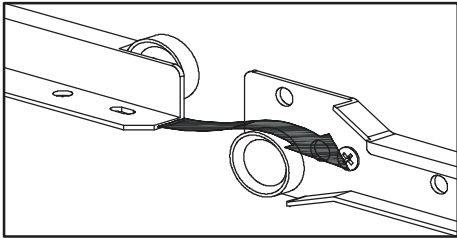

Great job!

Console Table assembly is complete

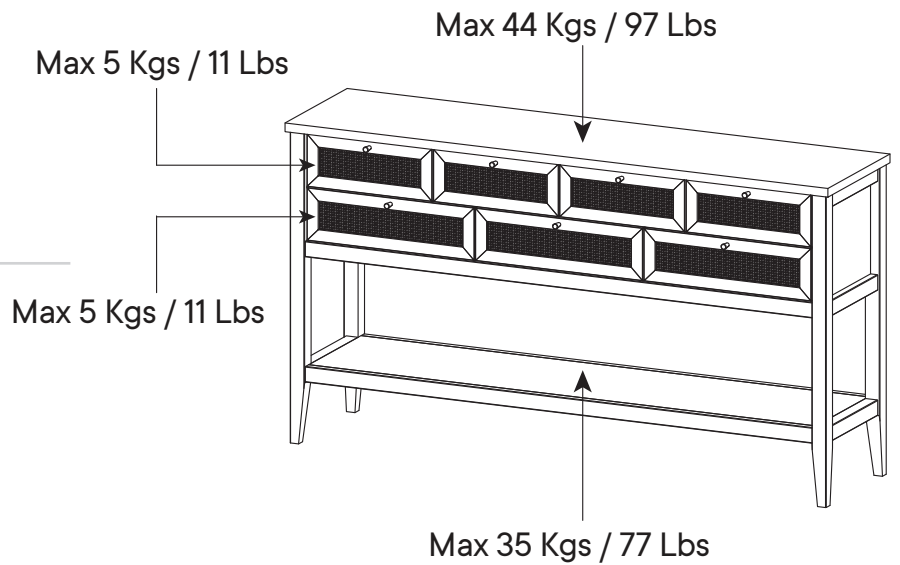

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com