


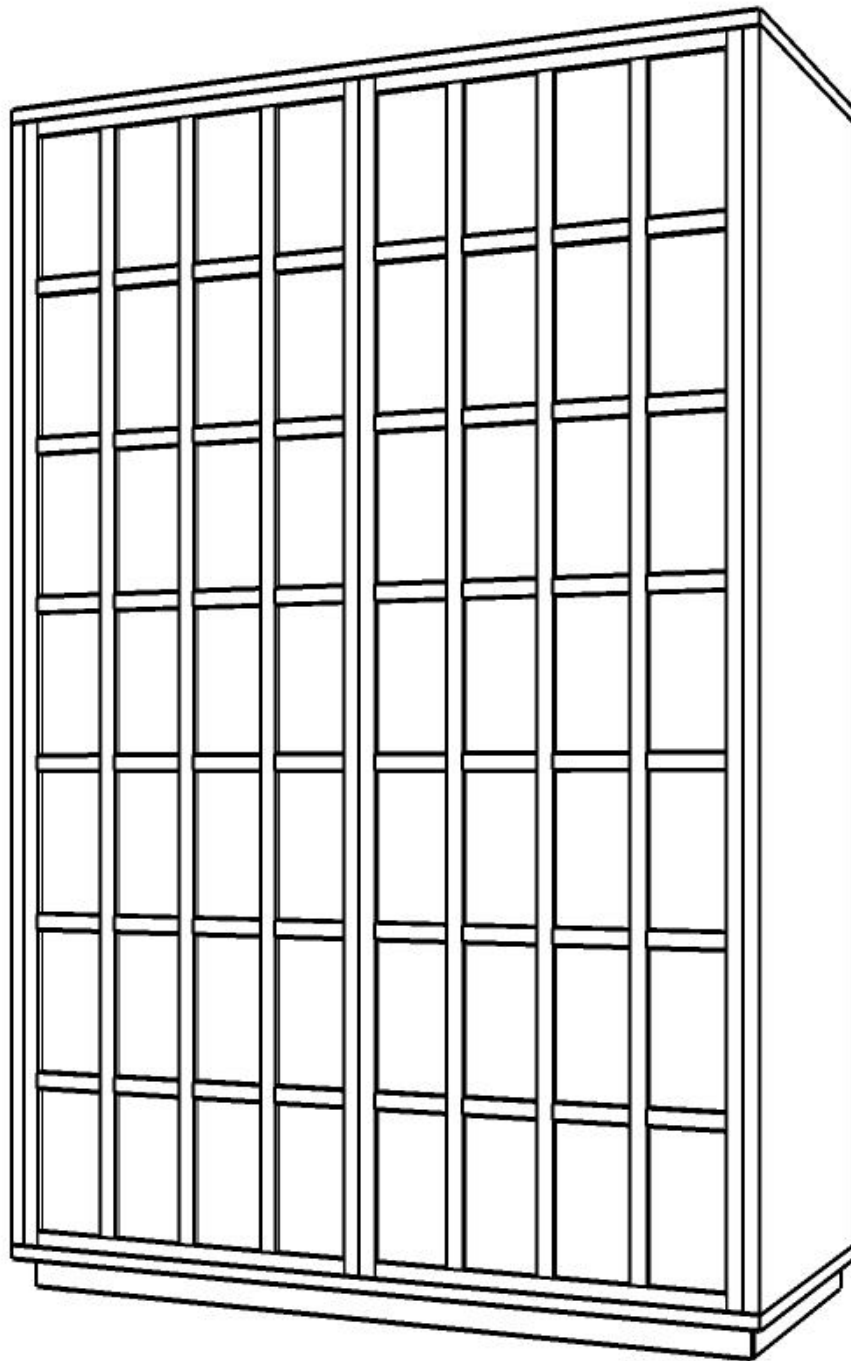

ASSEMBLY INSTRUCTIONS

Tall Cabinet

EEl-7560 / V0.09.01.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 40 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item.

Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.






Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A		Wood Dowel Ø8 x 25 mm	x16
B		Screw M 6 x 30 mm	x29
C		Screw M 3.5 x 15 mm	x44
D		Shelf Pin	x8
E		Hinge	x6
F		Disposable Spacer	x2
G		Allen Key	x1
AA1		Bracket	x2
AA1		Drawstring	x2
AA2		Wall Plug	x4
AA3		Screw M 3 x 30	x4
AA4		Screw M 3 X 15	x4


WHAT YOU NEED:



Philips Head Screwdriver

Philips

All parts are numbered with a sticker according to this list.

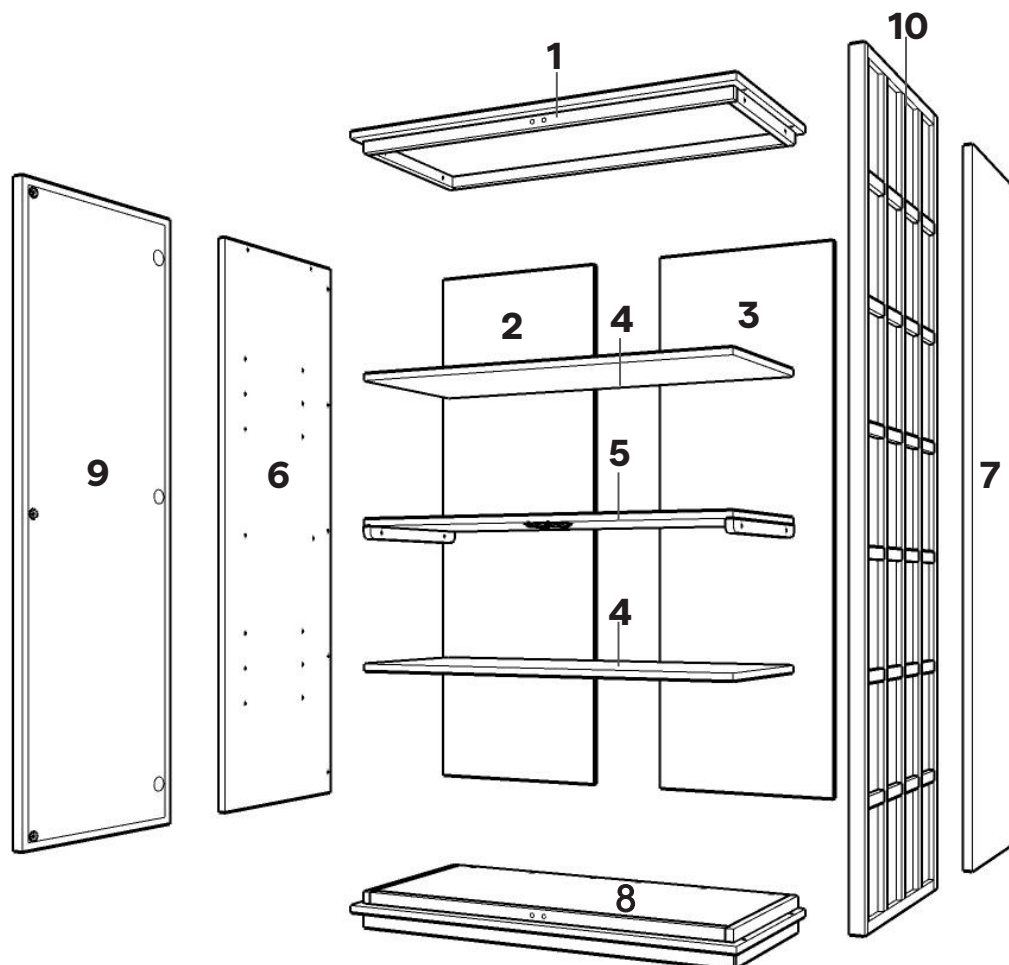

1	Top Board	x1
2	Back Board Left	x1
3	Back Board Right	x1
4	Adjustable Shelf	x2
5	Center Shelf	x1

6	Side Board Left	x1
7	Side Board Right	x1
8	Bottom Board	x1
9	Door 1	x1
10	Door 2	x1

STEP 01

HARDWARE

A Wood Dowel Ø8 x 25 mm x16

COMPONENTS

2 Back Board Left x1

3 Back Board Right x1

6 Side Board Left x1


7 Side Board Right x1

1.1 Insert wood Dowel Ø8 x 25 mm (A) into the Back Board Left (2)

1.2 Insert wood Dowel Ø8 x 25 mm (A) into the Back Board Right (3)

1.3 Insert wood Dowel Ø8 x 25 mm (A) into the Side Board Left (6)

1.4 Insert wood Dowel Ø8 x 25 mm (A) into the Side Board Right (7)

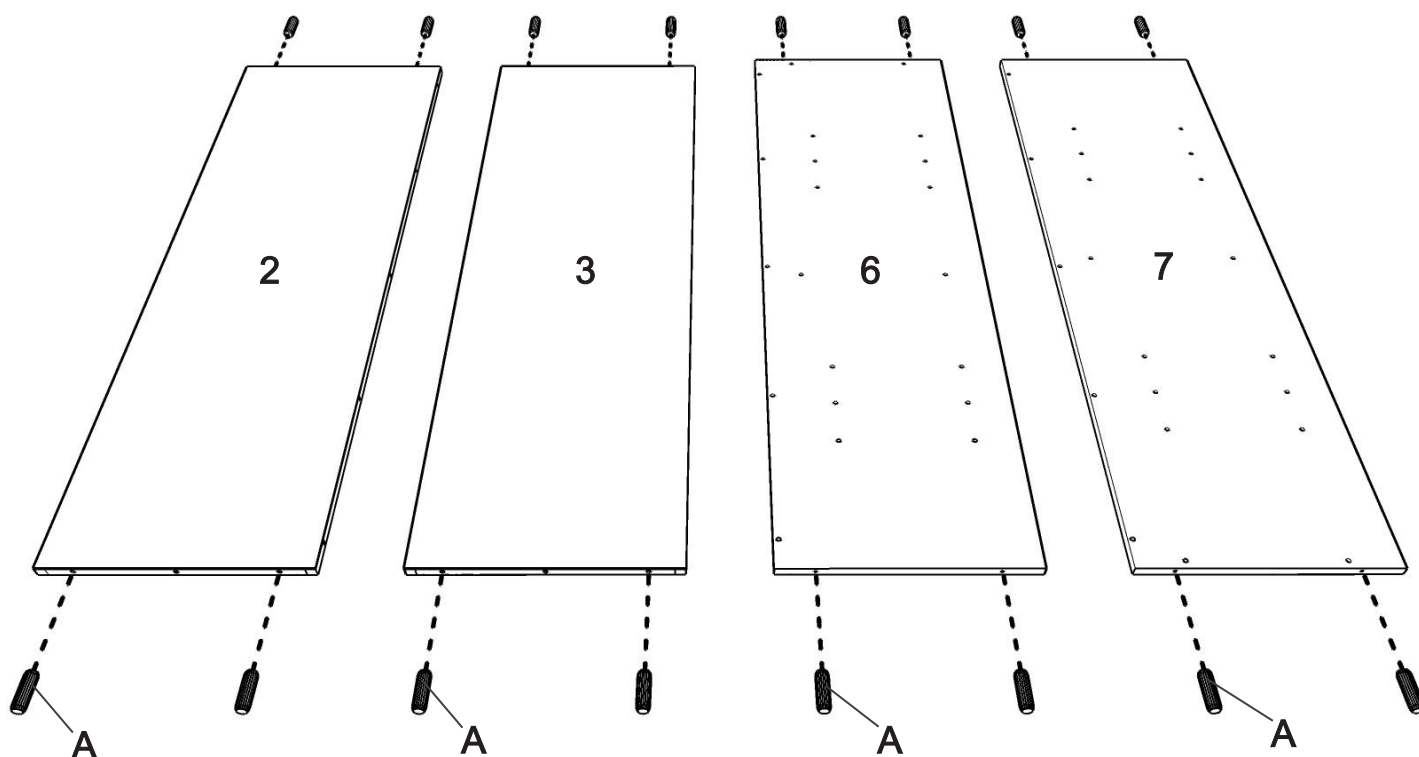


STEP 02

COMPONENTS

1	Top Board	x1
6	Side Board Left	x1
7	Side Board Right	x1

2.1 Insert Side Board Left (6) into the Top Board (1)

2.2 Insert Side Board Right (7) into the Top Board (1)

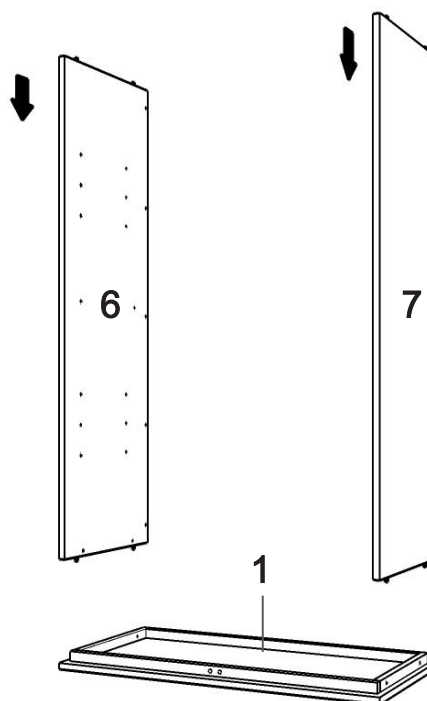

STEP 03



HARDWARE

B	Screw M 6 x 30 mm	x4
G	Allen Key	x1

COMPONENTS

1	Top Board	x1
6	Side Board Left	x1
7	Side Board Right	x1

3.1 Secure the boards with Screw M 6 x 30 mm (B), tighten Screws using Allen Key (G)

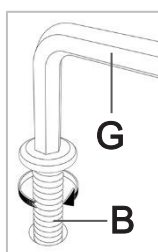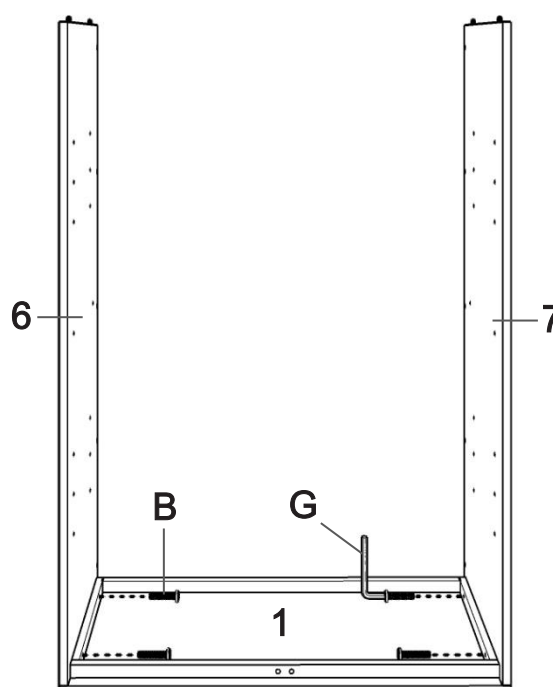

STEP 04

HARDWARE

B Screw M 6 x 30 mm x3


G Allen Key x1

COMPONENTS

2 Back Board Left x1

3 Back Board Right x1

4.1 Insert Back Board Left (2) and Back Board Right (3) and secure with Screw M 6 x 30 mm (B), tighten Screws using Allen Key (G)

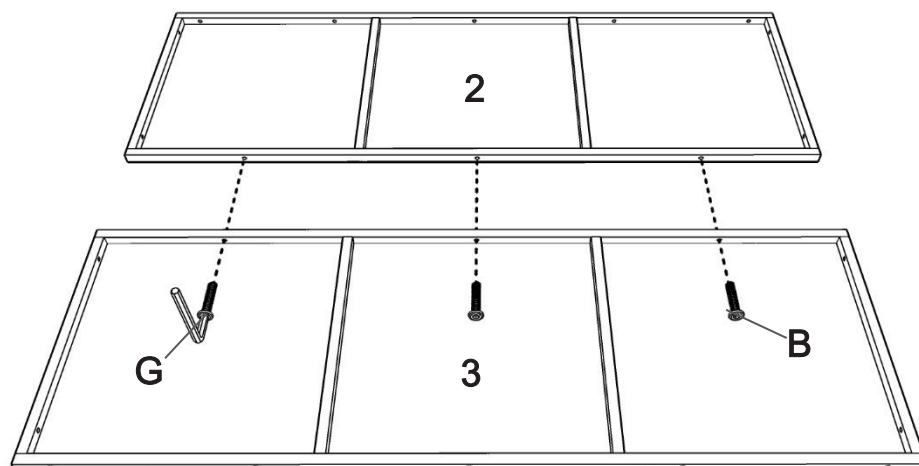

STEP 05


COMPONENTS

1 Top Board x1

2 Back Board Left x1

3 Back Board Right x1

5.1 Insert Back Board (2),(3) into the Top Board (1)

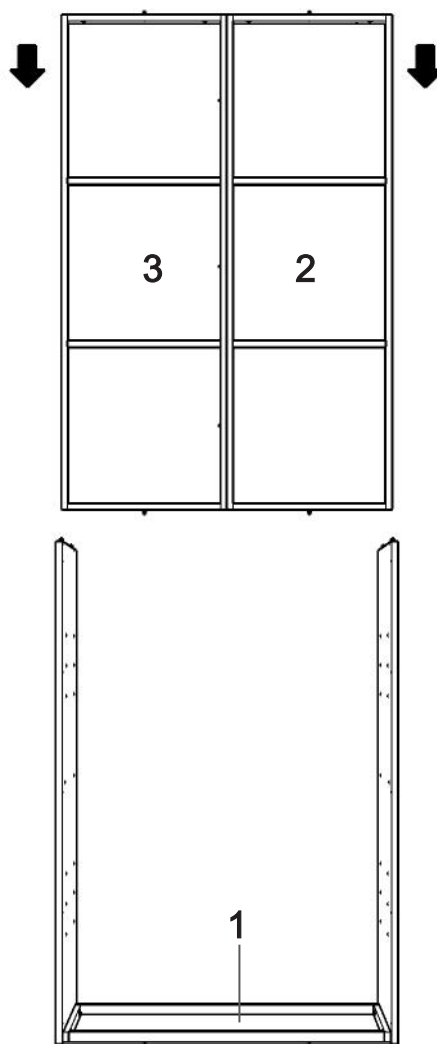

STEP 06


HARDWARE

B	Screw M 6 x 30 mm	x14
G	Allen Key	x1

COMPONENTS

2	Back Board Left	x1
3	Back Board Right	x1
8	Bottom Board	x1

6.1 Secure the boards with Screw M 6 x 30 mm (B), tighten Screws using Allen Key (G).

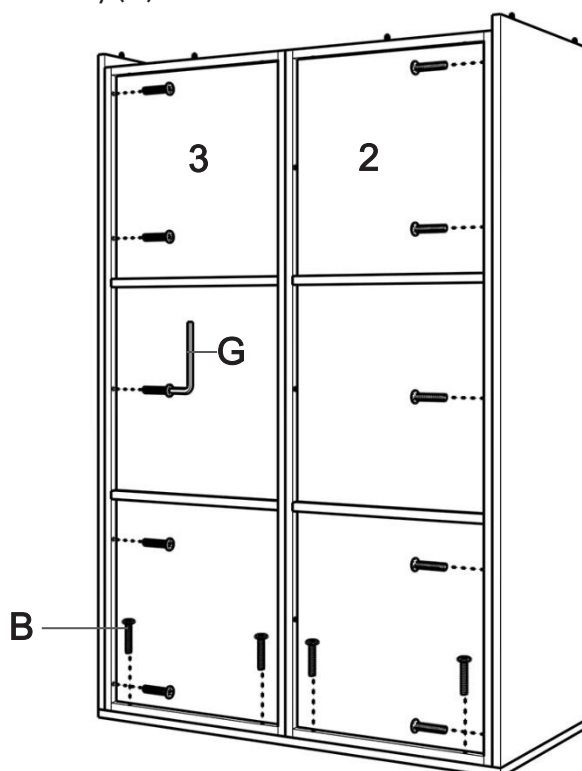

STEP 07


HARDWARE

B	Screw M 6 x 30 mm	x4
G	Allen Key	x1

COMPONENTS

2	Back Board Left	x1
3	Back Board Right	x1
8	Bottom Board	x1

7.1 Insert Bottom Board (8) and secure the boards with Screw M 6 x 30 mm (B), tighten Screws using Allen Key (G).

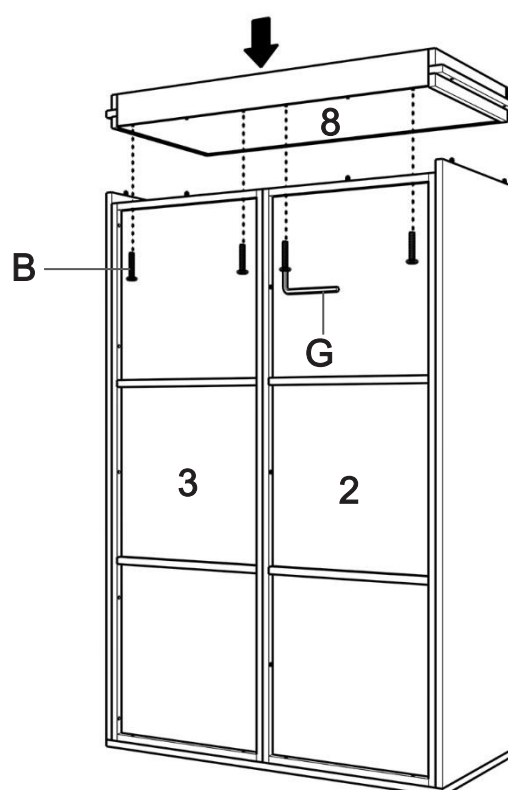


HARDWARE

- B** Screw M 6 x 30 mm x4
D Shelf Pin x8
G Allen Key x1


COMPONENTS

- 5** Center Shelf x1
6 Side Board Left x1
7 Side Board Right x1

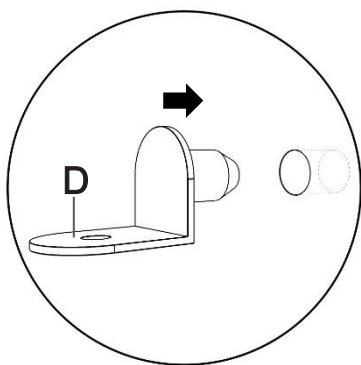

8.1 Insert Center Shelf (5) and secure the boards with Screw M 6 x 30 mm (B), tighten Screws using Allen Key (G).

8.2 After positioning the product upright, insert Shelf Pin (D) into the holes on the Side Board at the desired level.

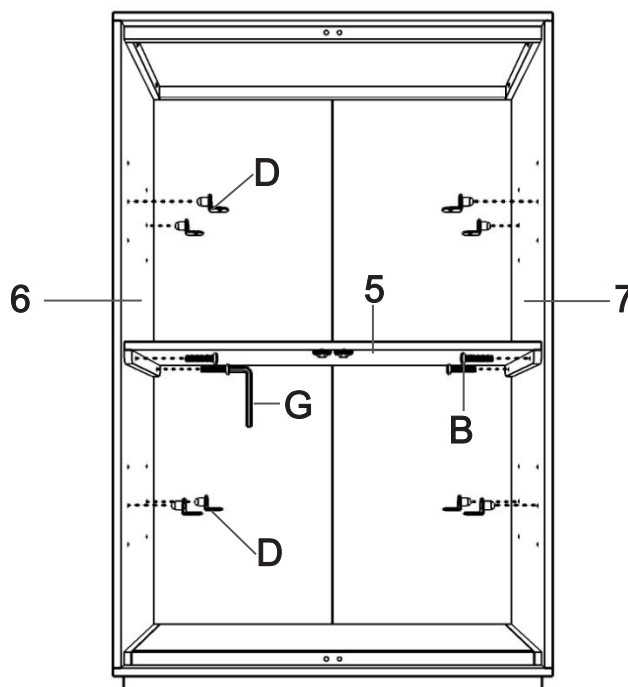

STEP 09


HARDWARE

- D** Shelf Pin x8

COMPONENTS



- 4** Adjustable Shelf x2

9.1. Place the Adjustable Shelf (4) by aligning its hole with the Shelf Pin (D) and inserting it securely.

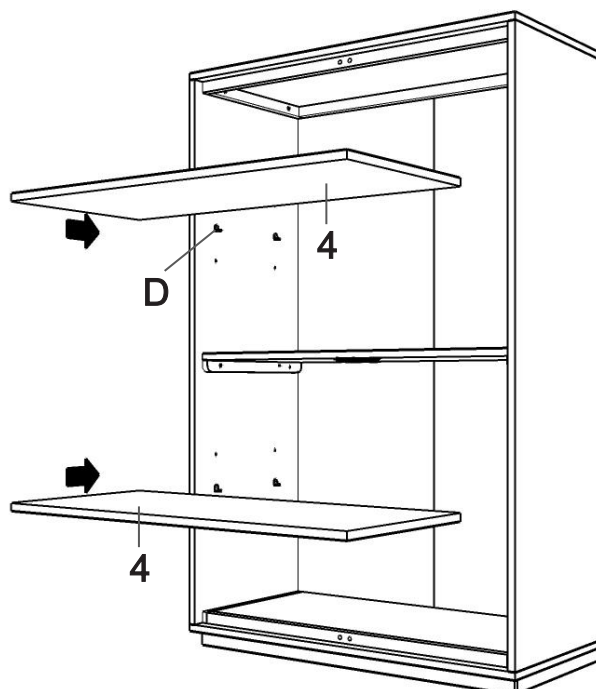

HARDWARE**C** Screw M 3.5 x 15mm x8**D** Shelf Pin x8**COMPONENTS****4** Adjustable Shelf x2



10.1 Optional Step: Secure the Adjustable Shelf (4) using a Screw M 3.5 x 15 mm (C), or simply place it on the Shelf Pins (D).

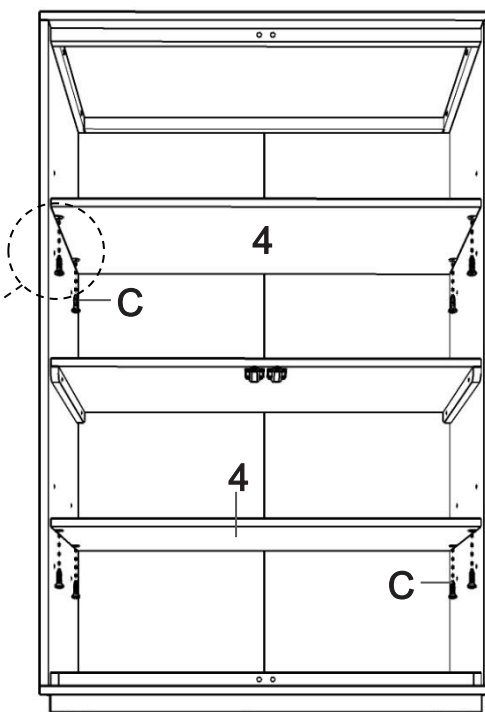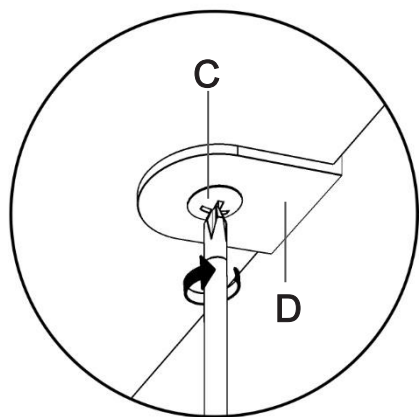

STEP 11


HARDWARE**C** Screw M 3.5 x 15mm x12**E** Hinge x6**COMPONENTS****9** Door 1 x1**10** Door 2 x1

11.1 Insert Hinge (E) into Door 1 (9) and Door 2 (10). Secure with Screw M 3.5 x 15 mm (D).

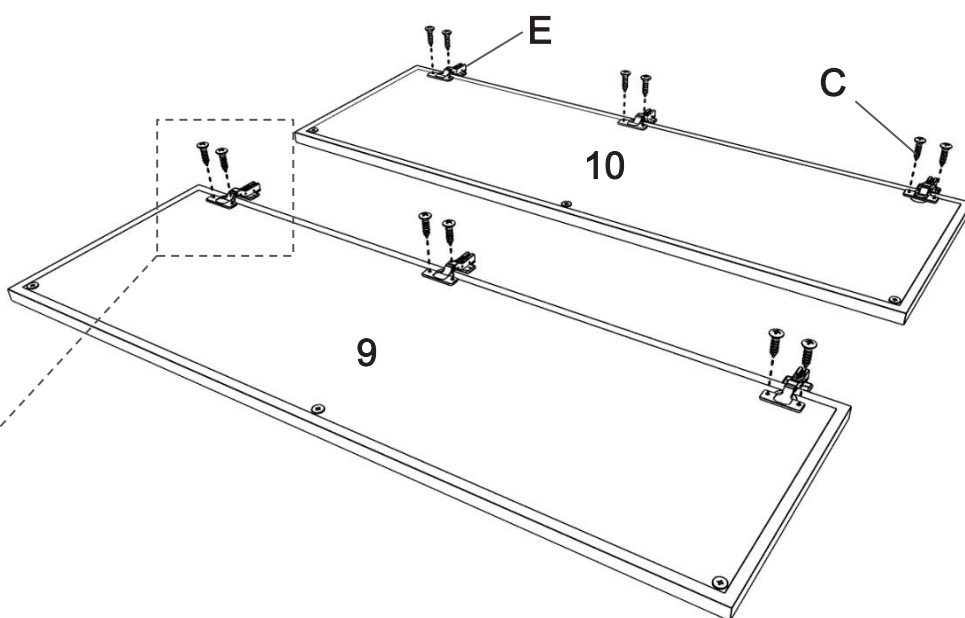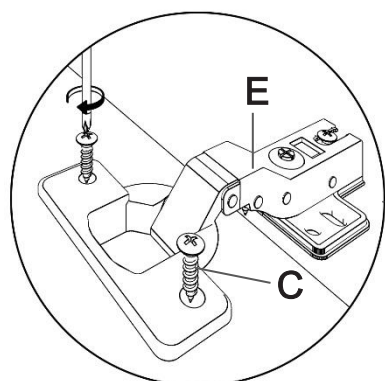

HARDWARE**C** Screw M 3.5 x 15 mm x24**E** Hinge x6**F** Disposable Spacer x2**COMPONENTS****9** Door 1 x1**10** Door 2 x1

12.1 Install Door 1 (9) and Door 2 (10) into Side Board. Use a Disposable Spacer (F) to create a gap. Please see the above images carefully. Secure with Screw 3.5 x 15 mm (C). Please refer to the last page for more guide on how to adjust hinges. Position as shown in the figure. Adjust the push tool as needed to ensure doors opening and closing smoothly.

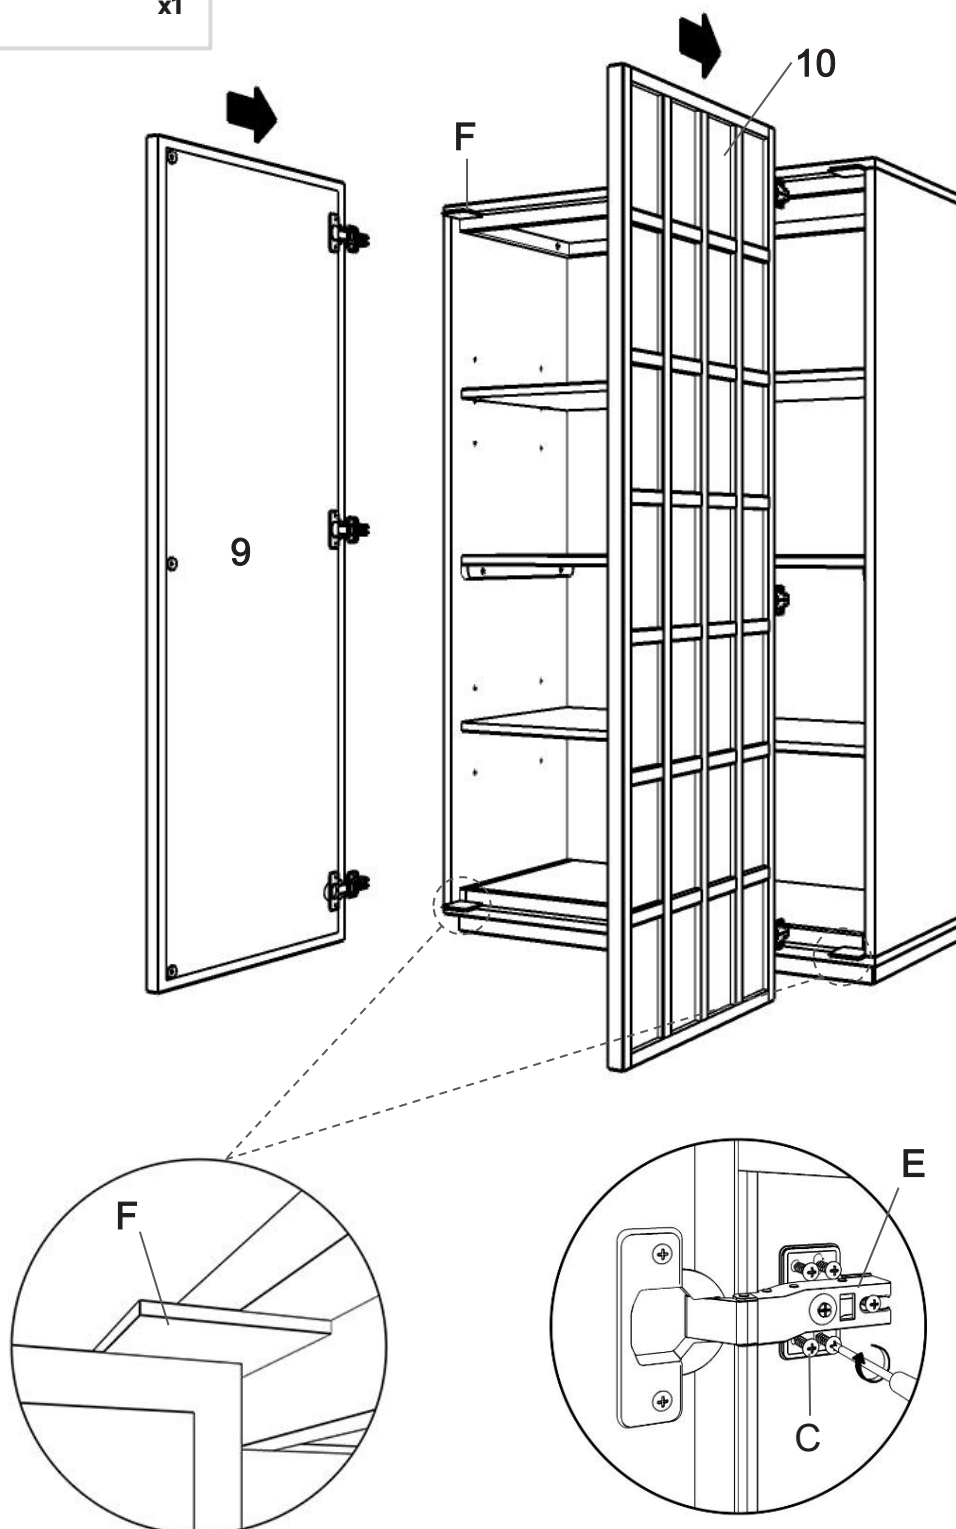


Great job!

Sideboard assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

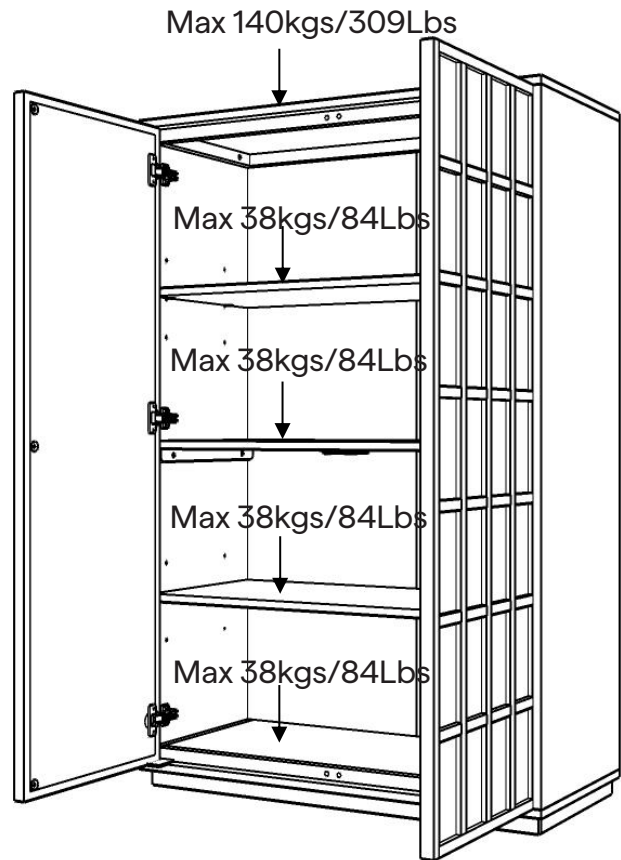

CONNECT WITH US!

Tag us **@modway_ furniture** and **#modway** for a chance to be featured.

modway






Questions? Contact us!

609.256.9000



cs@modway.com

Cabinet Door Alignment

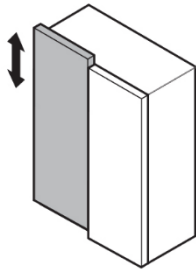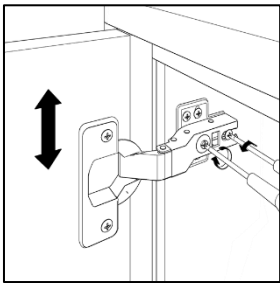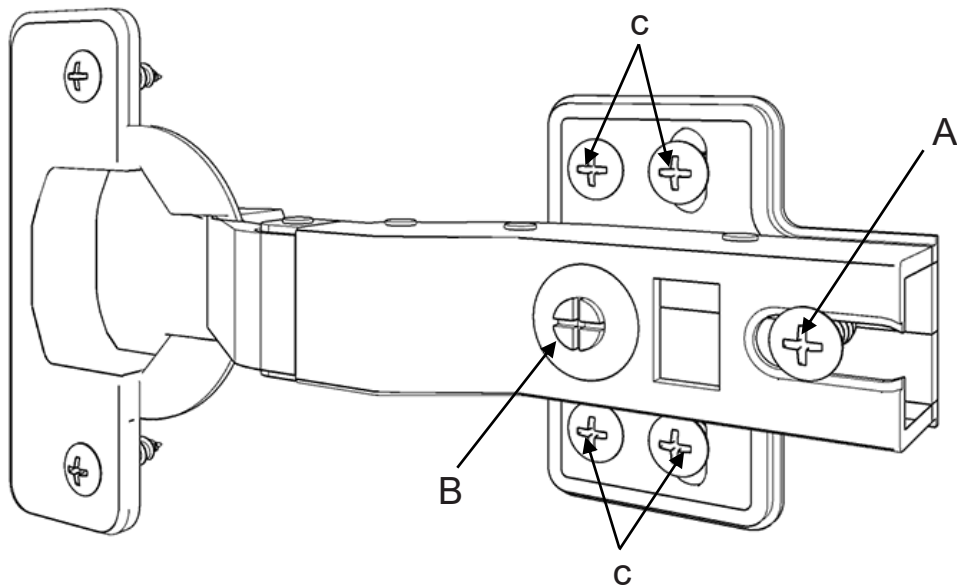



To adjust the vertical height.

Loosen the four screws "C" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

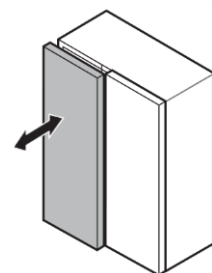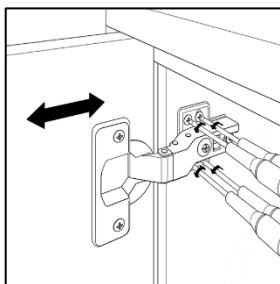

To adjust depth.

Loosen screw "C" and adjust door, if the door can not be adjusted, please loosen screw "B", then try again. Tighten screw "A" and "B".

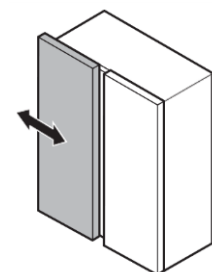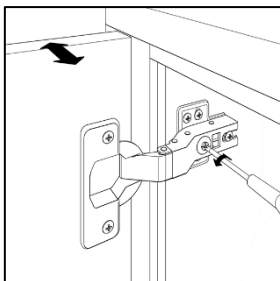

To adjust side ways.


Turn screw "B" on BOTH hinges on each door.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for you wall type.

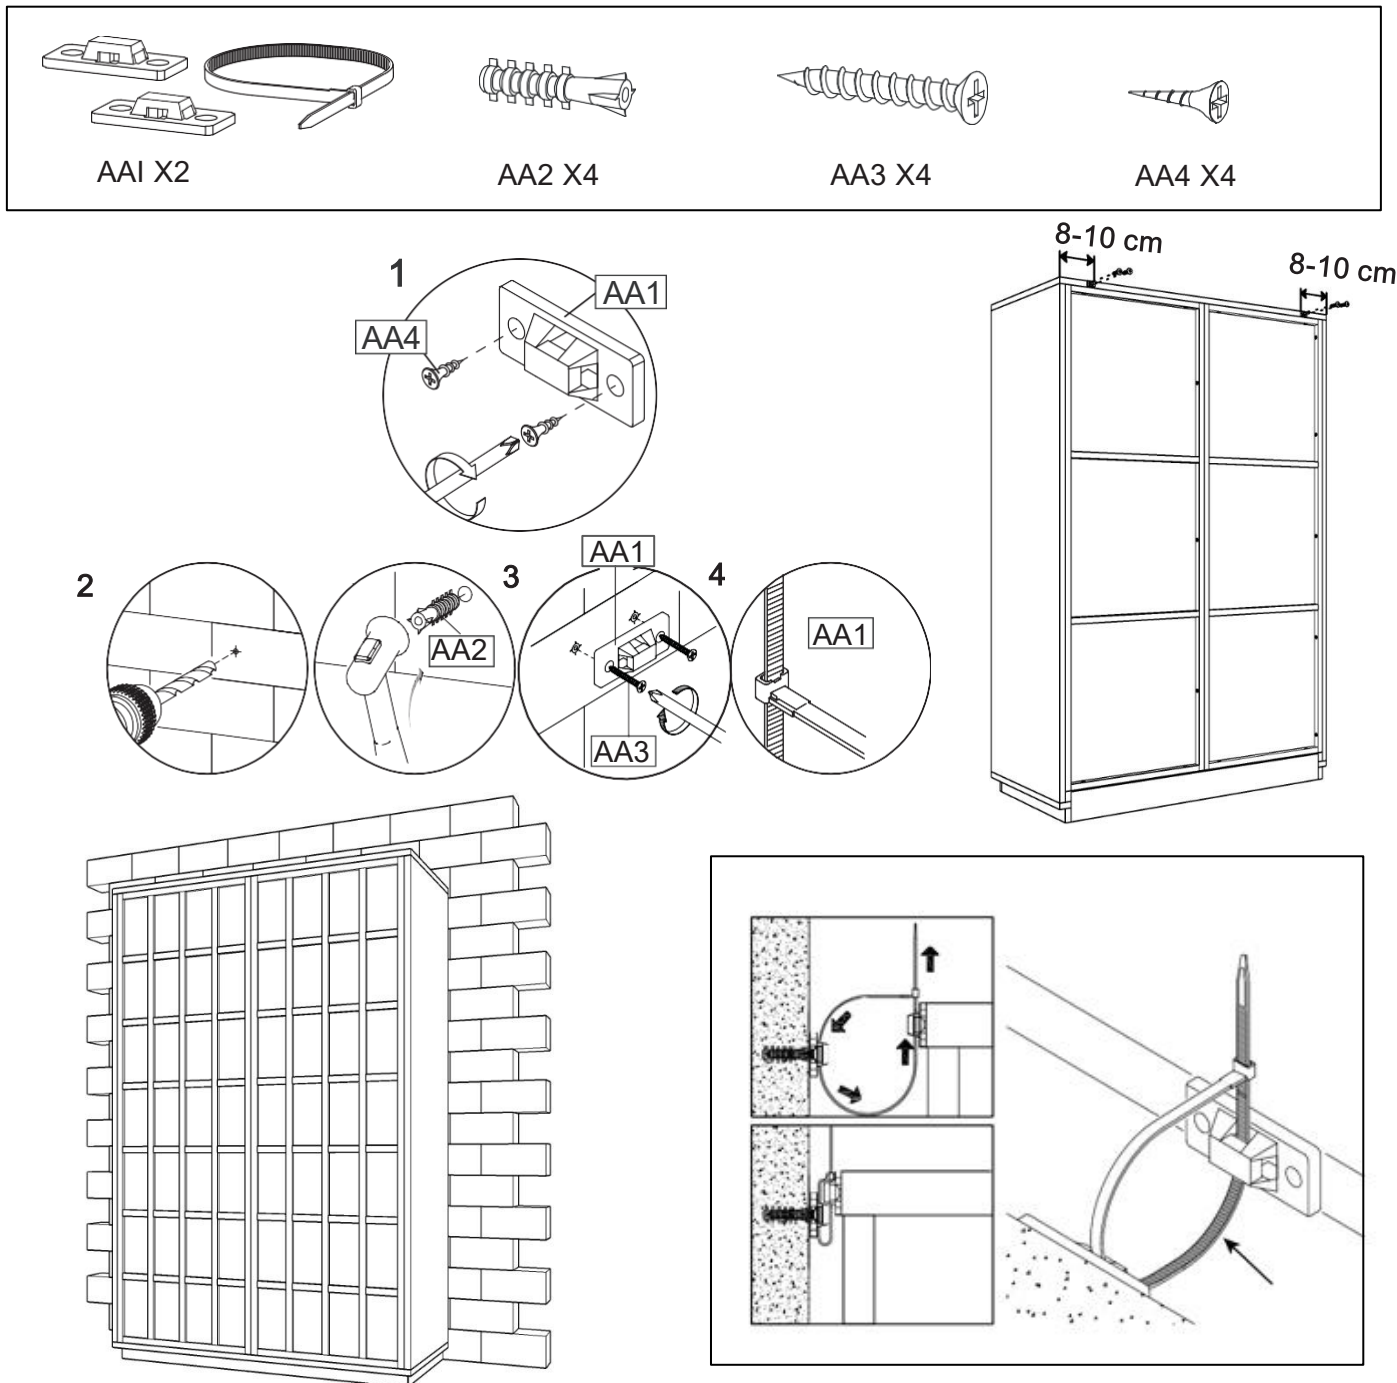

Installation Instructions :

1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 – 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.