


ASSEMBLY INSTRUCTIONS

MOD-7197

V0.05.05.24

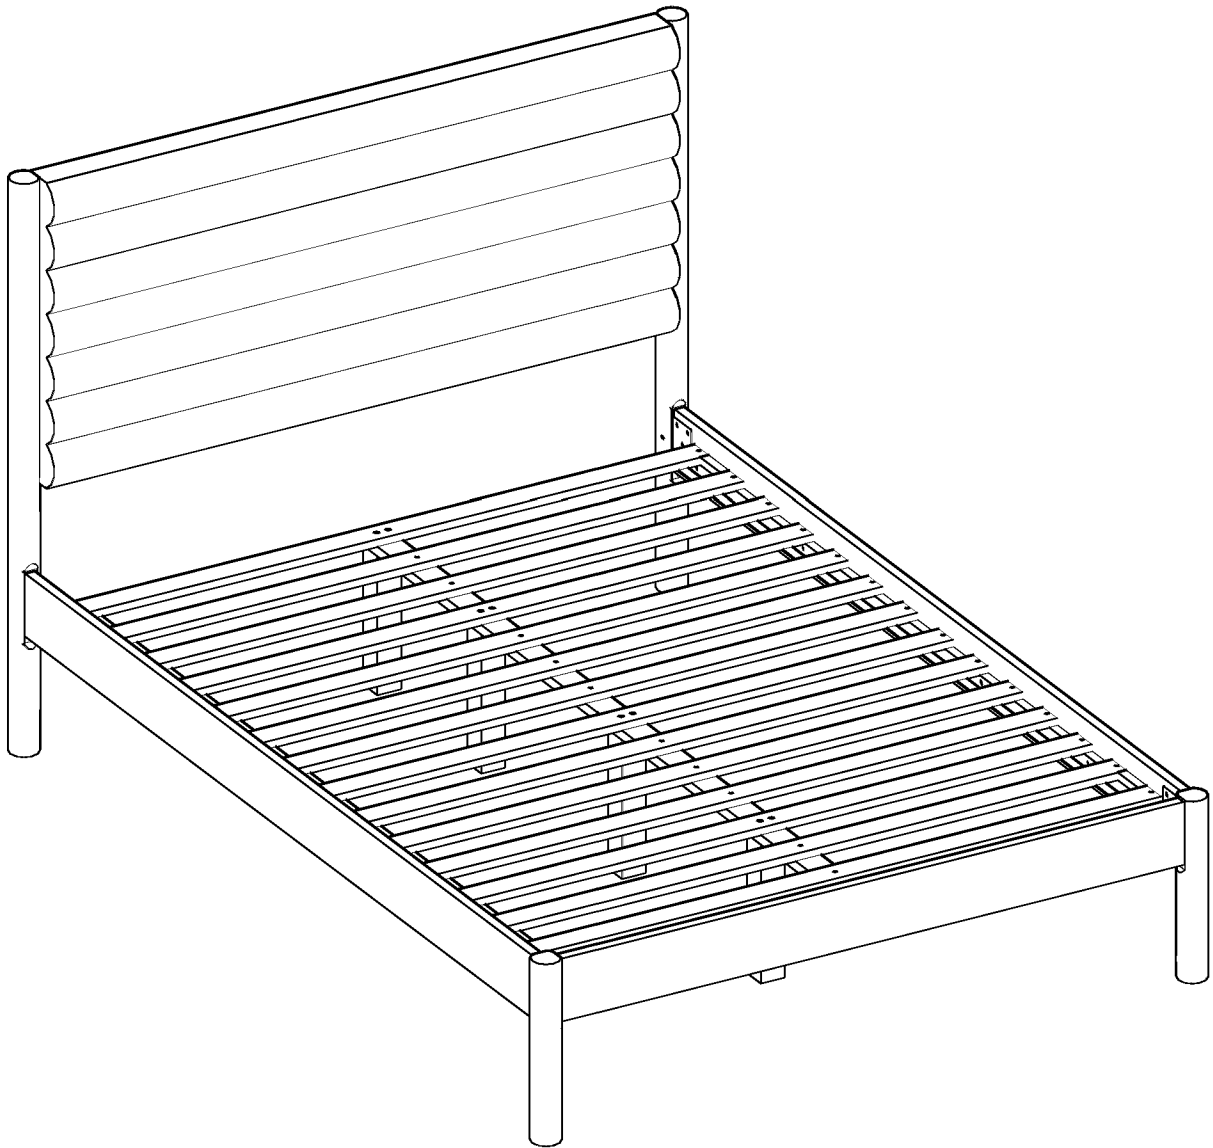

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools .
Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.


Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Headboard	x1
2	Headboard Leg (L+R)	x2
3	Footboard Leg (L+R)	x2
4	Footboard	x1
5	Side Rail	x2
6	Center Rail	x1
7	Center Support Leg	x4
8	Slat	x14

this bed can accommodate the mattress up to 10" thickness only

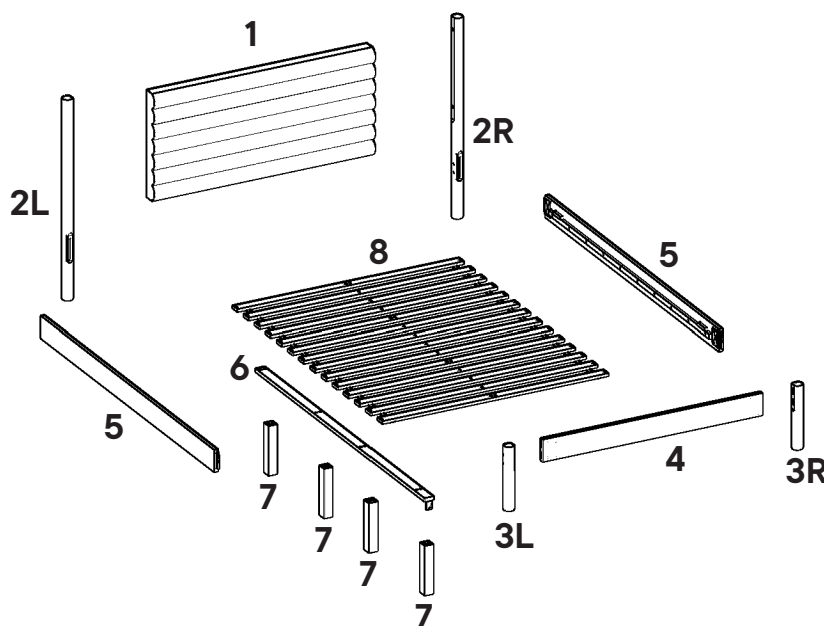

What you need:



Phillips



Phillips Head Screwdriver

Box 1: Headboard/Footboard/leg/Side Rail/Center Rail/Slat and etc...

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A		Allen Key M4 (Long Ball Head)	x1
B		Allen Key M5	x1
C		JCBB Bolt M8 x 35mm	x4
D		JCBC Bolt M6 x 50mm	x8
E		JCBC Bolt M6 x 40mm	x4
F		Wood Screw M3.5 x 16mm	x1
G		Wood Screw M4 x 25mm	x38
H		Wood Dowel M8 x 30mm	x4
I		Spring Washer M6	x4
J		Spring Washer M8	x4
K		Flat Washer M8	x4

What you need:

  Phillips Head Screwdriver
Phillips

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Step 1

HARDWARE


C	JCBB M8 x 35mm	x4
J	Spring Washer M8	x4
K	Flat Washer M8	x4

COMPONENTS

1	Headboard	x1
2	Headboard Leg (L+R)	x2

TOOLS

B	Allen Key M5	x1
----------	--------------	----

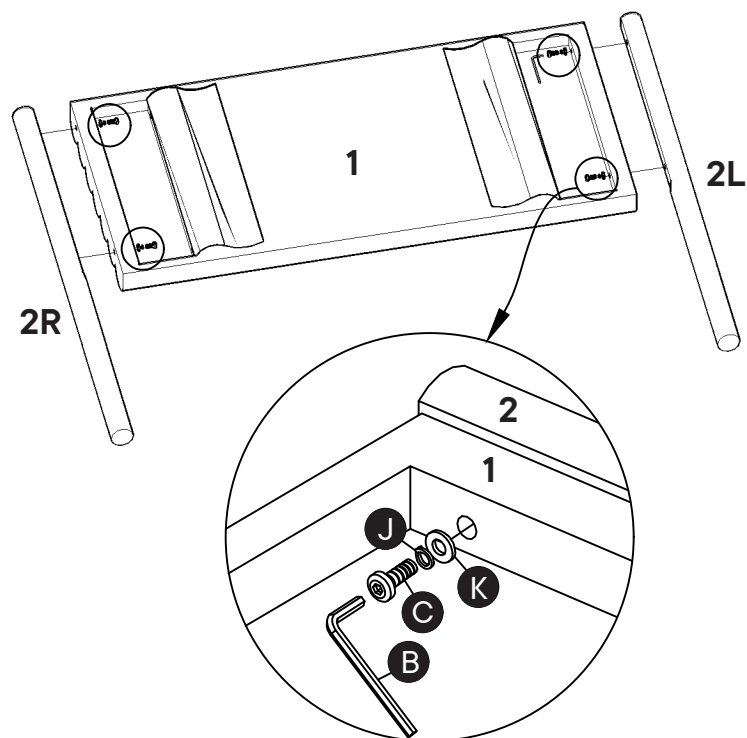

Step 2

HARDWARE


E	JCBC M6 x 40mm	x4
I	Spring Washer M6	x4
H	Wood Dowel M8 x 30mm	x4

COMPONENTS

3	Footboard Leg (L+R)	x2
4	Footboard	x1

TOOLS

A	Allen Key M4 (Long Ball Head)	x1
----------	-------------------------------	----

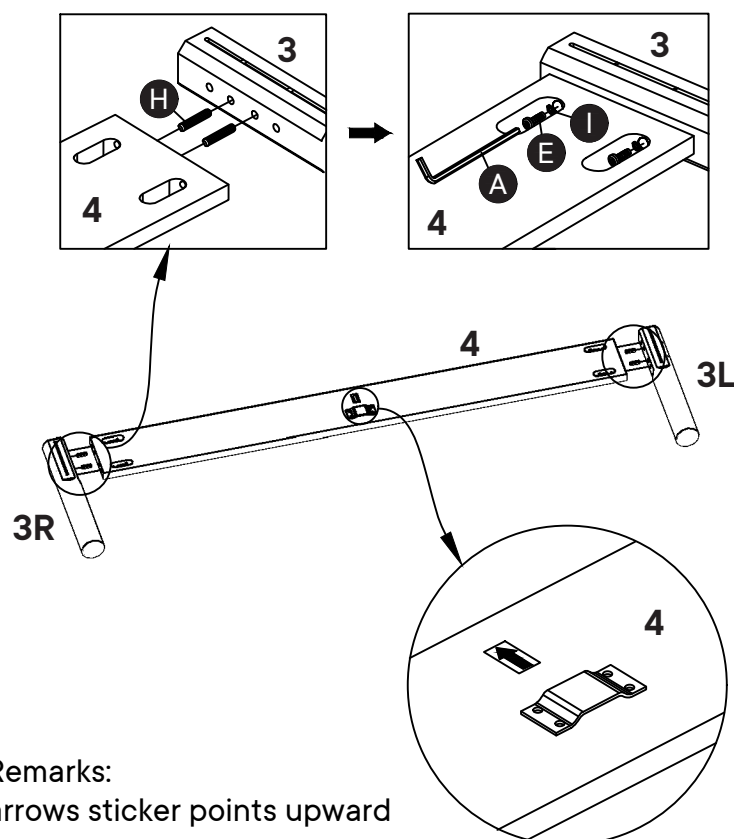


Remarks:
arrows sticker points upward

Step 3

COMPONENTS

2	Headboard Leg(L+R)	x2
3	Footboard Leg (L+R)	x2
5	Side Rail	x2

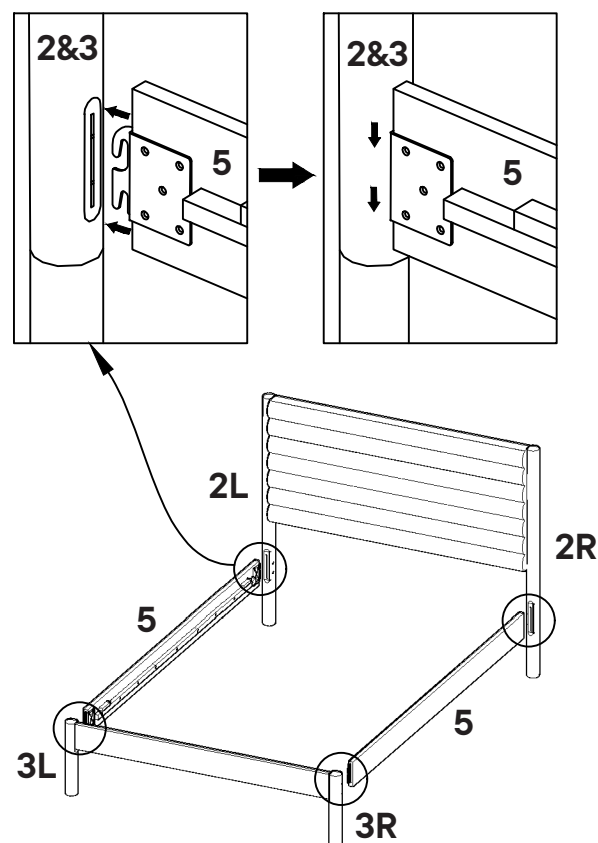

Step 4

HARDWARE


D	JCBC M6 x 50mm	x8
---	----------------	----

COMPONENTS

6	Center Rail	x1
7	Center Support Leg	x4
8	Slat	x14

TOOLS

A	Allen Key M4 (Long Ball Head)	x1
---	-------------------------------	----

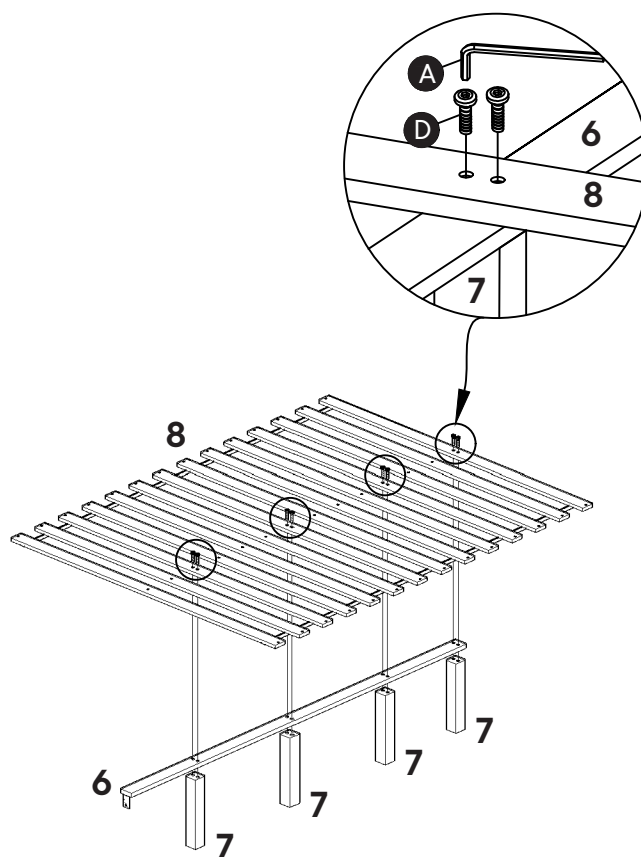


Step 5

HARDWARE

- F** Wood Screw M3.5 x 16mm x1
- G** Wood Screw M4 x 25mm x38

COMPONENTS

- 6** Center Rail x1
- 8** Slat x14

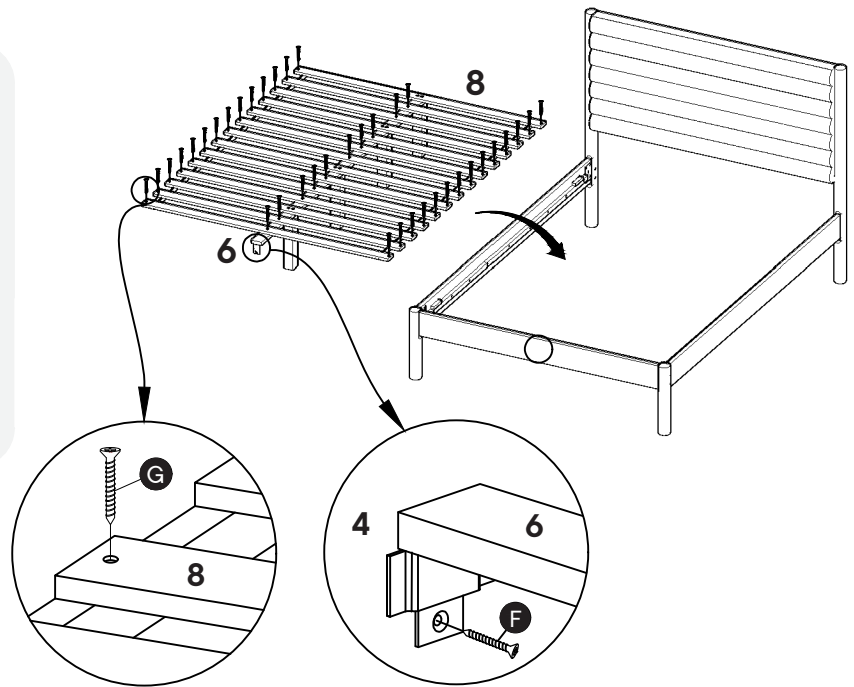

Great job!

Your new bed is complete.


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

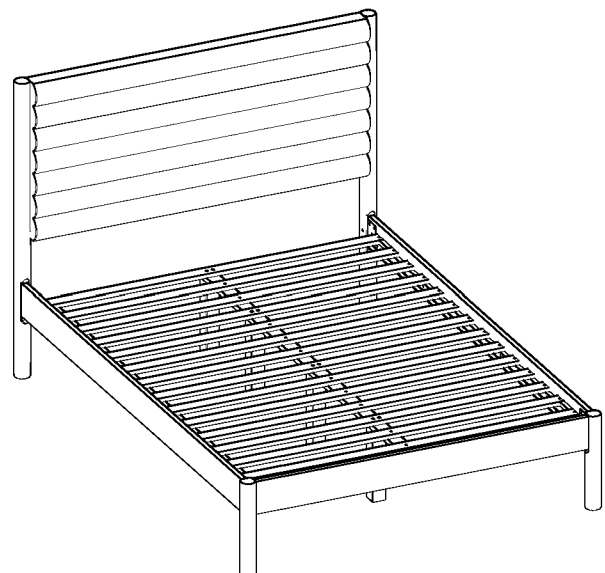

CONNECT WITH US!   

Tag us @modway_furniture and #modway for a chance to be featured.