


ASSEMBLY INSTRUCTIONS

MOD-7206

V0.16.04.24

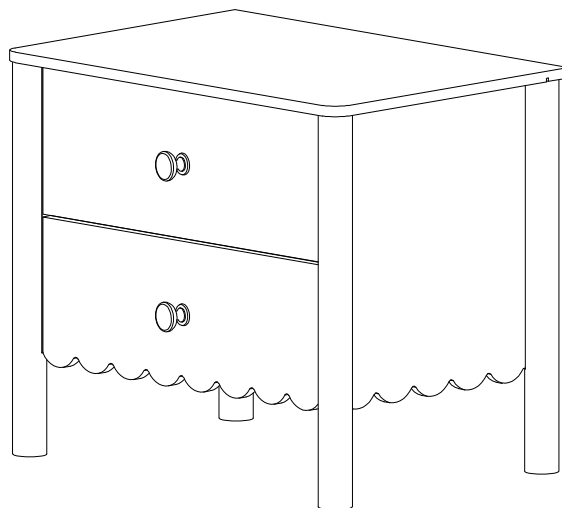

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Side Panel Left	x1
2	Side Panel Right	x1
3	Top Panel	x1
4	Front Support Panel	x1
5	Back Support Panel	x1
6	Support Panel	x1
7	Drawer Front Top	x1
8	Drawer Front Bottom	x1
9	Drawer Side Left	x2
10	Drawer Side Right	x2
11	Drawer Back	x2
12	Drawer Support	x2
13	Drawer Bottom	x2
14	Back Panel	x1

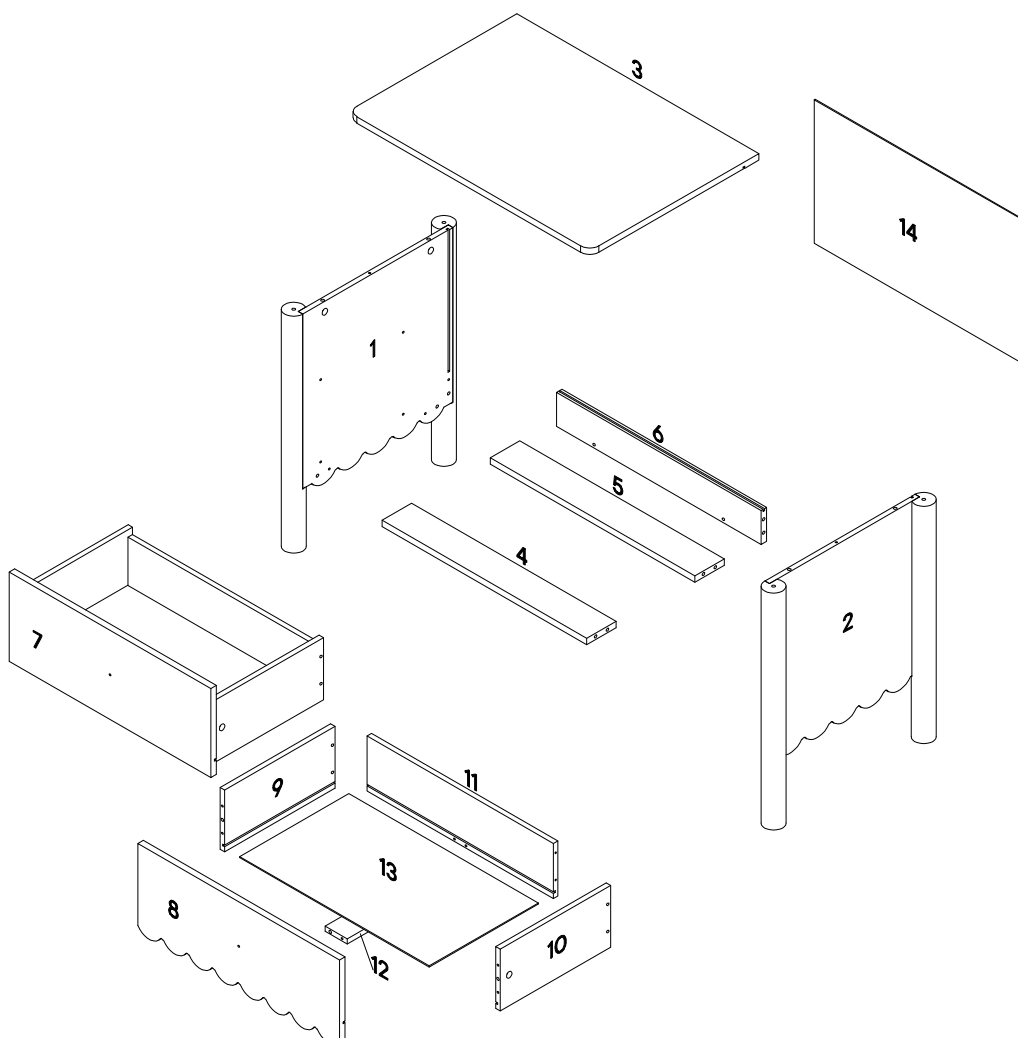



Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A.		Screw M3.5 x 12 mm	x8
B.		Screw M3.5 x 15 mm	x4
C.		Screw M6 x 9 mm	x8
D.		Screw M6 x 40 mm	x10
E.		Wood Dowel Ø6 x 20 mm	x14
F.		Wood Dowel Ø8 x 25 mm	x10
G.		Cam Bolt 20 x 5 mm	x18
H.		Cam Lock 15/15	x6
J.		Cam Lock 15/12	x12
K.		Handle	x2
L1.		Drawer Slide CR (300mm)	x2
L2.		Drawer Slide CL (300mm)	x2
M1.		Drawer Slide DR (300mm)	x2
M2.		Drawer Slide DL (300mm)	x2
N.		Plastic Leg Stud	x4
P.		Allen Key	x1
Q.		Wedge	x4

What you need:



You may also need:

+ Power Drill
+ Level

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com







Step 1

HARDWARE

E	Wood Dowel Ø6 x 20 mm	x2
F	Wood Dowel Ø8 x 25 mm	x10
G	Cam Bolt 20 x 5	x6

COMPONENTS

1	Side Panel Left	x1
2	Side Panel Right	x1
4	Front Support Panel	x1
5	Back Support Panel	x1
6	Support Panel	x1

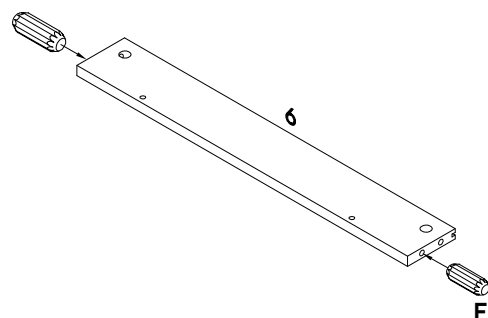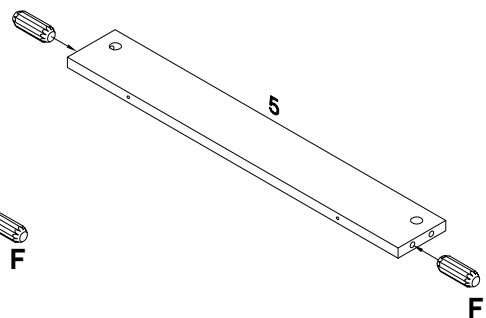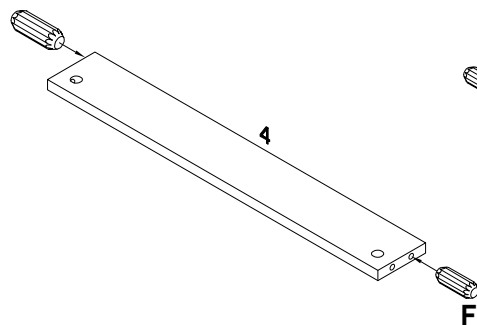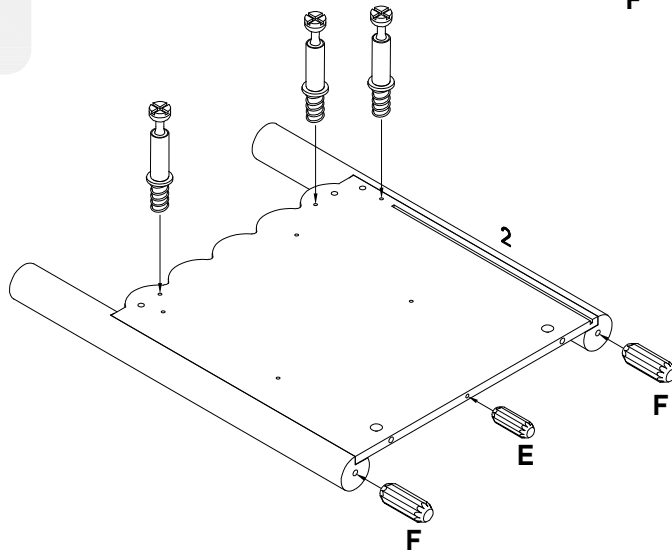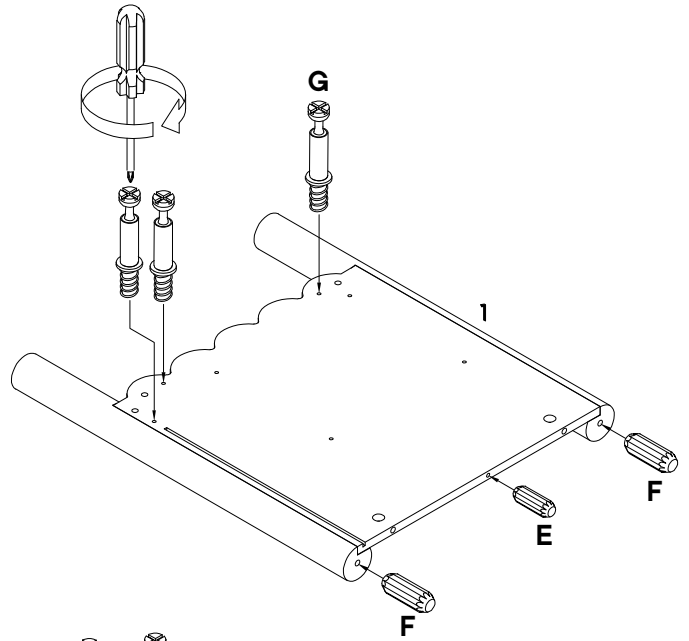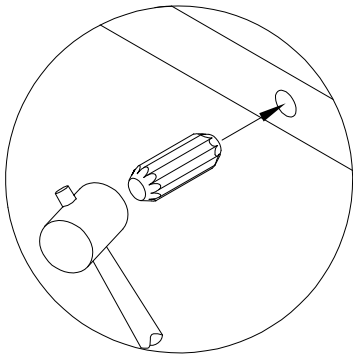






Step 2

HARDWARE

C Screw 6 x 9	x8
L1 Drawer Slide CR (300mm)	x2
L2 Drawer Slide CL (300mm)	x2

COMPONENTS

1 Side Panel Left	x1
2 Side Panel Right	x1

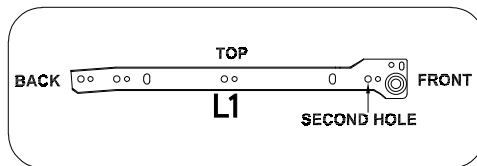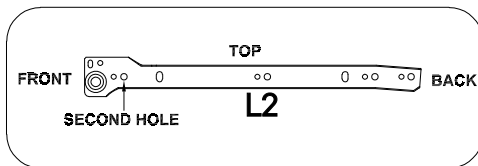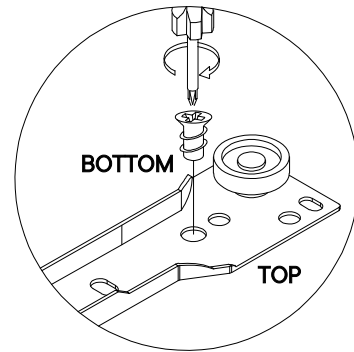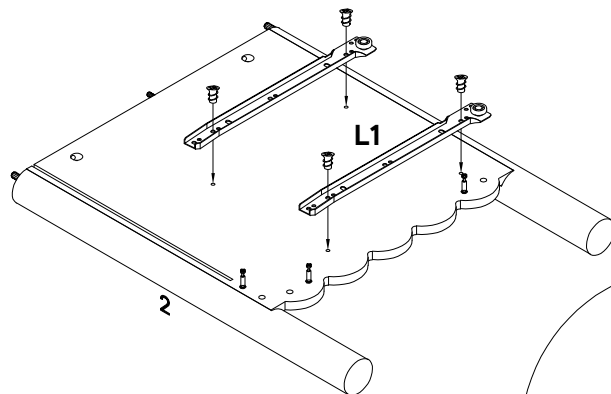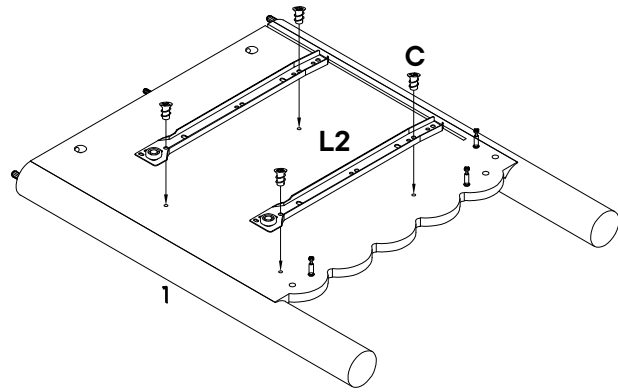


Step 3

HARDWARE

D Screw 6 x 40 mm	x2
P Allen Key	x1

COMPONENTS

5 Side Panel Right	x1
6 Side Panel Right	x1

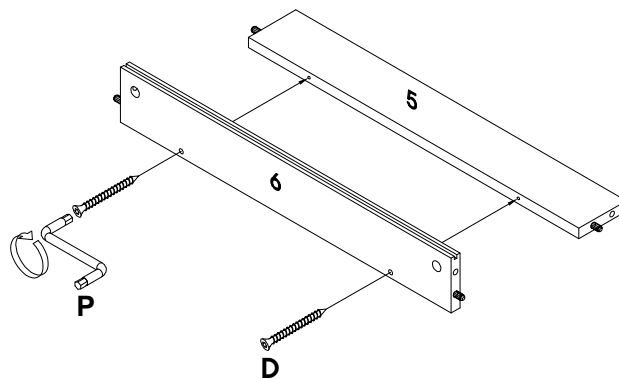

Step 4

HARDWARE

H Cam Lock 15/15 x3


COMPONENTS

1 Side Panel Left x1

4 Front Support Panel x1

5 Back Support Panel x1

6 Support Panel x1

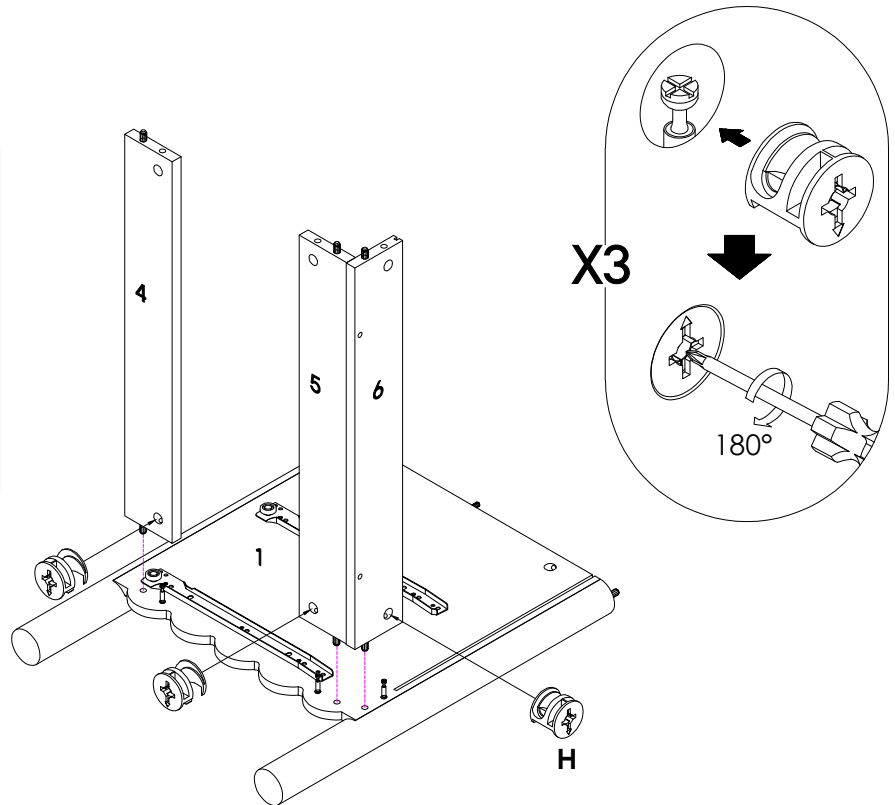

Step 5

HARDWARE

H Cam Lock 15/15 x3

N Plastic Leg Stud x4

COMPONENTS


1 Side Panel Left x1

2 Side Panel Right x1

4 Front Support Panel x1

5 Back Support Panel x1


6 Support Panel x1

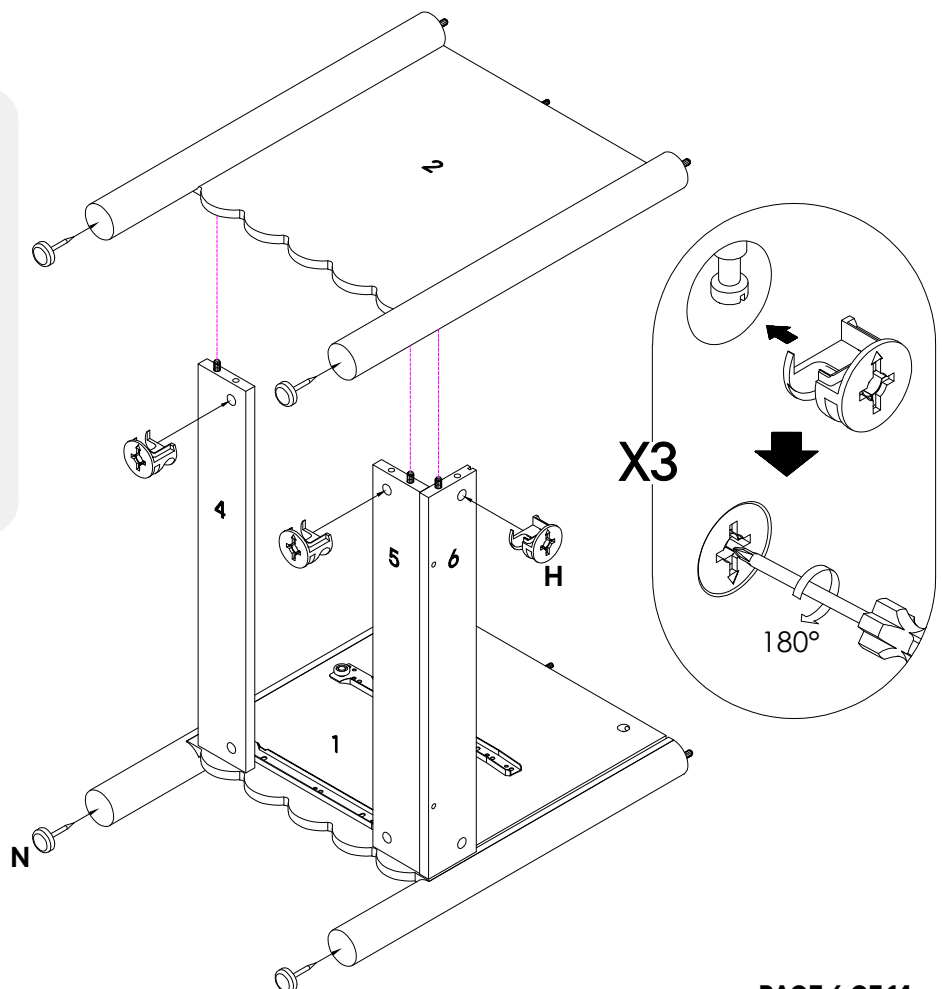

Step 6

COMPONENTS

14 Back Panel x1

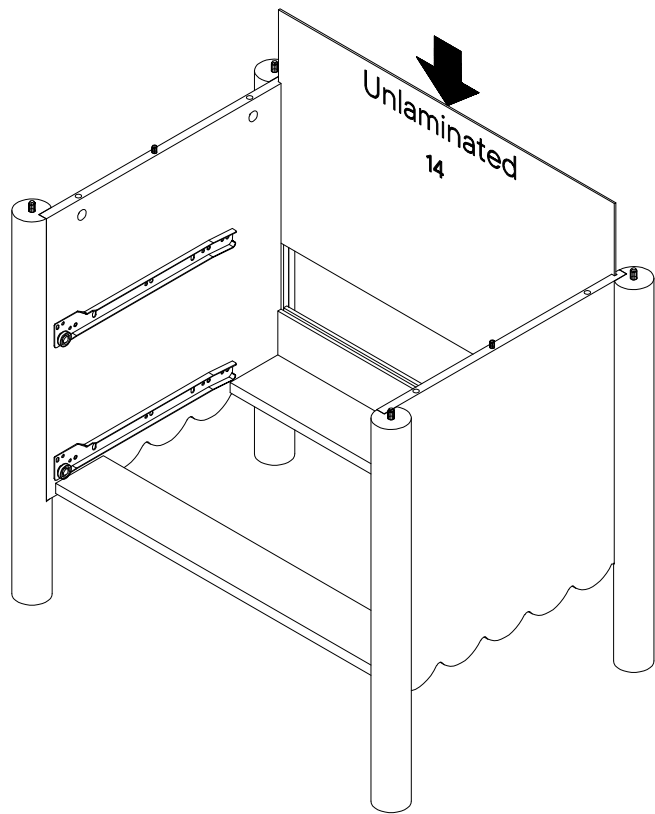


Step 7

HARDWARE

G Cam Bolt 20 x 5 mm x4

COMPONENTS

3 Top Panel x1

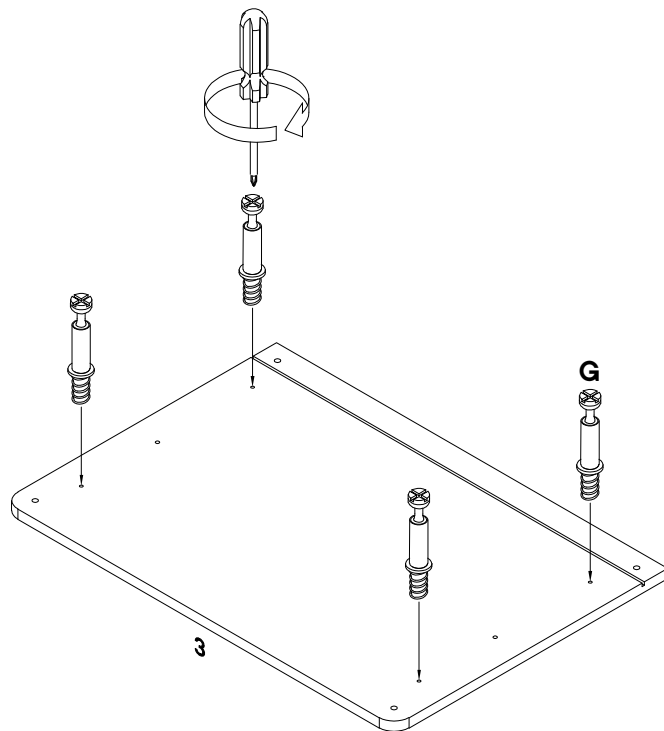

Step 8

HARDWARE



J Cam Lock 15/12 x4

COMPONENTS

1 Side Panel Left x1

2 Side Panel Right x1

3 Top Panel x1

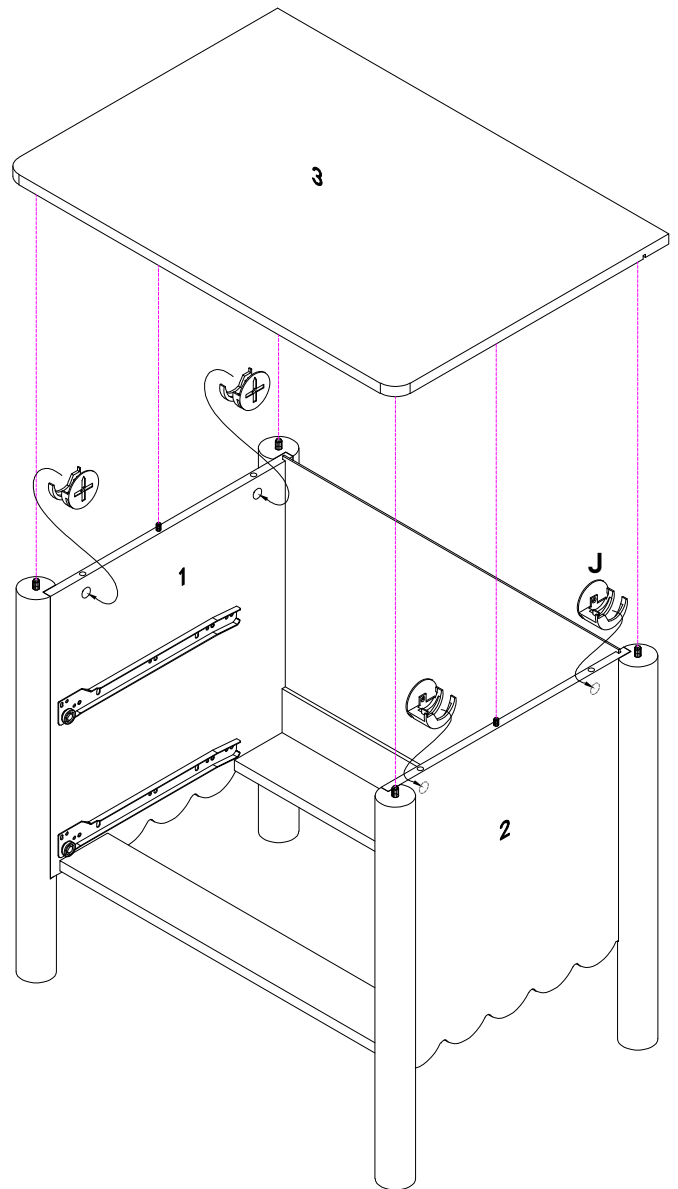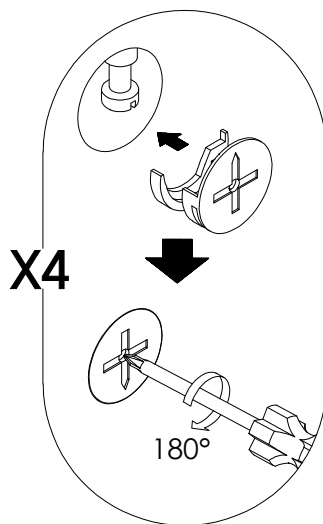


Step 9

HARDWARE

E Wood Dowel Ø6 x 20 mm	x12
G Cam Bolt 20 x 5 mm	x8

COMPONENTS

7 Drawer Front Top	x1
8 Drawer Front Bottom	x1
9 Drawer Side Left	x2
10 Drawer Side Right	x2
11 Drawer Back	x2
12 Drawer Support	x2

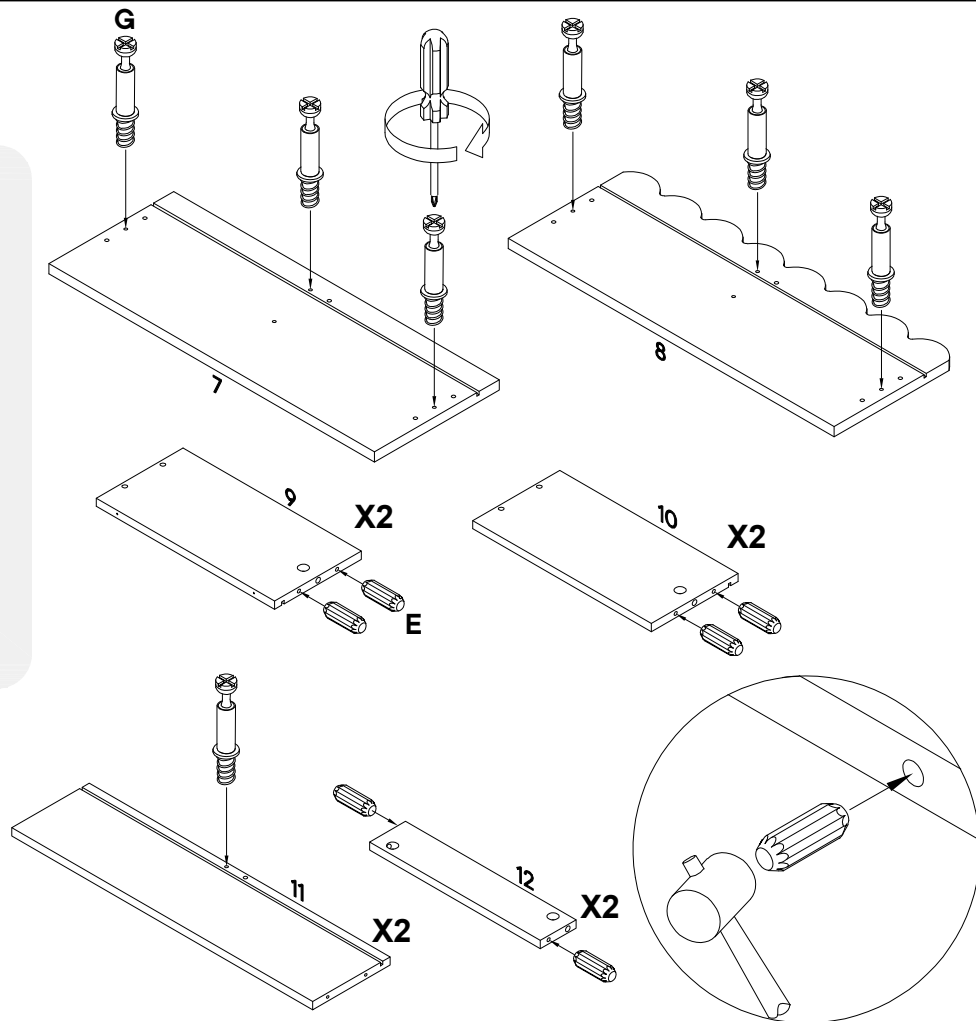


Step 10

HARDWARE

J Cam Lock 15/12	x3
-------------------------	----

COMPONENTS

7 Drawer Front Top	x1
9 Drawer Side Left	x1
10 Drawer Side Right	x1
12 Drawer Support	x1
13 Drawer Bottom	x1

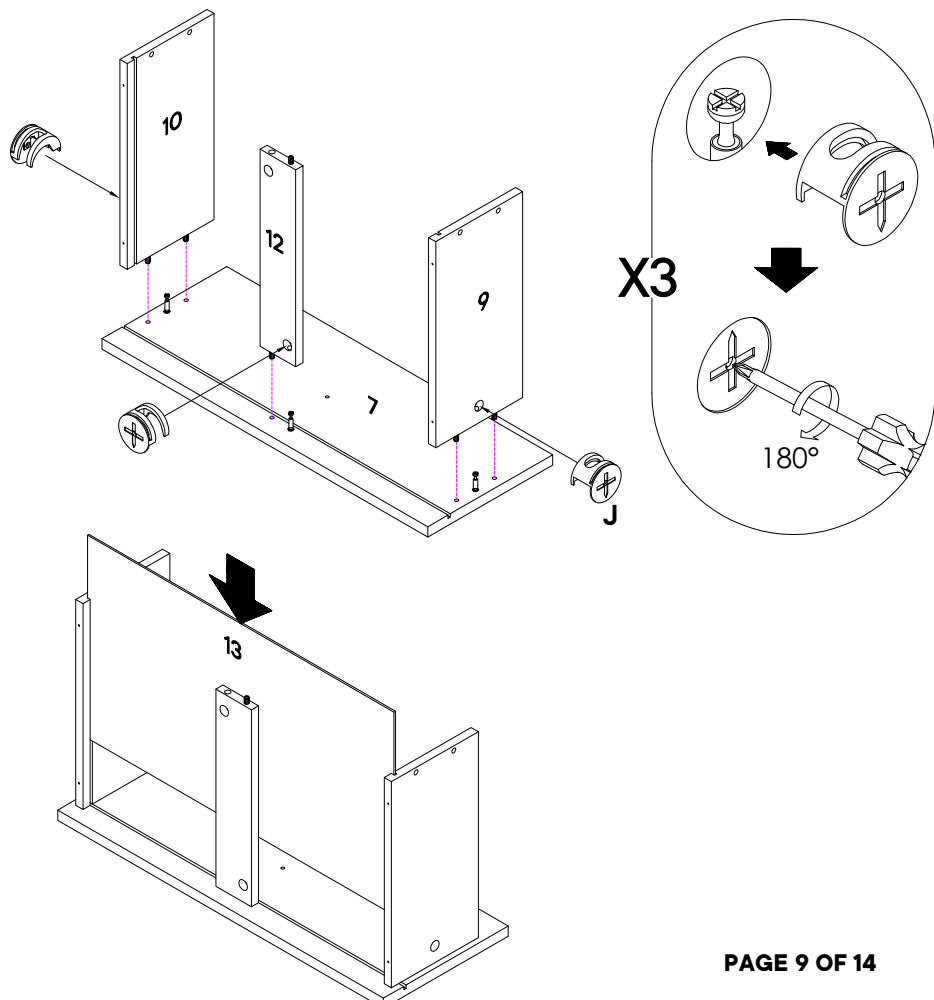


Step 11

HARDWARE

- J** Cam Lock 15/12 x3

COMPONENTS

- 8** Drawer Front Bottom x1
9 Drawer Side Left x1
10 Drawer Side Right x1
12 Drawer Support x1
13 Drawer Bottom x1

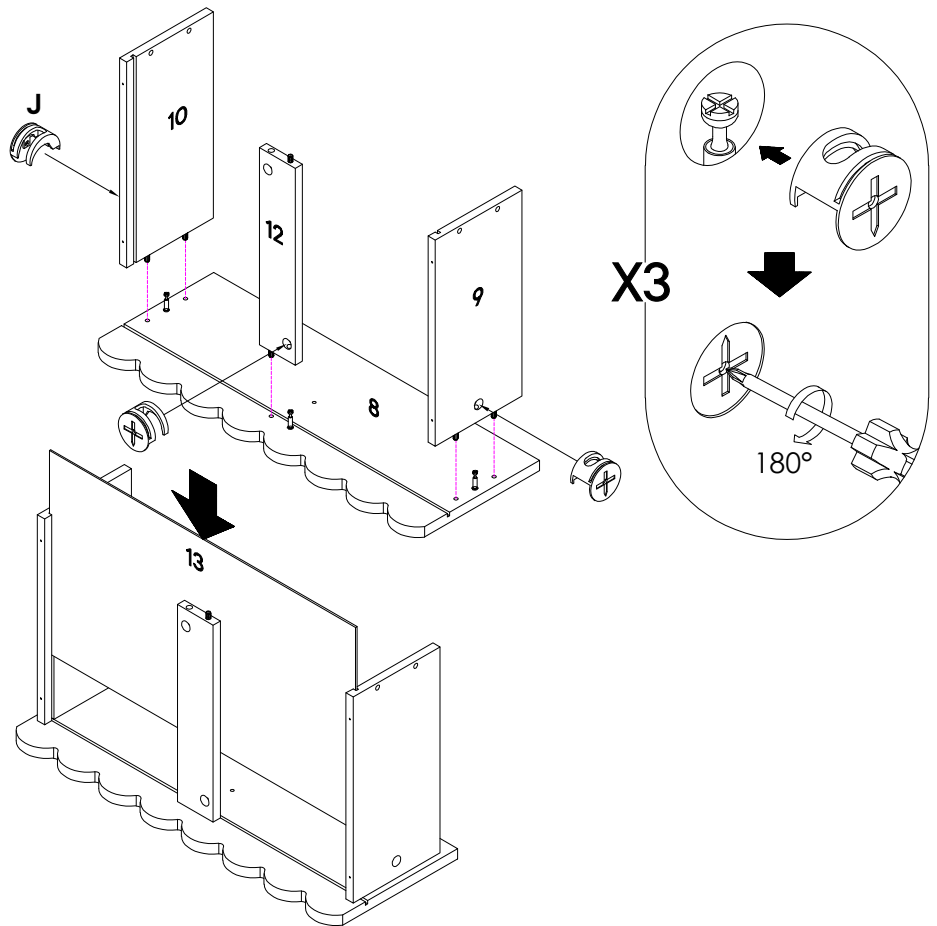


Step 12

HARDWARE

- D** Screw 6 x 40 mm x8
J Cam Lock 15/12 x2
P Allen Key x1

COMPONENTS

- 7** Drawer Front Top x1
8 Drawer Front Bottom x1
9 Drawer Side Left x2
10 Drawer Side Right x2
11 Drawer Back x2
12 Drawer Support x1

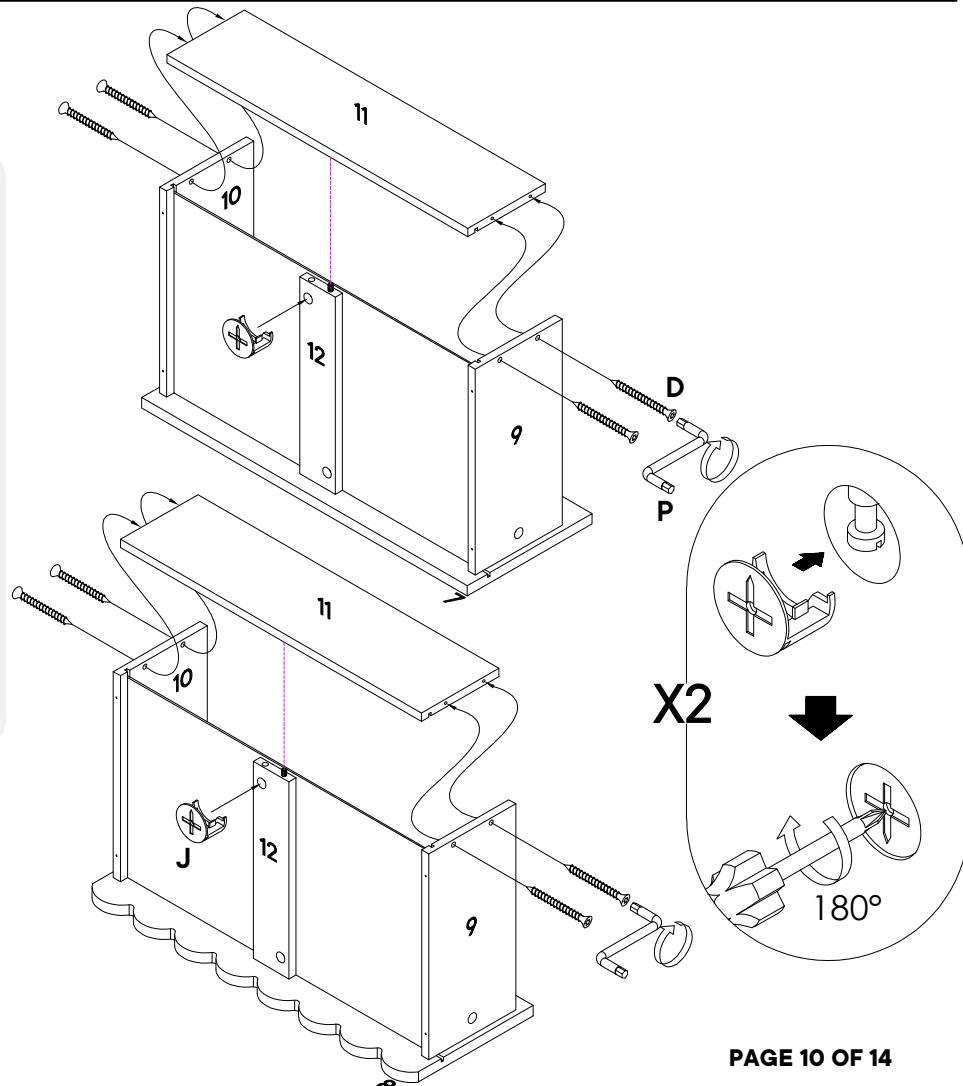

Step 13



HARDWARE

K Handle x2

COMPONENTS

7 Drawer Front Top x1

8 Drawer Front Bottom x1

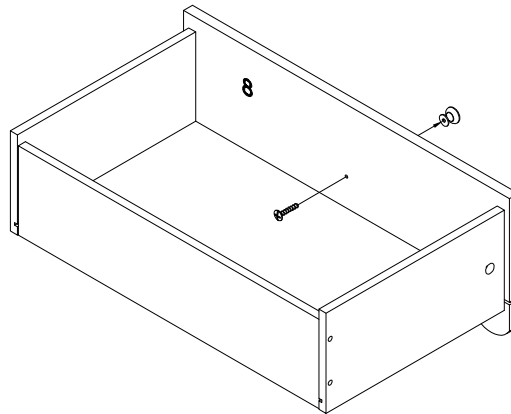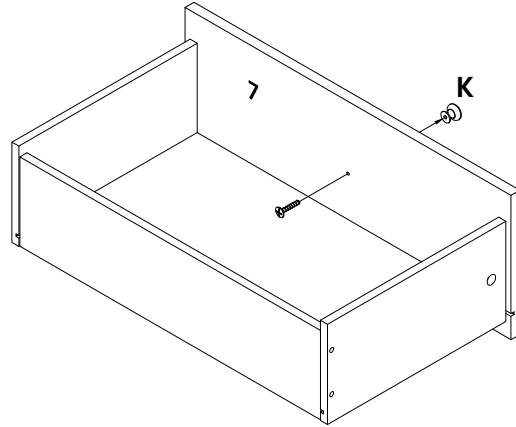





Step 14

HARDWARE


A Screw 3.5 x 12 mm	x8
M1 Drawer Slide DR (300mm)	x2
M2 Drawer Slide DL (300mm)	x2

COMPONENTS

9 Drawer Side Left	x2
10 Drawer Side Right	x2

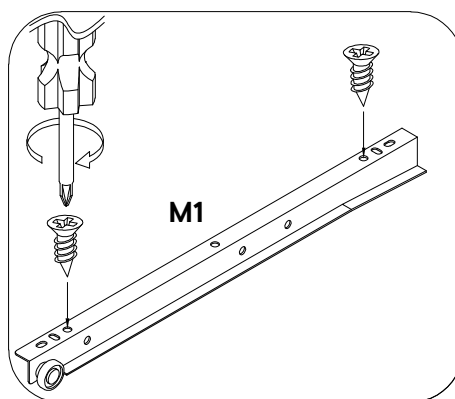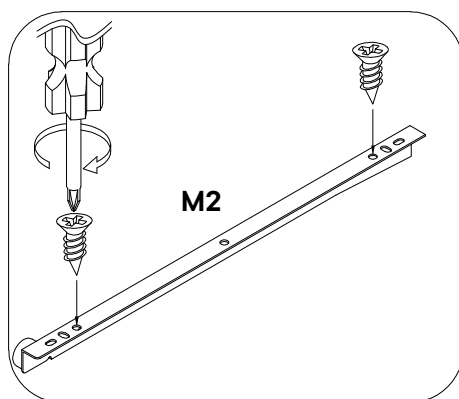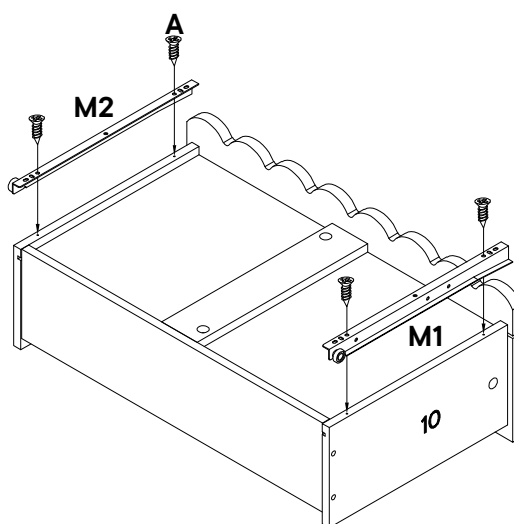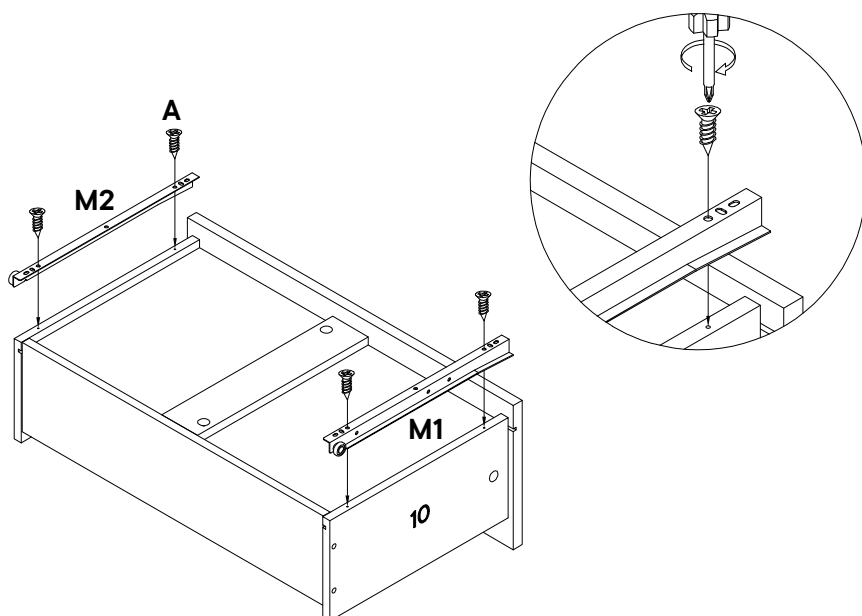

Step 15

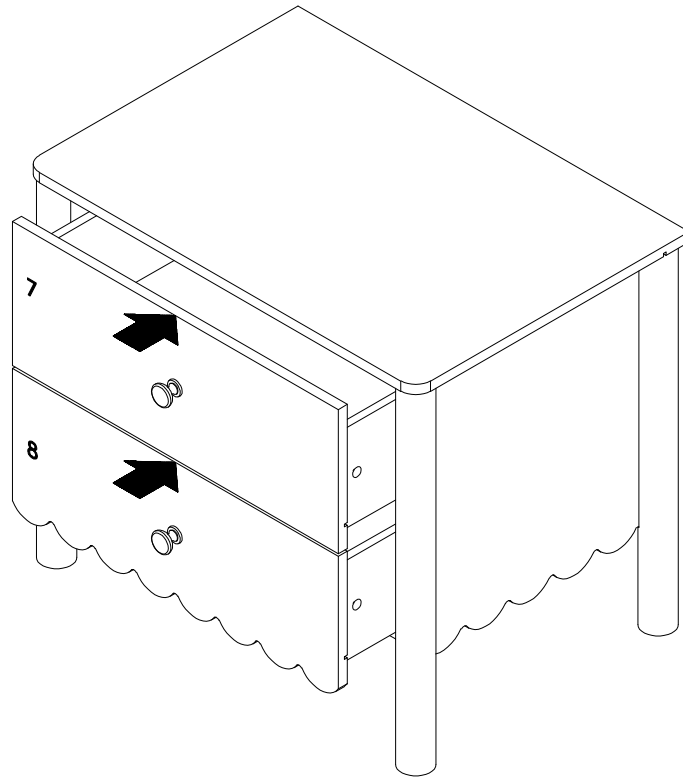


Step 16

HARDWARE

- | | |
|-----------------------------|----|
| B Screw M3.5 x 15 mm | x4 |
| Q Wedges | x4 |

COMPONENTS

- | | |
|----------------------|----|
| 14 Back Panel | x1 |
|----------------------|----|

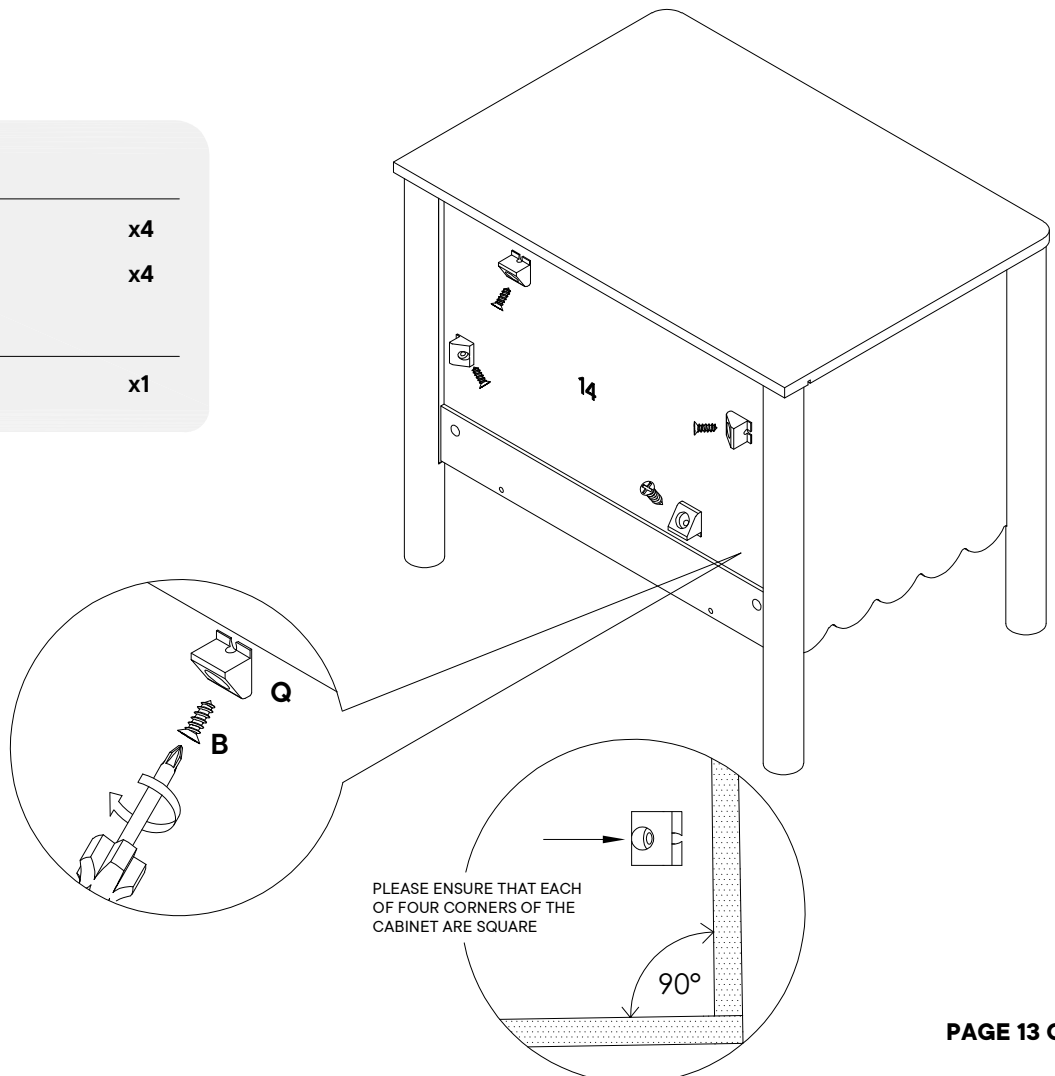

Great job!

Your Night stand is complete



CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!   

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

