


ASSEMBLY INSTRUCTIONS

EEI-7157

V0.16.04.24

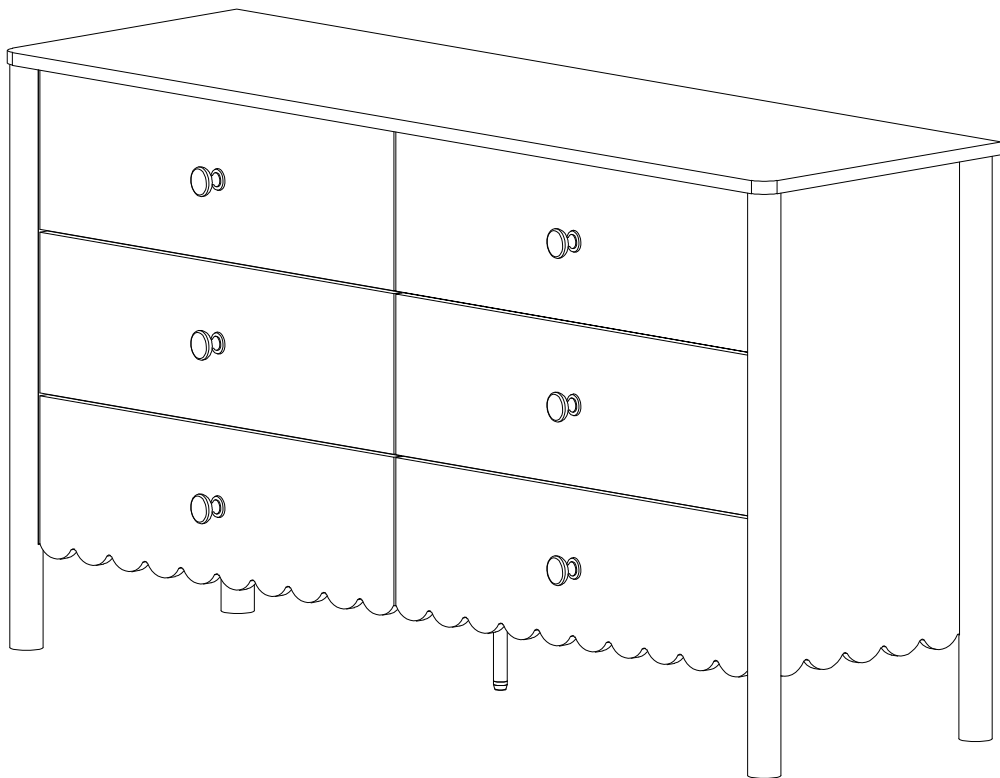

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Side Panel Left	x1
2	Side Panel Right	x1
3	Top Panel	x1
4	Front Rail Panel Bottom	x1
5	Front Rail Panel Bottom	x2
6	Back Panel Top	x1
7	Back Panel Bottom	x1
8	Divider Panel	x1
9	Support Panel	x1
10	Drawer Front Top / Left	x2
11	Drawer Front Top / Right	x2
12	Drawer Front Bottom / Left	x1
13	Drawer Front Bottom / Right	x1
14	Drawer Side Left	x6
15	Drawer Side Right	x6
16	Drawer Back	x6
17	Drawer Support	x6
18	Drawer Bottom	x6

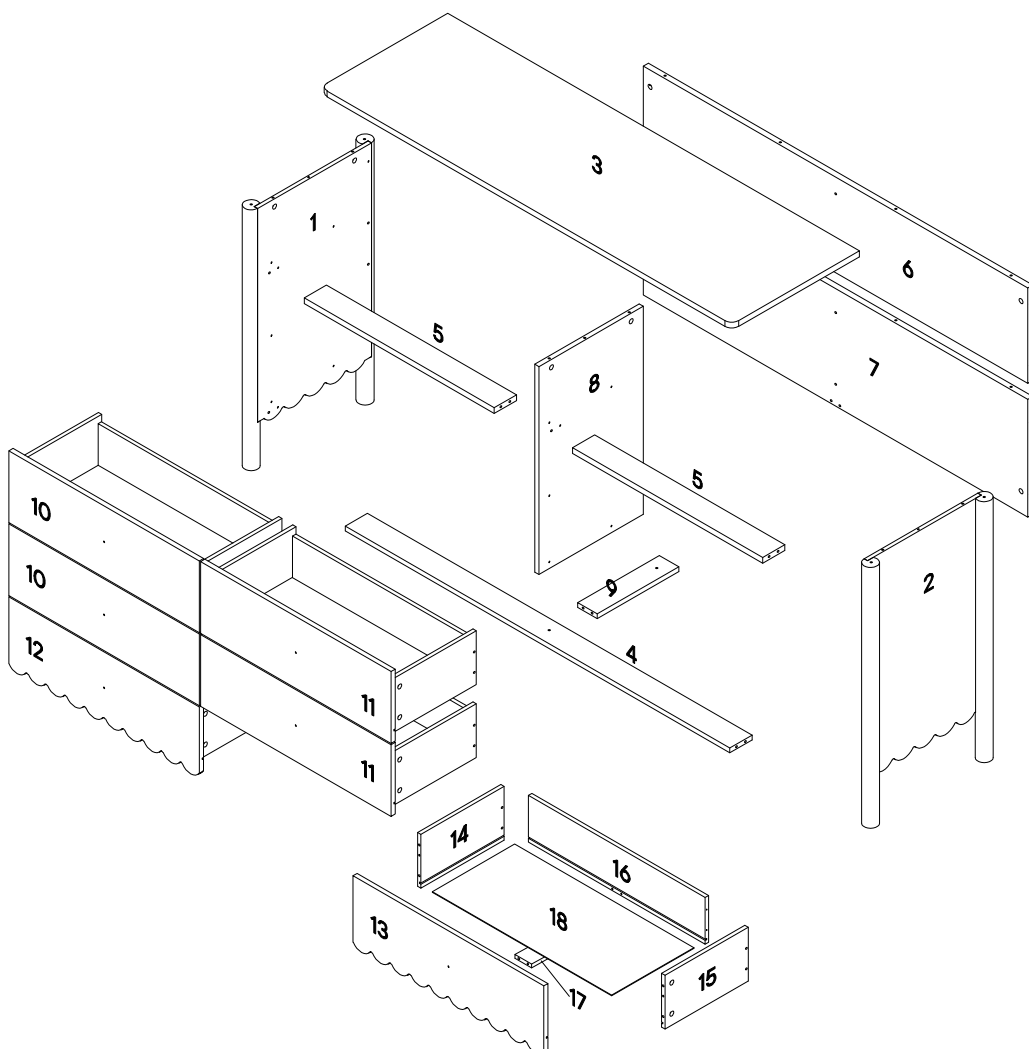





Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A.		Screw M3 x 16 mm	x3
B.		Screw M3.5 x 12 mm	x24
C.		Screw M6 x 9 mm	x24
D.		Screw M6 x 40 mm	x31
E.		Wood Dowel Ø6 x 20 mm	x27
F.		Wood Dowel Ø8 x 25 mm	x21
G.		Wood Dowel Ø8 x 50 mm	x4
H.		Cam Bolt 20 x 5 mm	x52
J.		Cam Lock 15/15	x12
K.		Cam Lock 15/12	x40
L.		Handle	x6
M1.		Drawer Slide CR (300mm)	x6
M2.		Drawer Slide CL (300mm)	x6
N1.		Drawer Slide DR (300mm)	x6
N2.		Drawer Slide DL (300mm)	x6
P.		Plastic Leg Stud	x4
Q.		Metal Bracket	x1
R.		Allen Key	x1
S.		Adjustable Leg	x1
		Tipping Restraint Kit	x2

What you need:



You may also need:

+ Power Drill
+ Level

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com


Step 1

HARDWARE

F Wood Dowel Ø8 x 25 mm	x11
G Wood Dowel Ø8 x 50 mm	x4
H Cam Bolt 20 x 5 mm	x2

COMPONENTS

6 Back Panel Top	x1
7 Back Panel Bottom	x1
8 Divider Panel	x1
9 Support Panel	x1

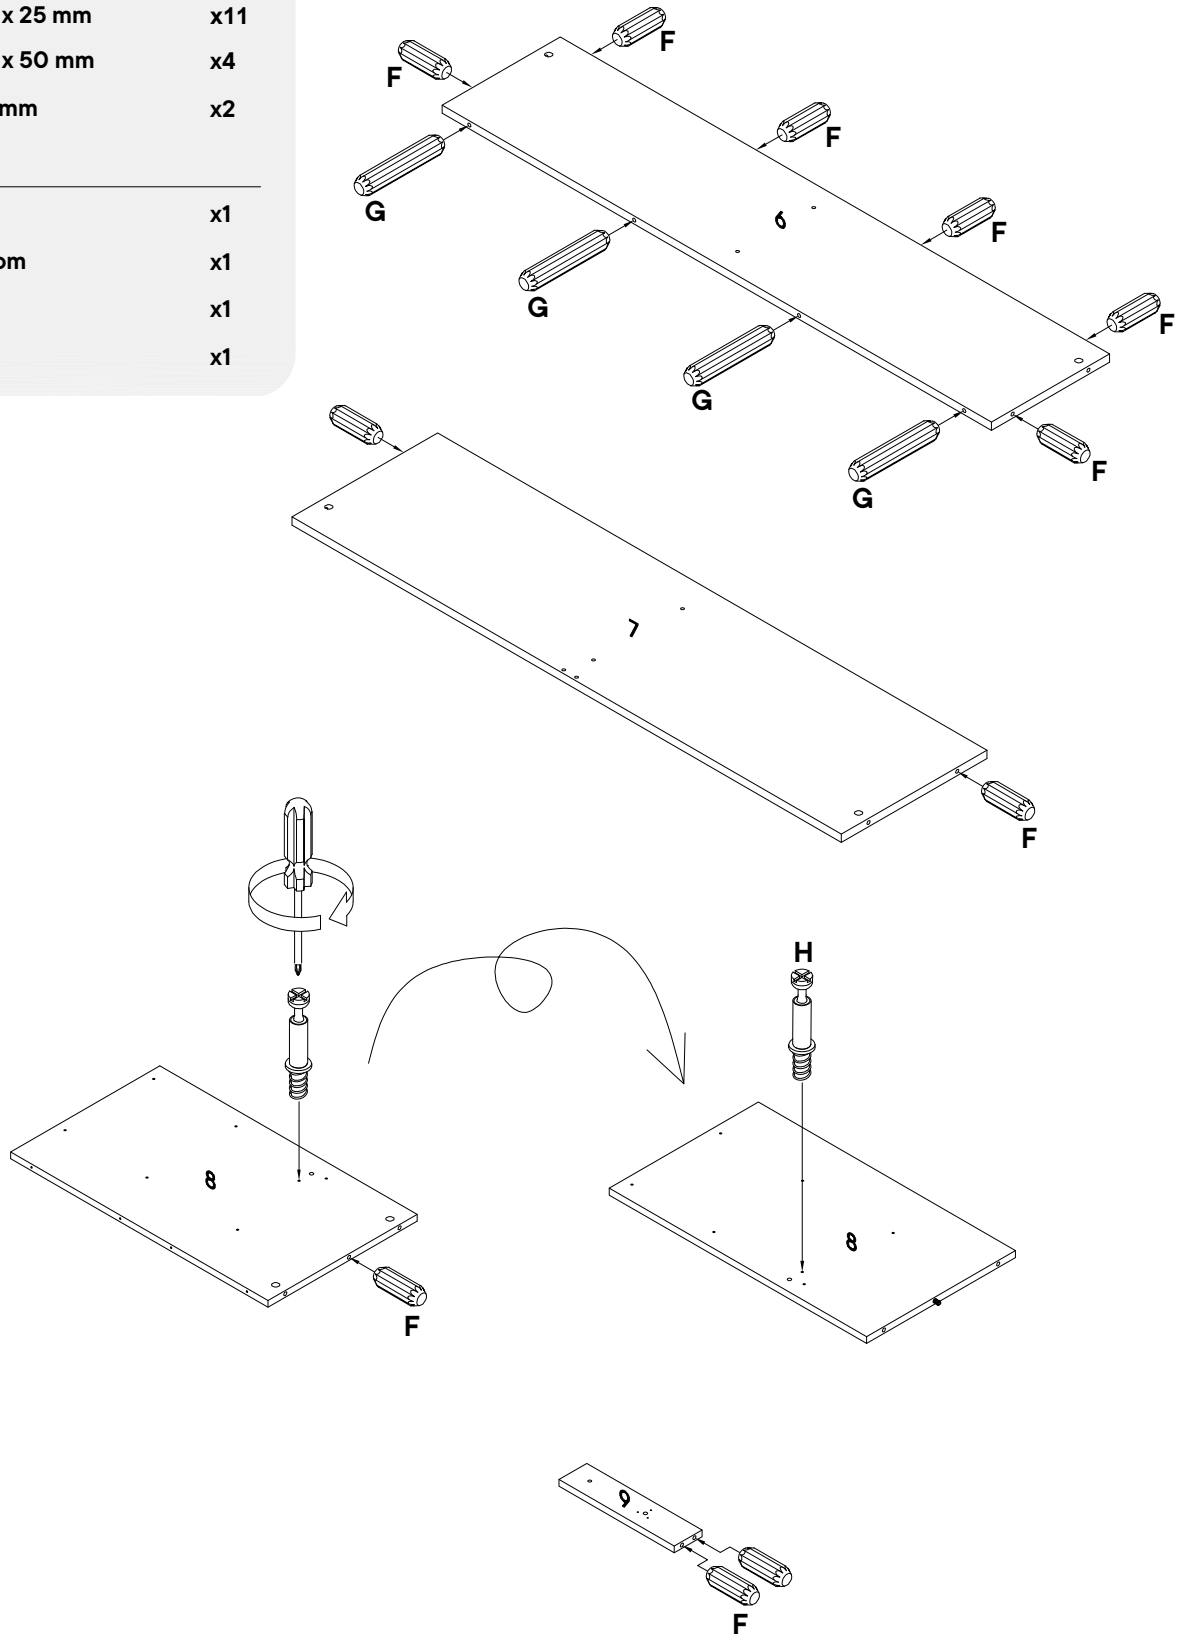





Step 2

HARDWARE

C Screw 6 x 9 mm	x12
M1 Drawer Slide CR (300mm)	x3
M2 Drawer Slide CL (300mm)	x3

COMPONENTS

8 Divider Panel	x1
------------------------	----

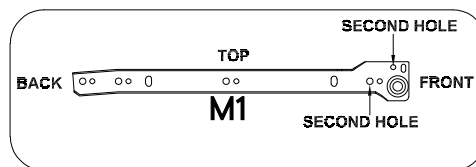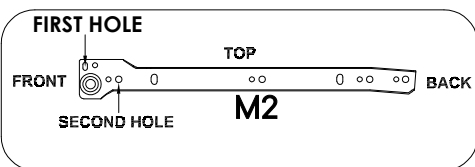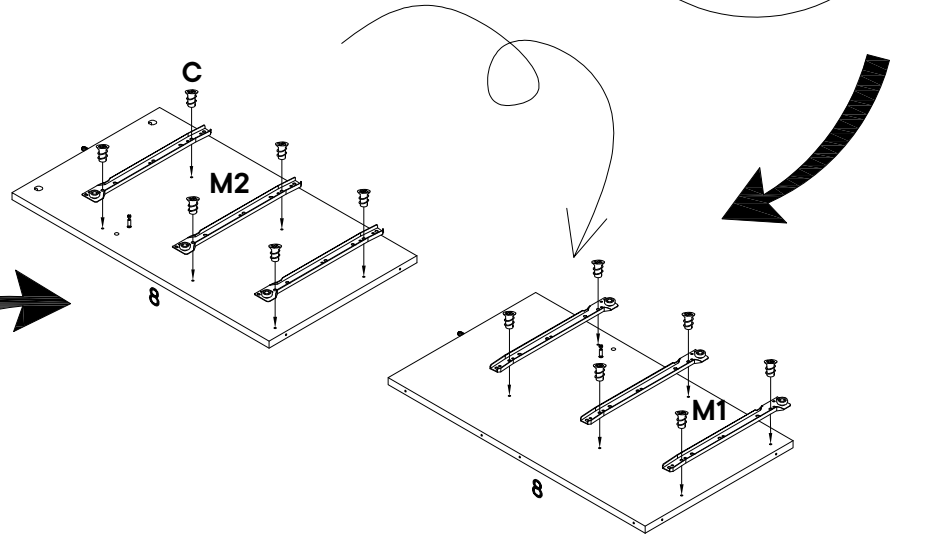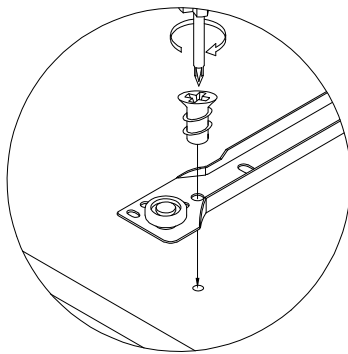


Step 3

HARDWARE

A Screw M3 x 16 mm	x3
D Screw M6 x 40 mm	x1
Q Metal Bracket	x1
R Allen Key	x1

COMPONENTS

8 Divider Panel	x1
9 Support Panel	x1

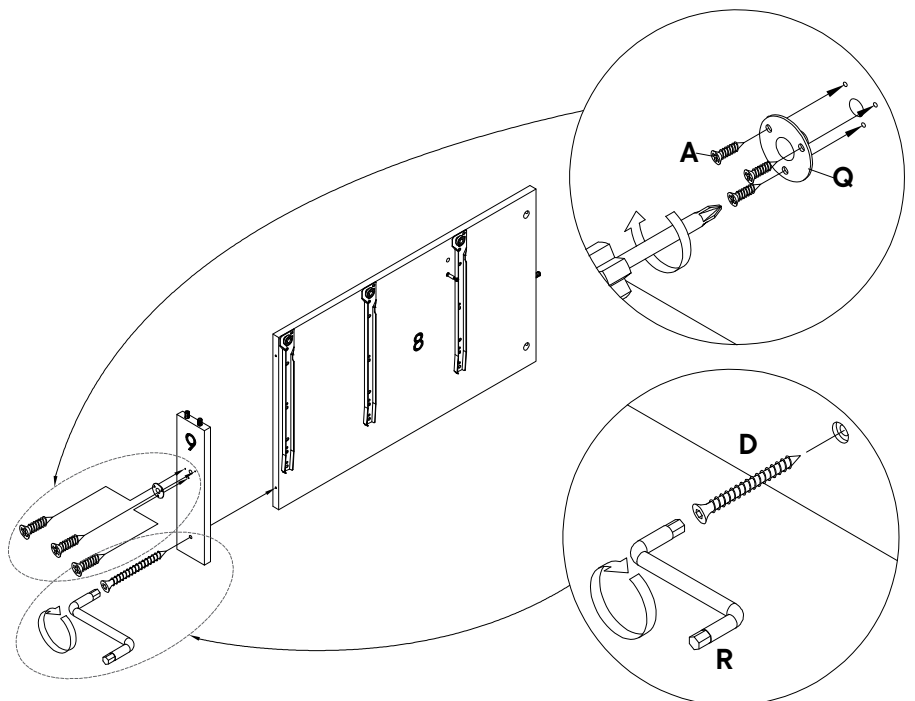


Step 4

HARDWARE

D Screw 6 x 40 mm	x4
R Allen Key	x1

COMPONENTS

7 Back Panel Bottom	x1
8 Divider Panel	x1
9 Support Panel	x1

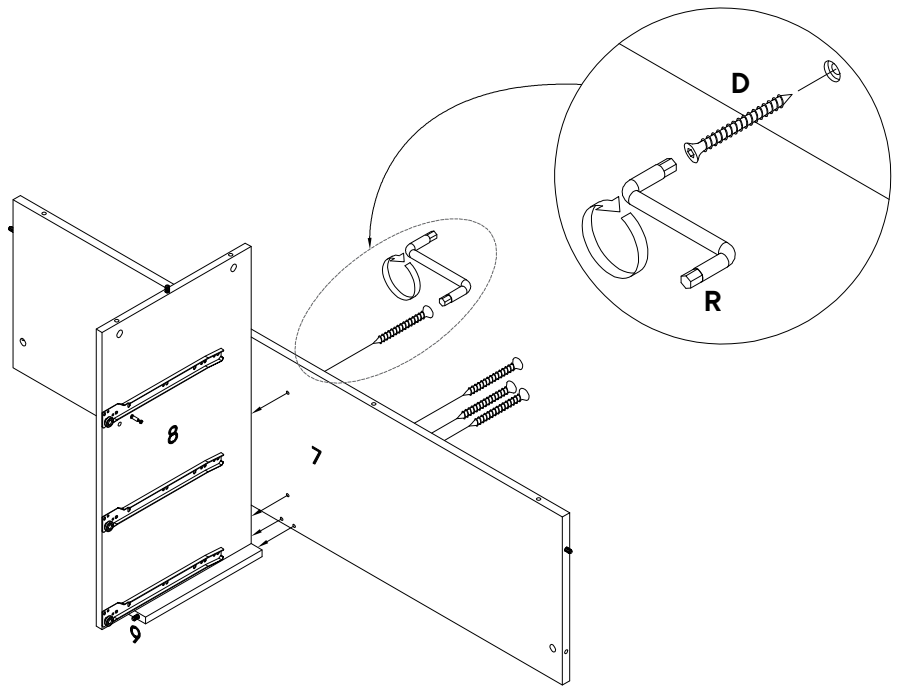


Step 5

HARDWARE

D Screw 6 x 40 mm	x2
R Allen Key	x1

COMPONENTS

6 Back Panel Top	x1
7 Back Panel Bottom	x1
8 Divider Panel	x1

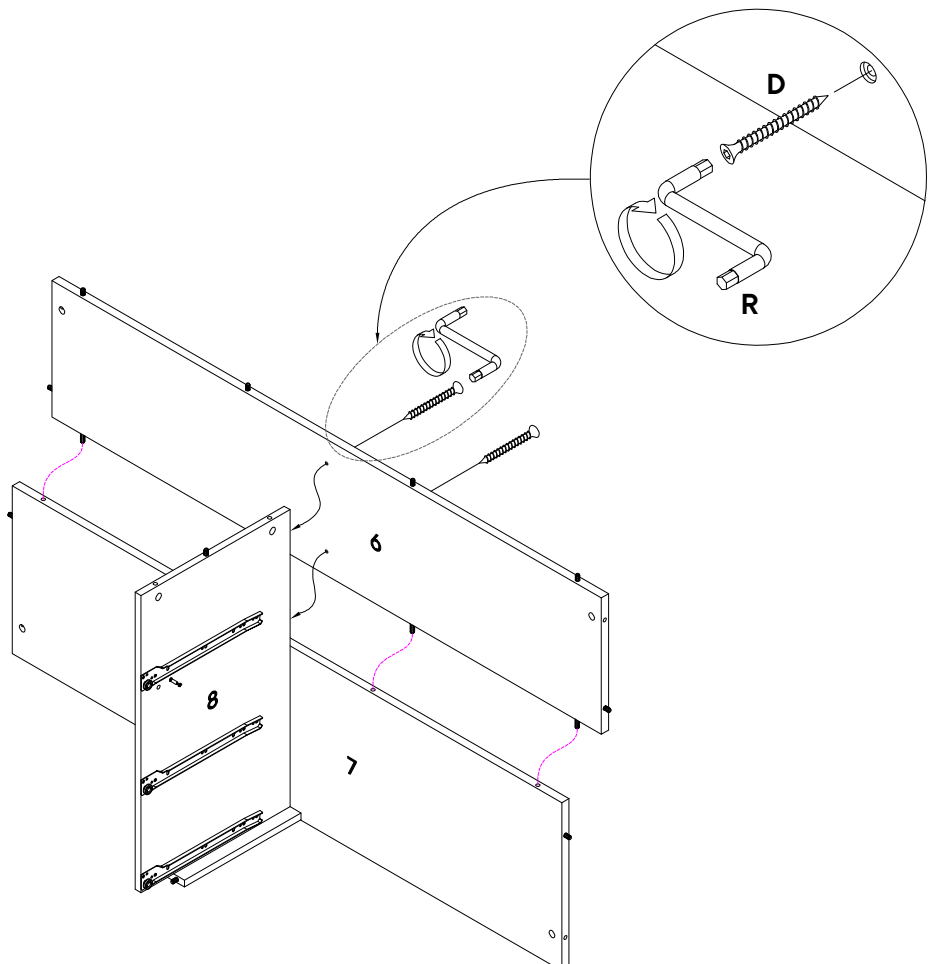





Step 7

HARDWARE

C Screw 6 x 9 mm	x12
M1 Drawer Slide CR (300mm)	x3
M2 Drawe Slide CL (300mm)	x3

COMPONENTS

1 Side Panel Left	x1
2 Side Panel Right	x1

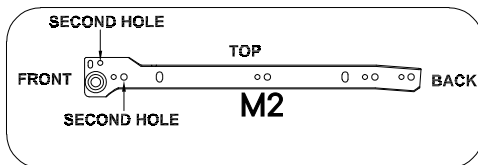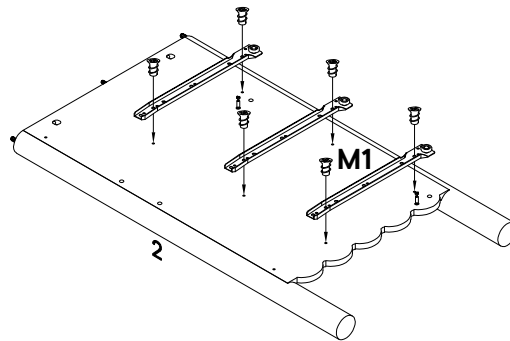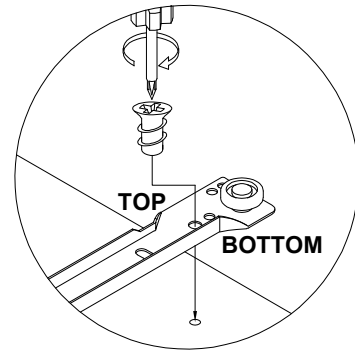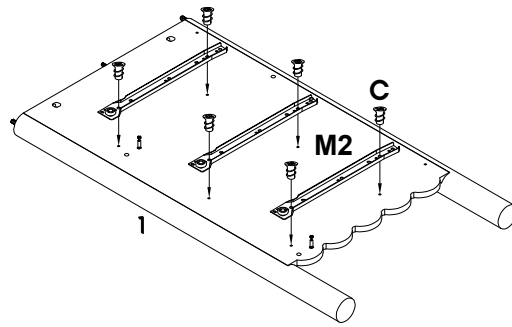



Step 8

HARDWARE

D Screw 6 x 40 mm	x1
R Allen Key	x1

COMPONENTS

4 Front Rail Panel Bottom	x1
8 Divider Panel	x1
9 Support Panel	x1

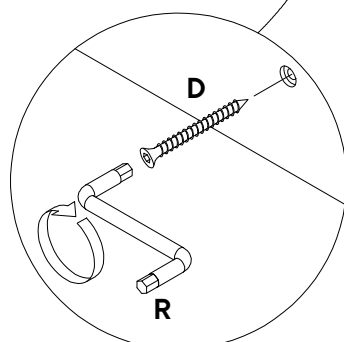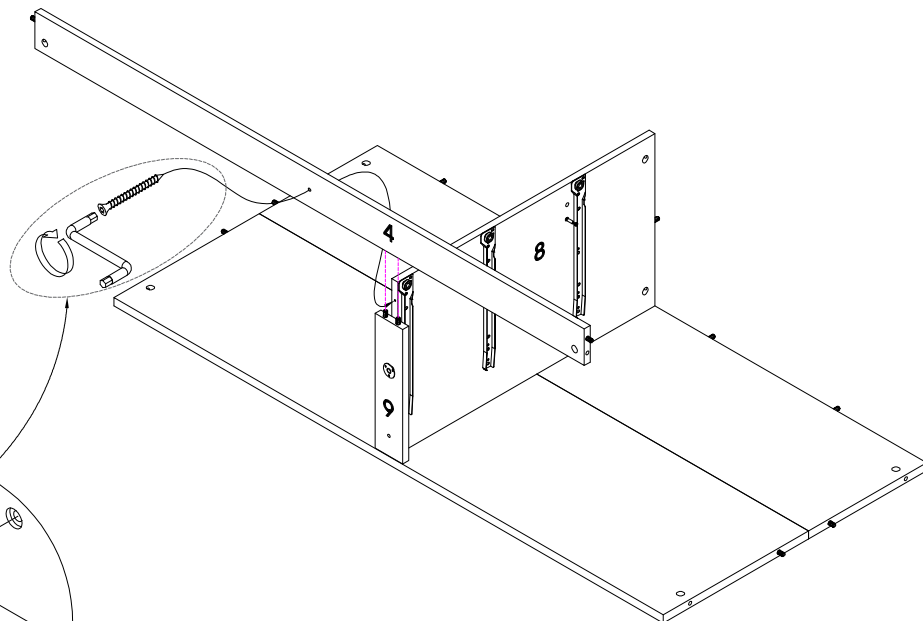



Step 9

HARDWARE

J Cam Lock 15/15 x5

COMPONENTS

1 Side Panel Left x1
4 Front Rail Panel Bottom x1
5 Front Rail Panel Top x1
6 Back Panel Top x1
7 Back Panel Bottom x1

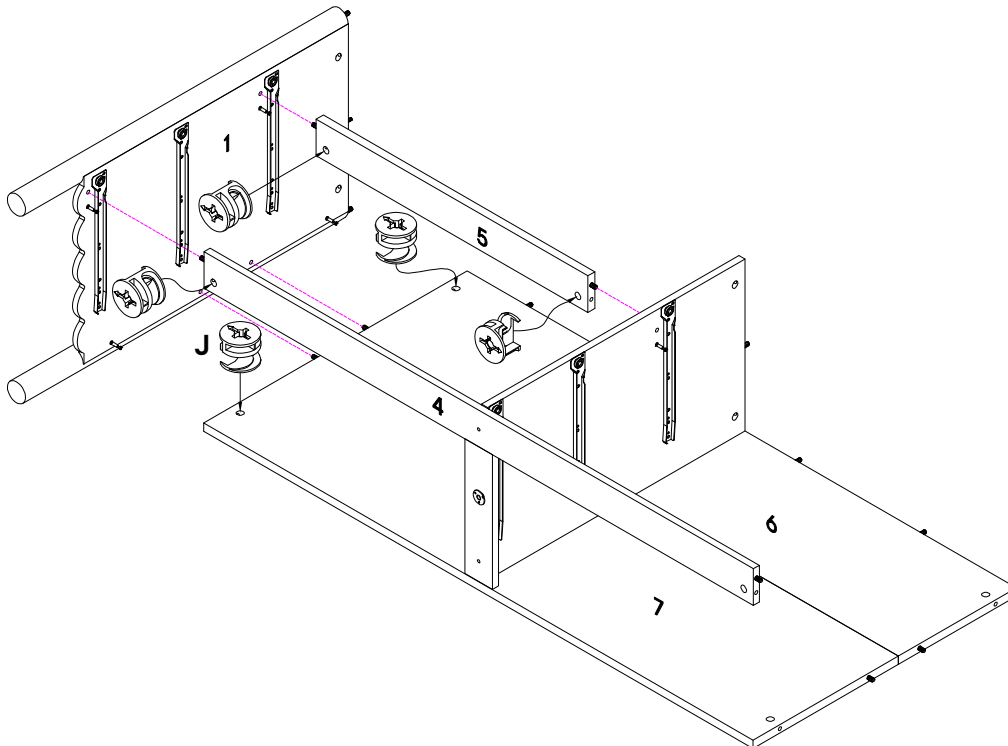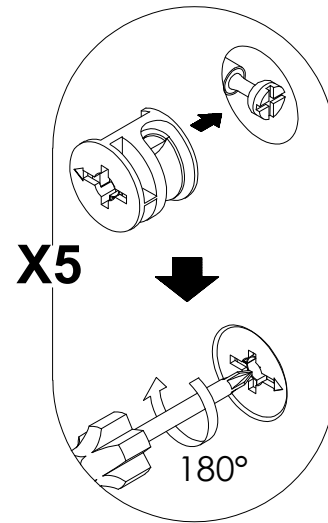

Step 10

HARDWARE

J Cam Lock 15/15 x5

COMPONENTS



2 Side Panel Right x1

4 Front Rail Panel Bottom x1

5 Front Rail Panel Top x1

6 Back Panel Top x1

7 Back Panel Bottom x1

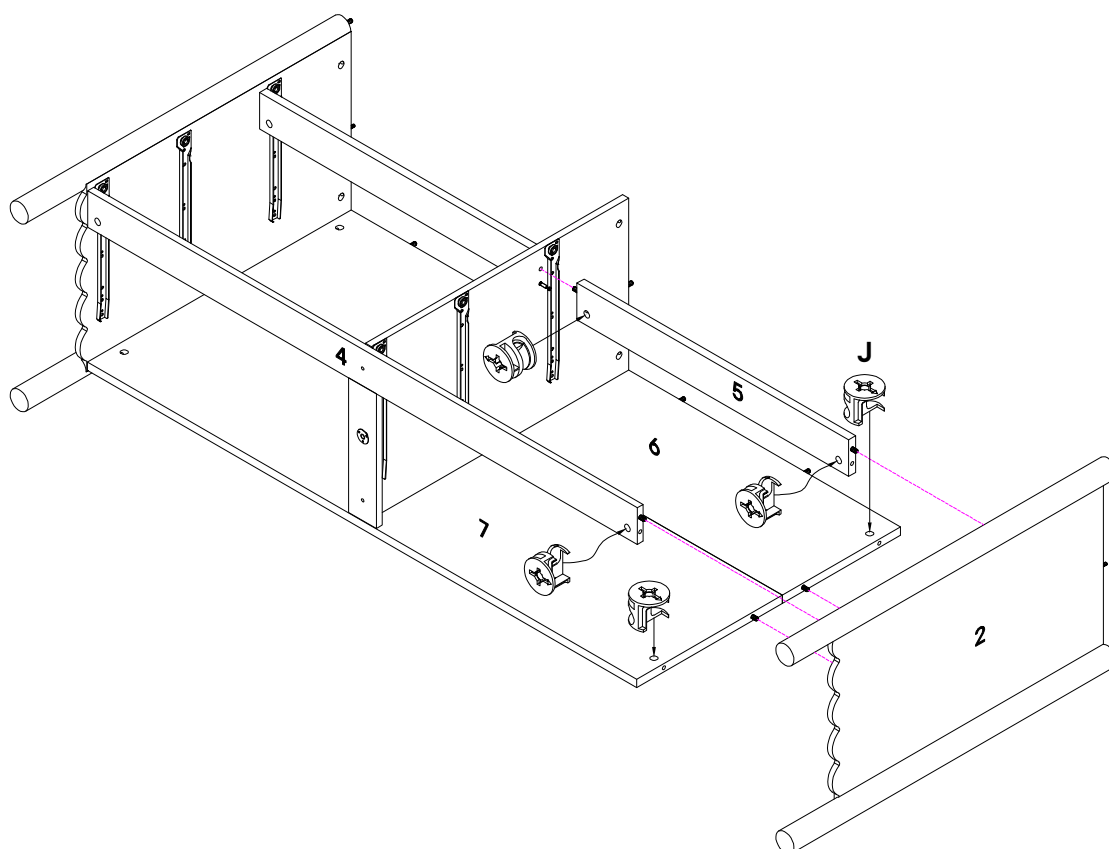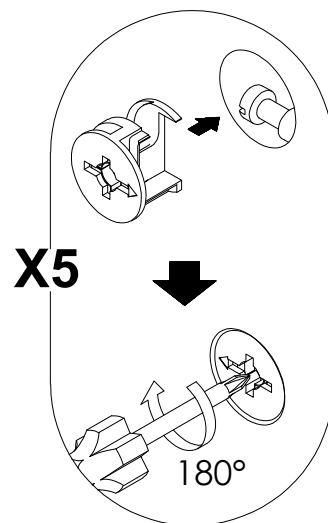


Step 11

HARDWARE

- | | |
|---------------------------|----|
| P Plastic Leg Stud | x4 |
| S Adjustable Leg | x1 |

COMPONENTS

- | | |
|---------------------------|----|
| 1 Side Panel Left | x1 |
| 2 Side Panel Right | x1 |
| 9 Support Panel | x1 |

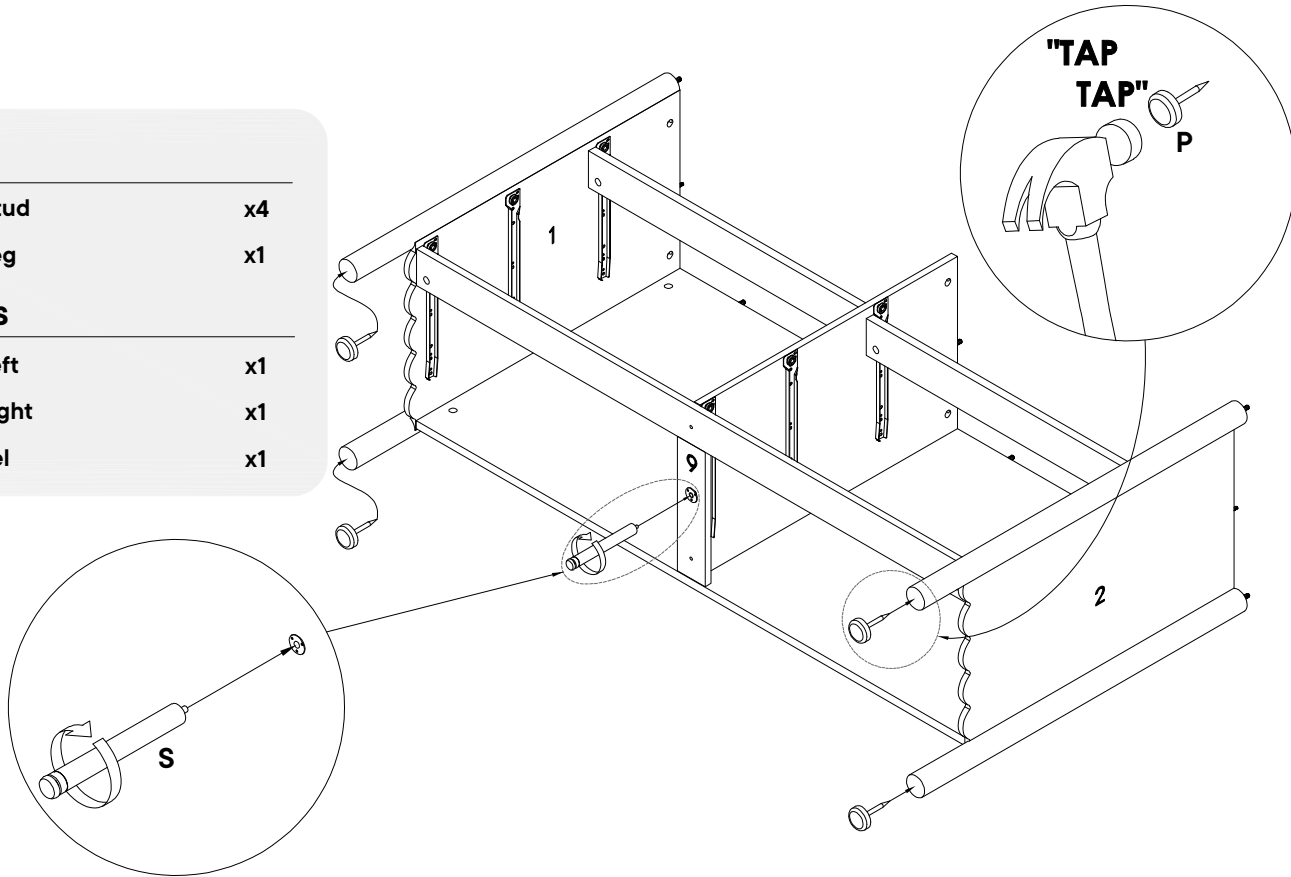


Step 12

HARDWARE

- | | |
|-----------------------------|----|
| H Cam Bolt 20 x 5 mm | x6 |
|-----------------------------|----|

COMPONENTS

- | | |
|--------------------|----|
| 3 Top Panel | x1 |
|--------------------|----|

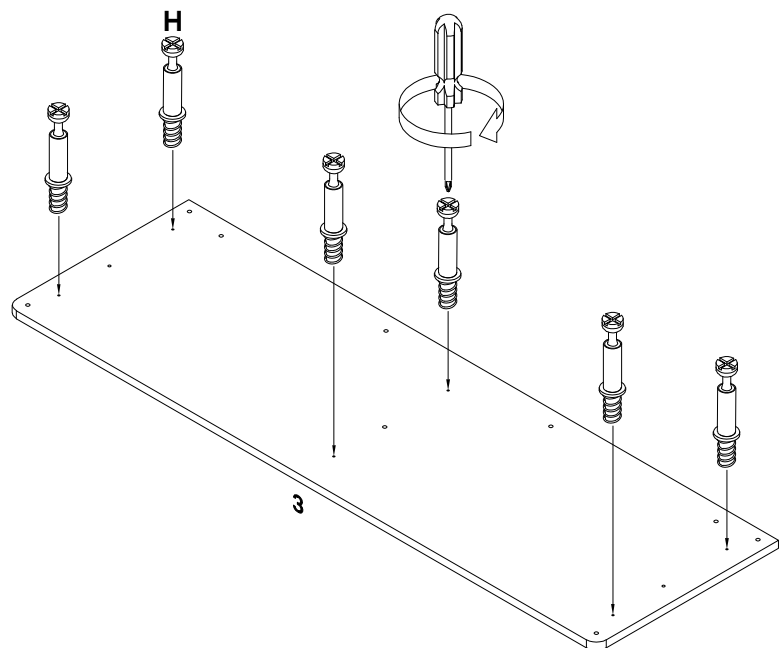




Step 13

HARDWARE

J Cam Lock 15/15	x2
K Cam Lock 15/12	x4

COMPONENTS

1 Side Panel Left	x1
2 Side Panel Right	x1
3 Top Panel	x1
6 Back Panel Top	x1
8 Divider Panel	x1

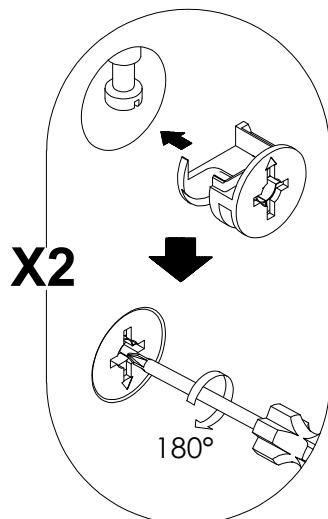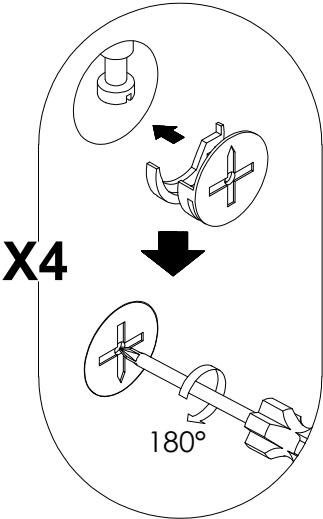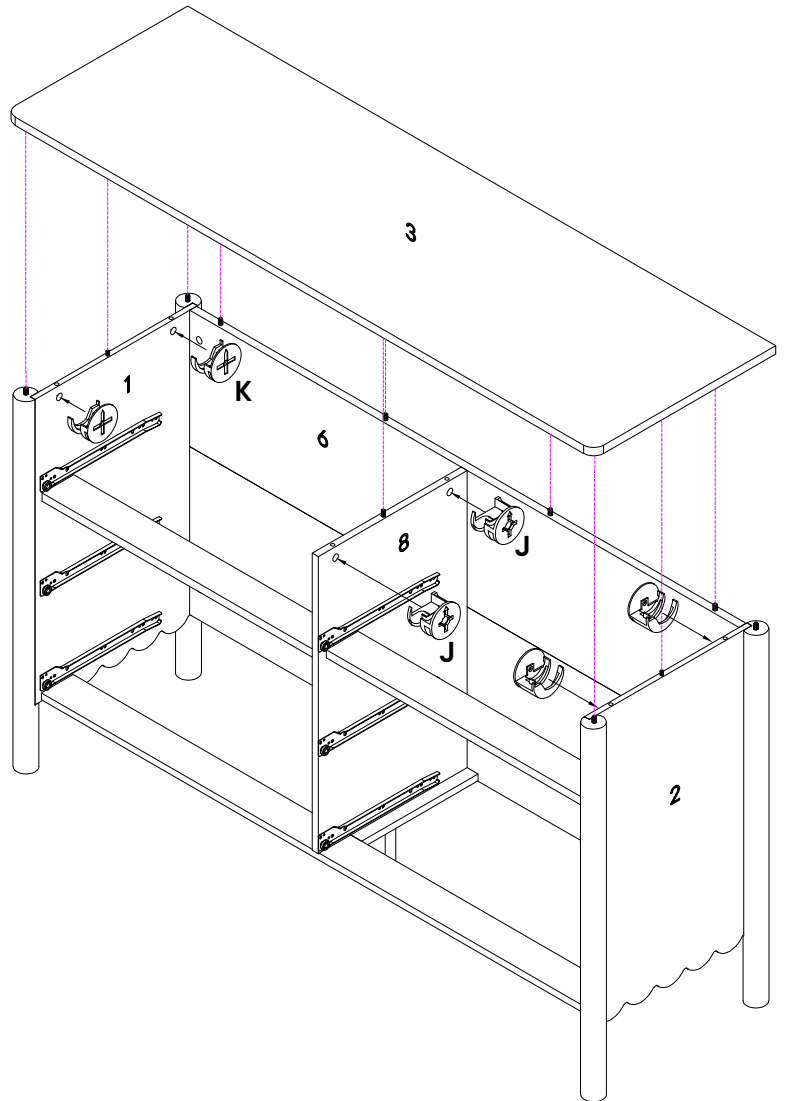









Step 14

HARDWARE

E Wood Dowel Ø6 x 20 mm	x24
H Cam Bolt 20 x 5 mm	x36

COMPONENTS

10 Drawer Front Top / Left	x2
11 Drawer Front Top / Right	x2
12 Drawer Front Bottom / Left	x1
13 Drawer Front Bottom / Right	x1
14 Drawer Side Left	x6
15 Drawer Side Right	x6
16 Drawer Back	x6
17 Drawer Support	x6

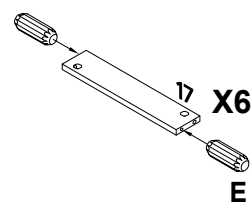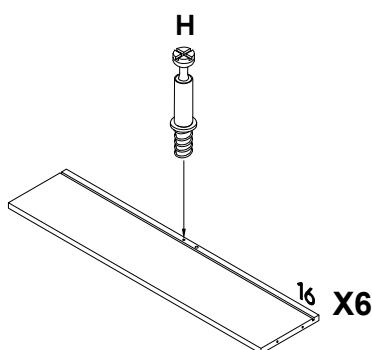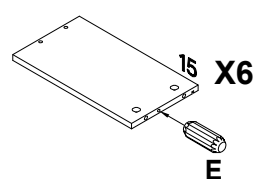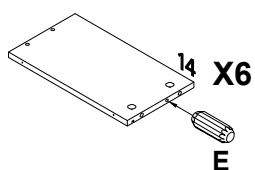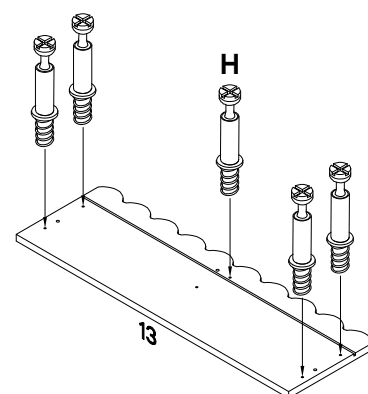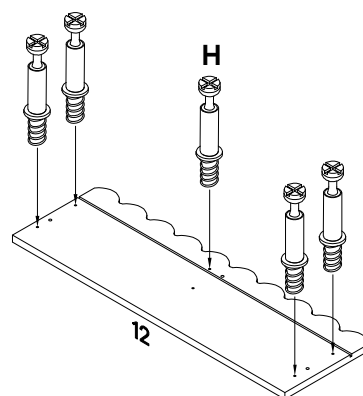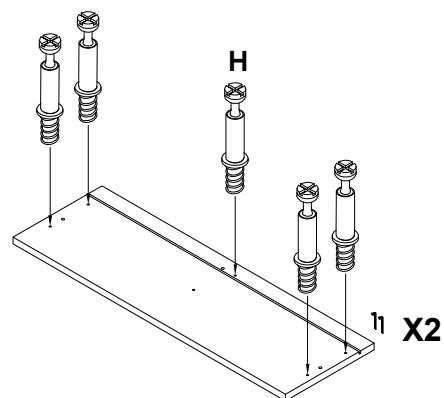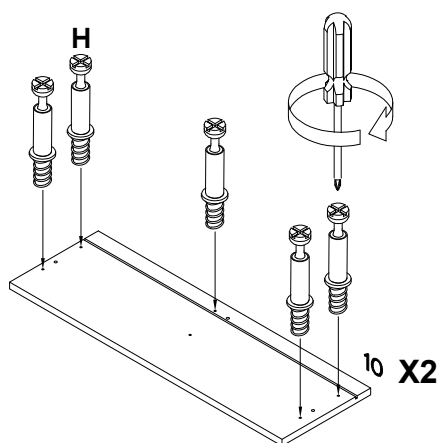


Step 15

HARDWARE

K Cam Lock 15/12 x20

COMPONENTS

10 Drawer Front Top / Left x2
11 Drawer Front Top / Right x2
14 Drawer Side Left x4
15 Drawer Side Right x4
17 Drawer Support x4
18 Drawer Bottom x4

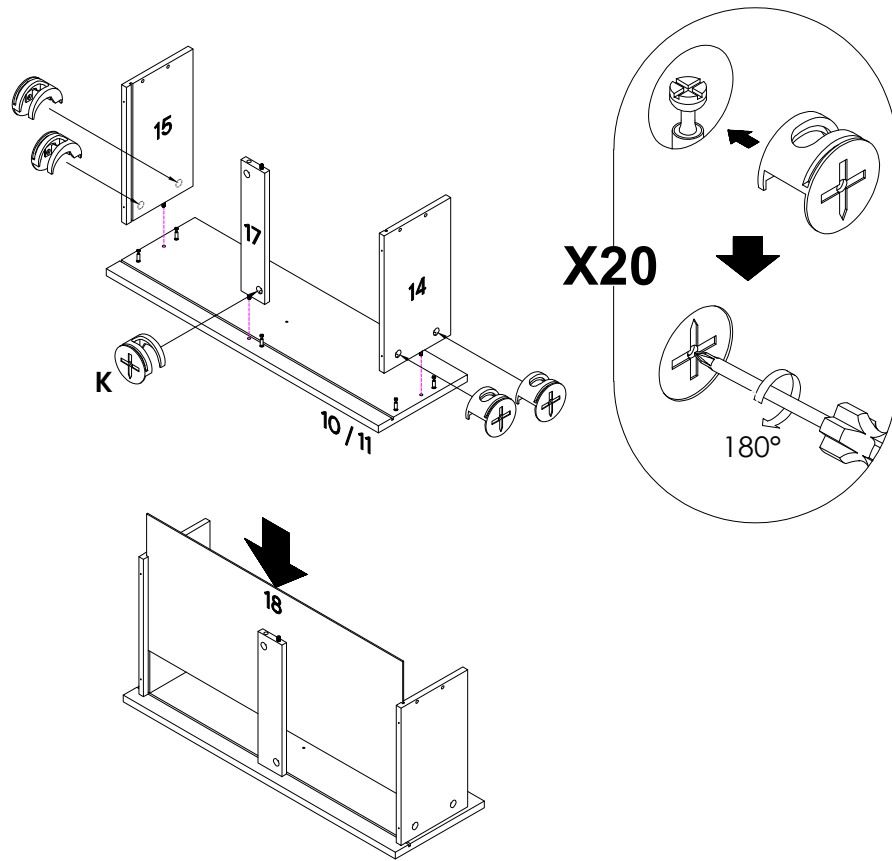

X4


Step 16

HARDWARE

K Cam Lock 15/12 x10

COMPONENTS

12 Drawer Front Bottom / Left x1
13 Drawer Front Bottom / Right x1
14 Drawer Side Left x2
15 Drawer Side Right x2
17 Drawer Support x2
18 Drawer Bottom x2

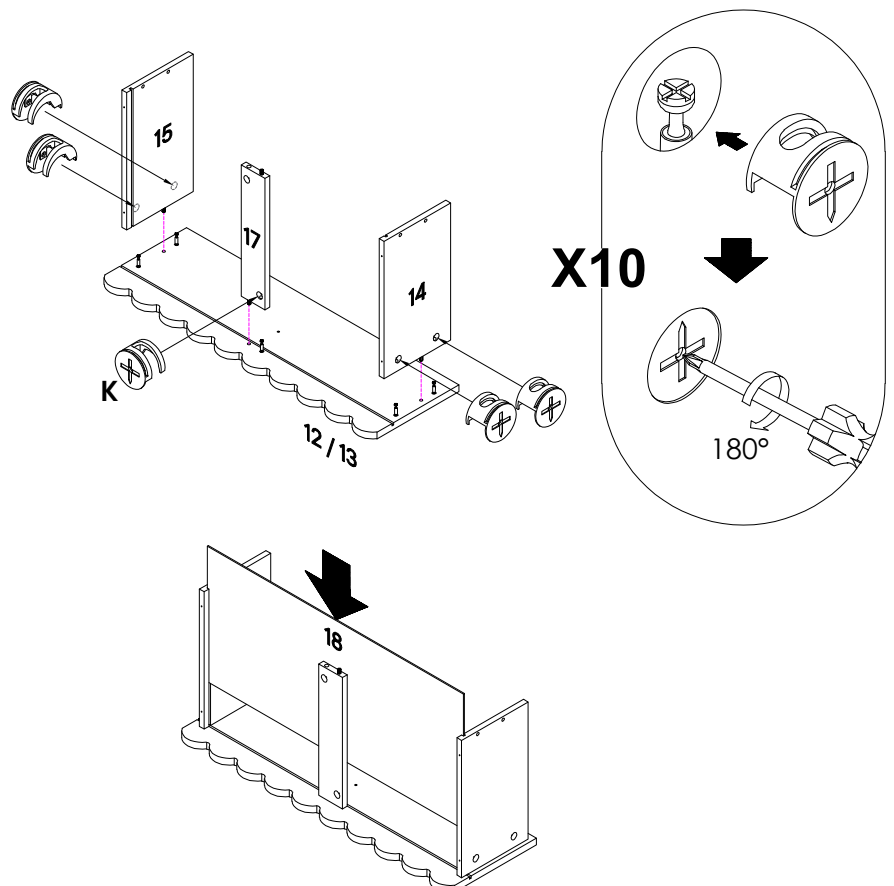

X2


Step 17

HARDWARE

D Screw 6 x 40 mm	x24
K Cam Lock 15/12	x6
R Allen Key	x1

COMPONENTS

10 Drawer Front Top / Left	x2
11 Drawer Front Top / Right	x2
12 Drawer Front Bottom Left	x1
13 Drawer Front Bottom Right	x1
14 Drawer Side Left	x6
15 Drawer Side Right	x6
16 Drawer Back	x6
17 Drawer Support	x6

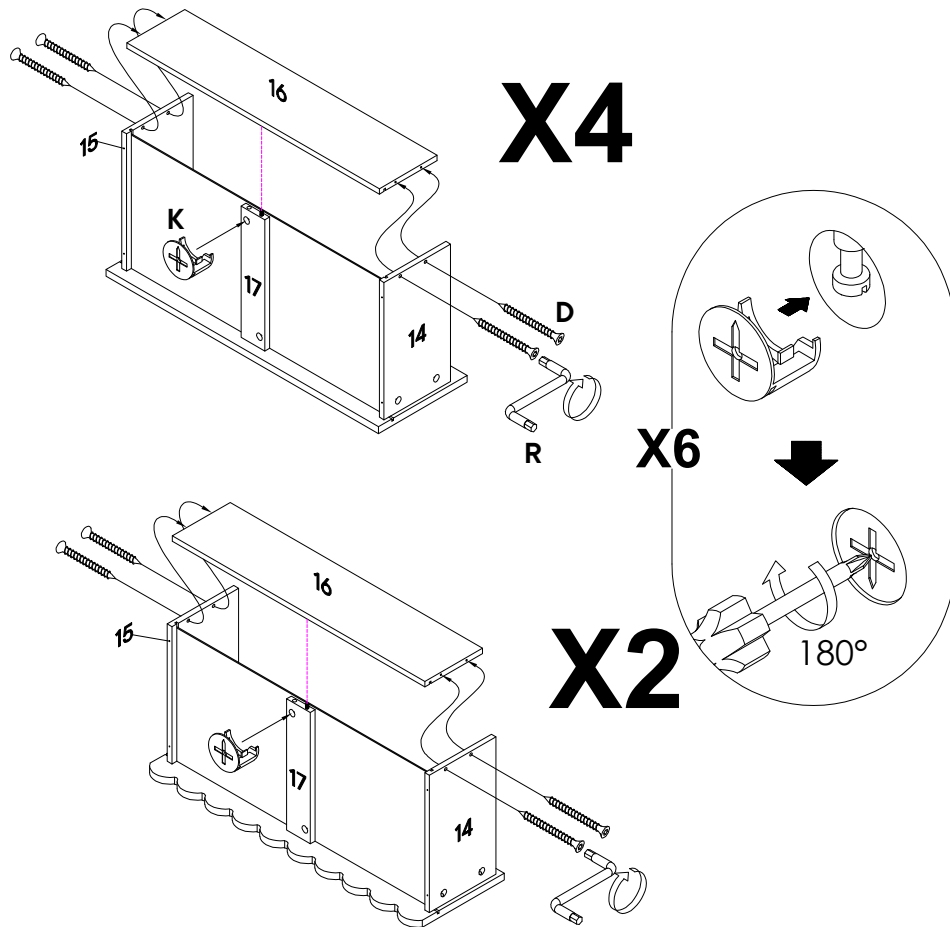


Step 18

HARDWARE

L Handle	x6
-----------------	----

COMPONENTS

10 Drawer Front Top / Left	x2
11 Drawer Front Top / Right	x2
12 Drawer Front Bottom Left	x1
13 Drawer Front Bottom Right	x1

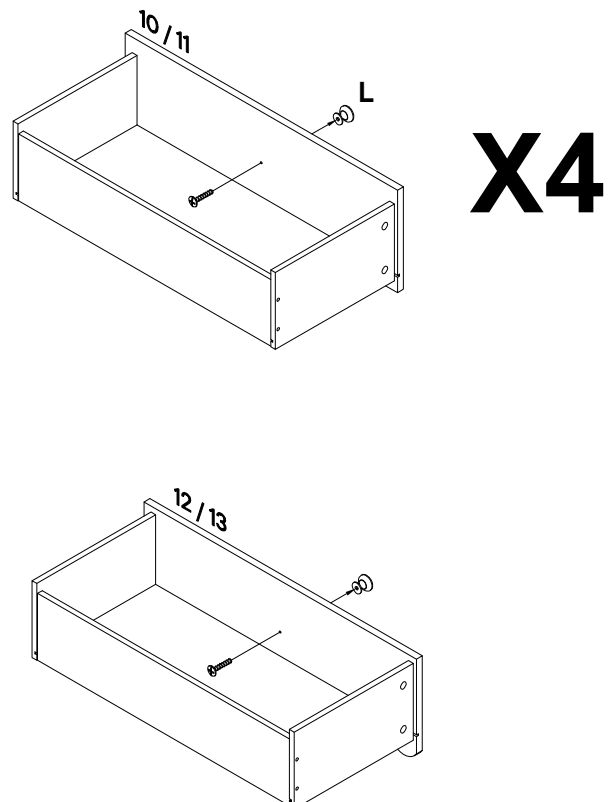





Step 19

HARDWARE


B Screw 3.5 x 12 mm	x24
N1 Drawer Slide DR (300mm)	x6
N2 Drawer Slide DL(300mm)	x6

COMPONENTS

14 Drawer Side Left	x6
15 Drawer Side Right	x6

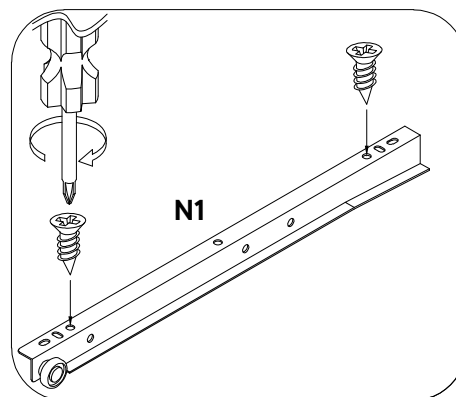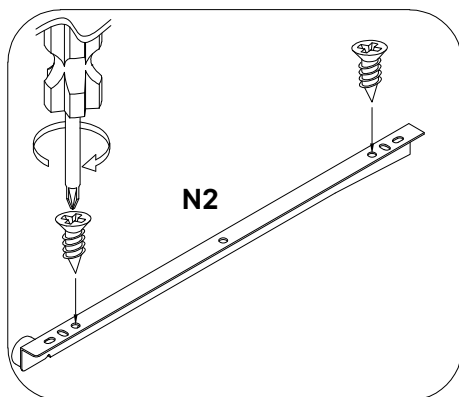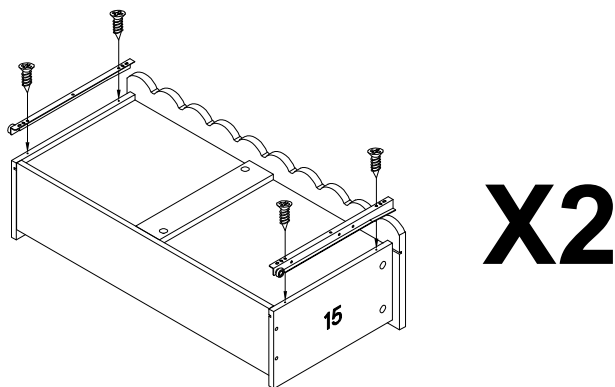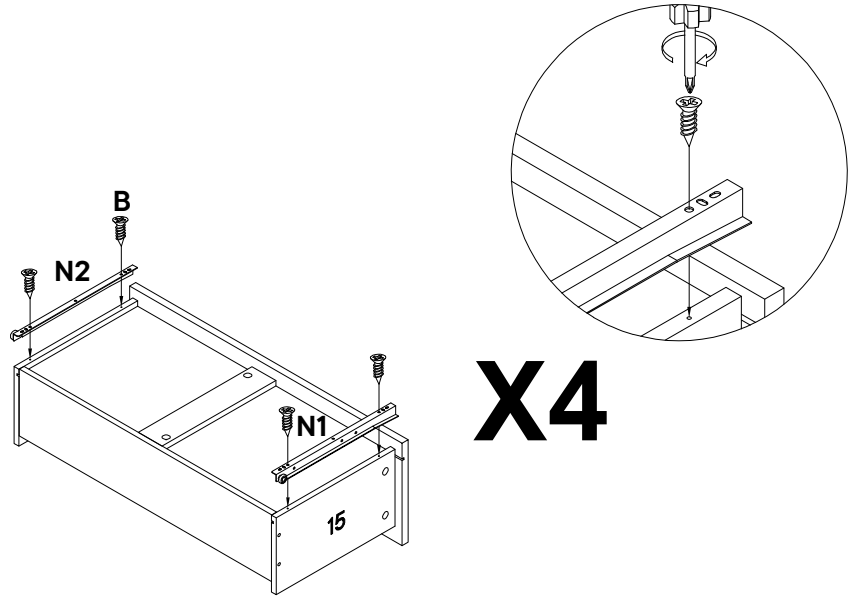

Step 20

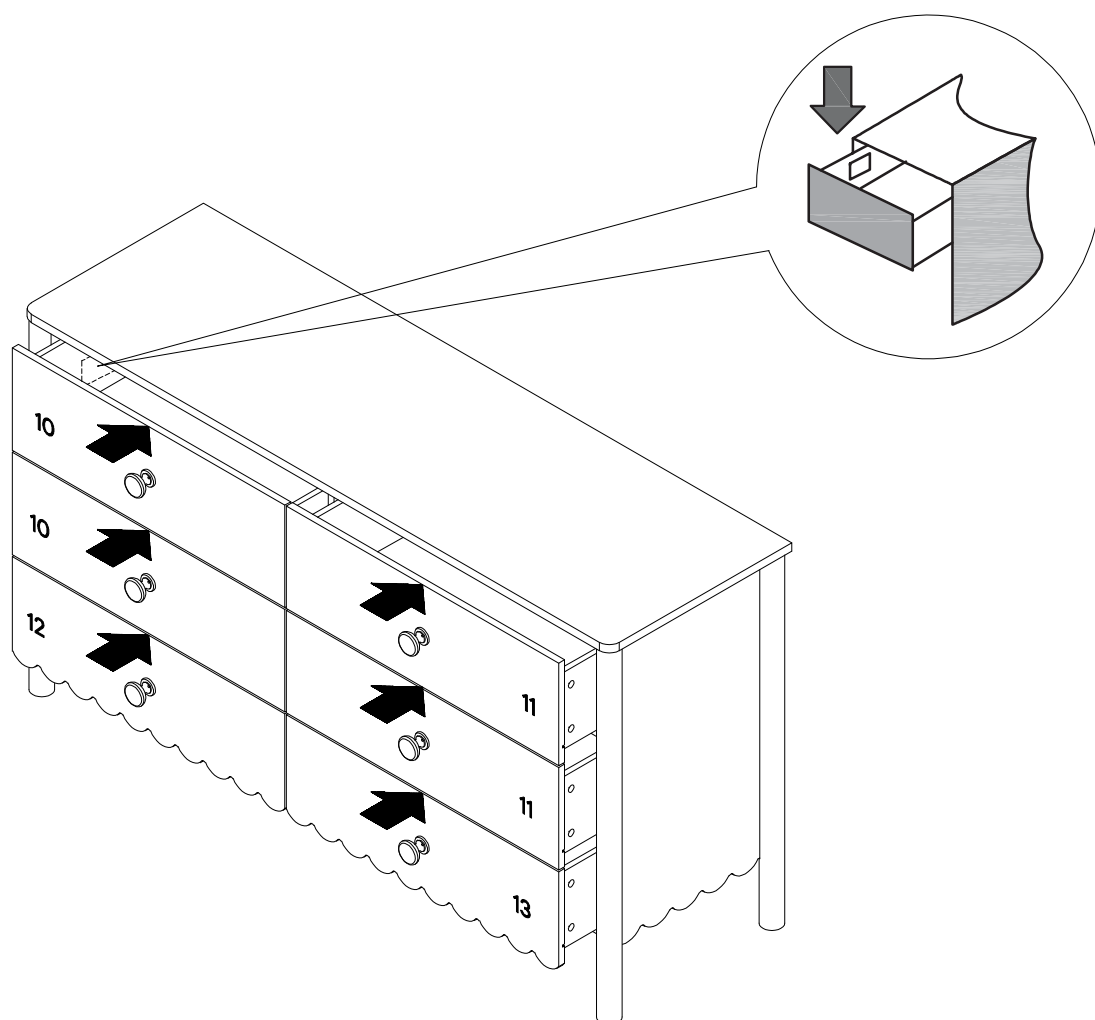

Great job!

Your New Drawer Chest is complete



CARING FOR YOUR ITEM

Indoor use only


Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemical, as they could damage the finish or integrity of the item.



CONNECT WITH US!   

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

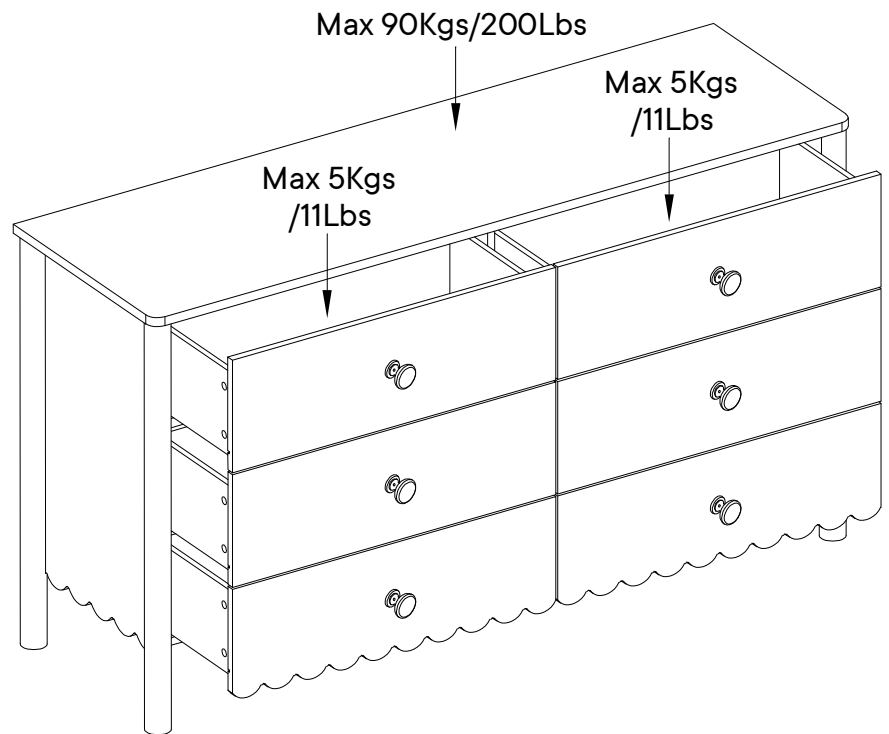

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

This tipping restraint is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

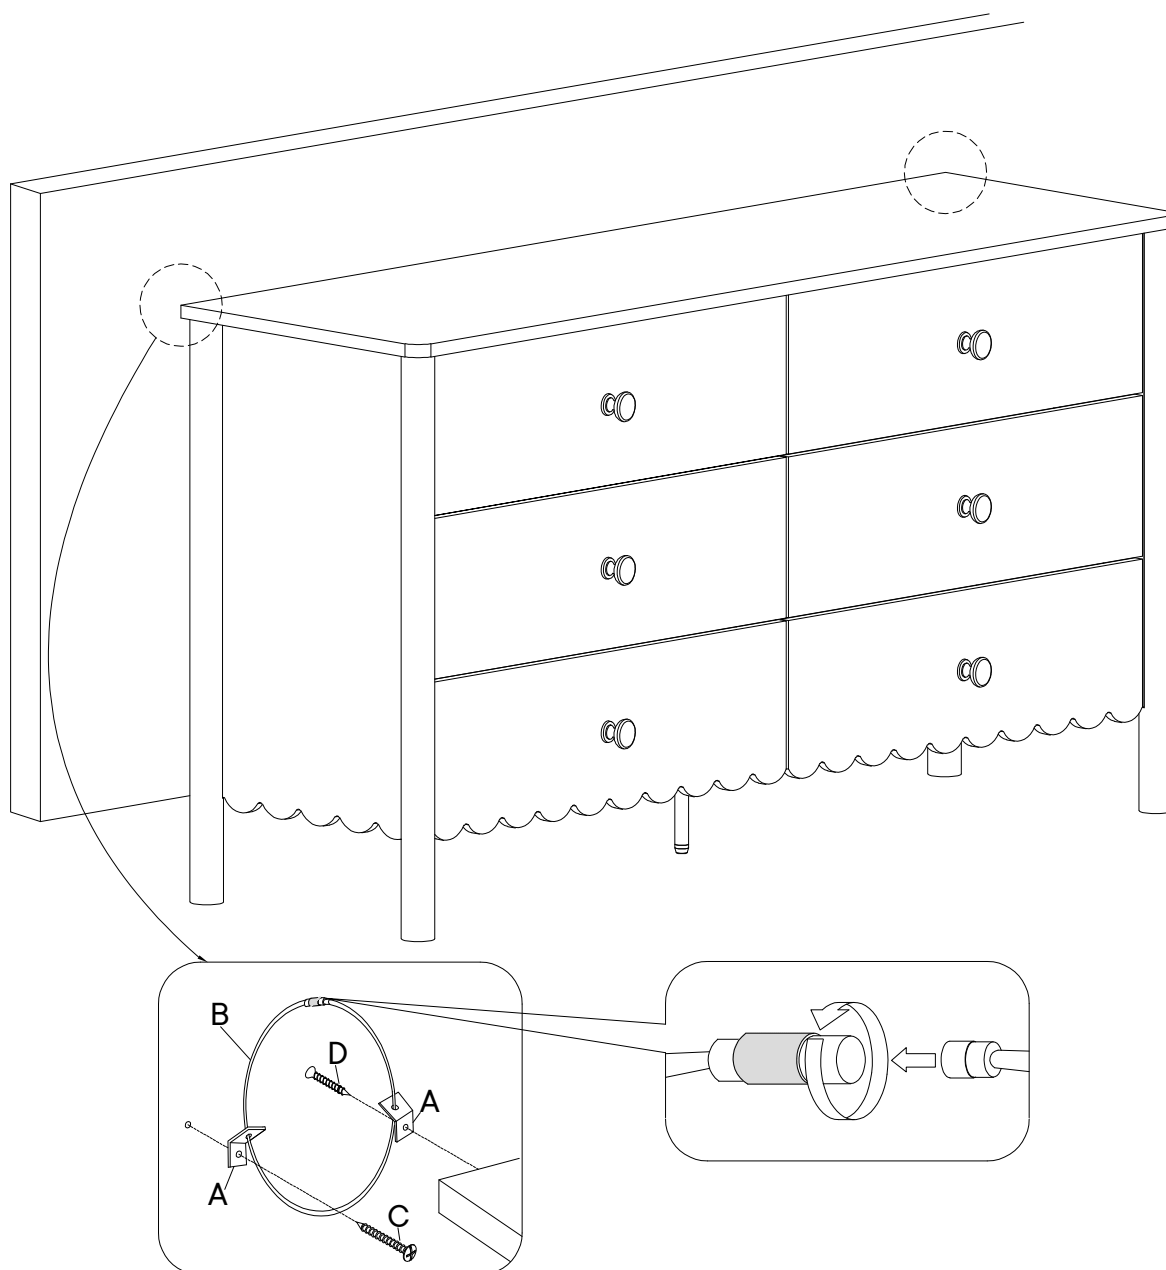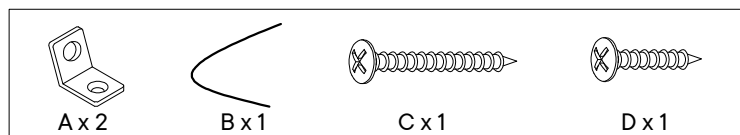

Installation Instructions :

1. Determine where the furniture is to be placed and find the center line of a wooden stud using a stud finder.
2. Drill a 1/8" pilot hole on the wooden stud approximately 3" below the height of unit top.
3. Attach one bracket (A) securely with screw (C) into the pilot hole on the wall.
4. Position the furniture in place and attach the other bracket (A) with screw (D) to the back edge of unit top in line with the bracket (A) on the wall.
5. Put the male end of the steel cable (B) through each bracket. Securely connect both ends together by turning the female connector clockwise.