


ASSEMBLY INSTRUCTIONS

MOD-7213

V0.09.27.24

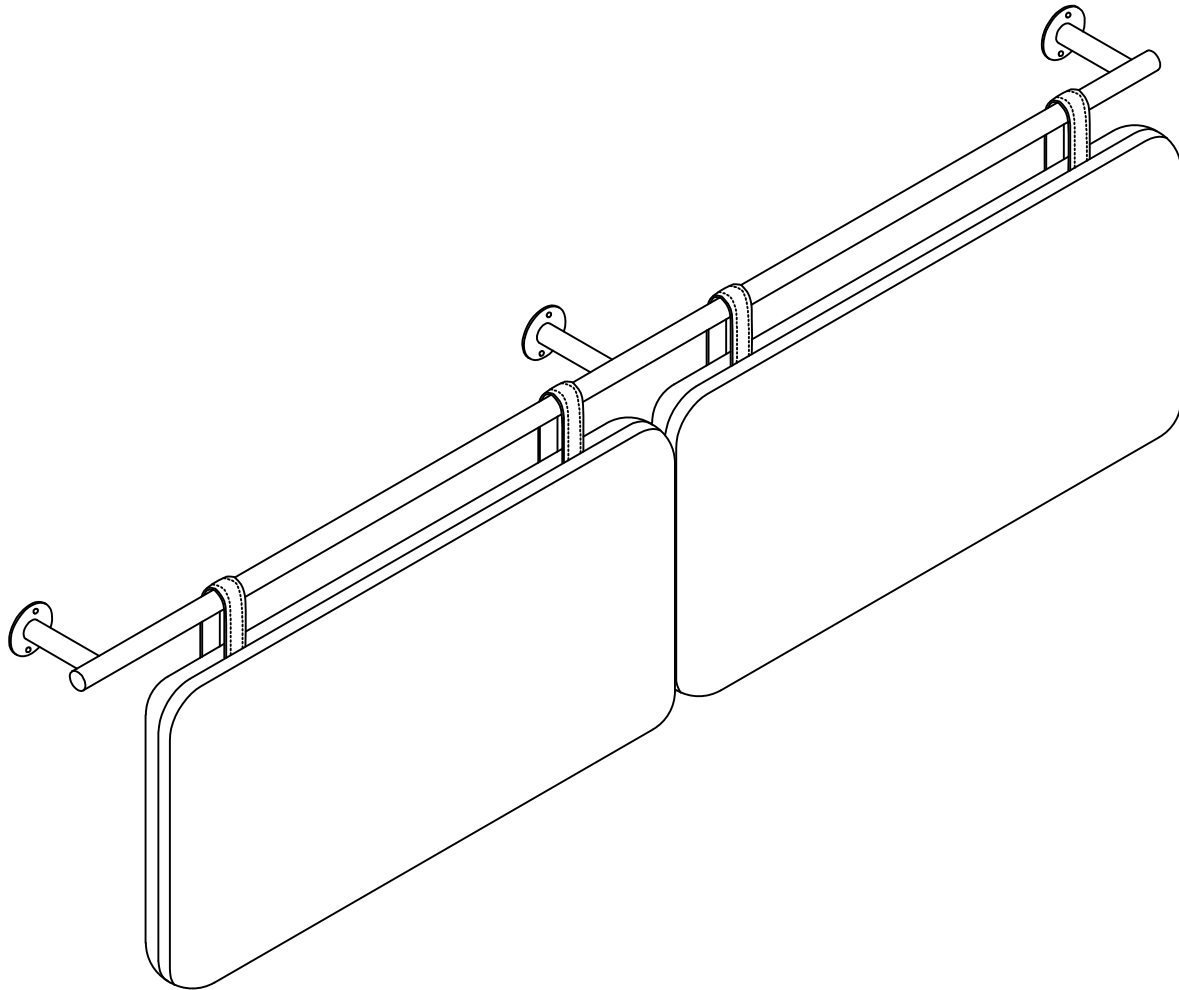

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

A	Headboard	x2
B	Wall Frame	x1

Provided hardware:

1	 Pvc Wall Plug	x6
2	 Wood Screw M4 x 32mm (Black)	x6

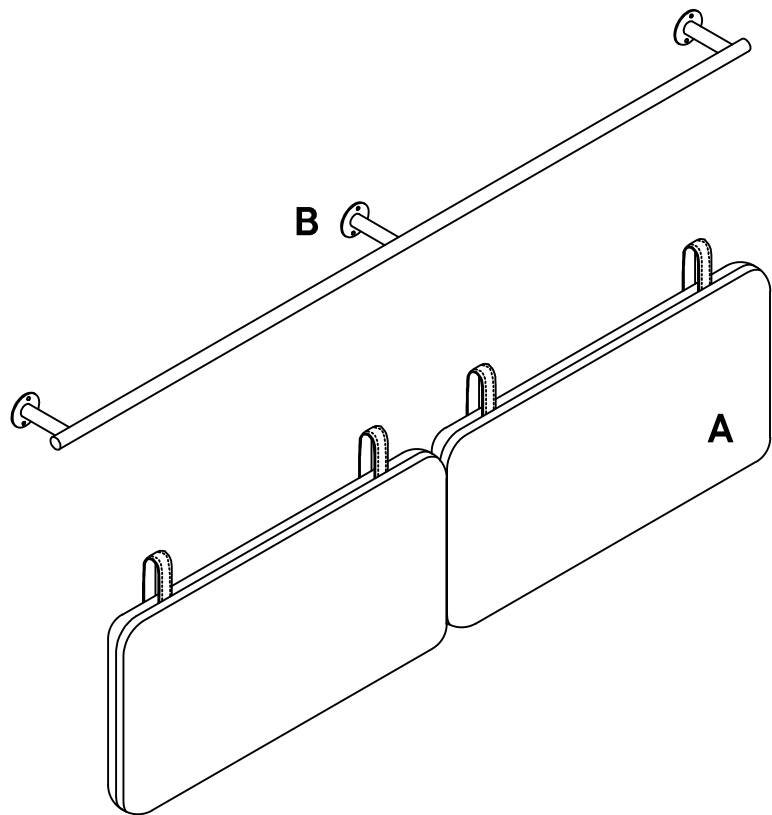

What you need:



Phillips Head Screwdriver

You may also need:

+ Power Drill
+ Level

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1


COMPONENT

B Wall Frame x1

HARDWARE

1 Pvc Wall Plug x6


2 Wood Screw M4 x 32mm (Black) x6

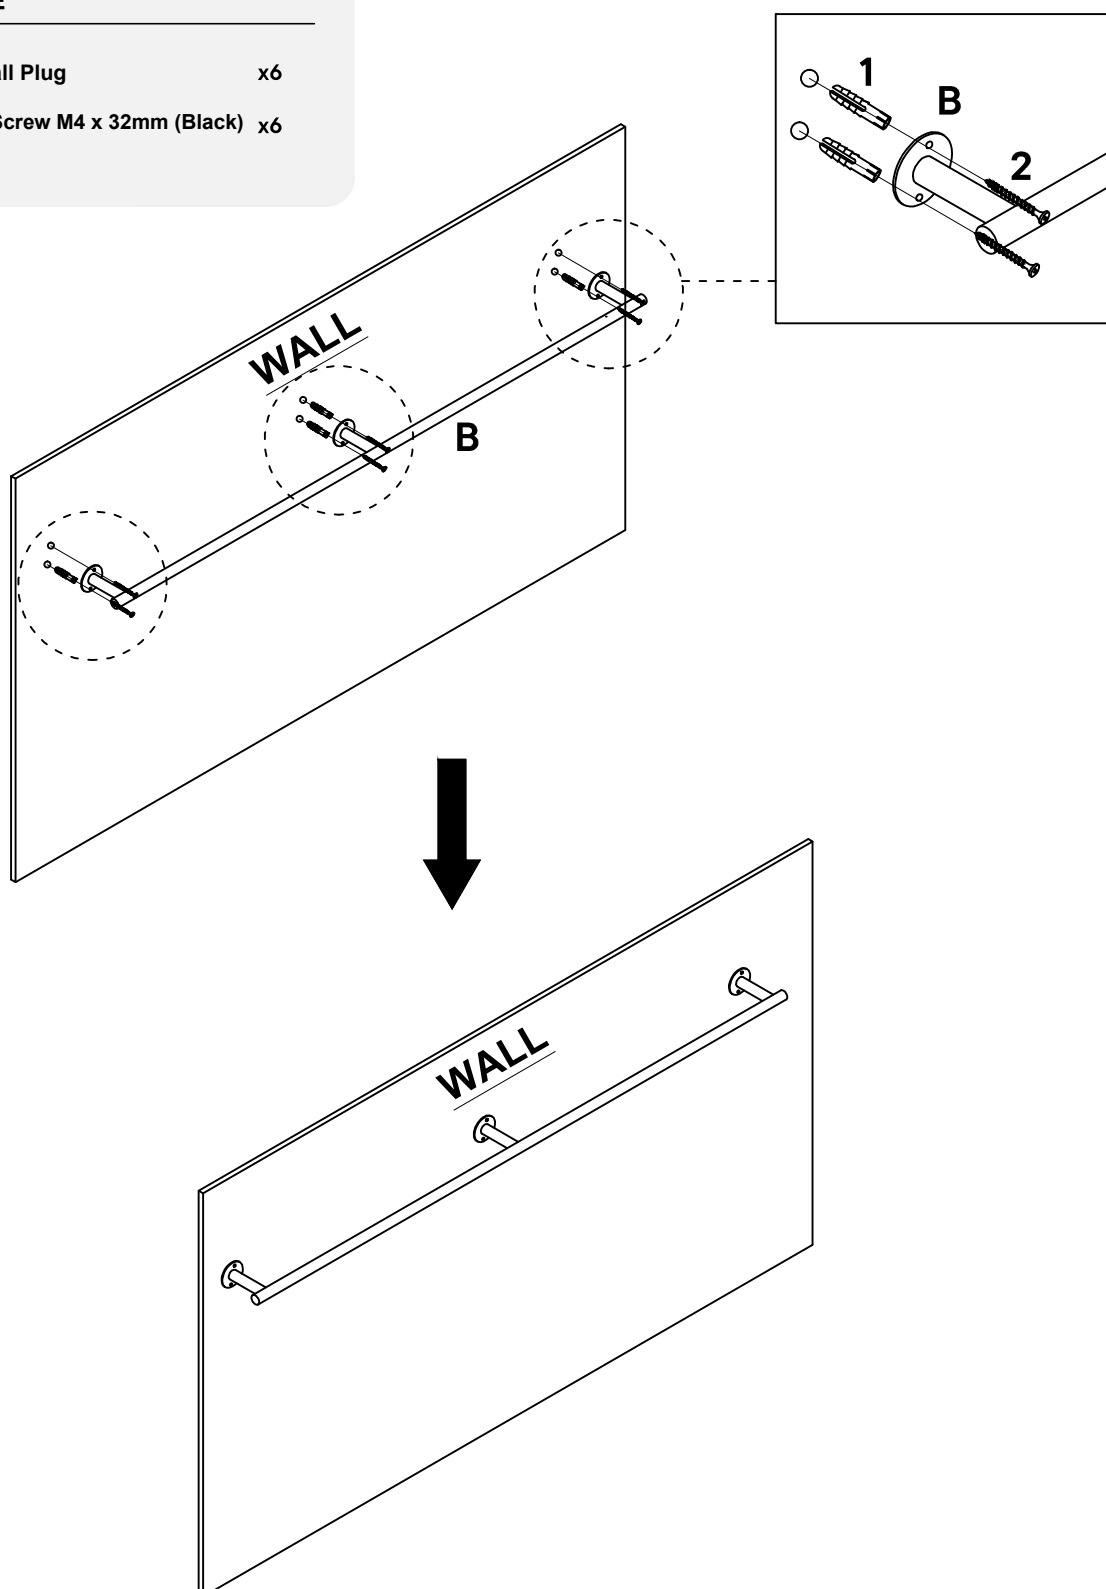


Step 3

COMPONENT

- | | | |
|----------|------------|----|
| A | Headboard | x2 |
| B | Wall Frame | x1 |

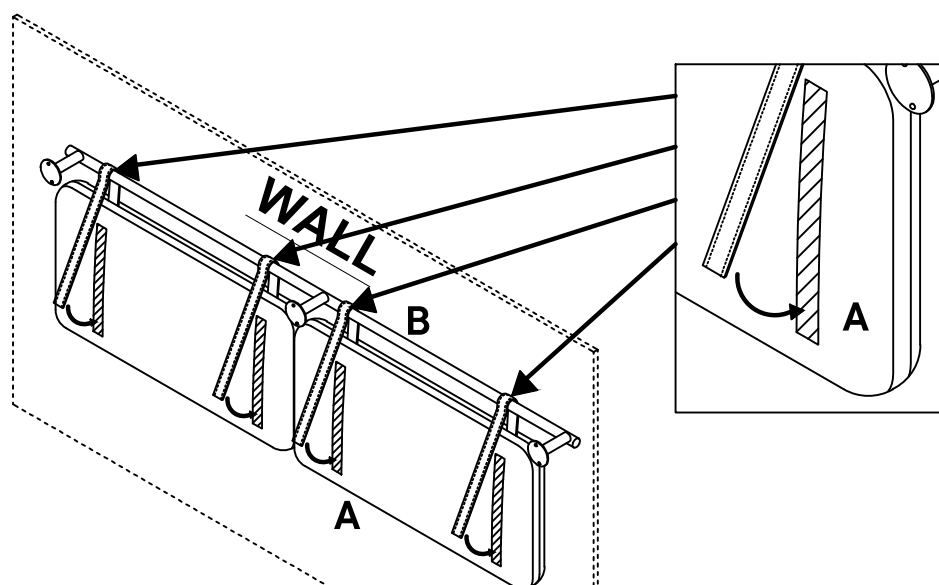

BACK VIEW

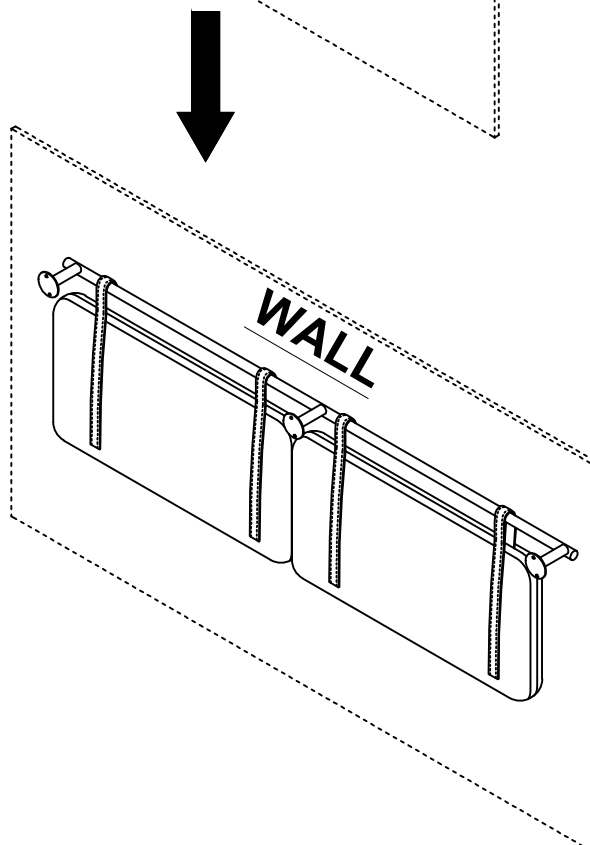

Great job!

Headboard assembly is complete

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

