


ASSEMBLY INSTRUCTIONS

MOD-6332

V1.12.21.21

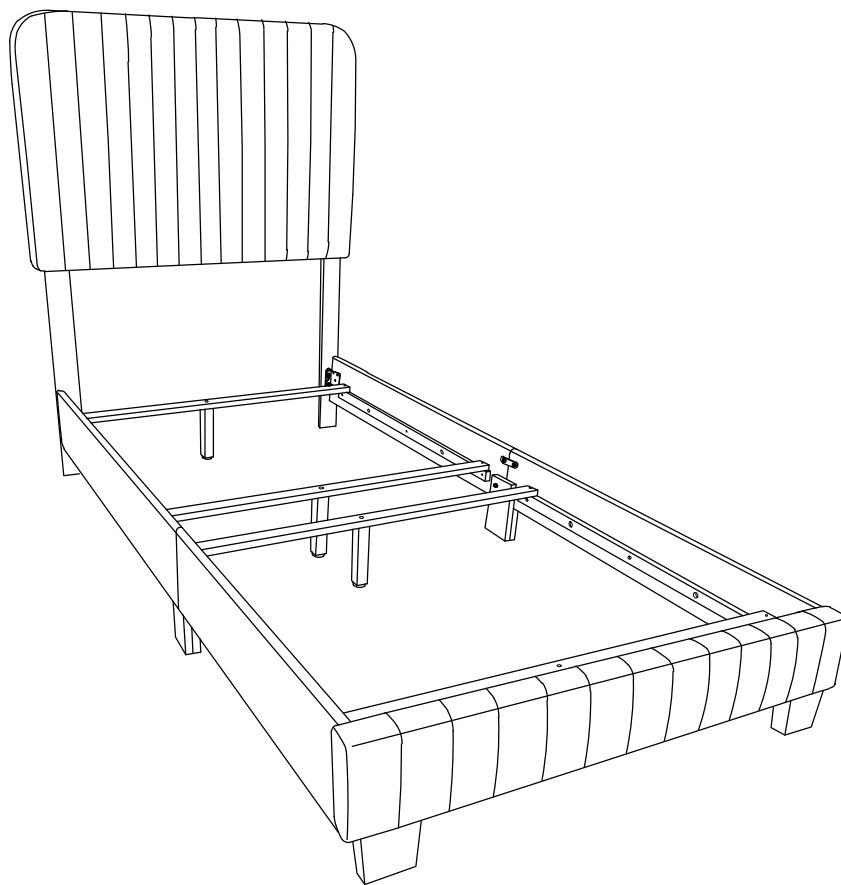

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**



Read through all of the instructions before starting



Approx. 30 minutes assembly time



2 people recommended for assembly



Care instructions are listed in the last step of this manual



Make sure you have all parts and components before discarding any packing materials

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Headboard	x1
2	Footboard	x1
3	Side Rail Right	x2
4	Side Rail Left	x2
5	Support Leg	x4
6	Footboard Leg	x2
7	Side Rail Leg	x2
8	Slats	x4
9	Headboard Left Leg	x1
10	Headboard Right Leg	x1

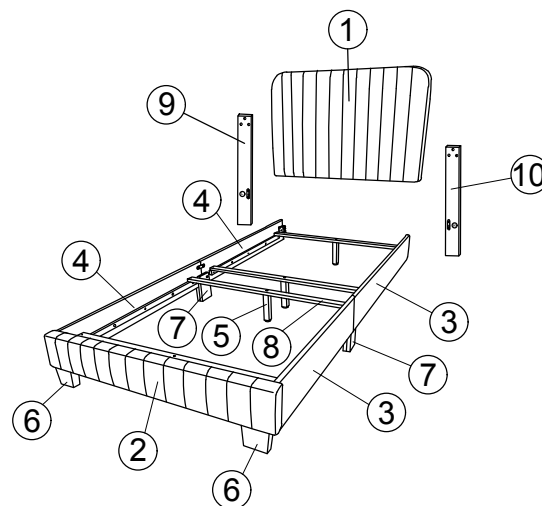

Provided Hardware:

A		Allen Key M4	x1
B		Allen Key M5	x1
C		Side Rail Connect	x2
D		JCBC M6 x 15mm	x4
E		JCBC M6 x 35mm	x8
F		JCBC M6 x 40mm	x6
G		Spring Washer	x14
H		Flat Washer	x10
I		CBS Screw M4 x 32mm	x8
J		JCCA M6 x 50mm	x4
K		JCBB M8 x 16mm	x8



CARING FOR YOUR ITEM

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

Wait!

Missing parts or hardware? Need assistance? Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com


Step 1

COMPONENTS

1	Headboard	x1
9	Headboard Left leg	x1
10	Headboard Right leg	x1

HARDWARE

A	Allen Key M4	x1
F	JCBC M6 x 40mm	x6
G	Spring Washer	x6
H	Flat Washer	x6

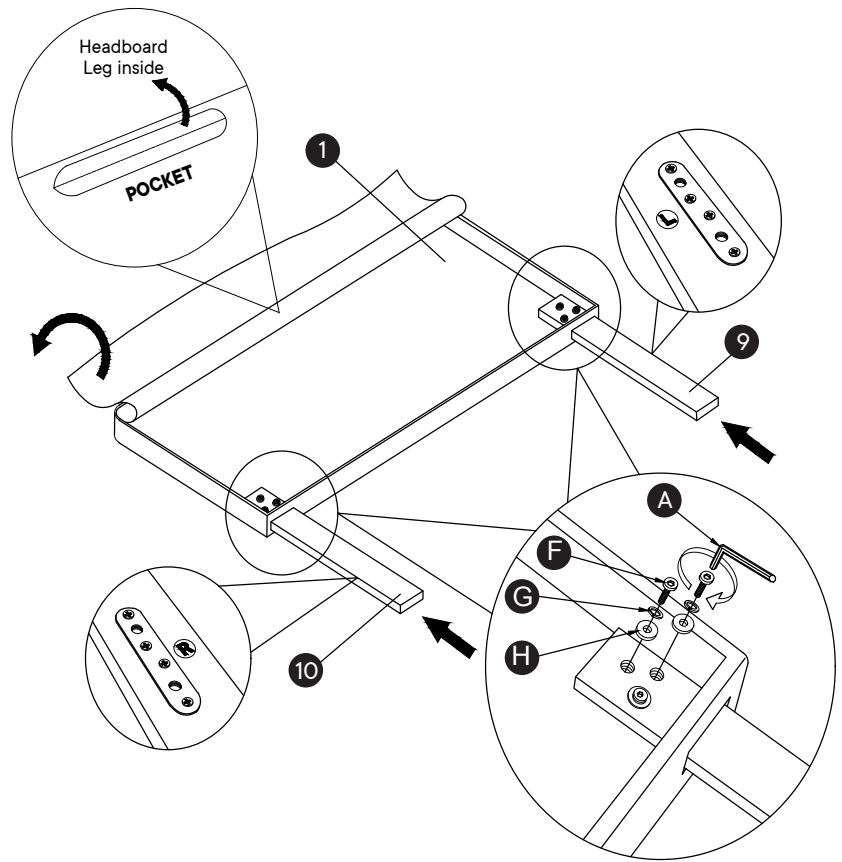


Step 2

COMPONENTS

2	Footboard	x1
6	Footboard Leg	x2

HARDWARE

A	Allen Key M4	x1
J	JCCA M6 X 50mm	x4

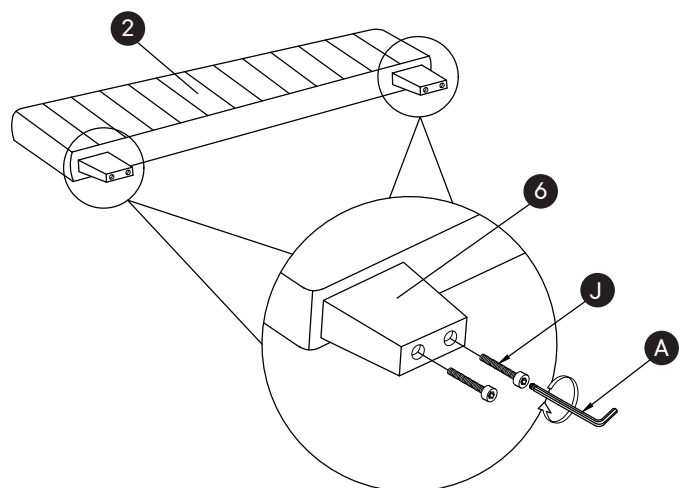


Step 3

COMPONENTS

5	Support Leg	x4
8	Slats	x4

HARDWARE

A	Allen Key M4	x1
E	JCBC M6 x 35mm	x4

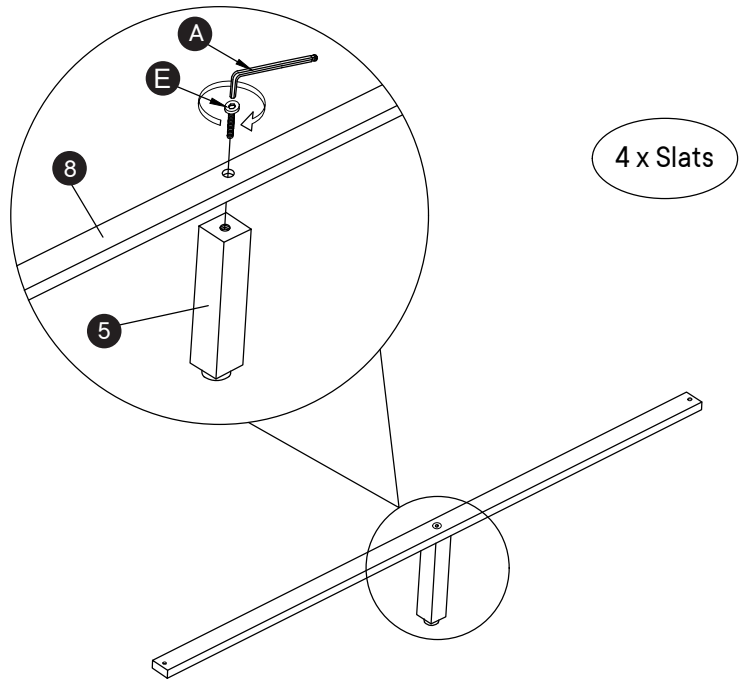


Step 4

COMPONENTS

3	Side Rail Right	x2
4	Side Rail Left	x2
7	Side Rail Leg	x2

HARDWARE

A	Allen Key M4	x1
C	Side Rail Connect	x2
D	JCBC M6 X 15mm	x4
E	JCBC M6 X 35mm	x4
G	Spring Washer	x8
H	Flat Washer	x4

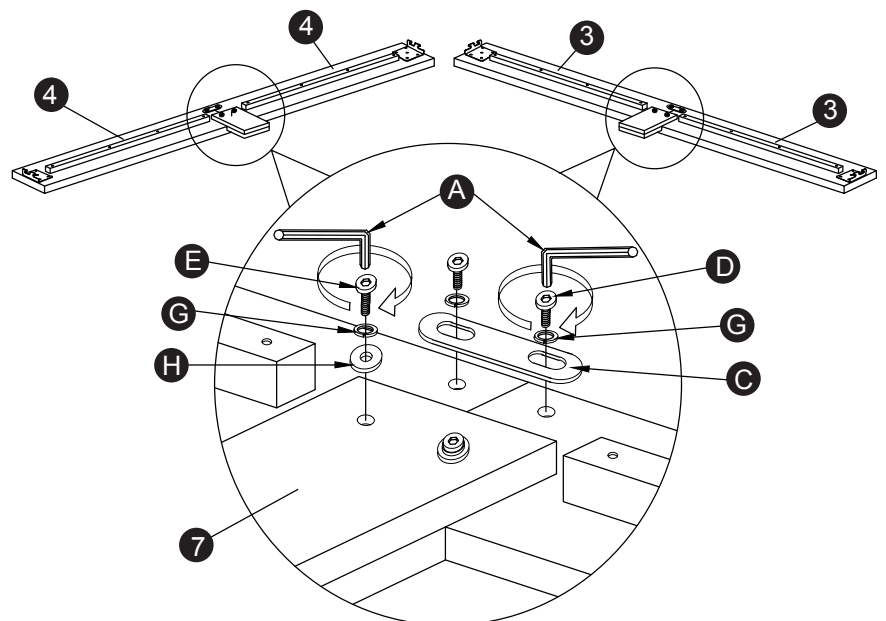


Step 5

COMPONENTS

1	Headboard	x1
2	Footboard	x1
3	Side Rail Right	x2
4	Side Rail Left	x2

HARDWARE

B	Allen Key M5	x1
K	JCBB M8 x 16mm	x8

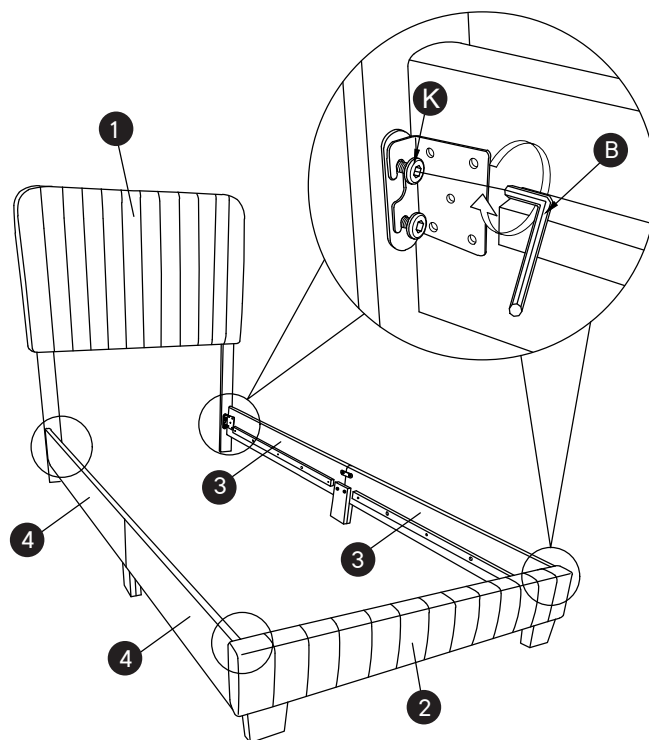


Step 6

COMPONENTS

8	Slats	x4
---	-------	----

HARDWARE

I	CBS Screw M4 x 32mm	x8
---	---------------------	----

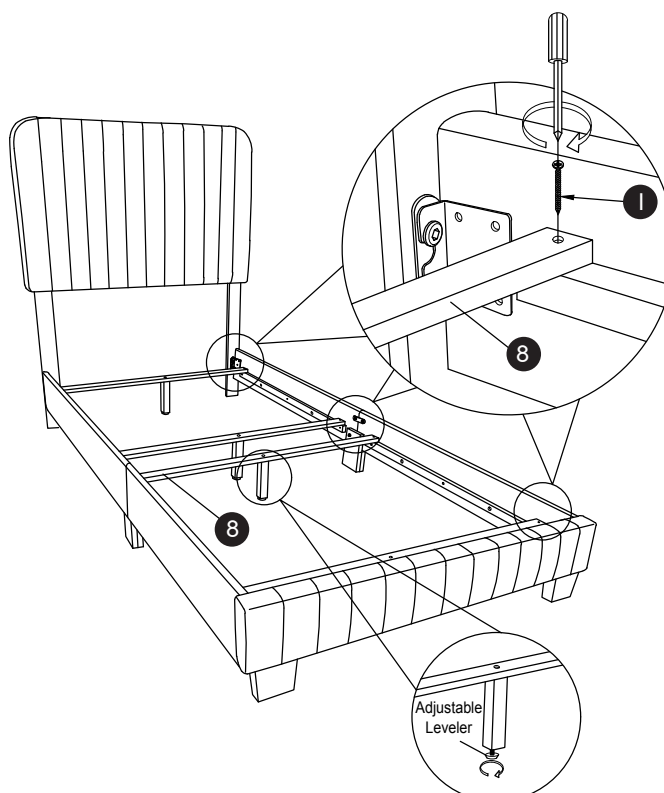

Great job!


Headboard and bed-frame assembly is complete .

♥ CARING FOR YOUR ITEM

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

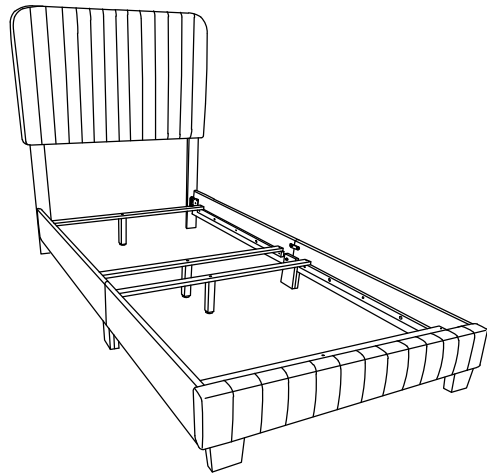

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.