


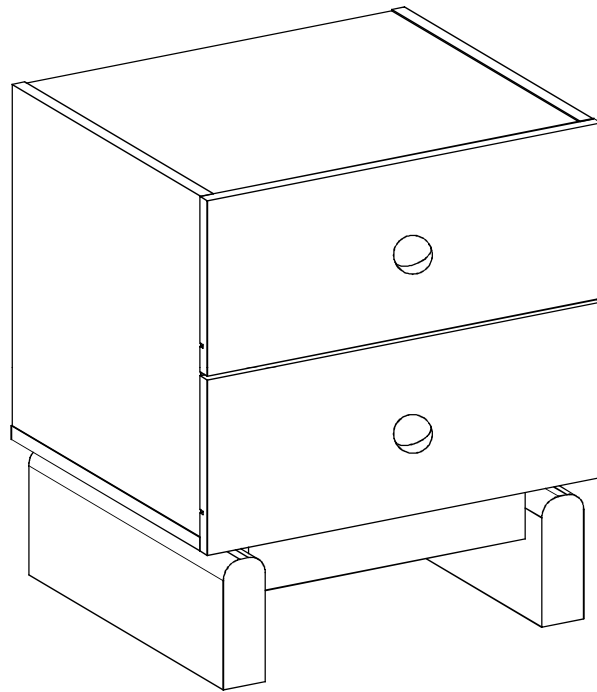

ASSEMBLY INSTRUCTIONS

Nightstand

MOD-7238 / V0.07.04.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.



Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:


A		Cam Lock Ø15mm	x24
B		Cam Bolt Ø7.5 x 32mm	x28
C		Cam Sticker (Oak)	x8
D		Plastic Dowel M6 x 30mm	x46
E		Screw 6 x 8mm	x8
F		Screw 6 x 13mm	x8
G		Screw 10 x 33.5mm	x14
H		Drawer Rail	x2
I		Cam Lock Ø12mm	x4
J		Handle	x2
K		Screw 4 x 22mm	x2
L		Screw 10 x 25mm	x4
M		Cam Sticker (White)	x20
N		Screw 4 x 19mm	x8
O		Backply Stopper	x8
P		Sticker Foam	x4

WHAT YOU NEED:




Phillips Head Screwdriver

All parts are numbered with a sticker according to this list.

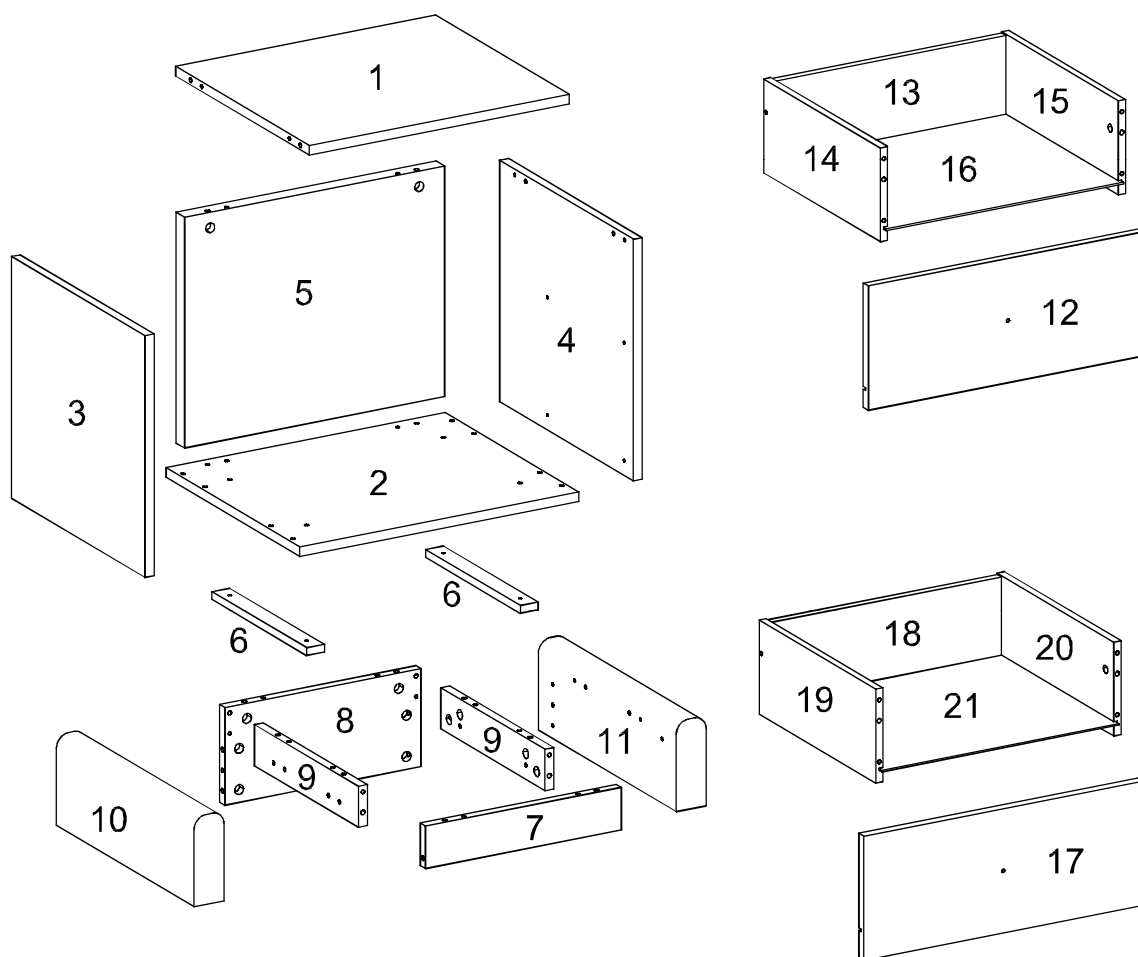


1	Top Board	x1	8	Rear Support	x1	15	Top Right Drawer	x1
2	Bottom board	x1	9	Side Support	x2	16	Upper Bottom Drawer	x1
3	Left Board	x1	10	Left Leg	x1	17	Bottom Front Drawer	x1
4	Right Board	x1	11	Right Leg	x1	18	Bottom Rear Drawer	x1
5	Rear Board	x1	12	Top Front Drawer	x1	19	Bottom Left Drawer	x1
6	Bottom Support	x2	13	Top Rear Drawer	x1	20	Bottom Right Drawer	x1
7	Front Support	x1	14	Top Left Drawer	x1	21	Lower Bottom Drawer	x1

1.1 Insert and screw Cam Bolt (B) into Top Board (1) as shown.
Insert Plastic Dowel (D) into Top Board (1) as shown.

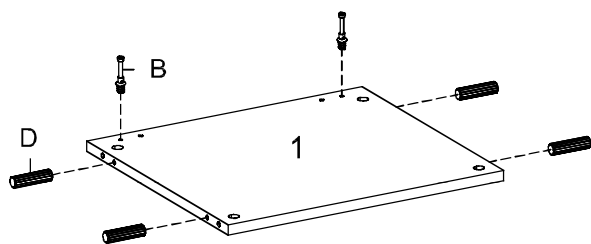

1.2 Insert and screw Cam Bolt (B) into Bottom Board (2) as shown.

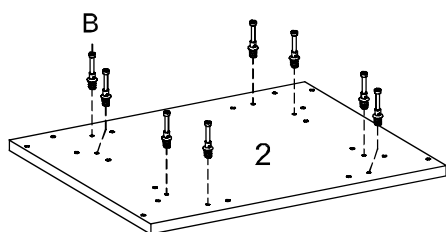

HARDWARE

- B** Cam Bolt Ø7.5 × 32mm x10
- D** Plastic Dowel M6 x 30mm x4

COMPONENTS


- 1** Top Board x1
- 2** Bottom Board x1

TOOLS



- 1** Phillips Head Screwdriver x1

STEP 02

2.1 Insert and screw Cam Bolt (B) into Left Board (3).
Install Drawer Rail (H) to Left Board (3) using screw (E).
Insert Plastic Dowel (D) into Left Board (3) as shown.

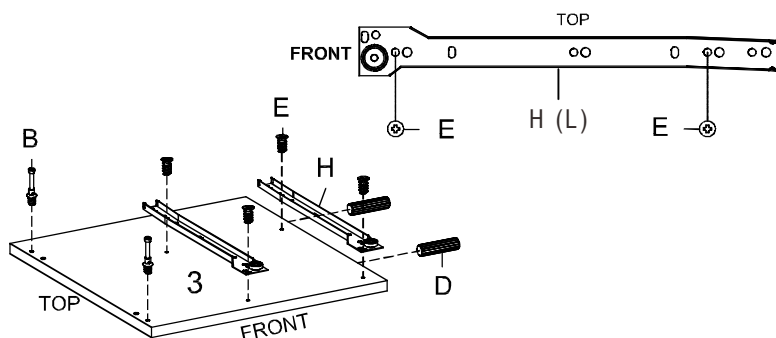

2.2 Insert and screw Cam Bolt (B) into Right Board (4).
Install Drawer Rail (H) to Right Board (4) using screw (E).
Insert Plastic Dowel (D) into Right Board (4) as shown.

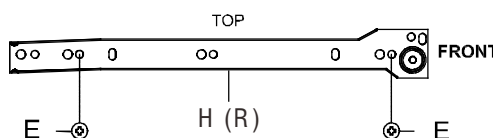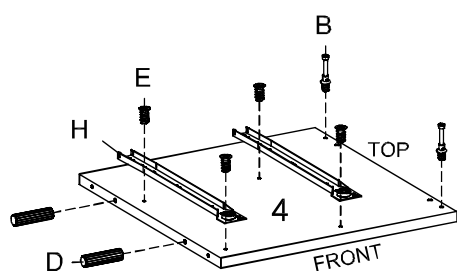

HARDWARE

- B** Cam Bolt Ø7.5 × 32mm x4
- D** Plastic Dowel M6 x 30mm x4
- E** Screw 6 x 8mm x8
- H** Drawer Rail x2


COMPONENTS

- 3** Left Board x1
- 4** Right Board x1


TOOLS

- 1** Phillips Head Screwdriver x1


3.1 Insert Plastic Dowel (D) into Rear Board (5) as shown.

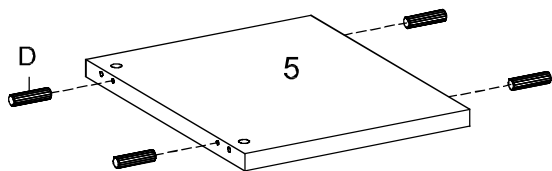


3.2 Insert and screw Cam Bolt (B) into Front Support (7).
Insert Plastic Dowel (D) into Front Support (7) as shown.

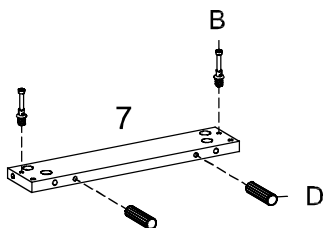

3.3 Insert and screw Cam Bolt (B) into Rear Support (8).
Insert Plastic Dowel (D) into Rear Support (8) as shown.

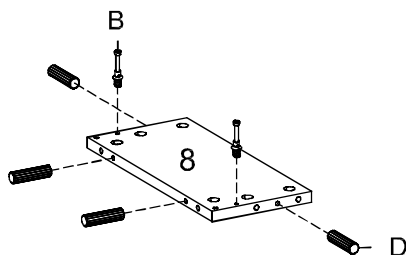


3.4 Insert Plastic Dowel (D) into Side Support (9) as shown. Repeat to other piece

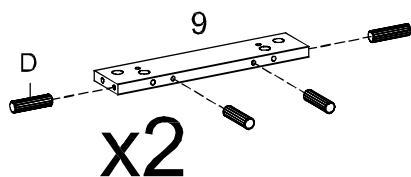

3.5 Insert and screw Cam Bolt (B) into Left Leg (10) and Right Leg (11).
Insert Plastic Dowel (D) into Left Leg (10) and Right Leg (11).

Paste Sticker Foam (P) to the bottom area of the Left Leg (10) and Right Leg (11) as shown.

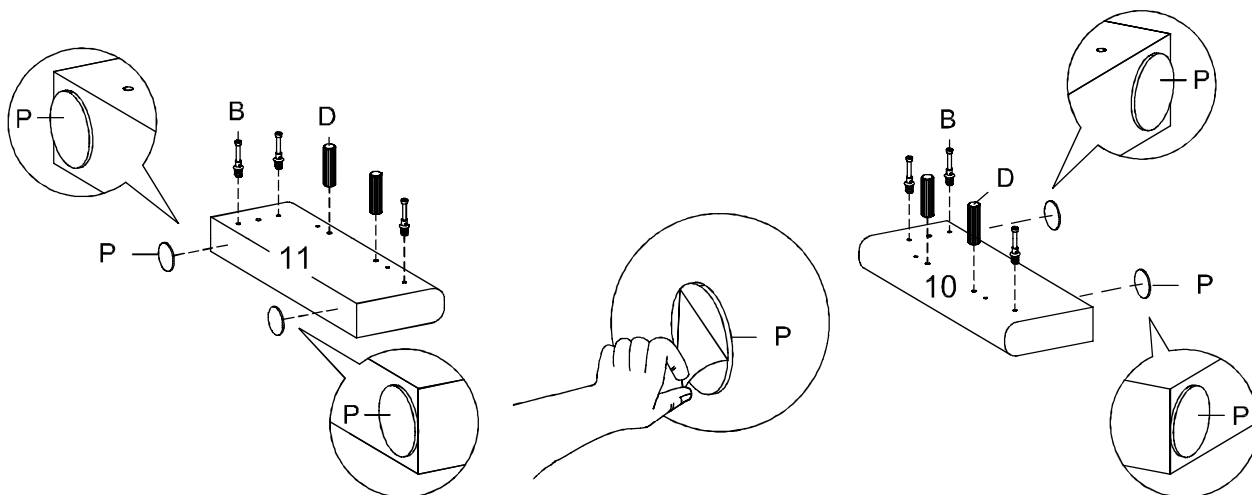

HARDWARE

B Cam Bolt Ø7.5 × 32mm	x10
D Plastic Dowel M6 x 30mm	x22
P Sticker Foam	x4

COMPONENTS

5 Rear Board	x1
7 Front Support	x1
8 Rear Support	x1
9 Side Support	x2
10 Left Leg	x1
11 Right Leg	x1


TOOLS

1 Phillips Head Screwdriver	x1
------------------------------------	----

4.1 Attach Top Board (1) to Rear Board (5) as shown.

4.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.

4.3 Paste Cam Sticker (C) to the Cam Lock (A).

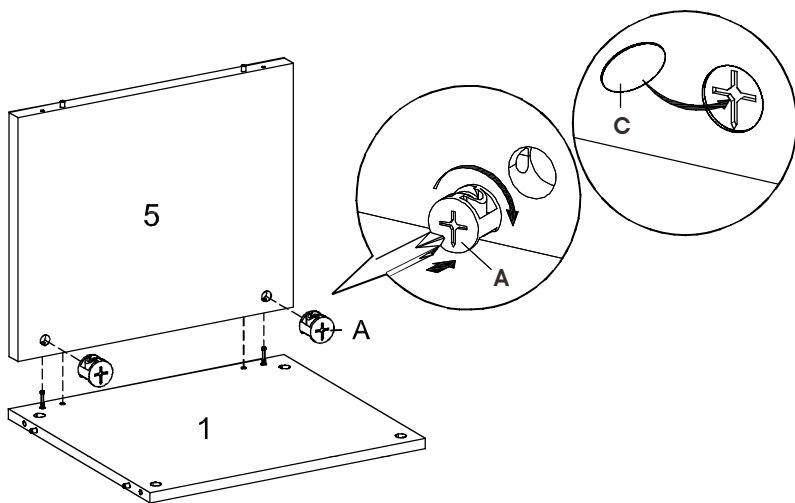

HARDWARE

- A** Cam Lock Ø15mm x2
- C** Cam Sticker (Oak) x2

COMPONENTS

- 1** Top Board x1
- 5** Rear Board x1

TOOLS


- 1** Phillips Head Screwdriver x1

STEP 05

5.1 Attach Left Board (3) and Right Board (4) to Assembled unit.

5.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.

5.3 Paste Cam Sticker (C) to the Cam Lock (A).

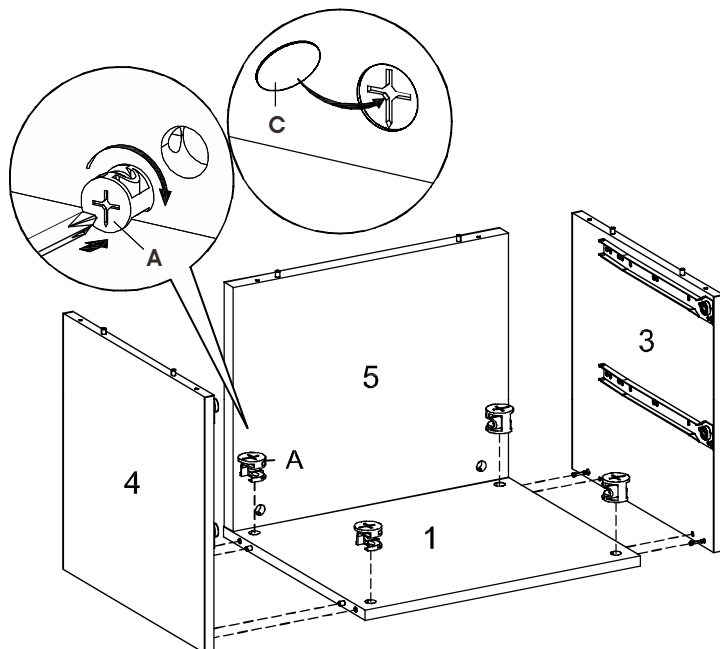

HARDWARE

- A** Cam Lock Ø15mm x4
- C** Cam Sticker (Oak) x4


COMPONENTS

- 1** Top Board x1
- 3** Left Board x1
- 4** Right Board x1

TOOLS

- 1** Phillips Head Screwdriver x1

6.1 Attach Bottom Board (2) to assembled unit using screw (G).

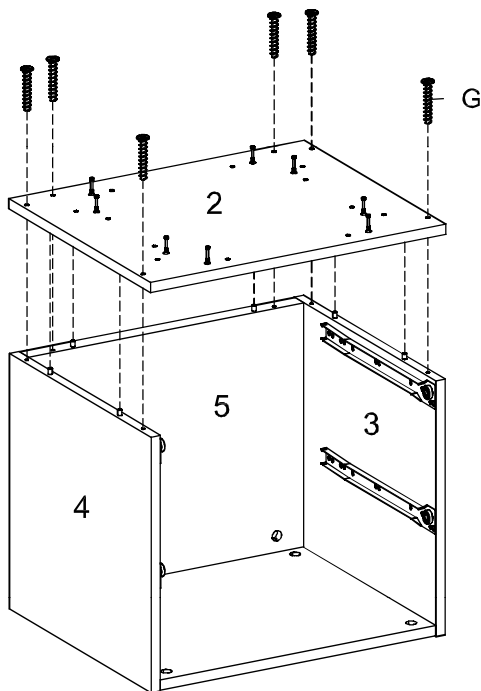

HARDWARE

G Screw 10 x 33.5mm x6

COMPONENTS

2 Bottom Board x1

3 Left Board x1

4 Right Board x1


5 Rear Board x1

TOOLS

1 Phillips Head Screwdriver x1

STEP 07

7.1 Attach two Bottom Support (6) to Bottom Board (2) using screw (L) as shown.

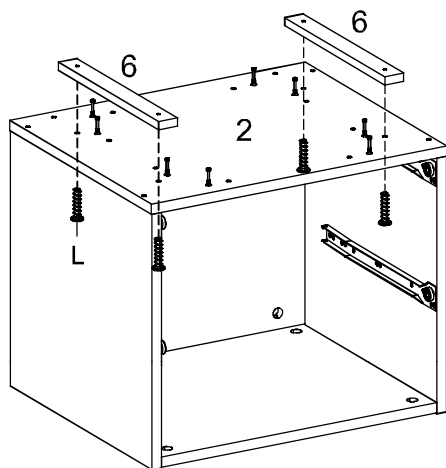

HARDWARE

L Screw 10 x 25mm x4

COMPONENTS

2 Bottom Board x1

6 Bottom Support x2


TOOLS

1 Phillips Head Screwdriver x1

8.1 Attach Front Support (7) and Rear Support (8) to two Side Support (9) as shown.

8.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.

8.3 Paste Cam Sticker (M) to the Cam Lock (A).

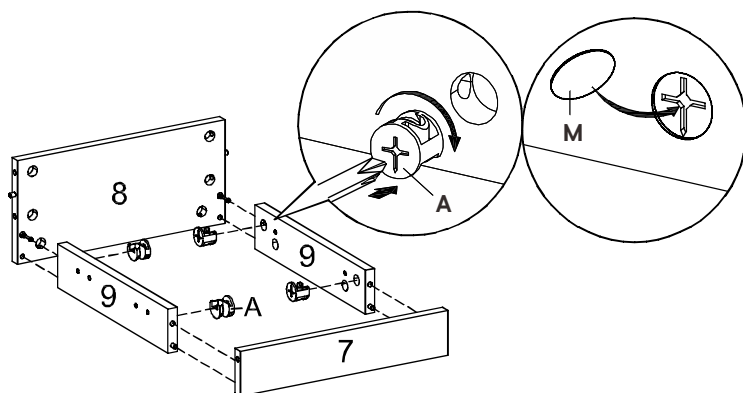

HARDWARE

- A** Cam Lock Ø15mm x4
- M** Cam Sticker (White) x4

COMPONENTS

- 7** Front Support x1
- 8** Rear Support x1
- 9** Side Support x2

TOOLS

- 1** Phillips Head Screwdriver x1

STEP 09

HARDWARE

- A** Cam Lock Ø15mm x8
- M** Cam Sticker (White) x8

COMPONENTS

- 2** Bottom Board x1
- 7** Front Support x1
- 8** Rear Support x1
- 9** Side Support x2


TOOLS

- 1** Phillips Head Screwdriver x1

9.1 Attach Bottom assembled to assembled unit as shown.

9.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.


9.3 Paste Cam Sticker (M) to the Cam Lock (A).

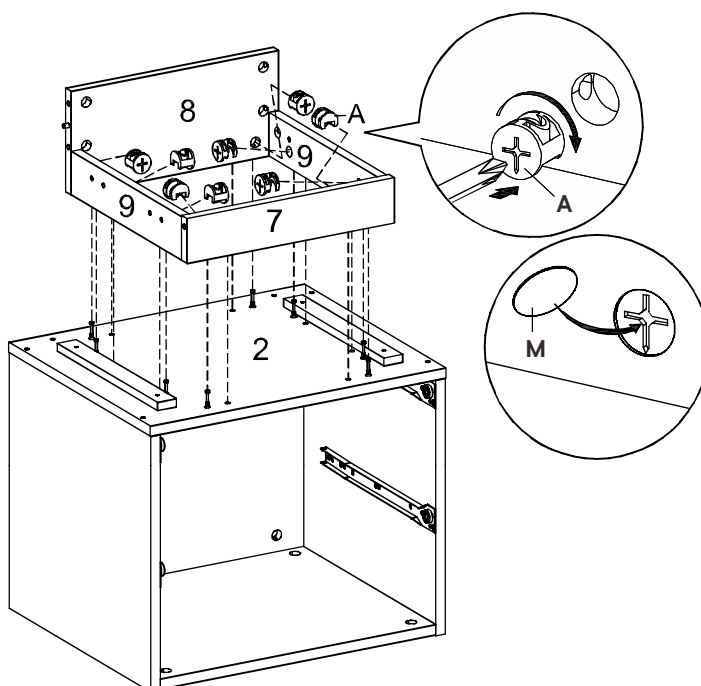

10.1 Attach Left Leg (10) and Right Leg (11) to assembled unit using screw (G).

10.2 Insert Cam Lock (A) to the assembled unit, then tighten it using Phillips Head Screwdriver.

10.3 Paste Cam Sticker (M) to the Cam Lock (A).

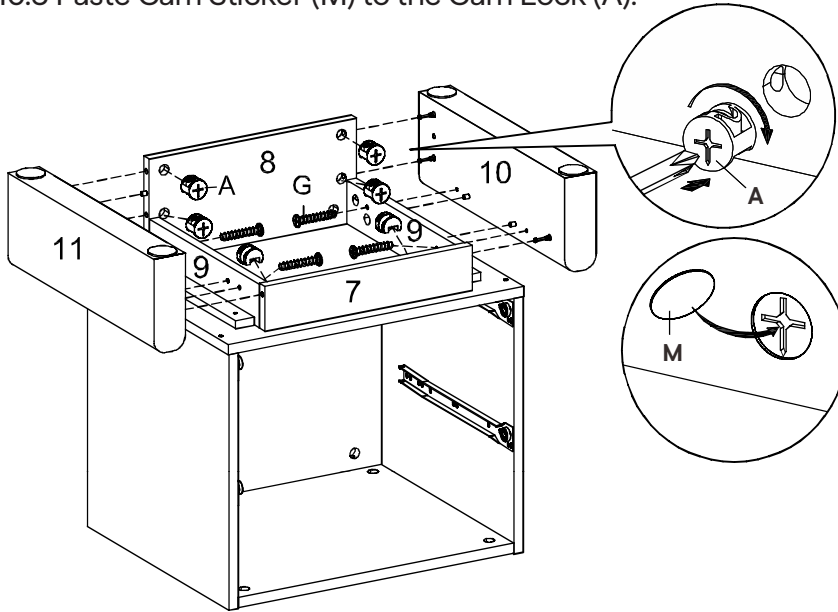

HARDWARE

A Cam Lock Ø15mm	x6
G Screw 10 x 33.5mm	x4
M Cam Sticker (White)	x6

COMPONENTS


7 Front Support	x1
8 Rear Support	x1
9 Side Support	x2
10 Left Leg	x1
11 Right Leg	x1

TOOLS


1 Phillips Head Screwdriver	x1
------------------------------------	----

STEP 11

11.1 Insert and screw Cam Bolt (B) into Top Front Drawer (12). Install Handle to Top Front Drawer (12) using screw (K).

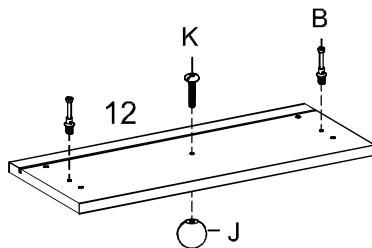

11.2 Insert Plastic Dowel (D) into Top Rear Drawer (13), Top Left Drawer (14) and Top Right Drawer (15) as shown.

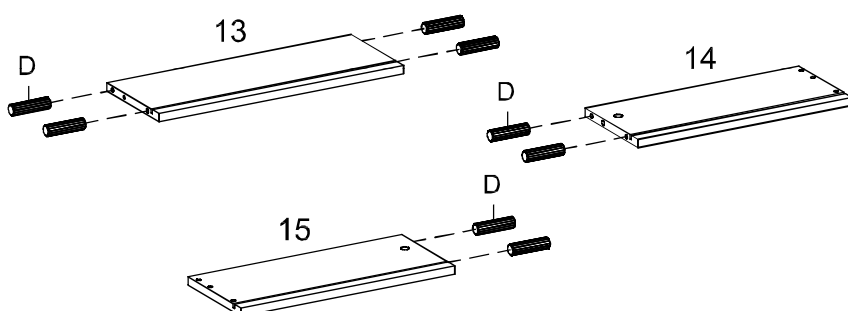

HARDWARE

B Cam Bolt Ø7.5 x 32mm	x2
D Plastic Dowel M6 x 30mm	x8
J Handle	x1
K Screw 6 x 22mm	x1


COMPONENTS

12 Top Front Drawer	x1
13 Top Rear Drawer	x1
14 Top Left Drawer	x1
15 Top Right Drawer	x1


TOOLS

1 Phillips Head Screwdriver	x1
------------------------------------	----

12.1 Insert and screw Cam Bolt (B) into Bottom Front Drawer (17).
Install Handle to Bottom Front Drawer (17) using screw (K).

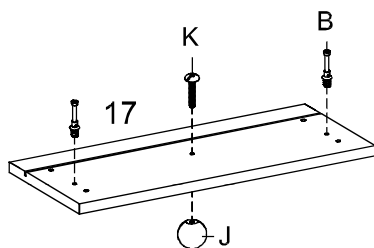

12.2 Insert Plastic Dowel (D) into Bottom Rear Drawer (18), Bottom Left Drawer (19) and Bottom Right Drawer (20) as shown.

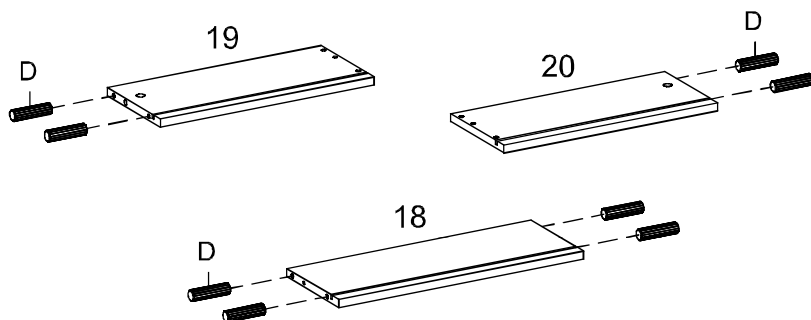

HARDWARE

B	Cam Bolt Ø7.5 × 32mm	x2
D	Plastic Dowel M6 x 30mm	x8
J	Handle	x1
K	Screw 6 x 22mm	x1

COMPONENTS

17	Bottom Front Drawer	x1
18	Bottom Rear Drawer	x1
19	Bottom Left Drawer	x1
20	Bottom Right Drawer	x1

TOOLS

1	Phillips Head Screwdriver	x1
----------	----------------------------------	-----------

STEP 13

HARDWARE

G	Screw 10 x 33.5mm	x4
----------	--------------------------	-----------


COMPONENTS

13	Top Rear Drawer	x1
14	Top Left Drawer	x1
15	Top Right Drawer	x1
18	Bottom Rear Drawer	x1
19	Bottom Left Drawer	x1
20	Bottom Right Drawer	x1


TOOLS

1	Phillips Head Screwdriver	x1
----------	----------------------------------	-----------

13.1 Attach Top Left Drawer (14) and Top Right Drawer (15) to Top Rear Drawer (13) using screw (G).

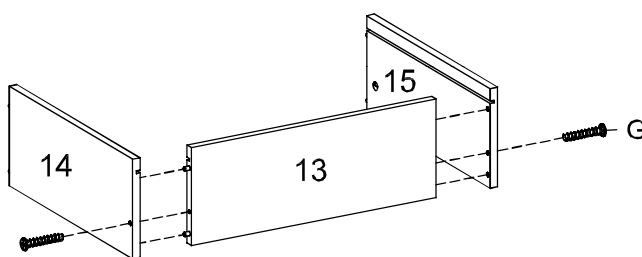

13.2 Attach Bottom Left Drawer (19) and Bottom Right Drawer (20) to Bottom Rear Drawer (18) using screw (G).

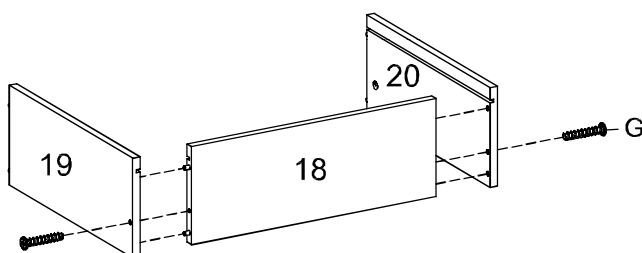

HARDWARE

- Ⓒ Cam Sticker (Oak) x2
 Ⓘ Cam Lock Ø12mm x2

COMPONENTS

- ⓫ Top Front Drawer x1
 ⓬ Top Rear Drawer x1
 ⓭ Top Left Drawer x1
 ⓮ Top Right Drawer x1
 ⓯ Upper Bottom Drawer x1

TOOLS


- ① Phillips Head Screwdriver x1

14.1 Insert Upper Bottom Drawer (16) to the drawer assembled.

14.2 Attach Top Front Drawer (12) to the drawer assembled.

14.3 Insert Cam Lock (I) to the drawer assembled, then tighten it using Phillips Head Screwdriver.

14.4 Paste Cam Sticker (C) to the Cam Lock (I).

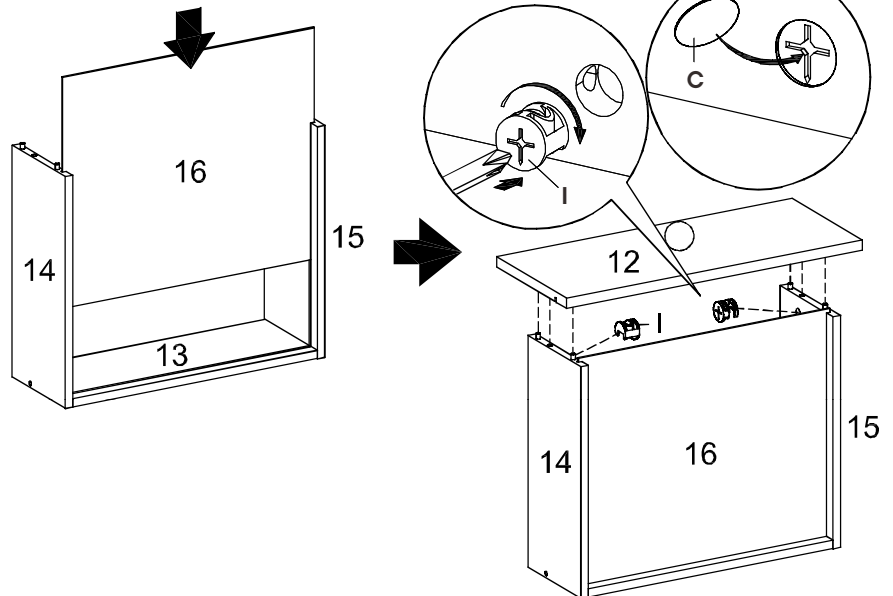

STEP 15

HARDWARE

- Ⓐ Cam Lock Ø12mm x2
 Ⓜ Cam Sticker (White) x2

COMPONENTS

- ⓯ Bottom Front Drawer x1
 ⓰ Bottom Rear Drawer x1
 ⓱ Bottom Left Drawer x1
 ⓲ Bottom Right Drawer x1
 ⓳ Lower Bottom Drawer x1

TOOLS


- ① Phillips Head Screwdriver x1

15.1 Insert Lower Bottom Drawer (21) to the drawer assembled.


15.2 Attach Bottom Front Drawer (17) to the drawer assembled.

15.3 Insert Cam Lock (I) to the drawer assembled, then tighten it using Phillips Head Screwdriver.

15.4 Paste Cam Sticker (M) to the Cam Lock (I).

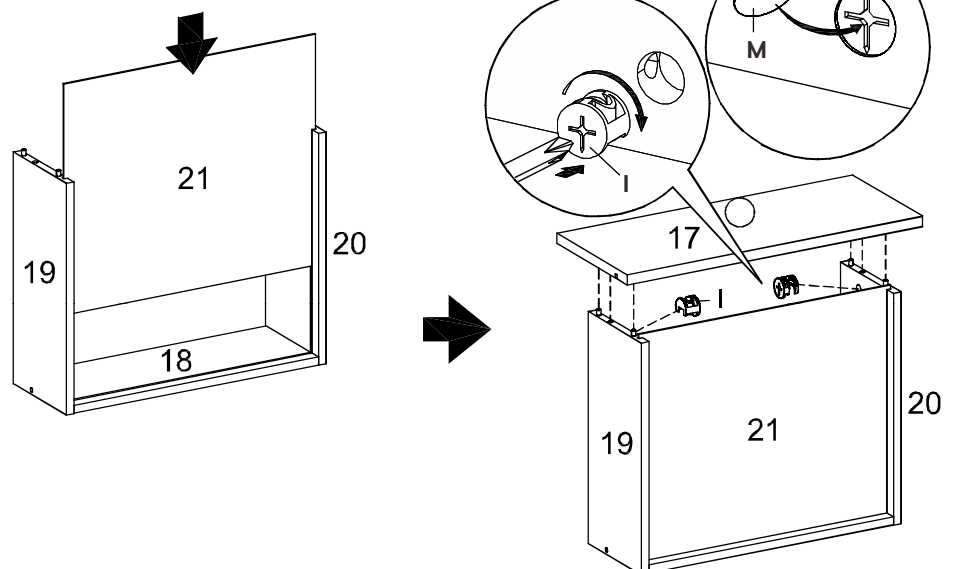

16.1 Install Backply Stopper (O) to the bottom side of the drawers using screw (N).

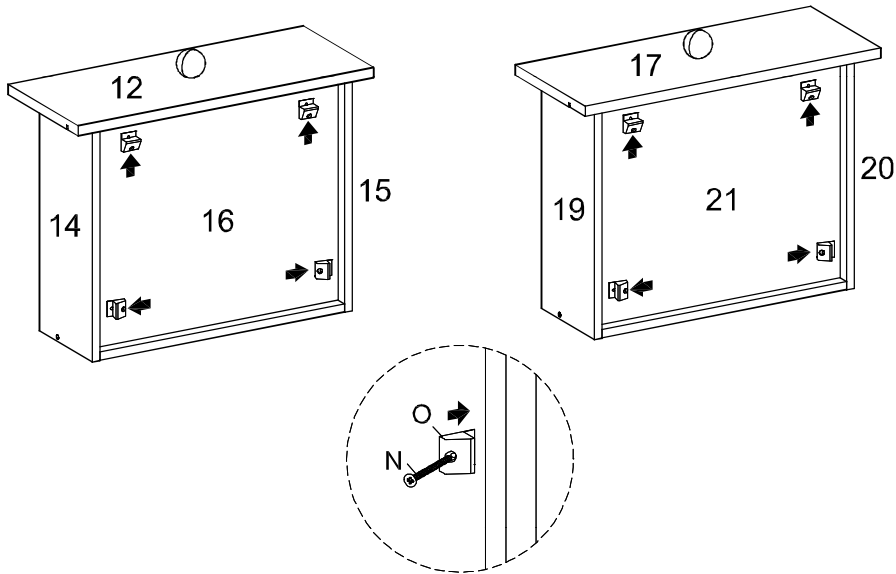

HARDWARE

- (N)** Screw 4 x 19mm x8
- (O)** Backply Stopper x8

COMPONENTS

- (12)** Top Front Drawer x1
- (14)** Top Left Drawer x1
- (15)** Top Right Drawer x1
- (16)** Upper Bottom Drawer x1
- (17)** Bottom Front Drawer x1
- (19)** Bottom Left Drawer x1
- (20)** Bottom Right Drawer x1
- (21)** Lower Bottom Drawer x1

TOOLS

- (1)** Phillips Head Screwdriver x1

STEP 17

HARDWARE

- (F)** Screw 6 x 13mm x8
- (H)** Drawer Rail x2


COMPONENTS

- (14)** Top Left Drawer x1
- (15)** Top Right Drawer x1
- (19)** Bottom Left Drawer x1
- (20)** Bottom Right Drawer x1

TOOLS


- (1)** Phillips Head Screwdriver x1

17.1 Install Drawer Rail (H) on the edge of the Drawer assembled using screw (F).

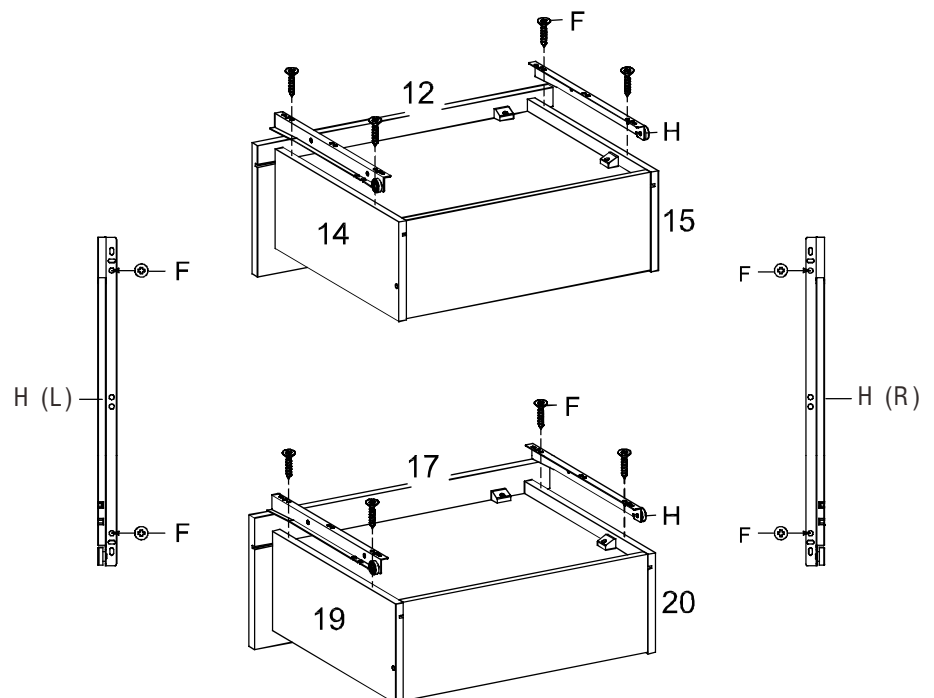

COMPONENTS**12 Top Drawer x1****17 Bottom Drawer x1**

18.1 Insert all the drawers into the assembled unit as shown.

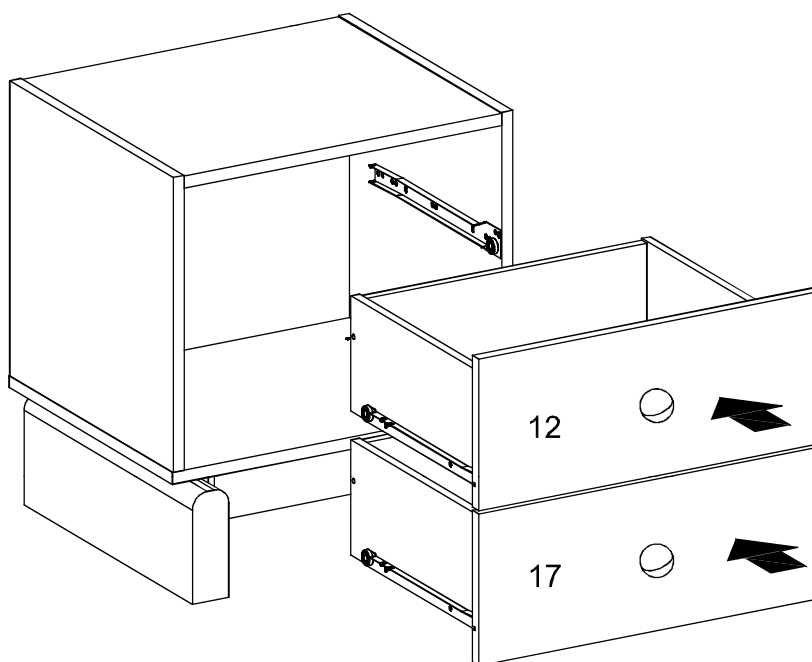


Great job!

Nightstand assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

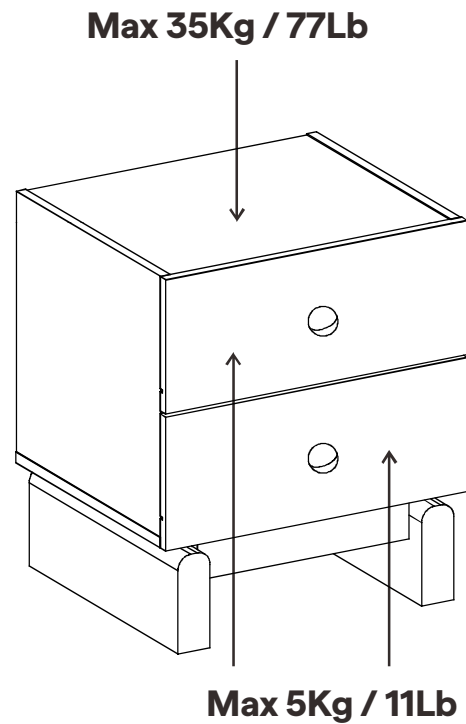

CONNECT WITH US!

Tag us @modway_furniture and #modway for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com