


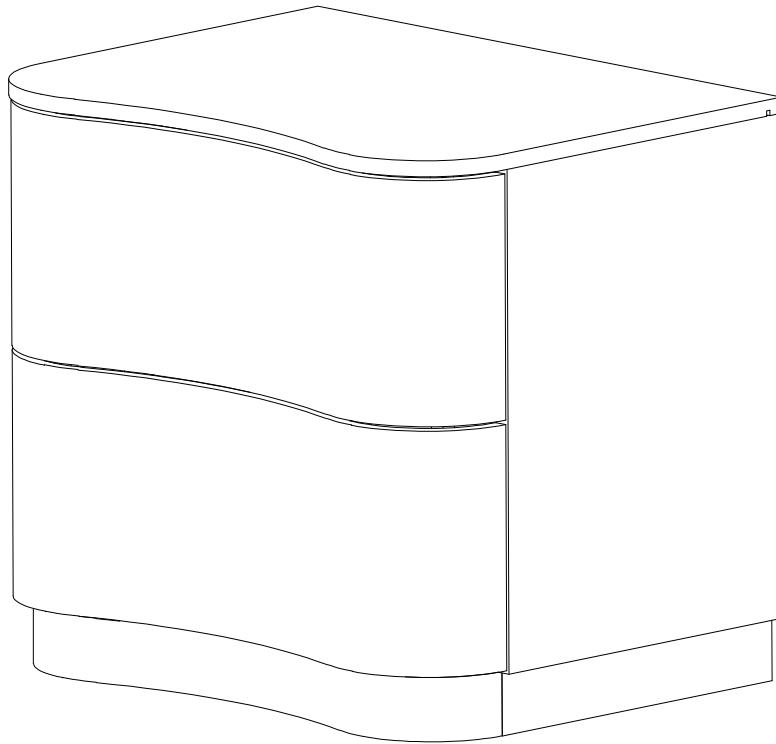

ASSEMBLY INSTRUCTIONS

Nightstand

MOD-7232 / V0.07.04.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome. Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.




Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Screw M3.5 x 15mm	x4
B		Screw M6 x 9mm	x12
C		Screw M6 x 40mm	x16
D		Wood Dowel Ø6 x 20mm	x4
E		Wood Dowel Ø8 x 25mm	x16
F		Cam Bolt 20 x 5 mm	x22
G		Cam Lock 15/12	x14
H		Cam Lock 15/10	x8
J1		Push Open Drawer Slide CR (300mm)	x2
J2		Push Open Drawer Slide CL (300mm)	x2
K		Plastic Leg Stud	x4
L		Allen Key	x1
M		Backply Stopper	x4

WHAT YOU NEED:




Phillips Head Screwdriver



Mallet

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.


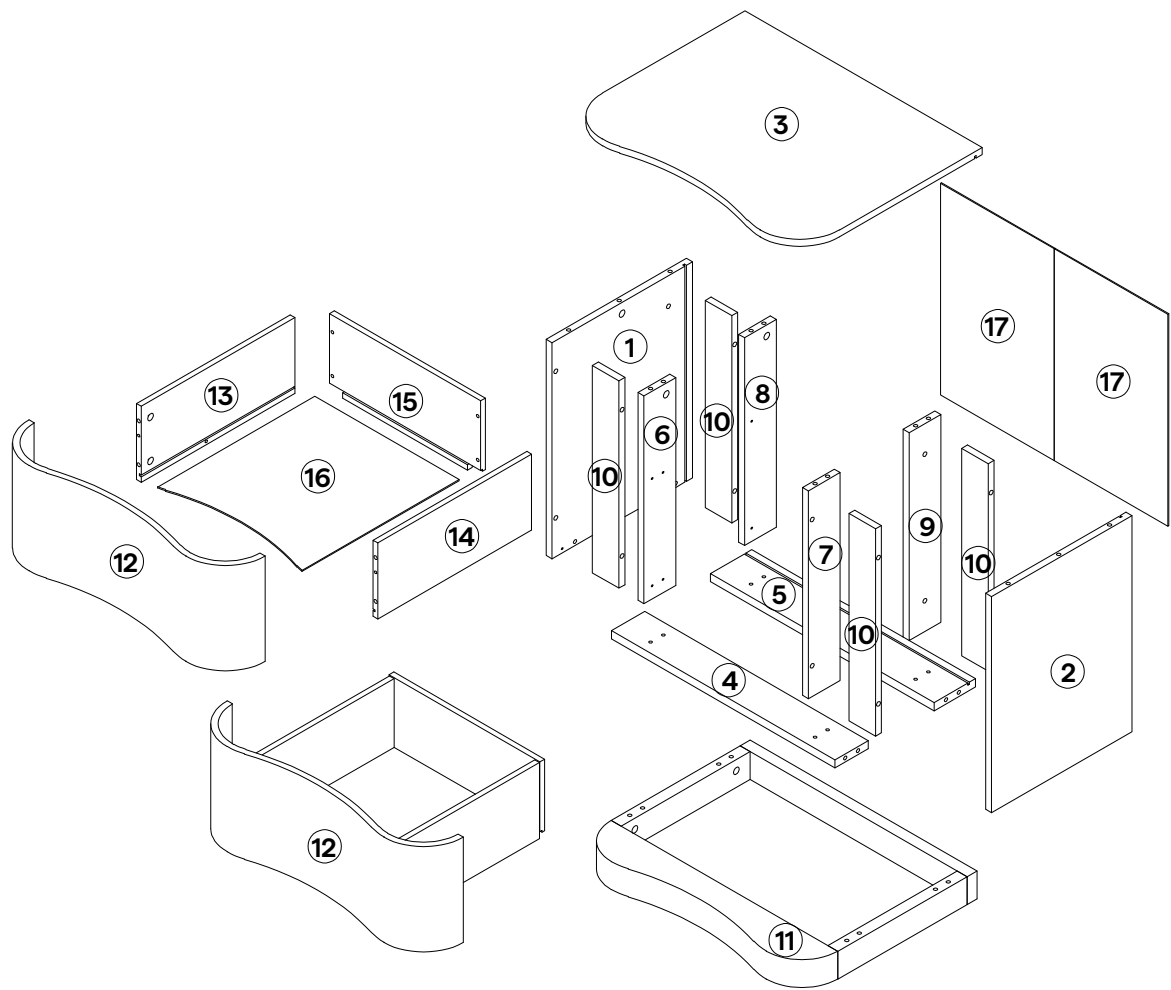


1	Left Side Panel	x1	7	Right Side Rail Panel	x1	13	Left Drawer Side	x2
2	Right Side Panel	x1	8	Left Side Support Panel	x1	14	Right Drawer Side	x2
3	Top Panel	x1	9	Right Side Support Panel	x1	15	Drawer Back	x2
4	Front Rail Panel Bottom	x1	10	Front Panel	x4	16	Drawer Bottom	x2
5	Back Rail Panel Bottom	x1	11	Bottom Frame	x1	17	Back Panel	x2
6	Left Side Rail Panel	x1	12	Drawer Front	x2			

HARDWARE**E** Wood Dowel Ø8 x 25mm x4**F** Cam Bolt 20 x 5 mm x4**COMPONENTS****1** Left Side Panel x1**2** Right Side Panel x1

1.1 Insert **Wood Dowel (E)** into the innermost pre-drilled holes on the top edge of **Left Side Panel (1)** and **Right Side Panel (2)**.


1.2 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the right side of **Left Side Panel (1)** and the left side of **Right Side Panel (2)**.

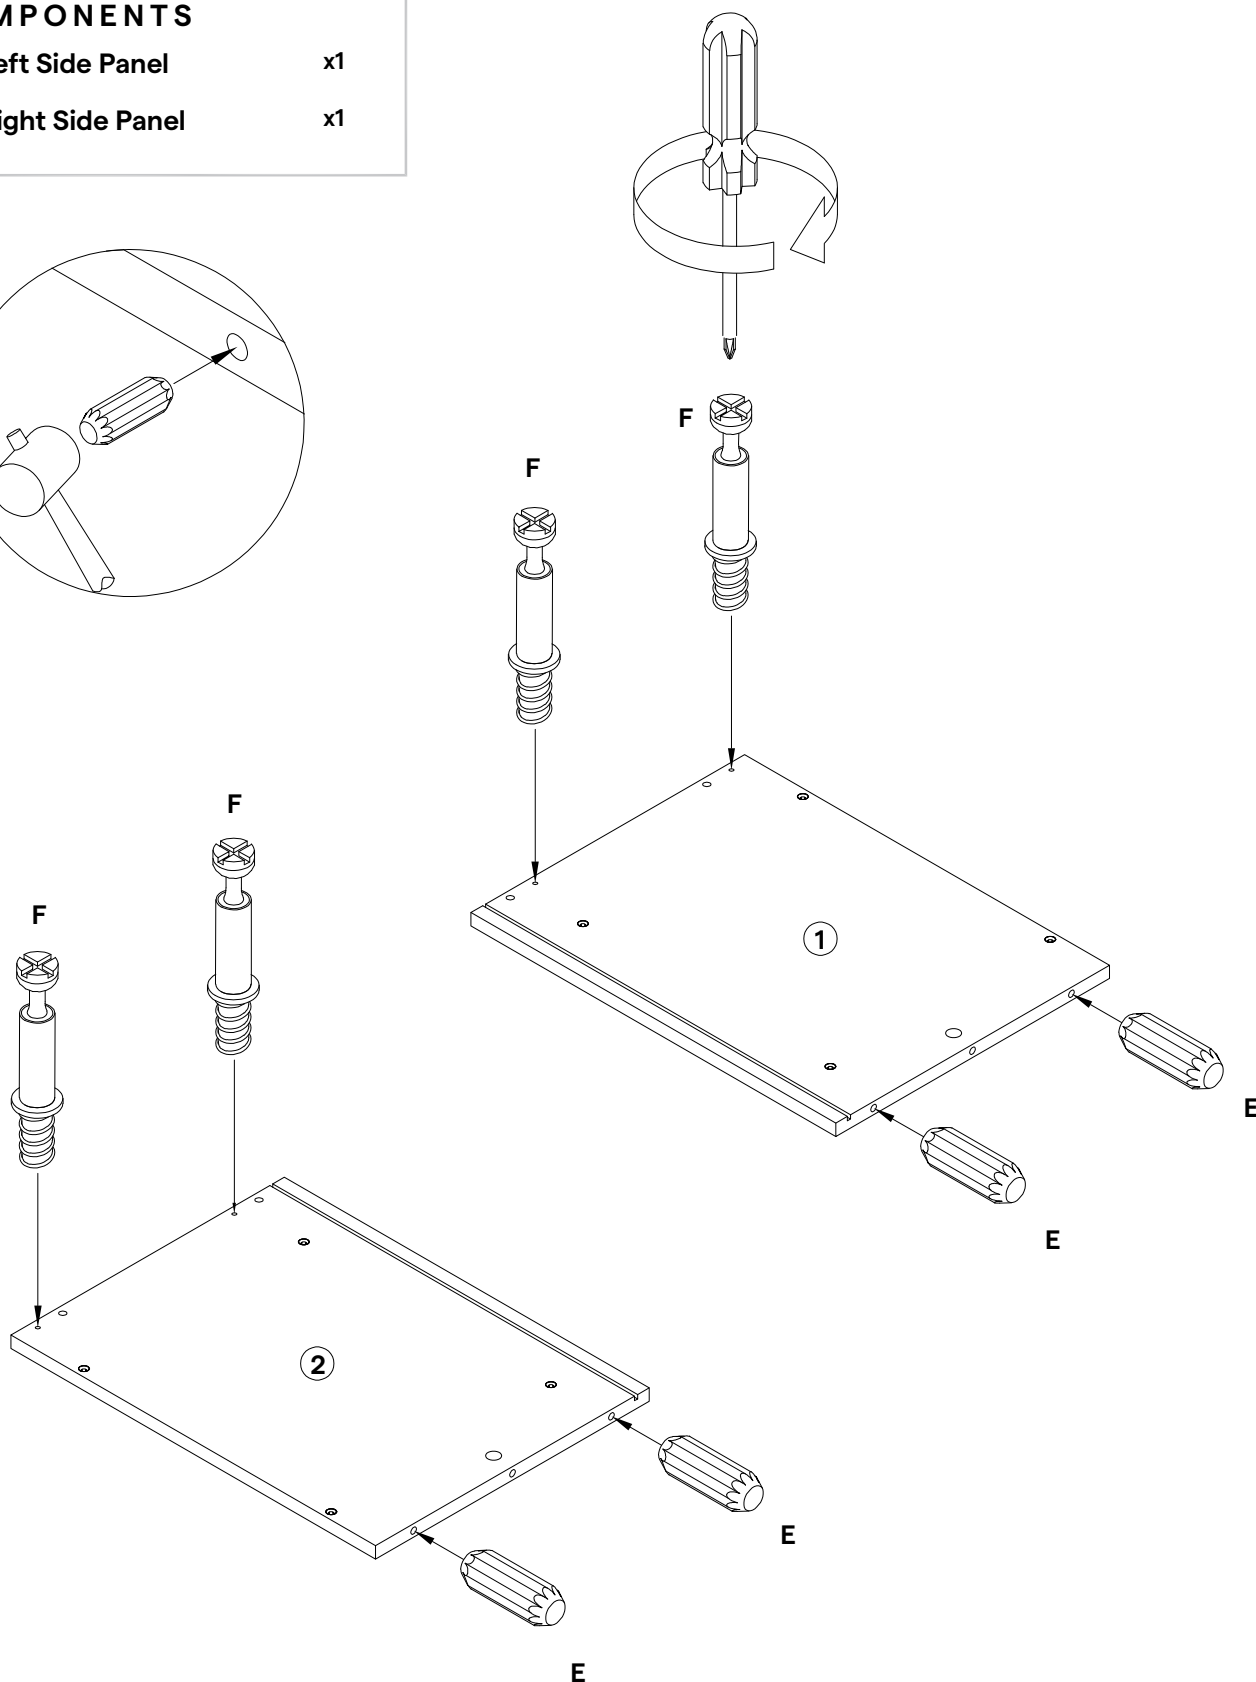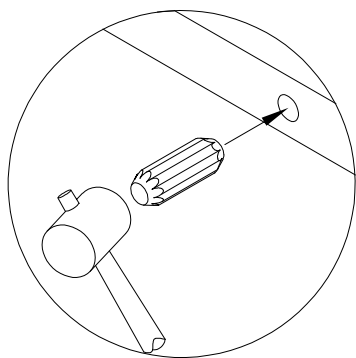

HARDWARE**E** Wood Dowel Ø8 x 25mm x8**F** Cam Bolt 20 x 5mm x4**COMPONENTS****4** Front Rail Panel Bottom x1**5** Back Rail Panel Bottom x1**6** Left Side Rail Panel x1**7** Right Side Rail Panel x1**8** Left Side Support Panel x1**9** Right Side Support Panel x1

2.1 Insert **Wood Dowel (E)** into the innermost pre-drilled holes on the left and right edge of **Front Rail Panel Bottom (4)**, **Back Rail Panel Bottom (5)**, top edge of **Left and Right Side Rail Panel (6 and 7)** and **Left and Right Side Support Panel (8 and 9)**.

2.2 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the bottom side of **Front Rail Panel Bottom (4)** and **Back Rail Panel Bottom (5)**.

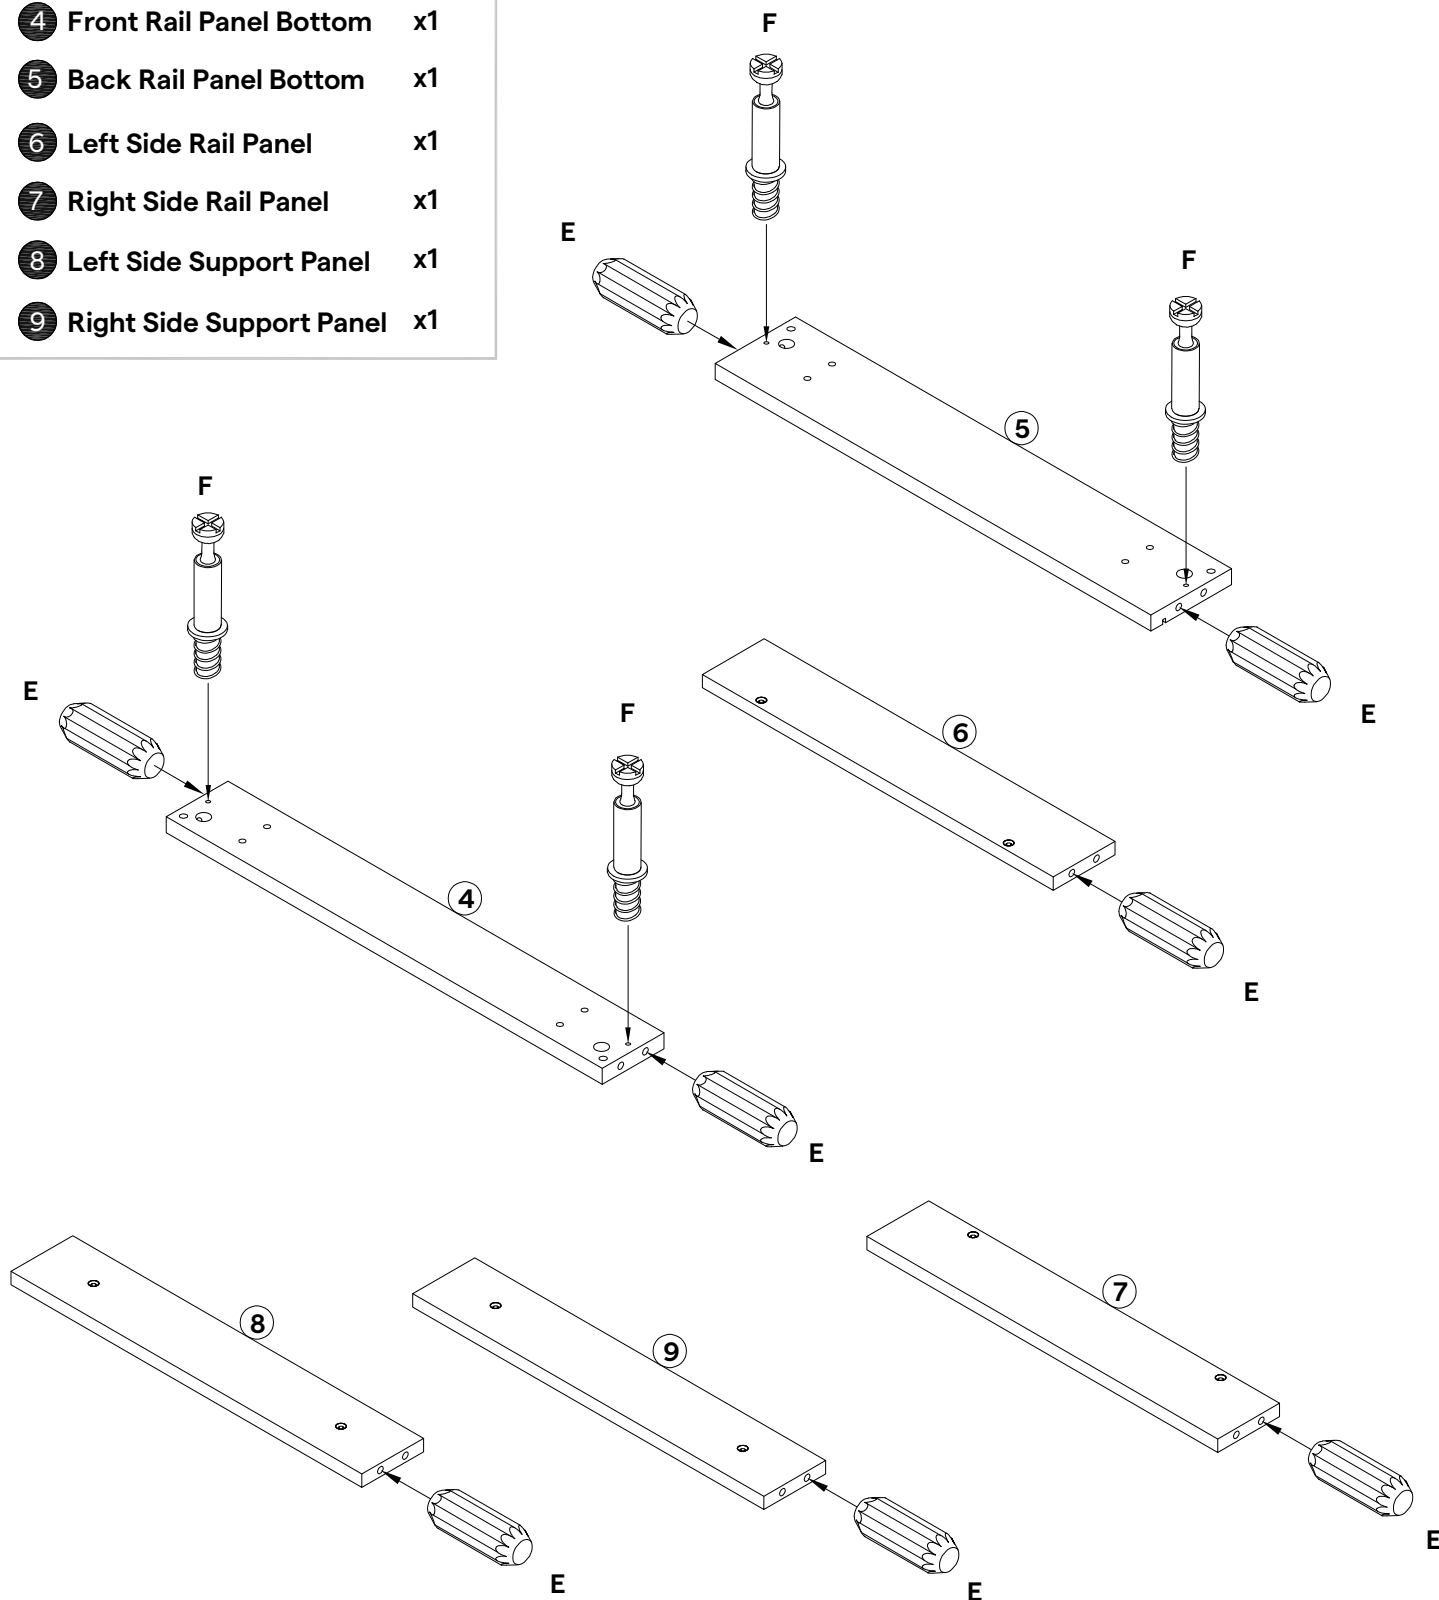

HARDWARE


B	Screw M6 x 9mm	x12
J1	Push Open Drawer Slide CR (300mm)	x2
J2	Push Open Drawer Slide CL (300mm)	x2

COMPONENTS


6	Left Side Rail Panel	x1
7	Right Side Rail Panel	x1
8	Left Side Support Panel	x1
9	Right Side Support Panel	x1

3.1 Attach **Push Open Drawer Slide CL (J2)** to **Left Side Rail Panel (6)** and **Left Side Support Panel (8)** secure with **Screw (B)**.





3.2 Attach **Push Open Drawer Slide CR (J1)** to **Right Side Rail Panel (7)** and **Right Side Support Panel (9)** secure with **Screw (B)**.

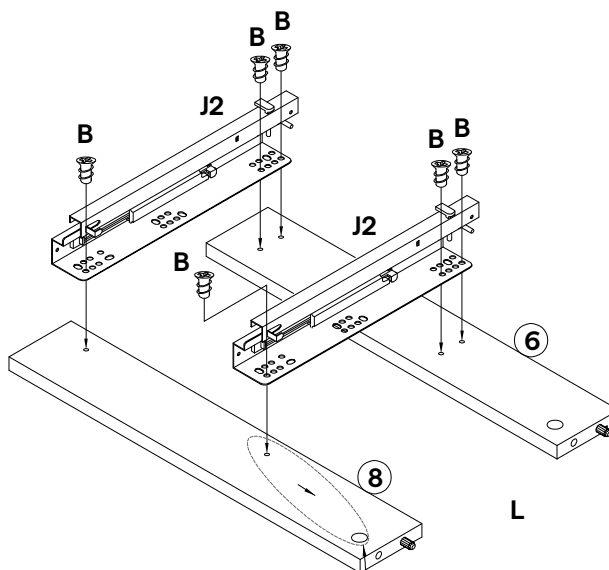

make sure the push open drawer slide holes are facing the direction of the pre-drilled holes of the cam lock.

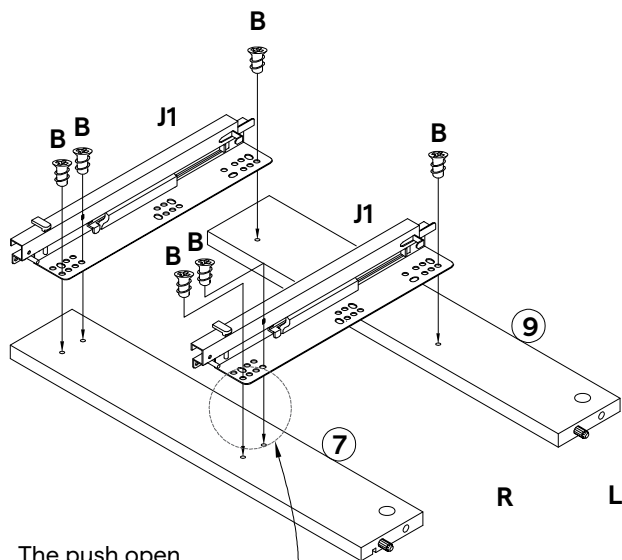


The push open drawer slide with the button lock side should be secured on the panel side with 2 holes.

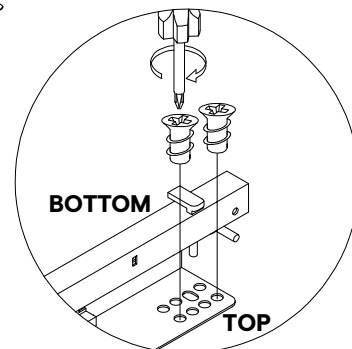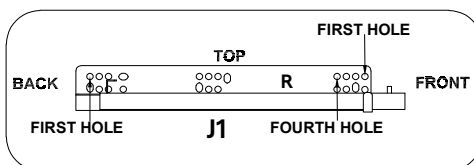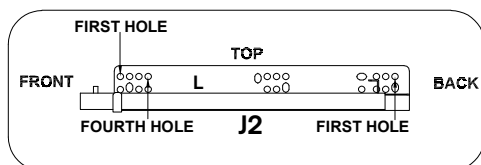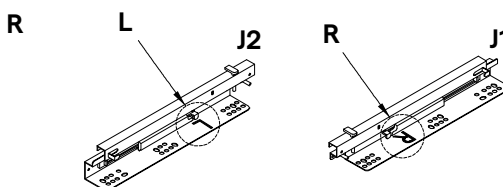


COMPONENTS

- | | |
|--------------------------|-----------|
| 1 Left Side Panel | x1 |
| 10 Front Panel | x2 |

4.1 Connect **Front Panel (10)** to **Left Side Panel (1)** by inserting Plastic Head Panel Clip to the corresponding holes.

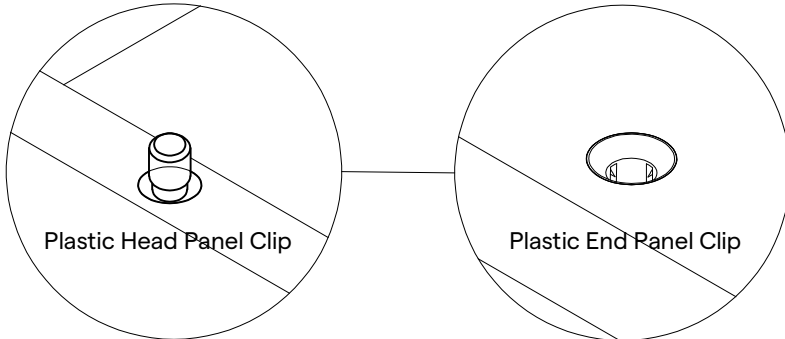


Both hardware has been pre-assembled into the panel

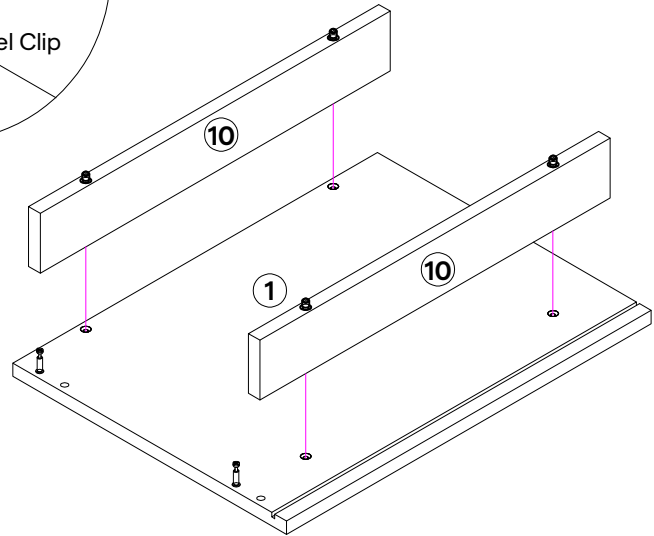
**STEP 05****COMPONENTS**

- | | |
|----------------------------------|-----------|
| 6 Left Side Rail Panel | x1 |
| 8 Left Side Support Panel | x1 |
| 10 Front Panel | x2 |

5.1 Connect **Left Side Rail Panel (6)** and **Left Side Support Panel (8)** to **Front Panel (10)** by connecting Plastic End Panel Clip to the corresponding holes.


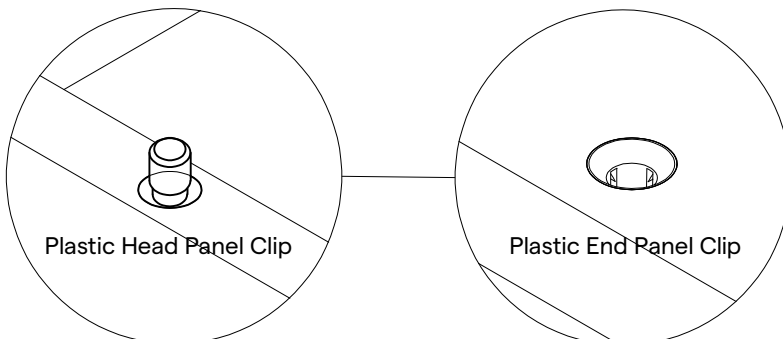


Both hardware has been pre-assembled into the panel

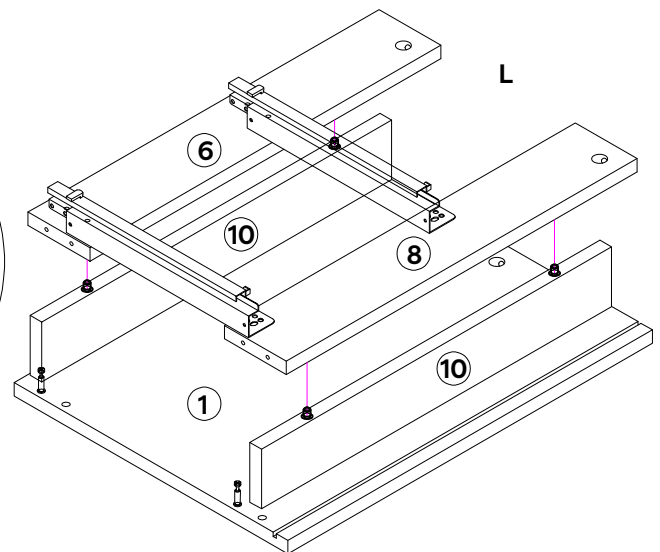

HARDWARE**G** Cam Lock 15/12 x2**COMPONENTS****1** Left Side Panel x1**4** Front Rail Panel Bottom x1**5** Back Rail Panel Bottom x1



6.1 Connect **Front Rail Panel Bottom (4)** and **Back Rail Panel Bottom (5)** to **Left Side Panel (1)** by inserting **Cam Lock (G)** to the corresponding holes.

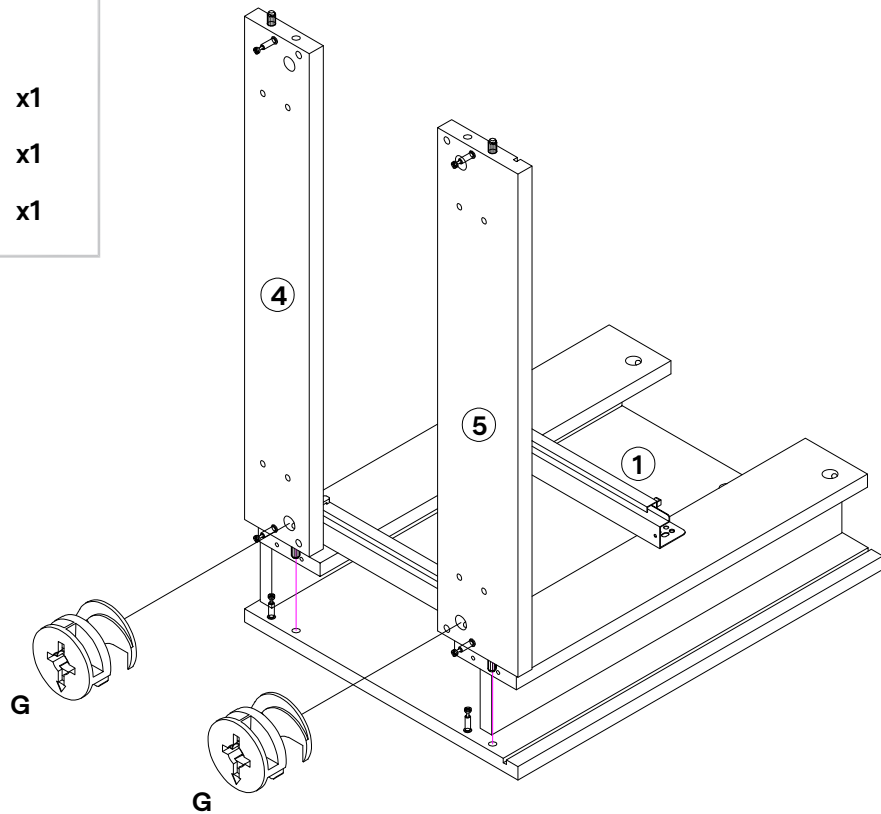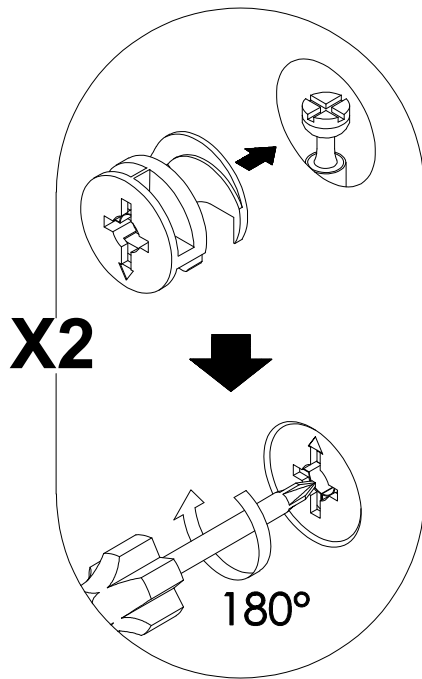

STEP 07

COMPONENTS**2** Right Side Panel x1**10** Front Panel x2

7.1 Connect **Front Panel (10)** to **Right Side Panel (2)** by inserting Plastic Head Panel Clip to the corresponding holes.

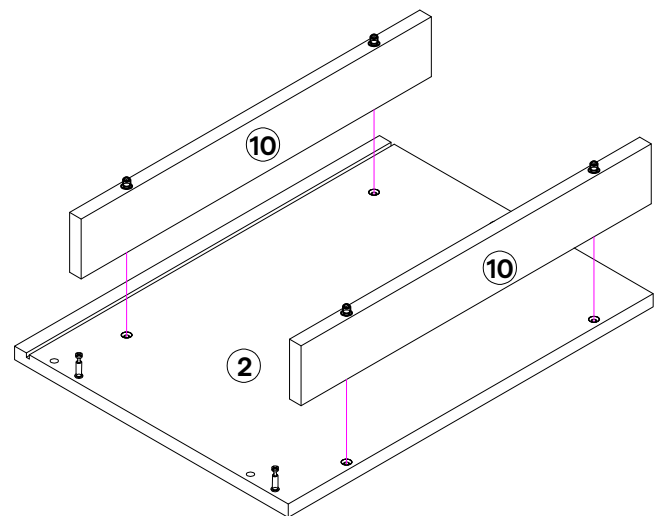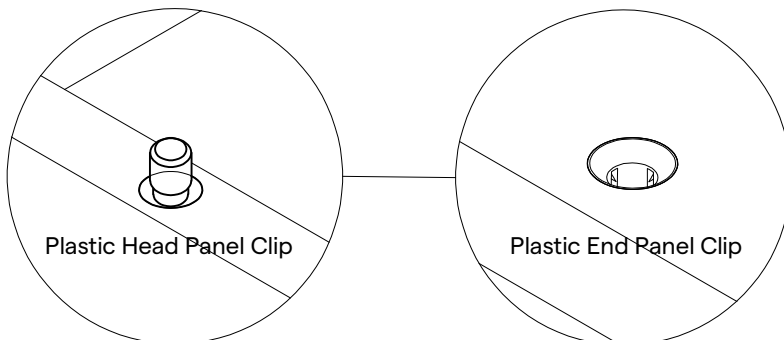


Both hardware has been pre-assembled into the panel


COMPONENTS

- | | |
|-----------------------------------|----|
| 2 Right Side Panel | x1 |
| 7 Right Side Rail Panel | x1 |
| 9 Right Side Support Panel | x1 |
| 10 Front Panel | x2 |

8.1 Connect **Right Side Support Panel (9)** and **Right Side Rail Panel (7)** to **Front Panel (10)** by connecting Plastic End Panel Clip to the corresponding holes.

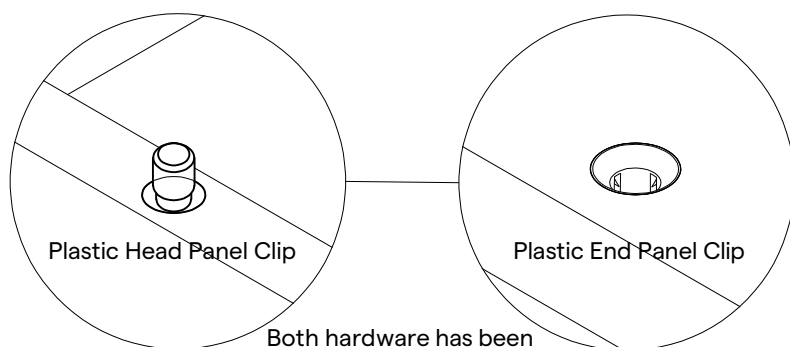

Both hardware has been pre-assembled into the panel


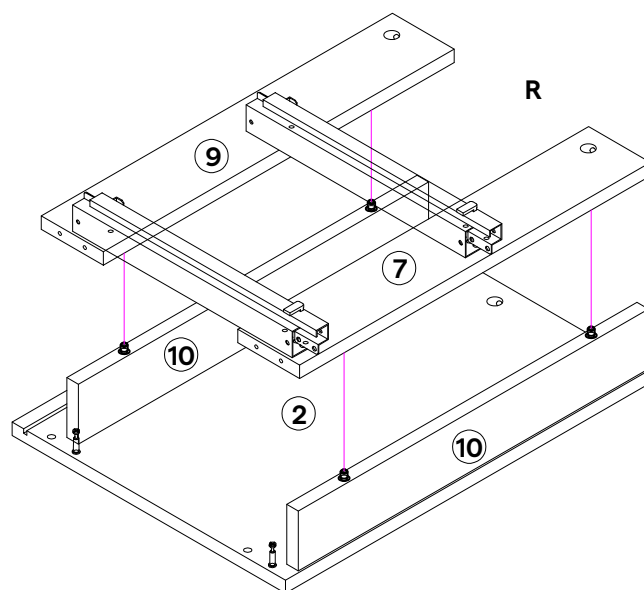
**STEP 9****HARDWARE**

- | | |
|-------------------------|----|
| G Cam Lock 15/12 | x2 |
|-------------------------|----|

COMPONENTS

- | | |
|----------------------------------|----|
| 2 Right Side Panel | x1 |
| 4 Front Rail Panel Bottom | x1 |
| 5 Back Rail Panel Bottom | x1 |

9.1 Connect **Front Rail Panel Bottom (4)** and **Back Rail Panel Bottom (5)** to **Right Side Panel (2)** by inserting **Cam Lock (G)** to the corresponding holes.

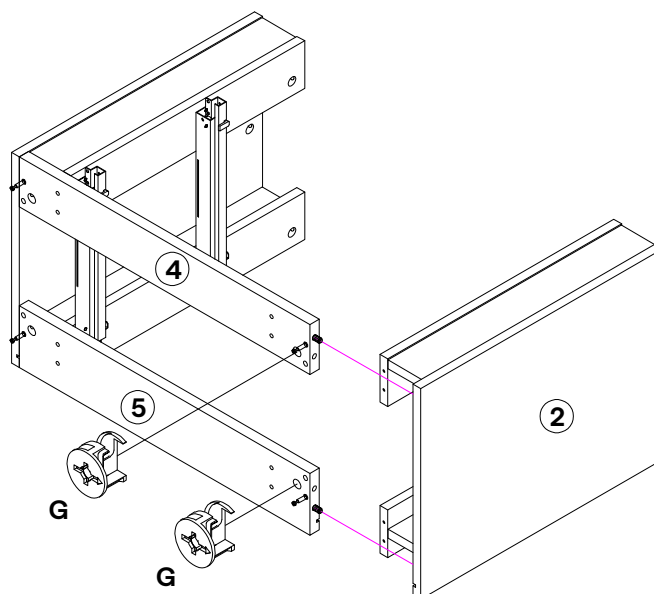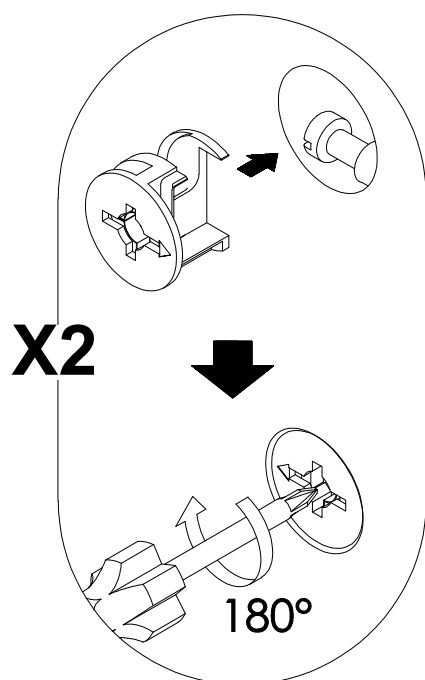

HARDWARE

(C) Screw M6 x 40mm x8

COMPONENTS

(4) Front Rail Panel Bottom x1

(5) Back Rail Panel Bottom x1

(6) Left Side Rail Panel x1

(7) Right Side Rail Panel x1


(8) Left Side Support Panel x1

(9) Right Side Support Panel x1

TOOLS

(L) Allen Key

10.1 Secure **Front Rail Panel Bottom (4)** and **Back Rail Panel Bottom (5)** to **Left and Right Side Rail Panel (6 and 7)**, **Left and Right Side Support Panel (8 and 9)** with **Screw (C)** using the provided **Allen Key (L)**.

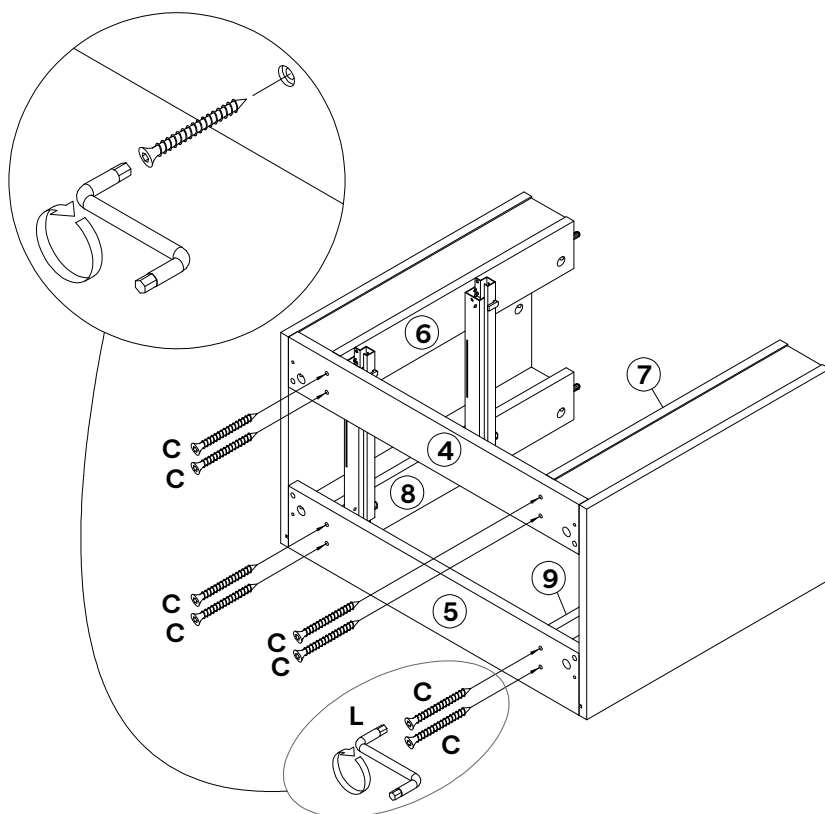

STEP 11



HARDWARE

(E) Wood Dowel Ø8 x 25mm x4

COMPONENTS

(11) Bottom Frame x1

11.1 Insert **Wood Dowel (E)** into the innermost pre-drilled holes on the top side of **Bottom Frame (11)**.

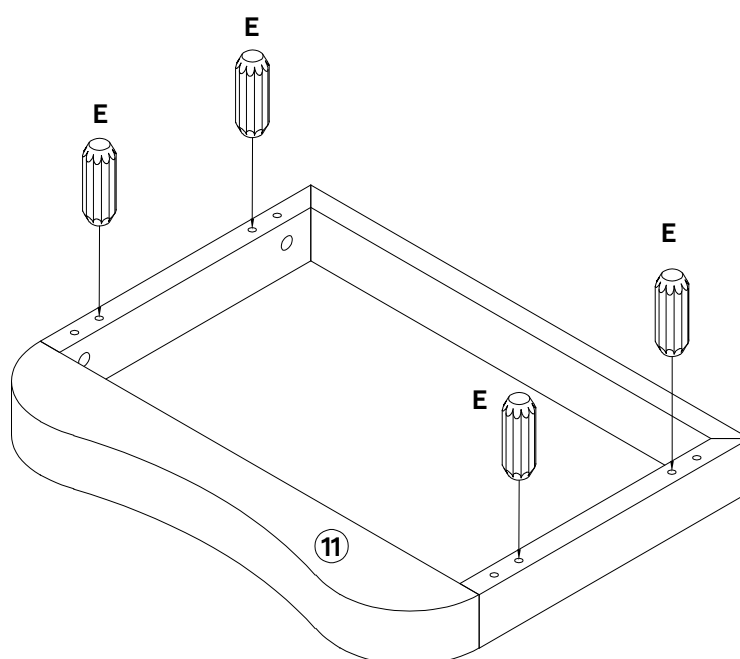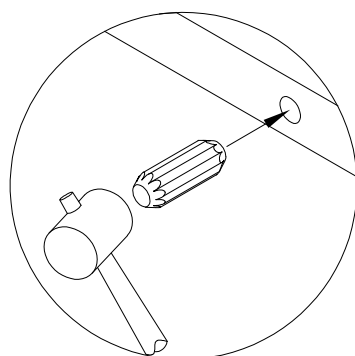

HARDWARE



- G** Cam Lock 15/12 x4
K Plastic Leg Stud x4

COMPONENTS

- 4** Front Rail Panel Bottom x1
5 Back Rail Panel Bottom x2
11 Bottom Frame x4

12.1 Connect **Bottom Frame (11)** to **Front Rail Panel Bottom (4)** and **Back Rail Panel Bottom (5)** by connecting **Wood Dowel (E)** to the corresponding holes and insert **Cam Lock (G)** to the corresponding holes.

12.2 Insert **Plastic Leg Stud (K)** into the bottom side of Bottom Frame.

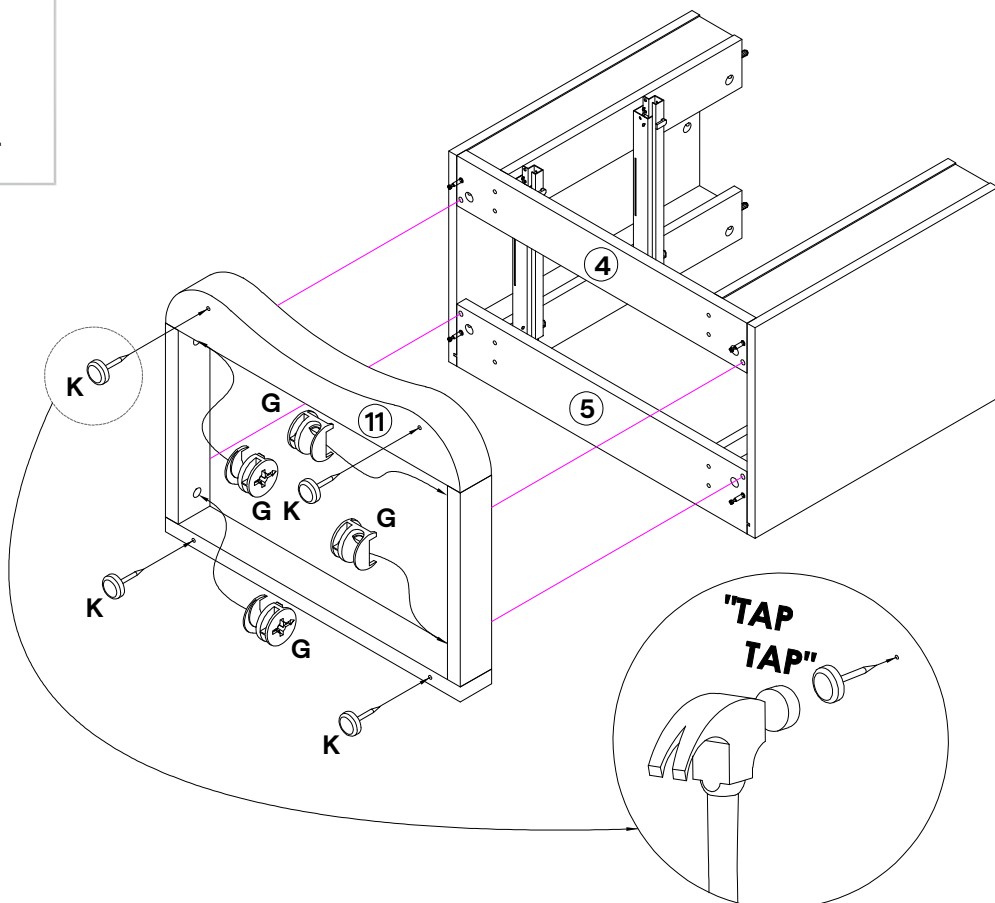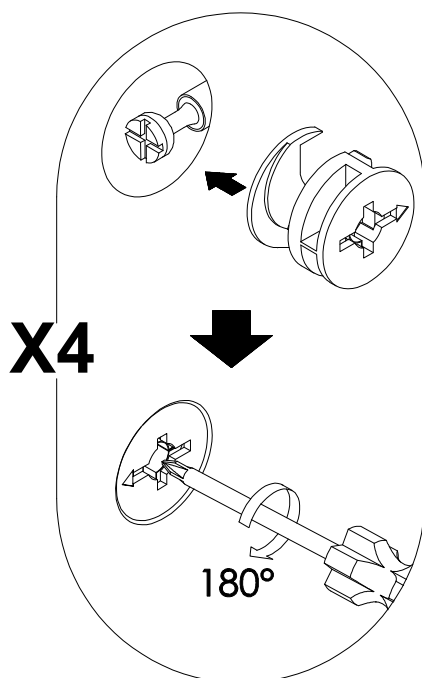


STEP 13

13.1 Slot both **Back Panel (17)** into the body.

COMPONENTS

- 17** Back Panel x2

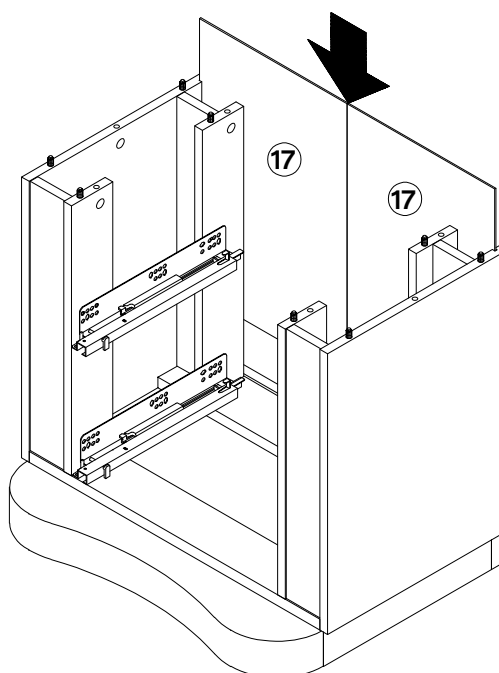


HARDWARE

F Cam Bolt 20 x 5mm x6

COMPONENTS

3 Top Panel x1

14.1 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the bottom side of **Top Panel (3)**.

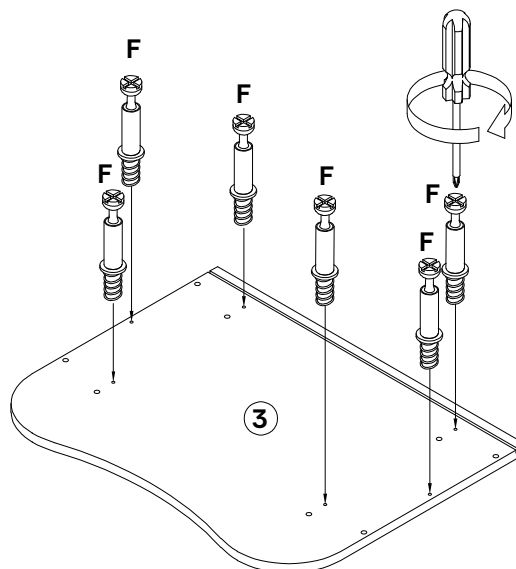

STEP 15

HARDWARE

G Cam Lock 15/12 x6

COMPONENTS

1 Left Side Panel x1

2 Right Side Panel x1

3 Top Panel x1


6 Left Side Rail Panel x1

7 Right Side Rail Panel x1

8 Left Side Support Panel x1

9 Right Side Support Panel x1


15.1 Connect **Top Panel (3)** to **Left and Right Side Panel (1 and 2)**, **Left and Right Side Rail Panel (6 and 7)**, **Left and Right Side Support Panel (8 and 9)** by connecting **Wood Dowel (E)** to the corresponding holes and insert **Cam Lock (G)** to the corresponding holes.

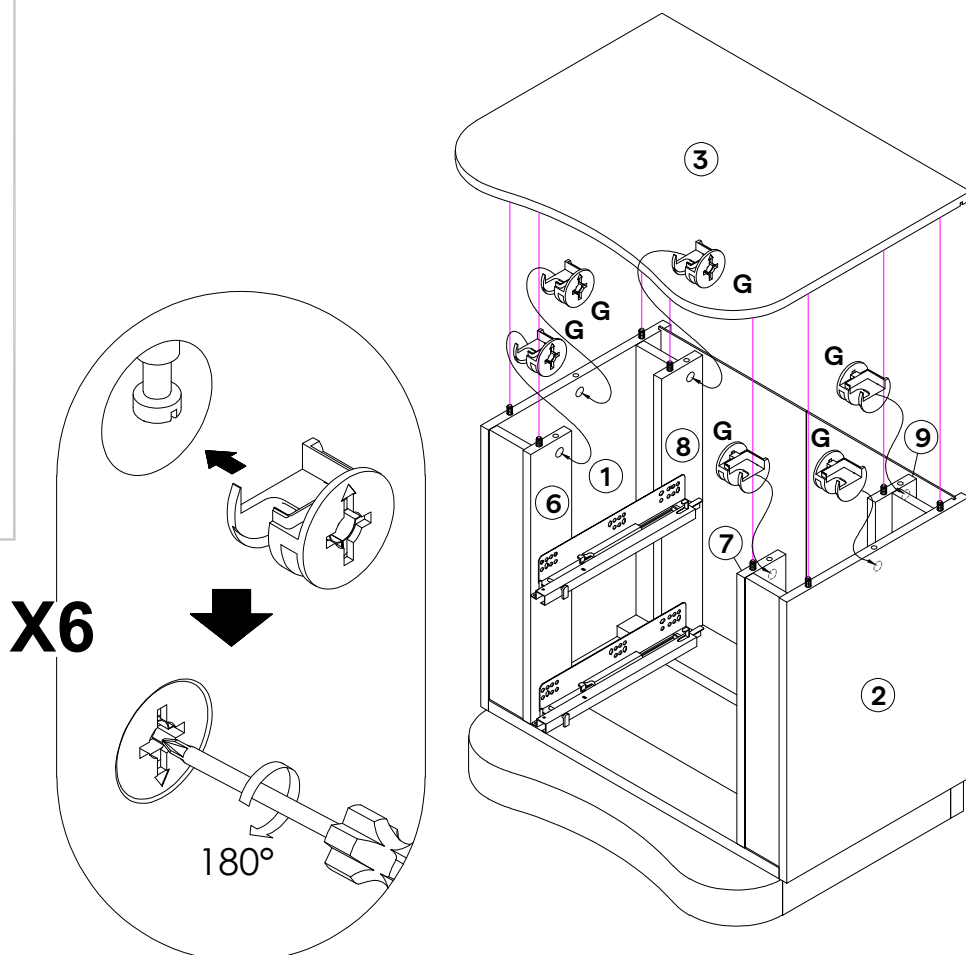

HARDWARE**D** Wood Dowel Ø6 x 20mm x4**F** Cam Bolt 20 x 5 mm x8**COMPONENTS****12** Drawer Front x2**13** Left Drawer Side x2**14** Right Drawer Side x2

16.1 Insert **Wood Dowel (D)** into the innermost pre-drilled holes on the left edge of **Left Drawer Side (13)** and **Right Drawer Side (14)**.

16.2 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the back side of **Drawer Front (12)**.

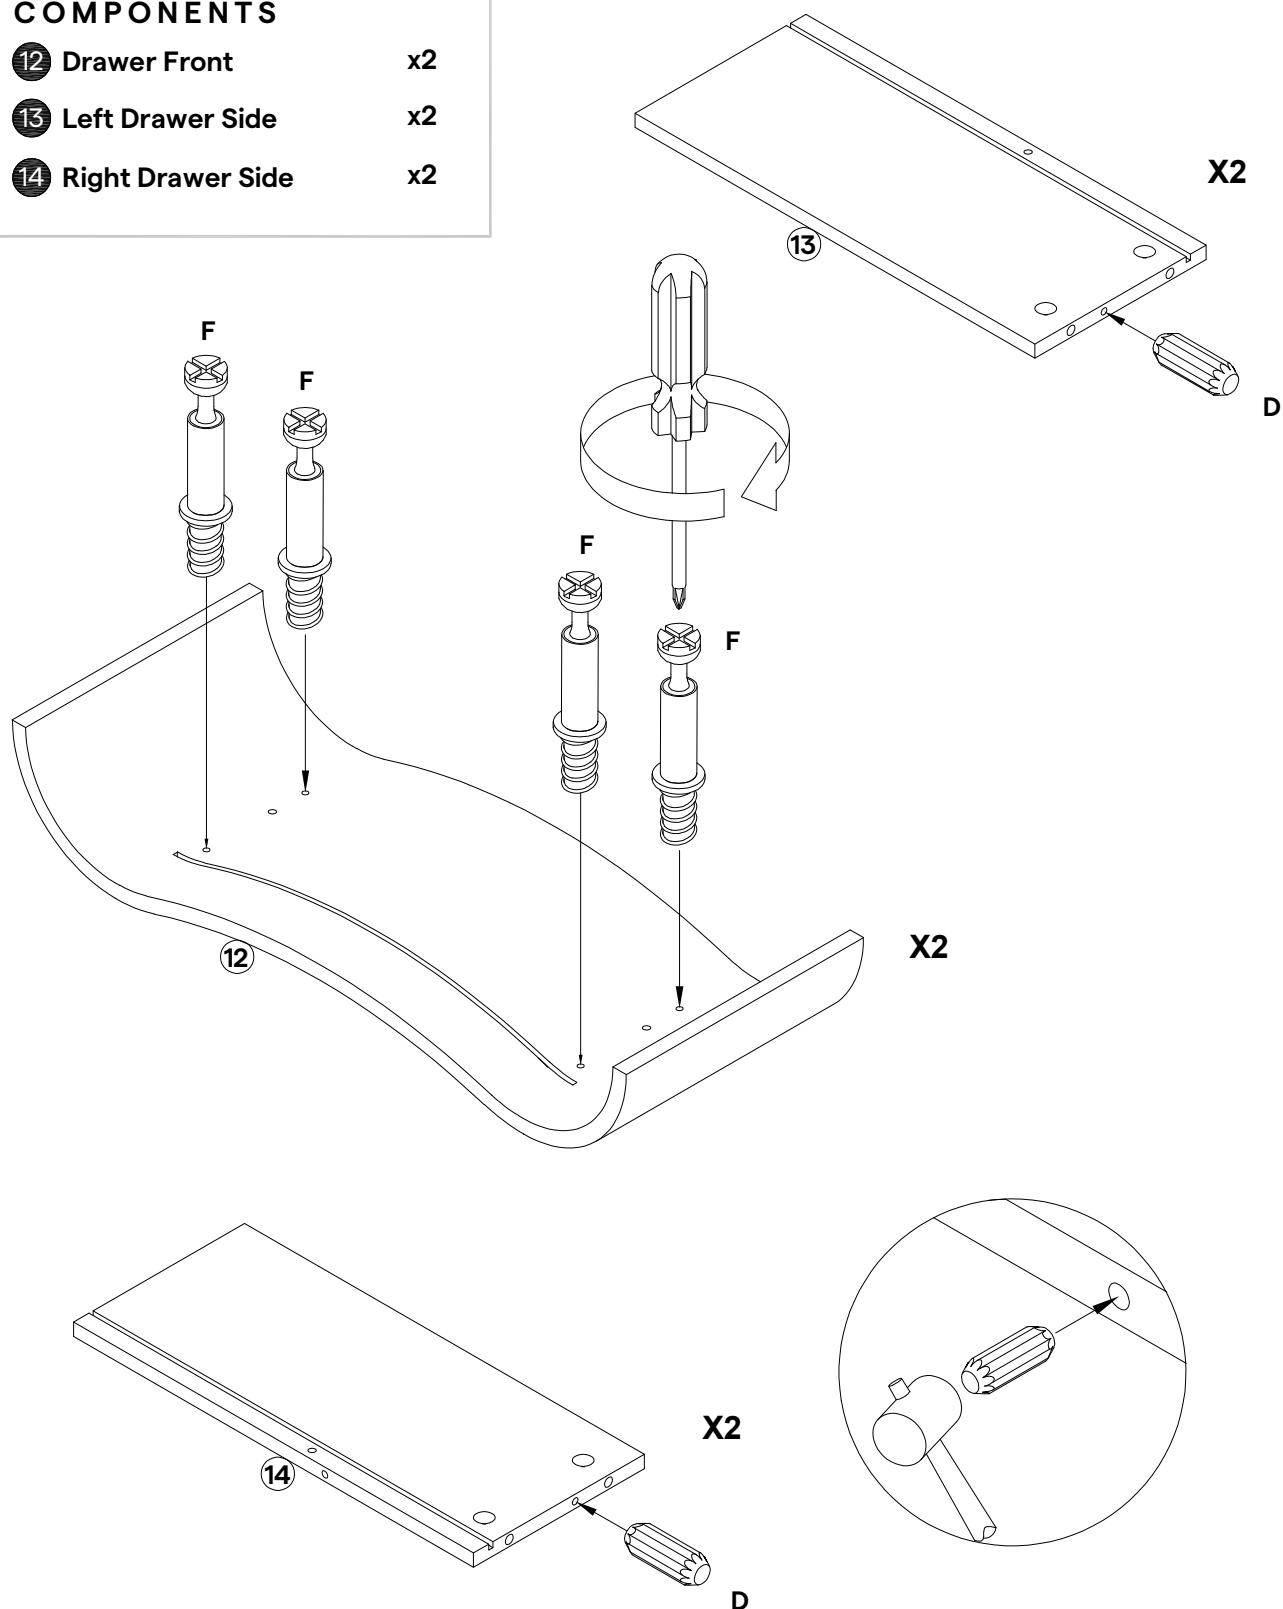

HARDWARE

H Cam Lock 15/10 x8

COMPONENTS

12 Drawer Front x2




13 Left Drawer Side x2

14 Right Drawer Side x2

16 Drawer Bottom x2

17.1 Connect each **Left Drawer Side (13)** and **Right Drawer Side (14)** to **Drawer Front (12)** by inserting **Cam Lock (H)** to the corresponding holes.

17.2 Slot each **Drawer Back (16)** into the drawer body.

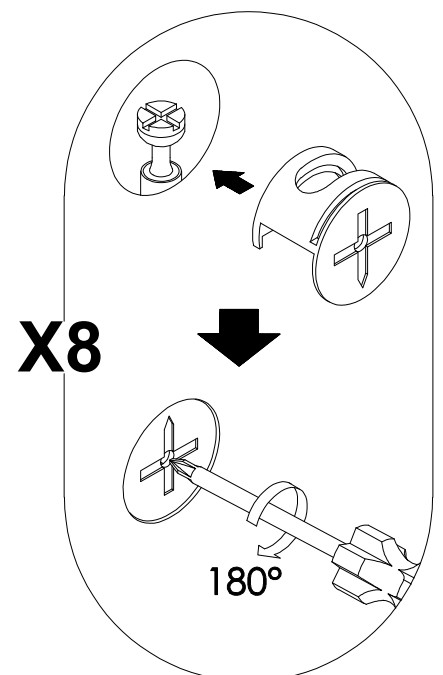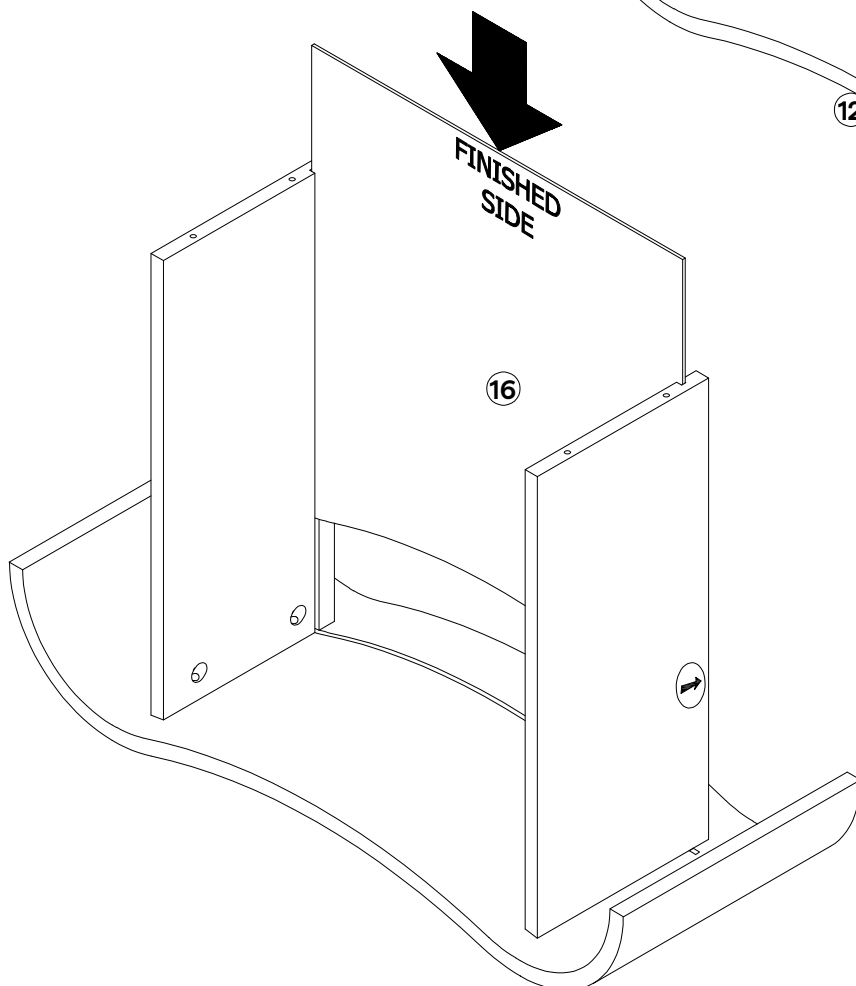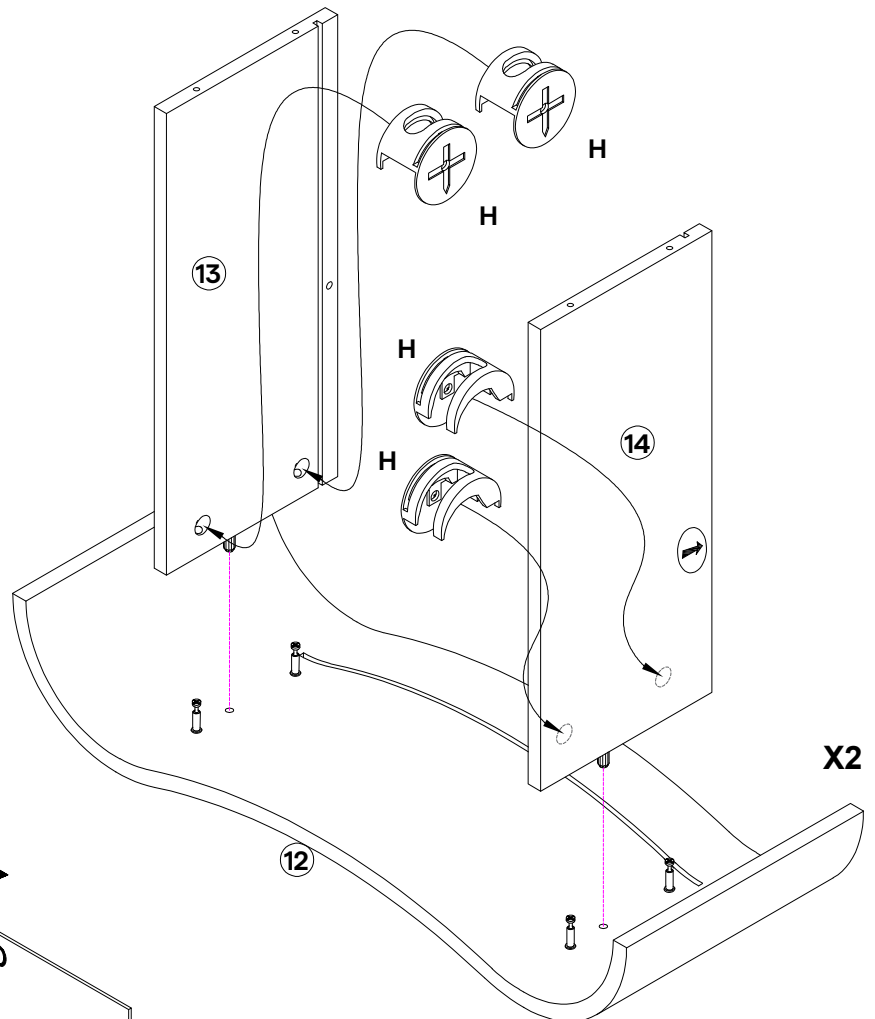

HARDWARE

C Screw M6 x40mm x8

COMPONENTS

13 Left Drawer Side **x2**


14 Right Drawer Side x2


15 Drawer Back **x2**

TOOLS

L Allen Key

18.1 Secure each **Drawer Back (15)** to **Left Drawer Side (13)** and **Right Drawer Side (14)** with **Screw (C)** using the provided **Allen Key (L)**.

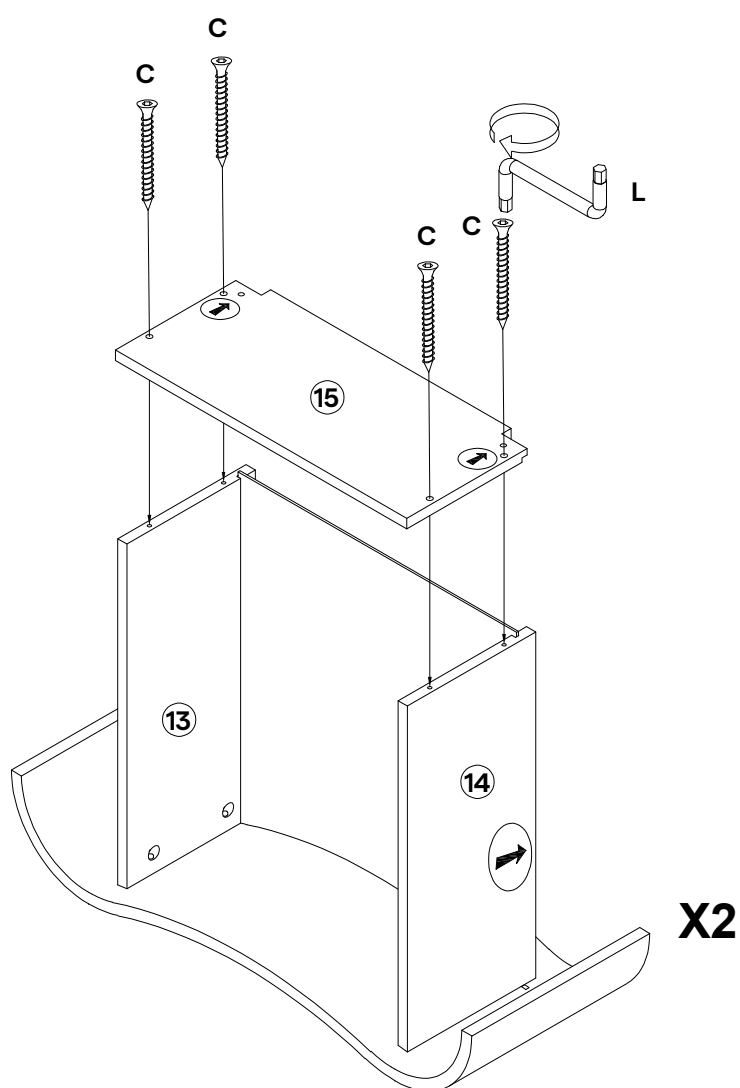

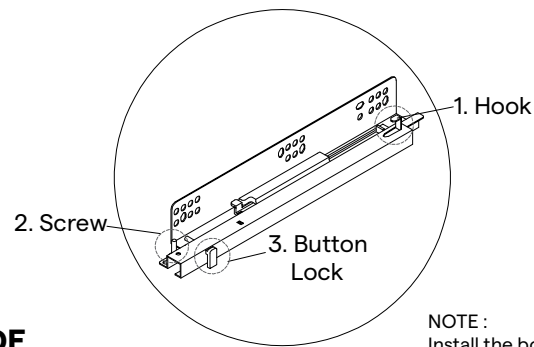


NOTE :


Install the bottom drawer first to make the drawer installation easier.

DRAWER INSTALLATION GUIDE


1. Push and slide out the drawer slide.
2. Unlock the blue colored drawer slide lock.

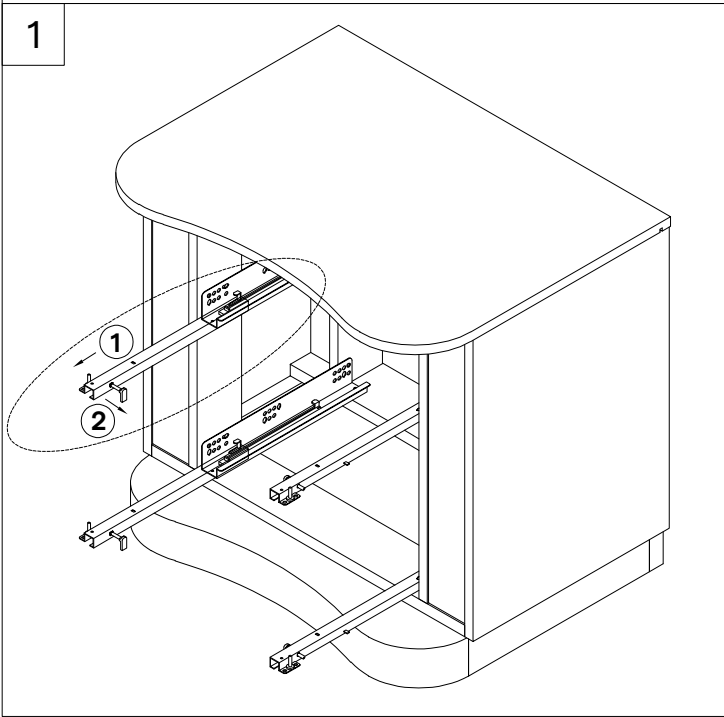


3. Insert the drawer box on the drawer slide.
4. Make sure the back hook of the drawer slide is fitting into the hole at the back of the drawer box right below the arrow sticker.

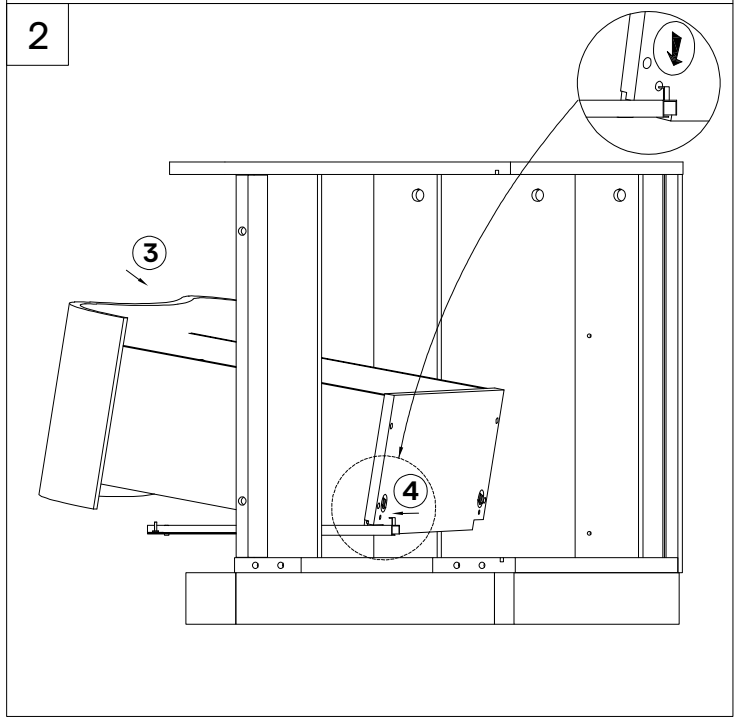


5. The hole for securing the drawer can be found on the bottom side of the side drawer panel below the arrow sticker.
6. Insert the drawer hole into the drawer slide pin by aligning the hole and the pin right below the arrow sticker.

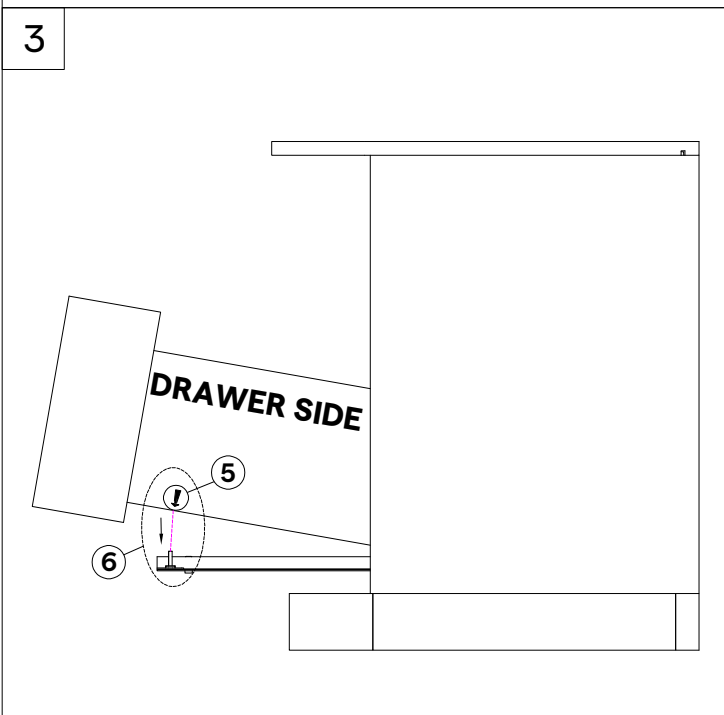

7. Secure the drawer slide to the drawer by pushing the blue colored lock mechanic on the drawer slide.

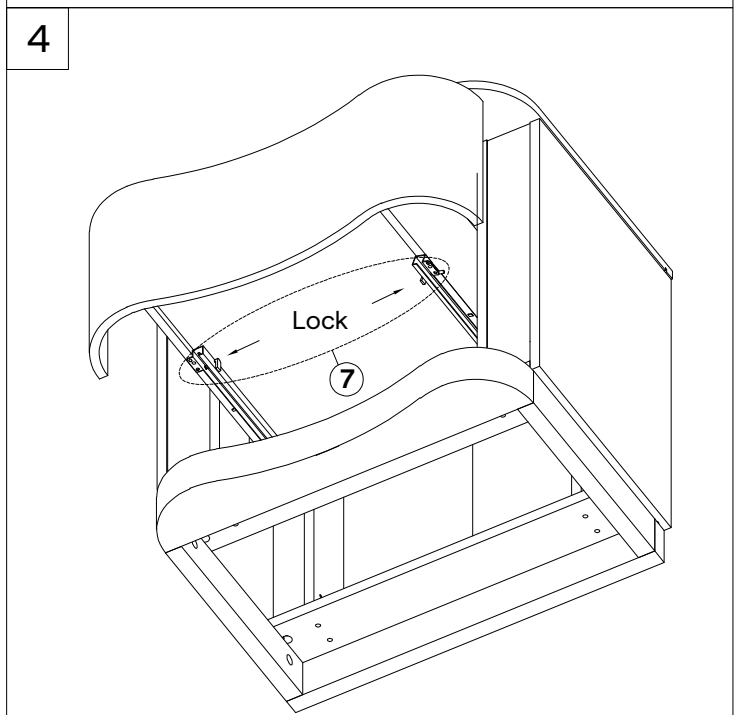


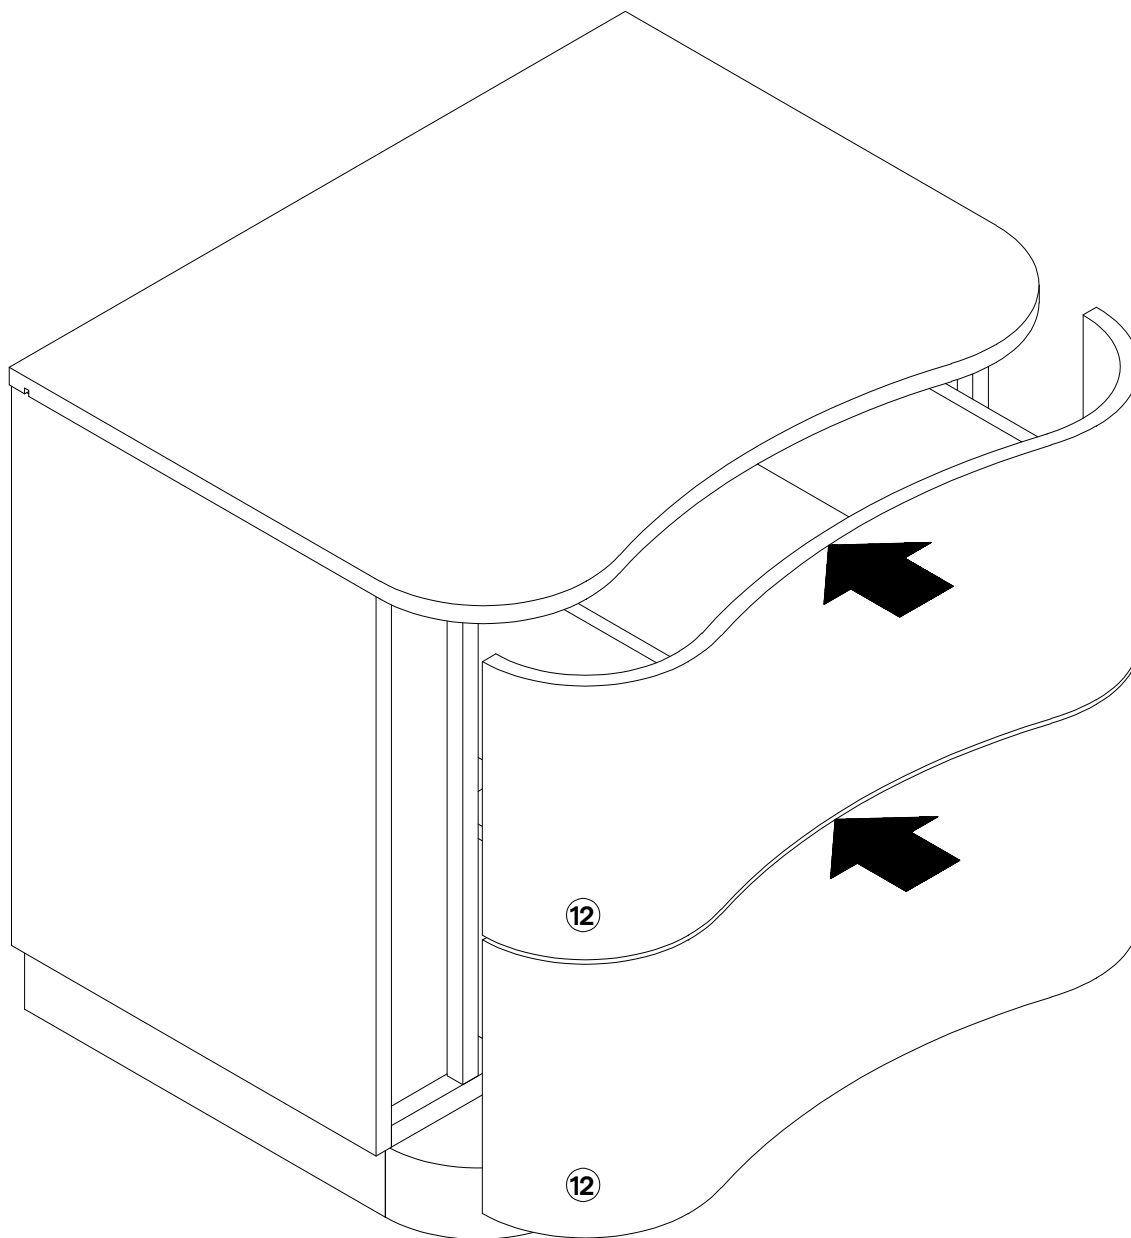

HARDWARE

A Screw M3.5 x 15mm x4**M** Backply Stopper x4

COMPONENTS

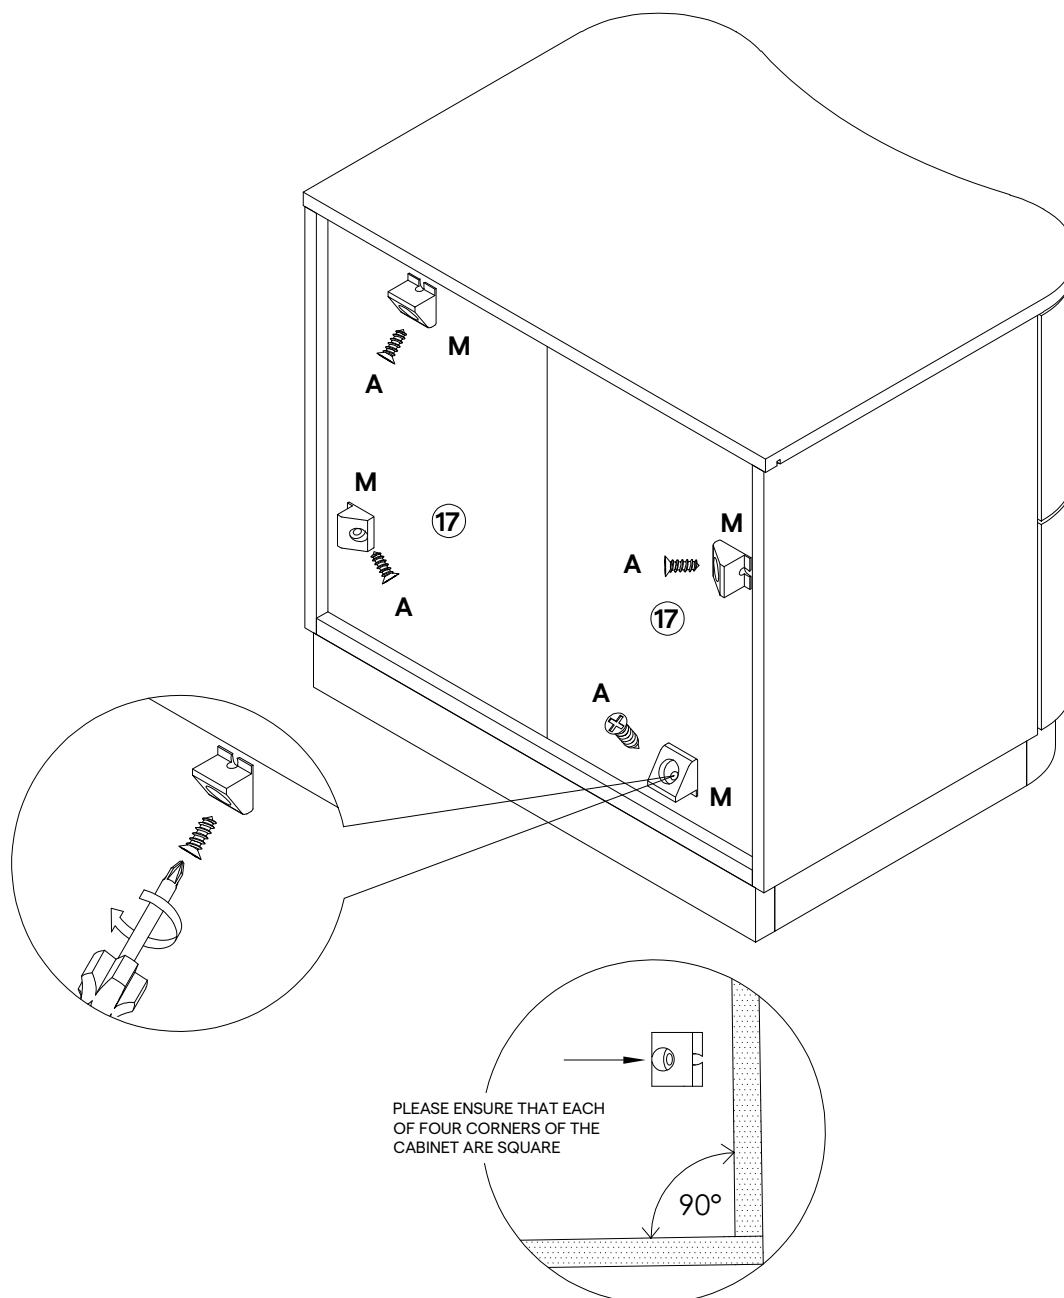
17 Back Panel x221.1 Attach **Backply Stopper (M)** to **Back Panel (17)** using **Screw (A)**.

Great job!

Your nightstand assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

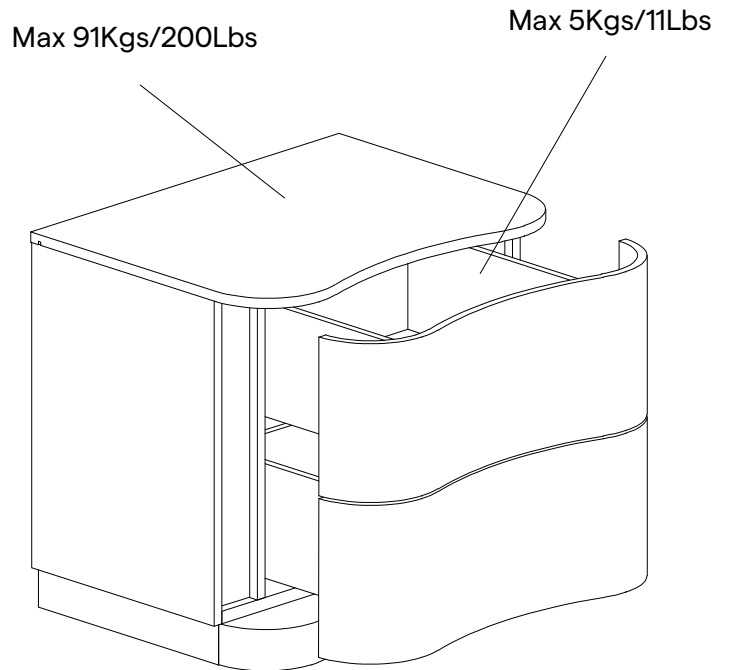

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com