


## ASSEMBLY INSTRUCTIONS

# MOD-7224

V1.15.03.25

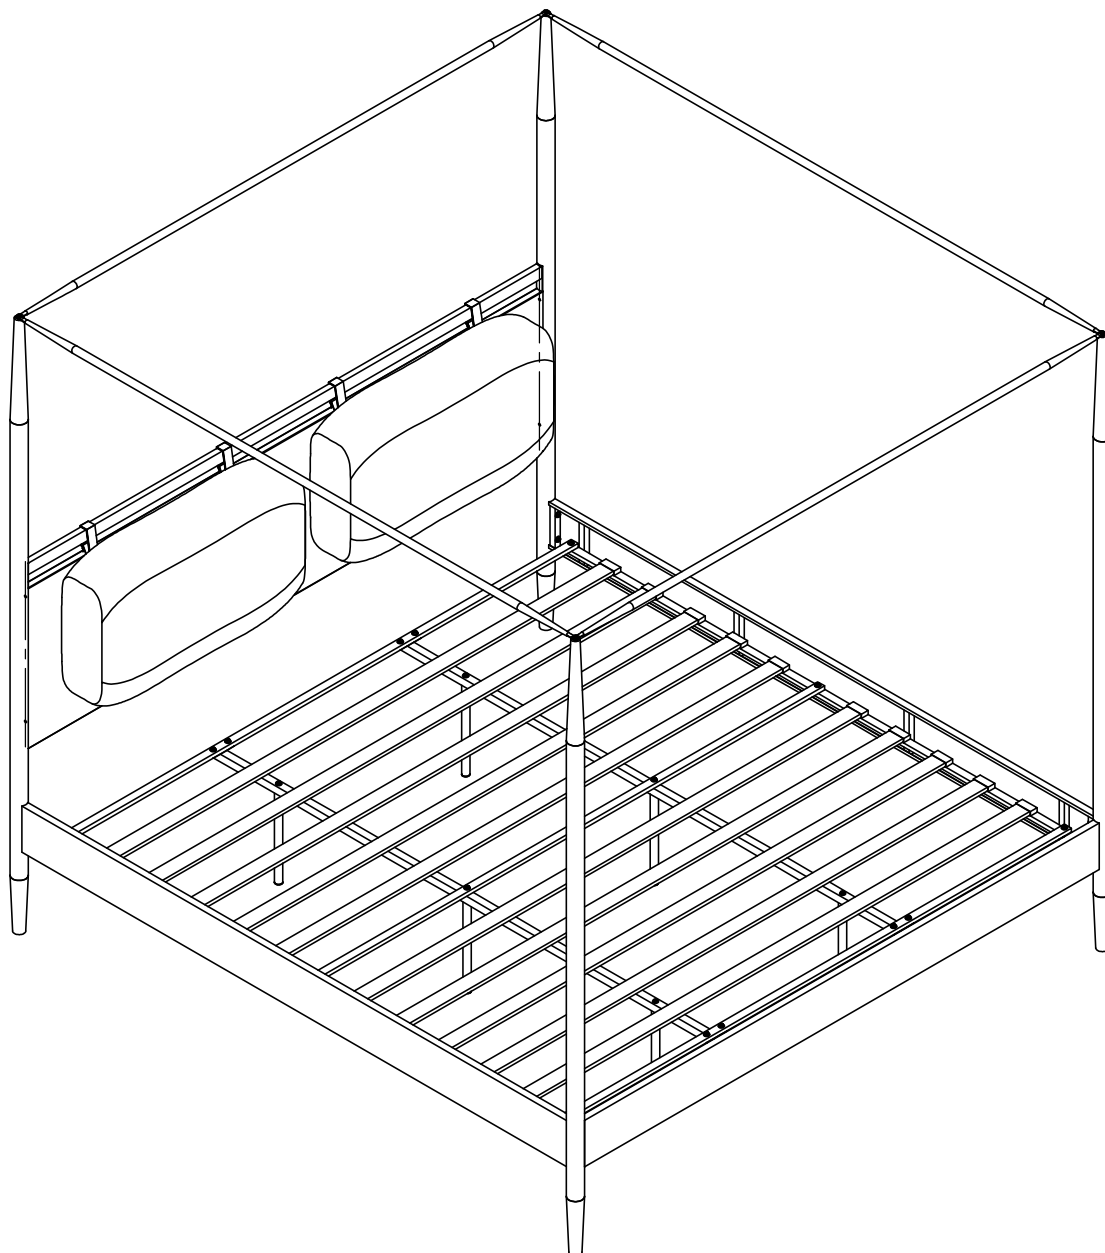

**Questions? Contact us!**

609.256.9000 • [cs@modway.com](mailto:cs@modway.com)  
[www.modway.com](http://www.modway.com)

**\*modway**

# Let's get started!

\*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

**Only use hand tools to assemble this item.** Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

## Furniture components:

|    |                             |     |
|----|-----------------------------|-----|
| 1  | Headboard Pillar-Left       | x1  |
| 2  | Headboard Pillar-Right      | x1  |
| 3  | Headboard                   | x1  |
| 4  | Side Rail                   | x2  |
| 5  | Cross Slats for Beam        | x2  |
| 6  | Cross Batten of Center Beam | x1  |
| 7  | Support Beam                | x2  |
| 8  | Support Foot for Beam       | x6  |
| 9  | Batten                      | x10 |
| 10 | Footboard Pillar            | x2  |
| 11 | Footboard                   | x1  |
| 12 | Mosquito Net Pole-Short     | x2  |
| 13 | Mosquito Net Pole-Long      | x2  |
| 14 | Pillow Bag                  | x2  |

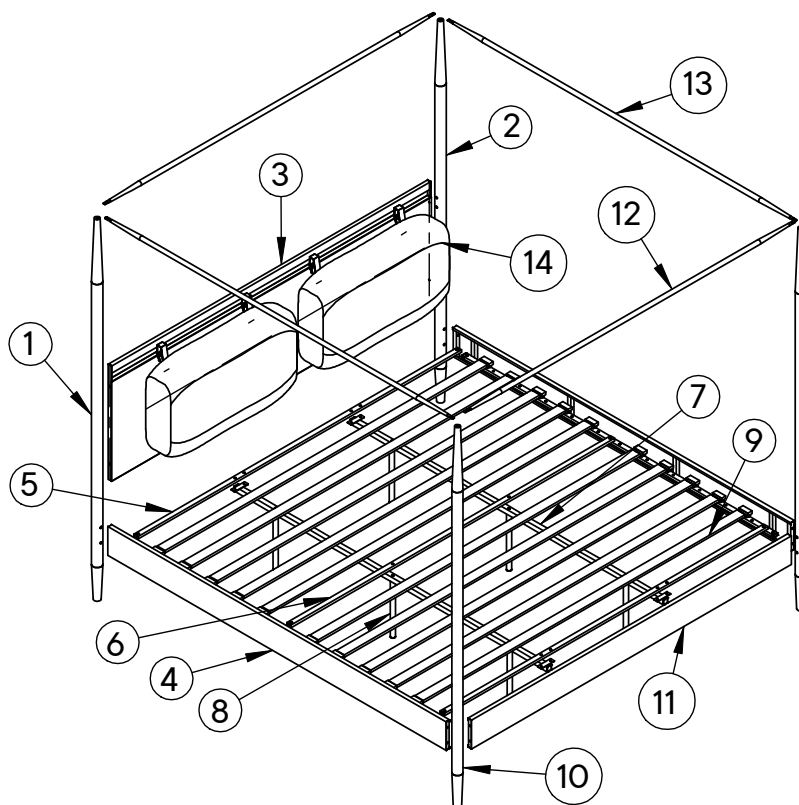

## Provided hardware:

|   |  |             |     |
|---|--|-------------|-----|
| A |  | M6 x 35mm   | x12 |
| B |  | M6 x 25mm   | x20 |
| C |  | M6 x 15mm   | x4  |
| D |  | Flat Washer | x32 |
| E |  | Tooth Rod   | x4  |

|   |  |                   |     |
|---|--|-------------------|-----|
| F |  | Nut Cap           | x4  |
| G |  | Allen Key         | x2  |
| H |  | Wrench            | x1  |
| I |  | Plastic Fasteners | x20 |


# Step 1

## COMPONENTS

- |   |                        |    |
|---|------------------------|----|
| 1 | Headboard Pillar-Left  | x1 |
| 2 | Headboard Pillar-Right | x1 |
| 3 | Headboard              | x1 |

## HARDWARE

- |   |                |    |
|---|----------------|----|
| B | Bolt M6 x 25mm | x4 |
| G | Allen Key      | x1 |

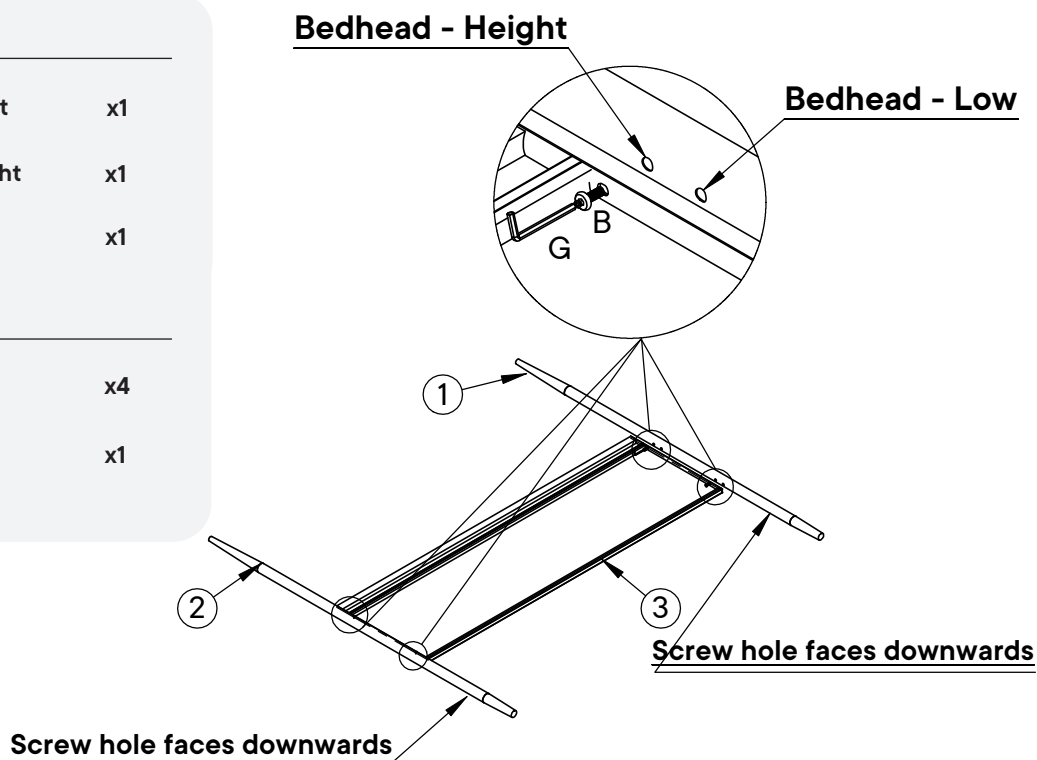


# Step 2

## COMPONENTS

- |    |                  |    |
|----|------------------|----|
| 10 | Footboard Pillar | x2 |
| 11 | Footboard        | x1 |

## HARDWARE

- |   |                   |    |
|---|-------------------|----|
| A | Bolt M6 x 35mm    | x4 |
| D | Flat Washer Allen | x4 |
| G | Key               | x1 |

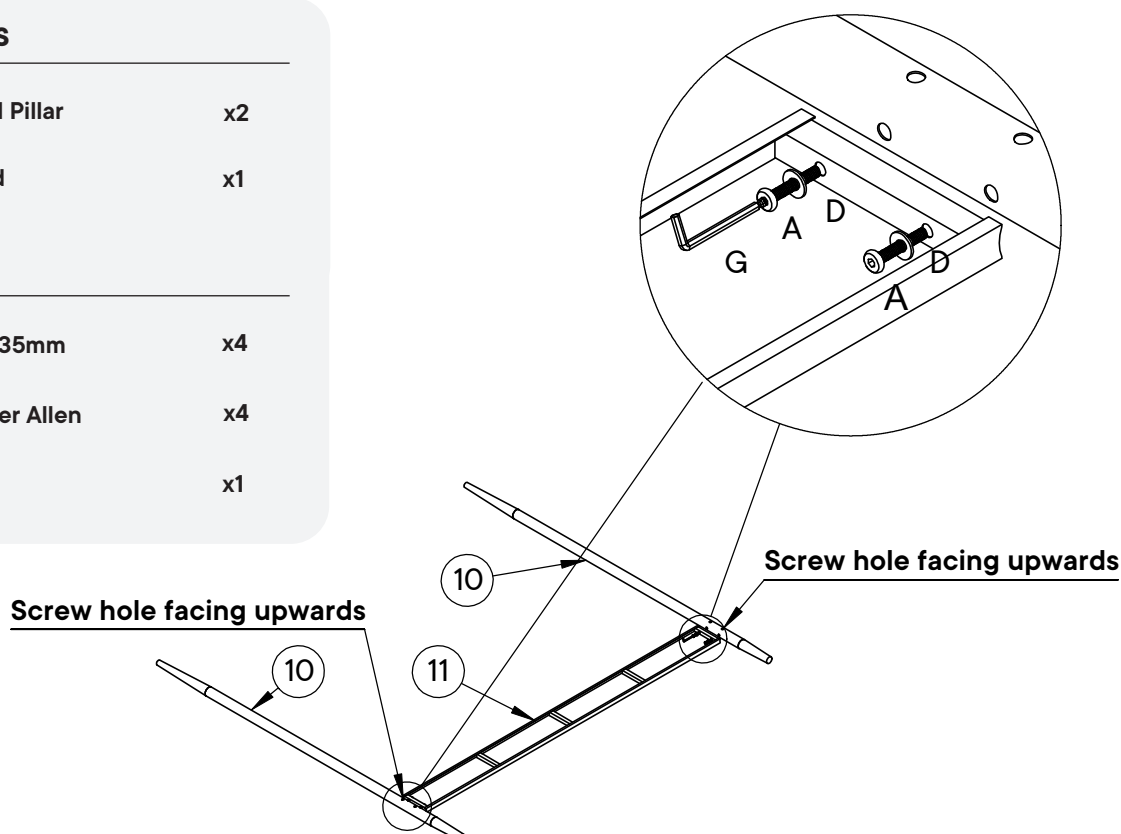


## Step 3

### COMPONENTS

- |          |           |    |
|----------|-----------|----|
| <b>4</b> | Side Rail | x2 |
|----------|-----------|----|

### HARDWARE

- |          |                |    |
|----------|----------------|----|
| <b>A</b> | Bolt M6 x 35mm | x8 |
| <b>D</b> | Flat Washer    | x8 |
| <b>G</b> | Allen Key      | x1 |

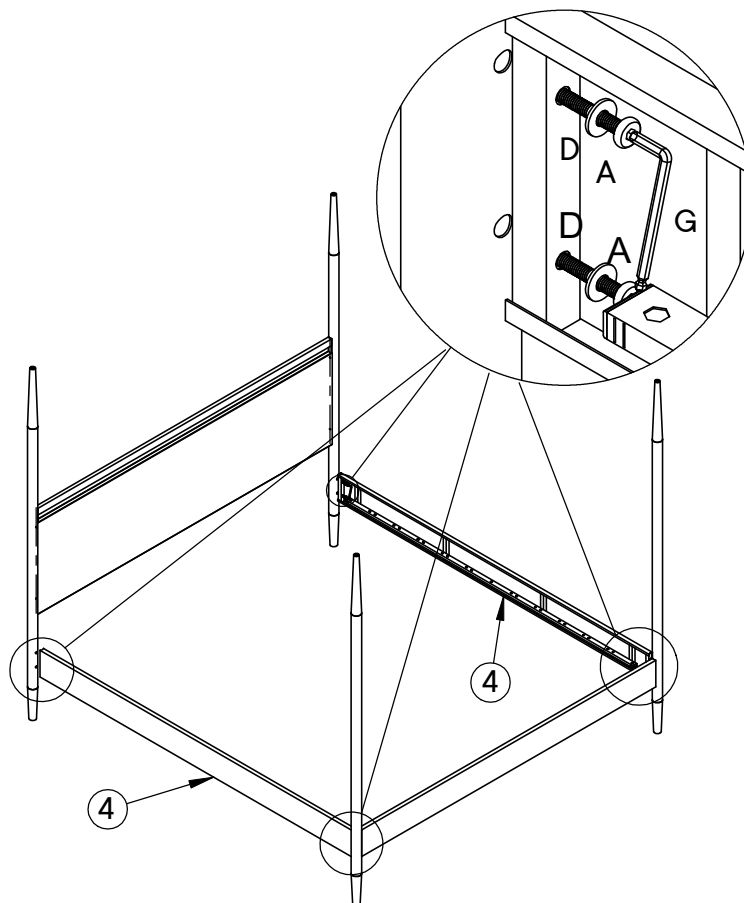


## Step 4

### COMPONENTS

- |          |                             |    |
|----------|-----------------------------|----|
| <b>5</b> | Cross Slats for Beam        | x2 |
| <b>6</b> | Cross Batten of Center Beam | x1 |

### HARDWARE

- |          |                |    |
|----------|----------------|----|
| <b>B</b> | Bolt M6 x 25mm | x6 |
| <b>D</b> | Flat Washer    | x6 |
| <b>G</b> | Allen Key      | x1 |

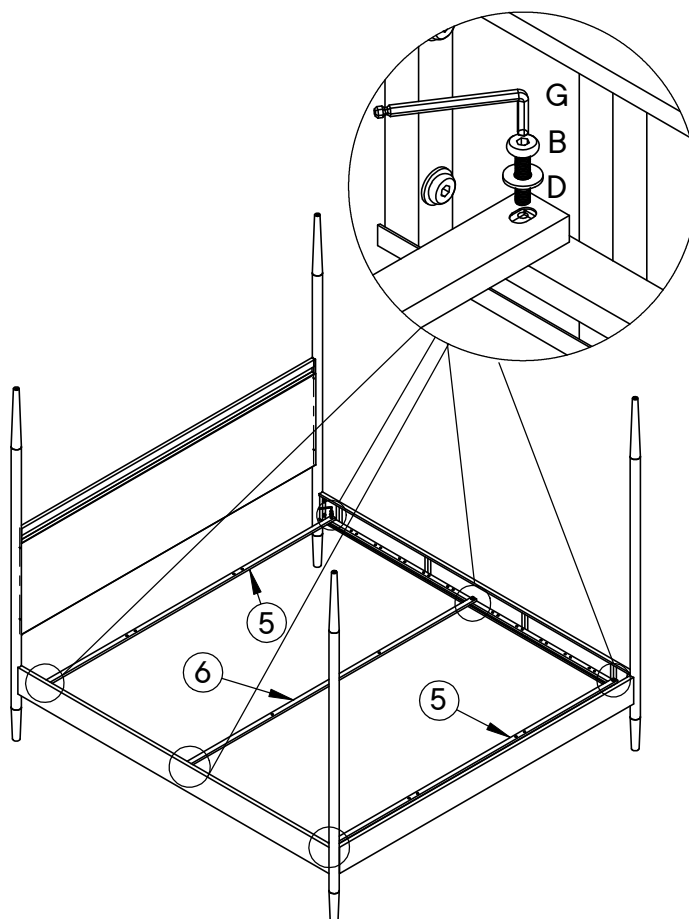


## Step 5

### COMPONENTS

|          |                       |    |
|----------|-----------------------|----|
| <b>7</b> | Support Beam          | x2 |
| <b>8</b> | Support Foot for Beam | x4 |

### HARDWARE

|          |                |    |
|----------|----------------|----|
| <b>C</b> | Bolt M6 x 15mm | x4 |
| <b>D</b> | Flat Washer    | x4 |
| <b>G</b> | Allen Key      | x1 |

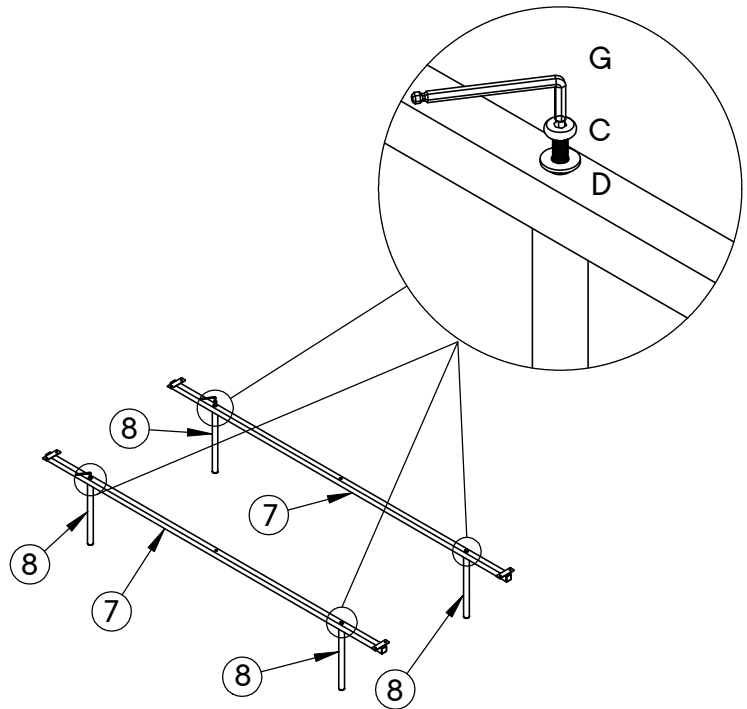


## Step 6

### COMPONENTS

|          |                       |    |
|----------|-----------------------|----|
| <b>8</b> | Support Foot for Beam | x2 |
|----------|-----------------------|----|

### HARDWARE

|          |                |     |
|----------|----------------|-----|
| <b>B</b> | Bolt M6 x 25mm | x10 |
| <b>D</b> | Flat Washer    | x10 |
| <b>G</b> | Allen Key      | x1  |

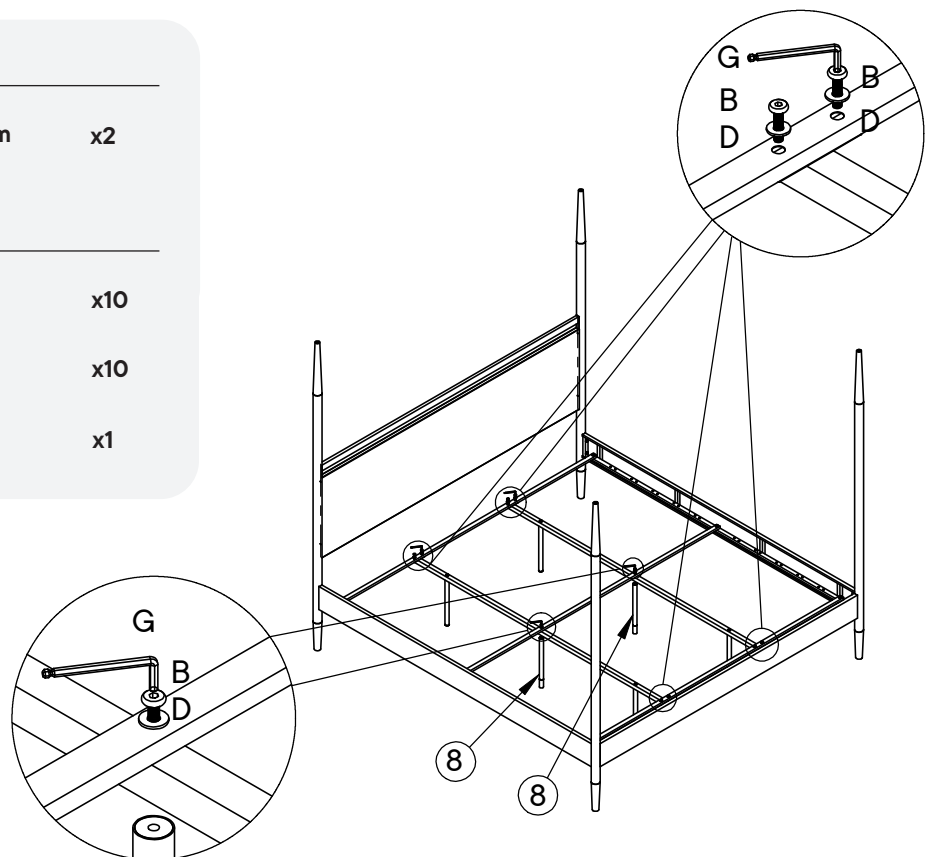

## Step 7


### COMPONENTS

9 Batten x10

### HARDWARE

E Tooth Rod x4

I Plastic Fasteners x20

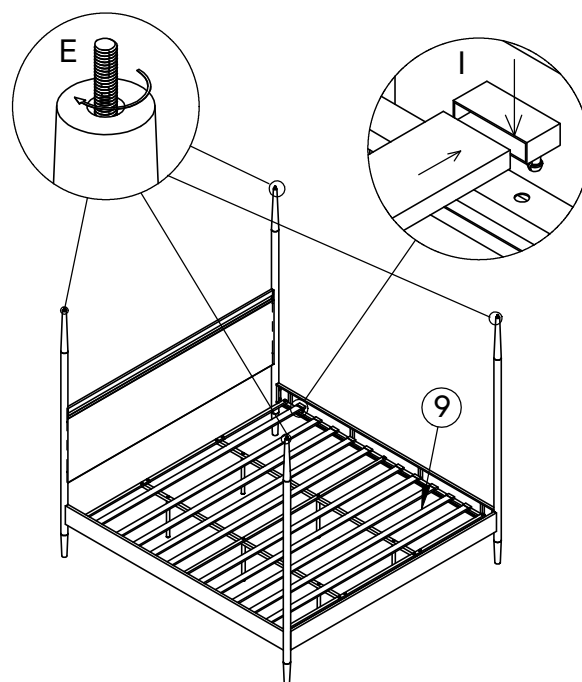

## Step 8

### COMPONENTS


12 Mosquito Net Pole-Short x2

13 Mosquito Net Pole-Long x2

### HARDWARE

F Nut Cap x4


H Wrench x1

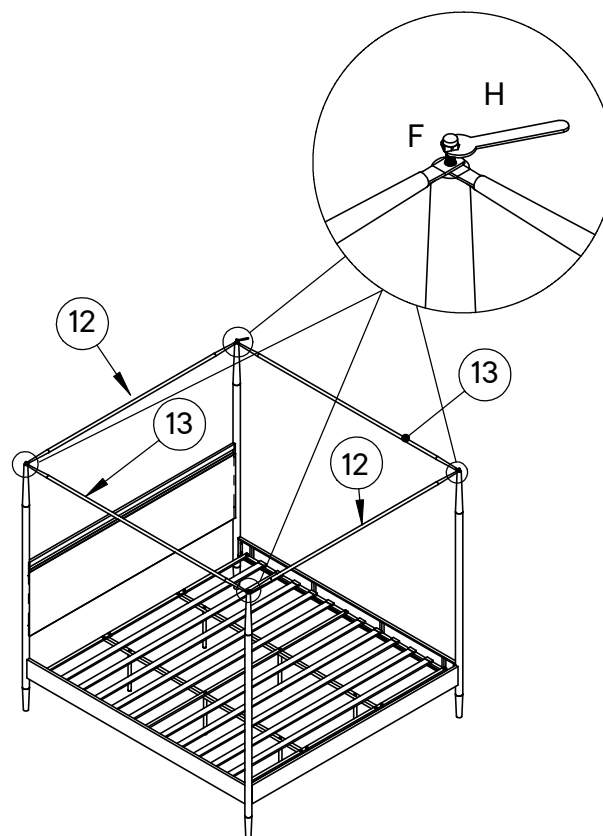

## Step 9

### COMPONENTS

14 Pillow Bag x2

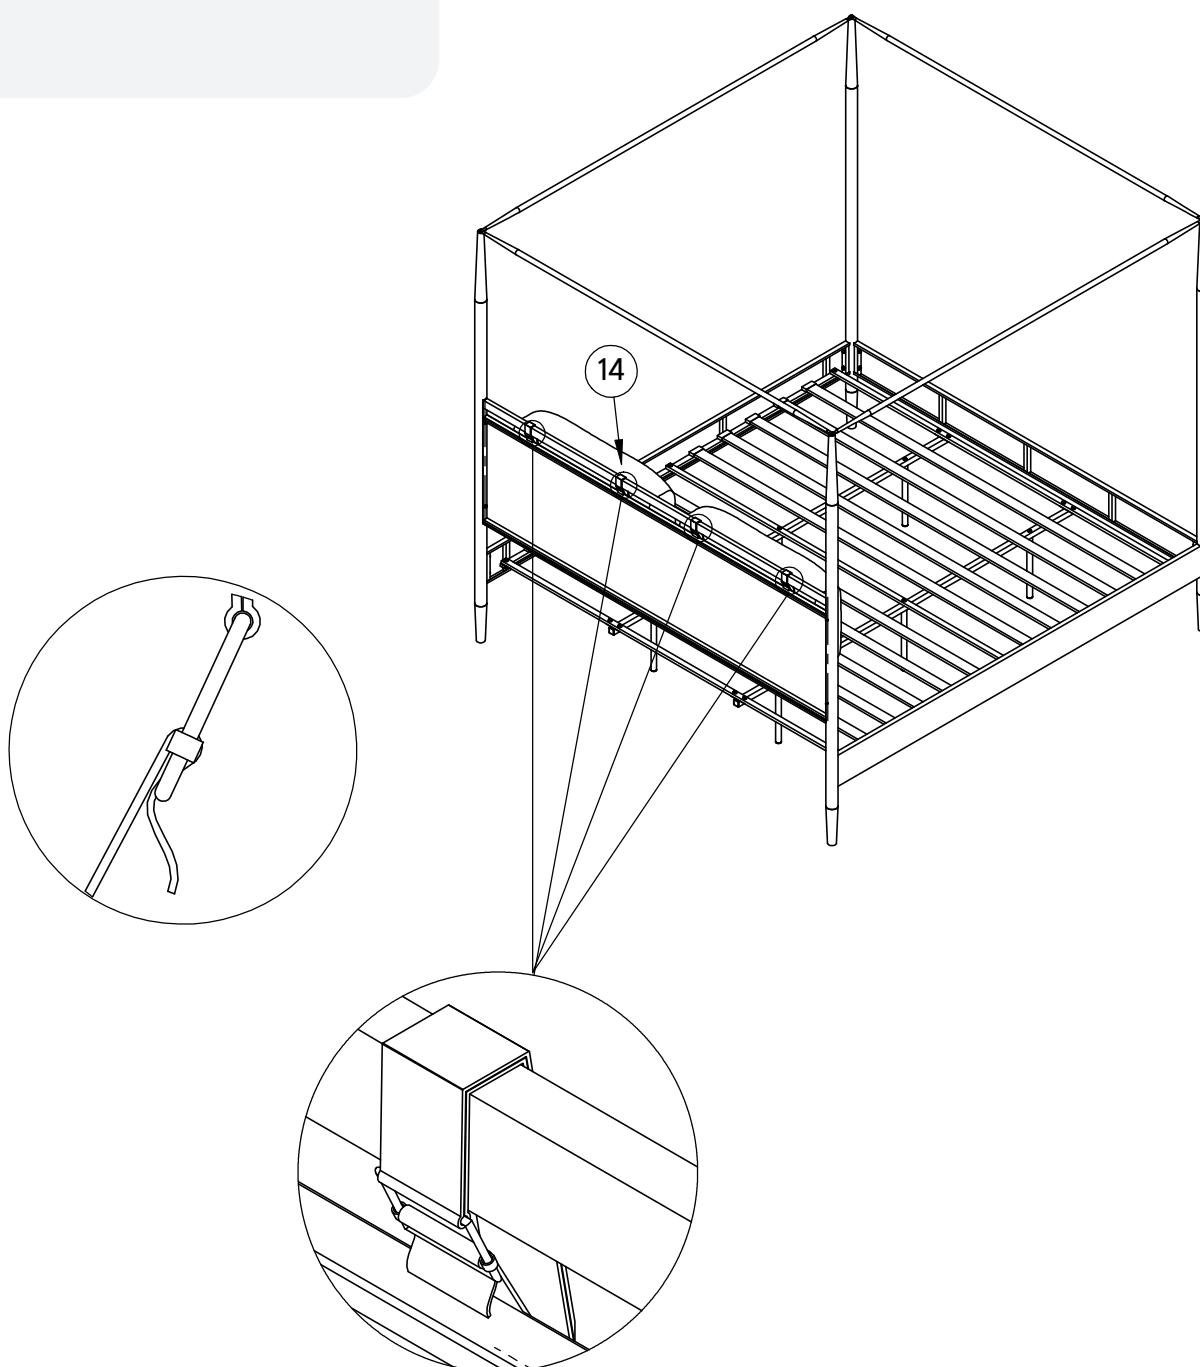

# Great job!

Your new bed is complete.


## ♥ CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Retain the rich wood color by occasionally sanding lightly and applying a teak cleaner and protectant. The oils nourish and help restore the original look.

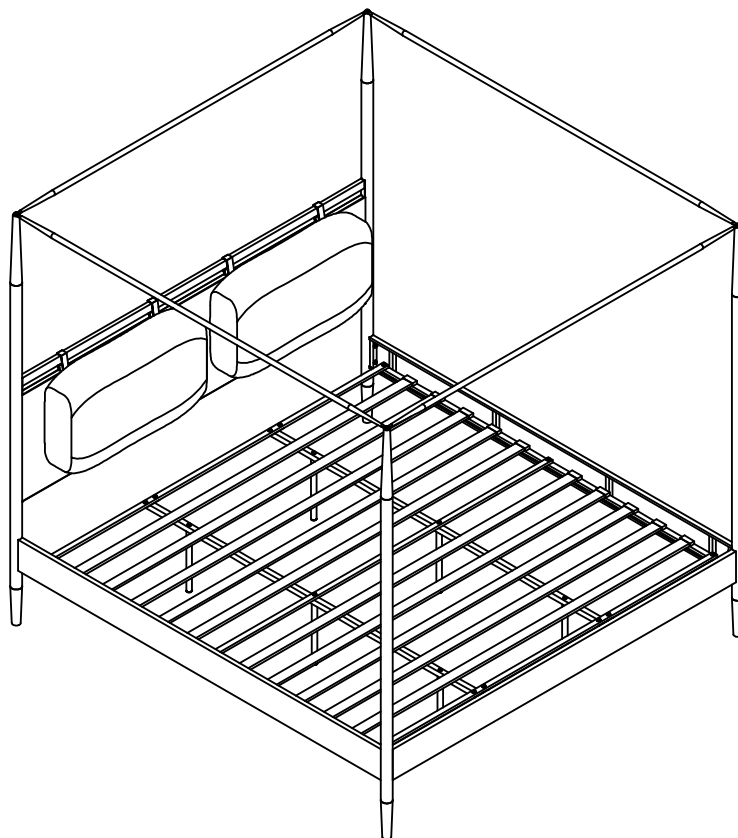

## CONNECT WITH US!



Tag us **@modway\_furniture** and **#modway** for a chance to be featured.