


ASSEMBLY INSTRUCTIONS

MOD-7208

V0.09.30.24

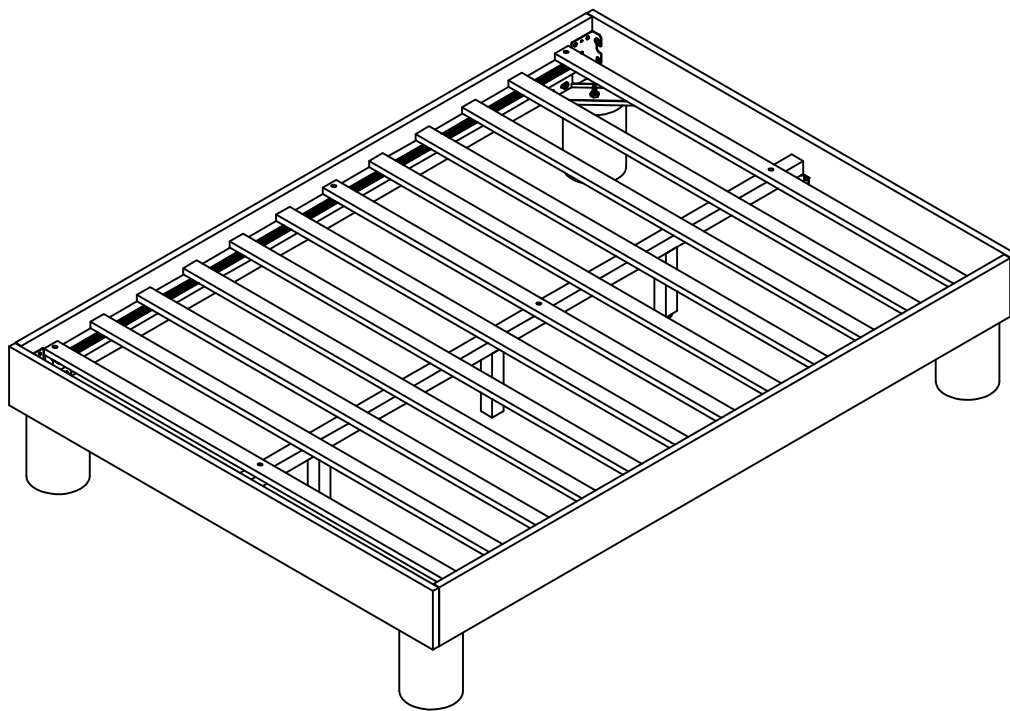

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

*modway



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

A	Headboard	x1
B	Footboard	x1
C	Side Rail	x2
D	Center Rail	x1
E	Center Support Leg	x3
F	Bed Slat	x1
G	Bed Leg	x4

Provided hardware:

1	 JCBB M8 x 16mm	x24
2	 M8 Flat Washer	x20
3	 M8 Spring Washer	x20
4	 5/16 Hex Nut	x4
5	 Wood Screw M4 X 38mm	x9
6	 LB 001	x4
7	 Spanner 13mm	x1
8	 M5 Allen Key	x1

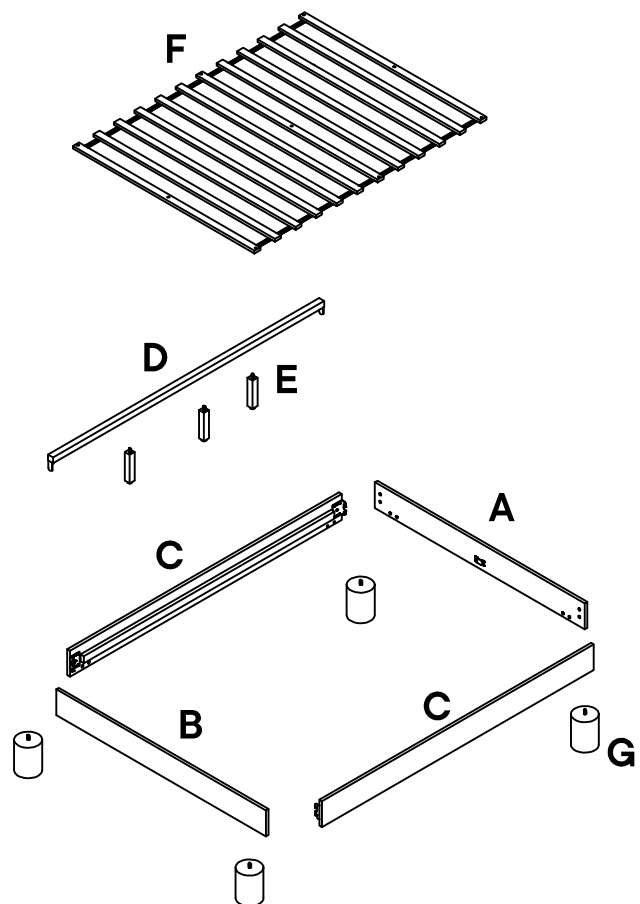

What you need:



Phillips Head Screwdriver

Wait!

Missing parts or hardware? Need assistance?
Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com



Step 1

COMPONENT

- | | | |
|----------|-----------|----|
| A | Headboard | x1 |
| B | Footboard | x1 |

HARDWARE

- | | | |
|----------|----------------|----|
| 1 | JCBB M8 x 16mm | x8 |
| 8 | M5 Allen Key | x1 |

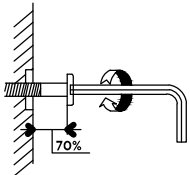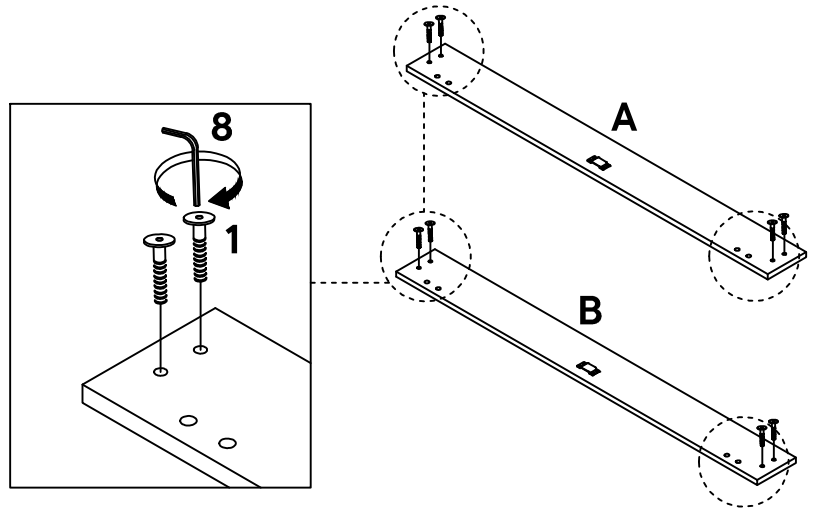

NOTE : Do not fully tighten the bolt


Step 2

COMPONENT

- | | | |
|----------|-----------|----|
| A | Headboard | x1 |
| B | Footboard | x1 |
| C | Side Rail | x2 |

HARDWARE

- | | | |
|----------|--------------|----|
| 8 | M5 Allen Key | x1 |
|----------|--------------|----|

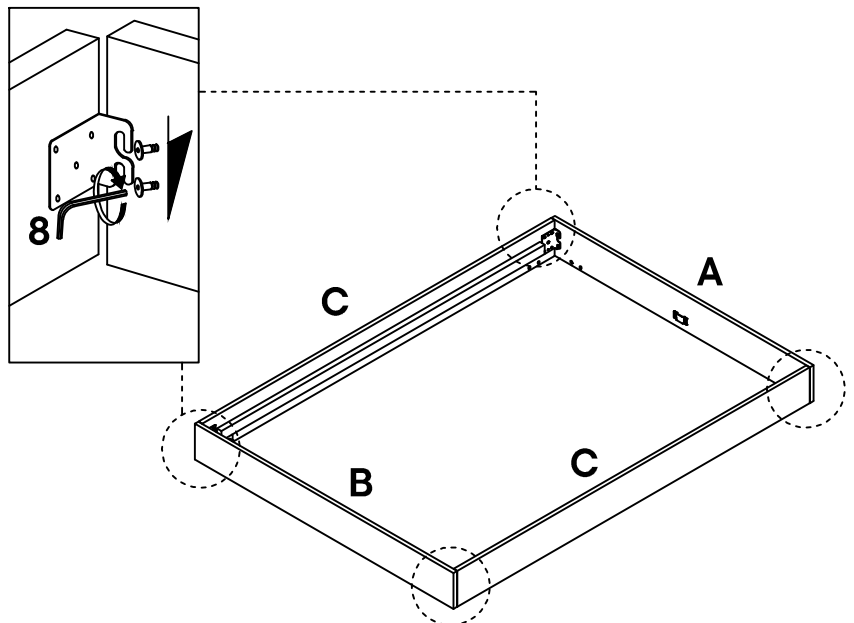

NOTE : Fully tighten the bolt 100%


Step 3

COMPONENT

B	Footboard	x1
C	Side Rail	x2

HARDWARE

1	JCBB M8 x 16mm	x8
2	M8 Flat Washer	x8
3	M8 Spring Washer	x8
6	LB 001	x2
8	M5 Allen Key	x1

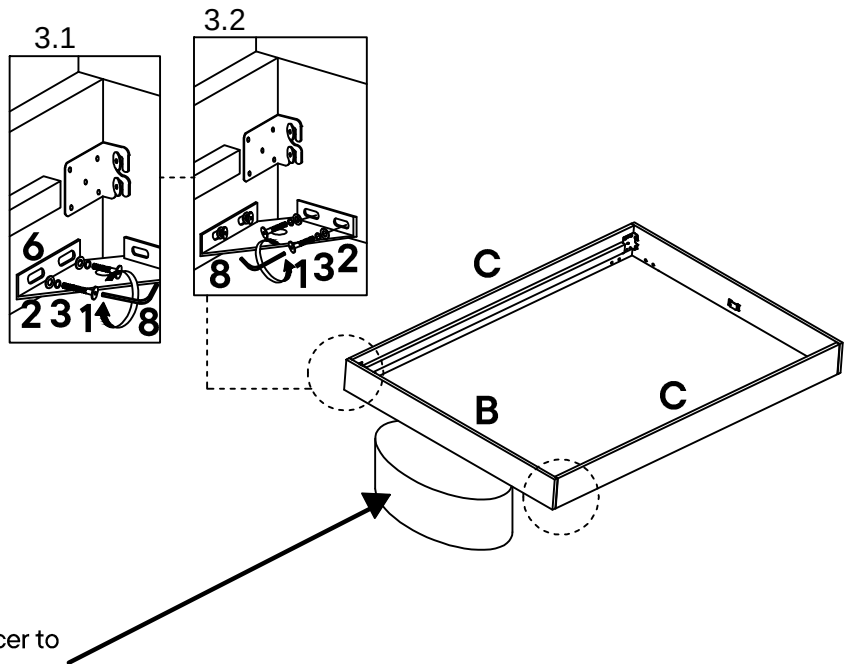

NOTE : Place a layer of foam or carton as a spacer to support the bed frame.

NOTE : Fully tighten the bolt 100%


Step 4

COMPONENT

B	Footboard	x1
C	Side Rail	x2
G	Bed Leg	x2

HARDWARE

2	M8 Flat Washer	x2
3	M8 Spring Washer	x2
4	5/16 Hex Nut	x2
7	Spanner 13mm	x1

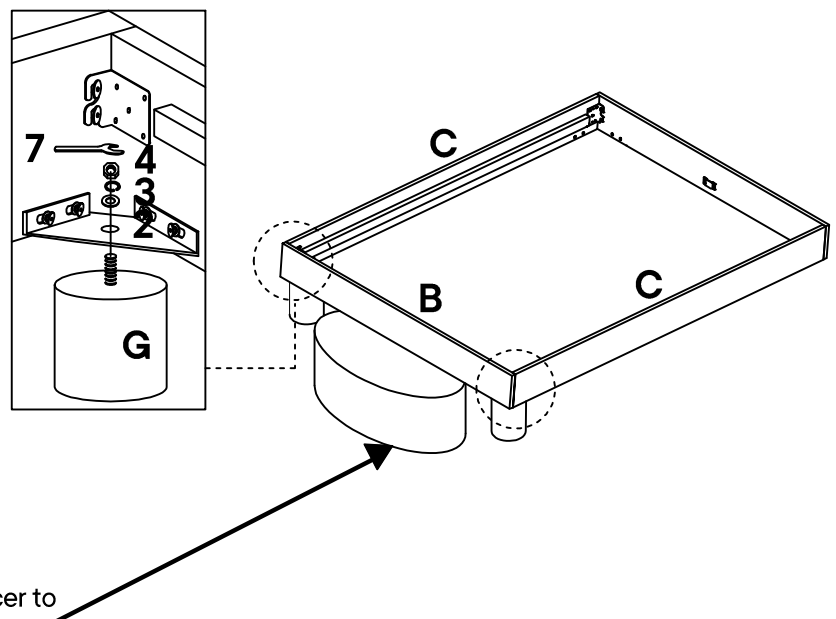

NOTE : Place a layer of foam or carton as a spacer to support the bed frame.


Step 5

COMPONENT

A	Headboard	x1
C	Side Rail	x2

HARDWARE

1	JCBB M8 x 16mm	x8
2	M8 Flat Washer	x8
3	M8 Spring Washer	x8
6	LB 001	x2
8	M5 Allen Key	x1

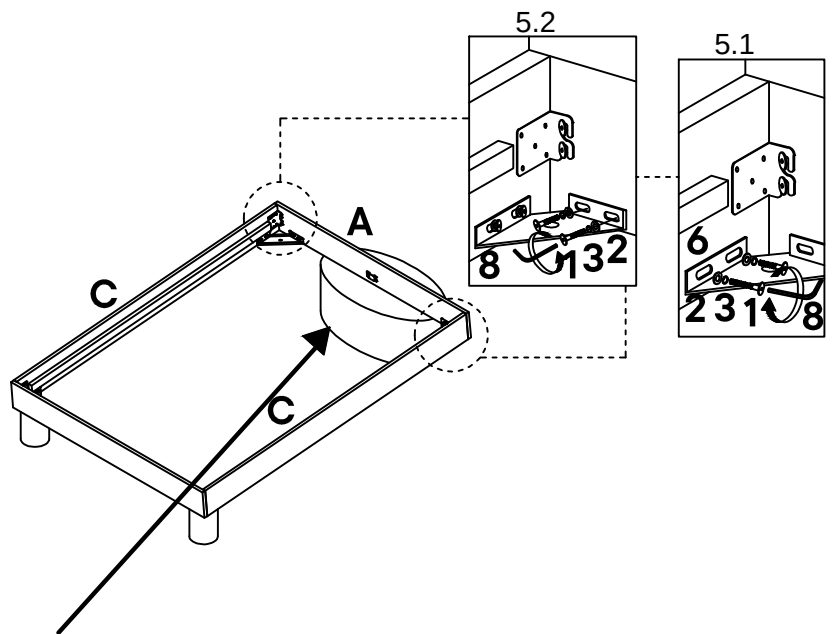

NOTE : Place a layer of foam or carton as a spacer to support the bed frame.


Step 6

COMPONENT

A	Headboard	x1
C	Side Rail	x2
G	Bed Leg	x2

HARDWARE

2	M8 Flat Washer	x2
3	M8 Spring Washer	x2
4	5/16 Hex Nut	x2
7	Spanner 13mm	x1

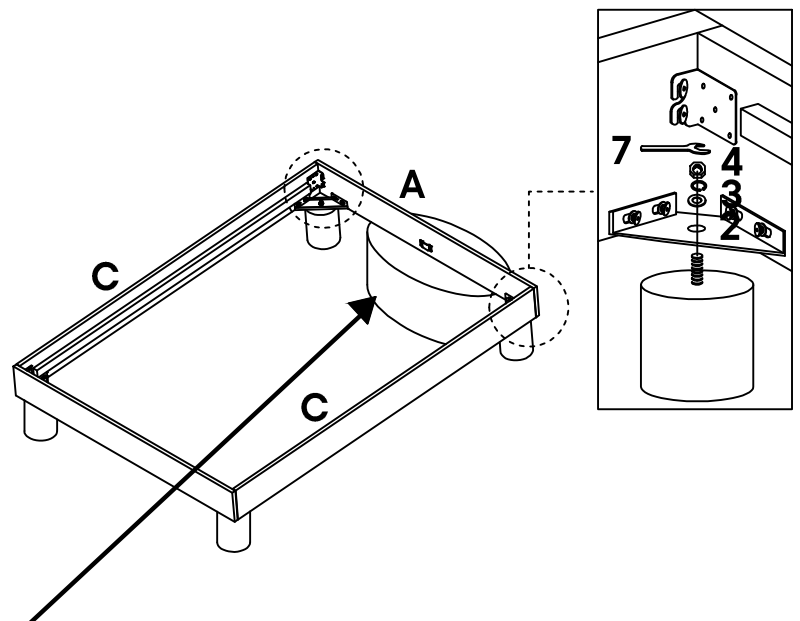


NOTE : Place a layer of foam or carton as a spacer to support the bed frame.

Step 7

COMPONENT


D	Center Rail	x1
E	Center Support Leg	x3

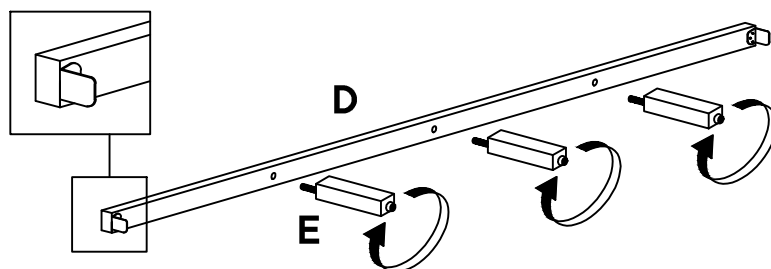

Step 8

COMPONENT

A	Headboard	x1
B	Footboard	x1
D	Center Rail	x1

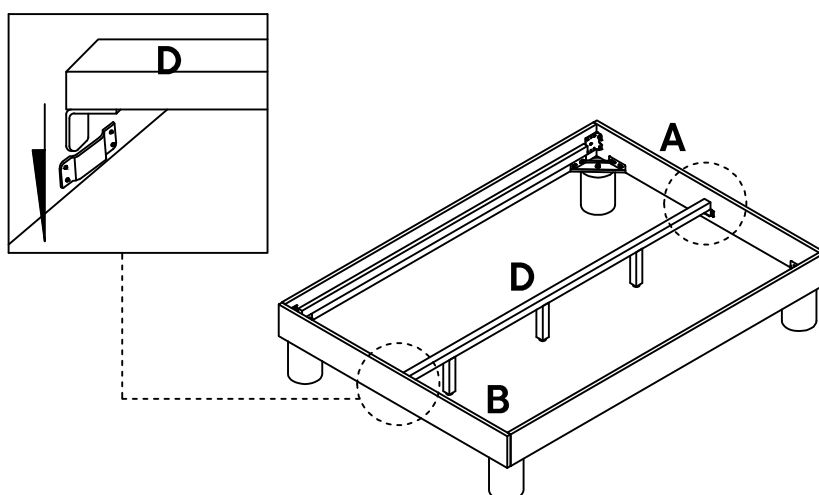


Step 9

COMPONENT

F BED SLAT x1

HARDWARE

5 Wood Screw M4 X 38mm x9

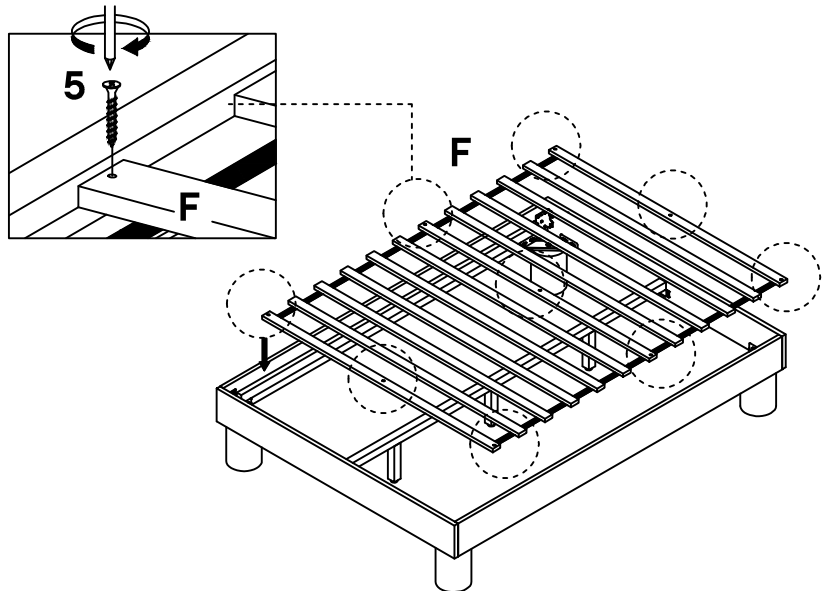

Great job!

Bed assembly is complete


♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner

Never use harsh chemicals, as they could damage the finish or integrity of the item.

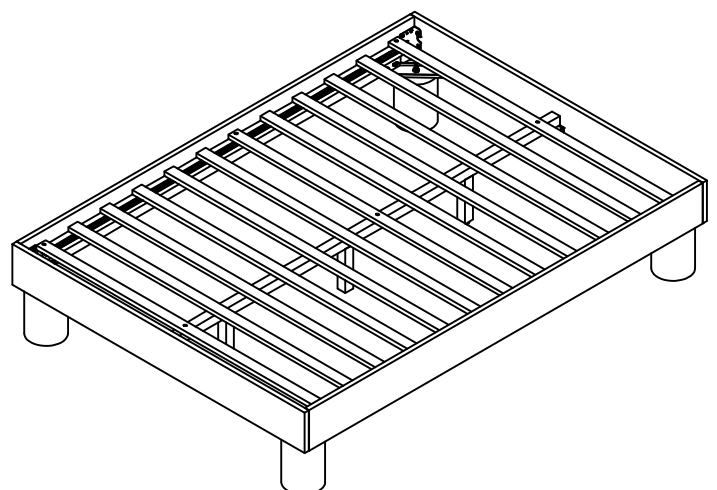

CONNECT WITH US!

Tag us @modway_furniture and #modway for a chance to be featured.