


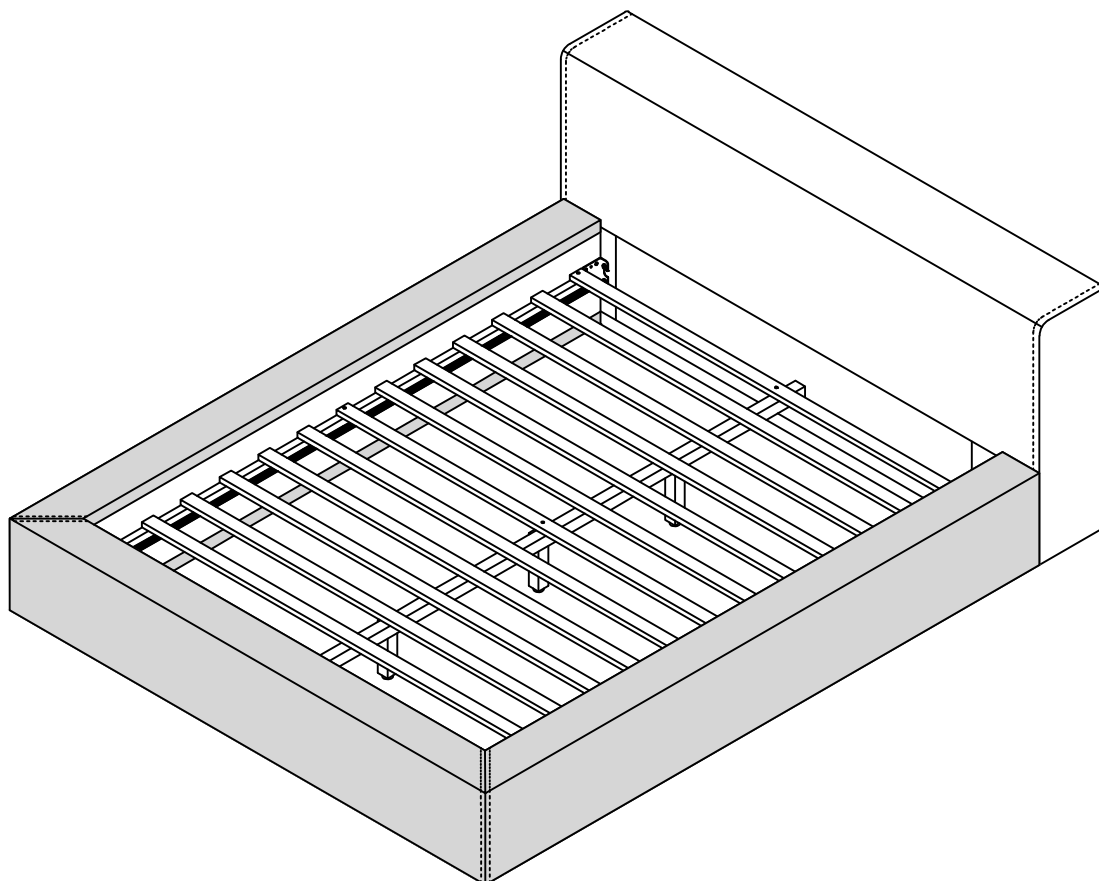

ASSEMBLY INSTRUCTIONS

Bed

MOD-7305, MOD-7307 / V0.09.22.25

modway



Questions? Contact us!
609.256.9000
cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Cleaning this slipcover in your washing machine may cause damage or shrinkage. Spot clean only with a damp cloth.

Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

1		Wood Screw M4 x 20mm	x2
2		Wood Screw M4 x 38mm	x9
3		M5 Allen Key	x1

FURNITURE COMPONENTS:

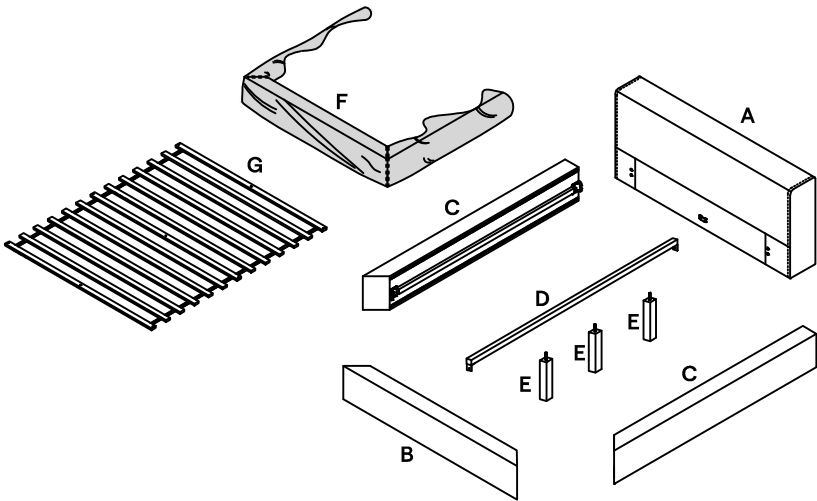

Carton 1 of 3

A	Headboard	x1
---	-----------	----

Carton 2 of 3

B	Footboard	x1
---	-----------	----

C	Side Rail	x2
---	-----------	----

D	Center Rail	x1
---	-------------	----

E	Center Support Leg	x3
---	--------------------	----

F	Slip Cover	x1
---	------------	----

	Hardware Pack	x1
--	---------------	----

Carton 3 of 3

G	Bed Slat	x1
---	----------	----

What you need:



Phillips Head Screwdriver

STEP 01


HARDWARE

3 M5 Allen Key x1

COMPONENTS

A Headboard x1

B Footboard x1

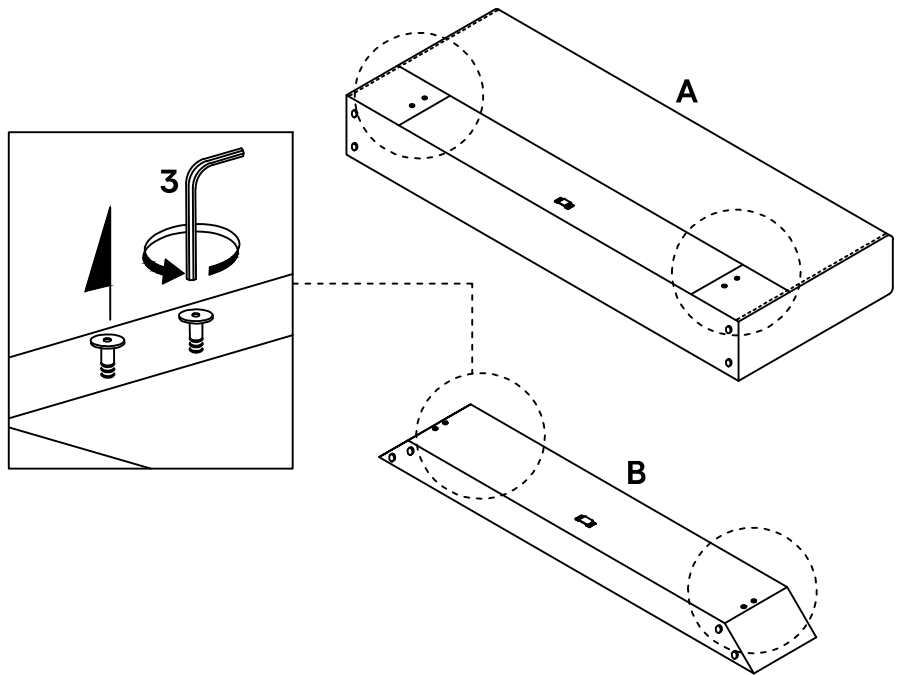

STEP 02


HARDWARE

3 M5 Allen Key x1

COMPONENTS

B Footboard x1


C Side Rail x2

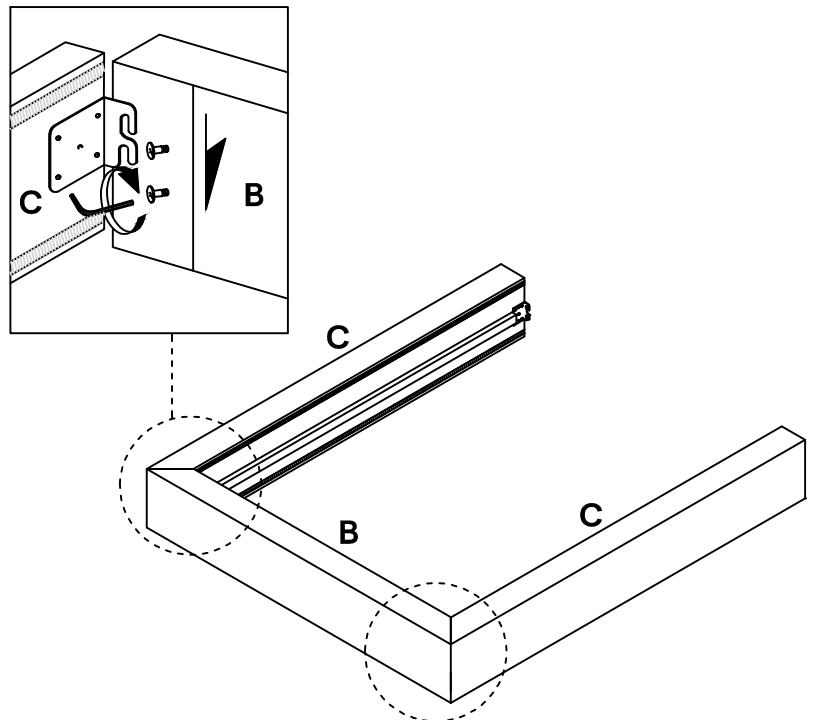

STEP 03

COMPONENTS

B	Footboard	x1
C	Side Rail	x2
F	Slip Cover	x1

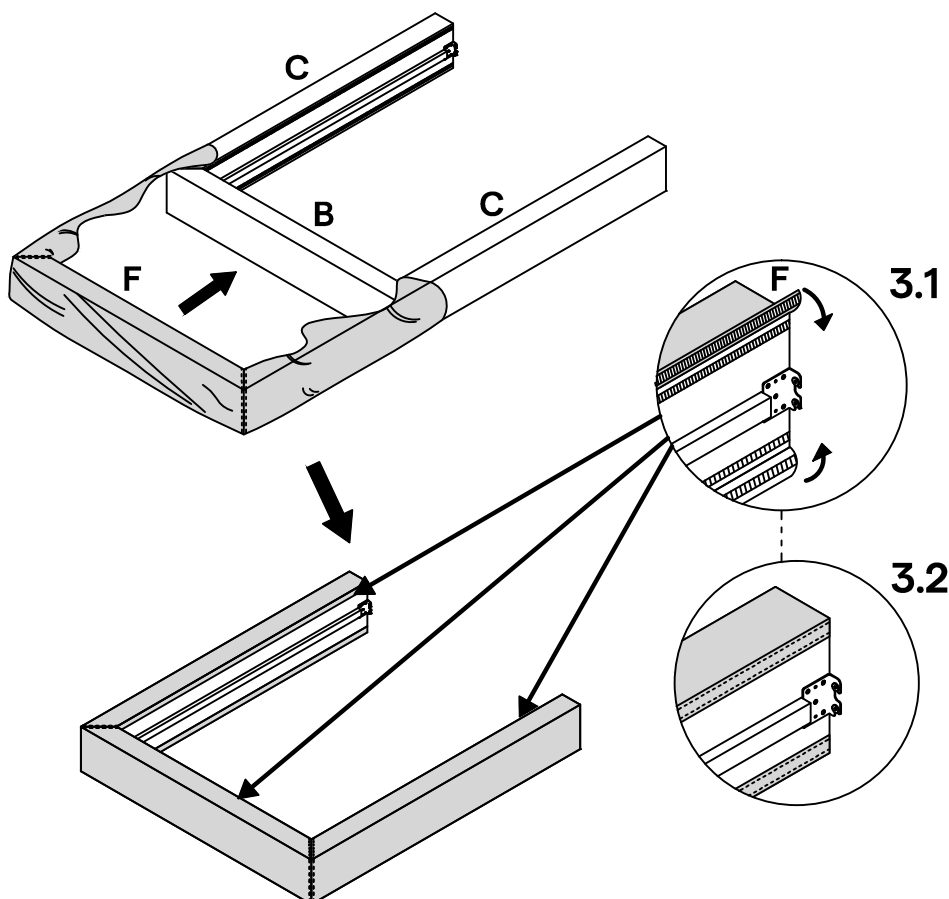


STEP 04

HARDWARE

3	M5 Allen Key	x1
----------	--------------	----

COMPONENTS


A	Headboard	x1
C	Side Rail	x2

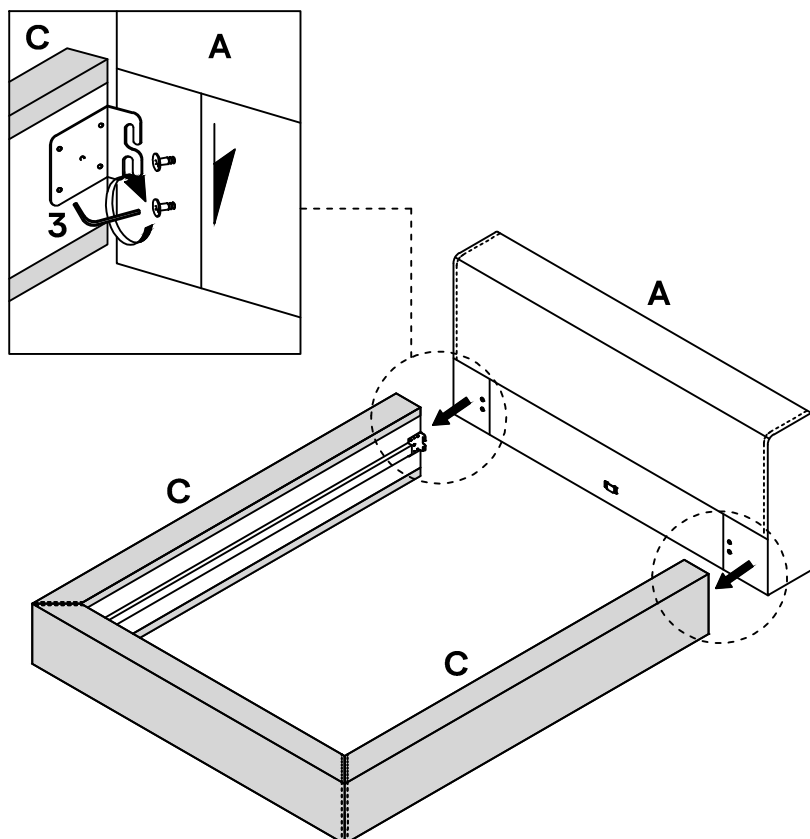

STEP 05

COMPONENTS

- | | | |
|----------|--------------------|----|
| D | Center Rail | x1 |
| E | Center Support Leg | x3 |

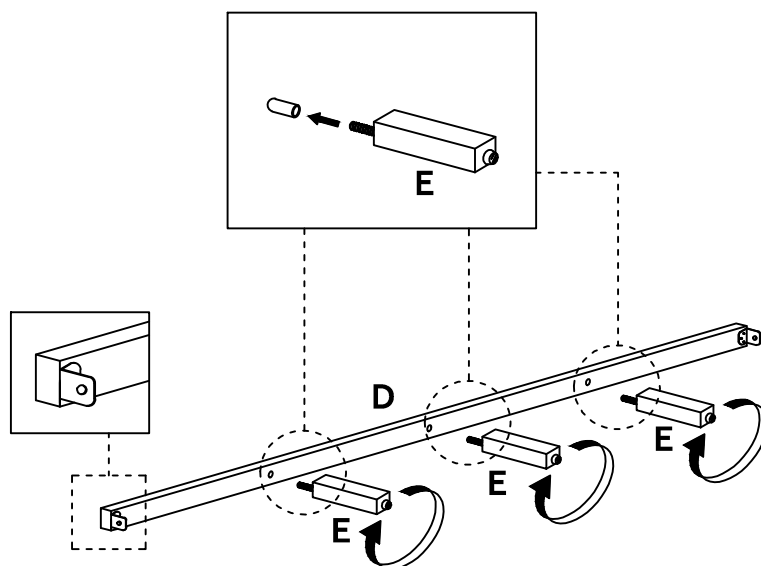


STEP 06

HARDWARE

- | | | |
|----------|----------------------|----|
| 1 | Wood Screw M4 x 20mm | x2 |
|----------|----------------------|----|

COMPONENTS

- | | | |
|----------|-------------|----|
| A | Headboard | x1 |
| B | Footboard | x1 |
| D | Center Rail | x1 |

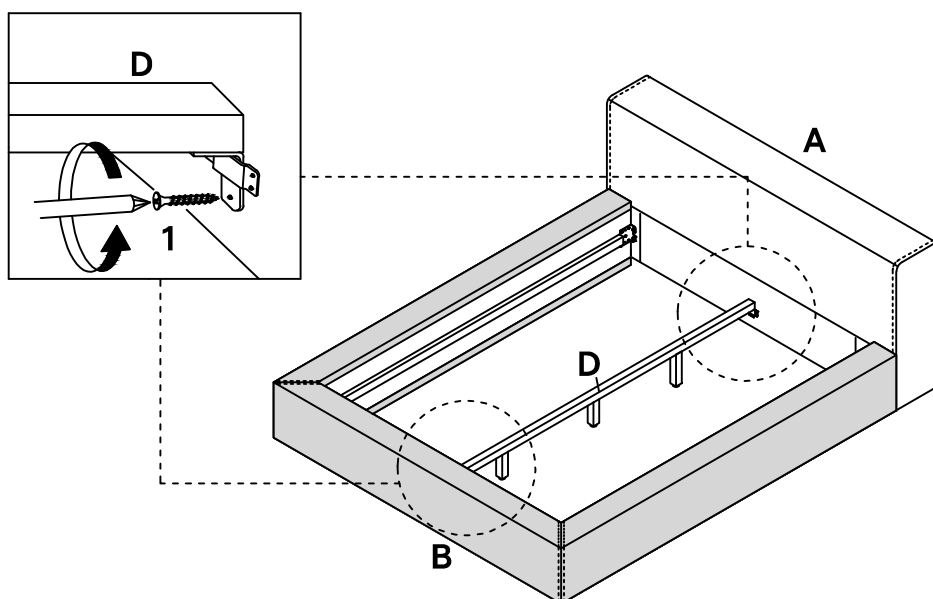

STEP 07


HARDWARE

2 Wood Screw M4 x 38mm x9

COMPONENTS

C Side Rail x2

G Bed Slat x1

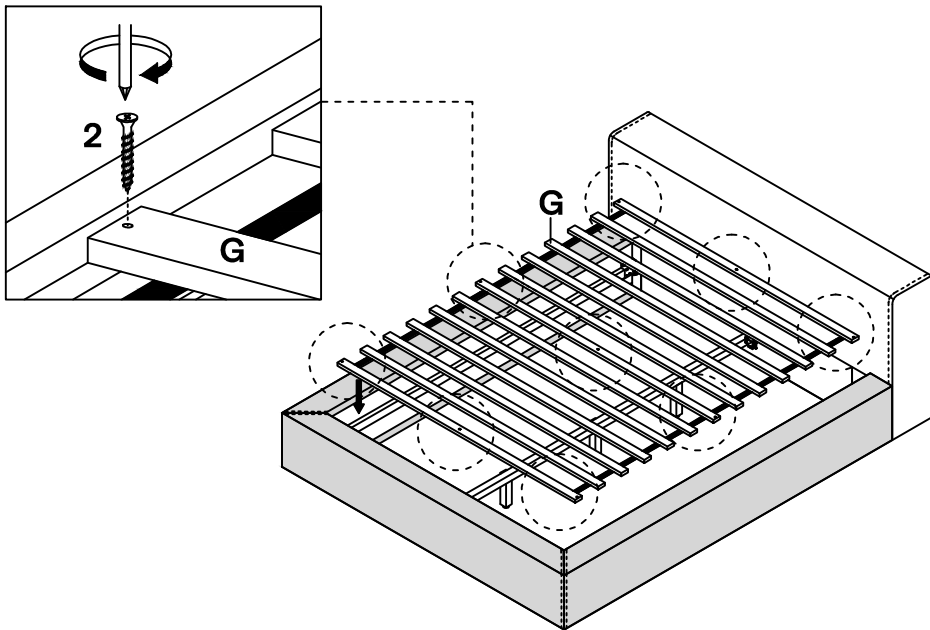


Great job!

Bed assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

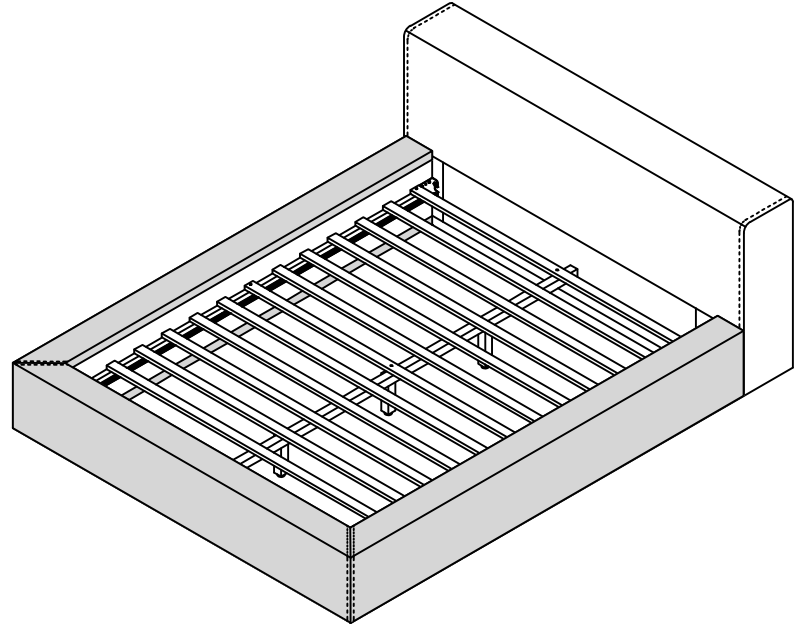

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com