


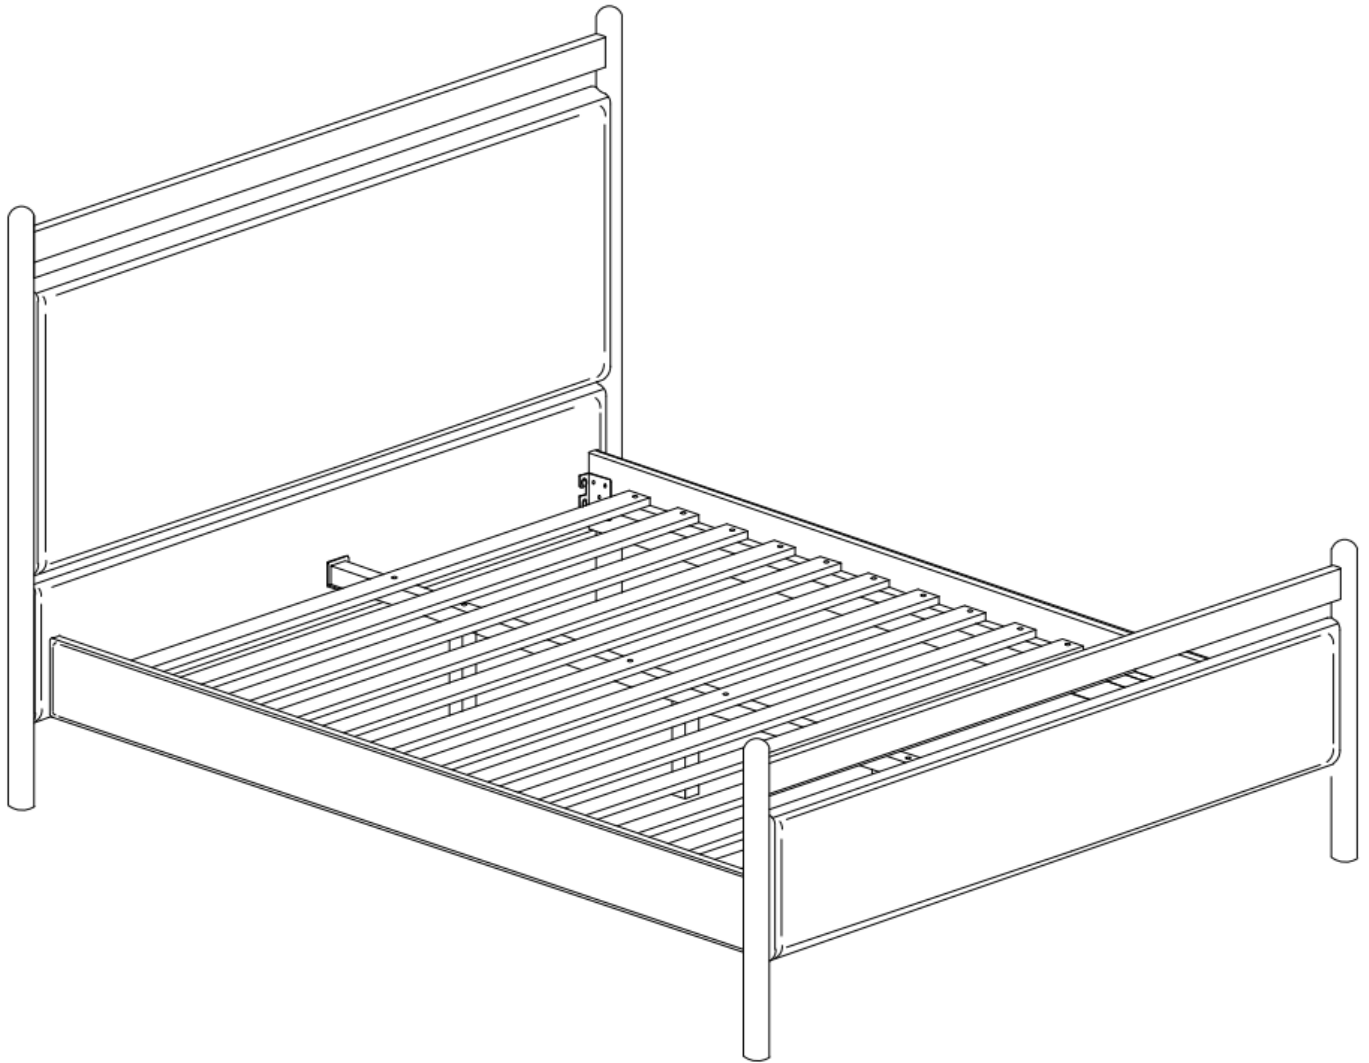

ASSEMBLY INSTRUCTIONS

Queen Bed

MOD-7248,7249 / V0.03.18.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 30 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Care instructions are listed in the last step of this manual.

WAIT!

Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

1		JCBC BOLT M6 x 15mm	x4
2		JCBC BOLT M6 x 20mm	x8
3		JCBC BOLT M6 x 40mm	x16
4		JCBC BOLT M6 x 90mm	x11
5		ADJUSTABLE FOOT	x3
6		BARREL NUT	x3
7		WOOD DOWEL M16 x 75mm	x12
8		WOOD SCREW M4 x 32mm	x18
9		M6 SPRING WASHER	x8
10		M6 FLAT WASHER	x8
11		L BRACKET	x2
12		M4 ALLEN KEY	x1

All parts are numbered with a sticker according to this list.

All parts are numbered with a sticker according to this list.

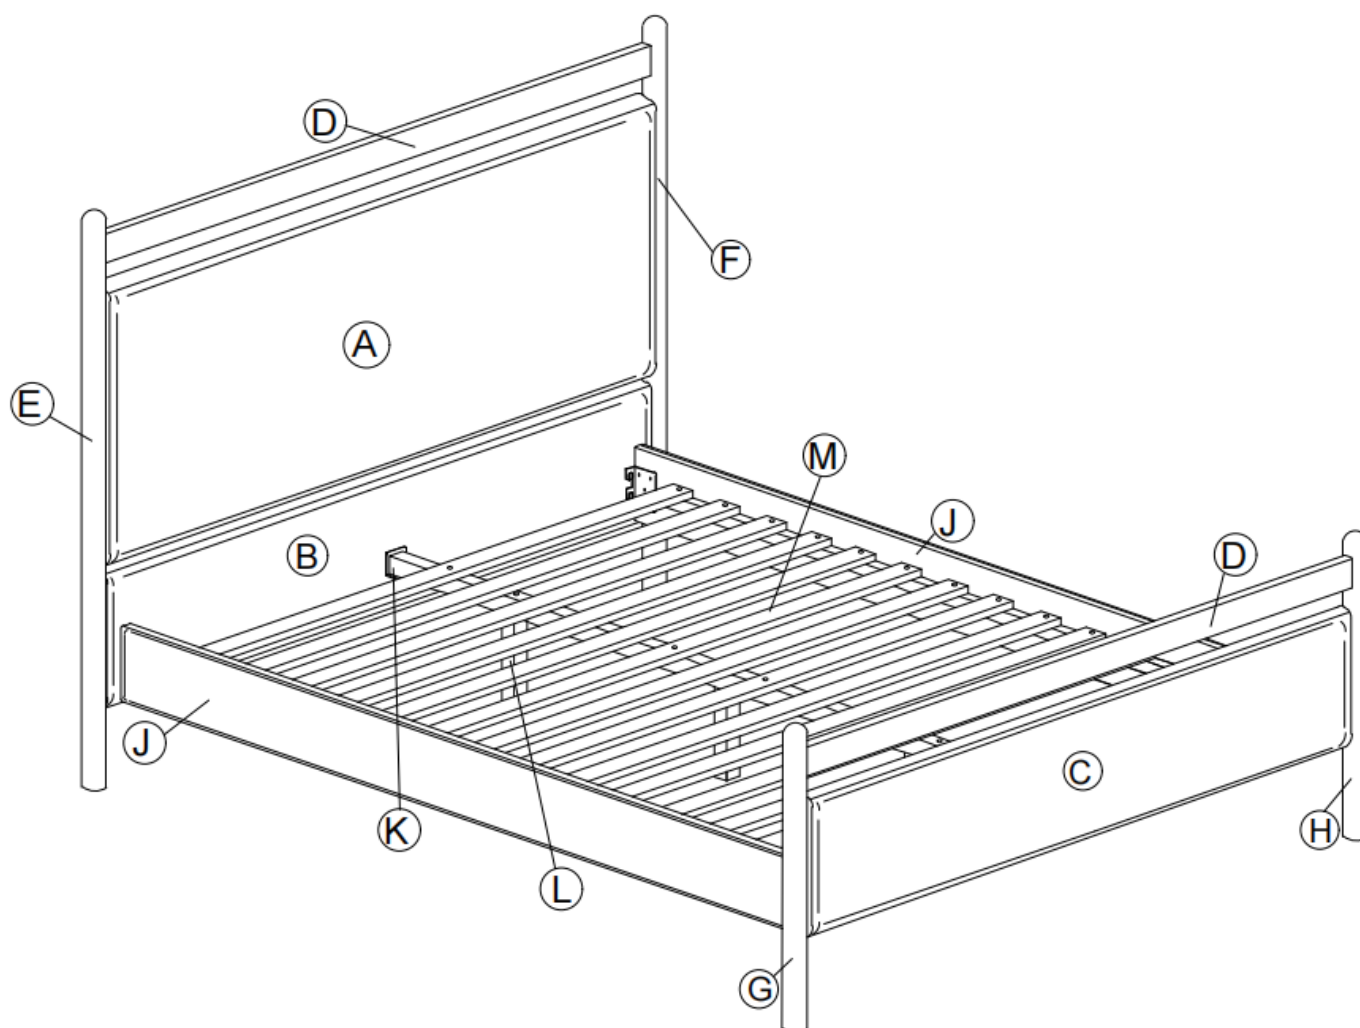

Box 1 of 2

A	HEADBOARD PANEL (UPPER)	x1
B	HEADBOARD PANEL (LOWER)	x1
C	FOOTBOARD PANEL	x1
D	HB/FB TOP BAR	x2

Box 2 of 2

E	HEADBOARD POST (L)	x1
F	HEADBOARD POST (R)	x1
G	FOOTBOARD POST (L)	x1
H	FOOTBOARD POST (R)	x1
J	SIDE RAIL	x2
K	LONG SUPPORT	x1

L	SUPPORT LEG	x3
M	BED SLATS	x1
	HARDWARE PACK	x1

STEP 01

HARDWARE

4 JCBC BOLT M6 x 90mm x3

5 ADJUSTABLE FOOT x3

6 BARREL NUT x3


COMPONENTS

K LONG SUPPORT x1

L SUPPORT LEG x3

TOOLS

12 M4 ALLEN KEY x1

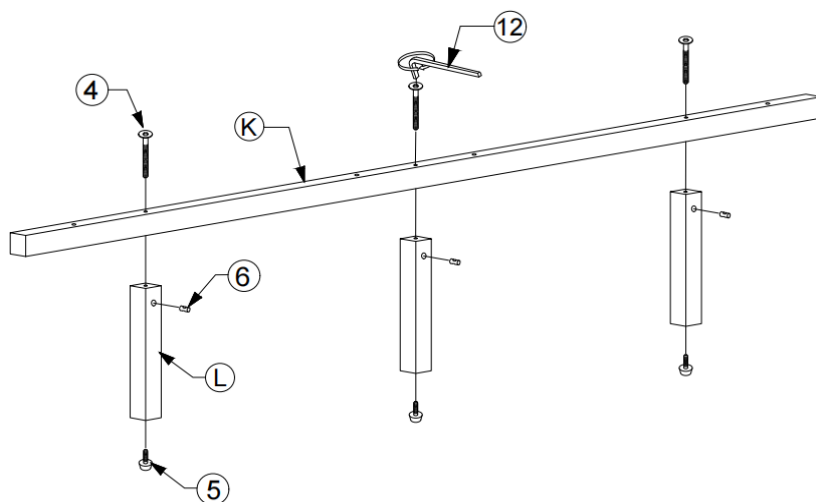

STEP 02

HARDWARE

1 JCBC BOLT M6 x 15mm x1


11 L BRACKET x1

COMPONENTS

B HEADBOARD PANEL (LOWER) x1

TOOLS

12 M4 ALLEN KEY x1

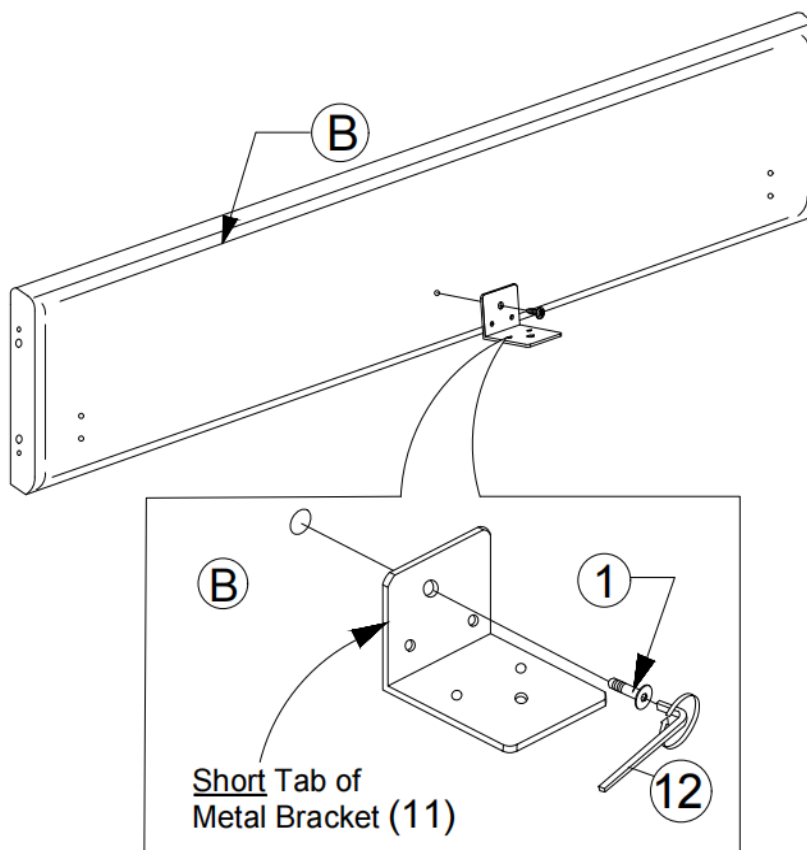

STEP 03

HARDWARE


3	JCBC BOLT M6 x 40mm	x4
4	JCBC BOLT M6 x 90mm	x4
7	WOOD DOWEL M16 x 75mm	x8

COMPONENTS

A	HEADBOARD PANEL (UPPER)	x1
B	HEADBOARD PANEL (LOWER)	x1
D	HB/FB TOP BAR	x1
E	HEADBOARD POST (L)	x1
F	HEADBOARD POST (R)	x1

TOOLS

12	M4 ALLEN KEY	x1
-----------	--------------	----

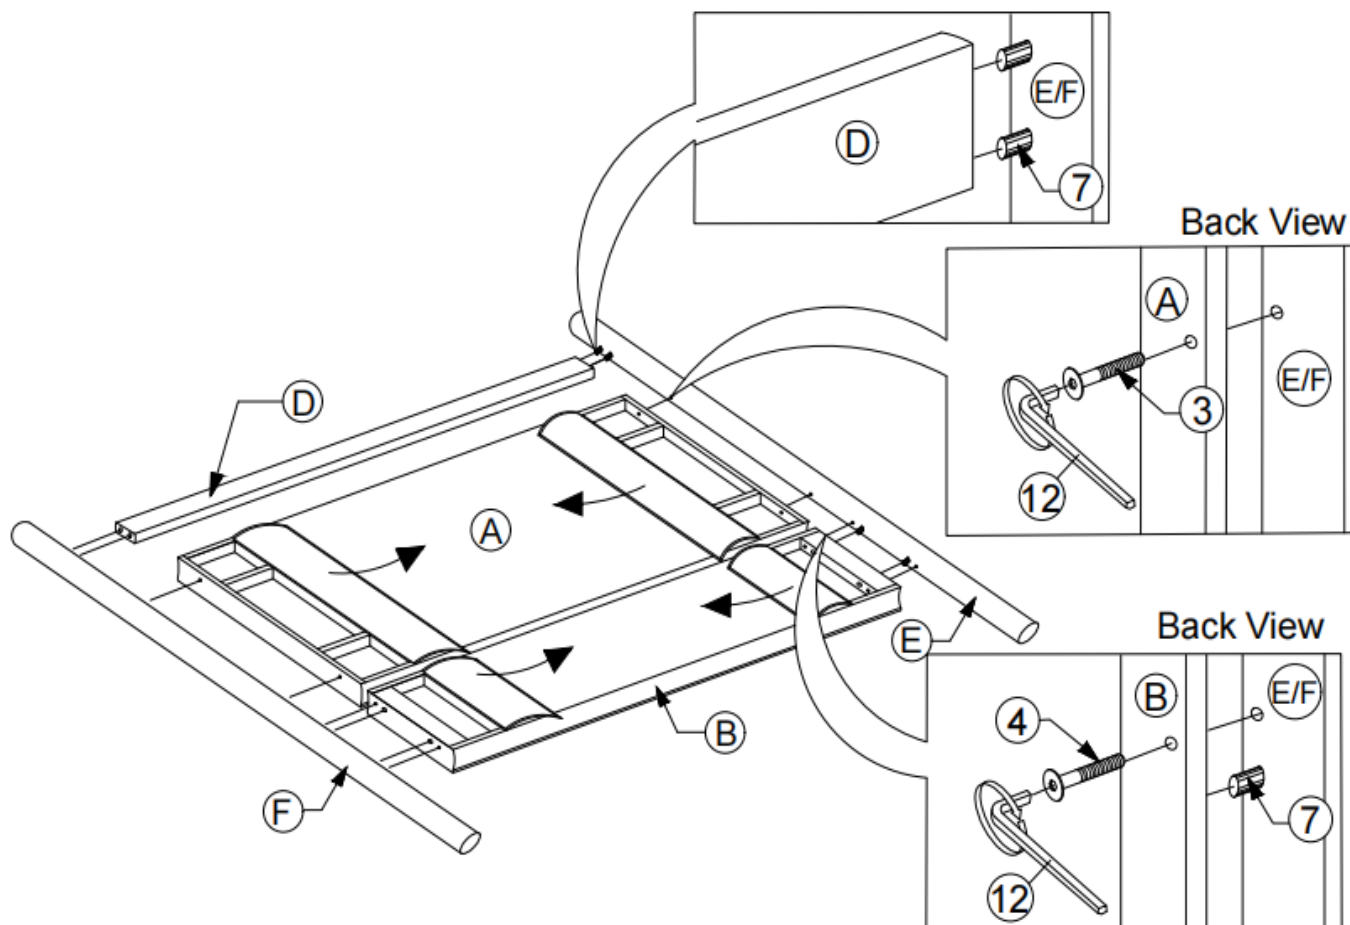

STEP 04

HARDWARE


1	JCBC BOLT M6 x 15mm	x1
4	JCBC BOLT M6 x 90mm	x4
7	WOOD DOWEL M16 x 75mm	x4
11	L BRACKET	x1

COMPONENTS

C	FOOTBOARD PANEL	x1
D	HB/FB TOP BAR	x1
G	FOOTBOARD POST (L)	x1
H	FOOTBOARD POST (R)	x1

TOOLS

12	M4 ALLEN KEY	x1
-----------	--------------	----

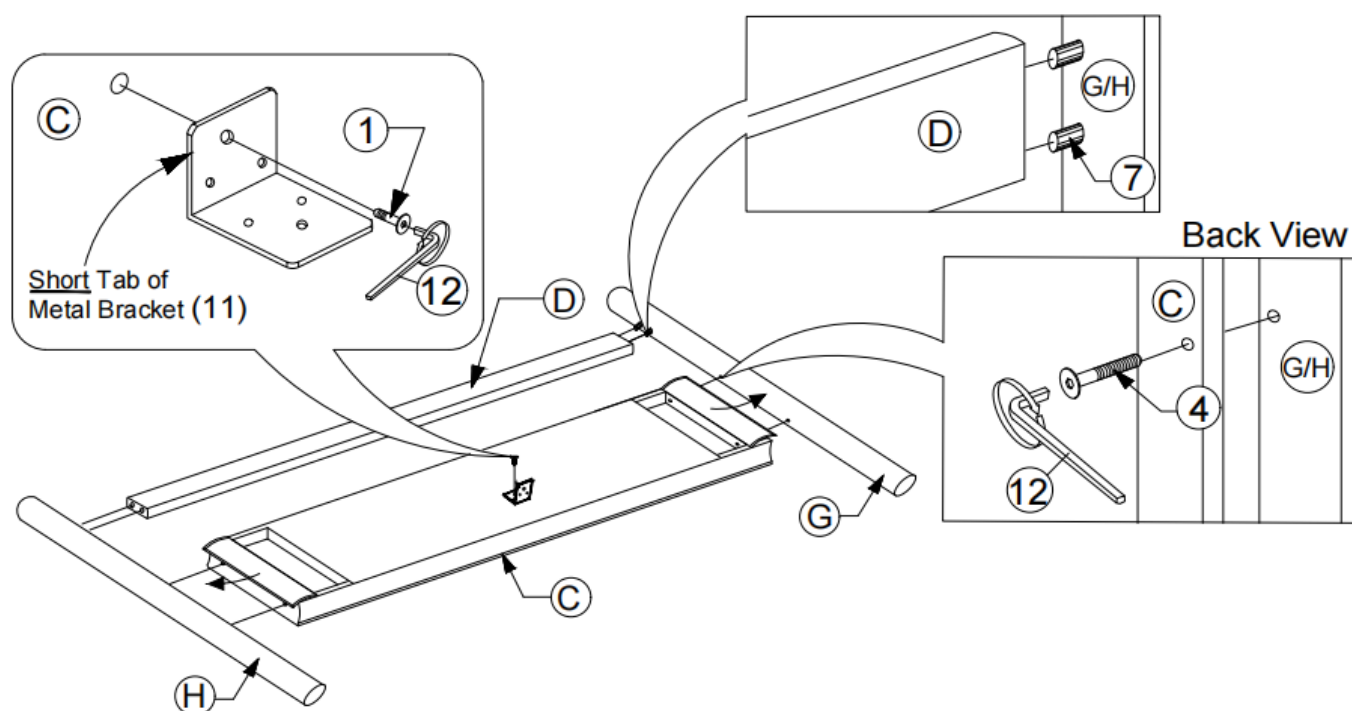

STEP 05

HARDWARE


2	JCBC BOLT M6 x 20mm	x8
9	M6 SPRING WASHER	x8
10	M6 FLAT WASHER	x8

COMPONENTS

B	HEADBOARD PANEL (LOWER)	x1
C	FOOTBOARD PANEL	x1
J	SIDE RAIL	x2

TOOLS

12	M4 ALLEN KEY	x1
-----------	--------------	----

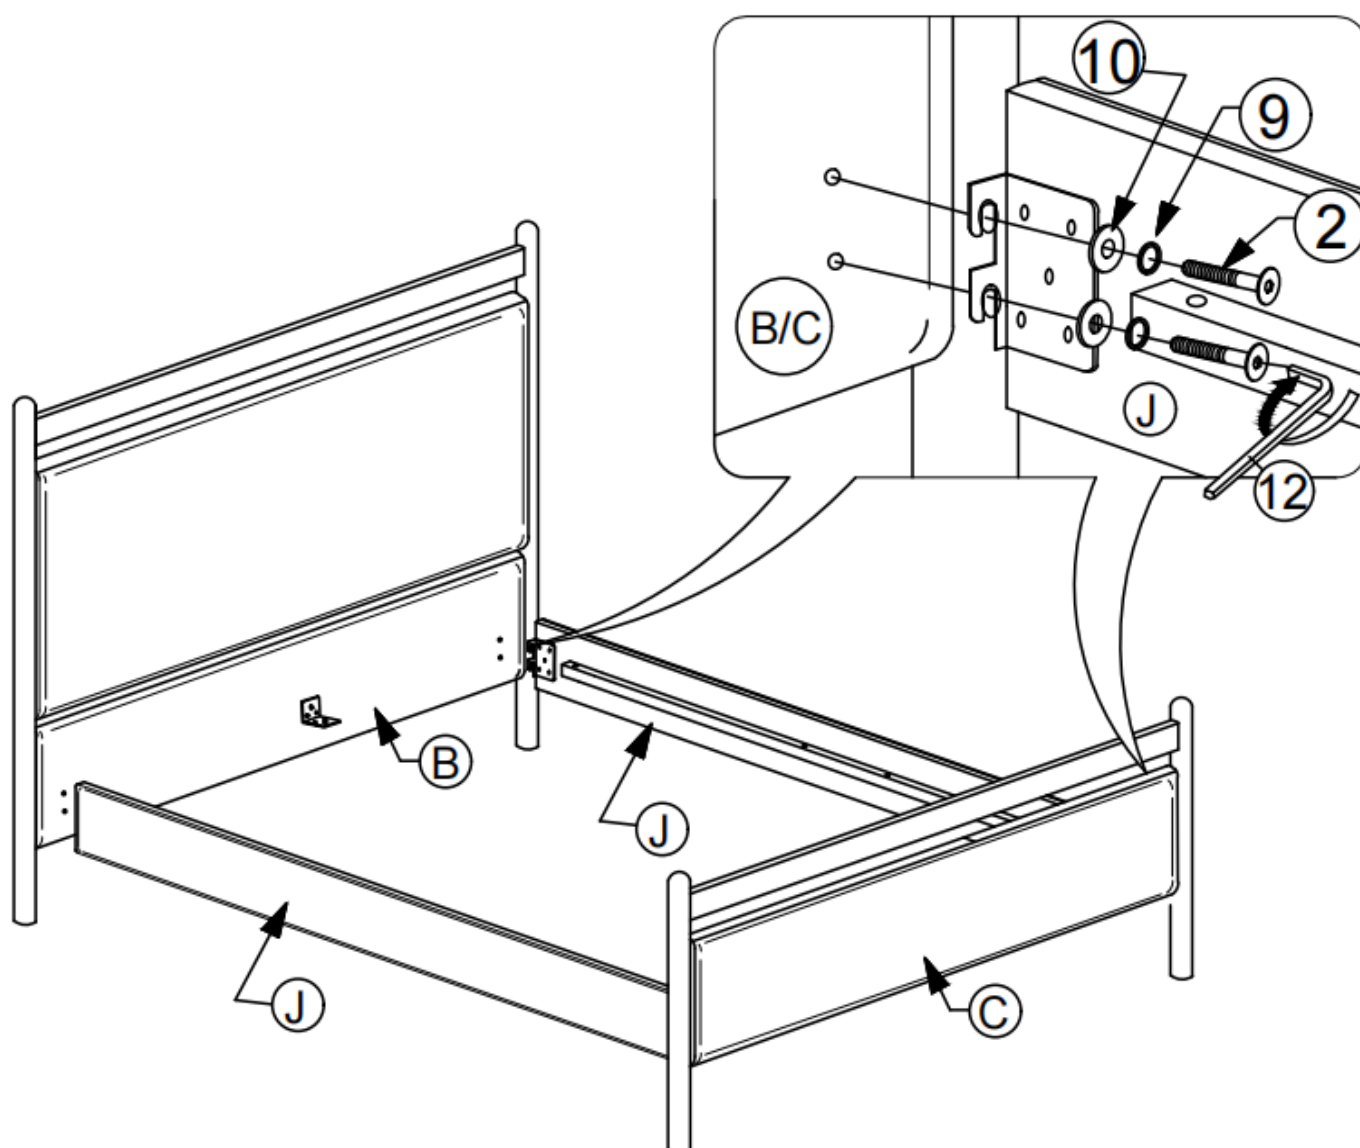

STEP 06

HARDWARE

1 JCBC BOLT M6 x 15mm x2

COMPONENTS


B HEADBOARD PANEL (LOWER) x1

C FOOTBOARD PANEL x1

K LONG SUPPORT x1

TOOLS

12 M4 ALLEN KEY x1

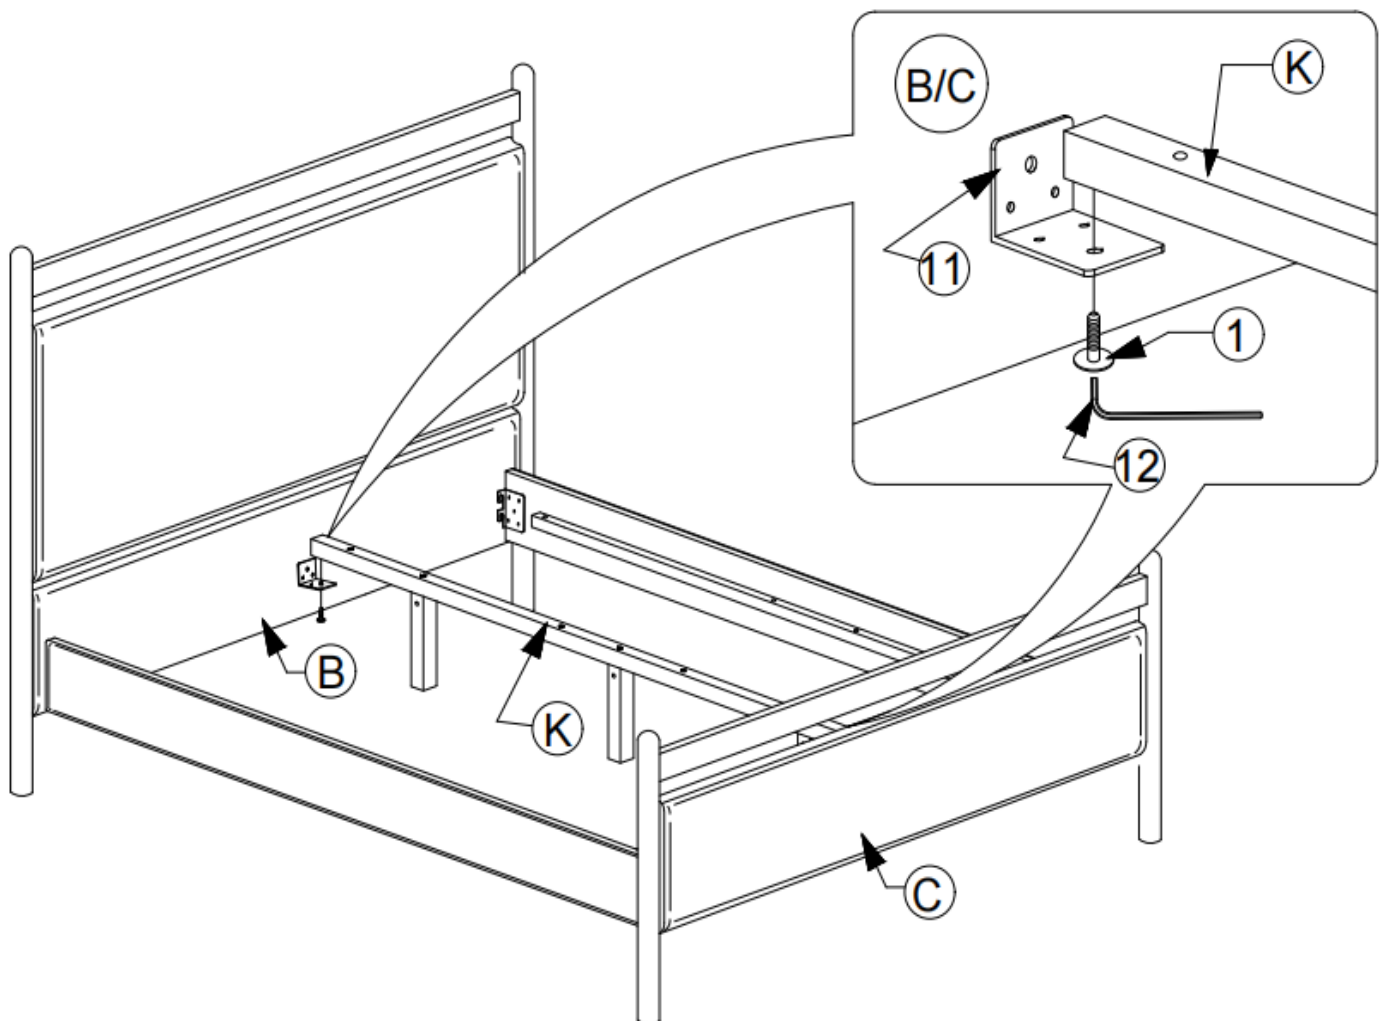

STEP 07

HARDWARE

3 JCBC BOLT M6 x 40mm x12

COMPONENTS


J SIDE RAIL x2

K LONG SUPPORT x1


M BED SLATS x1

TOOLS

12 M4 ALLEN KEY x1

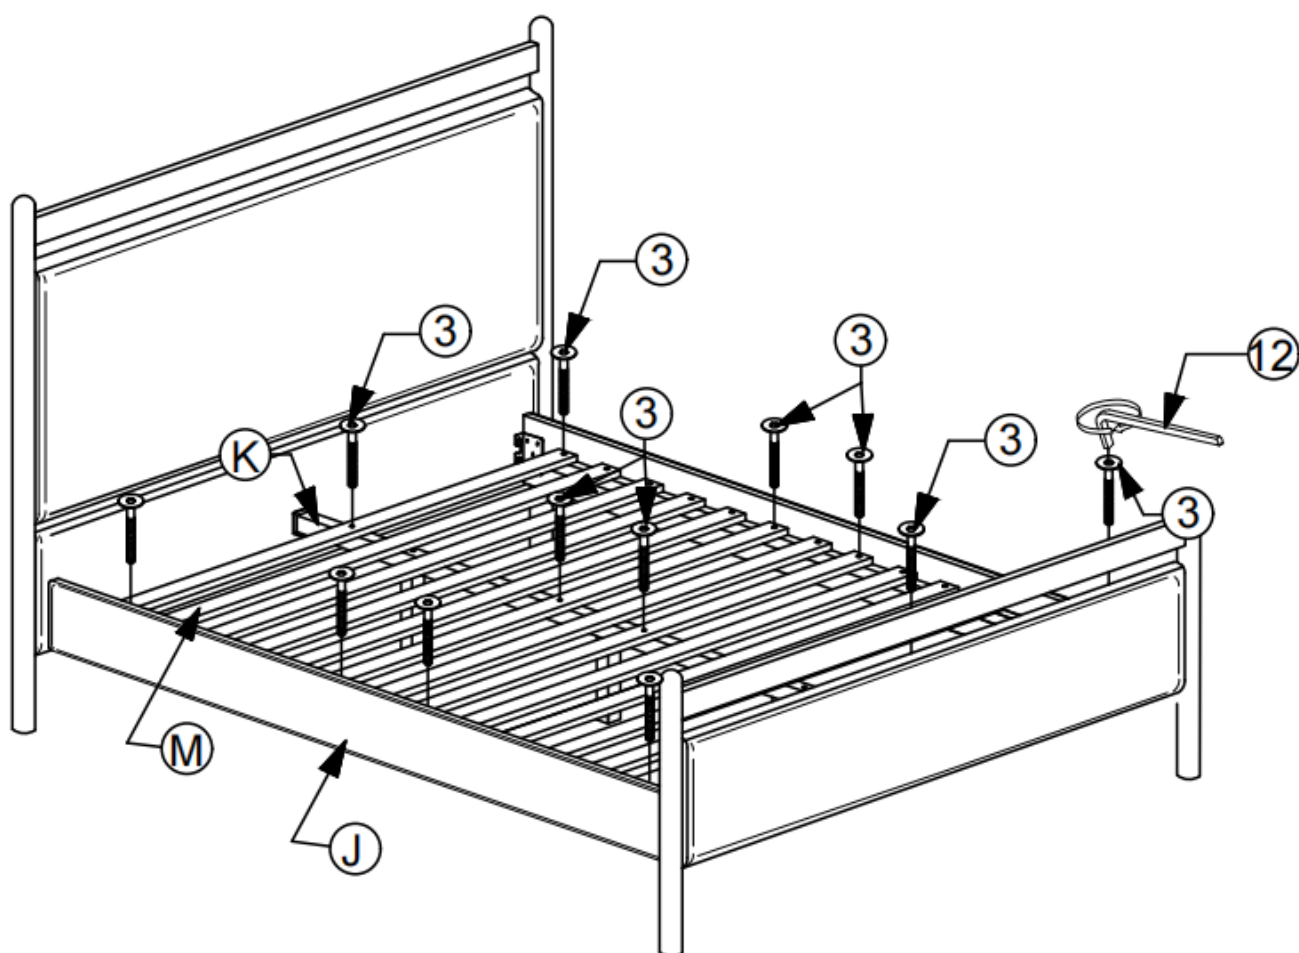


STEP 08

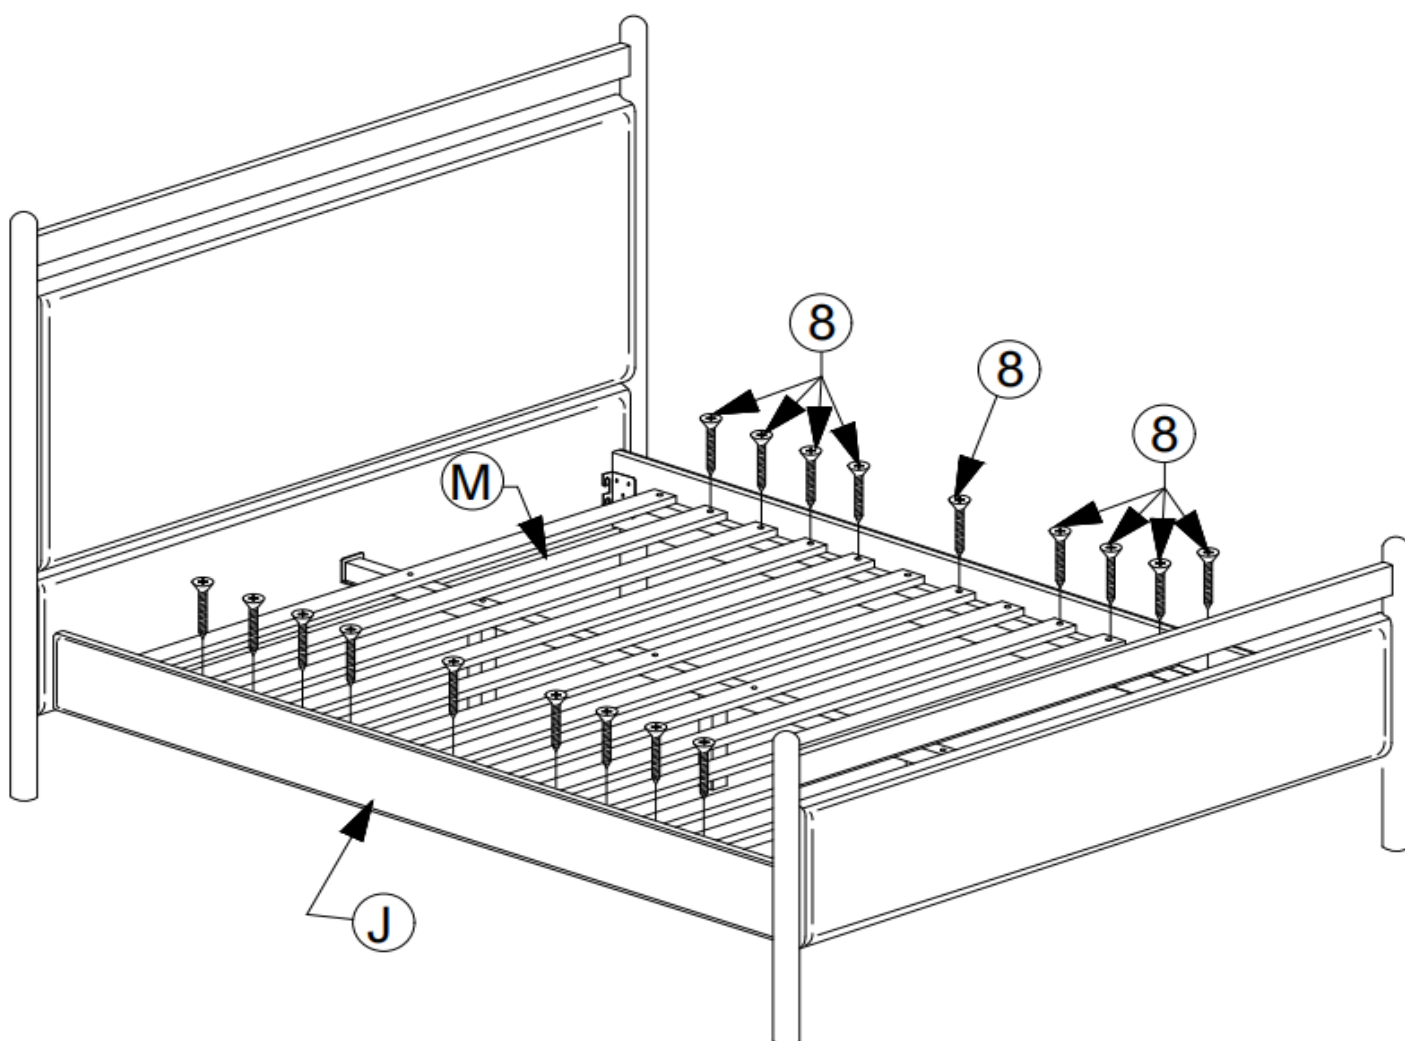HARDWARE**8** WOOD SCREW M4 x 32mm x18**COMPONENTS****J** SIDE RAIL x2**M** BED SLATS x1

Great job!

Your new bed is complete.

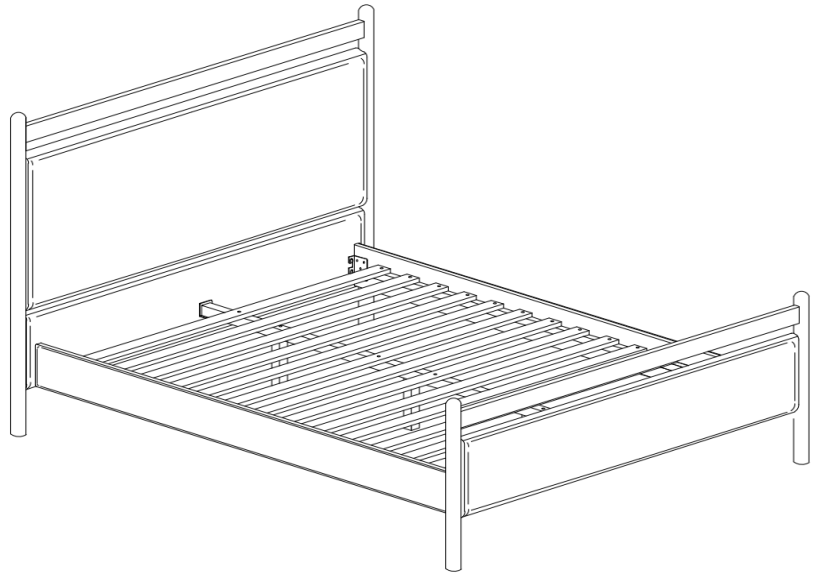

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.



CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!
609.256.9000
cs@modway.com