


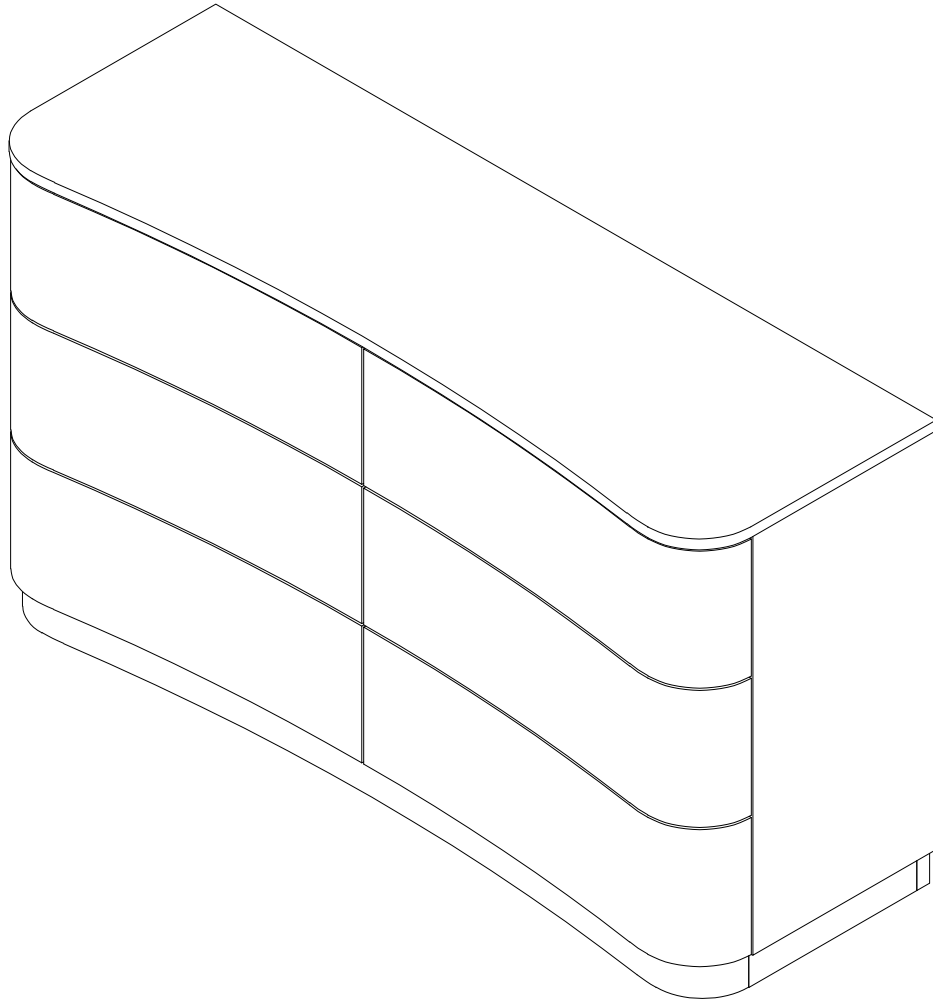

ASSEMBLY INSTRUCTIONS

6 Drawer Dresser

MOD-7229 / V0.07.07.25

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome. Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.






Care instructions are listed in the last step of this manual.

WAIT!


Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!




HARDWARE INCLUDED IN THE BOX:

A		Screw M6 x 9 mm	x36
B		Screw M6 x 40 mm	x34
C		Wood Dowel Ø6 x 20mm	x24
D		Wood Dowel Ø8 x 25mm	x29
E		Wood Dowel Ø8 x 50mm	x8
F		Cam Bolt 20 x 5 mm	x52
G		Cam Lock 15/12	x16
H		Cam Lock 15/10	x36
J1		Push Open Drawer Slide CR (300mm)	x6
J2		Push Open Drawer Slide CL (300mm)	x6
K		Plastic Leg Stud	x6
L		Allen Key	x1
		Tipping Restraint Kit	x1

WHAT YOU NEED:




Phillips Head Screwdriver



Mallet

FURNITURE COMPONENTS INCLUDED IN THE BOX:

All parts are numbered with a sticker according to this list.

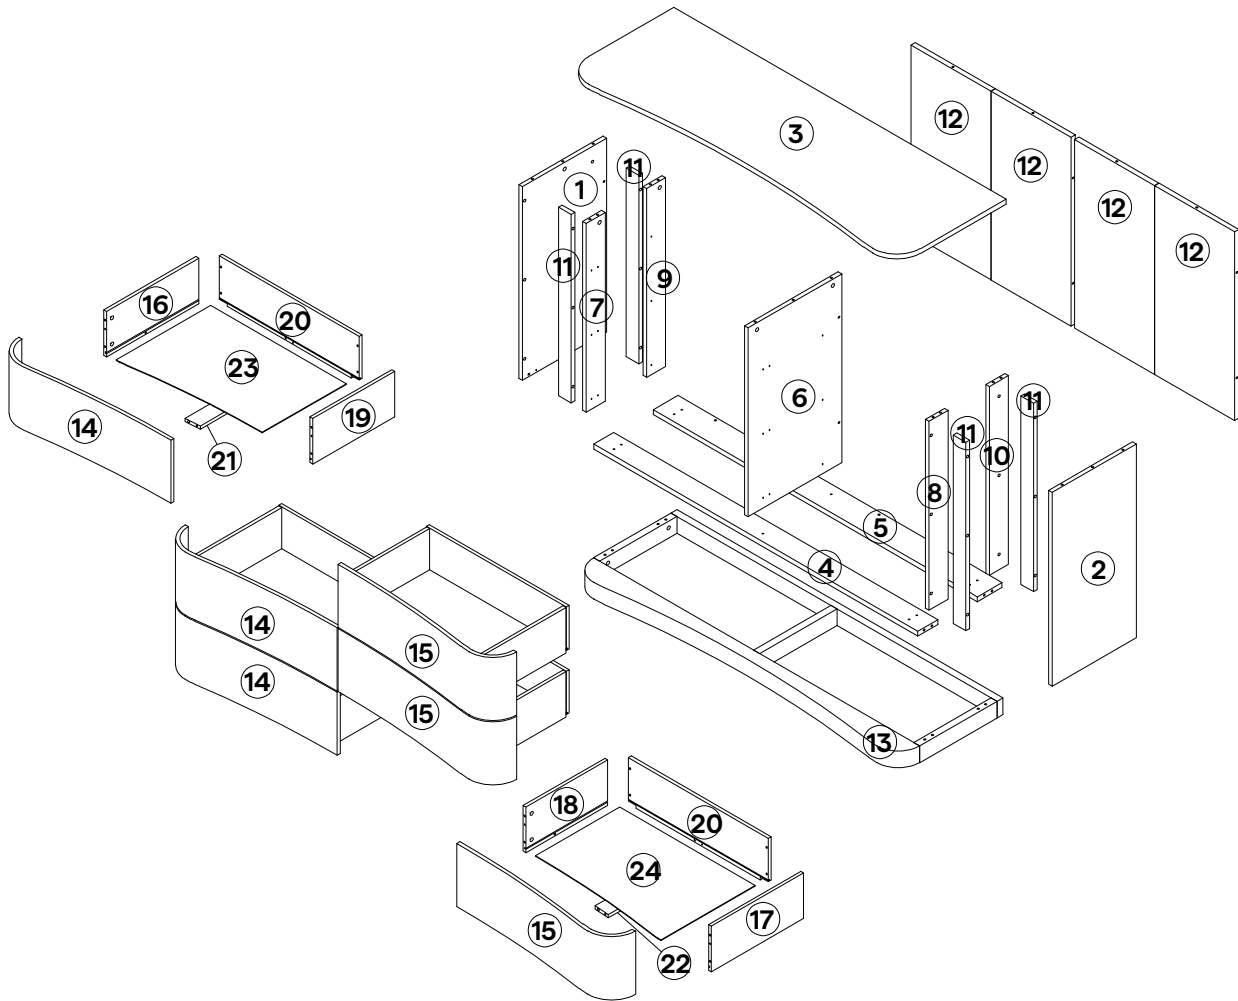

1	Left Side Panel	x1	9	Left Side Support Panel	x1	17	Right Drawer Right Drawer Side	x3
2	Right Side Panel	x1	10	Right Side Support Panel	x1	18	Right Drawer Left Drawer Side	x3
3	Top Panel	x1	11	Front Panel	x4	19	Left Drawer Right Drawer Side	x3
4	Front Rail Panel Bottom	x1	12	Back Panel	x4	20	Drawer Back	x6
5	Back Rail Panel Bottom	x1	13	Bottom Frame	x1	21	Left Drawer Drawer Support	x3
6	Divider Panel	x1	14	Left Drawer Front	x3	22	Right Drawer Drawer Support	x3
7	Left Side Rail Panel	x1	15	Right Drawer Front	x3	23	Left Drawer Drawer Bottom	x3
8	Right Side Rail Panel	x1	16	Left Drawer Left Drawer Side	x3	24	Right Drawer Drawer Bottom	x3

HARDWARE

- D** Wood Dowel Ø8 x 25mm x17
E Wood Dowel Ø8 x 50mm x8
F Cam Bolt 20 x 5 mm x4


COMPONENTS

- 1** Left Side Panel x1
2 Right Side Panel x1
6 Divider Panel x1
12 Back Panel x4

1.1 Insert **Wood Dowel (D)** into the innermost pre-drilled holes on the top edge of **Left Side Panel (1)**, **Right Side Panel (2)**, **Divider Panel (6)**, top edge, bottom edge, left edge and right edge of **Back Panel (12)**.

1.2 Insert **Wood Dowel (E)** into the innermost pre-drilled holes on the left edge and right edge of **Back Panel (12)**.


1.3 Insert **Cam Bolt (F)** into the innermost pre-drilled holes on the right side of **Left Side Panel (1)** and the left side of **Right Side Panel (2)**.

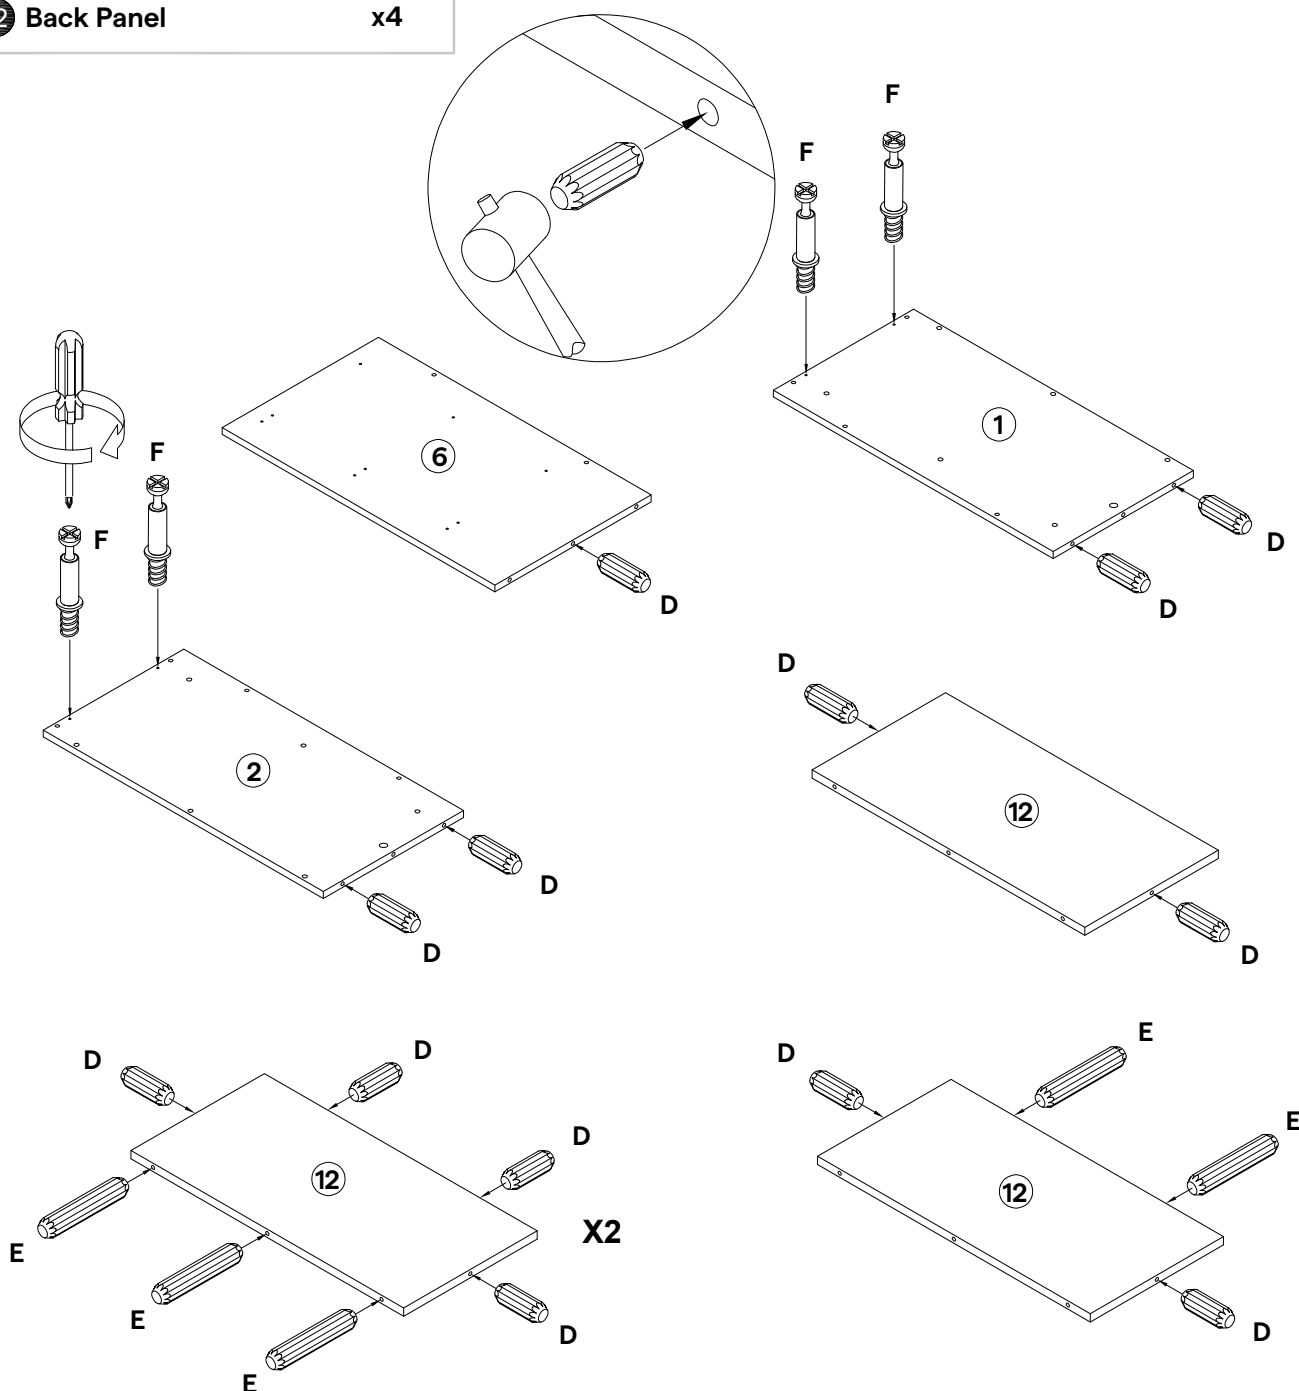

HARDWARE**(D)** Wood Dowel Ø8 x 25mm x8**(F)** Cam Bolt 20 x 5 mm x4**COMPONENTS****(4)** Front Rail Panel Bottom x1**(5)** Back Rail Panel Bottom x1**(7)** Left Side Rail Panel x1**(8)** Right Side Rail Panel x1**(9)** Left Side Support Panel x1**(10)** Right Side Support Panel x1

2.1 Insert **Wood Dowel (D)** into innermost pre-drilled holes on the top edge of **Left Side Rail Panel (7)**, **Right Side Rail Panel (8)**, **Left Side Support Panel (9)** and **Right Side Support Panel (10)** left and right edge of **Front Rail Panel Bottom (4)** and **Back Rail Panel Bottom (5)**.

2.2 Insert **Cam Bolt (F)** into innermost pre-drilled holes on the bottom side of **Front Rail Panel Bottom (4)** and **Back Rail Panel Bottom (5)**.


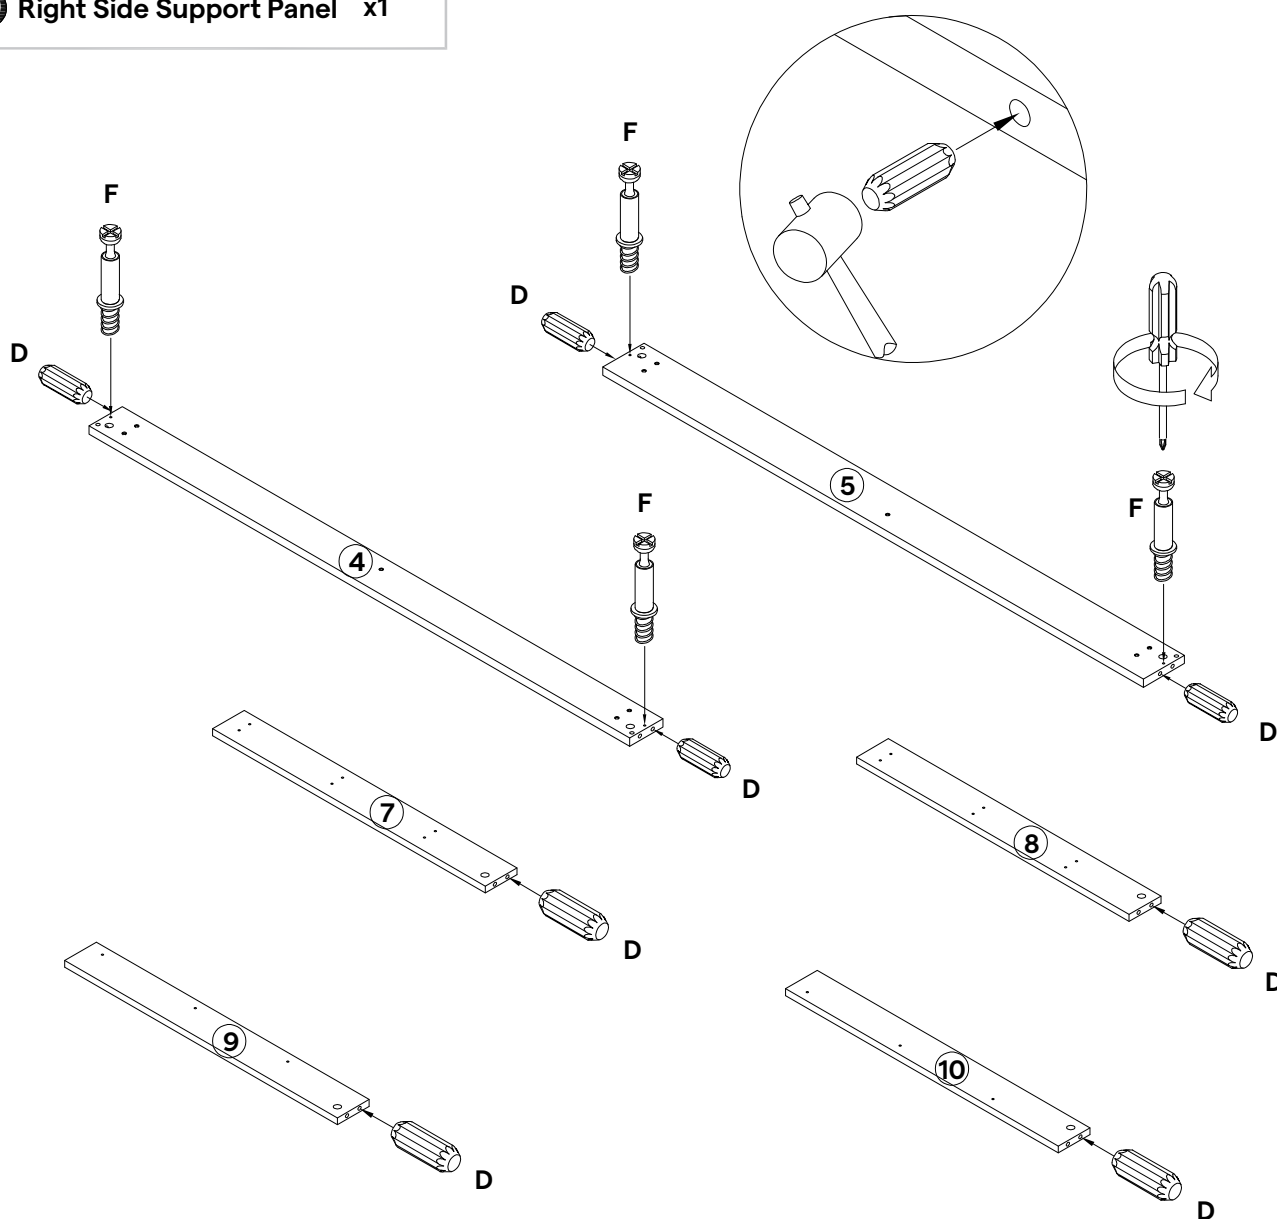


COMPONENTS

12 Back Panel

x4

3.1 Connect **Back Panel (12)** to **Back Panel (12)** by connecting **Wood Dowel (E)** to the corresponding holes.

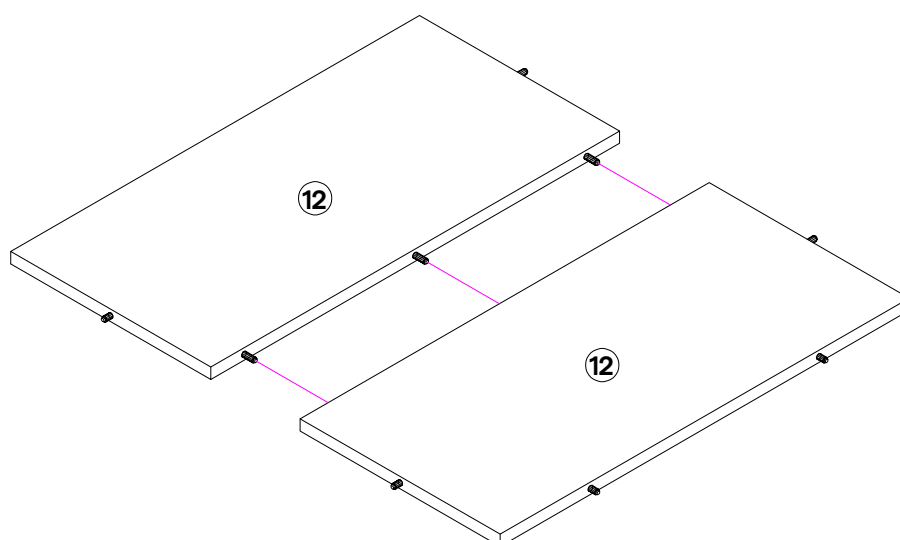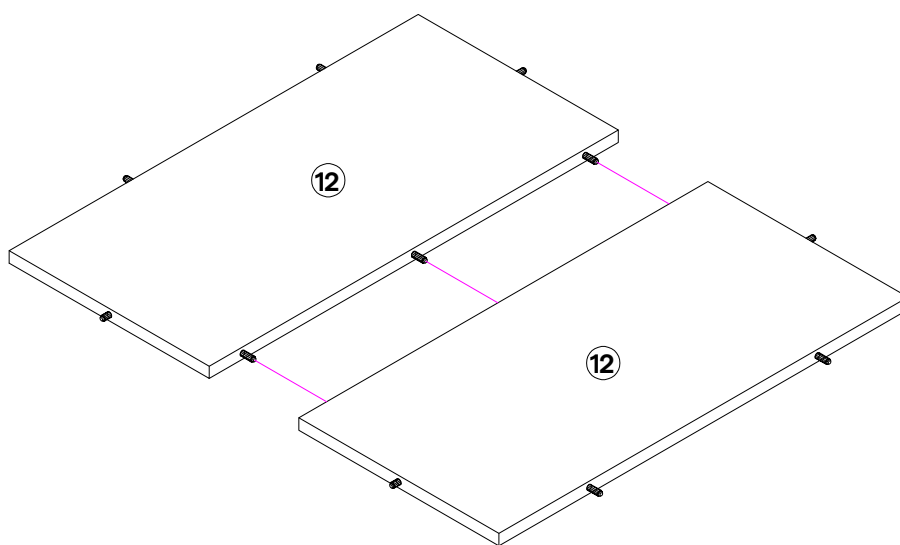





HARDWARE

- A** Screw M6 x 9mm x18
- J1** Push Open Drawer Slide CR (300mm) x3
- J2** Push Open Drawer Slide CL (300mm) x3

COMPONENTS

- 6** Divider Panel x1

The push open drawer slide with the button lock side should be secured on the panel side with 2 holes.

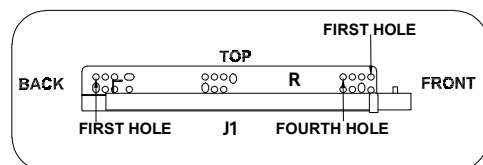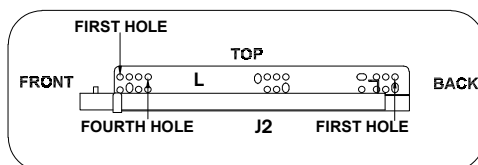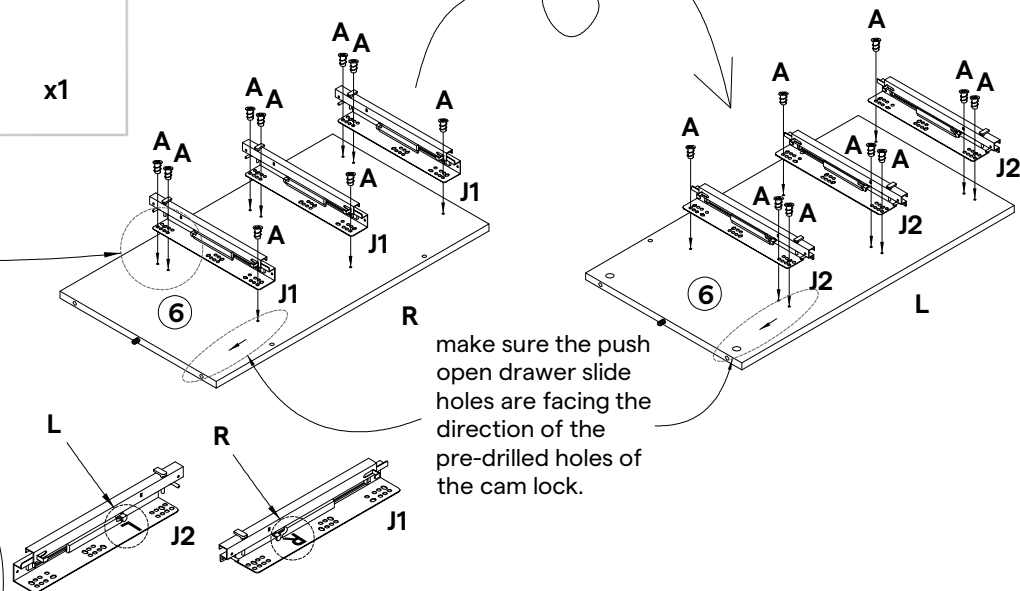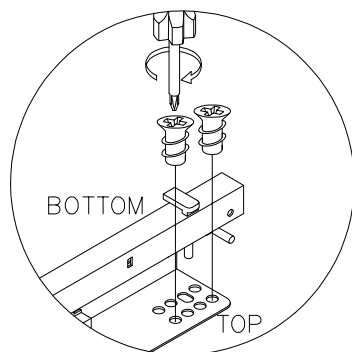


STEP 05

COMPONENTS

- 6** Divider Panel x1
- 12** Back Panel x4

5.1 Connect **Back Panel (12)** to **Back Panel (12)** by connecting **Wood Dowel (E)** to the corresponding holes through **Divider Panel (6)**.

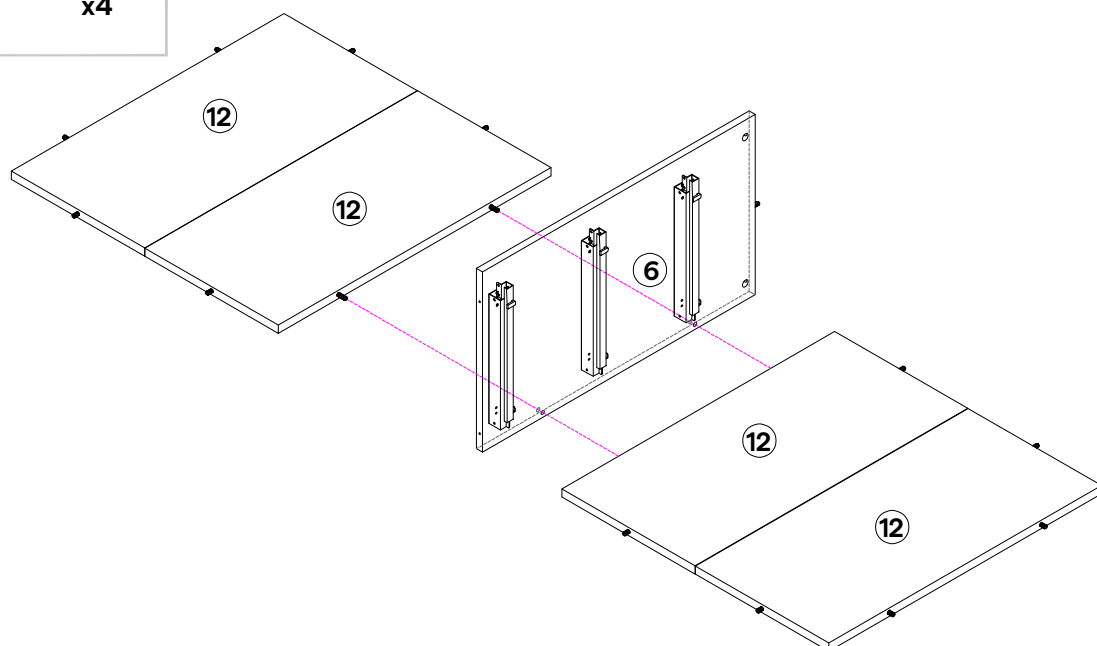

HARDWARE

B Screw M6 x 40mm x1

COMPONENTS

5 Back Rail Panel Bottom x1


6 Divider Panel x1

12 Back Panel x4

TOOLS

L Allen Key

6.1 Connect **Back Rail Panel Bottom (5)** to **Back Panel (12)** by connecting **Wood Dowel (D)** to the corresponding holes and by securing one **Screw (B)** to the corresponding holes using the provided **Allen Key (L)**.

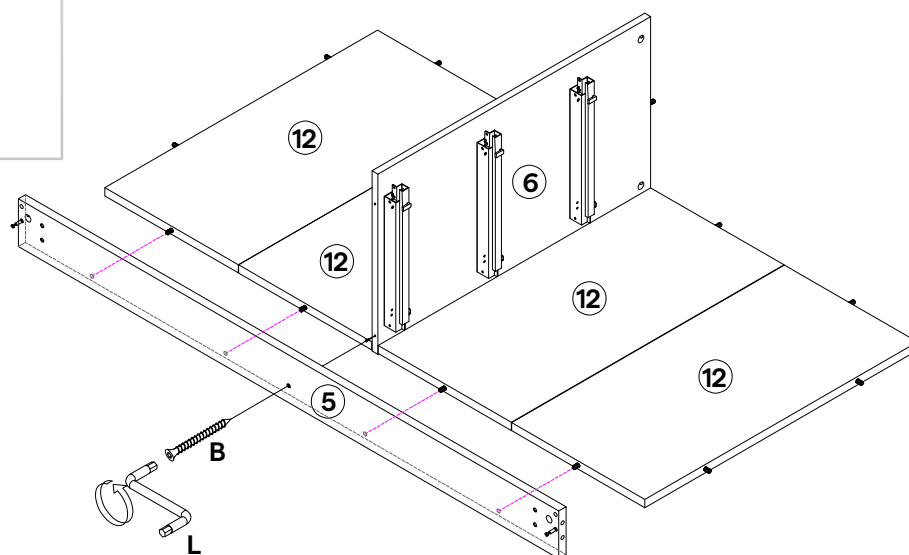

STEP 07

HARDWARE

B Screw M6 x 40mm x1

COMPONENTS


4 Front Rail Panel Bottom x1

6 Divider Panel x1

TOOLS

L Allen Key

7.1 Connect **Front Rail Panel Bottom (4)** to Divider Panel (6) with **Screw (B)** using the provided **Allen Key (L)**.

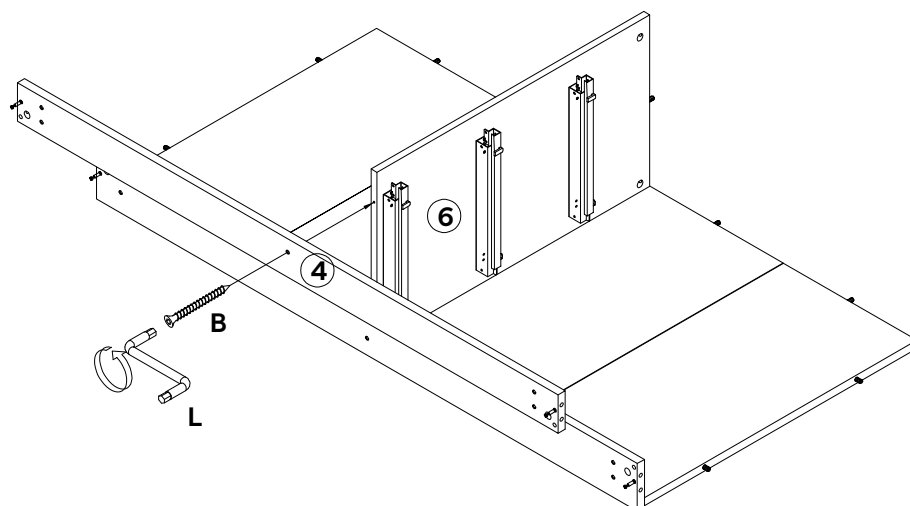

HARDWARE


- A** Screw M6 x 9mm x18
- J1** Push Open Drawer Slide CR (300mm) x3
- J2** Push Open Drawer Slide CL (300mm) x3

COMPONENTS



- 7** Left Side Rail Panel x1
- 8** Right Side Rail Panel x1
- 9** Left Side Support Panel x1
- 10** Right Side Support Panel x1

8.1 Attach **Push Open Drawer Slide CL (J2)** to **Left Side Rail Panel (7)** and **Left Side Support Panel (9)** with **Screw (A)**.



8.2 Attach **Push Open Drawer Slide CR (J1)** to **Right Side Rail Panel (8)** and **Right Side Support Panel (10)** with **Screw (A)**.

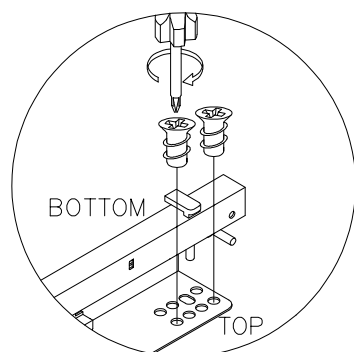

make sure the push open drawer slide holes are facing the direction of the pre-drilled holes of the cam lock.

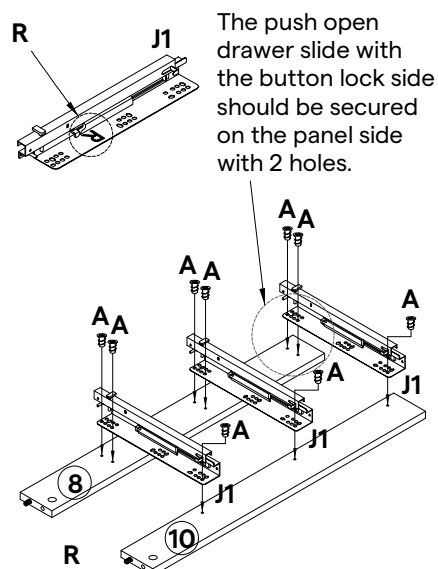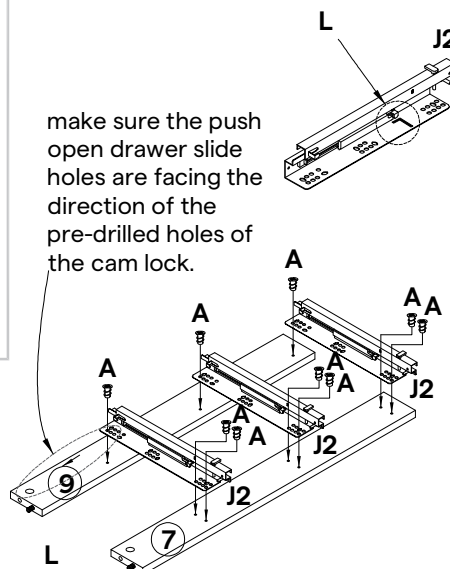

The push open drawer slide with the button lock side should be secured on the panel side with 2 holes.

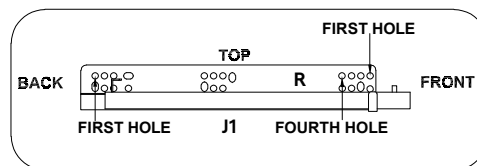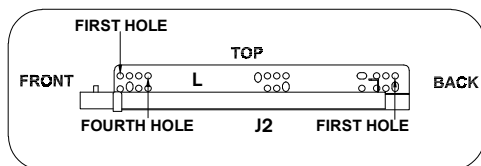


STEP 09




9.1 Connect **Front Panel (11)** to **Left Side Panel (1)** and **Right Side Panel (2)** by connecting **Plastic Head Panel Clip** to the corresponding holes.

COMPONENTS

- 1** Left Side Panel x1
- 2** Right Side Panel x1
- 11** Front Panel x4

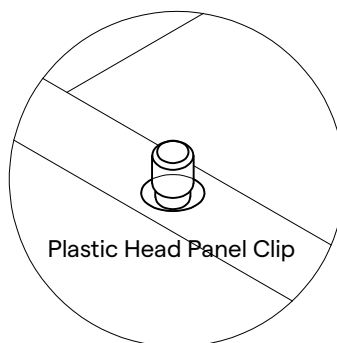

Both hardware has been pre-assembled into the panel

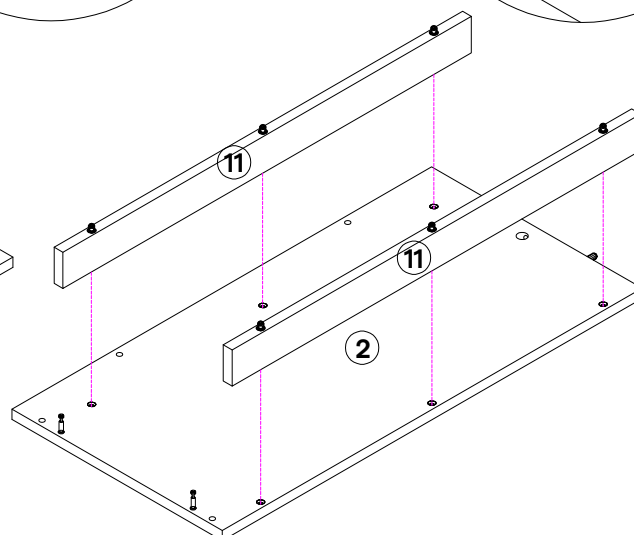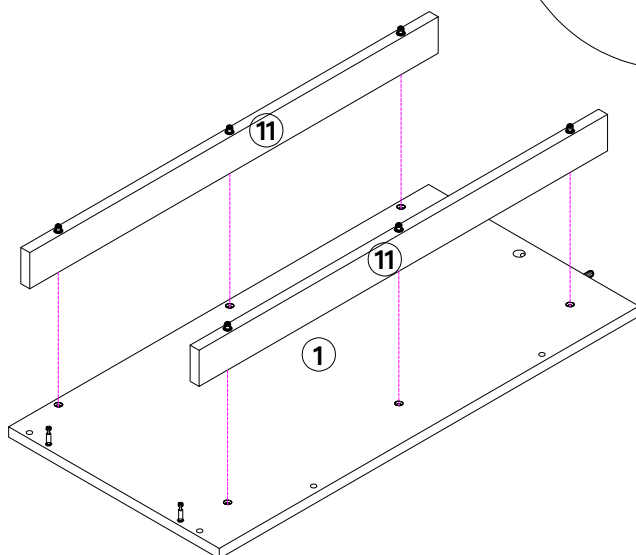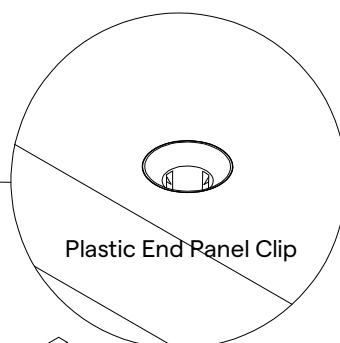


COMPONENTS

7 Left Side Rail Panel	x1
8 Right Side Rail Panel	x1
9 Left Side Support Panel	x1
10 Right Side Support Panel	x1
11 Front Panel	x1

10.1 Connect **Right Side Rail Panel (8)** and **Right Side Support Panel (10)** to **Left Side Panel (1)** **Front Panel (11)** by connecting Plastic End Panel Clip to the corresponding holes.


10.2 Connect **Left Side Rail Panel (7)** and **Left Side Support Panel (9)** to **Right Side Panel (2)** **Front Panel (11)** by connecting Plastic End Panel Clip to the corresponding holes.

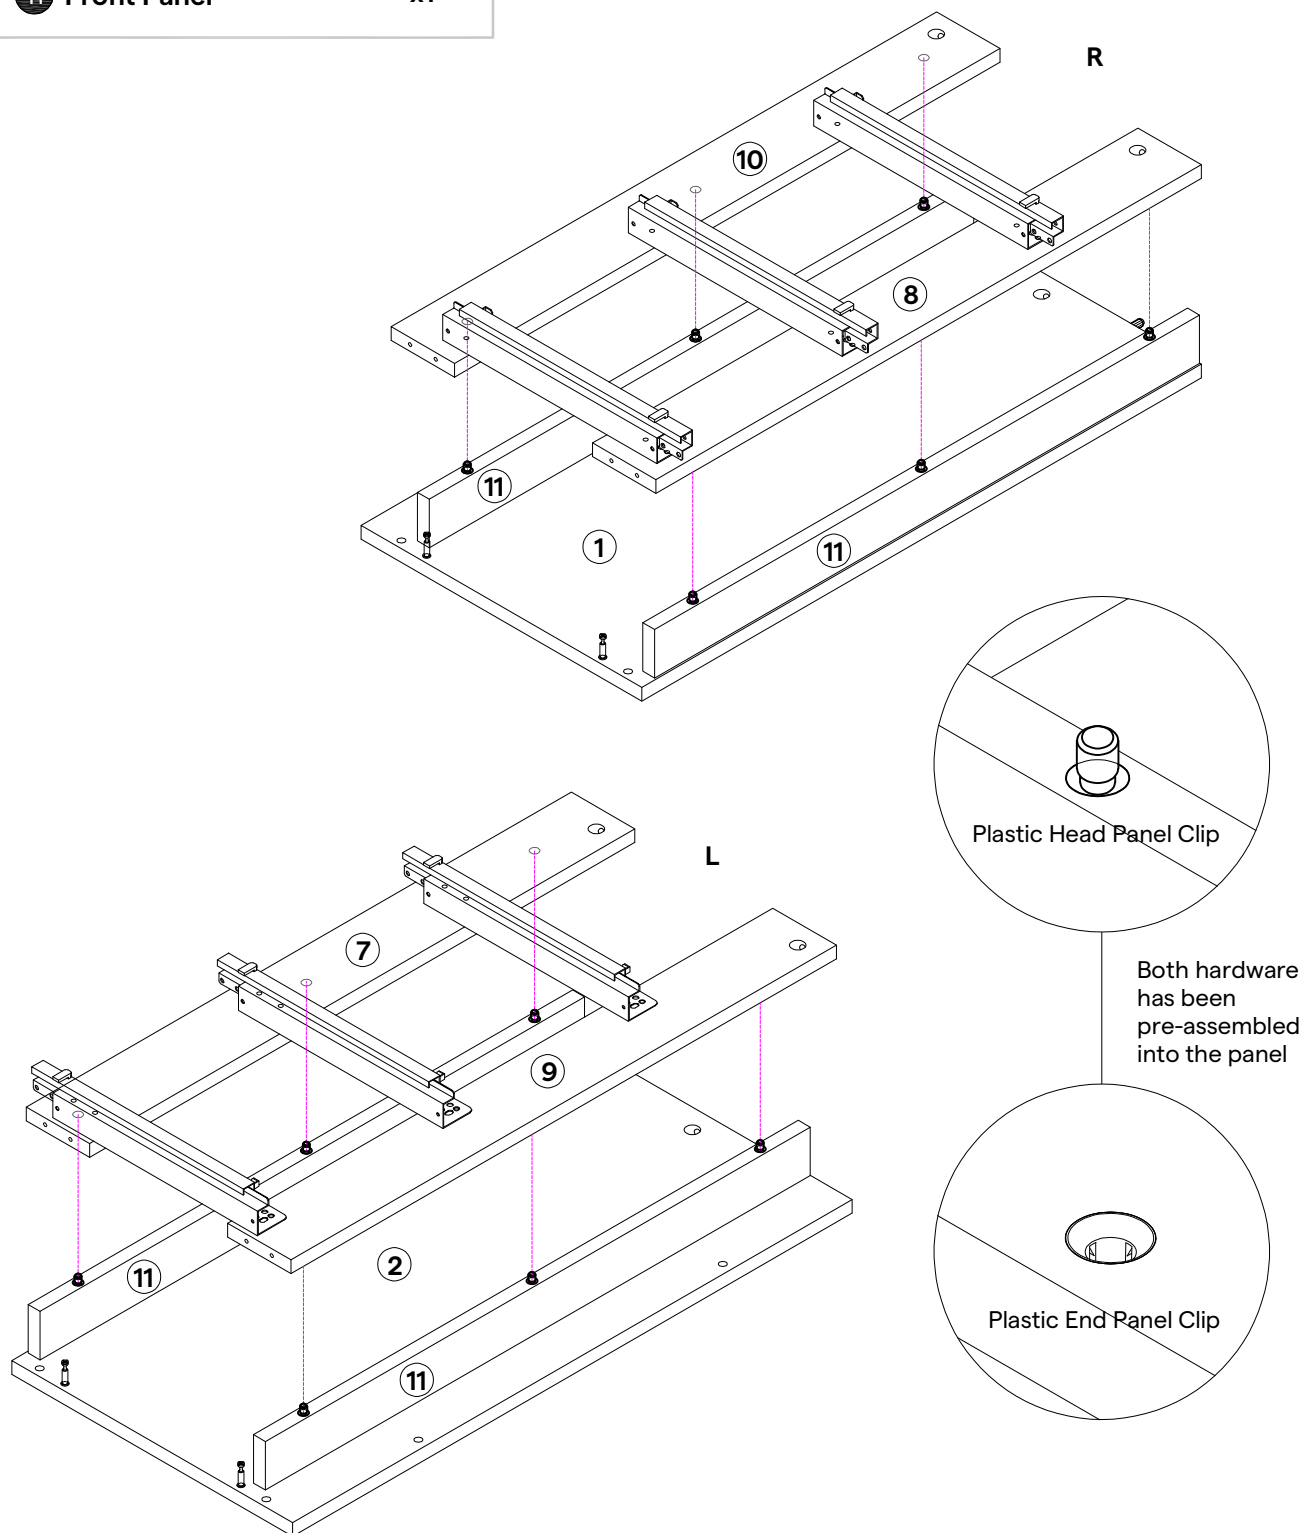

HARDWARE**G** Cam Lock 15/12 x4**COMPONENTS****1** Left Side Panel x1**2** Right Side Panel x1**4** Front Rail Panel Bottom x1**5** Back Rail Panel Bottom x1**12** Back Panel x2

11.1 Connect **Left Side Panel (1)** to **Front Rail Panel Bottom (4)**, **Back Rail Panel Bottom (5)** and **Back Panel (12)** by inserting **Cam Lock (G)** to the corresponding holes.

11.2 Connect **Right Side Panel (2)** to **Front Rail Panel Bottom (4)**, **Back Rail Panel Bottom (5)** and **Back Panel (12)** by inserting **Cam Lock (G)** to the corresponding holes.

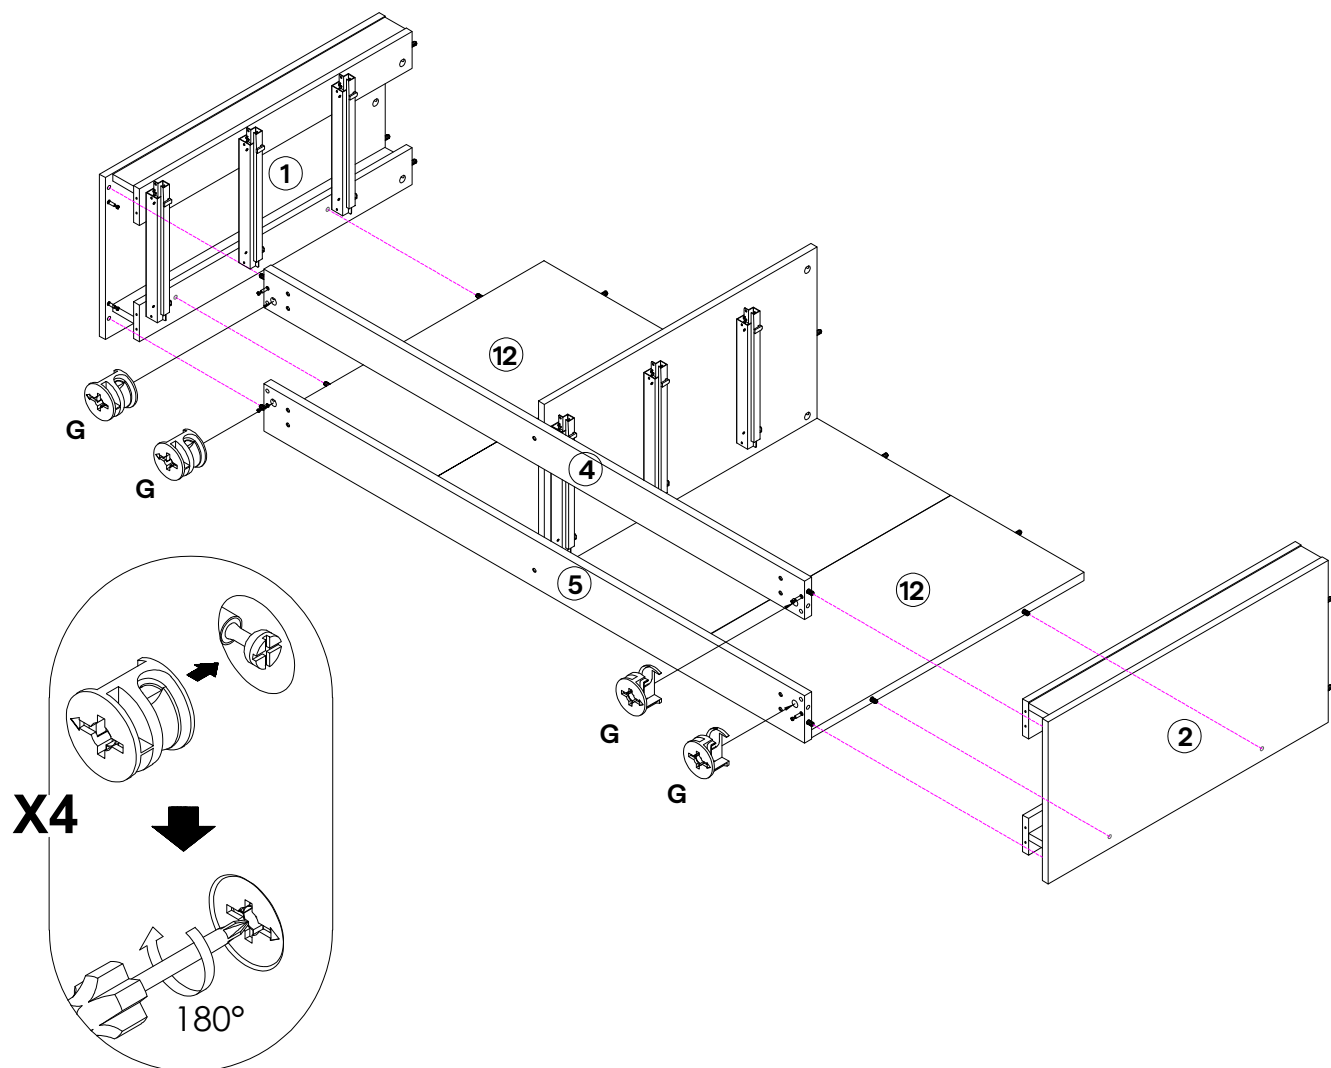

HARDWARE

(B) Screw M6 x 40mm x8

COMPONENTS

(4) Front Rail Panel Bottom x1

(5) Back Rail Panel Bottom x1

(7) Left Side Rail Panel x1

(8) Right Side Rail Panel x1

(9) Left Side Support Panel x1


(10) Right Side Support Panel x1

TOOLS

(L) Allen Key

12.1 Secure **Front Rail Panel Bottom (4)** to **Left Side Rail Panel (7)** and **Right Side Rail Panel (8)** with **Screw (B)** using the provided **Allen Key (L)**.

12.2 Secure **Back Rail Panel Bottom (5)** to **Left Side Support Panel (9)** and **Right Side Support Panel (10)** with **Screw (B)** using the provided **Allen Key (L)**.

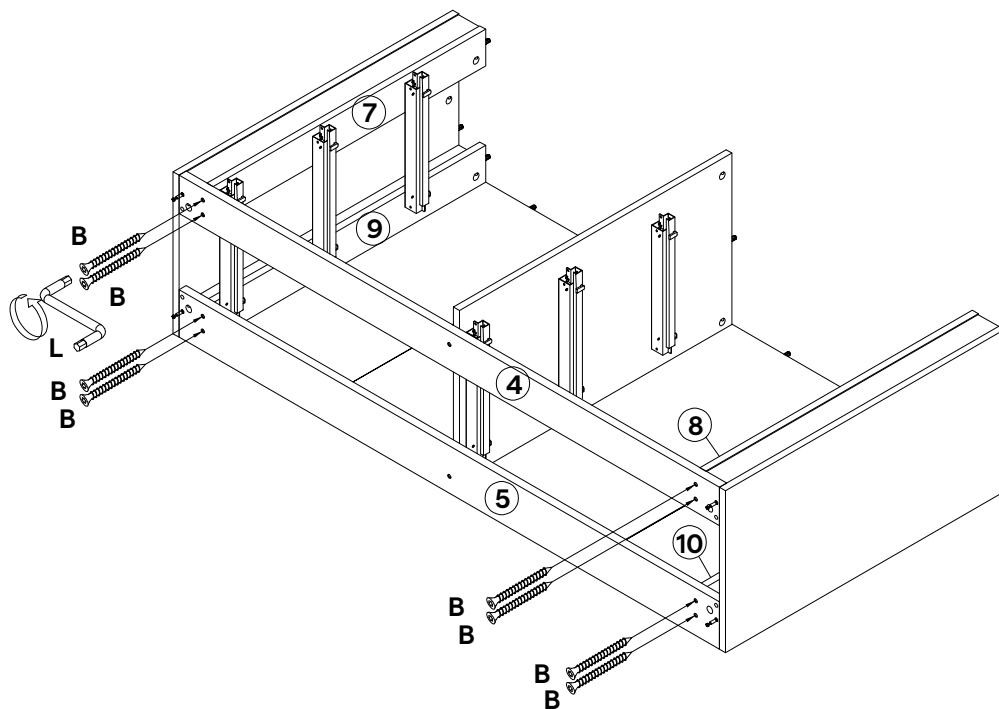


HARDWARE

D Wood Dowel Ø8 x 25mm x4

COMPONENTS

13 Bottom Frame x1

13.1 Insert **Wood Dowel (D)** into innermost pre-drilled holes on the top side of **Bottom Frame (13)**.

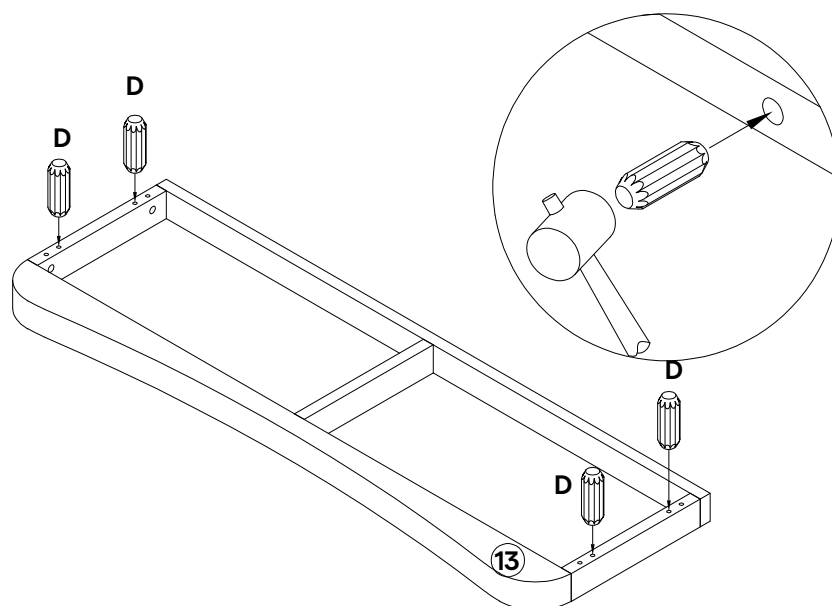

STEP 14

HARDWARE

G Cam Lock 15/12 x4


COMPONENTS

4 Front Rail Panel Bottom x1

5 Back Rail Panel Bottom x1

13 Bottom Frame x1

14.1 Connect **Bottom Frame (13)** to **Front Rail Panel Bottom (4)** and **Back Rail Panel Bottom (5)** by inserting **Cam Lock (G)** to the corresponding holes.

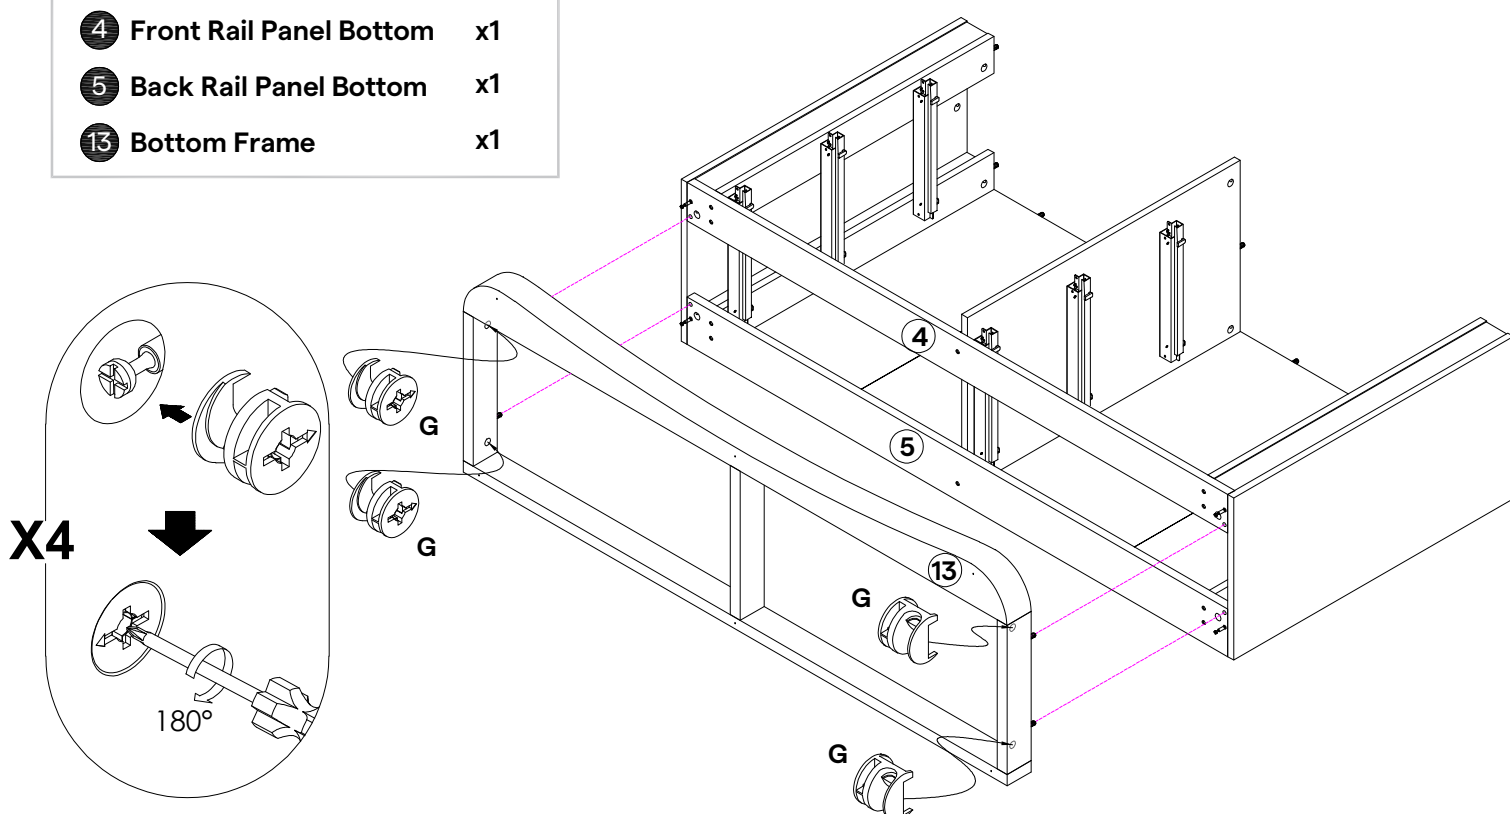


HARDWARE

K Plastic Leg Stud x6

COMPONENTS

13 Bottom Frame x1

15.1 Insert **Plastic Leg Stud (K)** into innermost pre-drilled holes on the bottom side of **Bottom Frame (13)**.

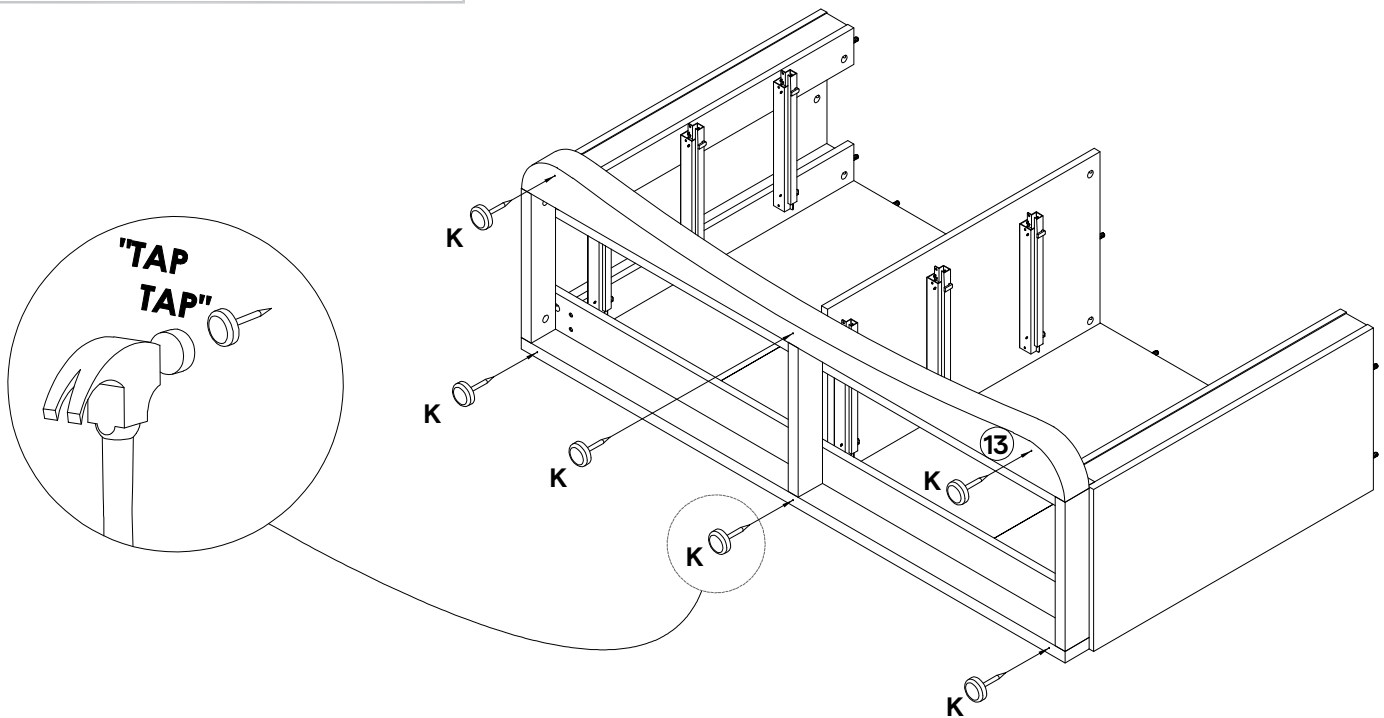

STEP 16


HARDWARE

F Cam Bolt 20 x 5mm x8

COMPONENTS



3 Top Panel x1

16.1 Insert **Cam Bolt (F)** into innermost pre-drilled holes on the bottom side of **Top Panel (3)**.

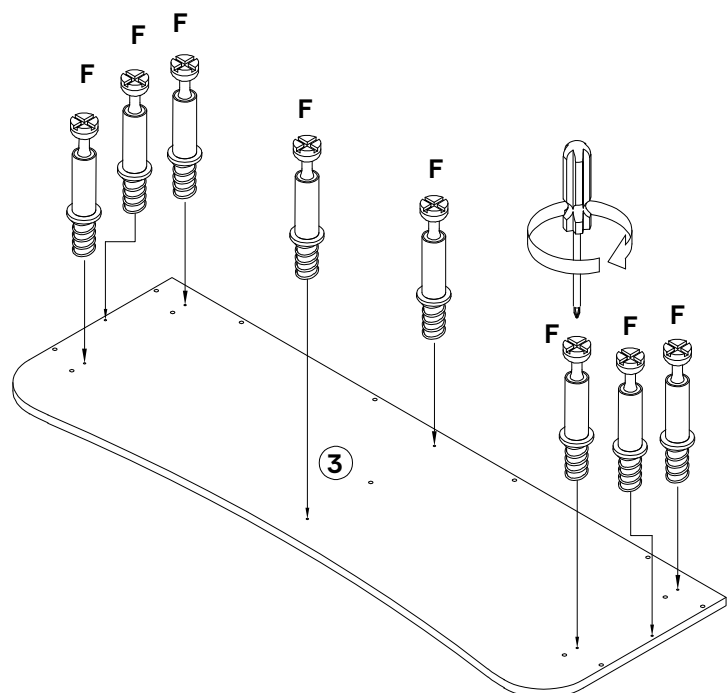

HARDWARE**G** Cam Lock 15/12 x8**COMPONENTS****1** Left Side Panel x1**2** Right Side Panel x1**3** Top Panel x1**6** Divider Panel x1**7** Left Side Rail Panel x1**8** Right Side Rail Panel x1**9** Left Side Support Panel x1**10** Right Side Support Panel x1**12** Back Panel x4

17.1 Connect **Top Panel (3)** to **Left and Right Side Panel (1 and 2)**, **Divider Panel (6)**, **Left and Right Side Rail Panel (7 and 8)**, **Left and Right Side Support Panel (9 and 10)**, **Back Panel (12)** by inserting **Cam Lock (G)** to the corresponding holes.

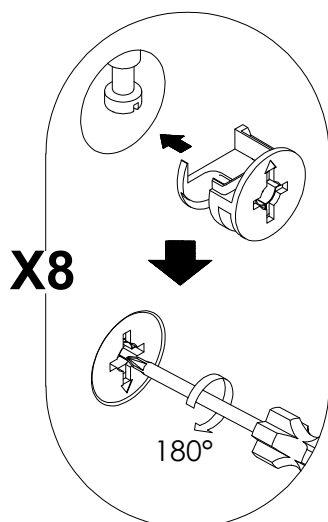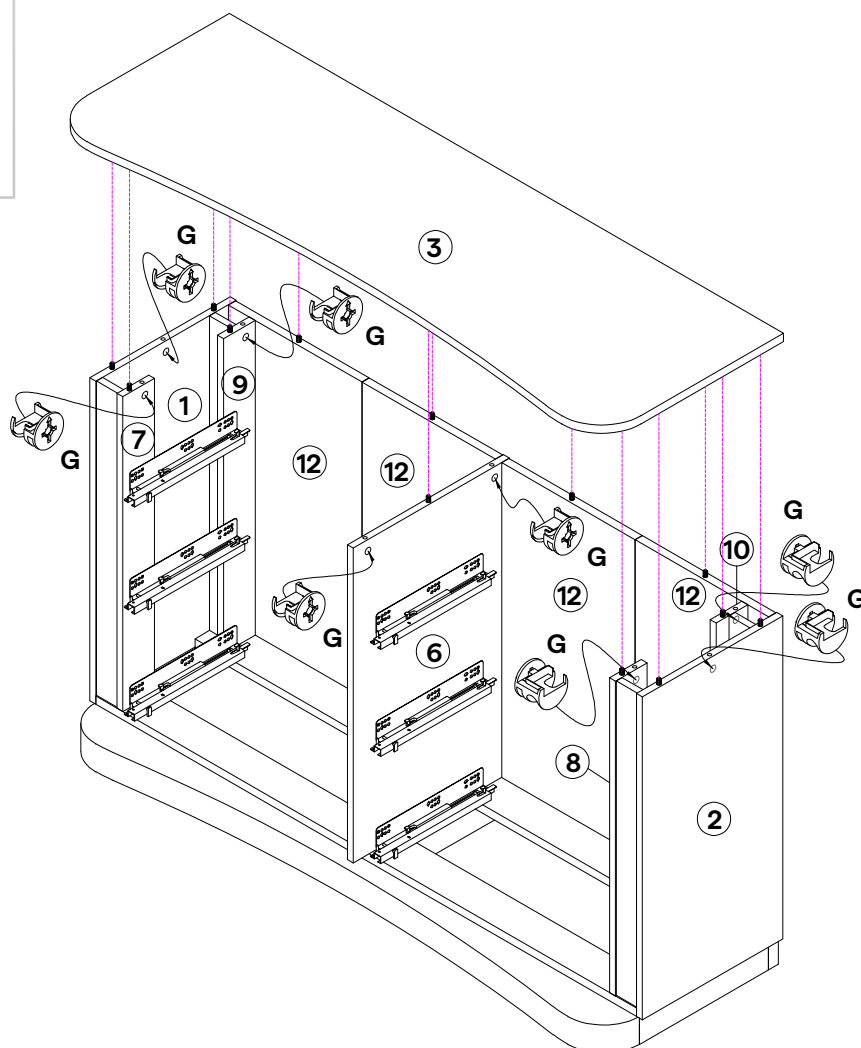

HARDWARE


- C** Wood Dowel Ø6 x 20mm x24
F Cam Bolt 20 x 5mm x36

COMPONENTS

- 14** Left Drawer Front x3
15 Right Drawer Front x3
16 Left Drawer Left Drawer Side x3
17 Right Drawer Right Drawer Side x3
18 Right Drawer Left Drawer Side x3
19 Left Drawer Right Drawer Side x3
20 Drawer Back x6
21 Left Drawer Drawer Support x3
22 Right Drawer Drawer Support x3

18.1 Insert **Wood Dowel (C)** into innermost pre-drilled holes on the left edge of **Left Drawer Left Drawer Side (16)**, **Right Drawer Left Drawer Side (18)** right edge of **Right Drawer Right Drawer Side (17)**, **Left Drawer Right Drawer Side (19)**, front and back edge of **Left Drawer Drawer Support (21)**, **Right Drawer Drawer Support (22)**.

18.2 Insert **Cam Bolt (F)** into innermost pre-drilled holes on the back side of **Left Drawer Front (14)** and **Right Drawer Front (15)** and front side of **Drawer Back (20)**.

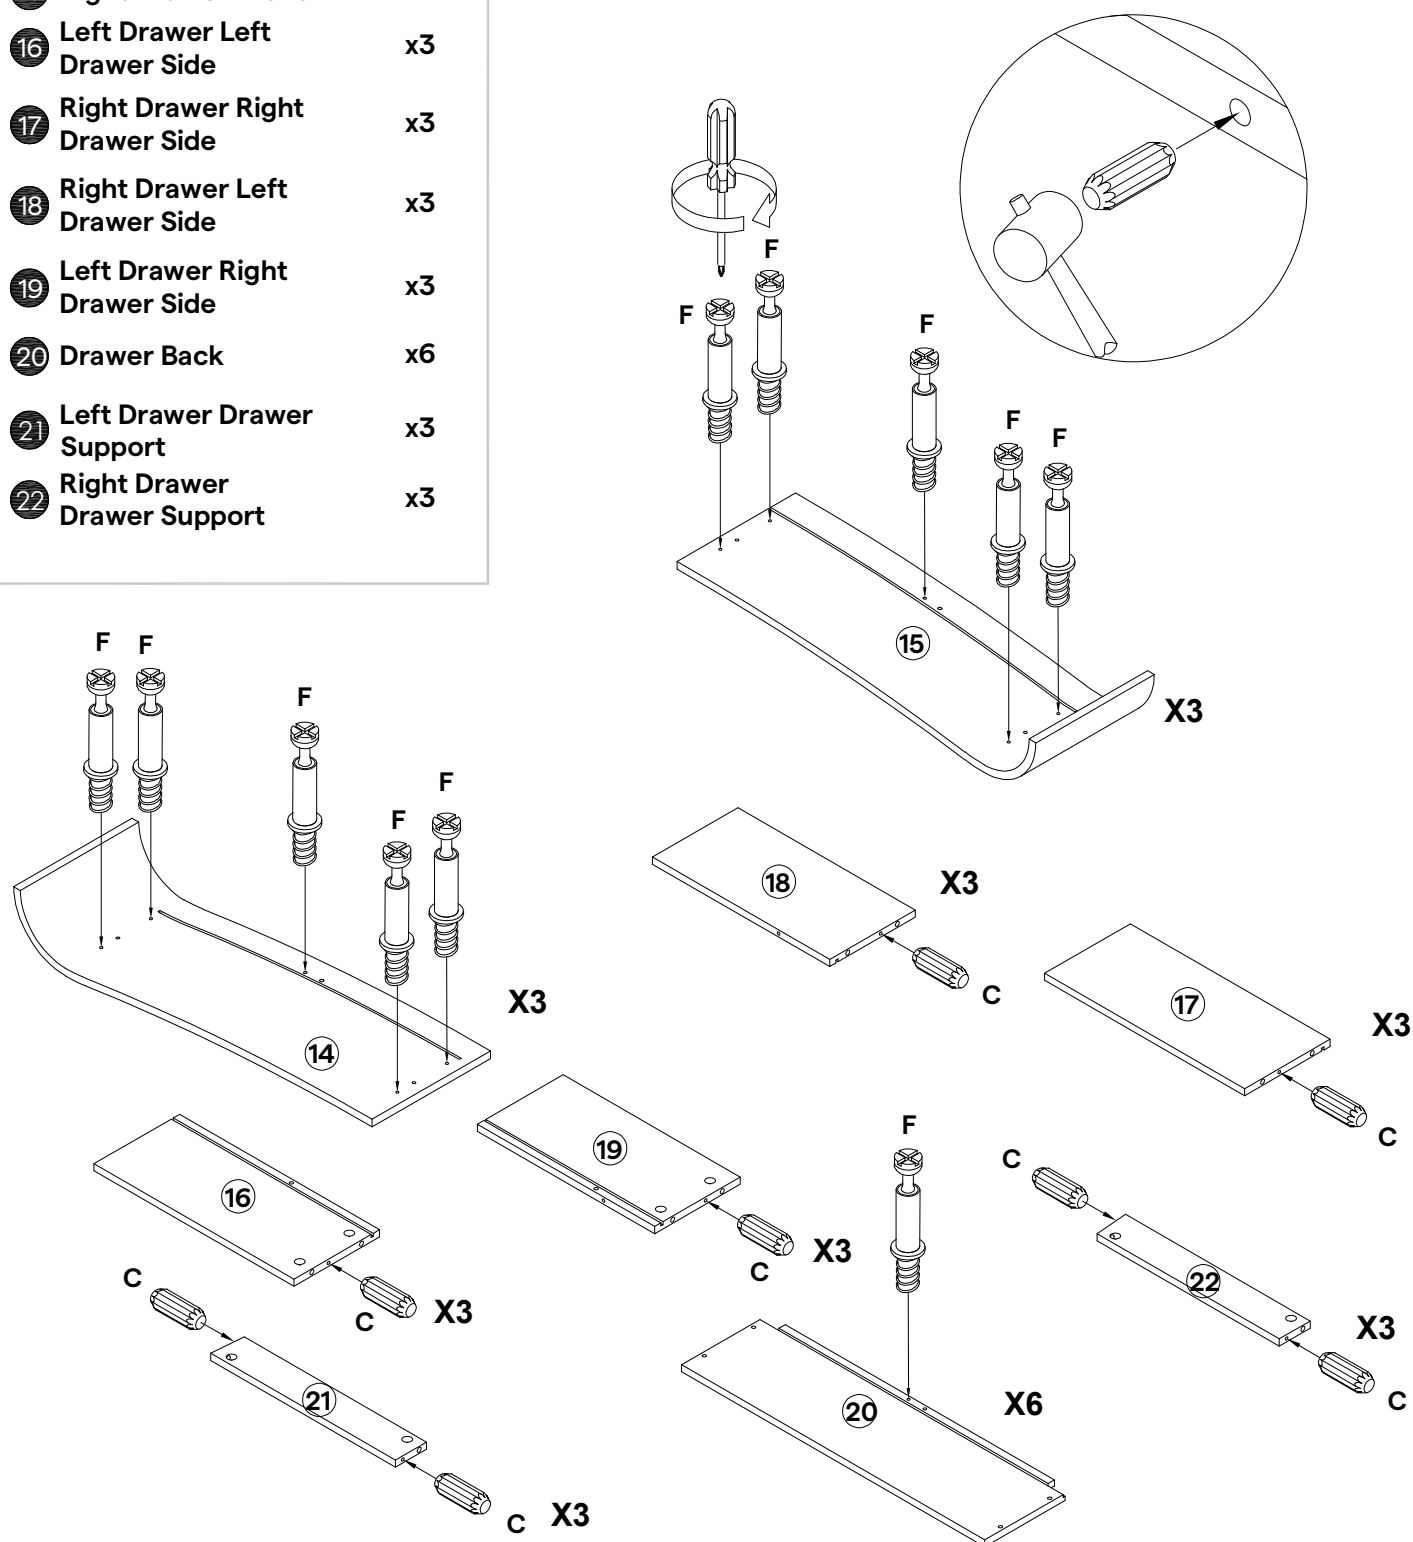

HARDWARE

H Cam Lock 15/10 x15

COMPONENTS

14 Left Drawer Front x3

16 Left Drawer Left Drawer Side x3




19 Left Drawer Right Drawer Side x3

21 Left Drawer Drawer Support x3

23 Left Drawer Drawer Bottom x3

19.1 Connect **Left Drawer Left Drawer Side (16)**, **Left Drawer Right Drawer Side (19)** and **Left Drawer Drawer Support (21)** to **Left Drawer Front (14)** by inserting **Cam Lock (H)** into the corresponding holes.

19.2 Slots the **Left Drawer Drawer Bottom (23)** into the drawer body.

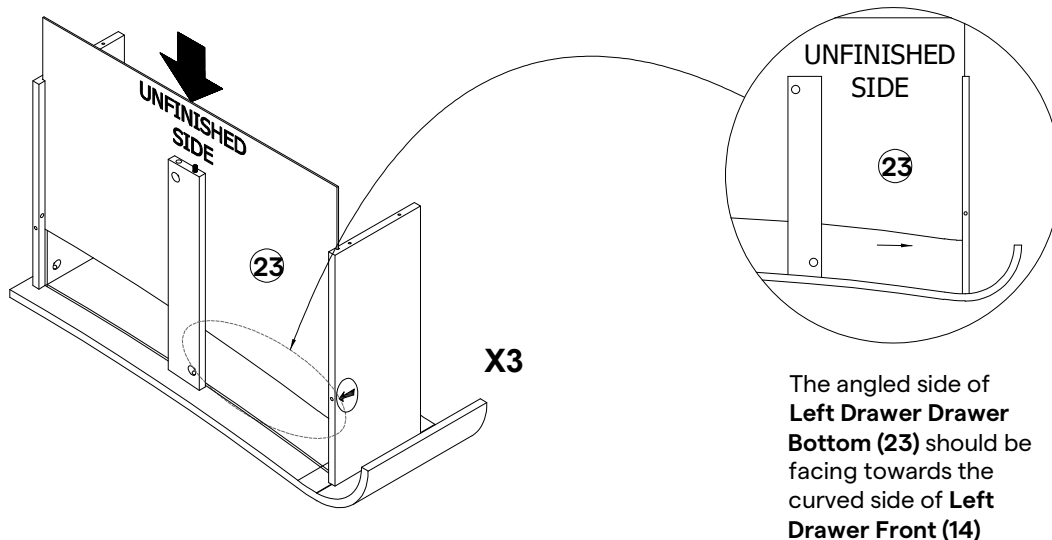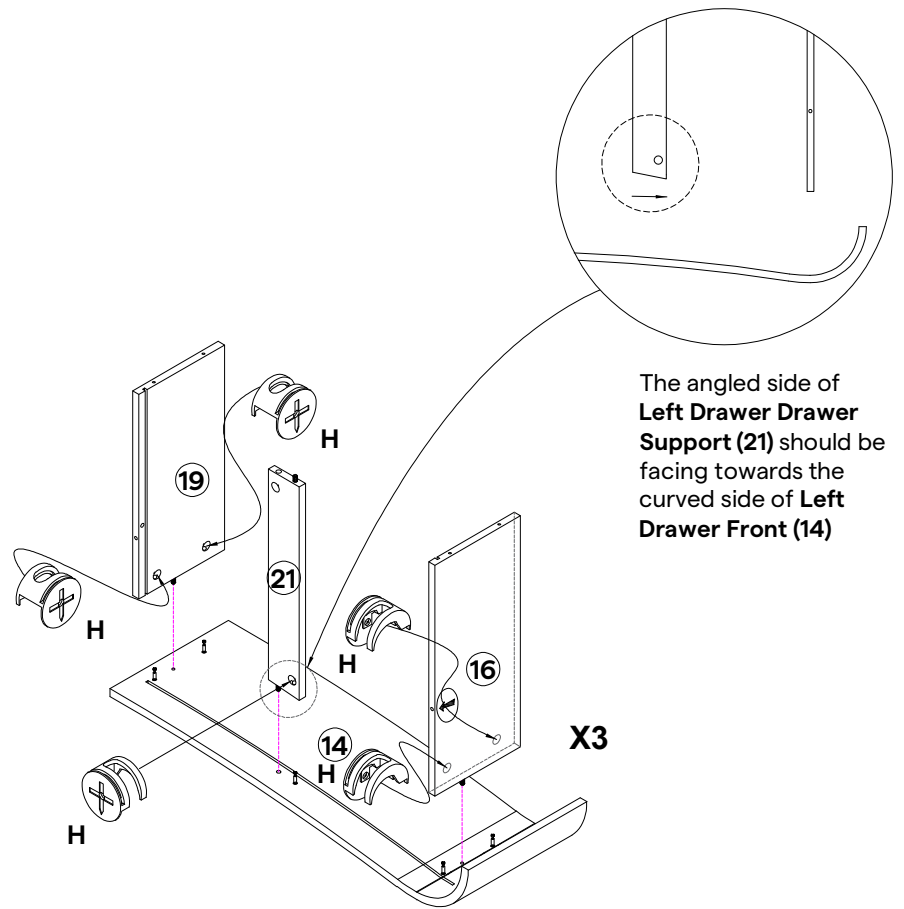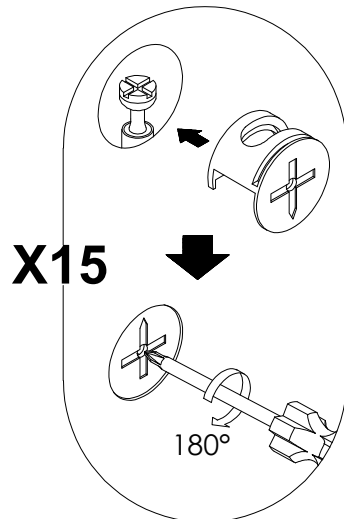

HARDWARE

H Cam Lock 15/10 x15

COMPONENTS

15 Right Drawer Front x3

17 Right Drawer Right Drawer Side x3


18 Right Drawer Left Drawer Side x3

22 Right Drawer Drawer Support x3

24 Right Drawer Drawer Bottom x3

20.1 Connect **Right Drawer Right Drawer Side (17)**, **Right Drawer left Drawer Side (18)** and **Right Drawer Drawer Support (22)** to **Right Drawer Front (15)** by inserting **Cam Lock (H)** into the corresponding holes.




20.2 Slots the **Left Drawer Drawer Bottom (24)** into the drawer body.

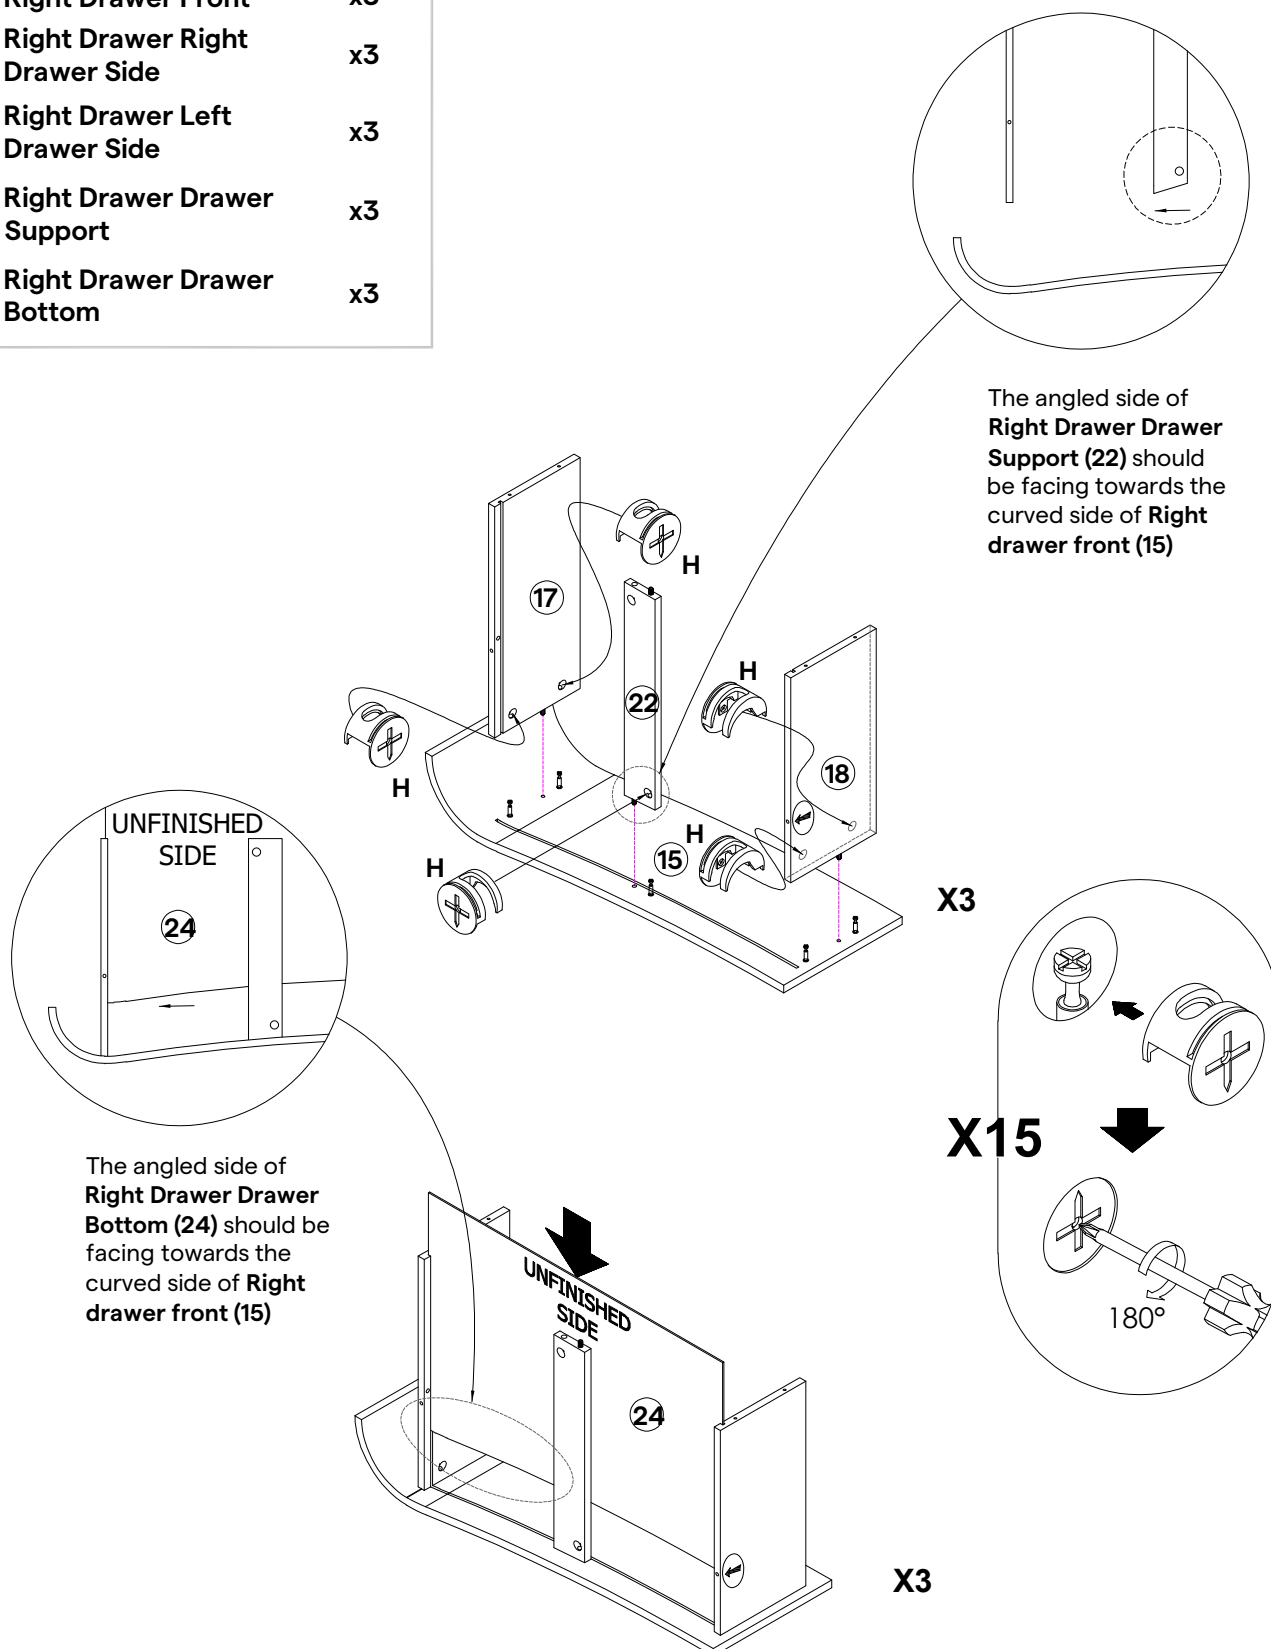


HARDWARE**B** Screw M6 x 40mm x24**H** Cam Lock 15/10 x6**COMPONENTS****16** Left Drawer Left Drawer Side x3**17** Right Drawer Right Drawer Side x3**18** Right Drawer Left Drawer Side x3**19** Left Drawer Right Drawer Side x3**20** Drawer Back x6**21** Left Drawer Drawer Support x3**22** Right Drawer Drawer Support x3**TOOLS****L** Allen Key

21.1 Secure **Drawer Back (20)** to **Left Drawer Left Drawer Side (16)** , **Left Drawer Right Drawer Side (19)** and **Left Drawer Drawer Support (21)** with **Screw (B)** using the provided **Allen Key (L)** and by inserting **Cam Lock (H)** into the corresponding holes.

22.1 Secure **Drawer Back (20)** to **Right Drawer Right Drawer Side (17)** , **Right Drawer Left Drawer Side (18)** and **Right Drawer Drawer Support (22)** with **Screw (B)** using the provided **Allen Key (L)** and by inserting **Cam Lock (H)** into the corresponding holes.

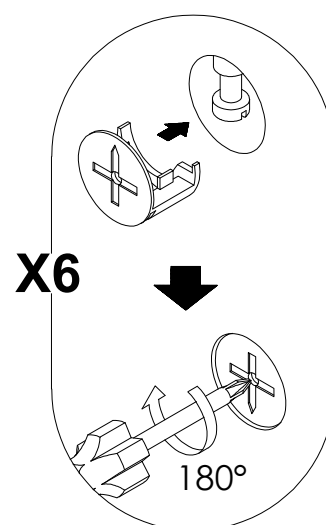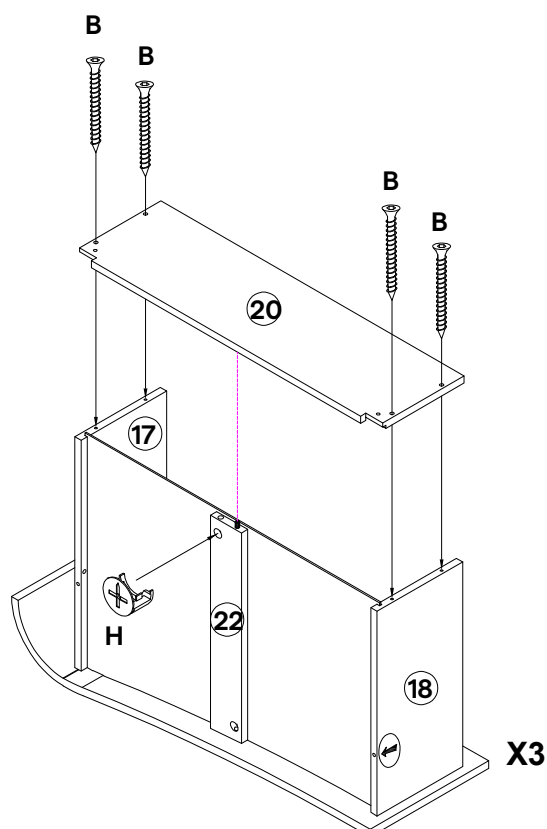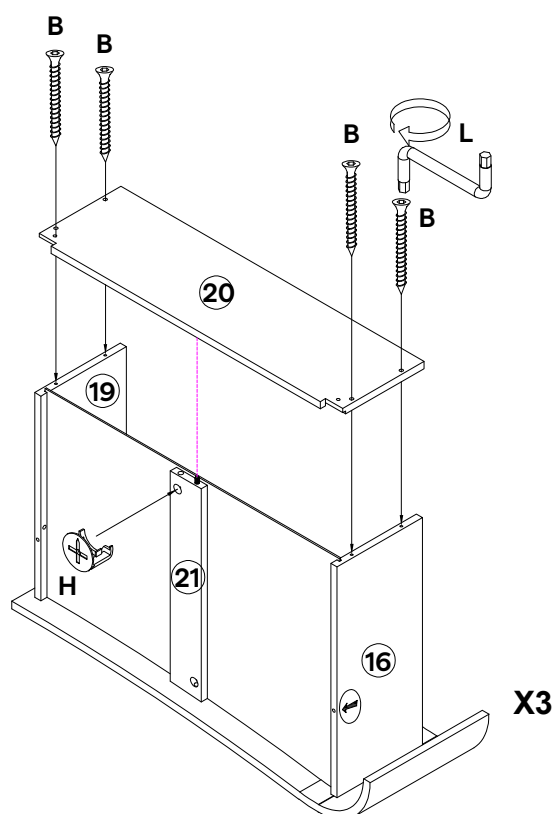

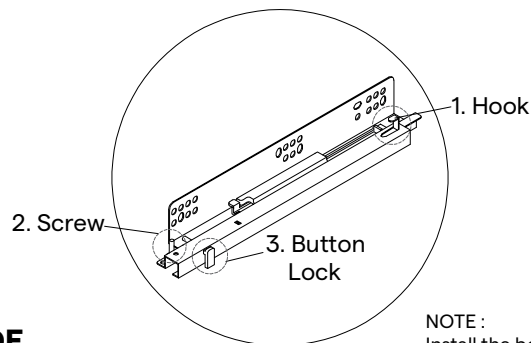


NOTE :

Install the bottom drawer first to make the drawer installation easier.


DRAWER INSTALLATION GUIDE

1. Push and slide out the drawer slide.
2. Unlock the blue colored drawer slide lock.

1

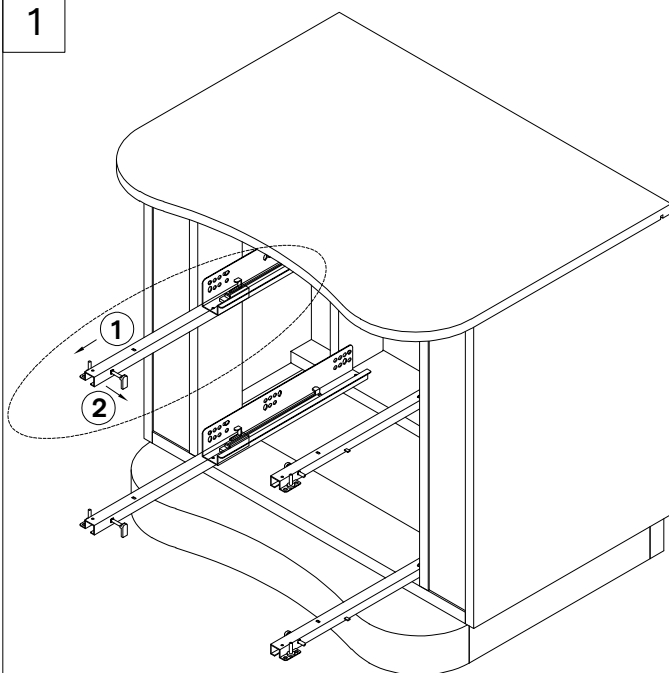


2

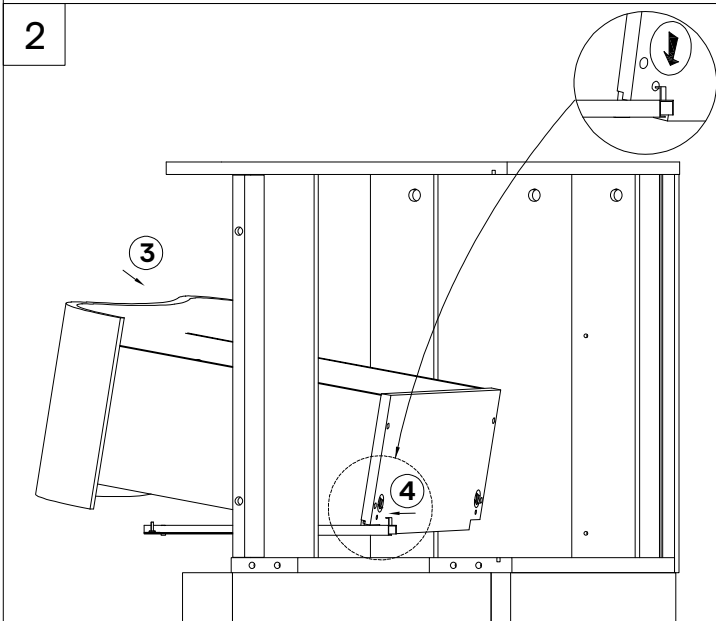


5. The hole for securing the drawer can be found on the bottom side of the side drawer panel below the arrow sticker.
6. Insert the drawer hole into the drawer slide pin by aligning the hole and the pin right below the arrow sticker.


3

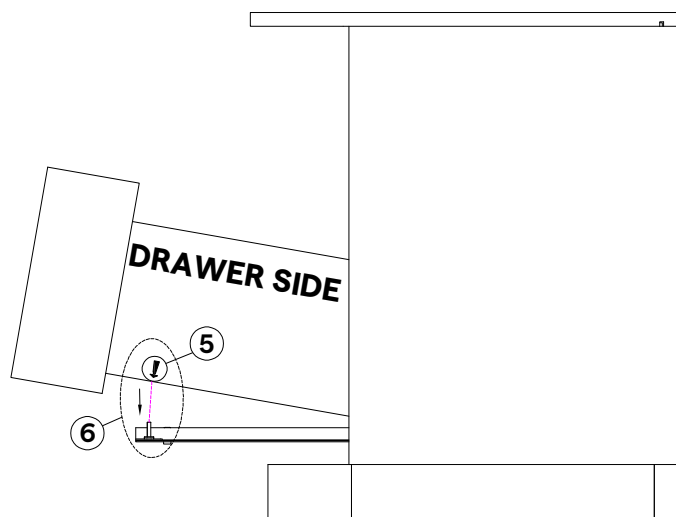

7. Secure the drawer slide to the drawer by pushing the blue colored lock mechanic on the drawer slide.



4

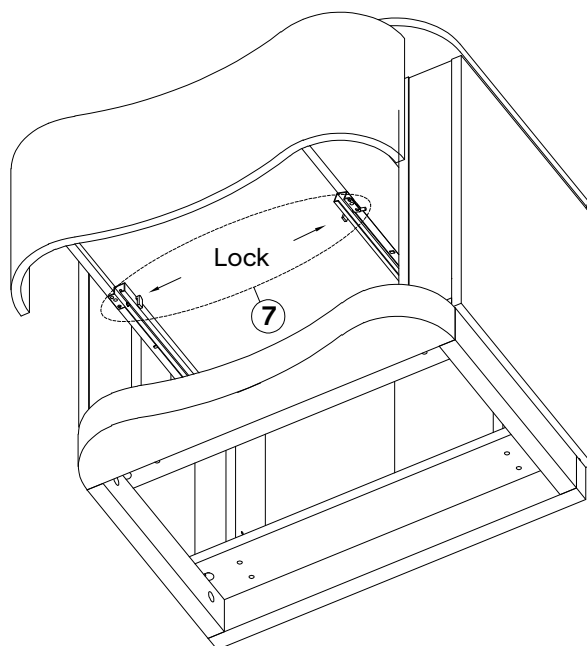

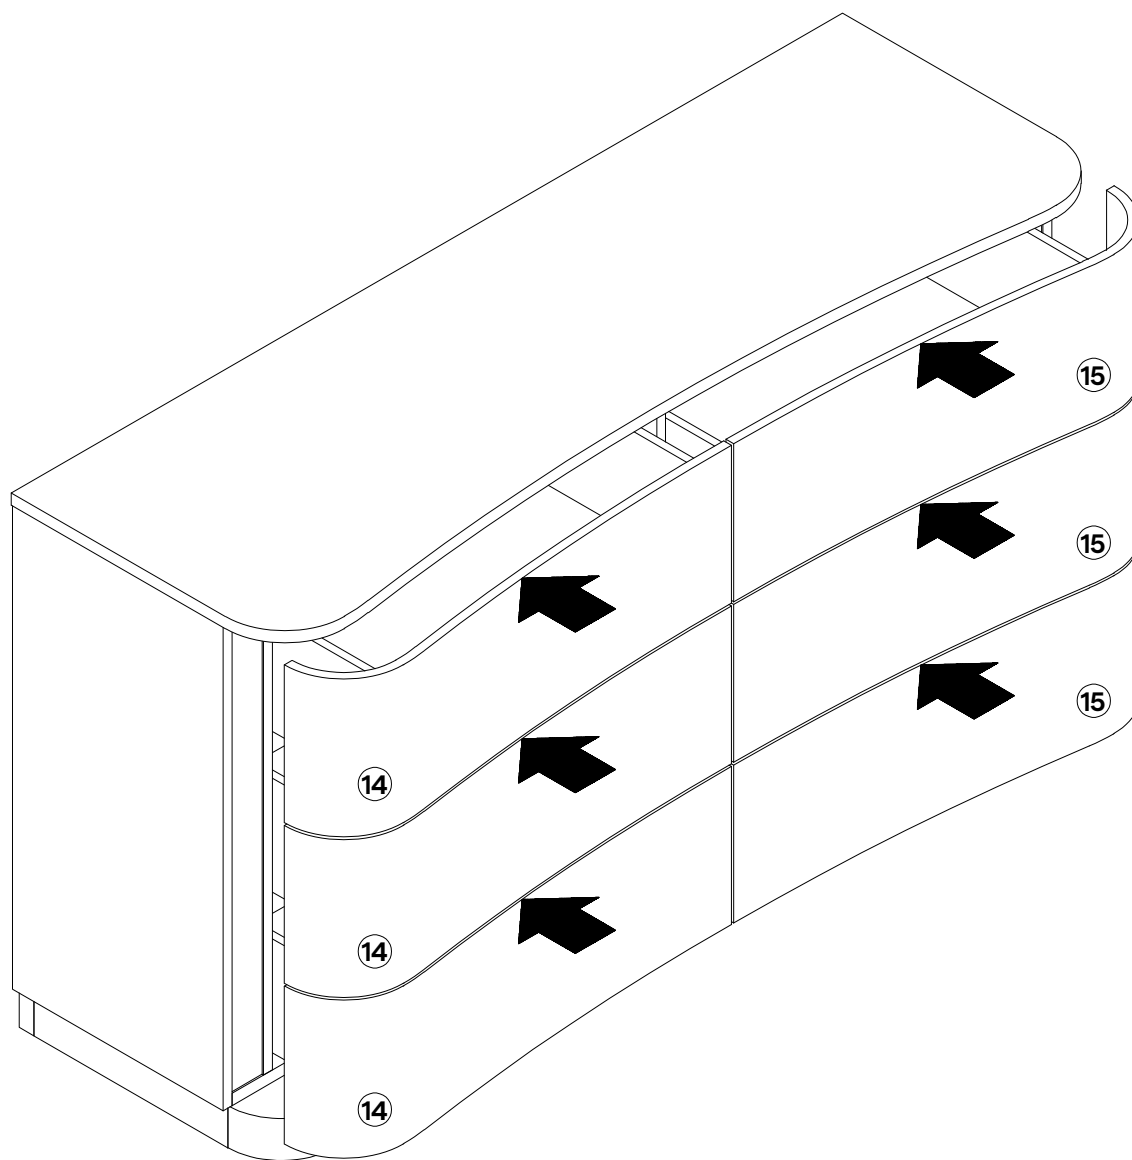

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

This tipping restraint is not an earthquake restraint. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

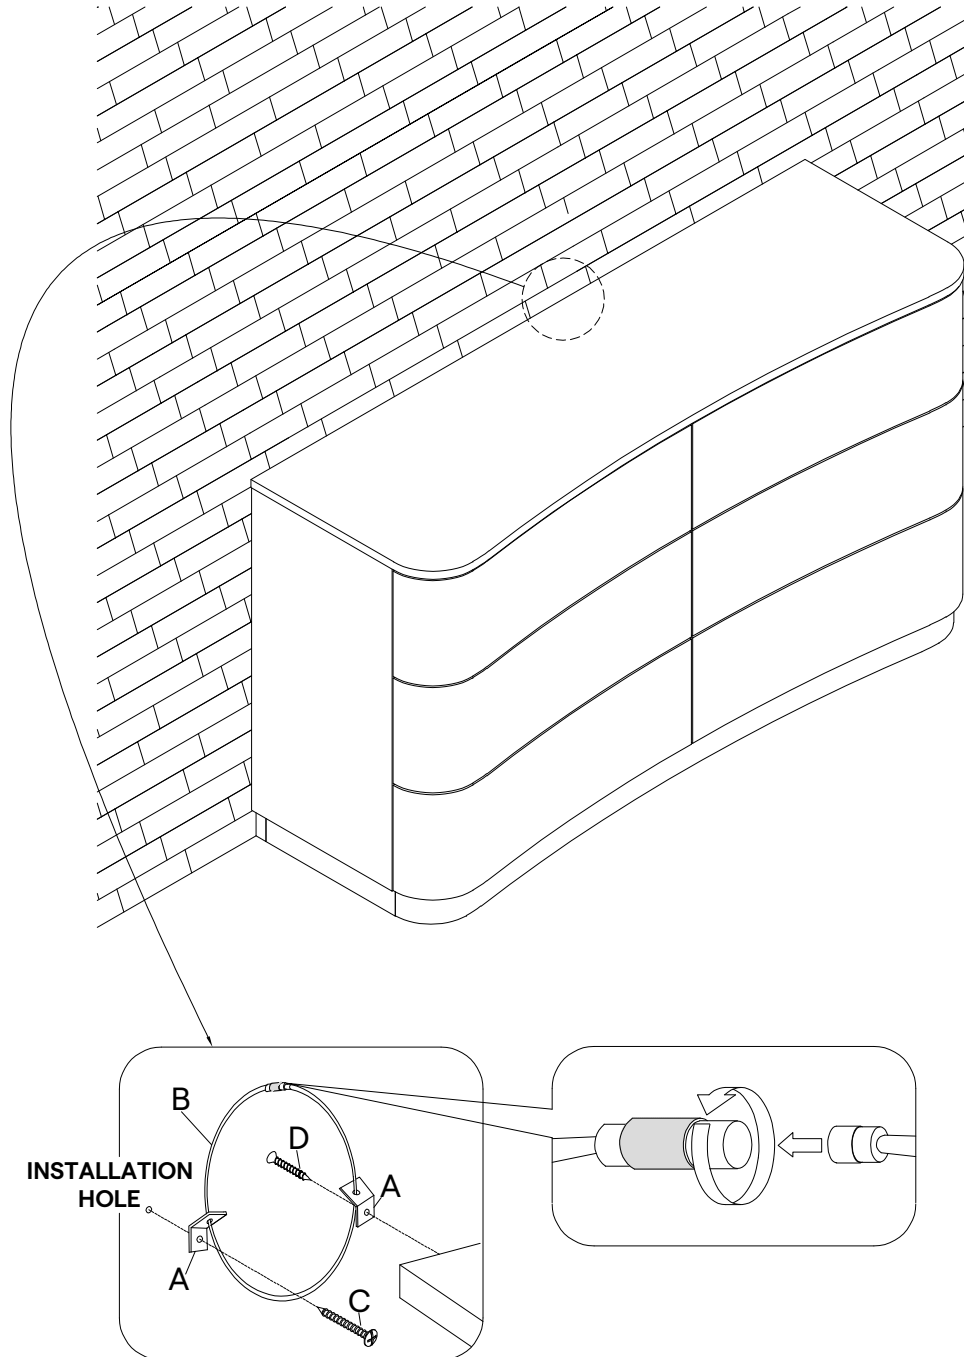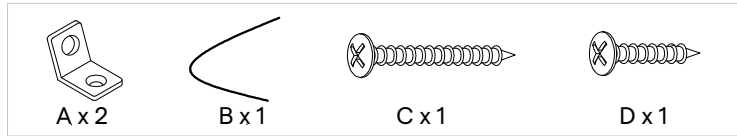

Installation Instructions :


1. Determine where the furniture is to be placed and find the center line of a wooden stud using a stud finder.
2. Drill a 1/8" pilot hole on the wooden stud approximately 3" below the height of unit top.
3. Attach one bracket (A) securely with screw (C) into the pilot hole on the wall.
4. Position the furniture in place and attach the other bracket (A) with screw (D) to the back edge of unit top in line with the bracket (A) on the wall.
5. Put the male end of the steel cable (B) through each bracket. Securely connect both ends together by turning the female connector clockwise.

Great job!

Your drawer dresser assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

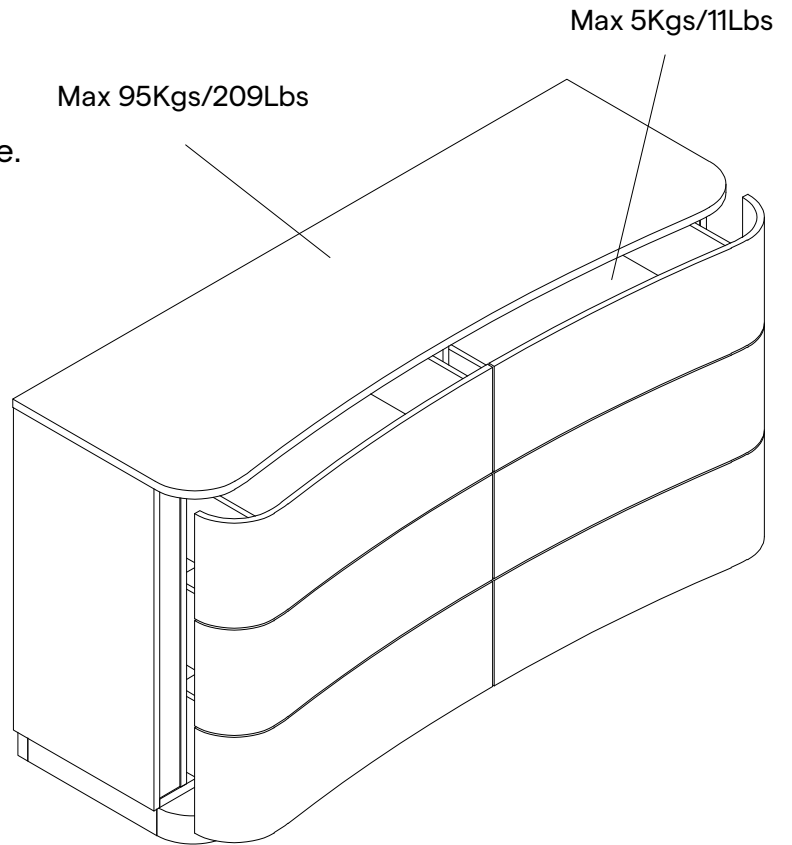

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway**
for a chance to be featured.

modway



Questions? Contact us!

609.256.9000
cs@modway.com