


ASSEMBLY INSTRUCTIONS

MOD-7166

V0.05.05.24

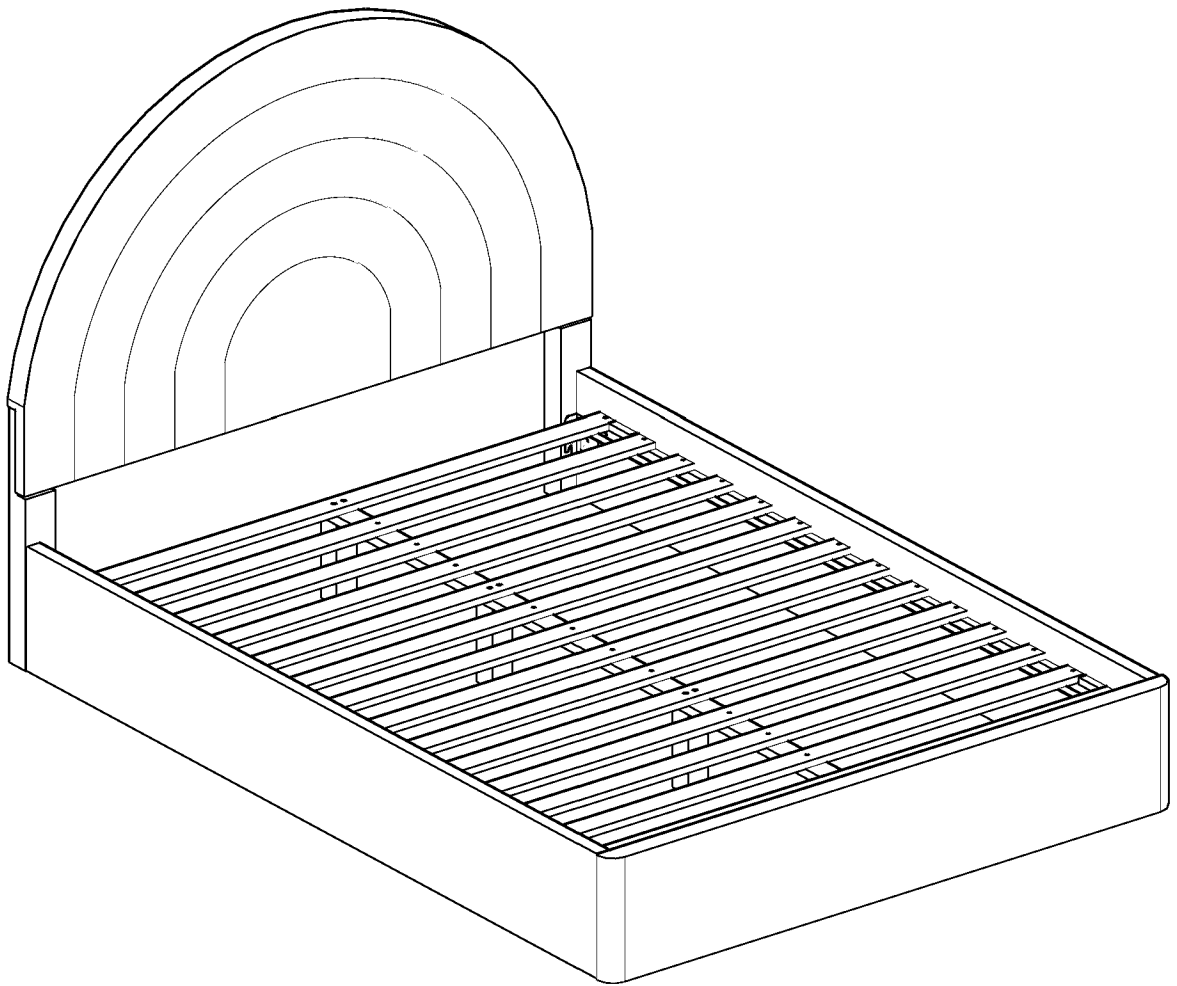

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

Box 1		
1	Headboard	x1
2	Headboard Leg (L+R)	x2
Box 2		
3	Side Rail	x2
4	Footboard	x1
5	Center Rail	x1
6	Center Support Leg	x4
7	Slat	x14

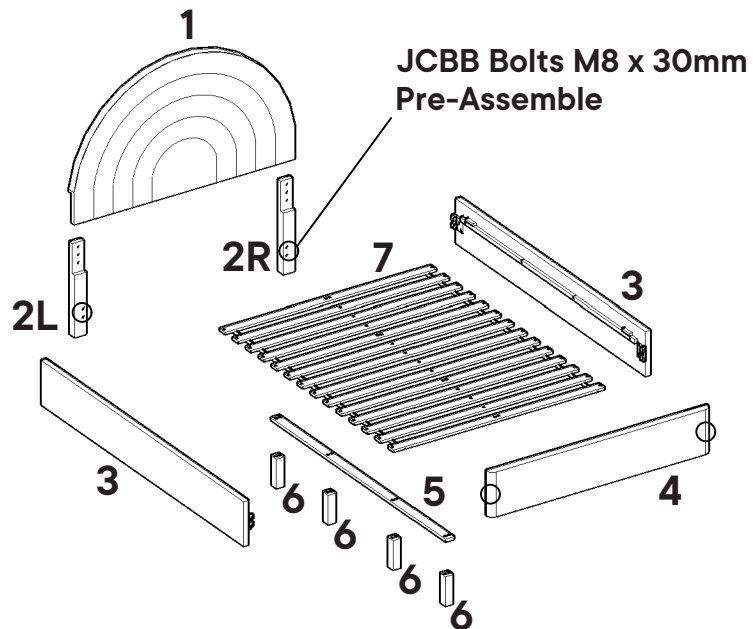

Provided hardware:

A		Allen Key M4	x1
B		Allen Key M5	x1
C		JCBC Bolt M6 x 45mm	x6

D		JCBC Bolt M6 x 50mm	x8
E		Spring Washer M6	x6
F		Flat Washer M6	x6

What you need:

		Phillips Head Screwdriver
Box 1: Headboard/Headboard Leg only		
Box 2: Side Rail/Footboard/Slat and etc...		
G		Wood Screw M4 x 25mm
		x38

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!
609.256.9000 • cs@modway.com

Step 1

HARDWARE


C	JCBC M6 x 45mm	x6
E	Spring Washer M6	x6
F	Flat Washer M6	x6

COMPONENTS

1	Headboard	x1
2	Headboard Leg (L+R)	x2

TOOLS

A	Allen Key M4	x1
----------	--------------	----

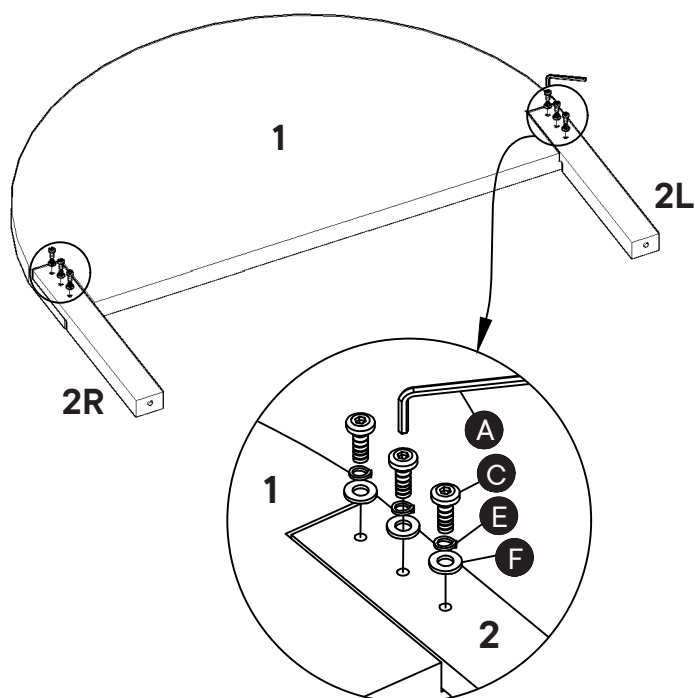


Step 2

COMPONENTS

2	Headboard Leg (L+R)	x2
3	Side Rail	x2
4	Footboard	x1

TOOLS

B	Allen Key M5	x1
----------	--------------	----

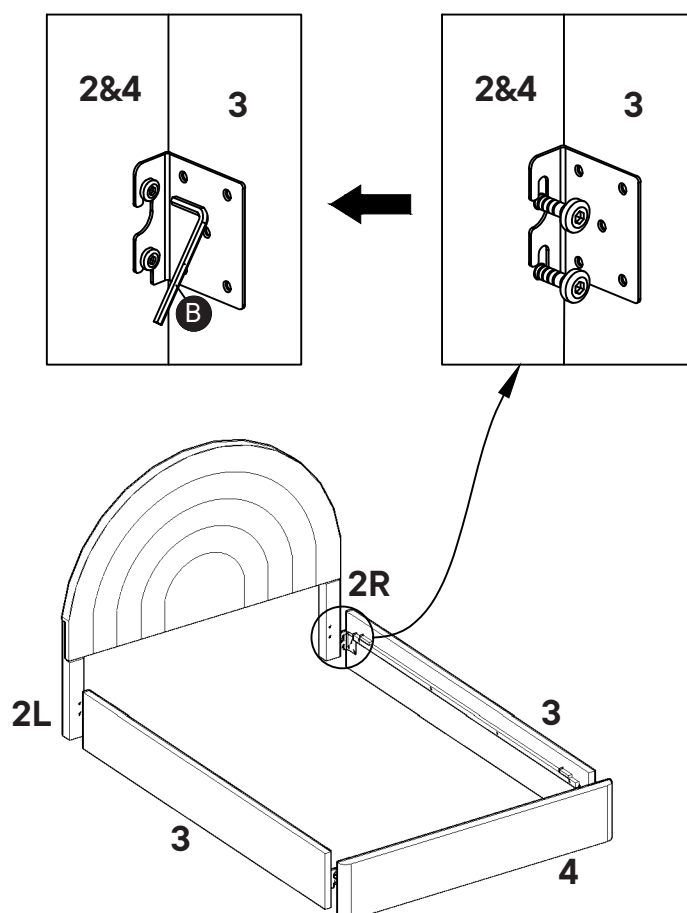

Step 3

HARDWARE

D JCBC M6 x 50mm x8

COMPONENTS


5 Center Rail x1

6 Center Support Leg x1

7 Slat x14

TOOLS

A Allen Key M4 x1

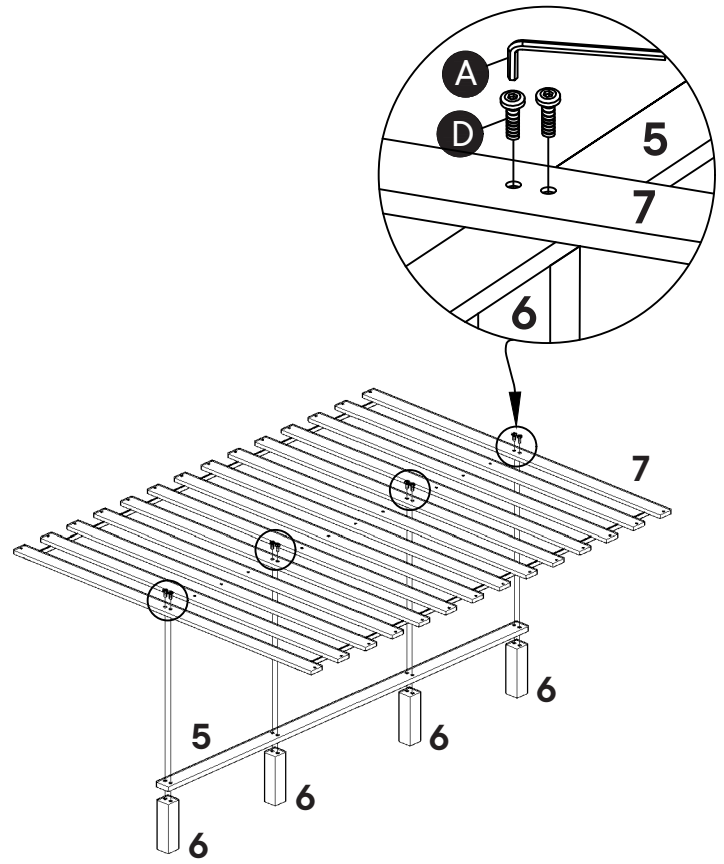


Step 4

HARDWARE

G Wood Screw M4 x 25mm x38

COMPONENTS

7 Slat x14

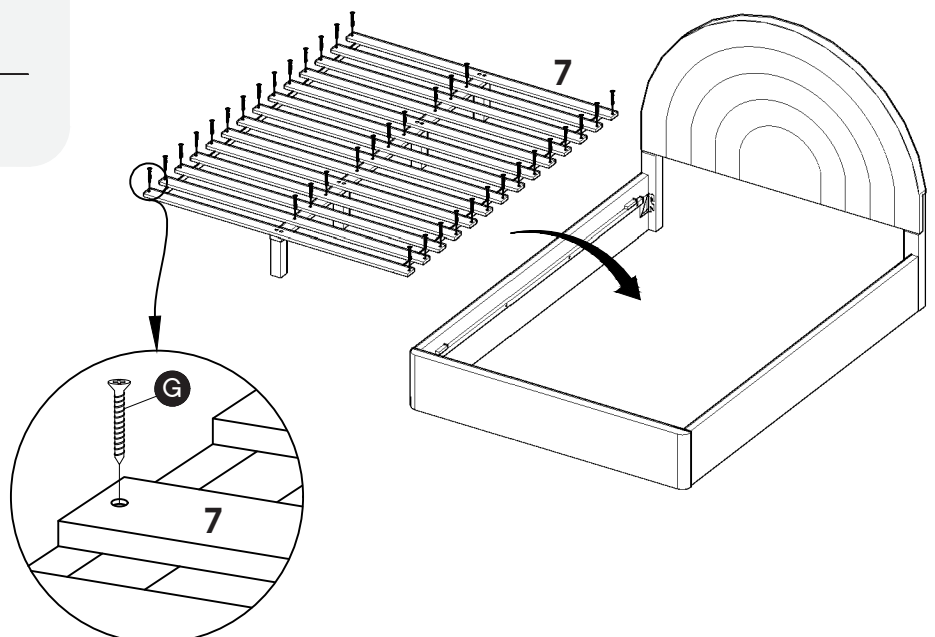

Great job!

Your new bed is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!   

Tag us @modway_furniture and #modway for a chance to be featured.

