


ASSEMBLY INSTRUCTIONS

MOD-7174

V0.05.05.24

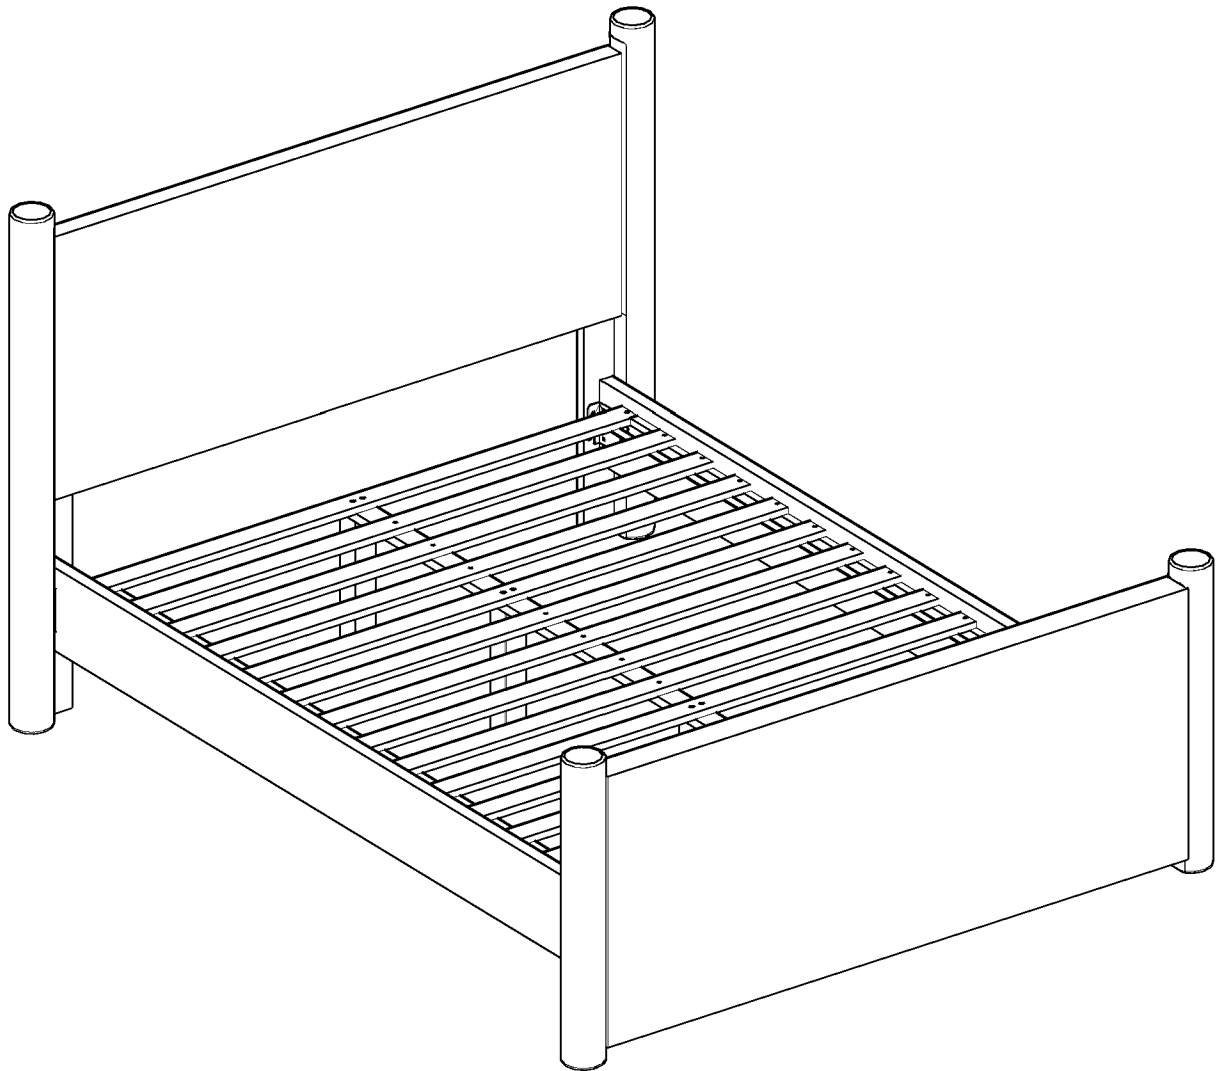

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

***modway**

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 30 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools . Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.


Furniture components:

Box 1

1	Headboard	x1
2	Headboard Leg (L+R)	x2
3	Headboard Post Leg (L+R)	x2
4	Footboard	x1
5	Center Support Leg	x4

Box 2

6	Side Rail	x2
7	Center Rail	x1
8	Slat	x14

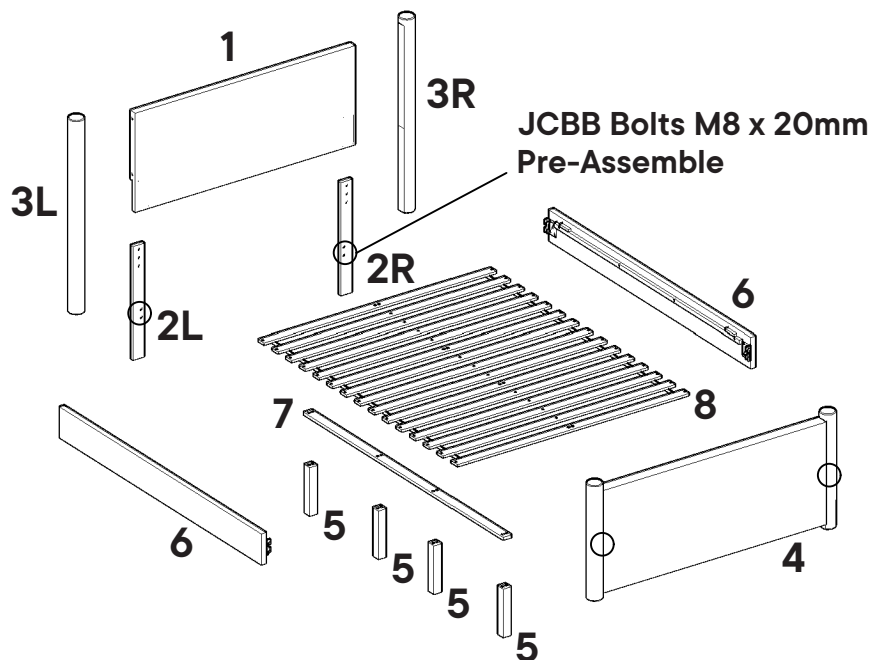

What you need:



Phillips



Phillips Head Screwdriver

Box 1: Headboard/Footboard/leg and etc...
Box 2: Side Rail/Center Rail/Slat Only

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Provided hardware:

A		Allen Key M4	x1
B		Allen Key M5	x1
C		JCBC Bolt M6 x 40mm	x10
D		JCBC Bolt M6 x 50mm	x8
E		Wood Dowel M8 x 35mm	x2
F		Wood Screw M4 x 25mm	x38
G		Spring Washer M6	x10
H		Flat Washer M6	x10

What you need:



 Phillips Head Screwdriver
 Phillips

Wait!

Missing parts or hardware? Need assistance?

Contact us before returning your item. We're here to help!

609.256.9000 • cs@modway.com

Step 1

HARDWARE


C	JCBC M6 x 40mm	x6
G	Spring Washer M6	x6
H	Flat Washer M6	x6

COMPONENTS

1	Headboard	x1
2	Headboard Leg (L+R)	x2

TOOLS

A	Allen Key M4	x1
----------	--------------	----

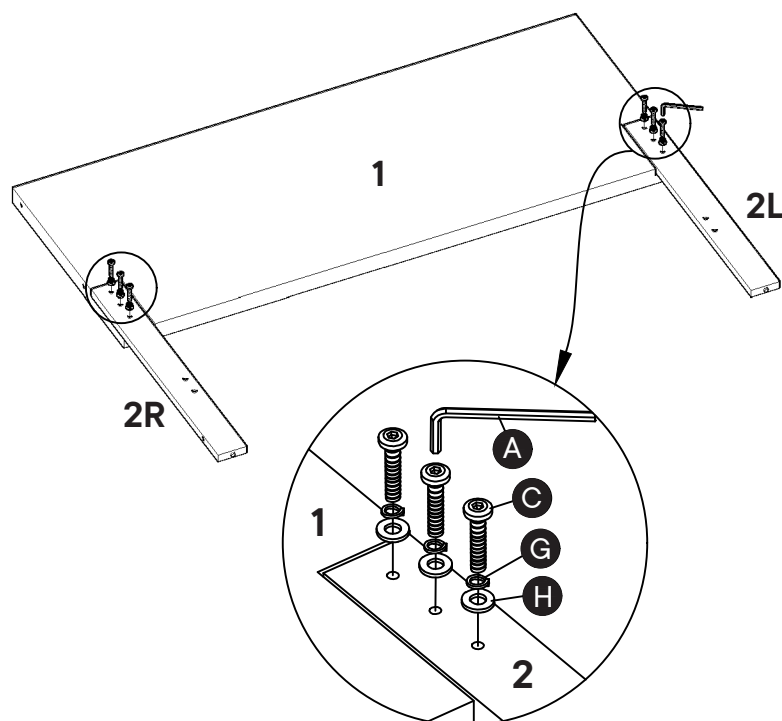


Step 2

HARDWARE

E	Wood Dowel M8 x 35mm	x2
----------	----------------------	----

COMPONENTS

2	Headboard Leg (L+R)	x2
----------	---------------------	----

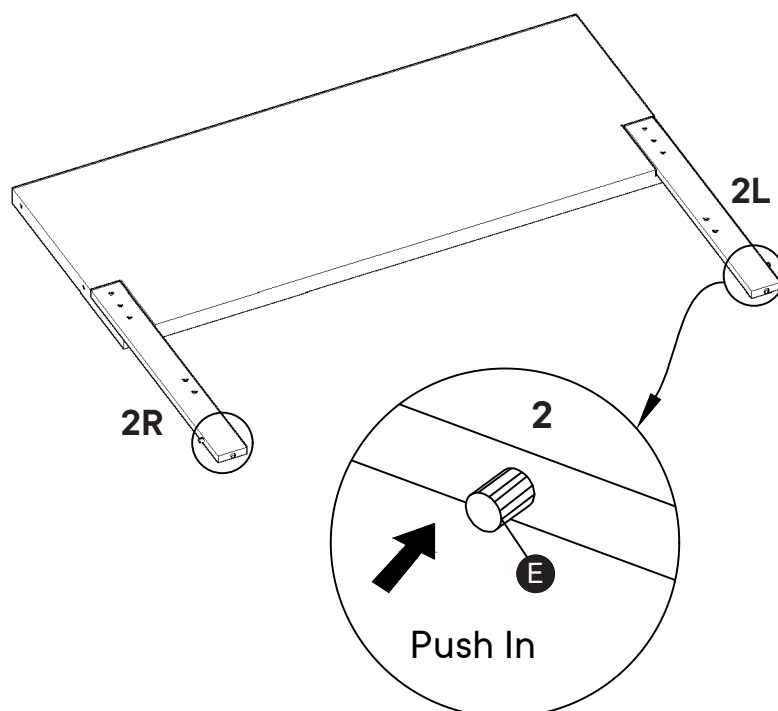

Step 3

HARDWARE


C	JCBC M6 x 40mm	x4
G	Spring Washer M6	x4
H	Flat Washer M6	x4

COMPONENTS

1	Headboard	x1
3	Headboard Post Leg (L+R)	x2

TOOLS

A	Allen Key M4	x1
----------	--------------	----

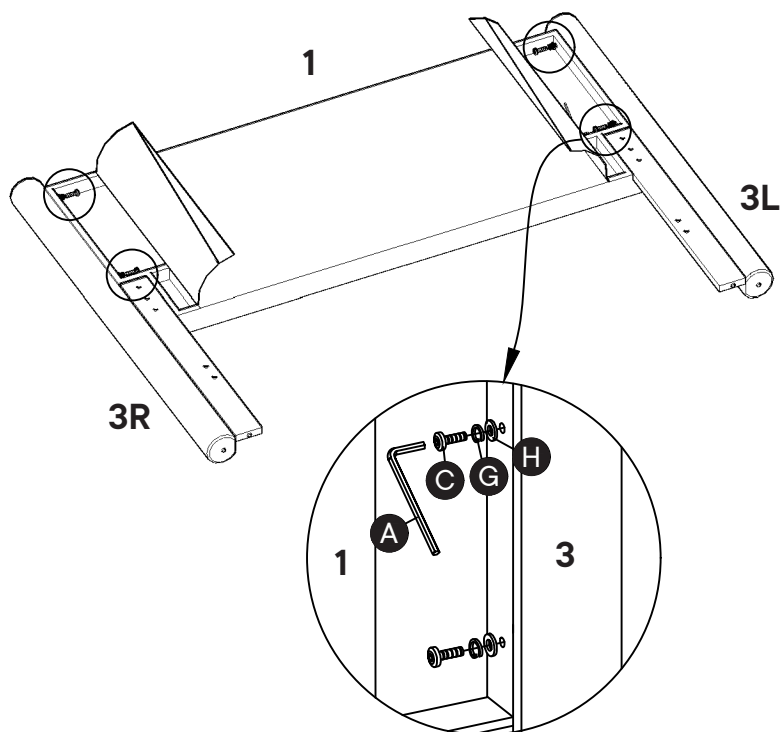


Step 4

COMPONENTS

2	Headboard Leg (L+R)	x2
4	Footboard	x1
6	Side Rail	x2

TOOLS

B	Allen Key M5	x1
----------	--------------	----

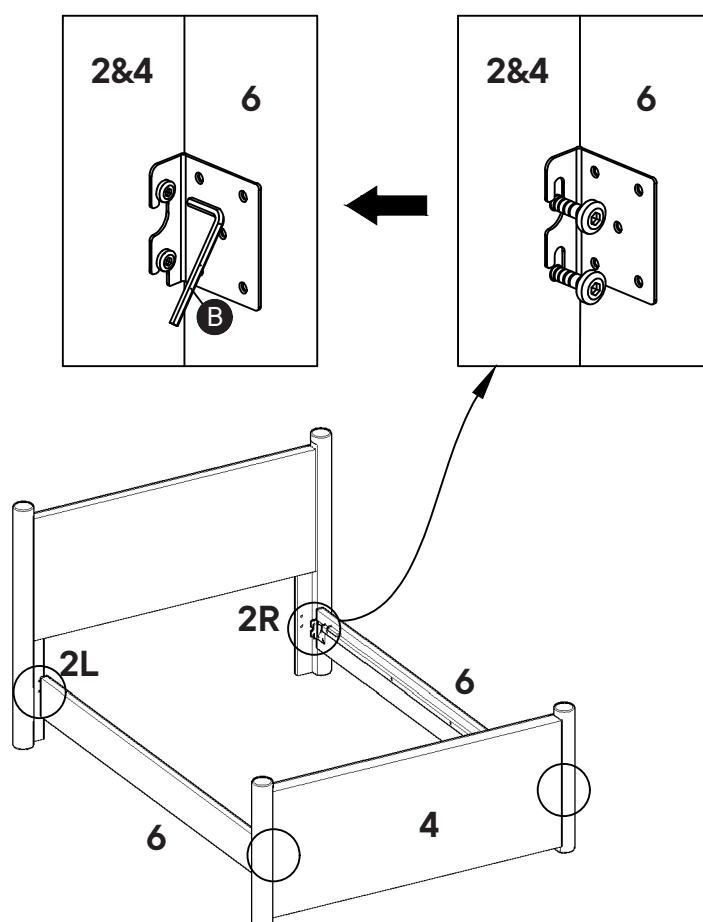

Step 5

HARDWARE

D JCBC M6 x 50mm x8

COMPONENTS


5 Center Support Leg x4

7 Center Rail x1

8 Slat x15

TOOLS

A Allen Key M4 x1

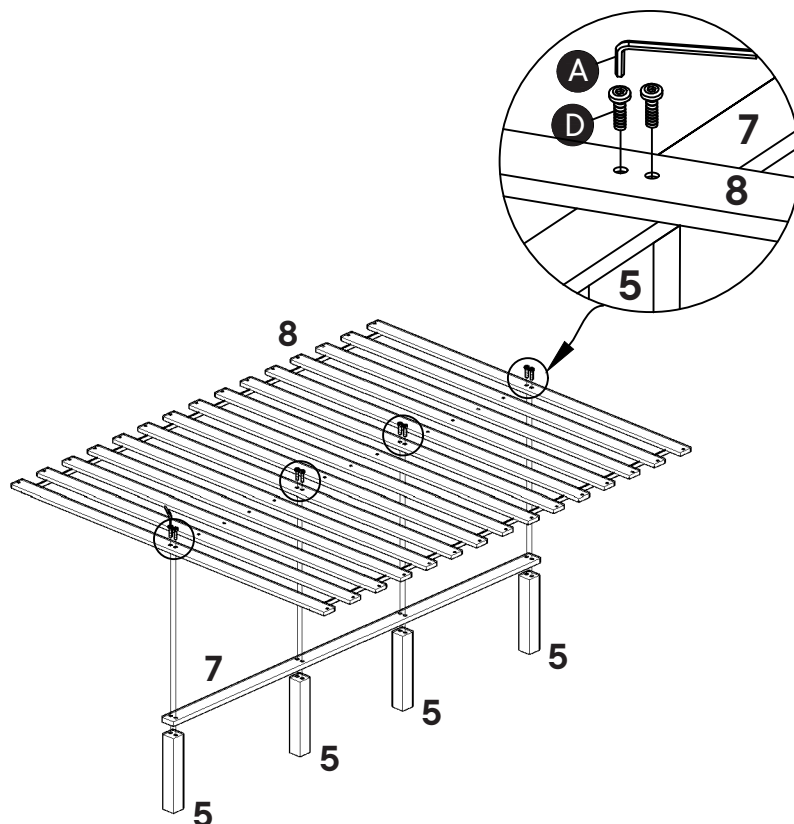


Step 6

HARDWARE

F Wood Screw M4 x 25mm x38

COMPONENTS

8 Slat x14

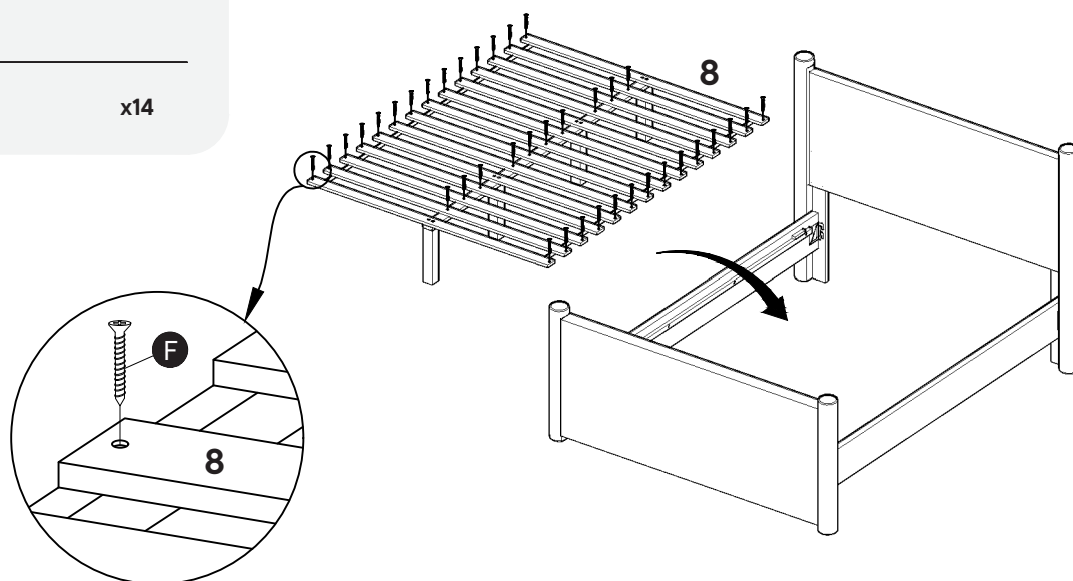

Great job!

Your new bed is complete.

♥ CARING FOR YOUR ITEM

Indoor use only.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Never use harsh chemicals, as they could damage the finish or integrity of the item.

CONNECT WITH US!   

Tag us @modway_furniture and #modway for a chance to be featured.

