


ASSEMBLY INSTRUCTIONS

MOD-7221

V1.15.03.25

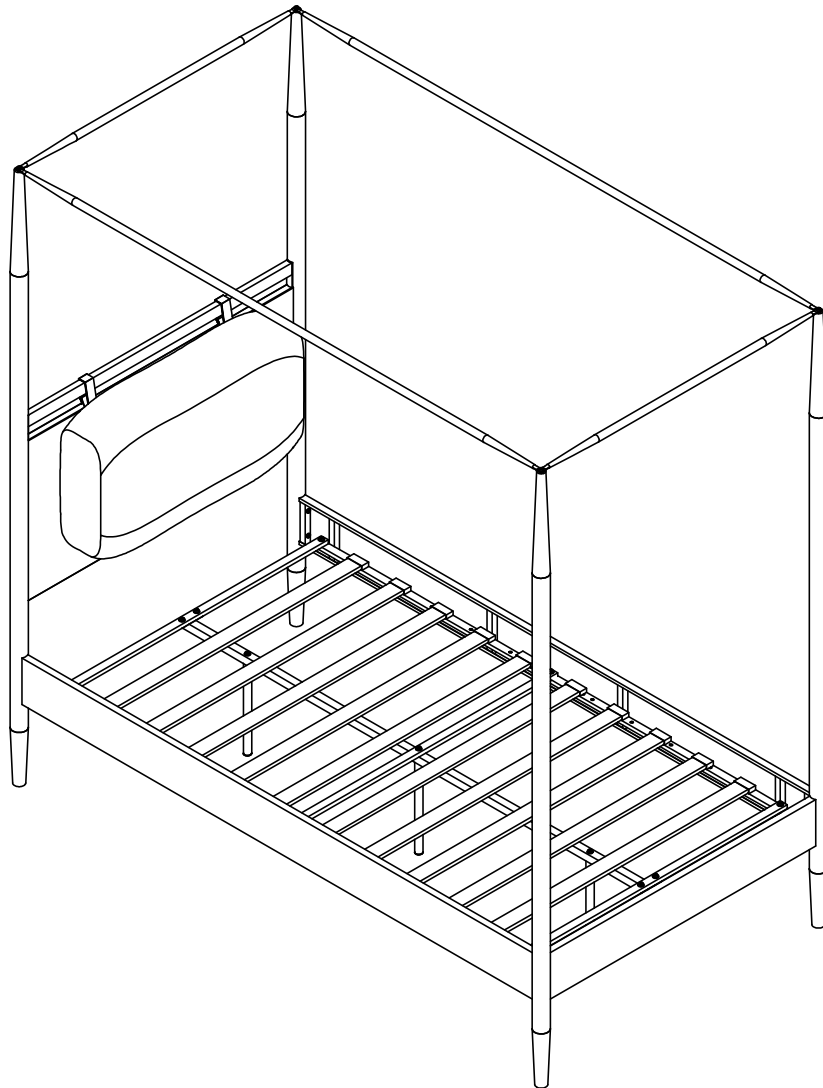

Questions? Contact us!

609.256.9000 • cs@modway.com
www.modway.com

*modway

Let's get started!

***modway**



Read through all of the instructions before starting



Care instructions are listed in the last step of this manual



Approx. 60 minutes assembly time



Make sure you have all parts and components before discarding any packing materials



2 people recommended for assembly

Only use hand tools to assemble this item. Do not use power tools.

Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.


Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

Furniture components:

1	Headboard Pillar-Left	x1
2	Headboard Pillar-Right	x1
3	Headboard	x1
4	Side Rail	x2
5	Cross Slats for Beam	x2
6	Cross Batten of Center Beam	x1
7	Support Beam	x1
8	Support Foot for Beam	x3
9	Batten	x10
10	Footboard Pillar	x2
11	Footboard	x1
12	Mosquito Net Pole-Short	x2
13	Mosquito Net Pole-Long	x2
14	Pillow Bag	x1

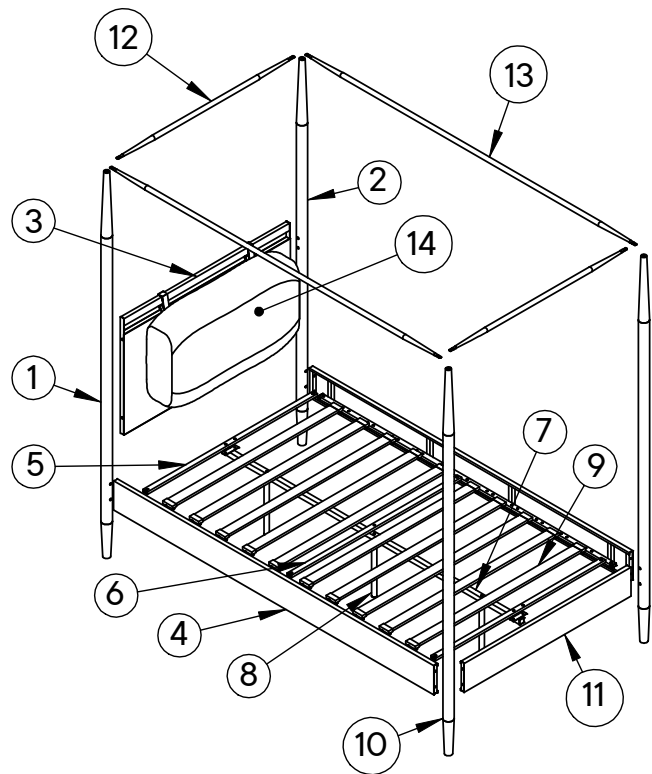

Provided hardware:

A		M6 x 35mm	x12
B		M6 x 25mm	x15
C		M6 x 15mm	x2
D		Flat Washer	x25
E		Tooth Rod	x4

F		Nut Cap	x4
G		Allen Key	x2
H		Wrench	x1
I		Plastic Fasteners	x20

Step 1

COMPONENTS


1	Headboard Pillar-Left	x1
2	Headboard Pillar-Right	x1
3	Headboard	x1

HARDWARE

B	Bolt M6 x 25mm	x4
G	Allen Key	x1

Bedhead - Height

Bedhead - Low

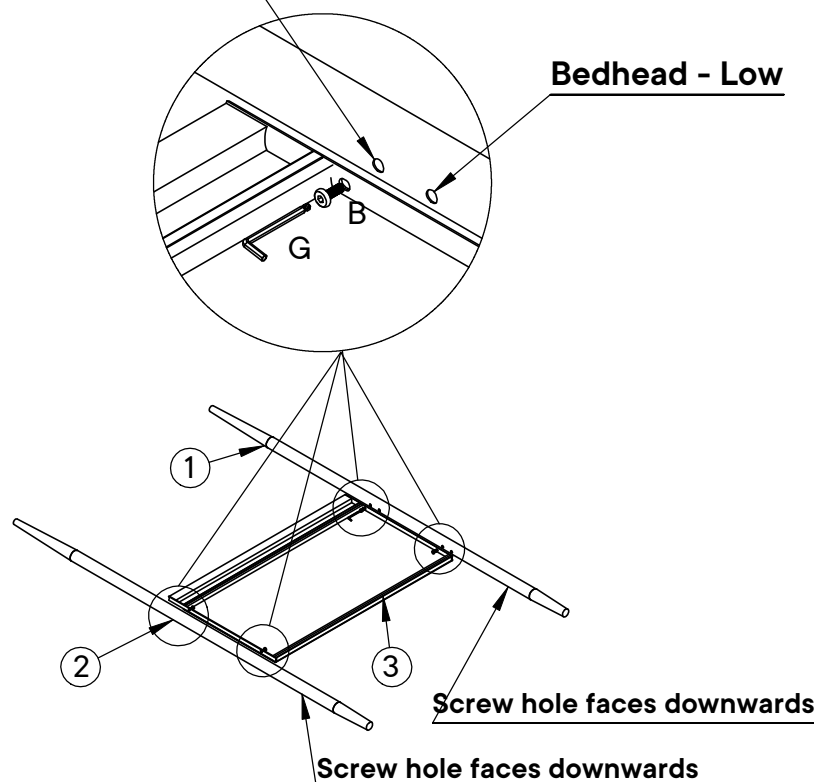


Step 2

COMPONENTS

10	Footboard Pillar	x2
11	Footboard	x1

HARDWARE

A	Bolt M6 x 35mm	x4
D	Flat Washer	x4
G	Allen Key	x1

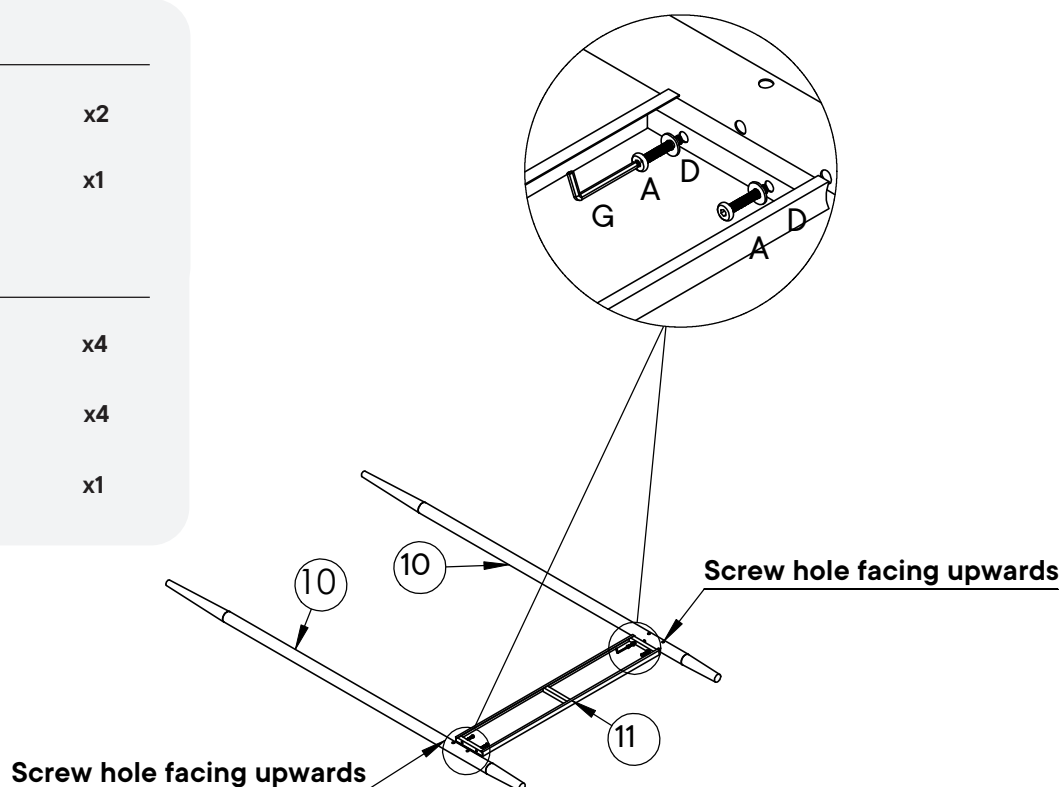

Step 3

COMPONENTS


④ Side Rail x2

HARDWARE

Ⓐ Bolt M6 x 35mm x8

Ⓓ Flat Washer x8

Ⓖ Allen Key x1

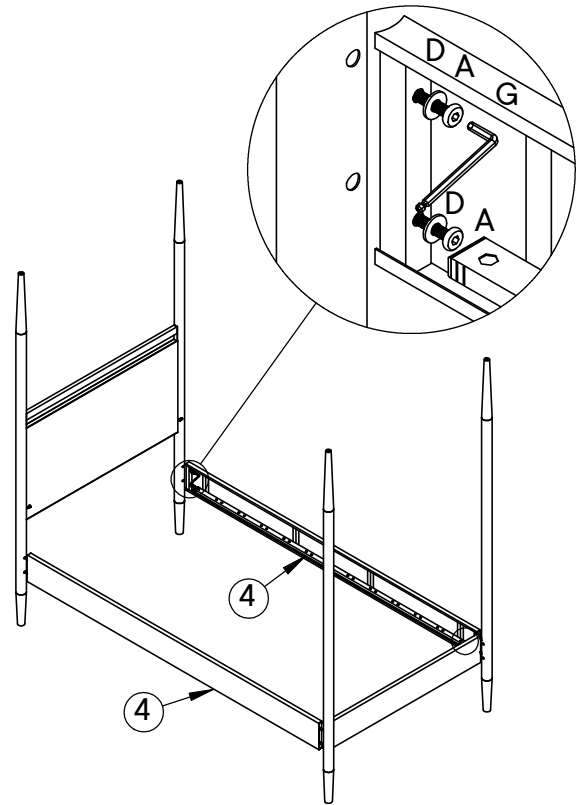

Step 4

COMPONENTS

⑤ Cross Slats for Beam x2


⑥ Cross Batten of Center Beam x1

HARDWARE

Ⓑ Bolt M6 x 25mm x6

Ⓓ Flat Washer x6

Ⓖ Allen Key x1

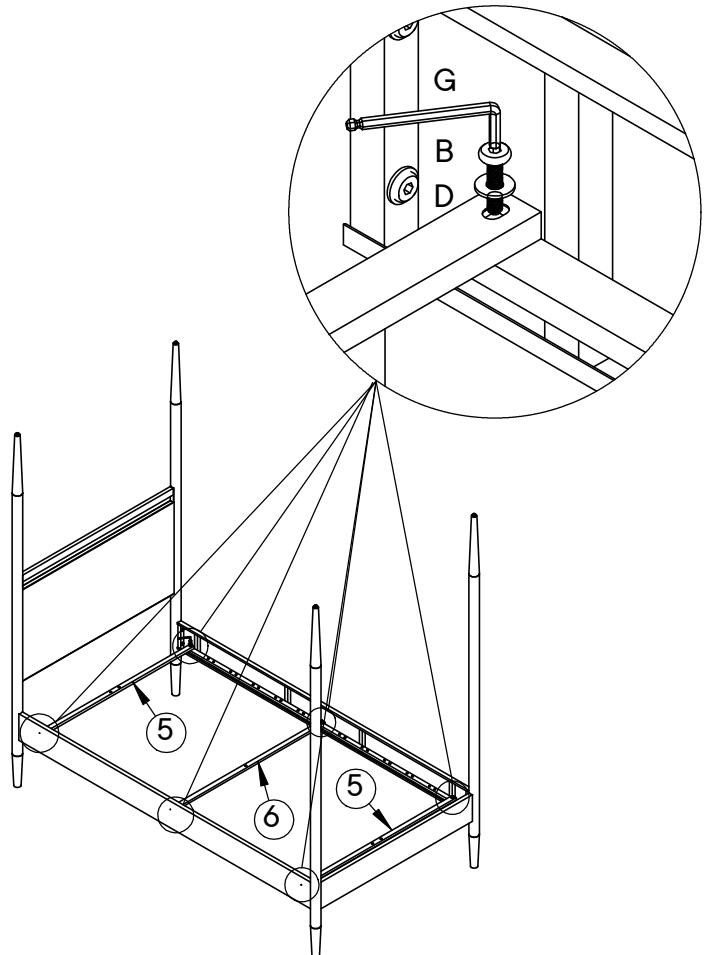


Step 5

COMPONENTS

- | | | |
|----------|-----------------------|----|
| 7 | Support Beam | x1 |
| 8 | Support Foot for Beam | x2 |

HARDWARE

- | | | |
|----------|----------------|----|
| C | Bolt M6 x 15mm | x2 |
| D | Flat Washer | x2 |
| G | Allen Key | x1 |

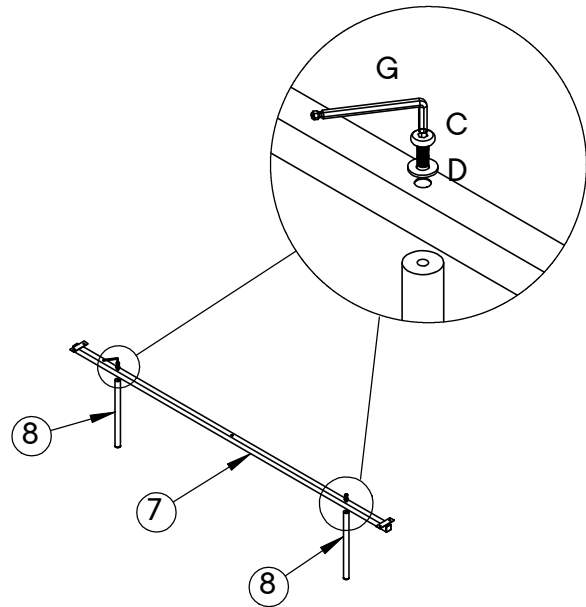


Step 6

COMPONENTS

- | | | |
|----------|-----------------------|----|
| 8 | Support Foot for Beam | x1 |
|----------|-----------------------|----|

HARDWARE

- | | | |
|----------|----------------|----|
| B | Bolt M6 x 25mm | x5 |
| D | Flat Washer | x5 |
| G | Allen Key | x1 |

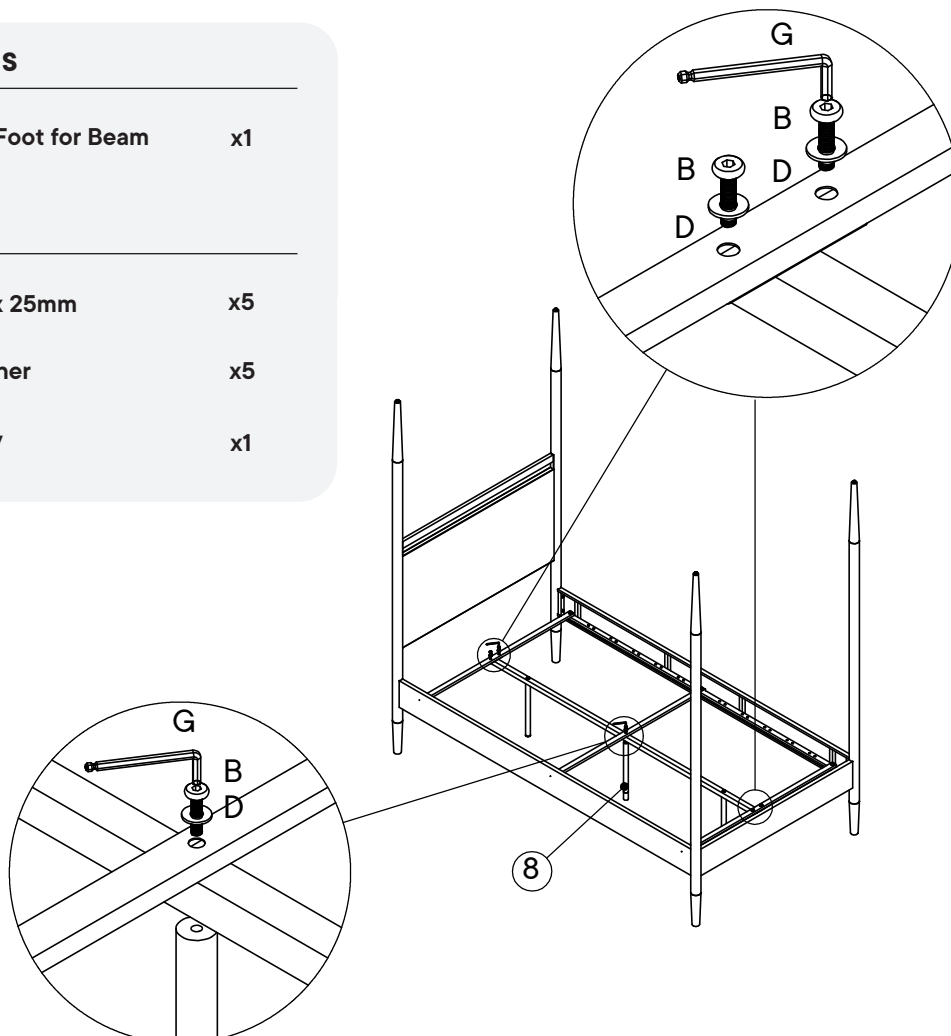

Step 7


COMPONENTS

9 Batten x10

HARDWARE

E Tooth Rod x4

I Plastic Fasteners x20

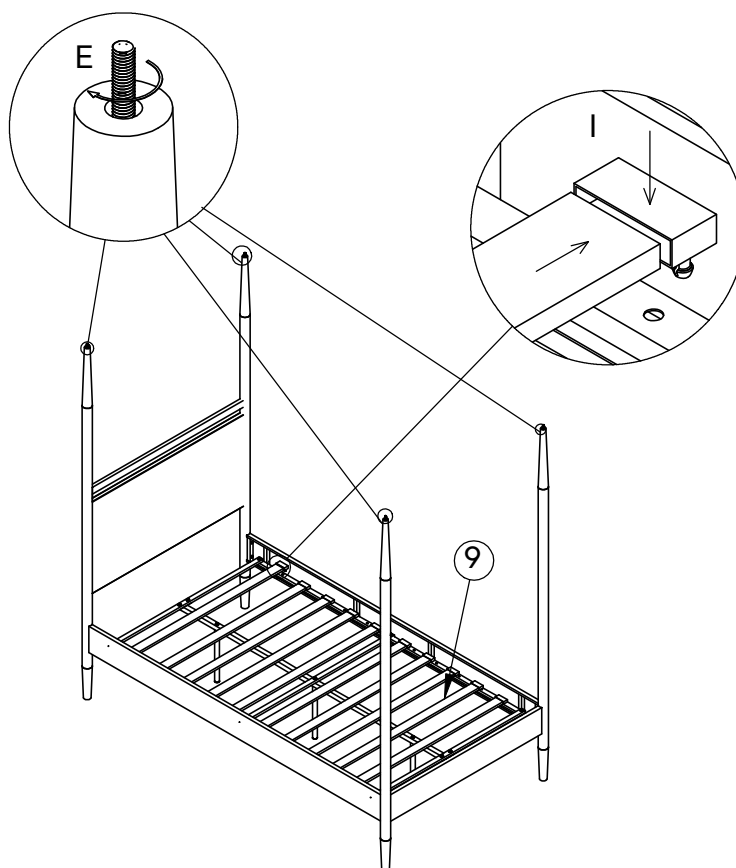

Step 8

COMPONENTS


12 Mosquito Net Pole-Short x2

13 Mosquito Net Pole-Long x2

HARDWARE

F Nut Cap x4


H Wrench x1

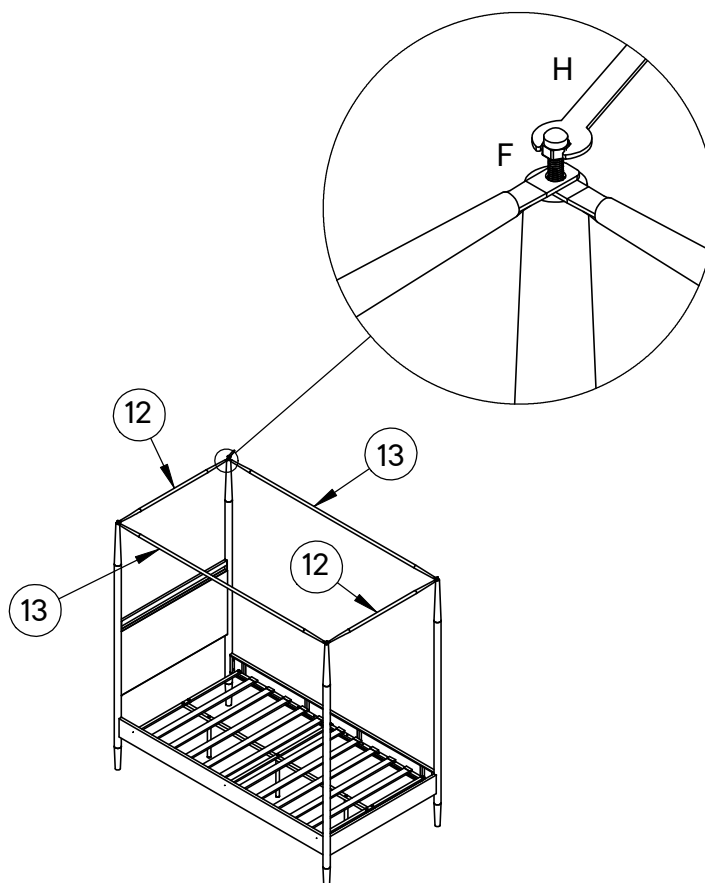

Step 9

COMPONENTS

14 Pillow Bag x1

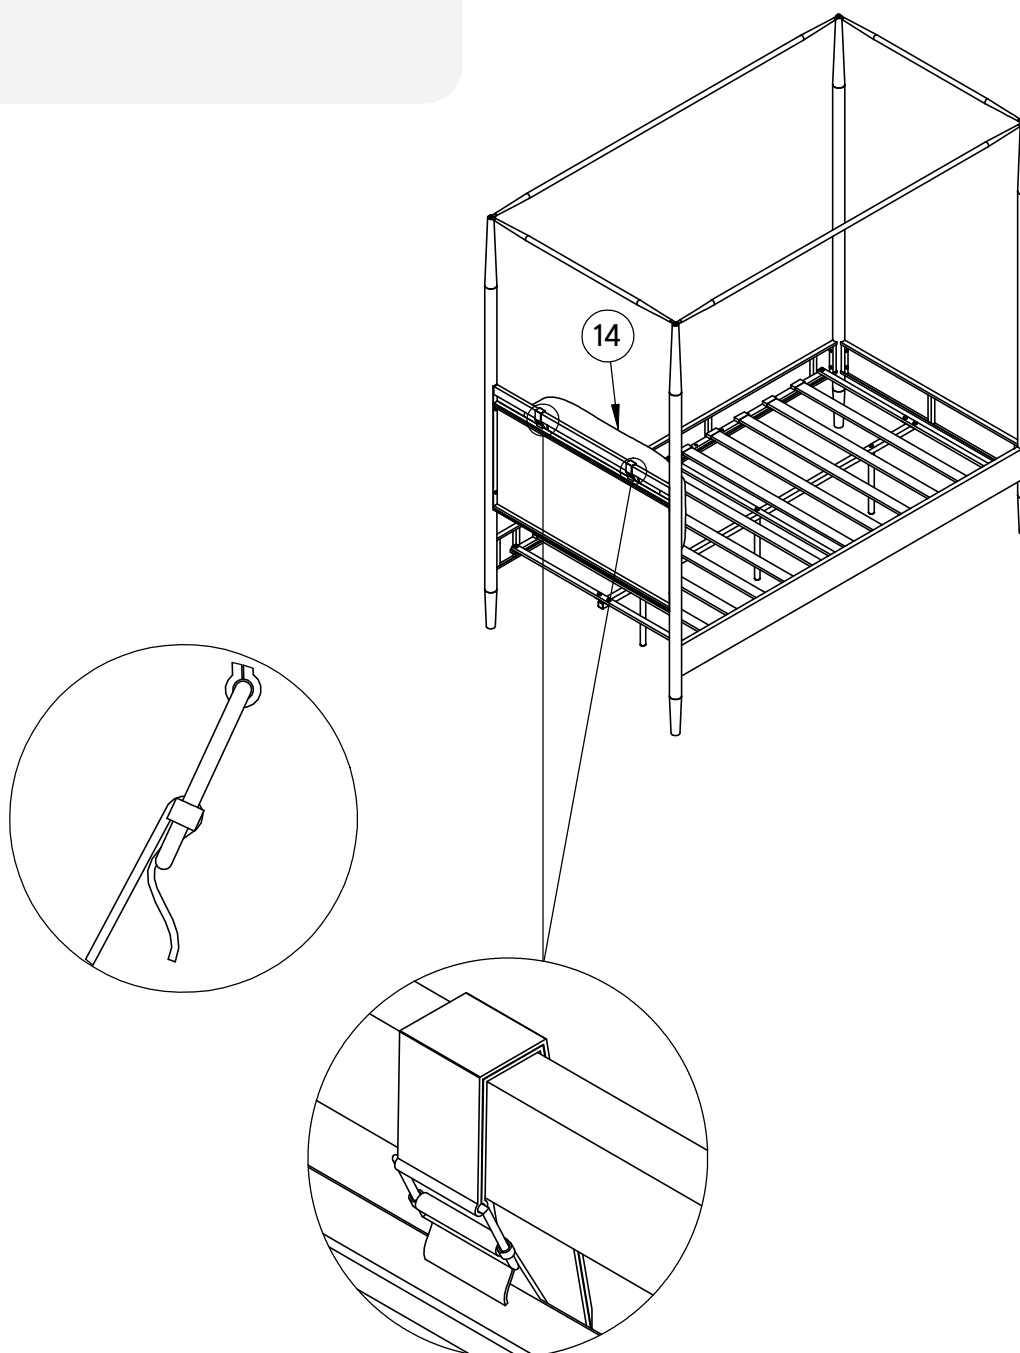

Great job!

Your new bed is complete.


♥ CARING FOR YOUR ITEM

Depending on use, it may be necessary to tighten the hardware from time to time, so please save the tools that have been provided.

Not contract grade.

Clean using a non-abrasive cloth and a mild cleaner.

Retain the rich wood color by occasionally sanding lightly and applying a teak cleaner and protectant. The oils nourish and help restore the original look.

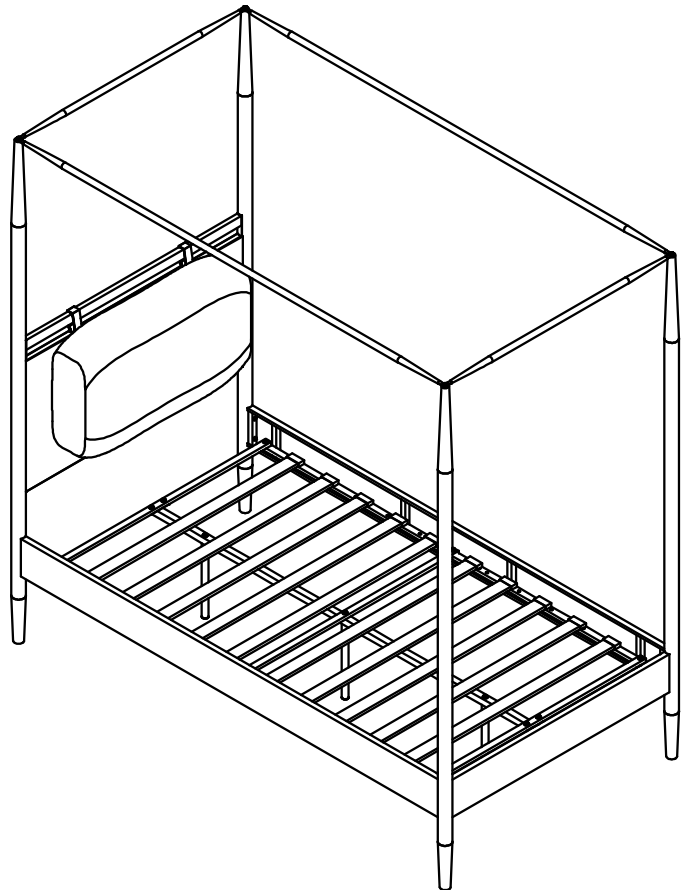

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.